# A Reference Manual of Road Transport Management

Er. Bibek Magar

November 22, 2021

# Contents

1	Tra	nsportation System	1						
	1.1	Introduction							
	1.2	History of Transportation	1						
	1.3	Transportation Sector and Modes of Transportation	4						
		1.3.1 Transportation Sector	4						
		1.3.2 Modes of Transportation	4						
	1.4	Factors influencing Transport Operations	6						
		1.4.1 Driver Characteristics	6						
		1.4.2 Vehicle Characteristics	10						
		1.4.3 Pedestrian Characteristics	20						
		1.4.4 Road Characteristics	20						
	1.5	Review Problems	21						
2	Mo	tor Vehicle Act	23						
3	Tra	nsport Economics	25						
	3.1	Introduction	25						
	3.2		27						
			27						
		3.2.2 Fixed and Variable Costs	27						
			29						
			30						
			31						
	3.3		32						
	3.4		33						
	3.5	Numerical Examples:							
	3.6	1	37						
4	Insi	urance	39						
-	4.1	Introduction							
	4.2		39						
	1.4		39						
			41						
		IIII I CONTINUO DI I DI UCITO CON LICONOCO I I I I I I I I I I I I I I I I I I							

iv CONTENTS

7	Fue	l Cons	umption and Emission Models	81						
6	Frei	ight Tr	cansport Operation	<b>7</b> 9						
	5.9	Review	w Problems	76						
		5.8.1	Dijkstra's Shortest Path Algorithm	73						
	5.8	Optim	al Paths in Transportation Networks	73						
		5.7.1	Transit Line Capacity Utilization	71						
	5.7	Transi	t Line Capacity	69						
	5.6	Time '		67						
		5.5.4	Headway Determination by Maximum Load Method $$ .	66						
		5.5.3	Headway Determination by "Square Root Formula" .							
		5.5.2	Passenger Waiting Time	63						
		5.5.1	The Maximum Service Frequency	62						
	5.5	Service	e Frequency and Headways	61						
	5.4	0								
	5.3 Passenger Flows in Public Transportation									
		5.2.1	A Hypothetical Case Study	56 58						
	5.2	Numb	er of Passengers Versus Number of Served Vehicles	56						
		5.1.3	The Role and Future of Public Transportation $\dots$ .	55						
		5.1.2	Transit Capacity and Level of Service	53						
		5.1.1	Transit Modes	53						
	5.1	Public	Transportation	53						
5	Pas	Passenger Transport Operation 53								
	4.0	TEVIEV	v i robiems	IJΔ						
	4.6		v Problems							
		4.5.3 $4.5.4$	Provisions relating to a Surveyor							
		4.5.2 $4.5.3$	Provisions Relating to a Surveyor							
		4.5.1 $4.5.2$	Categories of Insurance Business	47						
	4.0	4.5.1	Definitions	47						
	4.5		ngs from Insurance Regulation, 2049 (1993)	47						
		4.4.1	Government Insurance	46						
	4.4	1 ypes 4.4.1	of Insurance	45 46						
	4.4		Economically Feasible Premium	$\frac{45}{45}$						
		4.3.6	Calculable Chance of Loss	$\frac{44}{45}$						
		4.3.4 $4.3.5$	No Catastrophic Loss	44 44						
			Determinable and Measurable Loss							
		4.3.2 4.3.3	Accidental and Unintentional Loss	42 43						
		4.3.1	Large Number of Exposure Units	42						
	4.3		cteristics of an Ideally Insurable Risk							
		4.2.4	Indemnification							
		4.2.3	Risk Transfer	41						
		400	D: 1 / C	4-4						

CONTENTS	$\mathbf{v}$
----------	--------------

R	Planning	$\mathbf{for}$	New	Transport	Organization
0	riammig	1OI	INEW	Transport	Organization

vi *CONTENTS* 

# Chapter 1

# Transportation System

# 1.1 Introduction

Transportation is a crucial aspect of a nation's development and prosperity. However, with the advent of modern means of transportation, managing its operation has become more complex, so there is ample opportunity for engineers to devise new operational and management techniques for the smooth control of various modes of transportation of a country.

# 1.2 History of Transportation

#### Early Boats

The first mode of transportation was created in the effort to traverse water: boats. Those who colonized Australia roughly 60,000–40,000 years ago have been credited as the first people to cross the sea, though there is some evidence that seafaring trips were carried out as far back as 900,000 years ago.

The earliest known boats were simple logboats, also referred to as dugouts, which were made by hollowing out a tree trunk. Evidence for these floating vehicles comes from artifacts that date back to around 10,000–7,000 years ago. The Pesse canoe—a logboat—is the oldest boat unearthed and dates as far back as 7600 BCE. Rafts have been around nearly as long, with artifacts showing them in use for at least 8,000 years.

#### Horses and Wheeled Vehicles

Next, came horses. While it's difficult to pinpoint exactly when humans first began domesticating them as a means of getting around and transporting goods, experts generally go by the emergence of certain human biological and cultural markers that indicate when such practices started to take place.

Based on changes in teeth records, butchering activities, shifts in settlement patterns, and historic depictions, experts believe that domestication took place around 4000 BCE. Genetic evidence from horses, including changes in musculature and cognitive function, support this.

It was also roughly around this period that the wheel was invented. Archaeological records show that the first wheeled vehicles were in use around 3500 BCE, with evidence of the existence of such contraptions found in Mesopotamia, the Northern Caucuses, and Central Europe. The earliest well-dated artifact from that time period is the "Bronocice pot," a ceramic vase that depicts a four-wheeled wagon that featured two axles. It was unearthed in southern Poland.

#### **Steam Engines**

In 1769, the Watt steam engine changed everything. Boats were among the first to take advantage of steam-generated power; in 1783, a French inventor by the name of Claude de Jouffroy built the "Pyroscaphe," the world's first steamship. But despite successfully making trips up and down the river and carrying passengers as part of a demonstration, there wasn't enough interest to fund further development.

While other inventors tried to make steamships that were practical enough for mass transport, it was American Robert Fulton who furthered the technology to where it was commercially viable. In 1807, the Clermont completed a 150-mile trip from New York City to Albany that took 32 hours, with the average speed clocking in at about five miles per hour. Within a few years, Fulton and company would offer regular passenger and freight service between New Orleans, Louisiana, and Natchez, Mississippi.

Back in 1769, another Frenchman named Nicolas Joseph Cugnot attempted to adapt steam engine technology to a road vehicle—the result was the invention of the first automobile. However, the heavy engine added so much weight to the vehicle that it wasn't practical. It had a top speed of 2.5 miles per hour.

Another effort to repurpose the steam engine for a different means of personal transport resulted in the "Roper Steam Velocipede." Developed in 1867, the two-wheeled steam-powered bicycle is considered by many historians to be the world's first motorcycle.

## Locomotives

One mode of land transport powered by a steam engine that did go mainstream was the locomotive. In 1801, British inventor Richard Trevithick unveiled the world's first road locomotive—called the "Puffing Devil"—and used it to give six passengers a ride to a nearby village. It was three years later that Trevithick first demonstrated a locomotive that ran on rails, and another one that hauled 10 tons of iron to the community of Penydarren, Wales, to a small village called Abercynon.

It took a fellow Brit—a civil and mechanical engineer named George Stephenson—to turn locomotives into a form of mass transport. In 1812, Matthew Murray of Holbeck designed and built the first commercially successful steam locomotive, "The Salamanca," and Stephenson wanted to take the technology a step further. So in 1814, Stephenson designed the "Blücher," an eight-wagon locomotive capable of hauling 30 tons of coal uphill at a speed of four miles per hour.

By 1824, Stephenson improved the efficiency of his locomotive designs to where he was commissioned by the Stockton and Darlington Railway to build the first steam locomotive to carry passengers on a public rail line, the aptly named "Locomotion No. 1." Six years later, he opened the Liverpool and Manchester Railway, the first public inter-city railway line serviced by steam locomotives. His notable accomplishments also include establishing the standard for rail spacing for most of the railways in use today. No wonder he's been hailed as "Father of Railways."

#### **Submarines**

Technically speaking, the first navigable submarine was invented in 1620 by Dutchman Cornelis Drebbel. Built for the English Royal Navy, Drebbel's submarine could stay submerged for up to three hours and was propelled by oars. However, the submarine was never used in combat, and it wasn't until the turn of the 20th century that designs leading to practical and widely used submersible vehicles were realized.

Along the way, there were important milestones such as the launch of the hand-powered, egg-shaped "Turtle" in 1776, the first military submarine used in combat. There was also the French Navy submarine "Plongeur," the first mechanically powered submarine.

Finally, in 1888, the Spanish Navy launched the "Peral," the first electric, battery-powered submarine, which also so happened to be the first fully capable military submarine. Built by a Spanish engineer and sailor named Isaac Peral, it was equipped with a torpedo tube, two torpedoes, an air regeneration system, and the first fully reliable underwater navigation system, and it posted an underwater speed of 3.5 miles per hour.

#### Aircraft

The start of the twentieth century was truly the dawn of a new era in the history of transportation as two American brothers, Orville and Wilbur Wright, pulled off the first official powered flight in 1903. In essence, they invented the world's first airplane. Transport via aircraft took off from there with airplanes being put into service within a few short years during World War I. In 1919, British aviators John Alcock and Arthur Brown completed the first transatlantic flight, crossing from Canada to Ireland. The same year, passengers were able to fly internationally for the first time.

Around the same time that the Wright brothers were taking flight, French inventor Paul Cornu started developing a rotorcraft. And on November 13, 1907, his "Cornu" helicopter, made of little more than some tubing, an engine, and rotary wings, achieved a lift height of about one foot while staying airborne for about 20 seconds. With that, Cornu would lay claim to having piloted the first helicopter flight.

# 1.3 Transportation Sector and Modes of Transportation

#### 1.3.1 Transportation Sector

Transportation sector performs transportation services in order to satisfy demand for mobility of people and transport of freight shipments. A range of socioeconomic activities in a society, as well as land uses induce transportation demand. The demand is represented by the number of passengers and/or volumes of cargo to be transported between given origins and destinations during a given (specified) period of time. The supply component in the transportation sector consists of transport services provided by different transport modes and their particular systems. Airports, highways, streets, and ports should be able to meet transportation demand and offer acceptable level-of-service to the users. The transport supply component contributes to the economy of a region, country, and continent it serves. The demand and supply component are in permanent interaction.

## 1.3.2 Modes of Transportation

The transportation modes constituting the supply component are generally classified according to the way of performing their operations of transporting people and freight shipments. In general, the basic land-based transport modes include road, rail, and pipeline. The water-based mode includes inland waterways and sea shipping. The air transport is the air-based mode.

#### 1.3. TRANSPORTATION SECTOR AND MODES OF TRANSPORTATION5

The specific mode is intermodal transport consisting of combinations of particular basic modes and their systems. In addition, the mode not carrying out physical entities but just information is telecommunications. Fig. shows a simplified scheme of the structure of transport sector, its modes and their systems.



Transport modes generally consist of two types of systems: the first is intended for serving passenger and the other for serving freight/cargo/goods demand. Each of these consists of subsystems, which will be called systems. The classification of systems within each mode is carried out at three levels: (i) type of the system (passengers, freight), spatial scale of operation (urban/suburban/regional, interurban), and carrier type (individual, group).

The Fig. below shows classification of systems of the road transport mode.



# 1.4 Factors influencing Transport Operations

There are mainly four components of road transportation: the driver, the pedestrian, the vehicle, and the road, which influence road transport management's design and operational considerations. To provide efficient and safe road transportation, a knowledge of the characteristics and limitations of each of these components is essential. It is also crucial to be aware of the interrelationships among these components to determine the effects they have on each other. Their characteristics are also of primary importance when traffic engineering measures such as traffic control devices are used in the highway mode.

#### 1.4.1 Driver Characteristics

One problem that faces traffic and transportation engineers when they consider driver characteristics in the course of design is the varying skills and perceptual abilities of drivers on the highway, demonstrated by a wide range of capabilities to hear, see, evaluate, and react to information. Studies support that these abilities vary under different conditions, such as the influence of alcohol, fatigue, and time of the day. Therefore, it is essential that criteria used for design purposes be compatible with the capabilities and limitations of most drivers on the highway. The use of an average value, such as mean reaction time, may not be adequate for a large number of drivers. The 85th percentile and the 95th percentile have been used to select design criteria; in general, the higher the chosen percentile, the wider the range covered.

#### The Human Response Process

Actions taken by the drivers while driving result from their evaluation and reaction to the information they obtain from their certain stimuli. However, assessment and response must be carried out quickly, as the information received while driving the highways is dynamic. Furthermore, it has been suggested that most of the information received by a driver is visual, implying that the ability to see is of fundamental importance in the driving task. Therefore, highway and traffic engineers must have some rudimentary knowledge of visual perception and hearing perception.

**Visual Reception**: The principal characteristics of the eye are visual acuity, peripheral vision, color vision, glare vision and recovery, and depth perception.

1. Visual Acuity: It is the ability to see fine details of an object. It can be represented by the visual angle, which is the reciprocal of the smallest pattern detail in minutes of arc that can be resolved and given as:

$$\phi = 2\arctan\left(\frac{L}{2D}\right) \tag{1.1}$$

Where,

L = diameter of the target (letter or symbol)

D = distance from the eye to target in the same units as L

Mathematical Derivation,



Using trigonometry,

$$\tan\left(\frac{X}{2}\right) = \frac{\frac{L}{2}}{D}$$

$$\tan\left(\frac{X}{2}\right) = \frac{L}{2D}$$

$$X = 2\arctan\left(\frac{L}{2D}\right)$$

The ability to resolve a pattern detail with a visual acuity of one minute of arc (1/60 of a degree) is considered as normal vision of acuity (20/20 vision).

\*20/20 vision is a term used to express normal visual acuity measured at a distance of 20 feet. If you have 20/20 vision, you can see clearly at 20 ft what should normally be seen at that distance. If you have 20/100 vision, it means you must be as close as 20ft to see what a person with normal vision can see at 100ft.

2. Peripheral Vision: It is the ability of people to see objects beyond the cone of clearest vision. Although objects can be seen within this zone, details and color are not clear. The cone for peripheral vision could be one subtending up to 160 degrees; this value is affected by the speed of the vehicle. Age also influences peripheral vision. For instance, at about

age 60, a significant change occurs in a person's peripheral vision.

- **3.** Color Vision: It is the ability to differentiate one color from another, but deficiency in this ability, usually referred to as color blindness, is not of great significance in highway driving because other ways of recognizing traffic information devices (e.g., shape) can compensate for it. Combinations of black and white and black and yellow have been shown to be those to which the eye is most sensitive.
- 4. Glare Vision and Recovery : There are two types of glare vision: direct and specular. Rowland and others have indicated that direct glare occurs when relatively bright light appears in the individual's field of vision and specular glare occurs when the image reflected by the relatively bright light appears in the field of vision. Both types of glare result in a decrease of visibility and cause discomfort to the eyes. It is also known that age has a significant effect on the sensitivity to glare, and that at about age 40, a significant change occurs in a person's sensitivity to glare.

The time required by a person to recover from the effects of glare after passing the light source is known as glare recovery. Studies have shown that this time is about 3 seconds when moving from dark to light and can be 6 seconds or more when moving from light to dark. Glare vision is of great importance during night driving; it contributes to the problem of serving older people, who see much more poorly at night. This phenomenon should be taken into account in the design and location of street lighting so that glare effects are reduced to a minimum.

Glare effects can be minimized by reducing luminaire brightness and by increasing the background brightness in a driver's field of view. Specific actions taken to achieve this in lighting design include using higher mounting heights, positioning lighting supports farther away from the highway, and restricting the light from the luminaire to obtain minimum interference with the visibility of the driver.

**5. Depth Perception**: It affects the ability of a person to estimate speed and distance. It is particularly important on two-lane highways during passing maneuvers, when head-on crashes may result from a lack of proper judgment of speed and distance.

The ability of the human eye to differentiate between objects is fundamental to this phenomenon. It should be noted, however, that the human eye is not very good at estimating absolute values of speed, distance, size, and acceleration. This is why traffic control devices are standard in size,

shape, and color. Standardization not only aids in distance estimation but also helps the color-blind driver to identify signs.

## **Perception-Reaction Process**

The process through which a driver, cyclist, or pedestrian evaluates and reacts to a stimulus can be divided into four subprocesses:

- 1. Perception: the driver sees a control device, warning sign, or object on the road
- 2. *Identification:* the driver identifies the object or control device and thus understands the stimulus
- 3. *Emotion:* the driver decides what action to take in response to the stimulus; for example, to step on the brake pedal, to pass, to swerve, or to change lanes
- 4. Reaction or Volition: the driver actually executes the action decided on during the emotion sub-process

Time elapses during each of these subprocesses. The time that elapses from the start of perception to the end of reaction is the total time required for perception, identification, emotion, and volition, sometimes referred to as PIEV time or (more commonly) as perception-reaction time.

Perception-reaction time is an important factor in the determination of braking distances, which in turn dictates the minimum sight distance required on a highway and the length of the yellow phase at a signalized intersection. Perception-reaction time varies among individuals and may, in fact, vary for the same person as the occasion changes. These changes in perception-reaction time depend on how complicated the situation is, the existing environmental conditions, age, whether the person is tired or under the influence of drugs and/or alcohol, and whether the stimulus is expected or unexpected.

Triggs and Harris described this phenomenon in detail. They noted that the 85th-percentile time to brake, obtained from several situations, varied from 1.26 to over 3 seconds. The reaction time selected for design purposes should, however, be large enough to include reaction times for most drivers using the highways. Recommendations made by the American Association of State Highway and Transportation Officials (AASHTO) stipulate 2.5 seconds for stopping-sight distances. This encompasses the decision times for about 90 percent of drivers under most highway conditions. Note, however,

that a reaction time of 2.5 second may not be adequate for unexpected conditions or for some very complex conditions, such as those at multiphase at-grade intersections and ramp terminals. For example, when signals are unexpected, reaction times can increase by 35 percent.

#### Numerical Example:

A driver with a perception-reaction time of 2.5 sec is driving at 65 mi/h when she observes that an accident has blocked the road ahead. Determine the distance the vehicle would move before the driver could activate the brakes. The vehicle will continue to move at 65 mi/h during the perception-reaction time of 2.5 sec.

#### Solution:

Convert mi/h to ft/sec:

$$65 \text{ mi/h} = \left(65 \times \frac{5280}{3600}\right) \text{ft/sec} = 65 \times 1.47 = 95.55 \text{ ft/sec}$$

· Find the distance traveled:

$$D = vt$$
  
= 95.55 × 2.5  
= 238.9 ft

where v = velocity and t = time.

## 1.4.2 Vehicle Characteristics

Criteria for the geometric design of highways are partly based on the static, kinematic, and dynamic characteristics of vehicles. Static characteristics include the weight and size of the vehicle, while kinematic characteristics involve the motion of the vehicle without considering the forces that cause the motion. Dynamic characteristics involve the forces that cause the motion of the vehicle. Since nearly all highways carry both passenger-automobile and truck traffic, it is essential that design criteria take into account the characteristics of different types of vehicles. A thorough knowledge of these characteristics will aid the highway and/or traffic engineer in designing highways and traffic-control systems that allow the safe and smooth operation of a moving vehicle, particularly during the basic maneuvers of passing, stopping, and turning. Therefore, designing a highway involves the selection of a design vehicle, whose characteristics will encompass those of nearly all vehicles expected to use the highway. The characteristics of the design vehicle are then used to determine criteria for geometric design, intersection design, and sight-distance requirements.

#### Static characteristics

The size of the design vehicle for a highway is an important factor in the determination of design standards for several physical components of the highway. These include lane width, shoulder width, length and width of parking bays, and lengths of vertical curves. The axle weights of the vehicles expected on the highway are important when pavement depths and maximum grades are being determined.

For many years, each state prescribed by law the size and weight limits for trucks using its highways, and in some cases local authorities also imposed more severe restrictions on some roads. Table 3.1 shows some features of static characteristics for which limits were prescribed. A range of maximum allowable values is given for each feature.

Туре	Allowable Lengths (ft)		
Bus	35-60		
Single truck	35-60		
Trailer, semi/full	35-48		
Semitrailer	55-85		
Truck trailer	55-85		
Tractor semitrailer trailer	55-85		
Truck trailer trailer	65-80		
Tractor semitrailer, trailer, trailer	60-105		
Туре	Allowable Weights (lb)		
Single-axle	18,000-24,000		
Tandem-axle	32,000-40,000		
State maximum gross vehicle weight	73,280-164,000		
Interstate maximum gross vehicle weight	73,280-164,000		

SOURCE: Adapted from State Maximum Sizes and Weights for Motor Vehicles, Motor Vehicle Manufacturers' Association of the United States, Detroit, MI, May 1982.

Fig: Range of State Limits on Vehicle Lengths by Type and Maximum Weight of Vehicle

Since the passage of the Surface Transportation Assistance Act of 1982, the maximum allowable truck sizes and weights on Interstate and other qualifying federal-aided highways are at most:

- 80,000 lb gross weight, with axle loads of up to 20,000 lb for single axles and 34,000 lb for tandem (double) axles
- 102 in. width for all trucks
- 48 ft length for semitrailers and trailers

• 28 ft length for each twin trailer

(Note: Those states that had higher weight limits before this law was enacted are allowed to retain them for intrastate travel.)

The federal regulations also stipulate that the overall maximum gross weight for a group of two or more consecutive axles should be determined from the equation:

$$W = 500 \left[ \frac{LN}{N-1} + 12N + 36 \right] \tag{1.2}$$

Where,

W = overall gross weight (calculated to the nearest 500 lb)

L = the extreme of any group of two or more consecutive axles (ft)

N = number of axles in the group under consideration

The regulations also stipulate that a gross load of 34,000 lb may be carried by two consecutive sets of tandem axles if the overall distance between the first and last axles of the consecutive sets is 36 ft or more.

#### Numerical Example:

A 5-axle truck traveling on an interstate highway has the following axle characteristics:

Distance between the front single axle and the first set of tandem axles = 20 ftDistance between the first set of tandem axle and the back set of tandem axles = 48 ft

If the overall gross weight of the truck is 79,500 lb, determine whether this truck satisfies federal weight regulations.

**Solution:** Although the overall gross weight is less than the maximum allowable of 80,000 lb, the allowable gross weight based on the axle configuration should be checked.

Use Eq. 3.2.

$$W = 500 \left[ \frac{LN}{N-1} + 12N + 36 \right]$$

$$W = 500 \left[ \frac{48 \times 4}{4-1} + 12 \times 4 + 36 \right]$$

$$= 74,000 \text{ lb}$$

which is less than the allowable of 80,000 lb. The truck therefore satisfies the federal truck weight regulations.

#### Kinematic Characteristics

The primary element among kinematic characteristics is the acceleration capability of the vehicle. Acceleration capability is important in several traffic operations, such as passing maneuvers and gap acceptance. Also, the dimensioning of highway features such as freeway ramps and passing lanes is often governed by acceleration rates. Acceleration is also important in determining the forces that cause motion. Therefore, a study of the kinematic characteristics of the vehicle primarily involves a study of how acceleration rates influence the elements of motion, such as velocity and distance. We therefore review in this section the mathematical relationships among acceleration, velocity, distance, and time.

Let us consider a vehicle moving along a straight line from point o to point m, a distance x in a reference plane T. The position vector of the vehicle after time t may be expressed as:

$$r_{om} = x\hat{i} \tag{1.3}$$

Where,

 $r_{om}$  = positon vector for m in T  $\hat{i}$  = a unit vector parallel to line om x = distance along the straight line

The velocity and acceleration for m may be simply expressed as

$$u_m = \dot{r}_{om} = \dot{x}_{\hat{i}} \tag{1.4}$$

$$a_m = \ddot{r}_{om} = \ddot{x}_{\hat{i}} \tag{1.5}$$

Where,

 $u_m =$  velocity of the vehicle at point m  $a_m =$  accleration of the vehicle at point m  $\dot{x} = \frac{dy}{dx}$  $\ddot{x} = \frac{d^2y}{dx^2}$ 

Two cases are of interest: (1) acceleration is assumed constant; (2) acceleration is a function of velocity.

Case 1: Acceleration is constant When the acceleration of the vehicle is assumed to be constant,

$$\ddot{x}_{\hat{i}} = a \tag{1.6}$$

$$\frac{d\dot{x}}{dx} = a \tag{1.7}$$

$$\dot{x} = at + C_1 \tag{1.8}$$

$$x = \frac{1}{2}at^2 + C_1t + C_2 \tag{1.9}$$

The constants  $C_1$  and  $C_2$  are determined either by the initial conditions on velocity and position or by using known positions of the vehicle at two different times.

Case 2: Acceleration is the function of velocity Acceleration as a Function of Velocity The assumption of constant acceleration has some limitations, because the accelerating capability of a vehicle at any time t is related to the speed of the vehicle at that time  $(u_t)$ . The lower the speed, the higher the acceleration rate that can be obtained. One model that is used commonly in this case is

$$\frac{du_t}{dt} = \alpha - \beta u_t \tag{1.10}$$

Where  $\alpha$  and  $\beta$  are constants.

In this model, the maximum acceleration rate that can be achieved is theoretically  $\alpha$ , which means that  $\alpha$  has units of acceleration as its unit. The term  $\beta u_t$  also should have units of acceleration as its unit, which means that b has the inverse of time (for example,  $sec^{-1}$ ) as its unit.

Integrating Equation 1.10 gives,

$$-\frac{1}{\beta}\ln(\alpha - \beta u_t) = t + C$$

If the velocity is  $u_o$  at t = 0,

$$C = -\frac{1}{\beta} \ln(\alpha - \beta u_o)$$
$$-\frac{1}{\beta} \ln(\alpha - \beta u_t) = t - \frac{1}{\beta} \ln(\alpha - \beta u_o)$$
$$\ln \frac{(\alpha - \beta u_o)}{(\alpha - \beta u_t)} = -\beta t$$

$$\therefore t = \frac{1}{\beta} \ln \frac{(\alpha - \beta u_o)}{(\alpha - \beta u_t)}$$
 (1.11)

$$\alpha - \beta u_t = (\alpha - \beta u_o)e^{-\beta t}$$

$$u_t = \frac{\alpha}{\beta}(1 - e^{-\beta t}) + u_o e^{-\beta t}$$
(1.12)

The distance x(t) traveled at any time t may be determined by integrating equation 1.12

$$x = \int_0^t u_t dt = \int_0^t \left[ \frac{\alpha}{\beta} (1 - e^{-\beta t}) + u_o e^{-\beta t} \right] dt = \left( \frac{\alpha}{\beta} \right) t - \frac{\alpha}{\beta^2} (1 - e^{-\beta t}) + \frac{u_o}{\beta} (1 - e^{-\beta t})$$
(1.13)

## Numerical Example:

The acceleration of a vehicle can be represented by the following equation.

$$\frac{du_t}{dt} = 33 - 0.04u$$

where u is the vehicle speed in ft/sec. If the vehicle is traveling at 45 mi/h, determine its velocity after 5 sec of acceleration and the distance traveled during that time.

#### Solution:

- Convert 45 mi/h to ft/sec:
- $45 \times 1.47 = 66.15$  ft/sec
- Use Eq. 3.11 to determine velocity  $u_t$  after time t.

$$u = \frac{\alpha}{\beta} (1 - e^{-\beta t}) + u_o e^{-\beta t}$$

$$\alpha = 3.3$$

$$\beta = 0.04$$

$$u_t = \frac{3.3}{0.04} (1 - e^{-(0.04 \times 5)}) + 66.15 e^{-(0.04 \times 5)}$$

$$= 82.5 (1 - 0.82) + 66.15 \times 0.82$$

$$= 14.85 + 54.24$$

$$= 69.09 \text{ ft/sec}$$

· Convert ft/sec to mi/h.

$$u_t = 69.09/1.47$$
  
= 47.00 mi/h

• Use Eq. 3.12 to determine distance traveled.

$$x = \left(\frac{\alpha}{\beta}\right)t - \frac{\alpha}{\beta^2}(1 - e^{-\beta t}) + \frac{u_o}{\beta}(1 - e^{-\beta t})$$

$$= \left(\frac{3.3}{0.04}\right)5 - \frac{3.3}{(0.04)^2}(1 - e^{-0.04 \times 5}) + \frac{66.15}{0.04}(1 - e^{-0.04 \times 5})$$

$$= 412.5 - 2062.5(1 - 0.82) + 1653.75(1 - 0.82)$$

$$= 412.5 - 371.25 + 297.68$$

$$= 338.93 \text{ ft}$$

#### **Dynamic Characteristics**

Several forces act on a vehicle while it is in motion: air resistance, grade resistance, rolling resistance, and curve resistance. The extents to which these forces affect the operation of the vehicle are discussed in this section.

Air Resistance A vehicle in motion has to overcome the resistance of the air in front of it as well as the force due to the frictional action of the air around it. The force required to overcome these is known as the air resistance and is related to the cross-sectional area of the vehicle in a direction perpendicular to the direction of motion and to the square of the speed of the vehicle. Claffey has shown that this force can be estimated from the formula

$$R_a = \frac{1}{2} \frac{(2.15\rho C_d A u^2)}{g} \tag{1.14}$$

Where,

 $R_a = \text{air resistance force (lb)}$ 

 $\rho = \text{density of air } (0.0766 \text{ lb/ft3}) \text{ at sea level; less at higher elevations}$ 

 $C_d$  = aerodynamic drag coefficient

(current average value for passenger cars is 0.4; for trucks, this value ranges from 0.5 to 0.8, but a typical value is 0.5)

A = frontal cross-sectional area (ft2)

u = vehicle speed (mi/h)

g = acceleration of gravity (32.2 ft /sec2)

Grade Resistance When a vehicle moves up a grade, a component of the weight of the vehicle acts downward, along the plane of the highway. This creates a force acting in a direction opposite that of the motion. This force is the grade resistance. A vehicle traveling up a grade will therefore tend to lose speed unless an accelerating force is applied. The speed achieved at any point along the grade for a given rate of acceleration will depend on the grade. Figure below shows the relationships between speed achieved and distance traveled on different grades by a typical heavy truck of 200 lb/hp during maximum acceleration. Note: grade resistance = weight \* grade, in decimal.



Fig: Speed-Distance Curves for Acceleration of a Typical Heavy Truck of 120 kg/kw [200 lb/hp] on Upgrades and Downgrades

Rolling Resistance There are forces within the vehicle itself that offer resistance to motion. These forces are due mainly to frictional effect on moving parts of the vehicle, but they also include the frictional slip between the pavement surface and the tires. The sum effect of these forces on motion is known as rolling resistance. The rolling resistance depends on the speed of the vehicle and the type of pavement. Rolling forces are relatively lower on smooth pavements than on rough pavements.

The rolling resistance force for passenger cars on a smooth pavement can be determined from the relation

$$R_r = (C_{rs} + 2.15C_{rv}u^2)W (1.15)$$

Where,

 $R_r = \text{rolling resistance force (lb)}$ 

 $C_{rs} = \text{constant (typically 0.012 for passenger cars)}$ 

 $C_{rv} = \text{constant (typically } 0.65 * 10^{-6} \text{ sec2/ft2 for passenger cars)}$  u = vehicle speed (mi/h)W = gross vehicle weight (lb)

For trucks, the rolling resistance can be obtained from

$$R_r = (C_a + 1.47C_b u)W (1.16)$$

Where,

 $R_r$  = rolling resistance force (lb)

 $C_a = \text{constant (typically 0.02445 for trucks)}$ 

 $C_b = \text{constant (typically } 0.00044 \text{ sec/ft for trucks)}$ 

u = vehicle speed (mi/h)

W = gross vehicle weight (lb)

The surface condition of the pavement has a significant effect on the rolling resistance. For example, at a speed of 50 mi/h on a badly broken and patched asphalt surface, the rolling resistance is 51 lb/ton of weight, whereas at the same speed on a loose sand surface, the rolling resistance is 76 lb/ton of weight.

Curve Resistance When a passenger car is maneuvered to take a curve, external forces act on the front wheels of the vehicle. These forces have components that have a retarding effect on the forward motion of the vehicle. The sum effect of these components constitutes the curve resistance. This resistance depends on the radius of the curve, the gross weight of the vehicle, and the velocity at which the vehicle is moving. It can be determined as

$$R_c = 0.5 \frac{(2.15u^2W)}{aR} \tag{1.17}$$

Where,

 $R_c = \text{curve resistance (lb)}$ 


u = vehicle speed (mi/h)

W = gross vehicle weight (lb)

 $g = \text{acceleration due to gravity } (ft/sec^2)$ 

R = radius of curvature (ft)

**Power Requirements** Power is the rate at which work is done. It is usually expressed in horsepower (a U.S. unit of measure), where 1 horsepower is 550 lb-ft /sec. The performance capability of a vehicle is measured in terms of the horsepower the engine can produce to overcome air, grade, curve, and friction resistance forces and put the vehicle in motion. Figure below shows how these forces act on the moving vehicle.

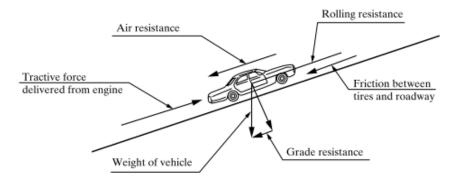

The power delivered by the engine is

$$P = \frac{1.47Ru}{550} \tag{1.18}$$

Where,

P = horsepower delivered (hp)

R = sum of resistance to motion (lb)

u = speed of vehicle (mi/h)

## Numerical Example:

Determine the horsepower produced by a passenger car traveling at a speed of  $65 \, \text{mi/h}$  on a straight road of 5% grade with a smooth pavement. Assume the weight of the car is  $4000 \, \text{lb}$  and the cross-sectional area of the car is  $40 \, \text{ft}^2$ .

**Solution:** The force produced by the car should be at least equal to the sum of the acting resistance forces.

$$R = (air resistance) + (rolling resistance) + (upgrade resistance)$$

Note: There is no curve resistance since the road is straight.

• Use Eq. 3.13 to determine air resistance.

$$R_a = 0.5 \left( \frac{2.15pC_DAu^2}{g} \right)$$
= 0.5 \frac{2.15 \times 0.0766 \times 0.4 \times 40 \times 65 \times 65}{32.2}
= 172.9 lb

• Use Eq. 3.14 to determine rolling resistance.

$$R_r = (C_{rs} + 2.15C_{rv}u^2)(4000)$$
= (0.012 + 2.15 × 0.65 × 10<sup>-6</sup> × 65 × 65)(4000)  
= (0.012 + 0.006)(4000)  
= 0.018 × 4000  
= 72 lb

Grade resistance =  $4000 \times \frac{5}{100} = 200 \text{ lb}$ 

· Determine total resistance.

$$R = R_a + R_r + \text{grade resistance} = 172.9 + 72 + 200 = 444.9 \text{ lb}$$

• Use Eq. 3.17 to determine horsepower produced.

$$P = \frac{1.47Ru}{550}$$

$$= \frac{1.47 \times 444.9 \times 65}{550}$$

$$= 77.3 \text{ hp}$$

#### 1.4.3 Pedestrian Characteristics

Pedestrian characteristics relevant to traffic and highway engineering practice include those of the driver, discussed in the preceding sections. In addition, other pedestrian characteristics may influence the design and location of pedestrian control devices. Such control devices include special pedestrian signals, safety zones and islands at intersections, pedestrian underpasses, elevated walkways, and crosswalks. Apart from visual and hearing characteristics, walking characteristics play a major part in the design of some of these controls. For example, the design of an all-red phase, which permits pedestrians to cross an intersection with heavy traffic, requires knowledge of the walking speeds of pedestrians. Observations of pedestrian movements have indicated that walking speeds vary between 3.0 and 8.0 ft /sec. Significant differences have also been observed between male and female walking speeds. At intersections, the mean male walking speed has been determined to be 4.93 ft /sec, and for females, 4.63 ft /sec. A more conservative value of 4.0 ft /sec is normally used for design purposes. However, Rouphail and others have shown that the average walking speed depends on the population of elderly pedestrians. For example, the average walking speed is 4.0 ft /sec when the percentage of elderly pedestrians is 20 percent or lower, but reduces to 3.0 ft /sec when the percentage of elderly pedestrians is higher than 20 percent. This factor therefore should be taken into consideration for the design of intersection pedestrian signals at locations where a high number of older pedestrians is expected. Consideration also should be given to the characteristics of handicapped pedestrians, such as the blind. Studies have shown that accidents involving blind pedestrians can be reduced by installing special signals. The blind pedestrian can turn the signal to a red phase by using a special key, which also rings a bell, indicating to the pedestrian that it is safe to cross. Ramps are also now being provided at intersection curbs to facilitate the crossing of the intersection by the occupant of a wheelchair. Also, consideration should be given to the relatively lower average walking speed of the handicapped pedestrian, which can vary from a low of 1.97 ft /sec to 3.66 ft /sec.

#### 1.4.4 Road Characteristics

The characteristics of the highway discussed in this section are related to stopping and passing because these have a more direct relationship to the characteristics of the driver and the vehicle discussed earlier.

21

#### Sight Distance

Sight distance is the length of the roadway a driver can see ahead at any particular time. The sight distance available at each point of the highway must be such that, when a driver is traveling at the highway's design speed, adequate time is given after an object is observed in the vehicle's path to make the necessary evasive maneuvers without colliding with the object. The two types of sight distance are (1) stopping sight distance and (2) passing sight distance.

1. Stopping Sight Distance The stopping sight distance (SSD), for design purposes, is usually taken as the minimum sight distance required for a driver to stop a vehicle after seeing an object in the vehicle's path without hitting that object. This distance is the sum of the distance traveled during perception-reaction time and the distance traveled during braking. The SSD for a vehicle traveling at u mi/h is

$$SSD = 1.47ut + \frac{u^2}{30\left(\frac{a}{g} \pm G\right)} \tag{1.19}$$

Where.

u = speed of the vehicle when brakes are appled

t = distance travelled between perception-reaction time

q = acceleration due to gravity

a = acceleration of the vehicle

 $G = \tan \gamma$  (% Grade/100)

2. Passing Sight Distance The passing sight distance is the minimum sight distance required on a two-lane, twoway highway that will permit a driver to complete a passing maneuver without colliding with an opposing vehicle and without cutting off the passed vehicle. The passing sight distance will also allow the driver to successfully abort the passing maneuver (that is, return to the right lane behind the vehicle being passed) if he or she so desires. In determining minimum passing sight distances for design purposes, only single passes (that is, a single vehicle passing a single vehicle) are considered. Although it is possible for multiple passing maneuvers to occur (that is, more than one vehicle pass or are passed in one maneuver), it is not practical for minimum design criteria to be based on them.

## 1.5 Review Problems

# Chapter 2

# Motor Vehicle Act

# Chapter 3

# **Transport Economics**

# 3.1 Introduction

All decisions related to planning, design, and improvement of transportation infrastructure have economic implications. Transport economics includes the issues such as transport location, movement of people and freight/goods, transport demand, transport planning and forecasting, direct and indirect cost of transport, pricing of transport services, investments in transport infrastructure and services, transport and social-economic development, and transport regulation. In this chapter the transport economics is considered from the micro economic perspective. We consider various aspects of the direct costs and pricing of transport infrastructure and services of different transportation modes.

Considered from this microeconomic perspective, it can be said that the transport sector consists of the demand and supply component. The transport demand is derived demand due to needs of people and freight/goods shipments to change the physical place. For example, many people live at one place but work and/or have a leisure on the others, which requires them to travel forward and backward. The location of companies providing raw materials is different than those of the users of these materials—manufacturers of the semifinal and final products, which requires transportation of these raw materials from the former to the latter. In addition, the manufacturers of the final products are often located far away from the retailers of these products, which again require transportation, this time of the final products. Thus, it can be said that the transport demand is derived demand. In many cases transportation demand is proportional to the volumes of peoples' activities and the quantities of final products they consume during a given period of time.

The transport demand is handled by the transport supply/capacity pro-

vided by transport companies. The transport companies generally provide transport infrastructure with the supportive facilities and equipment, and rolling stock/vehicles carrying out transport services. In order to make them operational, the corresponding material, labor, ie, employed staff/personnel, and energy/fuel, are consumed. In terms of time, the transport infrastructure has particularly the long life-cycle, which is, for example, about 20, 30, 40, or even 60 years. That of rolling stock/vehicles is shorter (20–25 years) mainly due to its/their physical and also technological obsolescence, after they need to be replaced. In this context, two categories of transport companies can be distinguished: that providing transport infrastructure called "transport operators." They both constitute the transport systems within particular transport modes.

According to the economic jargon, the above-mentioned components of transport supply/capacity represent the main inputs to transport processes. The outputs of the transport process are the transport services produced in the given quantities and at the specified quality. They are consumed by users—passengers and/or freight shippers/receivers at the same time as they are produced. This implies that they are the short-lived similarly as transport demand without possibility to be stored/warehoused and left to be consumed sometimes latter on.

The most important economic categories of a given transport system are its costs, revenues, and their relationship.

The costs are expenses for maintaining the transport infrastructure and carrying out transport services. These costs are passed to users of these services (passengers and freight/goods shippers and receivers) in the form of prices/charges. These charges bring revenues to transport companies. In general, these prices/charges, ie, revenues, are set up to cover the company's costs and provide some profits. Nevertheless, the difference between revenues and costs can generally be positive or negative, thus representing the profits or losses. Profits or losses are calculated for the given period of time (usually for a quarter of year, year, or few years).

The prices charged to users of transport services represent for them direct costs. In addition, users are imposed the indirect costs, which are usually considered to be the cost of time during trip/travel/ transportation. In such case, the sum of direct and indirect costs is called the users' generalized trip/travel/transportation costs for users.

We describe in this chapter the main elements of economics of transportation systems considered from the engineering perspective. The chapter analyzes direct costs and revenues of the providers of transport infrastructure and transport operators. Costs and revenues could be analyzed at the level of the individual component (infrastructure, rolling stock) and/or of the entire company.

# 3.2 Some Important Terminologies


# 3.2.1 Transport Industry/Sector

The transport sector of a specific region continent consists of transport companies providing transport infrastructure (infrastructure providers), and transport services (transport operators). They both could be fully public, fully private, and mixed public/private owned. The transport infrastructure providers obtain investments for building transport infrastructure usually from the national and international banks and monetary funds. Some of the well-known funds are International Monetary Fund, World Bank, and European Central Bank. The obtained investments are usually long-term credits, and they are spread over the life-cycle of the given infrastructure. The annuities on the loan, as well as the cost of current and capital maintenance, are covered by charging transport operators for using the infrastructure. On one hand, these charges represent the revenues of the infrastructure providers. On the other hand, they represent the part of the transport operators' operating costs. The charges enable entry of particular transport operators to the particular link/line/route, node, or a part of the infrastructure network. In general, more than one operator could be allowed to use the transportation infrastructure. This depends on the expected demand volumes, as well as on the capacity of the related infrastructure elements. Such policy ofaccess enables competition between different operators, which in general reduces prices charged to their users (passengers and freight/ goods shippers and receivers). For examples, road users—cars, buses, and trucks pay for accessing and use highways, the railway operators are charged for using the rail infrastructure after their separation, ships are charged for accessing ports, airlines pay fees for getting slots at airports, etc.

## 3.2.2 Fixed and Variable Costs

Each transport system is characterized by internal costs and external costs. Internal costs are paid exclusively by the transportation system users. Internal costs are construction costs, maintenance costs, fuel costs, etc. The main external costs are air pollution, high level of noise, negative outcomes on wetlands, negative effects on wildlife habitat, and low water quality. These external costs are paid by the whole society.

The total costs of transport infrastructure providers, or transport operators can be divided into two main categories: fixed costs and variable costs.

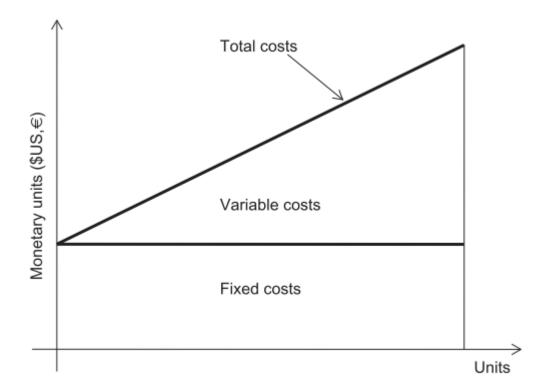

The variable costs, that depend on the level of utilization of a given rolling stock/vehicle fleet. They include costs of labor, material, and energy/fuel. These costs are not inevitable. They are lower with the lower utilization of a given rolling stock/vehicle fleet.

The total costs TC(k) of any transport company represent the sum of fixed and variable costs, i.e.

$$TC(k) = FC(k) + VC(k)$$
(3.1)

Where,

k is the period of time (day, month, quarter, year)

FC(k) is the fixed costs incurred during the time period k


FC(k) is the variable costs incurred during the time period k

In addition, the fixed cost of the infrastructure providers and transport operators for construction of infrastructure and acquiring the rolling stock/vehicle fleet are covered by the investments. These, after uniformly spread over the given period of time, usually over the predicted life-cycle, are expected to bring benefits to the actors/stakeholders involved such as investors, trans-

port infrastructure providers and transport operators, users/passengers and freight/goods shippers and receivers, and the local, regional, national, and global community, ie, the economy and society.

## 3.2.3 Economies of Scale and Economies of Scope

The average costs per unit of output are obtained by dividing the total costs (Eq. 3.1) by the volume of output. The output could be the number of vehicles, the number of passengers, quantity of freight/goods, the number of vehicle-kilometers, the number of passenger-kilometers, the number of freight-kilometers, etc. If this average cost decreases with increasing of the volume of given output, he economies of scale exist. Otherwise, economies of scope exist. In the former case, in general, the average cost decreases because of spreading the fixed costs over the larger number of units of output. Economies of scale could be interpreted as the cost advantages that companies achieve as a result of size, output, or scale of operations. For example, when the output increases from O1 to O2, the average cost of each unit decreases from AC1 to AC2 as shown in the figure below.

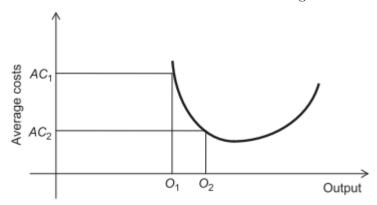

Trucking, delivery companies, and airlines usually organize a hub-and-spoke networks as the flows between hubs are characterized by economies of scale. At hubs, goods or passengers are exchanged across vans, trucks, and planes.

Based on Eq. 3.1, the average cost per unit of output can be estimated in the following way:

$$AC(k) = TC(k)/VO(k) = [FC(k) + VC(k)]/VO(k)$$
 (3.2)

Where VO(k) is the volume of output during the time period (k) (number, quantity).

Transportation projects and transportation operations are also characterized by marginal costs. Marginal costs are defined as the change in total cost caused by supplying an additional unit of transport capacity—transport

service, seat at transport service, etc. Marginal costs have a tendency to decrease with transportation project size.

Economies of scope are defined as decreasing of the average total cost with increasing of the number of different services produced. In the case of a transport company, this could be offering transport services for both passengers and freight/goods. An airline operating both passenger and cargo aircraft fleet could be an example. Such airline can operate at lower cost than what it would be cost of two separate airlines (one operating passenger aircraft fleet, and the other operating cargo aircraft fleet).

#### 3.2.4 Revenue

Revenues are amounts of money that a transport company receives during a specific period of time from charging its transport services to users. These are calculated by multiplying the price at which the given services are sold by their number carried out during the specified period of time.

Net income represents the difference between the revenues and costs, which a given transport company or transport sector has achieved during the specified period of time (usually a quarter or a year). It can be estimated as follows:

$$I(k) = R(k) - C(k) \tag{3.3}$$

Where R(k) is the revenues of a transport company achieved during the time period k (In monetary units)


This income can be positive (revenues are greater than costs) in which case, after being taxed, represents profits. Otherwise, the negative net income (revenues are lower than costs) represents loses in the given context.

Profit margin represents the ratio of net income and total revenues, as follows:

$$PM(k) = I(k)/R(k) = [R(k) - C(k)]/R(k)$$
(3.4)

where the other symbols are analogous to those in the previous equations. In effect, as defined above, the profit margin measures how much income a transport company has from each unit of the revenues earned. For example, a 10% profit margin implies that the company has a net income of €0.10 for each Euro of the total revenues.

## 3.2.5 Relationship Between Demand and Supply

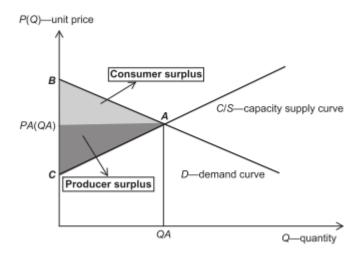

Transport companies supply transport capacity to satisfy the expected demand during a given period of time. This is carried out based on the unit price of output/transport service. The unit price is based on the revenues obtained by the given capacity supply and its related costs. In general, when the unit price decreases, the demand for transport services generally tends to increase, and vice versa. Under the same conditions, the total capacity supply and related costs tend to increase, and vice versa. The above figure shows the simplified scheme of the relationship between demand and capacity supply depending of the unit price.

Quantity demanded and quantity supplied are the functions of the unit price. The figure shown above does not follow the standard graphical representation of the functions. Traditionally, in economic literature, the unit price is on the vertical axis, and quantity on the horizontal axis.

As it can be seen from the above figure, the demand and capacity supply curves intersect at the point A.At this point the quantity demanded  $Q_A$ ), at the current price  $P_A(Q_A)$ , is equal to the quantity supplied at the current price  $P_A(Q_A)$ , resulting in an economic equilibrium.

The relationship between the two curves indicates two phenomena: consumer and producer surplus. The former appears when the users—passengers or freight/goods sippers/receivers are willing to pay the price for service even above its market-balanced level (Triangle:  $A-P_A(Q_A)-B$ ). The latter represents the difference between the amount that a transport company is willing and able to supply and the amount it actually receives by charging its supply at the market-balanced prices (Triangle:  $A-P_A(Q_A)-C$ ). As such, this is considered as the benefit for the transport company operating in the

market under given conditions. In addition, the sum of the consumer and producer surplus (Triangle: A-B-C) represents the economic welfare, ie, the utility, which could be gained by both users and producers, ie, suppliers of transport services under given (market) conditions.

## 3.3 Transportation Projects Evaluation

Construction of highways along with the other associated infrastructures, construction of a new freight center, acquisition of new vehicles for the transit e.t.c. represent transportation projects faced by transportation experts. In the initial stage of these projects, it is necessary to perform their evaluation, that is, as precise as possible, analyze and review economic, environmental, equity, as well as other project impacts. The planners and engineers must properly answer the following questions: (a) Are the transportation project's benefits greater than the projects' costs?; (b) What is the best project's alternative in the case when project has few mutually exclusive alternatives?; (c) How to allocate available funds among competitive transportation projects?; (d) When to start the considered project?

Frequently, financial resources are scarce, and appropriate engineering economic analysis can significantly help planners and decision-makers to allocate available resources properly. In the first step of any project evaluation, it is necessary to analyze the project's socio-economic context, and to clearly define the project's objectives. In the next steps, the analysts should clearly recognize the type of costs and benefits, compare them and make recommendations to the decision makers.

Transportation projects usually extend over many years. On the other hand, the purchasing power of money decreases over time. The main cause of this phenomenon is the inflation that exists in every society. A discount rate regulates the value ofmoney for time. This rate is used to represent future monetary quantities in terms of their today's value. Compounding and discounting are techniques that enable us to compare money values at different points in time. Let us briefly explain compounding technique.

Let us assume that we want to invest \$100 these days, at an annual interest rate (r) of 5%. It will be \$100 + \$5 = \$105 in 1 year. After two years it will be 105\$ + \$0.05 \* 105 = \$110.25. After 3 years we will have \$110.25 + \$0.05 \* \$110.25 = \$115.7625. Discounting represent reverse operation of compounding. The compounding technique helps us to find the answer to the following question: what is the present value (PV) of a known future amount of money?

In our example, the PV of \$105 next year, when r=5%, is \$100. The PV equals

$$PV = V_t/(1+r)^t \quad t = 0, 1, 2, \dots, n$$
(3.5)

Where n is the project duration (in years), r is the rate of discount, and  $V_t$  is the value in year t.

There are two interest rates that are used in transportation projects evaluation. The first one is the real interest rate that is exclusive of inflation, while the second one is the nominal interest rate that is inclusive of inflation. Project value is usually expressed as a NPV. This value represents a project's value or cost for its whole life cycle in today's dollars.

When evaluating transportation projects many governments and funding agencies in the world (OECD, World Bank, etc.) require a cost-benefit analysis (CBA) to be performed. In this way, the CBA represents common evaluation language between the governments, funding agencies and the transportation project supporters.

## 3.4 Cost-Benefit Analysis

The CBA is a method that calculate and compare project's costs and benefits to society over period of time. The CBA monetizes all project's inputs and outputs. In other words, the CBA converts the inputs and the outputs into a monetary values. The CBA helps decision-makers to rank and prioritize various project's alternatives including also alternative "no action" ("no action," or "do nothing" case assumes continued operation of the existing facility, exclusive of any major investments). The specific transportation project should start only when the CBA clearly shows to the decision makers that the total benefits to society outweigh the total costs. When performing CBA, the analysts enumerate all project's costs and benefits to society. In the next step, they assign monetary values to costs and benefits, and discount them to a NPV. All costs, as well as all benefits are added into a single number. The transportation project is evaluated by using total costs, and the total benefits values.

In the first step of the CBA, it is necessary to identify transportation project's alternatives to be evaluated. Alternatives may represent "do nothing" case, rehabilitation of existing facility, construction of a new facility, etc. Transportation projects have consequences over time. The analysts should also define the time period over which the life cycle costs and benefits of all of the alternatives will be calculated.

The project's economic performances are measured by the following indicators:

NPV: Net Present Value IRR: Internal Rate of Return B/C: The Benefit-Cost ratio

The majority of experts consider the NPV as the most important CBA indicator. The NPV is defined in the following way:

$$NPV = \sum_{t=0}^{\infty} \frac{B_t - C_t}{(1+r)^t}$$
 (3.6)

Where.

 $B_t$ : Benefits in year t $C_t$ : Costs in year t

n: Project duration (in years)

r: interest ratet: year index

Project'sbenefits and costs are forecast over the project duration. For example, benefits from road investment could be shorter traveling distance, shorter travel time, reduced number of traffic accidents, etc. The road improvement costs could be project design costs, labor costs equipment costs, material costs, etc.

The analysts use a NPV to express a project's worth for its complete life cycle in today's money value. We see that the NPV decreases in r (interest rate) increases. In case when NPV>0, the project may be accepted. However, when NPV<0, the considered project should be rejected. Finally, when NPV=0, we conclude that the considered project adds no monetary value. The final decision about such transportation project should be based on some additional criteria.

The internal rate of return (IRR) is the indicator that also measures the project's performances. The IRR is the discount rate/interest rate at which the NPV=0. We calculate the IRR by solving the following equation:

$$\sum_{t=0}^{\infty} \frac{B_t - C_t}{(1 + IRR)^t} = 0 \tag{3.7}$$

The average values of the observed IRR's in a sample of investment projects sponsored by the European Union (EU) at the end of the 20th century are approximately equal to 15% in the cases of roads and highways, 10% in the cases of railways and underground, and 25% in the cases of ports and air-

ports.

After calculation net benefits B and net costs C, the benefit/cost ratio  $\left(\frac{B}{C}\right)$  should be also calculated. (Frequently, it is not easy to estimate future costs, and, especially project's benefits.) The benefit/cost ratio  $\left(\frac{B}{C}\right)$  informs us about the improvement in traffic operations (expressed in dollars) per dollar invested.

Analysts and engineers usually perform a sensitivity analysis to conclude how sensitive final results are to changes in hypothesis about the costs, benefits, and discount rate.

The main weakness of the CBA is that all transportation project benefits are evaluated only in monetary terms. It is very complicated to value all the costs and benefits of transportation projects in monetary terms. In other words, in many situations, social and environmental aspects of the considered transportation projects are not treated adequately. For example, many traffic safety programs, actions and projects involve the prevention of loss of life. The logical and ethical question is how should we value a life saved? A pure economic approach would suggest to us that the value of life is equal to the PV of lifetime earnings. Obviously, there are numerous opponents to such an oversimplified and ethically questioned approach.

## 3.5 Numerical Examples:

Example #1: Selecting a transportation mode

An individual is planning to take a trip between the downtown area of two cities, A and B, which are 400 miles apart. There are three options available:

- 1. **Travel by air:** This trip will involve driving to the airport near city A, parking, waiting at the terminal, flying to airport B, walking to a taxi stand, and taking a taxi to the final destination.
- 2. **Travel by auto:** This trip will involve driving 400 miles through several congested areas, parking in the downtown area, and walking to the final destination.
- 3. **Travel by rail:** This trip will involve taking a cab to the railroad station in city A, a direct rail connection to the downtown area in city B, and a short walk to the final destination.

Since this is a business trip, the person making the trip is willing to pay up to \$25 for each hour of travel time reduced by a competing mode. (For example, if one mode is two hours faster than another, the traveler is willing to pay \$50 more to use the faster mode.) After examining all direct costs involved in making the trip by air, auto, or rail (including parking, fuel, fares, tips, and taxi charges) the traveler concludes that the trip by air will cost \$250 with a total travel time of five hours, the trip by auto will cost \$200 with a total travel time of eight hours and the trip by rail will cost \$150 with a total travel time of 12 hours.

- Which mode is selected based on travel time and cost factors alone?
- What other factors might be considered by the traveler in making a final selection?

Solution: Since travel time is valued at \$25/hr, the following costs would be incurred:

Air: 250 + 25 \* 5 = \$375 Auto: 200 + 25 \* 8 = \$400Rail: 150 + 25 \* 12 = \$450

In this instance, the air alternate reflects the lowest cost and is the selected mode. However, the traveler may have other reasons to select another alternative. These may include the following considerations.

**Safety:** While each of these modes is safe, the traveler may feel "safer" in one mode than another. For example, rail may be preferred because of concerns regarding air safety issues.

Reliability: If it is very important to attend the meeting, the traveler may select the mode that will provide the highest probability of an on-time arrival. If the drive involves travel through work zones and heavily congested areas, rail or air would be preferred. If potential air delays are likely due to congestion, flight cancellations, or inclement weather, another mode may be preferred.

**Convenience**: The number of departures and arrivals provided by each mode could be a factor. For example, if the railroad provides only two trains/day and the airline has six flights/day, the traveler may prefer to go by air.

Example #2: Computing the Toll to Maximize Revenue Using a Supply—Demand Curve

A toll bridge carries 5000 veh/day. The current toll is 150 cents. When the toll is increased by 25 cents, traffic volume decreases by 500 veh/day. Determine the amount of toll that should be charged such that revenue is maximized. How much additional revenue will be received?

Solution:Let x the toll increase in cents.

Assuming a linear relation between traffic volume and cost, the expression for V is

$$V = 5000 - x/25(500)$$
  
The toll is,  $T = 150 + x$ 

Revenue is the product of toll and volume,

$$R = V * T$$

$$= (5000 - x/25 * 500)(150 + x)$$

$$= (5000 - 20x)(150 + x)$$

$$= 750,000 + 2000 - 20x^{2}$$

For maximum value of x,

$$\begin{array}{l} \frac{dR}{dT} = 0\\ 20,000 - 40x = 0\\ \therefore x = 50cents \end{array}$$

The new toll is the current toll plus the toll increase. Toll for maximum revenue = 150 + 50 = 200centsThe additional revenue, AR

$$= V_m ax * T_m ax - V_c urrent * T_c urrent$$

$$= 5000 - 50/25 * 500 * 2 - 5000 * 1.5$$

$$= 4000 * 2 - 7500$$

$$= 8000 - 7500$$

$$\therefore AR == $500$$

## 3.6 Review Problems

## Chapter 4

# Insurance

## 4.1 Introduction

There is no single definition of insurance. Insurance can be defined from the viewpoint of several disciplines, including law, economics, history, actuarial science, risk theory, and sociology. But each possible definition will not be examined at this point. Instead, we will examine the common elements that are typically present in any insurance plan. However, before proceeding, a working definition of insurance—one that captures the essential characteristics of a true insurance plan—must be established.

After careful study, the Commission on Insurance Terminology of the American Risk and Insurance Association has defined insurance as follows. Insurance is the pooling of fortuitous losses by transfer of such risks to insurers, who agree to indemnify insureds for such losses, to provide other pecuniary benefits on their occurrence, or to render services connected with the risk. Although this lengthy definition may not be acceptable to all risk managers and insurance scholars, it is useful for analyzing the common elements of a true insurance plan.

## 4.2 Basic Characteristics of Insurance

Based on the preceding definition, an insurance plan or arrangement typically includes the following characteristics:

#### 4.2.1 Pooling of Losses

Pooling or the sharing of losses is the essence of insurance. Pooling is the spreading of losses incurred by the few over the entire group, so that in the process, average loss is substituted for actual loss. In addition, pooling involves the grouping of a large number of exposure units so that the law of

large numbers can operate to provide a substantially accurate prediction of future losses. Ideally, there should be a large number of similar, but not necessarily identical, exposure units that are subject to the same perils. Thus, pooling implies (1) the sharing of losses by the entire group and (2) the prediction of future losses with some accuracy based on the law of large numbers.

The primary purpose of pooling, or the sharing of losses, is to reduce the variation in possible outcomes as measured by the standard deviation or some other measure of dispersion, which reduces risk. For example, assume that two freight business owners each own an identical storage building valued at \$50,000. Assume there is a 10% chance in any year that each building will be destroyed by a peril, and that a loss to either building is an independent event. The expected annual loss for each owner is \$5,000 as shown below:

Expected Loss = 
$$0.90 \times \$0 + 0.10 \times \$50000 = \$5000$$

A common measure of risk is the standard deviation, which is the square root of the variance. The standard deviation (SD) for the expected value of the loss is \$15,000, as shown below:

$$SD = \sqrt{0.9 \times (0 - 5000)^2 + 0.1 \times (50000 - 5000)^2} = \$15000$$

Suppose instead of bearing the risk of loss individually, the two owners decide to pool (combine) their loss exposures, and each agrees to pay an equal share of any loss that might occur. Under this scenario, there are four possible outcomes:

Possible Outcomes	Probability
Neither Building is destroyed	$0.9 \times 0.9 = 0.81$
First building is destroyed and second building is intact	$0.1 \times 0.9 = 0.09$
First building is intact and second building is destroyed	$0.9 \times 0.1 = 0.09$
Both buildings are destroyed	$0.1 \times 0.1 = 0.01$

If neither building is destroyed, the loss for each owner is \$0. If one building is destroyed, each owner pays \$25,000. If both buildings are destroyed, each owner must pay \$50,000. The expected loss for each owner remains \$5,000 as shown below:

Expected loss =  $0.81 \times \$0 + 0.09 \times \$25000 + 0.09 \times \$25000 + 0.01 \times \$50000 = \$5000$ 

Note that while the expected loss remains the same, the probability of the extreme values, \$0 and \$50,000, have declined. The reduced probability of

the extreme values is reflected in a lower standard deviation as shown below:

$$SD = \sqrt{0.81(0 - 5000) + 0.09(25000 - 5000) + 0.09(25000 - 5000) + 0.01(50000 - 5000)}$$
  

$$SD = \$10607$$

Thus, as additional individuals are added to the pooling arrangement, the standard deviation continues to decline while the expected value of the loss remains unchanged. For example, with a pool of 100 insureds, the standard deviation is \$1,500; with a pool of 1,000 insureds, the standard deviation is \$474; and with a pool of 10,000, the standard deviation is \$150.

In addition, by pooling or combining the loss experience of a large number of exposure units, an insurer may be able to predict future losses with greater accuracy. From the viewpoint of the insurer, if future losses can be predicted, objective risk is reduced. Thus, another characteristic often found in many lines of insurance is risk reduction based on the law of large numbers.

The law of large numbers states that the greater the number of exposures, the more closely will the actual results approach the probable results that are expected from an infinite number of exposures. For example, if you flip a balanced coin into the air, the a priori probability of getting "heads" is 0.5. If you flip the coin only 10 times, you may get heads eight times. Although the observed probability of getting heads is 0.8, the true probability is still 0.5. If the coin were flipped 1 million times, however, the actual number of heads would be approximately 500,000. Thus, as the number of random tosses increases, the actual results approach the expected results.

#### 4.2.2 Payment of Fortuitous Losses

A second characteristic of private insurance is the payment of fortuitous losses. Most insurance policies exclude intentional losses. A fortuitous loss is one that is unforeseen and unexpected by the insured and occurs as a result of chance. In other words, the loss must be accidental. The law of large numbers is based on the assumption that losses are accidental and occur randomly. For example, a person may slip on an icy sidewalk and break a leg. The loss would be fortuitous.

#### 4.2.3 Risk Transfer

Risk transfer is another essential element of insurance. With the exception of self-insurance, a true insurance plan always involves risk transfer. Risk transfer means that a pure risk is transferred from the insured to the insurer, who typically is in a stronger financial position to pay the loss than

the insured. From the viewpoint of the individual, pure risks that are typically transferred to insurers include the risk of premature death, excessive longevity, poor health, disability, destruction and theft of property, and personal liability lawsuits.

#### 4.2.4 Indemnification

A final characteristic of insurance is indemnification for losses. Indemnification means that the insured is restored to his or her approximate financial position prior to the occurrence of the loss. Thus, if your home burns in a fire, a homeowners policy will indemnify you or restore you to your previous position. If you are sued because of the negligent operation of an automobile, your auto liability insurance policy will pay those sums that you are legally obligated to pay. Similarly, if you become seriously disabled, a disability-income insurance policy will restore at least part of the lost wages.

## 4.3 Characteristics of an Ideally Insurable Risk

Private insurers generally insure only pure risks. However, some pure risks are not privately insurable. From the viewpoint of a private insurer, an insurable risk ideally should have certain characteristics. There are ideally six characteristics of an insurable risk:

#### 4.3.1 Large Number of Exposure Units

The first requirement of an insurable risk is a large number of exposure units. Ideally, there should be a large group of roughly similar, but not necessarily identical, exposure units that are subject to the same peril or group of perils. For example, a large number of wood frame dwellings in a city can be grouped together for purposes of providing property insurance on the dwellings.

The purpose of this first requirement is to enable the insurer to predict losses based on the law of large numbers. Loss data can be compiled over time, and losses for the group as a whole can be predicted with some accuracy. The loss costs can then be spread over all insureds in the underwriting class.

#### 4.3.2 Accidental and Unintentional Loss

A second requirement is that the loss should be accidental and unintentional; ideally, the loss should be unforeseen and unexpected by the insured and outside of the insured's control. Thus, if an individual deliberately

causes a loss, he or she should not be indemnified for the loss.

There are several reasons for this requirement. First, the loss should be accidental because the law of large numbers is based on the random occurrence of events. A deliberately caused loss is not a random event because the insured knows when the loss will occur. Thus, prediction of future experience may be highly inaccurate if a large number of intentional or nonrandom losses occur. Second, moral hazard is increased if the insured deliberately intends to cause a loss. Finally, it is poor public policy to allow insureds to collect for intentional losses.

#### 4.3.3 Determinable and Measurable Loss

A third requirement is that the loss should be both determinable and measurable. This means the loss should be definite as to cause, time, place, and amount. Life insurance, in most cases, meets this requirement easily. The cause and time of death can usually be readily determined, and if the person is insured, the face amount of the life insurance policy is the amount paid.

Some losses, however, are difficult to determine and measure. For example, under a disability-income policy, the insurer promises to pay a monthly benefit to the disabled person if the definition of disability stated in the policy is satisfied. Some dishonest claimants may deliberately fake sickness or injury to collect from the insurer. Even if the claim is legitimate, the insurer must still determine whether the insured satisfies the definition of disability stated in the policy. Sickness and disability are highly subjective, and the same event can affect two persons quite differently. For example, two accountants who are insured under separate disability-income contracts may be injured in an auto accident, and both may be classified as totally disabled. One accountant, however, may be more determined to return to work. If that accountant undergoes rehabilitation and returns to work, the disability-income benefits will terminate. Meanwhile, the other accountant would still continue to receive disability-income benefits according to the terms of the policy. In short, it is often difficult to determine when a person is actually disabled. However, all losses ideally should be both determinable and measurable.

The basic purpose of this requirement is to enable an insurer to determine if the loss is covered under the policy, and if it is covered, how much should be paid. For example, assume that Shannon has an expensive fur coat that is insured under a homeowners policy. It makes a great deal of difference to the insurer if a thief breaks into her home and steals the coat, or the coat is missing because her husband stored it in a drycleaning establishment but forgot to tell her. The loss is covered in the first example but not in the

second.

#### 4.3.4 No Catastrophic Loss

The fourth requirement is that ideally the loss should not be catastrophic. This means that a large proportion of exposure units should not incur losses at the same time. As we stated earlier, pooling is the essence of insurance. If most or all of the exposure units in a certain class simultaneously incur a loss, then the pooling technique breaks down and becomes unworkable. Premiums must be increased to prohibitive levels, and the insurance technique is no longer a viable arrangement by which losses of the few are spread over the entire group.

Insurers ideally wish to avoid all catastrophic losses. In reality, however, that is impossible, because catastrophic losses periodically result from floods, hurricanes, tornadoes, earthquakes, forest fires, and other natural disasters. Catastrophic losses can also result from acts of terrorism.

Several approaches are available for meeting the problem of a catastrophic loss. First, reinsurance can be used by which insurance companies are indemnified by reinsurers for catastrophic losses. Reinsurance is an arrangement by which the primary insurer that initially writes the insurance transfers to another insurer (called the reinsurer) part or all of the potential losses associated with such insurance. The reinsurer is then responsible for the payment of its share of the loss.

Second, insurers can avoid the concentration of risk by dispersing their coverage over a large geographical area. The concentration of loss exposures in a geographical area exposed to frequent floods, earthquakes, hurricanes, or other natural disasters can result in periodic catastrophic losses. If the loss exposures are geographically dispersed, the possibility of a catastrophic loss is reduced.

Finally, financial instruments are now available for dealing with catastrophic losses. These instruments include catastrophe bonds, which are designed to help fund catastrophic losses.

#### 4.3.5 Calculable Chance of Loss

Another requirement is that the chance of loss should be calculable. The insurer must be able to calculate both the average frequency and the average severity of future losses with some accuracy. This requirement is necessary so that a proper premium can be charged that is sufficient to pay all claims

and expenses and yields a profit during the policy period.

Certain losses, however, are difficult to insure because the chance of loss cannot be accurately estimated, and the potential for a catastrophic loss is present. For example, floods, wars, and cyclical unemployment occur on an irregular basis, and prediction of the average frequency and severity of losses is difficult. Thus, without government assistance, these losses are difficult for private carriers to insure.

### 4.3.6 Economically Feasible Premium

A final requirement is that the premium should be economically feasible. The insured must be able to afford the premium. In addition, for the insurance to be an attractive purchase, the premiums paid must be substantially less than the face value, or amount, of the policy.

To have an economically feasible premium, the chance of loss must be relatively low. One view is that if the chance of loss exceeds 40 percent, the cost of the policy will exceed the amount that the insurer must pay under the contract. For example, an insurer could issue a \$1,000 life insurance policy on a man who is age 99, but the pure premium would be close to that amount, and an additional amount for expenses would also have to be added. The total premium would exceed the face amount of insurance.

Based on the preceding requirements, most personal risks, property risks, and liability risks can be privately insured because the ideal characteristics of an insurable risk generally can be met. In contrast, most market risks, financial risks, production risks, and political risks are difficult to insure by private insurers. These risks are speculative, and calculation of a correct premium may be difficult because the chance of loss cannot be accurately estimated. For instance, insurance that protects a retailer against loss because of a change in consumer tastes, such as a style change, generally is not available. Accurate loss data are not available. Thus, it would be difficult to calculate an accurate premium. The premium charged may or may not be adequate to pay all losses and expenses. Since private insurers are in business to make a profit, certain risks are difficult to insure because of the possibility of substantial losses.

## 4.4 Types of Insurance

Insurance can be classified as either private or government insurance. Private insurance includes life and health insurance as well as property and liability insurance. Government insurance includes social insurance programs and other government insurance plans.

#### 4.4.1 Private Insurance

#### Life Insurance

Life insurance pays death benefits to designated beneficiaries when the insured dies. The benefits pay for funeral expenses, uninsured medical bills, estate taxes, and other expenses. The death proceeds can also provide periodic income payments to the deceased's beneficiary. Life insurers also sell annuities, individual retirement account (IRA) plans, 401(k) plans, and individual and group retirement plans. Some life insurers also sell (1) individual and group health insurance plans that cover medical expenses because of sickness or injury, (2) disability income plans that replace income lost during a period of disability, and (3) long-term care policies that cover care in nursing facilities.

#### **Health Insurance**

Although many life insurers we described also sell some type of individual or group health insurance plan, the health insurance industry overall is highly specialized and controlled by a relatively small number of insurers. These companies include Blue Cross Blue Shield Association, AETNA, United Health Group, and Well Point. Medical expense plans pay for hospital and surgical expenses, physician fees, prescription drugs, and a wide variety of additional medical costs.

#### Property and Liability Insurance

Property insurance indemnifies property owners against the loss or damage of real or personal property caused by various perils, such as fire, lightning, windstorm, or tornado. Liability insurance covers the insured's legal liability arising out of property damage or bodily injury to others; legal defense costs are also paid.

Property and liability insurance is also called property and casualty insurance. In practice, nonlife insurers typically use the term property and casualty insurance (rather than property and liability insurance) to describe the various coverages and operating results. Casualty insurance is a broad field of insurance that covers whatever is not covered by fire, marine, and life insurance; casualty lines include auto, liability, burglary and theft, workers compensation, and health insurance.

#### 4.4.2 Government Insurance

Numerous government insurance programs are in operation at the present time. Social insurance is the one discussed in this chapter, whereas other government insurance also exist but differ as per the national and state policy of a country.

#### Social Insurance

Social insurance programs are government insurance programs with certain characteristics that distinguish them from other government insurance plans. These programs are financed entirely or in large part by mandatory contributions from employers, employees, or both, and not primarily by the general revenues of government. The contributions are usually earmarked for special trust funds; the benefits, in turn, are paid from these funds. In addition, the right to receive benefits is ordinarily derived from or linked to the recipient's past contributions or coverage under the program; the benefits and contributions generally vary among the beneficiaries according to their prior earnings, but the benefits are heavily weighted in favor of low-income groups. Moreover, most social insurance programs are compulsory. Covered workers and employers are required by law to pay contributions and participate in the programs. Finally, eligibility requirements and benefit rights are usually prescribed exactly by statute, leaving little room for administrative discretion in the award of benefits. %

## 4.5 Readings from Insurance Regulation, 2049 (1993)

The following are the readings extracted from "Insurance Regulation, 2049".

#### 4.5.1 Definitions

Unless the subject or context otherwise requires, in this Regulation:

- "Act" means the Insurance Act, 2049
- Certificate" means an Insurer Registration Certificate provided to an Insurer for operating the Insurance Business by registering him as an Insurer pursuant to Rule 8
- "Premium" means the Insurance Premium to be collected by the Insurer from the insured i consideration of the Insurance Business
- "Advisory Committee" means the Insurance Tariff Advisory Committee constituted pursuant to section 41 of the Act

#### 4.5.2 Categories of Insurance Business

Subject to the provisions made in the Act and this Regulation, the Insurance Business to be operated by an Insurer shall be divided into the following categories:

- Life Insurance Business
- Non-Life Insurance Business
- Re-Insurance Business

Notwithstanding anything contained in sub-rule (1), Nepal Government may prescribe other categories of Insurance Business as required on the advise of the Board.

#### Life Insurance Business

- 1. The Insurer may operate the following Insurance Business under the Life Insurance Business:
  - (a) Whole Life Insurance
  - (b) Endowment Life Insurance
  - (c) Term Life Insurance
- 2. Notwithstanding anything contained in sub-rule (1), the Board may prescribe other categories of the Life Insurance Business as required.
- 3. The conditions and privileges of the Life Insurance Policy to be executed pursuant to this Rule shall be as specified by the Board.

#### Non-Life Insurance Business

- 1. The Insurer may operate the following Insurance Business under the Non-Life Insurance Business:
  - (a) Fire Insurance
  - (b) Motor Insurance
  - (c) Marine Insurance
  - (d) Engineering and Contractor's Risk Insurance
  - (e) Aviation Insurance
  - (f) Miscellaneous Insurance
- 2. Notwithstanding anything contained in sub-rule (1), the Board may prescribe other categories of Non-Life Insurance Business as required.
- 3. The conditions and privileges of the Non-Life Insurance Policy to be executed pursuant to this rule shall be as specified by the Board.

#### Re-Insurance Business

- 1. The Insurer may re-insure the risks which are in excess from the risks assumed by it.
- 2. The Categories of Re-insurance Business to be made pursuant to subrule (1) and other arrangement shall be as specified by the Board

#### 4.5.3 Provisions Relating to a Surveyor

#### Application to be submitted for surveyor's license

Any person or any corporate body having a qualification, as mentioned in regulation, and desirous to work as a Surveyor pursuant to sub-section (1) of Section # 30A of the Act, shall submit an application to the office of the Board in the format of Schedule -12.

#### Surveyor's License to be provided

- 1. After receiving an application for the Surveyor's license pursuant to rule-26, the Board shall make an inquiry whether the applicant is qualified or not pursuant to Rule 28, and if it deems appropriate to provide the Surveyor's license to him it shall register his name as a Surveyor in the registration-book pursuant to Schedule 13.
- 2. After making the registration of the name of the applicant on the registration-book pursuant to sub-rule (1), the Board shall provide a Surveyor's license to the applicant in the format of Schedule 14 by collecting from the applicant a fee of twelve thousand Rupees for the class A license, that of nine thousand Rupees for the class B license, that of seven thousand rupees for the class C license and that of five thousand Rupees for the class D license.

#### Qualifications of a Surveyor

- 1. An applicant desirous of making an application for the Surveyor's License pursuant to Rule 26 shall have possessed any one of the following qualifications:
  - (a) Having gained at least ten years of work experiences on the Insurance Business, holding an officer level post at the office of any Insurer
  - (b) Having possessed at least a Bachelor Degree in Engineering subject
  - (c) Having possessed at least a Bachelor Degree in Insurance subject from a Chartered Insurance Institute of international standard or from an organization recognized by such institute, or

- (d) Having passed the Chartered Accountancy Examination
- 2. An applicant having possessed the qualification as referred to in clause (a) or (b) or (c) or (d) of sub-rule (1) shall, prior to obtaining the Surveyor's License, have obtained a certificate indicating his participation in, and completion of, the surveyor training conducted by the Board

#### Classification of the Surveyor

The Surveyors who have been working as Surveyors after having obtained the Surveyor's license and completed the following period shall be classified as follows and provided with the Surveyor's License, after the commencement of this Regulation:

- A Surveyor who has regularly worked as a Surveyor for a period more than fifteen years, Class "A"
- A Surveyor who has regularly worked as a Surveyor for a period from ten to fifteen years, Class "B"
- A Surveyor who has regularly worked as a Surveyor for a period From five to ten years, Class "C"
- A Surveyor who has regularly worked as a Surveyor for a period of five years, Class "D"

#### Provisions relating to the renewal of Surveyor's License

- 1. The Surveyor shall submit an application to the office of the Board in the format of Schedule-15 along with the renewal fee of →twelve thousand Rupees for "A" class license, nine thousand Rupees for "B" class license, seven thousand Rupees for "C" class license and five thousand Rupees for "D" class license within the time-limit pursuant to subsection (1) of Section 31 of the Act for the renewal of the License. On receipt of such application, the Board shall renew the Surveyor's license
- 2. If a Surveyor has submitted an application to the office of the Board stating the reasons for inability to submit an application for the renewal of his license within the time-limit pursuant to sub-rule (1), and if the reasons are found to be appropriate, the Board may renew the license by receiving an additional fee of five hundred Rupees for first two months from the date of expiry of the renewal time-limit and after that fifty Rupees per day for up to four months

#### Limitation of Survey

- 1. The limitation relating to survey which a surveyor of each category pursuant to Rule 28A can make shall be as prescribed by the Board
- 2. The Code of Conduct of the Surveyor shall be as prescribed by the Board

#### In the case of cancellation of Surveyor's License

If the Surveyor's license is cancelled pursuant to Section 33 of the Act, no other Surveyor's license shall be provided to him to work as a Surveyor up to a period of five years from the date of such cancellation.

## 4.5.4 Provisions relating to payment against Insurance Claim

#### Process against the payment of Life Insurance Claim

- 1. The Insurer shall issue a discharge voucher in the name of the Insured who has already paid the last installment of the Life Insurance Premium requesting him to come to collect payment against the claim along with the Insurance Policy and other documents required for making payment against such Life Insurance claim within fifteen days from the date of payment of such installment
- 2. In case an Insured submits the Insurance Policy and other documents including the discharge voucher to the Insurer for the payment of claim against the Life Insurance claim pursuant to sub-rule (1), the Insurer shall conduct an inquiry as required and make a payment against the Life Insurance claim within seven days from the date of expiry of the period of the Life Insurance Policy
- 3. In case any person who has taken up an Insurance Policy dies before the expiry of the period of the Insurance Policy, the person designated by him, if any, and in case no person has been designated, the nearest heir from among the persons mentioned in sub-section (1) of Section 38 of the Act shall submit an application for the payment against the claim to the Insurer to receive the amount of the Life Insurance stating the details as follows:
  - (a) The details relating to the claim
  - (b) A Certificate of death of the insured
  - (c) In case the insured has died in an accident and if such risk is covered by the Life Insurance, the postmortem report of the government physician relating to the cause of death, and if there is no such report, a report of the police

- (d) A certificate of relationship with the insured
- (e) The documents regarding the certification of the age in case the age has not been certified
- (f) Other details specified by the Board
- 4. After the receipt of the application pursuant to sub-rule (3), the Insurer shall make an inquiry into the details including the documents submitted regarding to the claim of Life Insurance, and shall examine other matters also if necessary, and shall determine the liability within fifteen days from the date of receipt of such documents by it and shall issue the discharge voucher in the name of the applicant requesting him to come to collect the payment against the claim. The Insurer shall make the payment against the Insurance claim within fifteen days from the date of receipt of the discharge voucher from the applicant
- 5. If it is found, while making an inquiry into the details pursuant to subrule (4) that the Insurance claim need not to be paid by determining the liability, the Insurer shall provide a written information to the applicant clearly stating the reasons thereof.

#### Process of payment against Non-Life Insurance Claim

- 1. If any claim has to be made under the Insurance Policy by an Insured who has taken up a Non-Life Insurance Policy, the Insured shall submit an application to the Insurer stating all the details relating to it
- 2. On receipt of an application of the Insured for the payment against the Insurance claim of the Non-Life Insurance Pursuant to sub-rule (1), the Insurer shall immediately designate a Surveyor to make necessary inquiry, if necessary
- 3. The Surveyor deputed pursuant to sub-rule (2) shall make necessary inquiry and shall determine the liability of the Insurer within fifteen days and shall submit a report to the Insurer including the comprehensive details and also inform the Insured relating to it mentioning the amount to be received by the Insured subject to the terms and conditions and facilities of the Insurance Policy
- 4. The Insurer shall determine the liability and shall provide the payment against the claim of the Non-Life Insurance to the Insured generally within thirty-five days from the submission of the report by the surveyor pursuant to sub-rule (3).

#### 4.6 Review Problems

## Chapter 5

# Passenger Transport Operation

## 5.1 Public Transportation

Public transportation is a generic term used to describe the family of transit services available to urban and rural residents. Thus, it is not a single mode but a variety of traditional and innovative services, which should complement each other to provide system-wide mobility.

#### 5.1.1 Transit Modes

The modes included within the realm of public transportation are:

- Mass transit, characterized by fixed routes, published schedules, designated networks, and specified stops. Mass-transit vehicles include buses, light rail (trolleys) or rapid transit that either share space in mixed traffic or operate on grade-separated rights of way.
- Paratransit is characterized by flexible and personalized service intended to replace conventional fixed-route, fixed-schedule mass-transit lines. Paratransit is available to the public on demand, by subscription, or on a shared-ride basis. Examples include taxi, car rental, dial-a-ride, and specialized services for elderly, medical, and other designated users.
- Ridesharing (as the name implies) is characterized by two or more persons traveling together by prearrangement, such as carpool, vanpool, or shared-ride taxi.

#### 5.1.2 Transit Capacity and Level of Service

A basic attribute of any transit mode is its carrying capacity, defined as the number of vehicles or persons that pass a given point in a specified time

(usually an hour). The numerical value of carrying capacity (usually referred simply as capacity), is dependent on two variables: (1) the number of vehicles that pass a point at a given time and (2) the number of passengers within each vehicle. For example, if for a given lane along a section of highway there are 60 buses that pass by in an hour (or one per minute), and each bus carries 50 seated passengers, then the carrying capacity of this highway lane is 60 buses/ln/hr or  $50 \times 60 = 3000$  passengers/ln/hr.

Carrying capacity is influenced by (1) the "spacing" in seconds between each vehicle (called the headway) and (2) the "comfort factor" experienced by passengers (called the level of service). Thus, carrying capacity can be increased in two ways: (1) reduce the headway or (2) increase the number of passengers per vehicle. In the bus capacity example, the headway was 60 seconds and the level of service was that all passengers had a seat. Time spacing between buses could possibly be reduced, but there are limits to lowering headway values dictated by safe distance requirements between vehicles and/or the time spent at transit stops and terminals (called dwell time). Similarly, passenger loading could be increased by allowing standees, but this would decrease the comfort level for passengers. Were the bus equipped with computer tables and a refreshment area (thus offering a higher level of service), fewer passengers could be accommodated resulting in a lower carrying capacity but a higher level of service.

Accordingly, when reporting transit capacity, it is important to specify the units as either vehicles or passengers/hour and the corresponding level of service in terms of passengers/vehicle. Public transit is often compared with the automobile when issues of carrying capacity are involved, as it is commonly believed that transit capacity is superior to auto capacity. As will be discussed in greater detail in Chapters 9 and 10, the capacity of a single lane of passenger vehicles is approximately 2,000 vehicles/hour which represents a headway of 1.8 seconds. Since most cars have at least five seats, the person capacity of a highway lane could be as great as  $5 \times 2000 = 10000$  per/hour. Capacities of this magnitude never have been achieved, since most cars carry only one person with an average car occupancy of about 1.5. Why is this so? Have you ever driven in a car carrying five people? Not a pleasant experience, and a reason why car pooling is not very popular. Given the opportunity, most people choose to drive alone or with just one other person.

Travelers usually consider many more factors than simply the in-vehicle level of service, and they don't really consider how they can contribute to increasing "carrying capacity." In fact, if drivers were to optimize the carrying capacity of a highway, they would all drive at 35 miles per hour! Other major considerations in selecting the travel mode include: reliability, punctuality, cost, travel time, and safety. Transit systems that receive "high

marks" for the out-of-vehicle level-of-service factors are typically the ones that use exclusive lanes or tracks with no interference from other vehicles or pedestrians and have adequate capacity at station stops and terminals. Thus, rapid transit services (whether bus or fixed guideway), are the superior mode but are more costly to build and maintain and require high volumes of demand to be feasible.

### 5.1.3 The Role and Future of Public Transportation

Public transportation is an important element of the total transportation services provided within large and small metropolitan areas. A major advantage of public transportation is that it can provide high-capacity, energy-efficient movement in densely traveled corridors. It also serves medium- and low-density areas by offering an option for auto owners who do not wish to drive and an essential service to those without access to automobiles, such as school children, senior citizens, single-auto families, and others who may be economically or physically disadvantaged.

For most of this century, public transportation was provided by the private sector. However, increases in auto ownership, shifts in living patterns to low-density suburbs, and the relocation of industry and commerce away from the central city, along with changes in lifestyle (which have been occurring since the end of World War II) have resulted in a steady decline in transit ridership. Since the early 1960s, most transit services have been provided by the public sector. Income from fares no longer represent the principal source of revenue, and over a 25- to 30-year period, the proportion of funds for transit provided by federal, state, and local governments has increased steadily. While it generally is believed that highways and motor transport will play a dominant role in providing personal transportation in the beginning decades of the twenty-first century, there are many unforeseen changes that could alter the balance between public and private transportation. Some could contribute to a decline in transit ridership while others might cause transit to become stronger, and for the remainder, there would be little or no effect. The potential changes that could influence transit usage are categorized here from the book Urban Mass Transportation Planning.

#### **Factors Bad for Transit**

- Growth of suburbs
- Industry and employment moving from the central city
- Increased suburb-to-suburb commuting
- Growth in private vehicle ownership

- Increased diversity in vehicle types such as SUVs, pickup trucks, and RVs
- High labor costs

#### Factors Good for Transit

- Emphasis by the government on air quality
- Higher prices of gasoline
- Depletion of energy resources
- Trends toward higher-density living
- Legislation to encourage "livable cities" and "smart growth"
- Increased number of people who cannot or choose not to drive


# 5.2 Number of Passengers Versus Number of Served Vehicles

Traffic engineers try by various techniques and measures to enable as many vehicles as possible to pass, during a specific period of time, through a traffic intersection or through a road section. In other words, traffic experts try to maximize the number of vehicles that are served during a certain period of time. On the other hand, when it comes to public transit, we are trying to maximize the number of transported passengers. The number of passengers that can be served during the observed time interval represents transit line capacity. Similarly, the number of vehicles that can be served during the observed time interval represents the vehicle line capacity.

#### 5.2.1 A Hypothetical Case Study

Let us assume that the freeway lane can serve 2200 vehicles per hour (the freeway lane capacity equals 2200 vehicles per hour). The upper part of the figure shows the situation when only private cars used freeway lane. The lower part of the figure refers to the situation when some buses also participate in freeway lane traffic. We assume that average number of passengers in bus and private car (average occupancies) are, respectively, equal to 50 and 1.4. We also assume that instead on any two private cars we can allow one bus to participate in freeway lane traffic.

#### 5.2. NUMBER OF PASSENGERS VERSUS NUMBER OF SERVED VEHICLES57

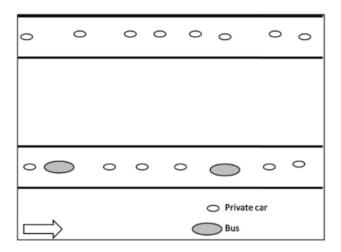


We denote by C, B, and P, respectively, the total number of cars, total number of buses, and total number of transported passengers. Ifwe allow, for example, 50 buses to enter the freeway lane, we need to reduce the total number of private cars for  $50 \times 2 = 100$  private cars. In this case, the total number of transported passengers P by private cars and buses equals:

$$P = C \times 1.4 + B \times 50 = 2100 \times 1.4 + 50 \times 50 = 5440$$
 Passengers

The table and the graph below show increase in the total number of transported passengers with the increase of the number of buses engaged.


Number of Cars per Hour (C)	Number of Buses per Hour (B)	Number of Passengers per Hour (P)
2200	0	3080
2100	50	5440
2000	100	7800
1900	150	10,160
1800	200	12,520

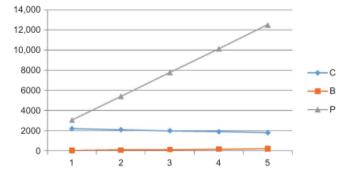


The graph above illustrates the effects that public transit can achieve. With a very small percentage share of public transport vehicles in the total number of vehicles, it is possible to increase dramatically the total number of passengers carried. To achieve such effects in reality, it is necessary constantly to increase the public transit attractiveness.

## 5.3 Passenger Flows in Public Transportation

Passenger flows vary considerably in public transportation. During the working day, in most cities in the world, the daily numbers of passengers on most transit lines are relatively uniform. This is due to the fact that many passengers, each working day, use the same transportation mode and the same route when going to work. During a weekend the number of passengers in public transit is significantly smaller. The figure below shows daily variations in passenger volume.

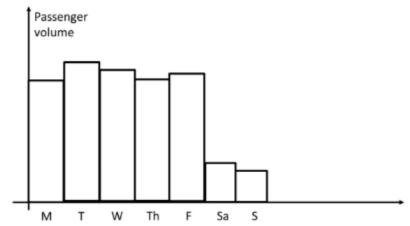


The fig below shows hourly variations in passenger volume. The variations shown in figure are typical for many cities in the world. There are morning and evening peaks when people go, and when people come back from work. The differences in hourly passenger volumes could be very high by hours of a day.

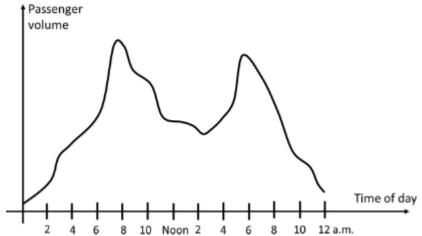

Hourly variations in passenger volume have, as a consequence, different number of vehicle departures from the terminals during certain time intervals as shown in the figure below. In this way, hourly variations in passenger

volume require the engagement of different number of vehicles during certain time periods. The number of engaged vehicles is much higher during the rush-hours. Outside the peak periods the transit operator has a surplus of vehicles and drivers. The transit operator, therefore, meets with a range of organizational problems that have to be solved ("empty" vehicle trips to garage and from garage, drivers working hours divided in two shifts, vehicle maintenance planning, etc.).

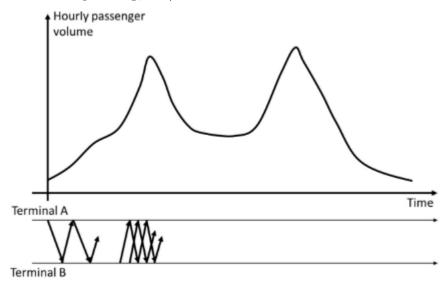


## 5.4 Passenger Flows Along a Transit Line

Headway in public transportation operations represents the time interval between vehicles past a specific point as shown in the fig below. Headways are expressed in minutes. It is essential to study passenger flow along the transit line, in order to determine the appropriate transit line headway.

Let us assume that we have data on the number of boarding passengers and number of alighting passengers on individual line stops and terminals (end stations on a transit line) as shown in the table below. The transit line has 5 stations. The terminals are denoted respectively by A and B.

The last column of the table shows the numbers of passengers in the vehicle, after departing from bus stops. Thus, for example, after leaving the station 2, there are 21 passengers in the vehicle that travels along line section between stop 3 and stop 4. The number of boarding passengers, number of alighting passengers and the number of passengers in the vehicle for any line section are shown in the figure below.

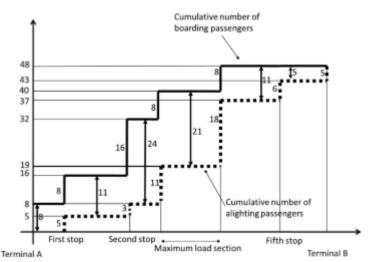


Bus Stop	Number of boarding Passengers	Number of Alighting Passengers	Number of Passengers in the Vehicle
Terminal A	8	0	8
1	8	5	11
2	16	3	24
3	8	11	21
4	8	18	11
5	0	6	5
Terminal B	0	5	0

The numbers of passengers on certain line sections respectively equal 8, 11, 24, 21, 11, and 5. The maximum passenger volume equals max 8, 11, 24, 21, 11, 5 = 24 and corresponds to the section between stop 2 and stop 3. We call section between stop 2 and stop 3 the maximum load section (MLS).


The data shown in the table and figure above are related to one vehicle trip. In real-life applications, 1 h is the basic time unit that is used when describing cumulative number of alighting and boarding passengers, as well as the maximum passenger volume on MLS. In other words, the maximum passenger volume is expressed in passengers per hour. The passenger volume profile is calculated for both directions of the transit line.

In the figure shown below, the line length is denoted by L. This length represents the one-way distance between the line terminals along the line alignment. The line length is measured in miles or kilometers. We denote by qi passenger volume on the  $i^th$  section. The length of the  $i^th$  transit section is denoted by li. The MLS in one direction is usually different from the MLS in another direction. The maximum passenger volumes in both directions should be taken into account when determining the number of vehicles to be engaged on the transit line.

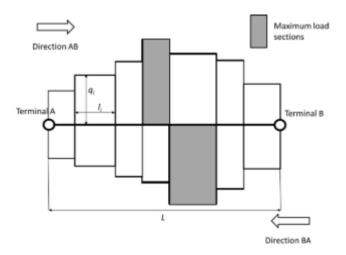

## 5.5 Service Frequency and Headways

One of the most important problems encountered by public transit operators is how to match transportation supply and passenger demand on individual transit line. The matching problem is far more complex over the entire route network than on individual routes. Service frequencies and vehicle departure times on transit lines in the network reflect the manner in which transportation supply and passenger demand are matched. Service frequencies and vehicle departure times depend on passenger volume profile and on the number and type of vehicles in the fleet. The number of passengers that decide in the end to use public transit on a particular transit line depends, to the highest degree, on service frequency and vehicle departure times. For example, if service frequency is low or if vehicle departure times during the day are not convenient, a number of potential passengers will instead choose other modes of transportation.

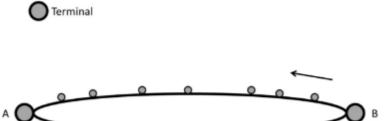

Bus stop

Let us note the bus line shown in the figure above. Vehicles move from

Terminal A to Terminal B. On the way to the Terminal B, vehicles stop at pre-defined bus-stops, where passengers enter and exit the vehicle. On arrival at the Terminal B, the driver rests for a while, and then the vehicle travels to Terminal A. On the way to Terminal A, car stops at bus-stops where passengers enter and exit the vehicle.

We denote by T turnaround time. This time is the time that elapses from the moment when vehicle leaves Terminal A to the moment when vehicle returns to Terminal A. Let us assume that we have on our disposal N vehicles that we can assign to the bus line. The service frequency represents the number of vehicles per time unit past a specific point in the same direction. The frequency equals:

$$f = \frac{N}{T} \tag{5.1}$$

The frequency is expressed in the number of vehicle per hour. Headway h in public transportation operations represents the time interval between vehicles past a specific point. Headways are expressed in minutes. Since the frequency represents the number of vehicles per time unit past a specific point in the same direction, we conclude that the frequency is the inverse of the headway, ie:

$$h = \frac{1}{f} \tag{5.2}$$

When calculating and rounding headways, it is desirable to obtain a so called clock headway. Clock headways have a feature that enables the generation of timetable that is repeated every hour, starting on the hour. Thus, for example, in the case when the headway is equal to 15 min, it is possible to have the vehicle departures from the terminal in 8:00, 8:15, 8:30, 8:45, 9:00, 9:15, 9:30, 9:45, 10:00, etc.

#### 5.5.1 The Maximum Service Frequency

The maximum service frequency is defined by the maximum number of transit vehicles passing through a given point of a line/route i in one direction during a given period of time (usually 1 h) under prevailing operating conditions. This can be estimated as follows:

$$f_{max/i}(\tau) = \frac{\tau}{h_{min/i}} \tag{5.3}$$

Where,

 $\tau$  is the given period of time

 $h_{min/i}$  is the minimum headway, ie, the time interval between the successive transit vehicles passing through a given point of a line/route i in the same direction (min).

The minimum headway  $h_{min/i}$  in Eq. 5.3 can be determined according to different criteria, but in many cases the prevailing factors are characteristics of the system such as technology and way of operations along the line and at the stations. These factors influence the minimum headway for a given line line/ route and for the stops/stations along it. Most frequently the stop/station headway is as much greater than that of the line(s)/route(s). In addition, the headway  $h_{s/i}$  at the stop/station on a given line/route i, should be greater than the vehicle stop time  $t_{s/i}$  at that stop/station. Consequently, the "ultimate" capacity of this stop/station will be:

$$C_{ss/i}(\tau) = \frac{\tau}{max[h_{s/i}, t_{s/i}]}$$
 (5.4)

In addition, the following must be satisfied for all stops/stations on the line/route i:

$$f_{\max/i}(\tau) \le C_{ss/i} \tag{5.5}$$

In other words, the maximum number of transit vehicles passing through a given stops/stations cannot exceed the "ultimate" capacity of any of these stops/stations.

#### 5.5.2 Passenger Waiting Time

Passengers' walk to a stop and passenger waiting time are the basic attributes of the public transit level of service. Walk to stop in the range of 400–800 m is considered acceptable for public transit users.

In order to estimate the average passenger waiting time, let us first consider the situation when the bus arrives at the bus stop regularly, according to the published timetable. We also assume that all passengers at the bus stop can enter the vehicle, and that the passengers appear at the bus stop in random moments of time. It has been shown that, in this case, the average waiting time per passenger at the station w is equal to the one half of the vehicle headway h, ie:

$$w = \frac{h}{2} \tag{5.6}$$

The average waiting time per passenger could be longer in the case of irregular bus arrivals. In the case of irregular bus arrivals, vehicle headway is not any more deterministic quantity. In this case, the vehicle headway is a random variable. If the planned headway equals, 10 min, in the case of irregular arrivals headway values could be, for example, 8, 9, 12, 15,... minutes. It has been shown, that in the case of irregular vehicle arrivals at the stop, the average passenger waiting time equals:

$$E(W) = \frac{E(H)}{2} + \frac{var(H)}{2 \times E(H)}$$

$$(5.7)$$

Where, E(H) is the expected value of the random variable H; and var(H) is the variance of the random variable H (variance represents the square of standard deviation).

#### 5.5.3 Headway Determination by "Square Root Formula"

Transit operator cost and passenger cost depend on chosen headway. Passenger cost, in the case when vehicles arrive regularly, has linear increase with headway. The greater the headway, the greater the passenger waiting time and passenger cost. On the other hand, greater headway means for transit operator smaller number of departures and lower costs.

Z is the total cost per hour;


c is the transit operator cost per bus hour;

 $\nu$  is the value of passenger waiting time per hour;

r is the total number of passengers on line per hour (ridership per hour);

N is the number of vehicles assigned to the bus line; and

h is the headway.

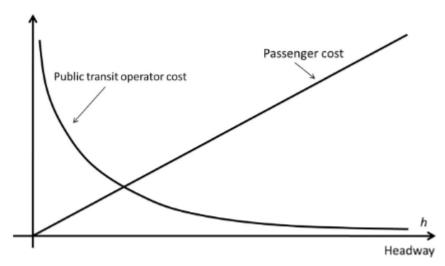

The transit operator cost per hour is equal to  $N \times c$ . We assume regular vehicle arrivals. In this case, the average waiting time per passenger at the station w is equal to the one half of the vehicle headway h, ie:

$$w = \frac{h}{2} \tag{5.8}$$

The waiting cost of all passengers is equal to the  $\nu \times r \times \frac{h}{2}$ . The total cost is:

$$Z = N \times c + \nu \times r \times \frac{h}{2} \tag{5.9}$$

Since,  $N = \frac{T}{h}$ , we can write,

$$Z = \frac{T}{h} \times c + \nu \times r \times \frac{h}{2} \tag{5.10}$$

The optimal headway is found by setting the derivative of Z with respect to h equal to zero:

$$\frac{dZ}{dh} = -c \times \frac{T}{h^2} + \frac{\nu \times r}{2} = 0 \tag{5.11}$$

Therefore the Optimum Headway,


$$h = \sqrt{\frac{2 \times c \times T}{\nu \times r}} \tag{5.12}$$

Eq. 5.12 represents the "square root formula" for optimizing headway and service frequency. Minimal headway values in real-life are usually between 2 and 3 min. Maximal headways values are between 15 and 30 min. Outside of peak periods, on some transit lines, maximum headway values reach 60 min.

The service frequency f is the inverse of the headway, ie:

$$f = \frac{1}{h} = \sqrt{\frac{\nu \times r}{2 \times c \times T}} \tag{5.13}$$

Service frequency dependence of the total number of passengers on line per hour is shown in the figure below.

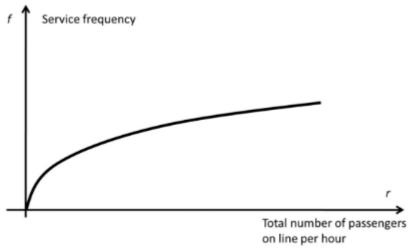

#### Numerical Example:

Let us assume the following line parameters: c=120\$ per hour,  $\nu=10\$$  per passenger hour, r=1200 passengers per hour, and T=1.5 hr. Calculate the optimal headway.

Solution:

$$h = \sqrt{\frac{2 \times c \times T}{\nu \times r}} = \sqrt{\frac{2 \times 120 \times 1.5}{10 \times 1200}} = 0.173 hr$$

 $\therefore h \approx 10min$ 

## 5.5.4 Headway Determination by Maximum Load Method

When determining headways, transit operators try to provide enough space (especially during peak hours) to meet passenger demand. Majority of transit operators also define maximum headways on transit lines. For example, operator could define that maximum headway on a specific route, is equal to 30 min. Maximum headways guarantee a minimum service frequency offered to the passengers. The prescribed maximum headway is usually called policy headway and denoted by  $h_p$ .

The Maximum load method (that can have few variations) is based on counting passengers on the transit stop that is at the beginning of the MLS. Depending on the time of a day, the location of the MLS could change. For example, the transit stop, that is at the beginning of the MLS, could be Stop #5 between 10:00 am and 11:00 am, while Stop #7 could be at the beginning of the MLS between 5:00 pm and 6:00 pm Frequently, passenger counting is performed at the bus stop that has the highest daily passenger volume. The location of this transit stop is usually well known to the transit operator. The counting interval (whole day, between 7:00 am and 10:00 am, between 4:00 pm and 7:00 pm, etc.) is different for different transit operators and different cities.

We denote by  $P_{max}$  the average value of the maximum daily passenger volume. For example, transit operator monitored during seven days period the daily number of passengers that departed from the station # 6. The following 7 values were recorded: 1262, 1348, 1439, 1285, 1290, 1391, and 1287. The  $P_{max}$ , in this case is equal to:

$$P_{max} = \frac{1262 + 1348 + 1439 + 1285 + 1290 + 1391 + 1287}{7} = 1329$$

The service frequency, f, that should be offered in order to satisfy maximum passenger volume and desired vehicle occupancy is equal to:

$$f = \frac{P_{max}}{\alpha \times C_{car}} \tag{5.14}$$

Where,  $C_{car}$  is maximum number of passengers per car; and  $0 \le \alpha \le 1$  is load factor.

The Load factor  $\alpha$  is related to the concept of desired vehicle occupancy.

The product  $\alpha \times C_{car}$  defines the desired vehicle occupancy during the observed time period.

The corresponding headway is equal to:


$$h = \frac{1}{f} = \frac{\alpha \times C_{car}}{P_{max}} \tag{5.15}$$

67

#### 5.6 Time Table

The transit line timetable is generated at one point (usually terminal). In the next step, by using information about average travel times between transit stops, timetable is generated for all transit stops. The transit operator's timetable contains information about vehicle departure times at all transit stops.


ansit operator's timetable contains information about vehicle departure times at all transit stops. The basic input data for the timetable construction represent service frequency values in certain intervals of time during the day. Timetable can easily be generated in the following way. Let the abscissa represents time. Based on the known values of service frequency in certain intervals of time, we draw a cumulative frequency.

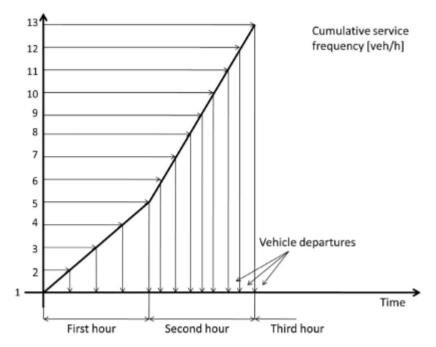

The cumulative frequency shown in the figure above is related to the case when service frequency within first hour is equal to 4, and service frequency within second hour is equal to 8. Let us first vehicle departure happen at the

beginning of the first hour. We can go horizontally for every vehicle departure, until intersecting the cumulative curve. From the point of intersection we go vertically. The intersection of this vertical line and abscissa represents vehicle departure time. In this way, we generate timetable at specific point. In this way, we generate constant headways during specific time intervals.

Because of demand variability, constant headways frequently do not generate equal number of passengers at every vehicle departure. In order to achieve even-load at every vehicle departure, we draw cumulative loads on the transit stop that is at the beginning of the MLS.

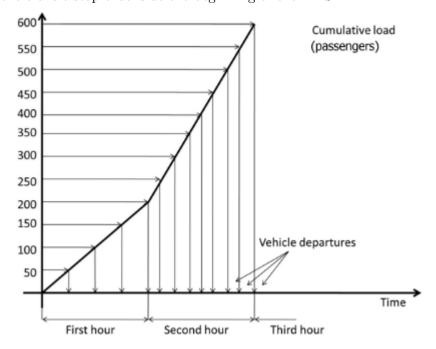

Unequal number of passengers at specific vehicle departures can cause overcrowding in some vehicles, long boarding time at some transit stops, "bunching" of vehicles, and a decrease in the level of service offered to the passengers. On the other hand, equal load is related to unequal headways which could be inconvenient for passengers.

Trips between nodes in public transit networks may be made with or with no making transfers. Transfers generally cause inconvenience to passengers. Given that inadequately coordinated transfers can increase waiting times considerably, it is particularly important (when constructing timetables) to synchronize schedules cautiously in cases of larger headways. Unsuccessfully coordinated transfers can also reduce the number of passengers using public transit as a result of switching to competitor modes. When designing synchronized schedules, it is essential to try to minimize the total waiting times

of all passengers at transfer nodes in a transit network.

#### 5.7 Transit Line Capacity

The transit line is the basic element of public transit system. The transit route lengths in one direction are usually between 40 and 90 min, while stop spacing in urban areas are in the range from 120 to 400 m. It is desirable that transit route intersects few other transit routes. In this way, transfer points are generated that enable passengers to create various itineraries when making a trip. The waiting time at transfer points, which is less than 8 min, is considered as an acceptable waiting time. The transit line operating hours by weekdays are usually between 5:00 am and midnight. The spacing between transit lines, in the majority of cities, is in the range of 700–1000 m.

We denote by  $C_{car}$  the maximum number of passengers per car. Bus capacity represents the sum of number of seated passengers and legal standees. Public transit agencies and operators usually assume six passengers per square meter, as legal standees. In some countries, this figure could be higher.

The line/route (offered) "ultimate" capacity  $C_{car}(\tau)$  is expressed by the maximum number of spaces, which can be transported in one direction during a given period of time  $\tau$  (usually 1 hr) under prevailing operating conditions. In other words, the "ultimate" capacity of a public transportation lines represents the product of the maximum frequency of the service  $f_{max}(\tau)$  and the maximum number of passengers in the transit vehicle.

$$C_{car}(\tau) = f_{max/i}(\tau) \times N_{car} \times C_{car}$$

The practical capacity  $C_{line}$  of a public transit line represents the product of the offered service frequency f and the maximum number of passengers in the transit vehicle.

$$C_{line} = f \times N_{car} \times C_{car} \tag{5.16}$$

Where,  $N_{car}$  is the number of cars/vehicles, and  $C_{car}$  s the maximum number of passengers per car.

The number of vehicles  $N_{car}$  per service frequency f can be variable. In the case of bus operations,  $N_{car}=1$ , and the capacity of a public transportation line  $C_{line}$  equals:

$$C_{line} = f \times C_{car}(spaces/hr) \tag{5.17}$$

The turnaround time equals:

$$T = \frac{2 \times L}{u} \tag{5.18}$$

Where, L is the distance between Terminals A and B (for simplicity we assume that distance from A to B is equal to the distance from B to A); and u is the average vehicle speed.

Then,

$$C_{line} = \frac{N}{T} \times C_{car} \tag{5.19}$$

$$C_{line} = \frac{N}{\frac{2 \times L}{u}} \times C_{car} \tag{5.20}$$

$$\therefore C_{line} = \frac{N \times u \times C_{car}}{2 \times L} \tag{5.21}$$

As we can see, the line capacity  $C_{line}$  depends on the number of engaged vehicles N, the average speed u, vehicle capacity  $C_{car}$ , and length of the line L. By changing some of these quantities, it is possible to change line capacity.

#### Numerical Example:

The public transit line length equals  $10~\rm km$  in one direction. The average bus speed on a city heavy traffic equals  $20~\rm km/h$ . The total of  $12~\rm buses$  is assigned to the line. The capacity of every vehicle equals 50. Calculate the line capacity, frequency, and headway.

Solution:

The Line Capacity,

$$C_{line} = \frac{N \times u \times C_{car}}{2 \times L}$$

$$C_{line} = \frac{12 \times 20 \times 50}{2 \times 10}$$

$$\therefore C_{line} = 600(spaces/hr)$$

Then,

$$T = \frac{2 \times L}{u} = \frac{2 \times 10}{20} = 1hr$$

We have,

$$f = \frac{N}{T} = \frac{12}{1}$$


$$\therefore f = 12 vehicles/hr$$

Also, 
$$h = \frac{1}{f} = \frac{1}{12} = \frac{1}{\frac{12}{60}}$$

 $\therefore h = 5minutes$ 

#### 5.7.1 Transit Line Capacity Utilization

The transit line capacity represents the number of spaces offered to passengers that pass a specific point in one direction during 1 h. Transit operator offers specific number of spaces to the passengers during specific period of time. It could happen that the offered capacity is insufficient in certain situations. On the other hand, is it possible that the offered capacity is underutilized. Therefore, there is a need to measure the utilization of the offered capacity. The figure below shows transit line capacity and passenger volume profile on the transit line between terminal A and terminal B.

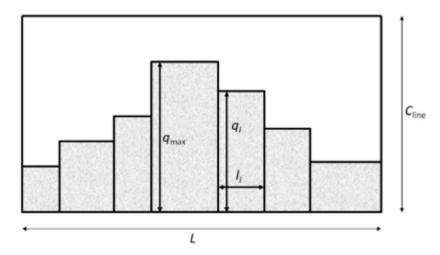

The transportation work  $w_i$ , made by the transit operator when carrying  $q_i$  passengers along the section that has length equal to  $l_i$ , equals:

$$w_i = q_i \times l_i \tag{5.22}$$

Transit operator offers to the passengers the capacity that is equal to  $C_{line}$ . The transportation work that is possible to make is equal to the area of a rectangle with sides L and  $C_{line}$ . The realized transportation work is equal to the sum of the areas of shaded rectangles. The average transit line capacity utilization  $\alpha$  is given by:

$$\alpha = \frac{\sum_{i=1}^{n} q_i \times l_i}{C_{line} \times L} \tag{5.23}$$

Where n is the number of line sections.

Numerical Example: The public transit line length equals 5 km in one direction. The average bus speed on a city heavy traffic equals 20 km/h. The

C<sub>line</sub> = 1,000  $C_{line} = 1,000$   $C_{line} = 1,000$   $C_{line} = 1,000$   $C_{line} = 1,000$ 

total of 10 buses is assigned to the line. The capacity of every vehicle equals 50. The passenger volume profile of the line is given in the figure below.

Calculate the turnaround time, service frequency, headway, line capacity, and the average transit line capacity utilization  $\alpha$ .

Solution:

Turnaround time,

$$T = \frac{2 \times L}{u} = \frac{2 \times 5}{20} = 0.5 hr$$

T = 30 minutes

Then, service frequency:

$$\therefore f = \frac{N}{T} = \frac{10}{0.5} = 20 vehicles/hr$$

Also, headway:

$$h : h = \frac{1}{f} = \frac{1}{20} = \frac{1}{\frac{20}{60}} = 3minutes$$

Now, Line Capacity,

$$\therefore C_{line} = \frac{N \times u \times C_{car}}{2 \times L} = \frac{10 \times 20 \times 50}{2 \times 5} = 1000 spaces/hr$$

Also, the average transit line capacity utilization:

$$\alpha = \frac{\sum_{i=1}^{n} q_{i} \times l_{i}}{C_{line} \times L}$$

$$\alpha = \frac{260 \times 0.4 + 290 \times 1 + 340 \times 0.4 + 450 \times 1.2 + 420 \times 0.5 + 310 \times 0.5 + 260 \times 1}{1000 \times 5}$$

$$\therefore \alpha = 0.339$$

#### 5.8 Optimal Paths in Transportation Networks

When traveling through the network we are faced with the problem of finding the paths that are "optimal." In other words, paths that we are looking for must possess optimal properties. The problems of finding optimal paths in transportation networks are known as shortest path problems. Depending of the context of the problem considered, the "shortest path" could be the shortest path, the fastest path, the most reliable path, the path with the greatest capacity, etc. network links are characterized by length. "Link length" could represent distance, travel time, travel cost, link reliability, etc. Link lengths are mostly treated as deterministic quantities.

Link lengths are treated in some problems as random variables. Most frequently, these link lengths represent travel times. There are random variations in travel times caused by weather conditions, randomness in traffic flows, traffic accidents, and other factors. In these cases, the shortest paths in probabilistic network should be determined. In some cases, when searching for the optimal path, we simultaneously try to optimize two or more objectives. For example, when searching for the best path, we could try simultaneously to take care of travel time as well as travel costs. In such cases, we are dealing with multicriteria shortest path problems.

#### 5.8.1 Dijkstra's Shortest Path Algorithm

Dijkstra's algorithm is an algorithm we can use to find shortest distances or minimum costs depending on what is represented in a graph. You're basically working backwards from the end to the beginning, finding the shortest leg each time. The steps to this algorithm are as follows:


- 1. Start at the ending vertex by marking it with a distance of 0, because it's 0 units from the end. Call this vertex your current vertex, and put a circle around it indicating as such.
- 2. Identify all of the vertices that are connected to the current vertex with an edge. Calculate their distance to the end by adding the weight of

the edge to the mark on the current vertex. Mark each of the vertices with their corresponding distance, but only change a vertex's mark if it's less than a previous mark. Each time you mark the starting vertex with a mark, keep track of the path that resulted in that mark.

- 3. Label the current vertex as visited by putting an X over it. Once a vertex is visited, we won't look at it again.
- 4. Of the vertices you just marked, find the one with the smallest mark, and make it your current vertex. Now, you can start again from step 2.
- 5. Once you've labeled the beginning vertex as visited stop. The distance of the shortest path is the mark of the starting vertex, and the shortest path is the path that resulted in that mark.

#### Numerical Example:

From the figure below, find the shortest path from node "0" to all other nodes, and also find the shortest route for node "4".

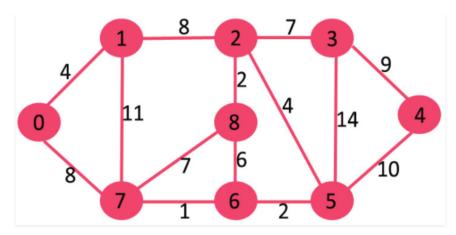

#### Solution:

Assign cost value of  $\infty$  for all nodes which are not directly connected to node "0", and compute the distance for the nodes "1" and "7".

from/To	1	2	3	4	5	6	7	8
0	4*	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	8	$\infty$

Since 4 < 8, we will assign node "7" as our next vertex, then:

from/To	1	2	3	4	5	6	7	8
0				$\infty$				$\infty$
1	-	12	$\infty$	$\infty$	$\infty$	$\infty$	8* (∵ 8 < 15)	$\infty$

In the above step, we assigned the value 8 for node "7", because 8 < 15 (computed value from node "1"). Also, in this step, since 8 < 12, we will assign node "7" as our next vertex, then:

from/To	1	2	3	4	5	6	7	8
0	4*	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	8	$\infty$
1	_	12	$\infty$	$\infty$	$\infty$	$\infty$	8*	$\infty$
7	-	12	$\infty$	$\infty$	$\infty$	9*	-	15

In the above step, node "7" is not directly connected to node "2" and the node is not solved yet, so the value remains as it is. Since, 9 < 12 < 15, we assign node "6" as our next vertex, then:

from/To	1	2	3	4	5	6	7	8
0	4*	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	8	$\infty$
1	_	12	$\infty$	$\infty$	$\infty$	$\infty$	8*	$\infty$
7	-	12	$\infty$	$\infty$	$\infty$	9*	_	15
6	-	12	$\infty$	$\infty$	11*	_	_	15

In the above step, the computed value for node "8" from node "6" was 15, since the value didn't change we set the value as it is, that is, 15. Also, 11 < 12 < 15, so we assign node "5" as our next vertex, then:

from/To	1	2	3	4	5	6	7	8
0	4*	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	8	$\infty$
1	-	12	$\infty$	$\infty$	$\infty$	$\infty$	8*	$\infty$
7	_	12	$\infty$	$\infty$	$\infty$	9*	-	15
6	-	12	$\infty$	$\infty$	11*	-	-	15
5	_	$12* (\because 12 < 15)$	25	21	-	-	-	15

In the above step, the computed value for node "2" from node "5" was 15, and since 12 < 15, we retain the earlier value, that is, 12. Also, 12 < 15 < 21 < 25, we assign node "2" as our next vertex, then:

from/To	1	2	3	4	5	6	7	8
0	4*	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	8	$\infty$
1	-	12	$\infty$	$\infty$	$\infty$	$\infty$	8*	$\infty$
7	-	12	$\infty$	$\infty$	$\infty$	9*	-	15
6	-	12	$\infty$	$\infty$	11*	-	-	15
5	-	12*	25	21	-	-	-	15
2	-	-	19 (:: $19 < 25$ )	21	-	-	-	14* (:: 14 < 15)

in the above step, since 14 < 19 < 21, we assign node "8" as our next vertex, then:

from/To	1	2	3	4	5	6	7	8
0	4*	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	8	$\infty$
1	-	12	$\infty$	$\infty$	$\infty$	$\infty$	8*	$\infty$
7	-	12	$\infty$	$\infty$	$\infty$	9*	-	15
6	-	12	$\infty$	$\infty$	11*	-	-	15
5	-	12*	25	21	_	-	-	15
2	-	-	19	21	_	_	_	14*
8	-	-	19*	21	_	_	_	-

In the above step, node "8" had no direct connection with either of the unsolved nodes, "3" and "4", so we resolve to assign node "3" as our next vertex as 19 < 21, then:

from/To	1	2	3	4	5	6	7	8
0	4*	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	8	$\infty$
1	-	12	$\infty$	$\infty$	$\infty$	$\infty$	8*	$\infty$
7	-	12	$\infty$	$\infty$	$\infty$	9*	_	15
6	_	12	$\infty$	$\infty$	11*	_	_	15
5	_	12*	25	21	_	_	_	15
2	_	_	19	21	_	_	_	14*
8	_	_	19*	21	_	_	_	_
3	_	_	_	$21* (\because 21 < 28)$	_	_	_	_

Hence, the shortest distance from node "0" to all other nodes are given below:


$\mathbf{node}$	shortest distance from node "0"/source
1	4
2	12
3	19
4	21
5	11
6	9
7	8
8	14

Hence the shortest route to reach node "4" from node "0" is 0-7-6-5-4.

#### 5.9 Review Problems

- 1. Define the term public transportation. Briefly describe the different types of transit modes in public transportation.
- 2. List out the factors which are good and bad for transit.
- 3. Derive the expression for headway determination by "Square Root Formula".

- 4. Derive the expression for Transit Line Capacity, and use the expression to determine the average transit line utilization( $\alpha$ ).
- 5. Let us assume that transit line parameters are respectively equal: c = 120\$ per hour,  $\nu = 12$ \$ per passenger hour, r = 1400 passengers per hour, and T = 120 min = 2hr. Calculate the optimal headway by using the "square root formula."
- 6. The transit operator monitored during 10 days period the daily number of passengers that departed from the station #5. The following 10 values were recorded: 1160, 1245, 1440, 1280, 1180, 1380, 1220, 1358, 1178 and 1382. The maximum number of passengers per car is equal to 100. The transit operator would like to achieve the load factor that is equal to 0.75. Calculate the average value of the maximum daily passenger volumes. Determine the service frequency f that should be offered in order to satisfy maximum passenger volume and the desired vehicle occupancy.
- 7. The public transit line length equals 12 km in one direction. The average bus speed on a city heavy traffic equals 25 km/h. The total of 14 buses is assigned to the line. The capacity of every vehicle equals 60. Calculate the line capacity, frequency, and headway.
- 8. Calculate the shortest path from node "A" to all other nodes, and also determine the shortest route from node "A" to node "G".

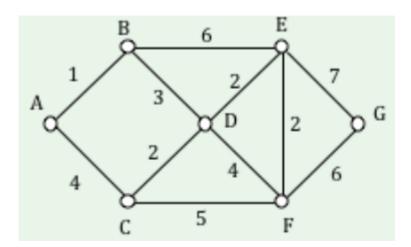

9. The number of boarding passengers, number of alighting passengers and the number of passengers in the vehicle are given in the following table:

Bus stop	# of boarding passengers	# of alighting passengers
Terminal A	9	0
1	10	6
2	14	4
3	9	11
4	7	17
5	0	7
Terminal B	0	4

Graphically illustrate the number of boarding passengers, number of alighting passengers and the number of passengers in the vehicle for all line sections. Also, graphically show the passenger load profile and identify the Maximum Load Section (MLS).

10. A public transit operator wants to provide service frequency between 6:00 and 7:00 that is equal to 4. Between 7:00 am and 8:00 am the operator wants to offer service frequency equals to 6. The operator provides service frequency that is equal to 8 in the time interval between 8:00 am and 9:00 am. Generate vehicles timetable that will provide constant vehicle headways within time interval from 6:00 am to 9:00 am. Show the solution graphically.

## Chapter 6

# Freight Transport Operation

## Chapter 7

## Fuel Consumption and Emission Models

## Chapter 8

# Planning for New Transport Organization