Adding Your Own Block Functions

There may be functions you need that are not included. Examples would be log, sine, tan, etc. Perhaps you have a device you want to add that runs off the SPI bus. The process of added a block function takes a few steps but none are complicated.

We will proceed with an example that adds a break point function. The function takes an input and sends it to the output multiplied by a gain of 1. The output equals the input. If the input is greater than the positive breakpoint, the output will change to output = breakpoint + (input – breakpoint) * gain. A similar action occurs when the input drops below the negative breakpoint. Our system only allow five variables per block. So we have input, +breakpoint, -breakpoint, gain, and output variables.

Open Pico_block_compiler_i using the Arduino IDE. Then save it as Pico_block_compiler_j

We are going to add new block called break point and use bpt as the block name. Scroll down until you find the End Block Definitions comment. Define the new block function name in capital letters and use the next available block number 41. Next, increment BLK_MAX by one which is 42.

```
#define RLY 38
68
69
   #define NOC 39
   #define NCC 40
   #define BPT 41
73
   #define BLK MAX 42
74
   #define PMAX 50
75
    #define VMAX 100
76
   #define TIMING PIN 22
77
   //****End Block Definitions
78
79
```

Locate the getnames() definition. Right above it the printnames() function. We are going to copy the last if statement, paste it and change it to print "bpt" when the constant BPT is found.

```
385
       if (b == ANG) Serial.print("and ");
386
       if (b == ORG) Serial.print("ore ");
387
       if (b == XOR) Serial.print("xor ");
       if (b == RLY) Serial.print("rly ");
388
389
       if (b == NOC) Serial.print("noc ");
390
       if (b == NCC) Serial.print("ncc ");
391
       if (b == BPT) Serial.print("bpt ");
392
393
394
395 int getnames(int n) {
396 volatile int j;
```

Find the print help command section. Add some help text for our new block.

```
505
       Serial.println("var avg : number of adc sample to average per reading");
506
       Serial.println("");
507
       Serial.println("abs in out : out = |in|");
508
       Serial.println("adc channel out : read adc channel 0,1 at +-10V, 2 at 0 to 3.3V");
509
       Serial.println("and in1 in2 out : out = 1 if in1>0 and in2>0 else out = 0");
510
       Serial.println("bnz in offset :if in!=0 then PC=PC+offset else PC=PC+1")
511
       Serial.println("bpt in bp+ bp- g out :out=in until bp then out = in*g");
        Serial.println("brm in offset :if in<0 then PC-PC+offset else PC-PC+1");
513
       Serial.println("brp in offset :if in>0 then PC=PC+offset else PC=PC+1");
514
       Serial.println("brz in offset :if in==0 then PC=PC+offset else PC=PC+1");
```

Find the No Op command section. Copy and paste the No Op code. We are going to modify it.

```
650
651
       //No Op
652⊟
      if ((cmd buf[0] == 'n') && (cmd buf[1] == 'o') && (cmd buf[2] == 'p')) {
       prog array[prog count][0] = NOP;
653
654
       num var[NOP] = 0;
655
       return (getnames (0));
656
      }
657
658
       //Break Point Function
659⊡ if ((cmd buf[0] == 'b') && (cmd buf[1] == 'p') && (cmd buf[2] == 't')) {
660
       prog array[prog count][0] = BPT;
      num \ var[BPT] = 5;
661
662
       return (getnames (5));
       1
663
664
```

Change the comment to Break Point Function. Change 'n' to 'b', 'o' to 'p' and 'p' to 't'. Change NOP to BPT. Change num_var[NOP] = 0; to num_var[BPT]=5;. Finally, getnames(0) to getnames(5). This is the command interpreter section. When it finds "bpt" it will enter the BPT constant into the program array. Next, it will look for five variables. If they are not defined, it will create them.

```
//No Op
if ((cmd_buf[0] == 'n') && (cmd_buf[1] == 'o') && (cmd_buf[2] == 'p')) {
    prog_array[prog_count][0] = NOP;
    num_var[NOP] = 0;
    return(getnames(0));
}

//Break Point Function
if ((cmd_buf[0] == 'b') && (cmd_buf[1] == 'p') && (cmd_buf[2] == 't')) {
    prog_array[prog_count][0] = BPT;
    num_var[BPT] = 5;
    return(getnames(5));
}
```

Scroll down until you find the run command section. It has all the case statements. Locate the LIM case and copy then paste it.

```
987
           break;
988
989
           limiter(prog array[i][1],prog array[i][2],prog array[i][3],prog array[i][4]);
990
           i++;
991
           break;
992
          case LIM:
993
           limiter(prog_array[i][1],prog_array[i][2],prog_array[i][3],prog_array[i][4]);
994
           i++;
995
          break;
996
          case ZIN:
997
           invz(prog array[i][l],prog array[i][2]);
```

Change case LIM to BPT. Change the calling function limiter to breakpt. Add one more variable prog_array[i][5] to the list.

```
988
          case LIM:
989
          limiter(prog_array[i][1],prog_array[i][2],prog_array[i][3],prog_array[i][4]);
990
991
          break;
992
          case BPT:
993
          breakpt(prog_array[i][1],prog_array[i][2],prog_array[i][3],prog_array[i][4],prog_array[i][5]);
994
          i++;
995
          break;
996
          case ZIN:
997
          invz(prog_array[i][1],prog_array[i][2]);
```

When the run command is executed, the program reads the block constant from prog_array[i][0]. The switch statement then calls the block function and passes an array index of the variables to the block function. As you guessed, i is the program line number.


As before, we will copy, paste and modify code to add the breakpoint function. Find the limiter routine. To make it a little easier, copy this code and paste it below the limiter function.

```
void breakpt(int a1, int bp, int bm, int g, int s1){
val_array[s1][1] = val_array[a1][1];
if (val array[a1][1] > val array[bp][1]) val array[s1][1] = val array[bp][1] + (val array[a1][1]-val array[bp][1])*val array[g][1];
if (val\_array[a1][1] < val\_array[bm][1]) \ val\_array[s1][1] = val\_array[bm][1] + (val\_array[a1][1] - val\_array[bm][1]) * val\_array[g][1];
1378 □ void limiter(int al, int pl, int ml, int sl){
1379  val_array[s1][1] = val_array[a1][1];
1380 if (val array[al][1] > val array[pl][1]) val array[sl][1] = val array[pl][1];
1381 if (val_array[al][1] < val_array[ml][1]) val_array[sl][1] = val_array[ml][1];
1382 }
1384 void breakpt(int al, int bp, int bm, int g, int sl) {
 1385 | val_array[s1][1] = val_array[a1][1];
if (val_array[al][1] > val_array[bp][1]) val_array[sl][1] = val_array[bp][1] + (val_array[al][1]-val_array[bp][1])*val_array[g][1];
1387 if (val_array[al][1] < val_array[bm][1]) val_array[sl][1] = val_array[bm][1] + (val_array[al][1]-val_array[bm][1])*val_array[g][1];
1388 }
1390  void schmidt(int al, int tl, int sl) {
1391 if (val_array[al][1] > val_array[t1][1]) val_array[s1][1]= -1.0;
1392 if (val_array[al][1] < -val_array[tl][1]) val_array[sl][1]= 1.0;
1393 1
```

The array indexes passed to the breakpt function are used to find the variables in the val_array[n][1]. The second index of [n][1] is used for all immediate output changes. Some functions such as integration save the output at index [n][0] and it is updated at the end of the program to reside at index [n][1]. Locations [s1][2] and [s1][3] for the output variable can be used as non-volatile local storage. Don't use these locations on input variables since they are outputs of other block functions.

Save the changes. If all is well with your entry, you should be able to compile and upload the program to your Pico. Here is a simple program to ramp an input from -12.8 to 12.8. The breakpoints are set at +5 and -6 with a gain of 0.5.


```
clr
sum a dt a
bpt a bp bm g out
prt a out
end
set a -12.8
set dt 0.1
set max -25.6
set bp 5
set bm -6
set g 0.5
```

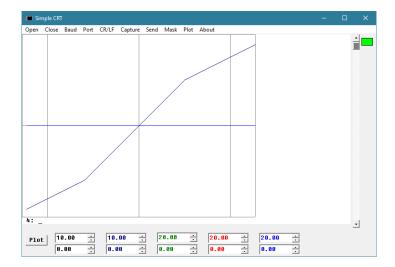

An x-y plot the output shows the breakpoint function is working as planned.

Breakpoint functions can be cascaded. Just remember the gains are multiplied. This example generates a triangle wave, passes it through two breakpoint blocks and then clips the output with a limiter.

```
clr
smt in th out
eul out g lim in
bpt in p1 n1 g1 s1
bpt s1 p2 n2 g2 s2
lim s2 p3 n3 sin
prt in sin
end
set th 2
set out 1
set dt .01
set max 100
set g 5
set p1 .5
set n1 -.5
set g1 .68
set p2 1
set n2 -1
set g2 .47
set p3 1.2
set n3 -1.2
```

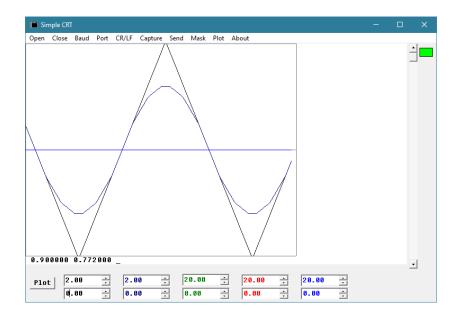

A piecewise sine approximation is what you get. The gain can also be negative. So, the new block could be uses to simulated a device with negative resistance.

It is possible to make a stand alone setup that requires no program loading through the serial interface. First you will need to write and test your program. Next, it will need to be modified so it can be stored in the Pico code. Start by adding a #define BLOCKPROG "to the clr statement. End it and each following line with a \r\. Add one more line %". Save the modified text. It will get inserted into the C++ code. Below is an example of modified block code.

```
//embedded block code. runs on boot if D0 is grounded
#define BLOCKPROG "clr\r\
sum n .01 n\r\
sub n x d\r\
brm d 2\r\
out L 25\r\
sub n 1 d\r\
brm d 4\r\
out H 25\r\
rst 0 n\r\
rst t x\r\
sub t 1 d\r\
brm d 2\r\
rst 0 t\r\
end\r\
set 1 1\r\
set 2 2\r\
set 4 4\r\
set 25 25\r\
set max 2\r\
set dt 0.0001\r\
set .01 .01\r\
set H 1\r\
set L 0\r\
run\r\
```

Open Pico_block_compiler_j in the Arduino IDE. Located the End Block Definitions.

```
#define NCC 40

#define BPT 41

#define BLK_MAX 42

#define PMAX 50

#define VMAX 100

#define TIMING_PIN 22

//****End Block Definitions

//****System Variables
```

Cut and paste your modified block program just above the End Block Definitions.

```
92 end\r\
93 set 1 1\r\
94 set 2 2\r\
95 set 4 4\r\
96 set 25 25\r\
97 set max 2\r\
98 set dt 0.0001\r\
99 set .01 .01\r\
100 set H 1\r\
101 set L 0\r\
102 run\r\
103 %"
104

105 //***End Block Definitions
106
```

Locate the Serial character read section. We are going to modify these two lines.

```
260
      line count = 0;
261
      Serial.print(prog count);
262
      Serial.print(": ");
263
264⊟
     while (c != 13) {
265
       while (Serial.available() == 0)
266
       c = Serial.read();
267⊟
        if (c != 10) {
268
          Serial.write(c);
269⊟
         if (c==8) {
                                 //Back Space
270
            line count--;
271
            if (line_count < 0) line_count = 0;</pre>
272
          } else {
273
           line buf[line count++] = c;
           if (line count > 79) line count = 79;
274
275
276
        }
277
      }
```

Copy this code then replace the two lines with it.

```
if ((digitalRead(0)==1)||(sst!=0)){
 while (Serial.available() == 0);
 c = Serial.read();
} else
 if (sst ==0)
  c = BLOCKPROG[ist];
 if (c != '%') ist++; else {
  sst++;
  c ='\0';
 }
}
26I
        Serial.print(prog_count);
262
        Serial.print(": ");
263
264⊟
        while (c != 13) {
265⊟
       if ((digitalRead(0)==1)||(sst!=0)){
266
           while (Serial.available() == 0);
267
           c = Serial.read();
268
        } else
269⊟
270
           if (sst ==0)
271
            c = BLOCKPROG[ist];
           if (c != '%') ist++; else {
272⊟
273
             sst++;
274
             c = '\0';
275
276
277
278⊟
           if (c != 10) {
279
             Serial.write(c);
280⊟
             if (c==8) {
                                       //Back Space
```

Compile and upload the program to your Pico. If you used the example block code, it will make the LED flash from dim to bright. Place a jumper wire from D0 to GND, then plug in the USB cable. This will make the Pico boot to the imbedded program.

Connect to the terminal program and hit <esc>. The boot program will stop and you can list it. The program will only load on boot. If you clear it or change lines, ground D0 and repower the Pico to get it back.

