Learning RISC-V with embedded targets and QEMU

Loh Siu Yin Beyond Broadcast LLP siuyin@beyondbroadcast.com

1. Why this article?

The chips I use are ARM Cortex M0/M0+, MSP430G2, PIC16 and STM8.

I then came across RISC-V RV32EC in the form of the CH32V003. The 32 means 32-bit. E is for the embedded capability and C for compressed instructions to help reduce code size.

Each device had a steep learning curve and RISC-V was similar. The amount of resources was overwhelming. Where do I start? How do I create bare-metal code to blink an LED?

My starting point was: https://riscv.org/.

2. Running Linux on QEMU

https://risc-v-getting-started-guide.readthedocs.io/en/latest/linux-qemu.html shows you how to almost get a QEMU environment up the hard way. You compile QEMU, Linux and BusyBox for RISC-V. I later found I could also use the QEMU packaged the linux distribution I used. For Ubuntu 22.04 it was the qemu-system-misc package.

When I got to the running stage at https://risc-v-getting-started-guide.readthedocs.io/en/latest/linux-qemu.html#running, it crashed with:

```
[ 1.200880] [<fffffff80825ac4>] kernel_init+0xle/0x10a
[ 1.201294] [<fffffff80003762>] ret_from_fork+0xa/0x1c
[ 1.202683] ---[ end Kernel panic - not syncing: VFS: Unable to mount root fs on unknown-blo
QEMU: Terminated
```

After searching the internet, I learned I needed to provide an initial ram filesystem. The invocation that finally worked for me was:

```
runqemu.sh:
    qemu-system-riscv64 -nographic -machine virt \
    -kernel linux/arch/riscv/boot/Image -append "root=/dev/vda ro console=ttyS0" \
    -drive file=busybox/busybox,format=raw,id=hd0 \
```

-initrd initramfs.cpio.gz

-device virtio-blk-device,drive=hd0 \

And the output was a root linux prompt in OEMU:

```
[ 1.368036] clk: Disabling unused clocks
[ 1.448878] Freeing unused kernel image (initmem) memory: 2184K
[ 1.450971] Run /init as init process

Boot took 1.71 seconds

Ctrl a x to exit QEMU
~ #
```

But how do you get that initramfs.cpio.gz file?

3. Using Busybox as the root filesystem in RISC-V QEMU

After more searching on the internet, I found: https://gist.github.com/chrisdone/02e165a0004be33734ac2334f215380e

That lead me to write:

```
mkinitramfs.sh:
  rm -rf initramfs
  mkdir -p initramfs
  cp init initramfs
  chmod +x init
  cd initramfs
  mkdir -p bin sbin etc proc sys usr/bin usr/sbin
  cp -a ../busybox/_install/* .
  cp ../hello .
  find . -print0 | cpio --null -ov --format=newc \
      | gzip -9 > ../initramfs.cpio.gz
And my init:
  #!/bin/sh
  mount -t proc none /proc
  mount -t sysfs none /sys
  mknod -m 666 /dev/ttyS0 c 4 64
  echo -e "\nBoot took $(cut -d' ' -f1 /proc/uptime) seconds\n"
  echo "Ctrl a x to exit QEMU"
  setsid cttyhack sh
  exec /bin/sh
For reference here is a snapshot of my project root layout:
  siuyin@ln03:~/riscv64-linux$ ls -F
  about.article busybox/ go.sum hello.o initramfs/
                                                                                  README.md
                                                                linux/
                                                                                               src/
  build.sh*
                           hello* init*
                                            initramfs.cpio.gz mkinitramfs.sh* runqemu.sh*
                 qo.mod
```

Ignore the go.sum and go.mod files as there are there only to support this about.article I am writing.

4. Running a RISC-V binary in QEMU running RISC-V Linux

I chose to learn RISC-V assembly first as that was closest to the bare metal. Below is my hello world in assembly.

You may find this quick reference card handy:

.data

https://www.cl.cam.ac.uk/teaching/1617/ECAD+Arch/files/docs/RISCVGreenCardv8-20151013.pdf

```
src/linux/hello.s:
  # Simple RISC-V hello world.
  .global _start
  .text
  _start:
                              # addi is add immediate. x0 is the zero-value register, 1+0 -> a0
      addi
              a0, x0, 1
                                 # la is load address
            a1, helloworld
      la
              a2, x0, 13
      addi
              a7, x0, 64
                                # 64 is the syscall to write
      addi
      ecall
  _end:
      addi
              a0, x0, 0
                               # return code is 0
              a7, x0, 93
      addi
                               # 93 is the syscall to terminate
      ecall
```

```
helloworld:
    .ascii "Hello World.\n"
```

If you looked closely at my mkinitramfs.sh earlier, you will see that I copied the hello binary to the initramfs.cpio.gz.

This is how I built the hello binary:

```
build.sh:
    #!/bin/bash
    #riscv64-linux-gnu-gcc -o hello hello.s -nostdlib -static
    riscv64-linux-gnu-as -march=rv64imac -o hello.o src/linux/hello.s
    riscv64-linux-gnu-ld -o hello hello.o
```

The -march=rv64imac reads: assemble for RISC-V 64bit with integer, multiply (and divide), atomic instructions and compressed instructions.

Below is the output of a run in QEMU:

```
1.418066] Freeing unused kernel image (initmem) memory: 2184K
     1.420248] Run /init as init process
Boot took 1.67 seconds
Ctrl a x to exit QEMU
~ # ls -F
                 init* proc/
        etc/
bin/
                                   sbin/
                                            usr/
        hello* linuxrc@ root/
dev/
                                   sys/
~ # ./hello
Hello World.
~ #
```

5. Running RISC-V on QEMU 'bare-metal'

In the previous example I syscall'ed into Linux to print a string and to exit. Microcontrollers can be very small and usually will not run Linux. They may not run any operating system at all.

Thus my next RISC-V assembly program targets a sifive_e board that is emulated by QEMU.

https://github.com/qemu/qemu/blob/792f77f376adef944f9a03e601f6ad90c2f891b2/hw/riscv/sifive_e.c#L15 gives more details about the emulated board.

5.1. Assembly code for the emulated red-v board

The sifive e board emulates a serial port (UART) that allows strings to be printed onto the QEMU console.

puts in the assembly code below writes to the serial port.

src/embed/embedhello.s:

```
.align 2
.equ UART_REG_TXFIF0, 0
.equ UART_BASE, 0x10013000
.section .text
```

```
.globl _start
start:
    # load the mhartid (machine hardware thread ID) control and status register into t\theta
             t0, mhartid
    # branch to halt if the hartid is not zero -- all other threads are halted
             t0, halt
    bnez
    # load address stack_top (from linker script) into stack pointer
          sp, stack_top
    # load address of msg into a0 (argument 0) register, t0 above is temporary 0
    la
          a0, msg
                       # jump and link: call puts
    jal
           puts
                      # call puts again but now with msg2
    la
          a0, msg2
    jal
           puts
                     # end the program
    i
         halt
puts:
          t0, UART_BASE
    lί
.puts_loop: lbu
                   t1, (a0)
            t1, .puts_leave
    begz
                  t2, UART_REG_TXFIF0(t0)
.puts wait: lw
    bltz
            t2, .puts_wait
          t1, UART_REG_TXFIF0(t0)
    SW
    add
           a0, a0, 1
         .puts_loop
.puts_leave:
    ret
halt:
                halt
          j
.section .rodata
msg:
    .string "Hello risc-v!\n"
msg2:
    .string "This is my second string.\n"
```

5.2. RISC-V privileged mode and multiple hardware threads

The csrr instruction surprised me. Normally embedded processes are single core with a single thread of execution. With some implementations, you may have multiple cores. This codes targets only the core with thread ID of zero.

```
# load the mhartid (machine hardware thread ID) control and status register into t0
csrr t0, mhartid
# branch to halt if the hartid is not zero -- all other threads are halted
bnez t0, halt
```

See the extract from the RISC-V manual volume 2 below:

3.1.5 Hart ID Register mhartid

The mhartid CSR is an MXLEN-bit read-only register containing the integer ID of the hardware thread running the code. This register must be readable in any implementation. Hart IDs might not necessarily be numbered contiguously in a multiprocessor system, but at least one hart must have a hart ID of zero. Hart IDs must be unique within the execution environment.



Figure 3.5: Hart ID register (mhartid).

In certain cases, we must ensure exactly one hart runs some code (e.g., at reset), and so require one hart to have a known hart ID of zero.

For efficiency, system implementers should aim to reduce the magnitude of the largest hart ID used in a system.

5.3. A customized linker script for the Red-V board

stack_top is defined in the linker script

```
red-v.ld:
  OUTPUT ARCH("riscv")
  OUTPUT_FORMAT("elf32-littleriscv")
  ENTRY( _start )
  SECTIONS
       . = 0 \times 20010000;
       .text : { *(.text) }
       .gnu_build_id : { *(.note.gnu.build-id) }
       .rodata : { * (.rodata) }
       . = 0 \times 800000000;
       .data : { *(.data) }
       .sdata : { *(.sdata) }
       .debug : { *(.debug) }
       += 0 \times 1000;
       stack_top = .;
       _{end} = .;
  }
```

After a red-v board is reset, its firmware points to address 0x20010000 to start executing code found there. This address is in the QSPI flash area.

However the stack must sit in RAM and that starts at address 0x80000000 in the red-v board.

0x1003_6000	0x1FFF_FFFF		Reserved	
0x2000_0000	0x3FFF_FFFF	R XC	QSPI 0 Flash (512 MiB)	Off-Chip Non-Volatile Mem-
0x4000_0000	0x7FFF_FFFF		Reserved	ory
0x8000_0000	0x8000_3FFF	RWX A	E31 DTIM (16 KiB)	On-Chip Volatile Memory
0x8000_4000	0xFFFF_FFFF		Reserved	On-Chip volatile Memory

Table 4: FE310-G002 Memory Map. Memory Attributes: **R** - Read, **W** - Write, **X** - Execute, **C** - Cacheable, **A** - Atomics

5.4. Output of 'bare-metal' assembly code

6. C code for the emulated red-v board

Below is the startup assembly code to jump to the main C code.

```
src/c_embed/startup.s:
  .align 2
  .section .text
  .globl _start
  _start:
      csrr t0, mhartid
      bnez
             t0, halt
          sp, stack_top # initialize stack
      la
                       # jump to main
           main
      j
  halt:
                  halt
            j
And below is the main C code.
src/c_embed/main.c:
  typedef unsigned int size_t;
  typedef unsigned char uint8_t;
  #define UART_BASE ((size_t *)0x10013000)
  #define TXDATA (UART_BASE + 0)
  // Making putchar static optimizes space as it will not be 'exported'
  // to be visible in other source files.
  static void putchar(uint8_t ch) {
      while ((volatile int)*TXDATA < 0);</pre>
      *TXDATA = ch;
  }
  void puts(char *s) {
      // while char pointed to by s is non-zero, putchar and increment the pointer
      while (*s) putchar(*s++);
      putchar('\n');
  }
  void main() {
```

```
puts("Hello RISC-V from C!");
puts("bye");
}
```

Let's take a closer look at:

```
while ((volatile int)*TXDATA < 0);
```

We cast the size_t pointed to by UART_BASE to a volatile int.

volatile tells the compiler the value may be changed by the hardware and thus to not eliminate it when optimizing the code.

int makes it a signed integer. As the red-v manual extract below states, the most significant bit (MSB) will be set if the FIFO is full -- and thus not ready to take another byte. if the MSB is set, it is a negative number.

Thus the code reads:

wait for the TX FIFO to be not full then write ch to the memory pointed to by TXDATA.

```
while ((volatile int)*TXDATA < 0);
*TXDATA = ch;</pre>
```

18.4 Transmit Data Register (txdata)

Writing to the txdata register enqueues the character contained in the data field to the transmit FIFO if the FIFO is able to accept new entries. Reading from txdata returns the current value of the full flag and zero in the data field. The full flag indicates whether the transmit FIFO is able to accept new entries; when set, writes to data are ignored. A RISC-V amoor.w instruction can be used to both read the full status and attempt to enqueue data, with a non-zero return value indicating the character was not accepted.

Transmit Data Register (txdata)								
Regist	er Offset	0×0						
Bits	Field Name	Attr.	Rst.	Description				
[7:0]	data	RW	Х	Transmit data				
[30:8]	Reserved							
31	full	R0	Х	Transmit FIFO full				

Table 56: Transmit Data Register

6.1. Makefile for embedded C

\$(SIZE) c_embed

\$(AS) -o \$@ \$<

\$(CC) -o main.s -S main.c

%.0: %.S

main.s: main.c

```
.PHONY: clean
clean:
    rm -f $(OBJS)

.PHONY: dump
dump: c_embed
    $(OBJDUMP) -S --source-comment='#' -d c_embed
```

The line:

CC=riscv64-unknown-elf-qcc -02 -q -nostdlib -Wno-builtin-declaration-mismatch -march=rv32ec -ma

is needed because gcc already knows of a putchar function in libc and it is not a void function.

6.2. Embedded C code output

7. Really running RISC-V on the physical ch32v003 device

Nanjing Qinheng Microelectronics, makers of the ch32v003 device have good development system based on Eclipse. Their provided libraries were decent but it still took a lot of poring over source code to understand what was going on.

Futher, their linker script and start-up code was dense and hard to understand.

I belive this is why CNLohr wrote the lightweight ch32v003fun development environment. The environment consist of one C file, the associated header file, a linker script and software to drive the device programmer. The project is Open Source and I decided to use the linker script as the basis of my "hello world" into ch32v003 RISC-V assembly programming.

7.1. Code to blink an LED

On my development board -- just the ch32v003 part soldered to a breakout board -- I've connected an LED to PD0. I found this listing of RISC-V pseudo instructions useful. Pseudo instructions are human friendly instructions that are translated by the assembler to actual RISC-V instructions.

I also found this tutorial helpful.

CH32V003F4P6

```
20
    PD4/A7/UCK/T2CH1ETR/OPO/T1CH4ETR_
                                                 PD3/A4/T2CH2/AETR/UCTS/T1CH4
                                                                                 19
    PD5/A5/UTX/T2CH4_/URX_
                                                   PD2/A3/T1CH1/T2CH3 /T1CH2N
    PD6/A6/URX/T2CH3 /UTX
                                              PD1/SWIO/AETR2/T1CH3N/SCL /URX
    PD7/NRST/T2CH4/OPP1/UCK_
                                                  PC7/MISO/T1CH2_/T2CH2_/URTS_
    PA1/OSCI/A1/T1CH2/OPN0
                                               PC6/MOSI/T1CH1CH3N_/UCTS_/SDA_
    PA2/OSCO/A0/T1CH2N/OPP0/AETR2_ PC5/SCK/T1ETR/T2CH1ETR_/SCL_/UCK_/T1CH3_
                                                                                 14
                                                  PC4/A2/T1CH4/MCO/T1CH1CH2N
                                                                                 13
    PD0/T1CH1N/OPN1/SDA_/UTX_
                                                       PC3/T1CH3/T1CH1N_/UCTS_
                                                                                 12
                                       PC2/SCL/URTS/T1BKIN/AETR_/T2CH2_/T1ETR_
    VDD
10
                                                                                 11
                                   PC1/SDA/NSS/T2CH4_/T2CH1ETR_/T1BKIN_/URX_
    PC0/T2CH3/UTX_/NSS_/T1CH3_
```

```
src/ch32v003/blink/blink.S:
  .align 2
  .equ RCC APB2PCENR, 0x40021018
  .equ GPIOD_CFGLR, 0x40011400
  .equ GPIOD BSHR, 0x40011410
  .section .text
  .globl _start
  start:
      # load address eusrstack (from linker script) into stack pointer
      la sp, _eusrstack
  gpiod clk en:
      # turn on clock to GPIOD to enable it
      li t0, 1<<5
      li t1, RCC APB2PCENR
      sw t0, 0(t1)
  gpiod_pd0_out:
      # configure GPIOD
      li t0, GPIOD_CFGLR
      lw t1, 0(t0)
      andi t1,t1,\sim(0xf)
      ori t1,t1,1
      sw t1, 0(t0)
  pd0_on:
      # turn on LED connected to PD0
      li t0, GPIOD_BSHR
  .pd0_on_1:
      li t1, 1
      sw t1, 0(t0)
      jal delay
  pd0_off:
      li t1, 1<<16
      sw t1, 0(t0)
      jal delay
  repeat:
      j .pd0_on_1
  delay:
      li a0, 500000
  .delay_1:
```

```
addi a0,a0,-1
beqz a0, .delay_end
j .delay_1
.delay_end:
    ret

    j halt
halt:    j halt
```

Let's break this down part by part. First consider:

```
.align 2
.equ RCC_APB2PCENR, 0x40021018
.equ GPIOD_CFGLR, 0x40011400
.equ GPIOD_BSHR, 0x40011410
```

.align 2 tells the linker to place the code on a two-byte (16-bit) boundary. This is allowed as the part implements compressed instructions (rv32ec). If not code must be aligned on a word (32-bit) boundary.

What follows are .equ to equate symbols to memory-mapped register addresses. RCC_APB2PCENR, read, RCC APB2 P C EN R is the:

Reset and Clock Control Advanced Peripheral Bus 2 Peripheral Clock Enable Register.

Now let's proceed to the system initialisation.


```
.section .text
.globl _start

_start:
    # load address _eusrstack (from linker script) into stack pointer
    la sp, _eusrstack
```

The above code just loads the address of _e usr stack -- end of user stack to the stack pointer register. This is the bare essentials to get started.

Next, we enable GPIOD by routing the device's internal clock to the GPIO internal module. The device's reset condition is to use the 24MHz HSI RC oscillator with an AHB prescaler of /3 (actual and not /1 documented in the reference manual). This results in an HCLK of 8MHz being available to AHB and AHB2 peripherals.

But I don't see AHB2 ?! There is only one AHB bus on this device but on larger devices the Advanced High-performance Bus (a term I belive originating from ARM devices) are divided. Here on the ch32v003 AHB == AHB2 and vice-versa.

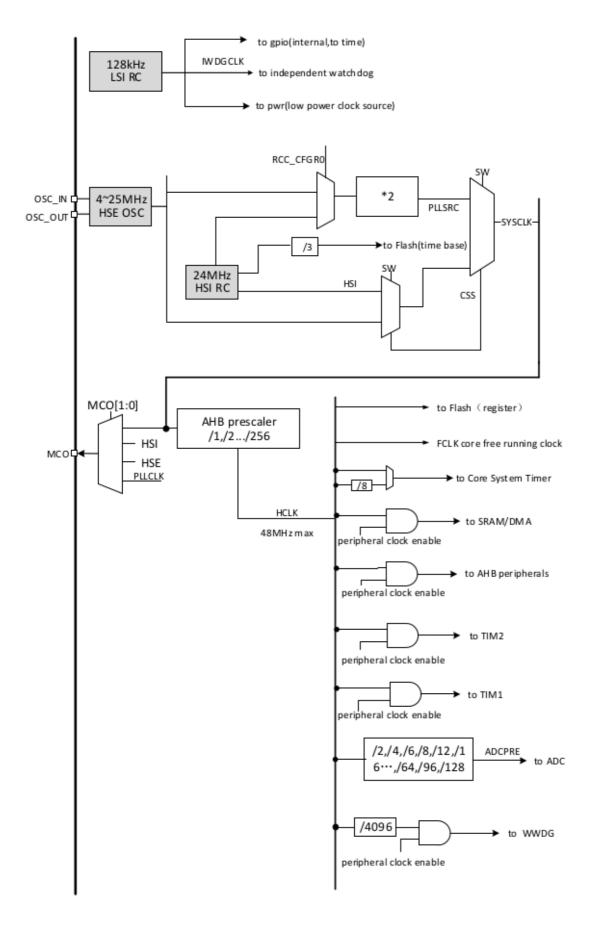

Here is how we actually enable GPIOD by feeding it the HCLK by setting bit 5 on RCC APB2 P C EN R.

3.4.7 APB2 Peripheral Clock Enable Register (RCC_APB2PCENR)

Offset address: 0x18

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
							Res	erved							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Reser ved	USAR T1 EN	Reser ved	SPI1 EN	TIM1 EN	Reser ved	ADC 1 EN]	Reserved		IOPD EN	IOPC EN	Reser ved	IOPA EN	Reser ved	AFIO EN

Bit	Name	Access	Description	Reset value
[31:15]	Reserved	RO	Reserved	0
14	USART1EN	RW	USART1 interface clock enable bit. 1: Module clock is on; 0: Module clock is off.	0
13	Reserved	RO	Reserved	0
12	SPI1EN	RW	SPI1 interface clock enable bit. 1: Module clock is on; 0: Module clock is off.	0
11	TIM1EN	RW	TIM1 module clock enable bit. 1: Module clock is on; 0: Module clock is off.	0
10	Reserved	RO	Reserved	0
9	ADC1EN	RW	ADC1 module clock enable bit. 1: Module clock is on; 0: Module clock is off.	0
[8:6]	Reserved	RO	Reserved	0
5	IOPDEN	RW	PD port module clock enable bit for I/O. 1: Module clock is on; 0: Module clock is off.	0
4	IOPCEN	RW	PC port module clock enable bit for I/O. 1: Module clock is on; 0: Module clock is off.	0
3	Reserved	RO	Reserved	0
2	IOPAEN	RW	PA port module clock enable bit for I/O. 1: Module clock is on; 0: Module clock is off.	0
1	Reserved	RO	Reserved	0
0	AFIOEN	RW	I/O auxiliary function module clock enable bit. 1: Module clock is on; 0: Module clock is off.	0

Note: When the peripheral clock is not enabled, the software cannot read out the peripheral register value and the value returned is always 0.

```
gpiod_clk_en:
    # turn on clock to GPIOD to enable it
    li t0, 1<<5
    li t1, RCC_APB2PCENR</pre>
```

sw t0, $0(t\overline{1})$

Study the above code:

li t0, 1<<5 loads immediate into t0 the binary value 100000. Note: the lowest bit is named bit-0.

What is t0? It is the ABI name for one of 16 CPU registers defined in RISC-V rv32e:

Table 1-2 RV32E registers

Register	ABI Name	Description	Storer
x0	zero	Hardcoded 0	-
x1	ra	Return address	Caller
x2	sp	Stack pointer	Callee
х3	gp	Global pointer	-
x4	tp	Thread pointer	-
x5-7	t0-2	Temporary register	Caller
x8	s0/fp	Save register/frame pointer	Callee
x9	s1	Save register	Callee
x10-11	a0-1	Function parameters/return values	Caller
x12-15	a2-5	Function parameters	Caller

Similarly RCC_APB2PCENR is loaded into t1.

Next comes sw t0, $\theta(t1)$, which reads: store word in t0 to the memory address pointed to by t1, offset by θ .

When the above code executes, it stores 1<<5 to the RCC_ABP2PCENR register which then enables GPIOD. The equivalent in C is: RCC_APB2PCENR = 1<<5;

The GPIO ports on the ch32v003 reset to a floating input condition, effectivly disconnecting the IO pins from whatever they were connected to. We want to make GPIO Port D pin 0 an output.

7.3.1.1 Port Configuration Register Low (GPIOx_CFGLR) (x=A/C/D)

Offset address: 0x00

_	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
	CNF7	7[1:0]	MOD	E7[1:0]	CNF6	5[1:0]	MOD	E6[1:0]	CNF:	5[1:0]	MOD	E5[1:0]	CNF4	4[1:0]	MODE	E4[1:0]
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	CNF3	8[1:0]	MOD	E3[1:0]	CNF2	2[1:0]	MOD	E2[1:0]	CNF	1[1:0]	MOD	E1[1:0	CNF	0[1:0]	MODE	E0[1:0]

Bit	Name	Access	Description	Reset value
[31:30] [27:26] [23:22] [19:18] [15:14] [11:10] [7:6] [3:2]	CNFy[1:0]	RW	(y=0-7), the configuration bits for port x, by which the corresponding port is configured. When in input mode (MODE=00b). 00: Analog input mode. 01: Floating input mode. 10: With pull-up and pull-down mode. 11: Reserved. In output mode (MODE>00b). 00: Universal push-pull output mode. 01: Universal open-drain output mode. 10: Multiplexed function push-pull output mode. 11: Multiplexing function open-drain output mode.	01b
[29:28] [25:24] [21:20] [17:16] [13:12] [9:8] [5:4] [1:0]	MODEy[1:0]	RW	(y=0-7), port x mode selection, configure the corresponding port by these bits. 00: Input mode. 01: Output mode, maximum speed 10MHz; 10: Output mode, maximum speed 2MHz. 11: Output mode, maximum speed 50MHz.	00Ъ

The tricky part here is to configure only the bits relating to PD0, leaving the rest unmodified.

```
gpiod_pd0_out:
    # configure GPIOD
    li t0, GPIOD_CFGLR
    lw t1, 0(t0)
    andi t1,t1,~(0xf)
    ori t1,t1,1
    sw t1, 0(t0)
```

lw t1, $\theta(t\theta)$: load word into t1 from the memory address pointed to by t0 offset by θ .

```
and i t1,t1,\sim(0xf): and immediate the binary value 1111..11110000 (32-bits) with the value in t1 (the second t1) and store the result in t1 (the first t1).
```

When the above code is executed, binary value 0001 is stored into GPIOD_CFGLR and PD0 is now an output.

It is now time to turn on PD0. For that we need to modify yet another register: GPIOD_BSHR which reads, GPIOD BS H R:

GPIOD

Bit Set High Reset .

7.3.1.4 Port Reset/Set Register (GPIOx_BSHR) (x=A/C/D)

Offset address: 0x10

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
			Rese	rved				BR7	BR6	BR5	BR4	BR3	BR2	BR1	BR0
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

Bit	Name	Access	Description	Reset value
[31:24]	Reserved	R0	Reserved	0
[23:16]	BRy	WO	(y=0-7), the corresponding OUTDR bits are cleared for these location bits, and writing 0 has no effect. These bits can only be accessed in 16-bit form. If both BR and BS bits are set, the BS bit takes effect.	0
[15:8]	Reserved	RO	Reserved	0
[7:0]	BSy	WO	(y=0-7), for which the location bits will make the corresponding OUTDR location bits, writing 0 has no effect. These bits can only be accessed in 16-bit form. If both BR and BS bits are set, the BS bit takes effect.	

Below is the code to assert PD0 to turn on the LED.

```
pd0_on:
    # turn on LED connected to PD0
    li t0, GPIOD_BSHR
.pd0_on_1:
    li t1, 1
    sw t1, 0(t0)
    jal delay
```

jal delay: jump and link to delay, means call the delay routine.

```
delay:
    li a0, 500000
.delay_1:
    addi a0,a0,-1
    beqz a0, .delay_end
```

```
j .delay_1
.delay_end:
    ret
```

beqz a0, .delay_end: **b**ranch **eq**ual **z**ero to label .delay_end otherwise execute the following instruction. Which is j .delay_1: **j**ump to label .delay_1.

The code to turn off the LED is similar to the code to turning on the LED except that we write the 1 to the upper or higher half-word. This is why the regiter is named Reset High.

```
pd0_off:
    li t1, 1<<16
    sw t1, 0(t0)
    jal delay</pre>
```

Finally at the end of the on-delay-off-delay sequence, a jump is executed to repeat the whole cycle. A tiny optimisation is made by jumping to label .pd0_on_1 to skip reloading the address of GPIOD BS HR into t0.

```
pd0_on:
    # turn on LED connected to PD0
    li t0, GPIOD_BSHR
.pd0_on_1:
    li t1, 1
    sw t1, 0(t0)
    jal delay

pd0_off:
    li t1, 1<<16
    sw t1, 0(t0)
    jal delay

repeat:
    j .pd0_on_1</pre>
```

The LED connected to PD0 now blinks!

7.2. Makefile

The above was the assembler code, a Makefile is use by make to compile and link the code.

```
all : flash

TARGET:=blink
TARGET_EXT:=S

CFLAGS+=

include ../ch32v003fun.mk

flash : cv_flash
clean : cv_clean
```

It is not very interesting as it mainly specifies that the TARGET is named blink and its extension is .S . By the way, .s assember files only allow .include FILE but .S files are processed by the C pre-processor to allow #include "file" and #define

Here is the interesting ../ch32v003fun.mk (credit CNLohr). It is long, so just give it a quick read-over and then I will explain the key sections of the file.

```
PREFIX?=riscv64-unknown-elf
CH32V003FUN?=..
MINICHLINK?=/home/siuyin/ch32v003fun/minichlink
CFLAGS+= \
    -g -0s -flto -ffunction-sections \
```

```
-static-libgcc \
      -march=rv32ec \
      -mabi=ilp32e \
      -I/usr/include/newlib \
      -I$(CH32V003FUN)/../extralibs \
      -I$(CH32V003FUN) \
      -nostdlib \
      -I. -Wall $(EXTRA_CFLAGS)
  #LINKER_SCRIPT?=$(CH32V003FUN)/ch32v003fun.ld
  LINKER_SCRIPT?=$(CH32V003FUN)/simple.ld
  LDFLAGS+=-T $(LINKER_SCRIPT) -Wl,--gc-sections -L$(CH32V003FUN)/../misc -lgcc
  WRITE SECTION?=flash
  SYSTEM C?=$(CH32V003FUN)/ch32v003fun.c
  TARGET EXT?=c
  #$(TARGET).elf: $(SYSTEM_C) $(TARGET).$(TARGET_EXT) $(ADDITIONAL_C_FILES)
       $(PREFIX)-gcc -o $@ $^ $(CFLAGS) $(LDFLAGS)
  $(TARGET).elf : $(TARGET).$(TARGET_EXT)
      $(PREFIX)-gcc -o $@ $^ $(CFLAGS) $(LDFLAGS)
  $(TARGET).bin : $(TARGET).elf
      $(PREFIX)-size $^
      $(PREFIX)-objdump -S $^ > $(TARGET).lst
      $(PREFIX)-objdump -t $^ > $(TARGET).map
      $(PREFIX)-objcopy -0 binary $< $(TARGET).bin</pre>
      $(PREFIX)-objcopy -0 ihex $< $(TARGET).hex</pre>
  ifeq ($(0S),Windows_NT)
  closechlink:
      -taskkill /F /IM minichlink.exe /T
  else
  closechlink:
      -killall minichlink
  endif
  terminal : monitor
  monitor:
      $(MINICHLINK)/minichlink -T
  gdbserver:
      -$(MINICHLINK)/minichlink -baG
  clangd:
      make clean
      bear -- make build
  clangd clean :
      rm -f compile commands.json
  FLASH COMMAND?=$(MINICHLINK)/minichlink -w $< $(WRITE SECTION) -b
  cv flash : $(TARGET).bin
      make -C $(MINICHLINK) all
      $(FLASH COMMAND)
  cv clean :
      rm -rf $(TARGET).elf $(TARGET).bin $(TARGET).hex $(TARGET).lst $(TARGET).map $(TARGET).hex
  build : $(TARGET).bin
Let's first look at the step where the compiler/assember is invoked:
  $(TARGET).elf : $(TARGET).$(TARGET_EXT)
```

\$(PREFIX)-gcc -o \$@ \$^ \$(CFLAGS) \$(LDFLAGS)

The above reads:

(.data .data.)

```
to produced TARGET elf (executable and link format binary)
  check if TARGET.EXT (in our case blink.S) has changed
    run GCC and output TARGET.elf (blink.elf) by compiling TARGET.EXT (blink.S)
    with the following CFLAGS and LDFLAGS
  if not, don't do anything.
Below are the CFLAGS:
  CFLAGS+= \
      -g -Os -flto -ffunction-sections \
       -static-libgcc \
      -march=rv32ec \
      -mabi=ilp32e \
      -I/usr/include/newlib \
      -I$(CH32V003FUN)/../extralibs \
      -I$(CH32V003FUN) \
      -nostdlib \
      -I. -Wall $(EXTRA_CFLAGS)
The interesting parts are:
-static-libgcc : use the static version of libgcc
-ffunction-sections : from the gcc docs.
Place each function or data item into its own section in the output file if the target supports arbitrary sections.
-mabi=ilp32e: the machine application binary interface has integers, longs and pointer that are 32-bits wide,
with function calls according to the embedded (as in rv32e) conventions.
And the LDFLAGS:
  LDFLAGS+=-T $(LINKER_SCRIPT) -Wl,--gc-sections -L$(CH32V003FUN)/../misc -lgcc
  #LINKER_SCRIPT?=$(CH32V003FUN)/ch32v003fun.ld
  LINKER_SCRIPT?=$(CH32V003FUN)/simple.ld
I have substituted CNLohr's linker script with my own simplified one, simple.ld.
'--gc-sections' : garbage-collect unused sections. This reduces the size of the output binary.
Let's study simple.ld below.
  ENTRY( _start )
  MEMORY
      FLASH (rx) : ORIGIN = 0x000000000, LENGTH = 16K
      RAM (xrw) : ORIGIN = 0x20000000, LENGTH = 2K
  }
  SECTIONS
       .text :
         . = ALIGN(4);
         *(.text)
         *(.rodata)
         = ALIGN(4);
      } >FLASH AT>FLASH
       .data :
          = ALIGN(4);
```

```
. = ALIGN(4);
    PROVIDE( _edata = .);
} >RAM AT>FLASH

PROVIDE( end = . );

PROVIDE( _eusrstack = ORIGIN(RAM) + LENGTH(RAM));
}
```

The script states the entry point of the executable is _start. _start is a label in our blink. S source file.

Also .text and .rodata sections should be placed in FLASH. And .data sections should be placed in RAM.

Finally note the _eusrstack which defines the location of end of user stack. _eusrstack is used in blink.S to initialise the stack pointer.

7.3. Setting HCLK to run at 24MHz

According to the reference manual, the device should run at 24MHz immediately after reset. The internal RC oscillator does indeed run at 24MHz but I found the clock fed to internal peripherals was 8MHz. I later found the HPRE field in RCC_CFGR0 was 0b0010 after reset instead of 0b0000 as documented.

Below is the code in blink24.S to set HPRE to 0, a one-line change. The rest of the code remained the same as blink.S

```
src/ch32v003/blink24/blink24.S:

gpiod_clk_en:
    # turn on clock to GPIOD to enable it
    li t0, 1<<5
    li t1, RCC_BASE
    # set RCC CFG R0 to zero as documented in the reference manual to get 24MHz HSI to HCLK.
    sw zero, RCC_CFGR0(t1)</pre>
```

7.4. Setting HCLK to run at 48MHz

This required turning on the PLL, waiting for the PLL to become ready, then setting the clock source to be the PLL instead of HSI.

The flash access wait-state should also be set to 1 to ensure reliable operation.

I've adopted a convention in the source below where labels starting with a capitalized letter should be treated as a globally accessible or public label.

Labels starting with a lower case label are "private" and those starting with a . (dot) are "local".

src/ch32v003/blink48/blink48.S:

```
/* blink48.S sets the device to run at 48MHz.
*/
.align 2
.equ RCC_BASE, 0x40021000
.equ RCC_CTLR, 0x0
.equ RCC_CFGR0, 0x4
.equ RCC_INTR, 0x8
.equ RCC_APB2PCENR, 0x18
.equ FLASH_BASE, 0x40022000
.equ FLASH_ACTLR, 0x0
.equ GPIOD_BASE, 0x40011400
.equ GPIOD_CFGLR, 0x0
.equ GPIOD_BSHR, 0x10
.section .text
```

```
.globl _start
_start:
    # load address _eusrstack (from linker script) into stack pointer
    la sp, _eusrstack
RCC_set_48MHz:
    li t0, RCC_BASE
    # set AHB divider to /1
    sw zero, RCC_CFGR0(t0)
    # turn on PLL
    lw t1, RCC_CTLR(t0)
    li t2, 1<<24
    or t1, t1, t2
    sw t1, RCC_CTLR(t0)
    # set flash latency to 1 cycle
    li t2, FLASH_BASE
    li t1, 0x01
    sw t1, FLASH_ACTLR(t2)
    # clear PLL, CSSC, HSE, HSI and LSI ready flags
    li t1, 0x009F0000
    sw t1, RCC_INTR(t0)
    # wait till PLL is ready
    li t2, 1<<25
.rcc_ctlr_pll_not_ready:
    lw t1, RCC_CTLR(t0)
    and t1, t1, t2
    beqz t1, .rcc_ctlr_pll_not_ready
    # set PLL as clock source
    lw t1, RCC_CFGR0(t0)
    ori t1, t1, 0b10
    sw t1, RCC_CFGR0(t0)
GPIOD clk en:
    # turn on clock to GPIOD to enable it
    li t0, RCC_BASE
    li t1, 1<<5
    sw t1, RCC_APB2PCENR(t0)
gpiod_pd0_out:
    # configure GPIOD
    li t0, GPIOD BASE
    lw t1, GPIOD CFGLR(t0)
    andi t1,t1,\sim(0xf)
    ori t1,t1,1
    sw t1, GPIOD_CFGLR(t0)
pd0_on:
    # turn on LED connected to PD0
    li t0, GPIOD BASE
.pd0 on 1:
    li t1, 1
    sw t1, GPIOD_BSHR(t0)
    jal delay
pd0_off:
    li t1, 1<<16
    sw t1, GPIOD_BSHR(t0)
    jal delay
repeat:
    j .pd0_on_1
```

```
delay:
    li a0, 500000
.delay_1:
    addi a0, a0, -1
    beqz a0, .delay_end
    j .delay_1

.delay_end:
    ret

halt: j halt
```

7.5. Getting the UART working

The USART (Universal Synchronous/Asynchronous Receiver Transmitter) on the ch32v003f4p6 is on PD5 (GPIO Port D, pin 5).

Below is the code to print "Hello RISC-V" to the uart.

This is a long source file, so give it a quick read-through and I will go through the parts step-by-step.

```
src/ch32v003/uart/uart.S:
  /* uart.S prints hello world to the UART.
   * Connect PD5(uart TX) to the RX of your terminal.
   * 112500 8 N 1
   */
  .align 2
  .option rvc
  .equ RCC_BASE, 0x40021000
  .equ RCC_CTLR, 0x0
  .equ RCC_CFGR0, 0x4
  .equ RCC_INTR, 0x8
  .equ RCC_APB2PCENR, 0x18
  .equ FLASH_BASE, 0x40022000
  .equ FLASH_ACTLR, 0x0
  .equ GPIOD_BASE, 0x40011400
  .equ GPIOD_CFGLR, 0x0
  .equ GPIOD_BSHR, 0x10
  .equ USART_BASE, 0x40013800
  .equ USART_STATR, 0x0
.equ USART_DATAR, 0x04
  .equ USART_BRR, 0x08
  .equ USART_CTLR1, 0x0c
  .section .text
  .globl _start
      # load address _eusrstack (from linker script) into stack pointer
      la sp, _eusrstack
  RCC set 48MHz:
      li t0, RCC_BASE
      # set AHB divider to /1
      sw zero, RCC_CFGR0(t0)
      # turn on PLL
      lw t1, RCC_CTLR(t0)
      li t2, 1<<24
      or t1, t1, t2
      sw t1, RCC_CTLR(t0)
```

```
# set flash latency to 1 cycle
    li t2, FLASH_BASE
    li t1, 0x01
    sw t1, FLASH_ACTLR(t2)
    # clear PLL, CSSC, HSE, HSI and LSI ready flags
    li t1, 0x009F0000
    sw t1, RCC_INTR(t0)
    # wait till PLL is ready
    li t2, 1<<25
.rcc_ctlr_pll_not_ready:
    lw t1, RCC_CTLR(t0)
    and t1, t1, t2
    beqz t1, .rcc_ctlr_pll_not_ready
    # set PLL as clock source
    lw t1, RCC_CFGR0(t0)
    ori t1, t1, 0b10
    sw t1, RCC_CFGR0(t0)
USART_115200:
    # send clock to to USART(TX=PDr) and GPIOD to enable it
    li t0, RCC_BASE
    lw t1, RCC_APB2PCENR(t0)
    li t2, 1<<14 | 1<<5
    or t1, t1, t2
    sw t1, RCC_APB2PCENR(t0)
    # make GPIOD PD5 alternate function (serial)
    li t0, GPIOD_BASE
    lw t1, GPIOD_CFGLR(t0)
    li t2, ~(0b1111<<(4*5))
    and t1,t1,t2
    li t2, 0b1001<<(4*5)
    or t1, t1, t2
    sw t1, GPIOD_CFGLR(t0)
    # enable RX,TX on USART_CTLR1
    li t0, USART_BASE
    lw t1, USART_CTLR1(t0)
    li t2, 1<<2 | 1<<3
    or t1, t1, t2
    sw t1, USART_CTLR1(t0)
    # set BR R (bit rate register) 26.042 = 48MHz/(16 * 115200); 0.667 = 0.042*16 => round to 1
    li t1, (26<<4) + 1
    sw t1, USART_BRR(t0)
    # enable uart
    lw t1, USART CTLR1(t0)
    li t2, 1<<13
    or t1, t1, t2
    sw t1, USART_CTLR1(t0)
send msg:
    la a0, msg
    jal Put_string
    j halt
Put_string:
    li t0, USART_BASE
.puts_loop:
    lbu t1, (a0)
    beqz t1, .puts_leave
```

```
.puts_wait:
    # check TX E (TX Empty) in status register
    lw t2, USART_STATR(t0)
    andi t2, t2,(1<<7)
    beqz t2, .puts_wait

sw t1, USART_DATAR(t0)
    add a0,a0,1

    j .puts_loop

.puts_leave:
    ret

halt:    j halt
    .section .rodata

msg:
    .string "Hello RISC-V!\n"</pre>
```

Below is the initialisation code to turn enable GPIOD and the USART.

```
USART_115200:
    # send clock to to USART(TX=PDr) and GPIOD to enable it
    li t0, RCC_BASE
    lw t1, RCC_APB2PCENR(t0)
    li t2, 1<<14 | 1<<5
    or t1, t1, t2
    sw t1, RCC_APB2PCENR(t0)</pre>
```

Now that we have the clock running to GPIOD and the USART, we configure GPIOD to be alternate function and a push-pull output.

```
# make GPIOD PD5 alternate function (serial)
li t0, GPIOD_BASE
lw t1, GPIOD_CFGLR(t0)
li t2, ~(0b1111<<<(4*5))
and t1,t1,t2
li t2, 0b1001<<(4*5)
or t1, t1, t2
sw t1, GPIOD CFGLR(t0)</pre>
```

We now get to configuring the USART. The code below turns on the USART transmitter and receiver sections. We have not actually enabled the USART yet, we do this later by setting the UE (USART Enable) bit.

```
# enable RX,TX on USART_CTLR1
li t0, USART_BASE
lw t1, USART_CTLR1(t0)
li t2, 1<<2 | 1<<3
or t1, t1, t2
sw t1, USART_CTLR1(t0)</pre>
```

Proceed to set the Bit Rate Register then enable the USART.

```
# set BR R (bit rate register) 26.042 = 48MHz/(16 * 115200); 0.667 = 0.042*16 => round to 1
li t1, (26<<4) + 1
sw t1, USART_BRR(t0)

# enable uart
lw t1, USART_CTLR1(t0)
li t2, 1<<13
or t1, t1, t2
sw t1, USART_CTLR1(t0)</pre>
```

With a working USART, we can send a pre-programmed message. This message is stored in the .rodata (read-only data) section on flash.

```
.section .rodata
msg:
    .string "Hello RISC-V!\n"
```

Refer again to the ABI, function call parameters are placed in a0 through a5 on rv32c. If there are more parameters, we place them on the stack. The stack also holds function-local variables. I will explore this later with C function calls.

T 1 1	1 0	DIZAL	• .
labla	1 7	D(/3/)L	ragistars
Table	1 - /	$\mathbf{R} \mathbf{V} \cup \mathbf{J} \angle \mathbf{F}_{\mathbf{J}}$	registers

Register	ABI Name	Description	Storer
x0	zero	Hardcoded 0	-
x1	ra	Return address	Caller
x2	sp	Stack pointer	Callee
x3	gp	Global pointer	-
x4	tp	Thread pointer	-
x5-7	t0-2	Temporary register	Caller
x8	s0/fp	Save register/frame pointer	Callee
x9	s1	Save register	Callee
x10-11	a0-1	Function parameters/return values	Caller
x12-15	a2-5	Function parameters	Caller

Below is the function call to Put_string.

```
send_msg:
    la a0, msg
    jal Put_string
    j halt
```

la a0, msg: load address into a0, the address of msg

And here is the definition of Put_string.

```
Put_string:
    li t0, USART_BASE

.puts_loop:
    lbu t1, (a0)
    beqz t1, .puts_leave

.puts_wait:
    # check TX E (TX Empty) in status register
    lw t2, USART_STATR(t0)
    andi t2, t2,(1<<7)
    beqz t2, .puts_wait

sw t1, USART_DATAR(t0)
    add a0,a0,1

j .puts_loop

.puts_leave:
    ret</pre>
```

Let's walk through the interesting parts.

lbu t1, (a0): load byte unsigned with the byte pointed to by a0 into t1. The first time around the loop, this byte will be the first character of the msg.

beqz t1, .puts_leave: **b**ranch **eq**ual to **z**ero to label .puts_leave if t1 is zero. C strings are null (0, zero) terminated. Thus is we detect a zero, we are done and the Put_string function returns.

USART STAT R: the status register has a TX E (TX Empty) flag on bit 7. When this bit is set, the USART has sent the character in its buffer and is ready for the next character. If TX E is not set, we loop and check again.

sw t1, USART_DATAR(t0): We get to this line when TX E is empty. This means we are clear to send a character. Do this by writing the byte stored in t1 to USART DATA R.

When are done writing, advance a0 to point to the next character in msg, then repeat.