(WWM) Unit - II

Adsorption:-

Defination: Adsorption is a natural process by which molecules of a dissolved substance collect on and adhere to the Surface of an Adsorbent solid.

- -The Adsorbert is the solid material on which the adsorbate accumilates
- The Adsorbate is the dissolved substance that is being removed from liquid phase to the solid surface of the adsorbent.
- Adsorption may occur at the outer surface of the adsorbent and in the Macropoles, Mesopoles and micropoles in the inner cracks of the adsorbent.

Macropotes > 25 nm

Mesopotes > 1nm and < 25 nm

Micropotes ≤ 1nm

- Forces affecting adsolption:

The principal forces leading to sticking the adsolbate to the surface of the adsolbent solid are: in Vander weals forces

- (ii) Hydrogen bonding
- (iii) Dipole dipole Interactiony
- The following are main materials that are used as adsorbents.
 - Activated carbon
 - Silica
 - Synethetic polymera

Activated carbon is mostly used adsolbent in water treatment.

- Activated carbon is a specially treated carbon, which possess the property of absolving and attracting impurities, such as gasses, liquids and finely divided solids.

- It is available in granular as well as powder forms. It is highly polars, and Absorptive and thus very useful for removing phenol type impurities.
- Activated carbon is mostly used in powdered form, and may be added to the water either before or after the coagulation, but before filteration.
 - The most common method adopted is to add a postion in the mixing tank, and to add the remaining postion in water text before it enters the filter.
 - This method of using activated carbon at two stages is called split method. Activated carbon may be applied at a constant rate or at varying rate.
 - It may be applied either in a dry form or as a suspension or as a slurry. It use as a suspension in water and then fed into the water to be treated as shurry, is generally propered.
 - It use in paudered form may create problems, such as blown off due to winds. Nevertheless, in both the cases, the feeding equipment are similar to those used for adding coagulants.
 - The usual dose of activated carbon varies from 5 to 20 mg/th and optimum dose may be determined first in the laboratory and then in the field.

A'ctivated carbon as franclar Form:

- Activated carbon may also be used in the granular Form as a Filter media, instead of using Sand in the rapid Gravity filters or preferably in pressure filters
- with passage of time, it losses its absorptive powers and requires to be rejuvenated.

- This regenation is carried out by forcing the live steam upward through the perforated pipes placed in the gravel bed of filters.
- This process of regurenation may have to be carried out at interval of 1 month to 1 year, depending upon the quality of water being treated.

Advantages:

The use of activated carbon may thus serve the following advantages.

- (i) When used in powdered form before coagulation, it aids in coagulation.
- ii) It reduces the chlorine demand of treated water
- (iii) It removes the organic matter present in water
- iv) It removes the tastes, odorurs and colours caused by the presence of Iron, manganese, phenols, hydrogen sulphide etc. (v) Its overdose is not harmful.

Reverse Osmosis:-

- Osmosis: It is the natural tendency of pure water with a low concentration of dissolved solids (TDS) to travel through a semi-permeable membrane into a solution of higher TDs in older to balance the Solute levels on the both sides of the membrane.
- Reverse Osmosis is a membrane based demineralization technique used to separate dissolved solids such as ions from solutions. (Most applications involve water-based solutions).

Reverse osmosis offers an ideal method of water purification, by rejecting most dissolved solids as well as suspended solids.


Definition: Reverse Osmosis;

Reverse Osmosis is a process in which pressure greater than the natural osmotic pressure is applied on the high Concentration side of the membrane, forcing the water to travel through the membrane from the higher TDS to lower TDS chamber, thus "reversing" the natural tendency of water flow.

- Reverse Osmosis works on the Jame principle as Osmosis, but in the reverse direction that is way it is called Reverse Osmosis.)
- Reverse osmosis membranes also hold back suspended impurities. Such as silt, collodial particles and micro organisms by virtue of their ultra-fine pole site.

principle in Reverse Osmosis is a basically membrane Separation process to draw fresh water through a membranes from high TDS solutions (TDS=Total Dissolved solds) such as sea water, brackish water, Industrial effulent and other sources.

- In natural 08 mosis, when salt solution is separated from pure water by Semi-permeable membrane, the pure water flows across the membrane until the prevouve on the pure water side become equal to the osmotic prevouve of the Salt solution.
- But is reverse Osmosis process, the natural osmotic pressure is opposed by excerting an external pressure on the side containing the salt solution.

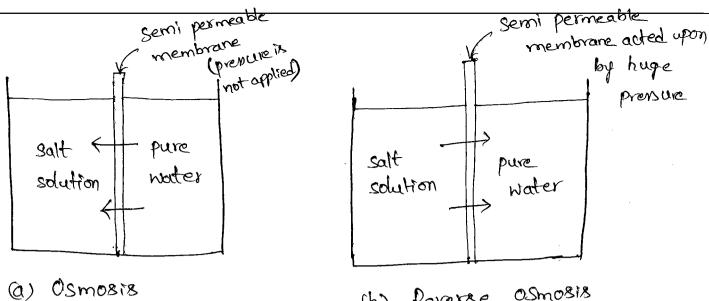

- (b) Reverse Osmosis
- The osmotic pressure is propositional to the TDS of the water and a pressure of atleast twice osmotic pressure is required to achieve an economically feasible flow.
- The Semi-permeable membrane used in this process is thin but dense and strong enough to withstand the high external prensure.
- there are 3 major types of membranes: (1) cellulose
 - (2) Fully aromatic polymide
 - (3) Thin Film Composite.

The pose site for R.o memborane is around 0.0001 le

- Reverse Osmosis does not work below 600 kg/cm² and usually operated at about 1000 kg/cm², presure.
- It should be ideally be tolerant of wide ranges of pt and temperate and should be resistant to attack by chemicals like free chlosine and by bacteria.
- Ideally, it should I also be resistant to scaling and Fouling by contaminants in the feed water.

Reverse 08 mosis Applications:

- 1. Sea water Desalination
- 2. pharmaceutical water purifications
- 3. Municipal water purification & Rural well water purification
- 4. Brackish well water Desalination
- 5. Laboratory water purification.
- 6. Industrial water purification
- 7. Bottled Drinking water production.
- In order to accurately measure the performance of an Reverse Osmosis system. We need following parameters.
 - (1) Feed pressure
 - (2) feed conductivity
 - (3) Feed flow
 - (4) permeate pressure, andudinity & flow
 - Higher salt rejection, the better the system is performing.

 Alow salt rejection can mean that membranes require cleaning or replacement.

onductivity of Feed water) - (pure water)

conductivity)

conductivity

conductivity

feed water

- The higher the recovery 1. means less water to drain as concentrate and saving more permeate water.

1. Recovery = permeate flow rate x 100. Feed flow rate

Ion Exchange:

principle: Reversible exchange of ions between the ions present in the solution and those present in the ion exchange resin.

- Ion exchange is an adsolption phenomenon where the mechanism of adsorption is electrostatic. Electrostatic forces hold ions to charged functional groups on the surface of the ion exchange resin.
 - _ The adsorbed ions replace ions that are on the resin surface on 1:1 charge basis.

 $R-H^{+}$ + Na^{+} \rightarrow $R-Na^{+}$ + H^{+} Example:

- Examples of Ion exchanges materials are: proteins, soils, coal metal oxides and Alumino silicates (Zeolites)

process :-

- The process here, however, uses a strong base anion exchange resin (Zeolite) in the chloride form.
- As the water passes through the bed of the resin contained in a pressure vessel, Flousides and other anions like Arsenic, nitrates etc. present in the water are exchanged with the chloside ions of the resin, thus releasing chlorides into water and adsorbing fluxades, nitrates, Assenic ions into the resin.
- when the resin gets saturated with anions like Fluoride, nitrate, Arsenic etc. as indicated by their increased Concentral in the out flowing water, the same can be cleaned regenerated with 5-104 sodium chloride solution (brine) and the bed is returned to service.

www.Jntufastupdates.com

7


- To ensure that a flow is maintained during regeneration, ideally 100% stand by units should be provided.
- During regeneration, the exchange process get reversed, as the anions absolved on the resin get replaced by chloride rons and discharged to waste water with chloride rons.
- The capacity of a plant based on this technology may range. from 500 l/h to 5000 l/h.
- Although the method ensures high efficiency of fluoride removal, yet it requires regular replacement of resin, and large amount of Salt (Nacl) for regeneration of resin Saturated with fluroides.
- The method is hence found to be very costly, pour after sales service in villages.

 Applications:
- Ca, mg (hardness removal) exchange with Na on H
- Fe, Mn removal from ground water
- Recovery of valuable waste products Ag, Au, U.
- Removal of NO3, NHu, poy (nutrient removal)
- Demineralization [exchange all cations for H all anions For oH).



Ultra filteration:

- Ultrafilteration (UF) is a variety of membrane filteration in which forces like prevoure or Concentration gradients lead to a Separation through a Semi-permeable membrane.
- Ultra filteration separates solids from liquid streams based on the principle of size exclusion.

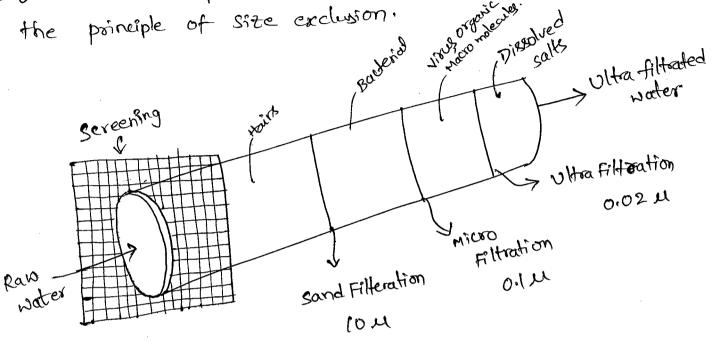

- Ultra filteration process similar to Reverse osmosis, using hydrostatic pressure folce to water through a semi-permeable membrane.
- The pose size of Utra filtration membrane is usually 103-106 Dalton
- Ultrafiltration is a pressure driven barrier to suspended solids, backing viruses, endotoxins and other pathogens to produce water with very high purity and low silt density.
- Suspended solids and solutes of high molecular neight are retained while water and low molecular weight solutes pass through the membrane.
 - Ultra filteration is not fundamentally different from Reverse asmossis Microfiltration, nano filteration, except in terms of the Spie of the molecules it retains.

pole site of membrane

Reverse osmosis - 0.0001 - 0.001 lm

Ultra Filtoation - 0.001 - 0.1 lm

Micro Fitration - 0.1 - 10 um

Sand filtration - 10 _100 lem.

- Ultrafitration membranes are used where exentially all Colloidal particles (including most pathogenic organisms) must be removed but most of the dixsolved solids may pass through the membrane without causing problems in the finished water.
 - Ultrafiltration will remove most turbidity from water.

working in

- Uther filtration uses hollow fibers of membrane material and the feed water flows either graside the shell of in the lumen of the fibers.
- Suspensed solids so high molecular weight solutes are retained, while water and low molecular weight solutes pass through the membrane.

Benifits:

- No need for chemicals (coagulants, Flocculates, disinfectants, pt addigt
- site exclusion filtration as opposed to media depth filtration.
- Good and constant quality of the treated water in terms of particle and microbial removal
- process and plant compactness
- Simple Automation
- Envison mentaly friendly.

Maintanance:

- Ultrafiltration system contains extremely fine membrane filters which need to be properly cleaned.
 - The cleaning process used depends on whenther a UF System is being used to remove organic or inorganic containments or both.
- To remove organic contaminants the general cleaning protocol for the cleaning of tubular membranes is to use a low foam, medium alkaline detergent at 0.6-11. For a maximum of 40-60 min.
- To remove Inorganic contaminants the best treatment is with. citaic acid at a maximum concentration of 3.1..

 The acid should circulate for 1-3 hrs.
- Hydrochlosic acid can also be used to clean membranes, as can oxalic, sulfusic and nitric acid.

Free ting;

- This method is based upon the principle that when salt water Freezes, ice formed in the beginning is almost Free from salt.
- This ice, when melted, can give us good water. The quality of water obtained is satisfactory, but the cost of production is high and prohibitive.

- When water freezes, the ice is theosetically free from the saline concentration of the water.
- Basically, a Freezing process involves cooling the incoming sea water, freezing it to obtain Fresh water ice, separating the ice and brine liquid, melting the ice to give Fresh water and using the purified water and concentrated brine to chill the incoming sea water.
- There are Four basic components in all Freezing desalination processes; in Freezer (ii) Washer (iii) Melter (iv) Heat Removal Systems.
 - in Freezer: A freezer consists of a vessel in which ice crystals and vapour are formed Simultaneously.
 - In this heat removes from the brine in older to produce ice crystals which can be easily transferred, removed, separated, washed and then melted.
 - The design and operation of the freezer are to producing high proposition of discrete ice crystals rather than clumps of ice so that the amount of brine entrapped between the crystals formed is minimised.
 - The size of ice crystals are formed is very important because

 Fine crystals are difficult to Wash. (size of ice crystalls is

 0.5 mm size i.e., minimum)

 (ii) Washerr
 - Ice crystals formed in the Freeter are pumped as slurry to the washer where ice crystals are separated from the brine.


The counter current wash coloumn is usually utilized as the washer, in which a small part of the product Freshwater, flowing in a direction counter to that of ice motion, is used to wash the ice to remove the brine adhering to the crystal surfaces.

(iii) Melter:-

- In the melter the ice from the Washer is usually melted by Transferring the heat of crystallization removed from the brine Pn the Freezer to the melter
- This is usually done by discharging the refrigent into the meller where the ice picks up heat and mells.

(1) Heat exchangers:

- Heat exchangers are used between the product and Feed water streams in order to reduce the temperature of the feed water and conserve energy.

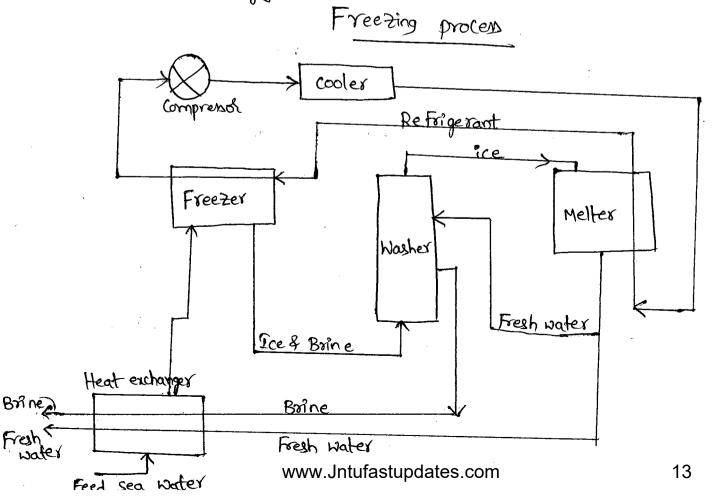


procey:-

- In this process saline water doesnot come into contact with refrigerant directly. Ice is formed on a surface by mechanical refrigeration.
- A feed sea water is first pumped through a heat exchanger, to reduce its temperature, then entered into the Freezing chamber where it is cooled Further to the temperature at which ice crystals are Formed.
- The ice and brine slurry is pumped to a wash colourn where the ice and brine 98 separated.
- The ice is Transported to the melter, where ice is melted by heat released from Condensation of Compressed refrigerant.
- A Small part of the product Fresh water is porsed to the wash colourn and is used to wash the ice crystals and major part is parsed through the heat exchanger to cool the Feed Sea water and Ps then discharged for Storage.
 - The brine From the Walh column is returned to the heat exchanger to cool the Feed sea Water and dix carded.
 - The Freezing process will be to. widely used in the Field of Industrial waste water Treatment and Food Industry.
- The Equipment used in the process is complex, expensive and difficult to operate and maintain.
 - Therefore this process is selding utilized practically in desalination

Elutriation 1-

- Elutration is a process for separating particles based on their Site, shape and density, using a stream of gas or liquid flowing in a direction usually opposite to the direction of sedimentation.
- This method is mainly used for particles smaller than Illm.
- In Fluthation, movement of fluid against the direction of sedimentation of the particle.
- The apparatus consists of a vertical column. An inlet near the bottom and outlet at the base for coarse particles.
- An overflow near the topfor Fluid and fine particles.
- velocity gradient across the tube results in the separation of particles of different sizes.

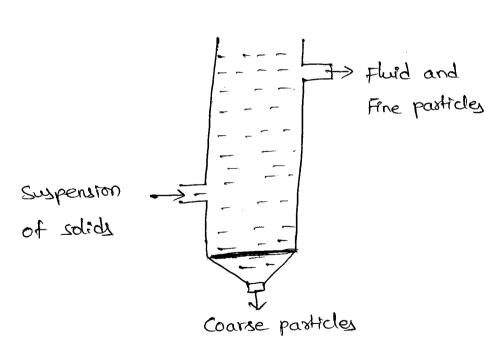

Simple Apparatus for Elutriation of Water

Elutivation of sledge:

It is the process of washing the sludge to remove the organic and fatty acids.

- During the sludge digestion, the volatile acids, alcohols and organic acids are developed, which if not removed, will interfere with coagulation process during dewatering.
- If elutilation of sludge is done befole the dewatering or concentration it will much reduce the quantity of cogulants.
 - Sludge elutriation is carried out in a single or multiple tasks by worthing the sludge with water.
- During washing the solids are continuously kept is suspension by air. or mechanical ogitation.
- There are 3 methods of elubration (1) Single Stage
 (2) Multiple stage
 - (3) Counter Current Washing. the water requirement being dependent upon the method weed.
- Fol a given alkalinity reduction, single stage elubriation requires 2.5 times as much water as the two stage and 5 times as much water as counter current washing.
- Therefore single stage washing is used tol small plants.
 - Counter current washing, although higher in Initial cost, is adopted in large plants.
- water requirement also depends on alkalinity of dilution water, alkalinity of elutriated sludge and desired alkalinity of sludge.
- sludge and water we mixed in a chamber with mechanical mixing arrangement, keeping 20 secs detention period.
- The sludge is then settled in settless settling tanks and excens water decarted.

- The maximum surface loading on settling tank may be 40 m3/m1/day with a detention period of 4 hours.
- Counter current elutriation is generally carried out in twin tanks similar to sedimentation tanks, in which sludge and water enter at opposite ends.
- piping and channels are so provided that wash water entering the second stage tank comes first contact with sludge already washed in the First stage.
- About 2-3 times quantity of wash water is required than sludge volume elutriated


Removal of Iron and Manganese:

- Iron and Maganese are generally present in water supplies, either in suspension as hydrated oxides or in solution as bicarbonates.
- water has iron diresolved in it as the result of carbon dioxide Coming in contact with iron one to form solvable Ferrous bicarbonate.
- Iron in natural waters may be in Ferric or Ferrous condition, soluble, colloidal or insoluble.
- when Manganese is also associated with iron, removal becomes more difficult.
- When they are present in amounts greater than 0.3 ppm, either alone or as total, the following objectionable effects may be noted:
 - (ii) Locum letin a sili in fixtures, obthing and textiles.
 - (iii) Accumulation of precipitated iron in water mains.

17

- iv) Growth of Crenothrix in water mains.
- (1) Cause troubles in various manufacturing processes.
- (vi) Sulphate iron cause acidity and corrosive action on Iron and Bray.
- The Reddish tinge in water is due to presence of ison while the Brownish tinge is due to presence of Manganese.

method: D when Iron and Manganese occur in water without organic matter, they can be removed by aexation, followed by coagulation Sedimentation and filteration.

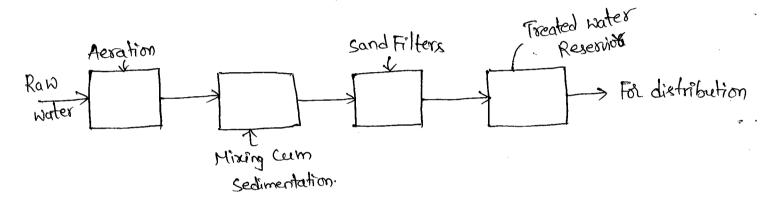

Flow diagram of Iron and Manganese removing plant

- By Aeration, dissolved Iron is oxidized to Ferric oxide which is insoluble in water. Similarly, dissolved Manganese Compounds are convexted to insoluble Manganese Compounds.
- The precipitated floc can be settled down in settling tanks or be Further removed in Gravity or pressure Filters.

 The following reaction takes place:
 - (i) 4Fe + 02 + 10 H20 -> 4Fe (OH)3 1 + 8H.

A reaction period of about 5 minutes or less, at a pH of 7 to 7.5 and 0.14 mg of oxygen is required to convert 1 mg of Ferric Iron to Ferric hydroxide.

(in When Iron is present as Ferrous bicarbonate.

Fe (
$$Hco_3$$
)₂ + $2H_2o$ \rightarrow FeO + $2co_2$ + $3H_2o$
4FeO + 0_2 \rightarrow $2Fe_2o_3$
Fe₂0₃ + $3H_2o$ \rightarrow $2Fe$ ($9H$)₃ $1/2$

Here also, we find that 0.14 mg oz ix required for Img of Iron.

(iii) In case of Manganese, the tollowing reaction takes place:

6Mn + 302 + 6H20 -> 6Mno2 V + 12H

It shows that I mg Mn requires 0.29 mg of 02.

Mangarese removal requires a pH adjustment upto 9.4 to 9.6

- This method of Iron and Manganese removal is most extensively used.
- In order to accelerate the oxidation particularly in waters with high co2, addition of line, soda ash or caustic soda is done.
- Combination of Iron and Manganese, or Iron alone, loosely bound to organic matter, make their removal difficult. The bond between them is broken by adding lime and they raising pH value more than 9, so that Iron & Manganese Can be precipitated.

Another method 2

- When water does not contain large amounts of Iron or Manganese these can be removed by means of a Manganese Zeolite.
- As Raw water passes through the bed of zeolite, the Dronand

- Manganese are oxidised to insoluble hydrated oxides that are removed by Mechanical Filtering action of the Zeolite bed.
- The bed must be washed and must be regenerated occasionally with potassium permanganate.

Another method: (3)

- oxidation of Iron compounds may also be obtained by Chlorination Followed by Sedimentation and Filteration.
- Iron and Manganese can be removed in oxidized condition, by softening water by excess lime process.
- AS pH of 8.2 is needed For Iron removal while a pH of 9.6 is needed For removal of manganese.

Removal of Colour and odour:

- The colour, odour in the water come due to presence of dissolved gases such as hydrogen sulphide, Organize matter, Micro organisms and Contamination due to Industrial wastes containing phenol, excessive chlosine etc.
 - The Following are the various treatments which are used in removing the colour and odeur.
 - (a) Aeration
 - (b) Treatment with Activated carbon.
 - (C) Treatment with Copper Sulphate
 - (d) Oxidation of organic matters.

- (a) Aexation: It is the process of bringing water in intimate contact. With air, while doing so the water absolbs ougen from the air.
 - The co2 gas ix also removed upto 70% and upto Certain extent bacteria are also killed. Iron and Maonganese and H2S gas are also removed upto Certain extent. from the water.
- Following are the various methods of aeration which are commonly used is By air diffusion:
 - In this method perforated pipes are fixed in the bottom of the settling tanks.
 - The Compressed air is blown through the pipes which comes out in the form of bubbles and Stirr the whole water at greater speed.
 - During the upward moment of air it is thoroughly mixed with water and does its aeration.
 - The Aeration tanks are usually made 2.5 to 3 m deep and work on the principle of continous flow, having minimum detention period of 15 minutes.
 - The quantity of air consumed varies from 0.3-0.6 cum per 1000lt of water.

in By Trickling beds:

- -In this method the water is allowed to flow on the Trickling beds of coke, which are supposted on the perforated bottom of the Trays.
- The water is allowed to Trickle From the top to the bottom under gravitational Foice. During this downward movement, the water gets mixed up with air and the aeration takes place.

- The size of coke tray ranges between 50-75 cm.
- The efficiency of this method is more than "Cascades" but it is less effective than the method of spray norther.

(iii) By using spray nottles:

- In this method the water is thrown up in the cur into fine sprays to a height of 2-2.5 m under prenure of 0.7-1.15 kg/cm?
- When small particles of water come in contact of greater surface area of the air, they absolb it and the water is Aerated.
- The dissolved gases like H2S, co, etc escape into the atomospher, and the oxidation of various substances and organic matter takes place.

iv, By using cascades:

- In this method the hater is allowed to fall over a series of concrete steps or over a weis etc. in thin film.
- During the fall, the water gets throughly mixed with air and gets Aerated.
- -> Excessive Aeration Should not be done, otherwise excessive absolption of Oz will increase the corrosive property of water and it may require de-aeration process.

(b) Treatment with Activated Carbon:

- Activated carbon is the most widely used stabstance for removal of Tastes and odours. From public water supply, because it has excellent properties of attracting impurities, such as gases, Finely divided solid particles and other liquid impurities.

- Activated carbon is usually used in prodered form and may be added either before and or after coagulation with sedimentation. But it 18 used always before Filteration
- Activated Carbon Can also be used in granular form as a filter media, instead of using sand in the rapid gravity Filter. But if used. as filter media of prenure filters, it will be much better.

Advantage:

- 1. If used in powder Form it will increase the coagulation power of the process.
- 2. The chlaine demand of the water is reduced after using adivated
- 3. The activated carbon removes tastes, odour & colour which are due to presence of Iron, Manganes, phenols, Hzs, chlorine, coz etc.
- 4. The excessive dose of activated carbon is not harmful.
 - 5. The process is simple requiring less skill.

(C) Treatment with copper sulphate:

- copper sulphate (cusoy. 7Hzo) also helps in removing colours, tasterand odours from water.
 - The advantages of copper sulphate is that it checks the growth of algae even befole its production, and also kills some bacteria.
- It is usually applied at the rate of 05-0.65 mg/lt to the treated water, before it is allowed for distribution in the mains.
- The Solution of copper Sulphate is generally prepared and added Just at the entry of the water in the distribution mains. Et can also be added in the clear water stolage reservoirs.

- It can also be added in the lakes or impounded Reservoirs for the prevention of algae growth, but if excessive dose is added it will the fish and other living creatures, so quantify of dose should be proposly determined in habolatory and check it.

(d) By oxidation of organic matter:

- chlorine, potassium permaonganate, ozone etc are oxidising agents which are commonly used.
 - The dose of potassium permanganate varies from 0.05-0.1 mg/lt. chlosine also helps in the removal of organic matter in addition to its disinfection work, if added beyond breakpoint chlosination (or) super chlosination followed by dechlosination.
- chlotine dioxide gas and otone can be used For oxidation purpose, but due to their heavy cost, they are uneconomical, hence are not used anywhere.

Use of Munipal waste water in Industries:

- Munipal waste water Reuse has been increasing particularly in countries where Shortage of water Resources is severe.
- A sucessful reuse application of waste water depends on many factors of which quality and quantity very useful.
 - The presence of Heavy metals, pollutants and other Toxic organics can effect health without treatment.
 - For direct and Indirect distribution systems, the muncipal waste water used in Industries is 7-8%.