

Part Number: PT974-35250**Kit Contents**

Item #	Quantity Reqd.	Description
1	2	Tow Hook
2		
3		

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	Notes
Gloves	
Safety Glasses	
Special Tools	Notes
Installation Tools	Notes
Socket	17mm
Ratchet	
Torque Wrench	0-100Nm
Special Chemicals	Notes

General Applicability

MY24- Tacoma

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Legend

 STOP:	Damage to the vehicle may occur. Do not proceed until process has been complied with.
 OPERATOR SAFETY:	Use caution to avoid risk of injury.
 CAUTION:	A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
 TOOLS & EQUIPMENT:	Used in Figures calls out the specific tools and equipment recommended for this process.
 REVISION MARK:	This mark highlights a change in installation with respect to previous issue.
 SAFETY TORQUE:	This mark indicates that torque is related to safety.
 REGULATORY MARK:	This mark indicates the component is related to regulatory compliance

Procedure


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

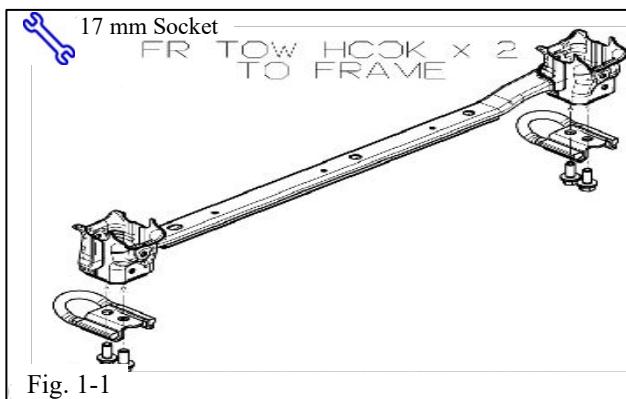


1. Remove OEM Tow Hook (LH and RH Side of Vehicle)

- (a) Remove 2 (17mm) bolt from OEM Tow Hook, keep bolts (Fig. 1-1 and 1-2)
- (b) Remove OEM Tow Hook

2. Install Tow Hook (LH and RH Side of Vehicle)

- (a) Position Tow Hook and align to mounting holes
- (b) Install OEM bolts and tighten down evenly.
Torque = 87Nm (64ft/lbs) (Fig. 2-1)

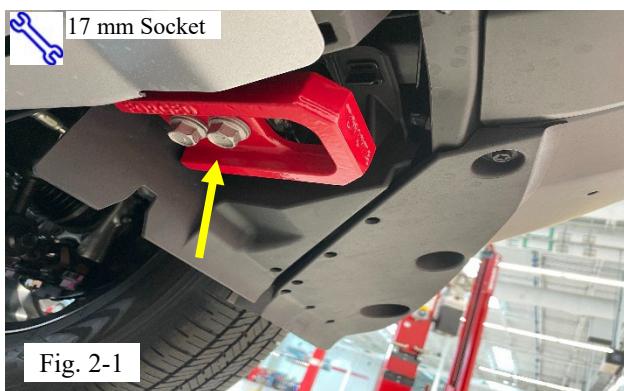

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Accessory Function Checks

- Verify parts:
- Insure Hardware Torque
-
-

Look For:

Removed items have been discarded &
replaced items are in place
Torque = 87Nm (64ft/lbs)

Vehicle Function Checks

-
-
-

Vehicle Appearance Check

- After accessory installation and removal of protective cover(s), perform a visual inspection.

Ensure no damage (including scuffs and scratches) was caused during the installation process.