High-Performance Computing Networks at BYU

Lloyd Brown

October 11, 2011

- 1 Outline
- 2 What is HPC?
- 3 Types of HPC
- 4 Infiniband
 - Terminology
 - Physical Layer Characteristics
 - Encoding
 - Measured Performance
 - Bandwidth Comparison
 - Latency Comparison
 - Subnet Management
 - Topologies
 - Upper Layer Protocol Stack Components
 - Other Considerations Expense
- 5 Questions

What makes a supercomputer, super?

HPC or High-Performance Computing, is characterized by workloads and hardware requirements

- Significantly larger compute capability than an average system
- Used to solve problems that are too large to easily be solved on a single, traditional system
- May utilize specialty hardware and software
- No specific threshold for capacity

Nature of HPC Computing

In HPC, speedup comes from one of two sources:

- Using faster resources (eg. faster clock speeds)
- Using more resources (eg. using more processors) or Parallelism

Physics generally limits us on the faster resources, so we spend more time on parallelism.

Parallelism and Communication Needs

- When utilizing multiple resources (eg. multiple processors), the program must:
 - Split up the workload
 - Provide necessary coordination among resources
- The algorithm and data determine the nature of communication needs
- In general, for HPC problems, communication is key.

What kinds of HPC systems are out there?

There are two major categories of HPC systems:

- Systems which utilize specialty hardware, including:
 - Processors
 - Vector Processors (eg. Cray)
 - Specialty Serial Processors (eg. Itanium, Power5, etc.)
 - Accelerators
 - GPU
 - Intel MIC
 - FPGA
 - Cell
 - Specialty/Proprietary Interconnects
 - Infiniband
 - NUMALink
- Commodity Hardware:
 - Stock processors (eg. x86, x86 64)
 - Stock interconnects (Ethernet)

What is Infiniband? And why do I care?

Infiniband is the most common high-performance interconnect used in HPC. It:

- is switched-fabric architecture (more like Fibre Channel than like Ethernet)
- utilizes multiple speeds, lanes, and links
- provides:
 - extremely high bandwidth
 - $lue{}$ extremely low latency (one-way < 10 μ s, compared to approx. 32 μ s for 1GbE)
- Speedup comes mostly from:
 - Short protocol stack (very little above layer 2)
 - Low-latency switching (very little decision making in the switch)
 - Remote Direct Memory Access (RDMA)

Terms

- HCA Host Channel Adapter The interface device that connects a host to the network
- GUID Globally-unique Identifier; hardware address on each HCA or switch; like a MAC address
 - LID Logical Identifier (address) assigned by the subnet manager to the HCA; kinda like an IP, but resides in the upper part of layer 2
 - SM Subnet Manager, a hardware or software device that assigns LIDs to GUIDs, and pre-loads the switch forwarding tables

Lanes/Links/Speeds

Infiniband utilizes multiple lanes per physical link. Each link has a certain speed based on the standard:

	SDR	DDR	QDR	FDR
1x	2.5 Gb/s	5 Gb/s	10 Gb/s	14 Gb/s
4x	10 Gb/s	20 Gb/s	40 Gb/s	56 Gb/s
12x	30 Gb/s	60 Gb/s	120 Gb/s	168 Gb/s

Encoding Overhead

Infiniband uses bit-line encodings to guarantee bit transitions for clock synchronization:

- SDR, DDR, QDR 8b/10b encoding (8 data bytes encoded in 10 bytes total; 20% overhead)
- FDR and beyond 64b/66b encoding (64 data bytes encoded in 66 bytes total; 3% overhead)

	SDR	DDR	QDR	FDR
1x	2.5 Gb/s raw	5 Gb/s raw	10 Gb/s raw	14 Gb/s raw
	2 Gb/s net	4 Gb/s net	8 Gb/s net	13.6 Gb/s net
4x	10 Gb/s raw	20 Gb/s raw	40 Gb/s raw	56 Gb/s raw
	8 Gb/s net	16 Gb/s net	32 Gb/s net	54.3 Gb/s net
12x	30 Gb/s raw	60 Gb/s raw	120 Gb/s raw	168 Gb/s raw
	24 Gb/s net	48 Gb/s net	96 Gb/s net	162.9 Gb/s net


Performance at BYU's FSL

The graphs shown in the next couple of slides represent the bandwidth and latency performance of 4xDDR Infiniband vs 1Gb/s Ethernet at the Fulton Supercomputing Lab.

- All tests were performed host-to-host with one intervening switch (eg. host-switch-host)
- All tests utilize increasing message sizes, to demonstrate where one effect ends and the other starts
- Tests were performed using the "osu_bw" and "osu_latency" binaries from the OSU Micro-Benchmarks for MPI (see http://mvapich.cse.ohio-state.edu/benchmarks/)


Infiniband

Measured Performance

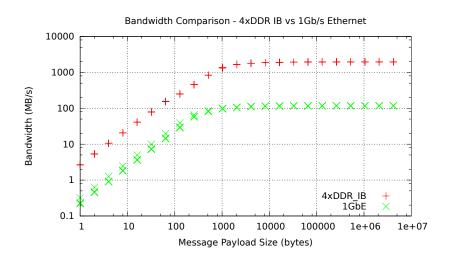

__Infiniband

Measured Performance

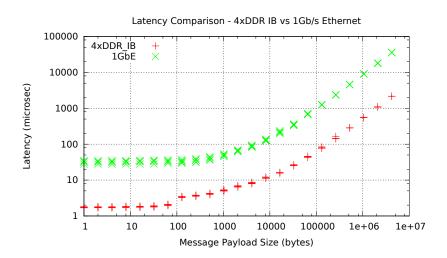

How Infiniband is Managed

Infiniband is designed as a trusted network. The network is managed by a *subnet manager* which does the following:

- Periodically sweep the network, looking for topology changes, checking for errors, etc.
- Build a cohesive model of the network topology
- Load the switch forwarding tables with the LID/Port mapping

└─ Topologies

Infiniband Topologies

Infinband puts very little restriction on the physical topology of the network. Basically, since the Subnet Manager loads all the forwarding tables, as long as you can build an appropriate graph parsing algorithm, and implement it in a subnet manager, you can use a topology. This allows some much more interesting topologies than the common Ethernet and TCP/IP networks usually use. 1

¹Technically you can use any topology with Ethernet and TCP/IP as well, but it takes a huge amount of work, with lots of VLANs and stub routers, etc., to work around the Spanning-tree protocols. I don't recommend trying it.


└─ Topologies

Possible Topologies

- Tree/Fat-Tree
- Fully-connected Mesh
- Rectangular Mesh
- Toroidal Mesh
- Hypercube
- Folded-Clos Network


Fat Tree Example

A Fat Tree is basically a tree with increased bandwidth (faster links or more links) between upper tiers relative to lower tiers

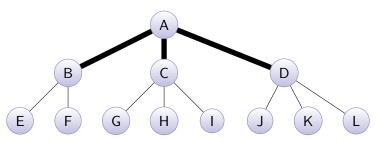


Fully-connected Mesh Example

Shortest hop-count (1 hop) from any point to any other point; takes a huge amount of cables.

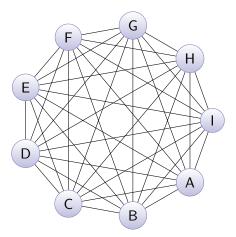


Rectangular/Toroidal Mesh Example

Excellent for large topologies (no spine switches to buy); higher hop count than other options, depending on size

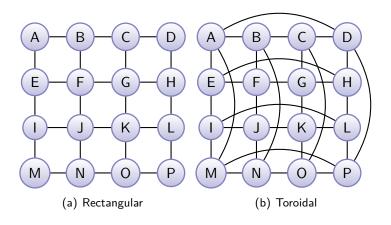

Hypercube example (4-d)


Used rarely; for d dimensions, no more than d hops from any other point in the topology.

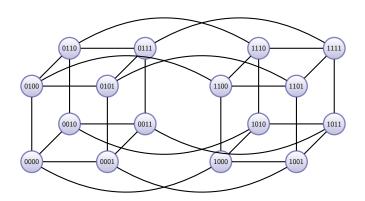

L_Topologies


Folded Clos Network Example

Most common approach for small or medium-scale Infiniband fabrics; each leaf has 1 link to each spine

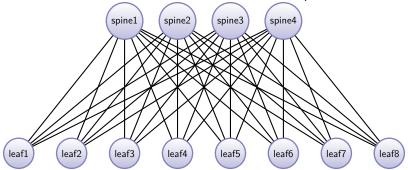

└_ Topologies

BYU Supercomputing's Clos Network

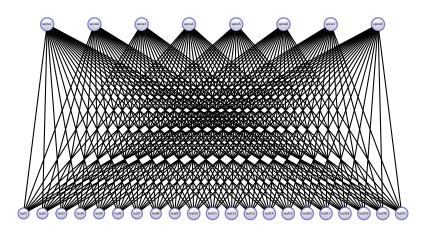

Upper Layer Stack

The protocol stack includes several optional components to enable application communication:

- SRP SCSI RDMA Protocol Block Storage Protocol; competing with iSER
- iSER iSCSI extensions for RDMA Block Storage Protocol; competing with SRP
- IPolB IP over Infiniband not the most efficient, but works
- Verbs Native IB API for general application use
- SDP Sockets Direct Protocol basically sockets protocol for IB

Upper Layer Protocol Stack Components

Other (usu. Proprietary) Extensions

Other extensions exist, usually implemented in a proprietary fashion, including the following:

FColB Fibre-Channel traffic over IB

ETHolB Ethernet over IB

FlexBoot PXE-like network booting

Message Passing

Any application can utilize IB, if it is written or ported to do so. In HPC, most applications use a message-passing library like MPI, which in turn uses the Verbs API to do its work. Several dozen MPI implementations exist, but the most common

- OpenMPI
- MVAPICH
- Intel MPI
- HP/Platform MPI

that can utilize Infiniband are:

Costs

In general:

- Gigabit Ethernet comes on-board for most hosts, so it has very little cost
- 10-Gigabit Ethernet is coming on-board for some hosts
- Per-port cost for 4xQDR Infiniband (40 Gb/s) is usually less than 10-Gigabit Ethernet, but this changes
- Infiniband HCAs can be repurposed (via firmware change) to be 10-Gigabit Ethernet NICs

Questions?

Any questions?