Lab 1-2

Microprocessor Architectures [ELEC-H-473] RiSC16: internal processor behaviour 1-2/4

v1.1.1

Introduction

This lab is about the internal behaviour of a RISC processor and goals are to:

- understand the internal behaviour of a simple processor
- write and test some programs in assembly code for this specific RISC processor
- watch this code running in simulation

You will use a RiSC16 processor which is a RISC processor developed for teaching by BRUCE JACOB (University of Maryland) for a course about microelectronics. This processor based on a Harvard architecture works on 16-bit data and instructions. It has 8 instructions, one 8×16 b-register bank, 256-word RAM and ROM are available.

The simplicity of the instruction set allows a quick learning curve and is enough to address complex problems. The internal structure of the processor is simple enough to be represented in a didactic way like on Figure 1.

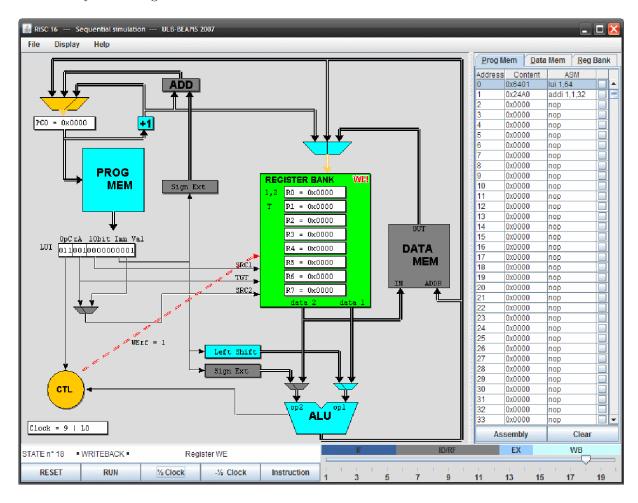


Figure 1: RiSC16 - Simulation view

The user interface has 4 zones:

- the lower part groups the interaction possibilities: buttons provide reinitialisation (reset),
 execution (run), half-cycle execution, instruction execution and undo last instruction capabilities.
- The text zone above displays general informations about instruction execution. The cursor on the right can be used to follow each step of instruction execution and can be used to jump at any step of this instruction.
- The zone on the right shows and allows editing program and data memory. A third tab shows register, they can also be modified.
- The central zone shows the microprocessor representation

1 Processor description

Several blocks are used in this microprocessor:

- Program memory (PROG MEM) and Data memory (DATA MEM) Harvard architecture
- Internal register bank (Register Bank) to store operands and computation results. Register 0 (reg0) has a special meaning: it is a read only register containing the 0 value. A write in reg0 has no effect.
- The Arithmetic and Logic Unit (ALU) is used to execute the operations needed to execute instructions. Complement to 2 arithmetic is used. 4 operations are possible:
 - 1. add two operands, used during ADD, ADDI, LW, SW
 - 2. bitwise NAND of two operands, used obviously during NAND
 - 3. no modification, result is OP1, used during LUI, JALR
 - 4. operand comparison, used during BEQ
- The Control Unit (CTL) decodes the opcode and configure other blocks accordingly. It's synchronised on the clock and can be used for rising edge or falling edge operation.
- The program counter PC0
- The instruction register
- The incrementer +1
- The adder (ADD) to compute the address for jumps (Branch with BEQ)
- The immediate value converter (left shift and sign extension)

Blocks are linked together using buses with width of 1, 3, 6, 10 or 16 bits. Control signals are:

- WE_rf: write in register bank
- FUNC_alu: operation to use
- Mux_rf, Mux_alu (1, 2), Mux_tgt, Mux_pc : select multiplexer input
- WE_dmem: write in data memory
- PSEN : read from program memory.
- WE_PCO: write data into PCO.

The instruction set has 8 elementary instructions. None of them can be replaced by any combination of other instructions and complex problems can be solved using only these 8 instructions. This architecture is RISC at its fate.

1.1 Instructions detailed description

Each instruction and how to code it is described below.

1.1.1 ADD : $R [regA] \leftarrow R [regB] + R [regC]$

bits	3	3	3	4	3		
ADD	000	regA	regB	0000	regC		

Adds content from regB with content from regC and writes result in regA.

1.1.2 ADDI (ADD immediate) : $R [regA] \leftarrow R [regB] + immed$

bits	3	3	3	7
ADDI	001	regA	regB	signed immediate

Adds content from $\tt regB$ with an immediate 7-bit signed constant (-64 to 63) extended to 16-bits. Writes result in $\tt regA$.

1.1.3 NAND : $R[regA] \leftarrow NOT(R[regB] \& R[regC])$

Bitwise NAND using content from regB and regC. Writes result in regA.

1.1.4 LUI (LoadUpperImmediate) : $R [regA] \leftarrow immed << 6 \& 0xFFC0$

bits	3	3	10
LUI	011	regA	immediate (0 to 0x3FF)

Immediate 10-bit constant sign extended and written in regA.

1.1.5 LW (Load Word) : $R [regA] \leftarrow Mem [R [regB] + immed]$

bits	3	3	3	7
LW	100	regA	regB	signed immediate

Reads a word in memory at address (regB+immediate). Immediate 7-bit constant is sign extended to 16-bit before the addition. This is an indirect addressing with offset.

1.1.6 SW (Store Word) : $R [regA] \longrightarrow Mem [R [regB] + immed]$

Writes the content of regA to memory at address (regB+immediate). Immediate 7bit constant is sign extended to 16bit before the addition. This is an indirect addressing with offset.

1.1.7 BEQ (Branch if EQual):

$$\begin{aligned} \text{if } R \left[\text{regA} \right] =&= R \left[\text{regB} \right] \left\{ \text{PC} \longleftarrow \text{PC} + 1 + \text{immed} \right\} \\ \text{bits} & 3 & 3 & 7 \\ \text{BEQ} & \boxed{110} & \text{regA} & \text{regB} & \text{signed immediate} \end{aligned}$$

Compares content of regA and regB. If equal, PC is updated to $PC_{BEQ} + 1 + immed(extended)$ else PC is just incremented by 1.

1.1.8 JALR (Jump And Link using Register) : $PC \leftarrow R [regB], R [regA] \leftarrow PC + 1$

Jumps to address stored in regB. Writes PC+1 in regA. This is a call with saved return address.

1.2 Pseudo Instructions

Other (pseudo-)instructions can be used:

1.2.1 NOP

$$NOP = ADD 0,0,0$$

This instruction does nothing because writing to reg0 has no effect (reg0 is read only).

1.2.2 RESET

This pseudo instruction changes PC to 0 and thus resets the processor. Registers and data memory remain unchanged.


1.2.3 MOVI

MOVI rx,imm(16bits) = LUI rx, immH(10bits); ADDI rx,rx,immL(6bits)


This pseudo instruction can be used to load a 16-bit immediate constant to reg(rx). Two instructions are used to perform this pseudo instruction. LUI loads the upper 10 bits and ADDI loads the 6 lower bits. To avoid any unexpected side effect during assembly, be sure to add a NOP after this instruction. The NOP will be replaced by the ADDI instruction.

Depending on their size, immediate constants are extended to 16 bits:

Immediate 7bit signed constants (from -64 to 63) are sign-extended to 16 bits before they are used.

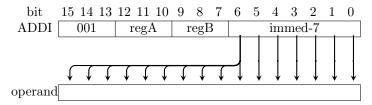

- Immediate 10bit constants are unsigned numbers from 0 to 1023.

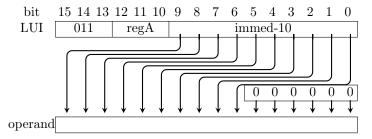

1.2.4 HALT

This pseudo instruction stops the simulator.

1.3 Instruction execution

All instructions are executed in 4 stages:

- 1. IF *Instruction Fetch*: instruction is copied from the program memory to the instruction register
- 2. ID/RF Instruction Decode/Register Fetch: instruction decoding and operand extraction
- 3. EX Execute: instruction execution in the ALU
- 4. WR Write Back: result saving or data memory access

As the RiSC-16 is a RISC architecture¹, all instructions have the same execution time, which is 20 half clock-cycles. Control signals are activated considering the slowest instruction, which is BEQ. The details of a machine cycle (execution of one instruction) are detailed in Table 1 on the next page.

¹Incredible, isn't it?

LEC-H-473]
LEC-H-473] Microprocessor Architectures: RiSC16 $1-2/4$
${\bf Architectures:}$
$RiSC16\ 1-2/4$

Stage:		IF			ID/RF			EX				WB			
Half-cycl	e: 1	1-2-3	4-5	6-7	8	9	10 – 11 – 12	13–14	15–16	17		18		19	20
ADD 0	00 1	ROM	IR	CTL+RF(src1)	$CTL+Mux_RF+RF(src1)$	Mux_RF	RF(src2)	ALU		Mux_PC		RF+Mux_	РС	RF+PC	RF+PC
ADDI 0	01 1	ROM	IR	CTL+RF(src1)+Sign_ext	CTL+RF(src1)			ALU		Mux_PC		$RF+Mux_{_}$	$_{\mathrm{PC}}$	RF+PC	$_{\mathrm{RF+PC}}$
NAND 0	10 1	ROM	IR	$\mathrm{CTL} + \mathrm{RF}(\mathrm{src1})$	$CTL+Mux_RF+RF(src1)$	Mux_RF	RF(src2)	ALU		Mux_PC		RF+Mux	PC	RF+PC	$_{\mathrm{RF+PC}}$
LUI 0	11 1	ROM	IR	CTL+Left Shift	CTL			ALU		Mux PC		RF+Mux	РС	RF+PC	$_{\mathrm{RF+PC}}$
LW 1	.00 1	ROM	IR	CTL+RF(src1)+Sign ext	CTL+RF(src1)			ALU	datam	datam+Mux	PC	RF+Mux	PC	RF+PC	$_{\mathrm{RF+PC}}$
SW = 1	.01 1	ROM	IR	CTL+RF(src1)+Sign ext	CTL+Mux RF+RF(src1)	Mux RF	RF(src2)	ALU	datam	datam+Mux	PC	Mux PC		PC	PC
BEQ 1	10 1	ROM	$_{\rm IR}$	CTL+RF(src1)+Sign ext	CTL+Mux RF+RF(src1)+ADD	Mux RF+ADD	RF(src2)	ALU	CTL	CTL+Mux P	С	Mux PC		PC	PC
JALR 1	11 1	ROM	IR	CTL+RF(src1)	$CTL+RF(\overline{src1})$	_		ALU		Mux_PC _		$RF+\overline{Mux}_{_}$	PC	RF+PC	RF+PC

Table 1: Detailed instruction processing

2 Simulation dynamics

Most elements are asynchronous, which means that no register buffers data between blocks but the control unit:

- is synchronous to the clock
- provides control signal WE just after clock rising edges for write operations to the PC, to the register bank and to the data memory.
- provides a read in ROM signal PSEN just after a clock rising edge, which provides a synchronisation on instruction reading. An instruction is extracted each 20 ½ cycles precisely.

The simulator aims at exposing in detail the internal processor behaviour during execution. To highlight and ease understanding, three colors are used for different states:

- Green: used to show that the block is busy: input data is stable and the block is processing them. This transient state ends after the propagating time in the block. This state is irrelevant for busses.
- Orange: this states follows the previous one. The block has processed data and the result is available. Output signals also take that stable state.
- Default color: this color is used for "has been used" and for default state. Default state means
 that the block has not yet received data for the current instruction. State "has been used"
 means that the block has provided its result to the other blocks and will not do anything until
 the next instruction.

Figure 2 shows the different states and the associated colors. Lines represent output buses for a specific block.

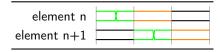


Figure 2: Transitional, stable and "Has been used" states.

After opcode decoding, unused blocks in the instruction will be greyed. See ADD and DATA MEM on Figure 1 on page 1. It's not a specific state but it is used to de-emphasize unused blocks to ease user thoughts by highlighting only relevant blocks.

Any greyed block will provide a signal computed from its input but the actual value is useless, and so is not displayed.

The simulation might show a synchronous behaviour because of instantaneous color change and aligned on clock edges to ease the simulator design and thus does not represent the behaviour of an actual implementation of the RiSC16. Most blocks have a propagating time lower than a half-period, as shown on Figure 2.

3 The Simulator

The assembly program can be loaded into the simulator from two sources:

- Writing instruction directly in the ASM column in "Program memory" window. To update the program memory with the modified instructions, use the "assembly" button. The pseudo instruction MOVI will be replaced by two instructions so an empty line must follow this instruction.
- Importing an external file using the "File import ROM" menu.

Several features are available when editing your program in an external file:

- Comments: anything after "//" on a single line
- Any hexadecimal constant must begin with the "0x" notation.
- Place instruction at specific address: "@" followed by constant value must be added before the instructions
- Labels: labels are defined using a name+":" at the beginning of a line

Syntax for instructions is defined as:

```
label:<space>opcode<space>field1, field2, filed3<space>// comments
```

Where:

- label: optional label
- // comments: optional comment
- opcode: opcode of the instruction (mandatory)
- field1, 2, 3: fields that can be register numbers, constants (instruction dependant)

The program is assembled when the file is imported (menu "File-Import ROM"). A program modified inside the program memory can also be saved to a file. Several files can be imported. Overlapping memory segments have the value of the last imported file. Importing and exporting RAM is also possible.

An example is given in Listing 1.

```
addi
                           2,0,1
                           2,1,0
                  sw
                  addi
                           1,1,1
                  sw
                           2,1,0
                  addi
                           1,1,1
                  add
                           3,2,2
                           3,1,0
                  sw
                  addi
                           1,1,1
                  addi
                           7,0,7
                           7,0,end
                  beq
loop:
                  lw
                           2,1,-2
                  add
                           3,3,2
                           3,1,0
                  sw
                  addi
                           1,1,1
                  addi
                           7,7,-1
                           0,0,loop
                  beq
end:
                  halt
```

Listing 1: Example code

4 Manipulation

Question 1. Explain what is the example on listing 1 on the preceding page doing? Detail the state of registers and the state of the PC after each instruction.

Question 2. Load exemple1.txt and run the simulation. Explain the internal behaviour for each instruction.

Question 3. Using the graph in annexe 3 on page 13, draw the chronogram for the BEQ instruction. Signals on the graph are output of blocks of the processor.

For each of the exercises 4–9, you can automatically test your code against a set of *test vectors* (listed in section 6) using the "**Online Verification Tool**". Read this handout to the end to get a glimpse on its capabilities and to understand how to use it.

Question 4. Write² a program which shifts to the left the content of reg5.

Question 5. Write² a program which extracts the most significant bit from reg1 and stores the value (0/1) in reg7.

Question 6. Write² a program which shifts to the left a 32-bit value stored in reg6(MSB), reg5.

Question 7. Write² a program which adds the unsigned content of reg1 and reg2 and writes the result in reg3 and the carry bit in reg4.

Question 8. Write² a program which adds the unsigned content of 32-bit numbers stored in reg4(MSB), reg3 and reg6(MSB), reg5 and writes the result in reg4(MSB), reg3.

Question 9. Write² a program which multiplies the (unsigned) content of reg1 and reg2 and writes the result into reg4(MSB), reg3.

5 Code requirements/recommendations

This section is for the multiplication but you can generalise to the other exercises according to the question formulation. Be sure your code:

1. uses reg1 and reg2 for operands. Anything else will cause the tests to fail (because the verification program assumes operands are in reg1 and reg2 and nowhere else).

Operands in correct registers

2. uses reg4 and reg3 to store the result at the end of the execution. reg3 is the Least Significant Word. Same note as previous point, result must be in reg4-reg3.

Result in correct registers

3. initialises reg1 and reg2 using 2 movi instructions at the beginning (any other initialisation method will cause the automatic tests to fail). This is necessary to ensure that your code will work with the verification tool if you use jalr instructions for absolute jumps. These instructions will be replaced by nop instructions during automatic testing.

Use first instructions (2/4/8) to initialise your operands

- 4. is writen knowing that the RAM is unaffected by any reset (you might get some bonus points by using this feature and creativity).
- 5. stops the simulator when the result is stored in reg4-reg3 using a halt instruction.

End your code

- 6. works with the test vectors. If the test report marks some tests as failed but your simulator works, check the code at the beginning of the report against your code and **then** ask the assistant. Don't ask the assistant before checking (friendly warning).
- 7. has some comments.
- 8. does not use any illegal instruction and/or instruction with too big immediate values.
- 9. is not too greedy! (the verification tool stops any test after 10⁷ instructions)

 $^{^2}$ And test it using the "Online Verification Tool", some results will be included in the quotation of these labs, read further for more details.

6 Test vectors

This sections lists some usual test vectors to test the code you are writing for the different exercises. They are all integrated in the "Online Verification Tool".

6.1 16b SLL

6.2 Most Significant Bit extraction

```
input: reg1, output reg7
- 0x0000 \longrightarrow 0
- 0x0001 \longrightarrow 0
- 0x8000 \longrightarrow 1
- 0xFFFF \longrightarrow 1
```

6.3 32b SLL

```
input: reg6(MSB), reg5, output: reg6(MSB), reg5
- 0x00000000 \longrightarrow 0x00000000
- 0x00000001 \longrightarrow 0x00000002
- 0x00007FFF \longrightarrow 0x0000FFFE
- 0x00008000 \longrightarrow 0x00010000
- 0x80000000 \longrightarrow 0x00000000
- 0x80000001 \longrightarrow 0x00000002
- 0x0001FFFF \longrightarrow 0x0003FFFE
- 0x00042000 \longrightarrow 0x00084000
```

$6.4 \quad 16b + 16b$

```
input: reg1, reg2; output: reg3, carry: reg4
  - 0x0000 + 0x0000 = 0, 0x0000
  - 0x0001 + 0x0000 = 0, 0x0001
  - 0x0001 + 0x0001 = 0, 0x0002
  - 0x8000 + 0x4000 = 0, 0xC000
  - 0x7FFF + 0x7FFF = 0, 0xFFFE
  - 0xFFFF + 0xFFFF = 1, 0xFFFE
  - 0xFFFF + 0x0001 = 1, 0x0000
  - 0xFFFF + 0x0002 = 1, 0x0001
```

$6.5 \quad 32b + 32b$

This code will be evaluated using these elements:

```
- input: reg4(MSB), reg3 and reg6(MSB), reg5; output: reg4(MSB), reg3
```

- coding style (comments, readability)
- errors in code
- % of passed tests (see test vectors below)

The mark will be expressed related to 2 (result is integer only, rounded down).

6.5.1 Test vectors for addition

```
- 0x00000000 + 0x00000000 = 0x000000000
- 0x00000001 + 0x00000001 = 0x00000001
- 0x00000001 + 0x00000001 = 0x000000002
- 0x00008000 + 0x00004000 = 0x000000000
- 0x00007FFF + 0x00007FFF = 0x0000FFFE
- 0x0000FFFF + 0x0000FFFF = 0x0001FFFE
- 0x0000FFFF + 0x0000001 = 0x00010000
- 0x0000FFFF + 0x00000001 = 0x80000001
- 0xFFFFFFFF + 0x00000001 = 0xFFFFFFFF
- 0x7FFFFFFF + 0x7FFFFFFF = 0xFFFFFFFF
```

6.6 Multiplication

This code will be evaluated using these elements:

- input: reg1, reg2; output: reg4(MSB), reg3
- coding style (comments, readability)
- errors in code
- Algorithm (efficiency)
- Length of code
- number of instructions to compute $0xff \times 0xff$
- % of passed tests (see test vectors below)
- Max size of operands for x^2 (identified using test vectors below)

The mark will be expressed related to 8 (result is integer only, rounded down).

6.6.1 Test vectors for multiplication

```
- 0x0000 \times 0x00ff = 0x00000000
- 0x00ff \times 0x0000 = 0x00000000
- 0x7fff \times 0x0007 = 0x00037ff9
- 0xffff \times 0x0007 = 0x0006fff9
- 0xa060 \times 0x88dc = 0x55bcd280
-0x0001 \times 0x0001 = 0x00000001
-0x0003 \times 0x0003 = 0x00000009
-0x0007 \times 0x0007 = 0x00000031
  0x000f \times 0x000f = 0x000000e1
  0x001f \times 0x001f = 0x000003c1
- 0x003f \times 0x003f = 0x00000f81
- 0x007f \times 0x007f = 0x00003f01
- 0x00ff \times 0x00ff = 0x0000fe01
- 0x01ff \times 0x01ff = 0x0003fc01
- 0x03ff \times 0x03ff = 0x000ff801
  0x07ff \times 0x07ff = 0x003ff001
  0x0fff \times 0x0fff = 0x00ffe001
- 0x1fff \times 0x1fff = 0x03ffc001
- 0x3fff \times 0x3fff = 0x0fff8001
- 0x7fff \times 0x7fff = 0x3fff0001
- Oxffff × Oxffff = Oxfffe0001
```

Other vectors can be added, ask the assistant if you need a specific one.

7 Test report details

The test report has several sections. An example is used to highlight them below³.

7.1 Program processing

This part of the file shows how your program has been processed by the verification tool. If you see that your program has been misinterpreted, tell the assistant.

```
: lui 1,511
    0:
(Q)
    1
                     addi 1,1,63
(Q
    2 :
                   : lui 2,0
(a)
    3:
                   : addi 2,2,7
label : loop @4
                   : beq 5, 2, end
   4 : loop
    5 :
(a)
                   : add 3, 3, 1
    6:
                   : addi 5, 5, 1
                   : beq 0, 0, loop
(a)
    7 :
label: end @8
   8 : end
                   : halt
Instructions: 8
{ 'end ': 8, 'loop ': 4}
test_report.txt
```

7.2 Testing

This part shows the results of the tests using the vectors listed p.10. Tests are marked passed or FAILED and the number of instructions executed before the halt instruction is listed. When a test fails, the computed value is added in the report so you can check with your simulation.

```
Instructions 0 to 3 changed to 'nop',
                                                                         let's test..
0\,\mathrm{x}00000 x 0\,\mathrm{x}000ff =0x000000000, passed (instr=
0 \times 00 \text{ ff } \times 0 \times 0000 = 0 \times 000000000, passed (instr=
0\,x\,7\,fff\ x\ 0x0007\,!\!=\!0\,x00037ff9\,(=\!0\,x00007ff9\,)\;,\;\; FAILED\,!\,!\,!
                                                                                                         (instr=
                                                                                                                                  33)
0 \times ffff \times 0 \times 0007! = 0 \times 0006 fff9 (= 0 \times 0000 fff9), FAILED!!!
                                                                                                         (instr=
                                                                                                                                   33)
0xa060 x 0x88dc!=0x55bcd280(=0x0000d280), FAILED!!!
                                                                                                         (instr=
                                                                                                                         140149)
0 \hspace{0.5pt} x \hspace{0.5pt} 00001 \hspace{0.5pt} x \hspace{0.5pt} 0 \hspace{0.5pt} x \hspace{0.5pt} 000001 \hspace{0.5pt} = \hspace{0.5pt} 0 \hspace{0.5pt} x \hspace{0.5pt} 000000001 \hspace{0.5pt} , \hspace{0.5pt} \hspace{0.5pt} passed \hspace{0.5pt} \text{(instr=} \hspace{0.5pt}
                                                                                                 9)
0x0003 \ x \ 0x0003 = 0x00000009, passed
                                                                                               17)
                                                                      (instr=
0\,x0007\ x\ 0\,x0007\ = \!\!0x00000031\,,\ passed
                                                                                               33)
                                                                     (instr=
0x000f \ x \ 0x000f = 0x000000e1, passed
                                                                                               65)
0x001f \ x \ 0x001f = 0x000003c1, \ passed
                                                                                             129)
                                                                      (instr=
0x003f \times 0x003f = 0x00000f81, passed
                                                                      (instr=
                                                                                             257
0\,x007f\ x\ 0x007f\ =\!\!0x00003f01\,,\ passed
                                                                     (instr=
0\,x\,0\,0\,ff\ x\ 0\,x\,0\,0\,ff\ = 0x\,0\,0\,0\,0\,fe\,0\,1\ ,\ passed\ \mbox{(instr=}
                                                                                            1025)
0 \times 01 \text{ff} \times 0 \times 01 \text{ff!} = 0 \times 0003 \text{fc} 01 (= 0 \times 0000 \text{fc} 01), FAILED!!!
                                                                                                                              2049)
0 \times 03 \text{ff} \times 0 \times 03 \text{ff!} = 0 \times 000 \text{off801} (= 0 \times 0000 \text{f801}), \text{ FAILED!!!}
                                                                                                         (instr=
                                                                                                                              4097)
0 \times 07 \text{ff} \times 0 \times 07 \text{ff!} = 0 \times 003 \text{ff001} (= 0 \times 0000 \text{f001}), \text{ FAILED!!!}
                                                                                                          (instr=
                                                                                                                              8193)
0 \times 0 \text{ fff } \times 0 \times 0 \text{ fff!} = 0 \times 0 0 \text{ ffe} \\ 0 0 1 (= 0 \times 0 0 0 0 \text{ e} \\ 0 0 1), \text{ FAILED!!!}
                                                                                                                             16385)
                                                                                                          (instr=
0 \times 1 \text{fff} \times 0 \times 1 \text{fff!} = 0 \times 0 3 \text{ffc} \\ 0 0 1 (= 0 \times 0000 \text{c} \\ 0 0 1), \text{ FAILED!!!}
                                                                                                         (instr=
                                                                                                                             32769)
0 \times 3 \text{ fff } \times 0 \times 3 \text{ fff!} = 0 \times 0 \text{ fff8} \\ 0 0 1 (= 0 \times 000008001), \text{ FAILED!!!}
                                                                                                          (instr=
                                                                                                                             65537)
0 \times 7 \text{fff} \times 0 \times 7 \text{fff!} = 0 \times 3 \text{fff} \\ 0 0 0 1 (= 0 \times 000000001), \text{ FAILED!!!}
                                                                                                          (instr=
                                                                                                                           131073)
0 \times ffff \times 0 \times fffff! = 0 \times fffe0001 (= 0 \times 00000001), FAILED!!!
                                                                                                         (instr=
                                                                                                                           262145)
```

7.3 Errors

The verification tool checks operands sizes and reports any error in the report file with the address causing the trouble. This is an experimental feature.

```
error, immediate too big@ 15 32768
```

Sometimes, a crash log from Python is also present in the script. This means your code made the verification tool crash, depending on what caused the crash, it might be bad for your mark.

 $^{^3}$ Any similarities with code read in the lab assignments is a pure coincidence

7.4 Summary

At the end of the file, the number of passed tests and the size of the biggest possible operand for reliable multiplication using your code are listed.

7.5 Disclaimer

The verification tool has still some bugs⁴. If your simulation does not match the report:

- 1. Check the beginning of the report and verify that your code has been correctly interpreted. Especially, if you used jalr instructions, identify any unexpected offset.
- 2. If there is a python crash log, try to identify if something in your code caused it (mistyped instruction, unexpected literal...).
- 3. Check with the assistant what went wrong, maybe your code is correct and the verification tool missed something...
- 4. If you don't understand something, ask the assistant.
- 5. If you want some feature to be added to the verification tool, ask the assistant.
- 6. Help the assistants improve the lab: report mistakes, bugs...

8 Assignment

Send through the UV your codes for 32b addition (Question 8) and multiplication (Question9).

⁴Any bug report will be appreciated

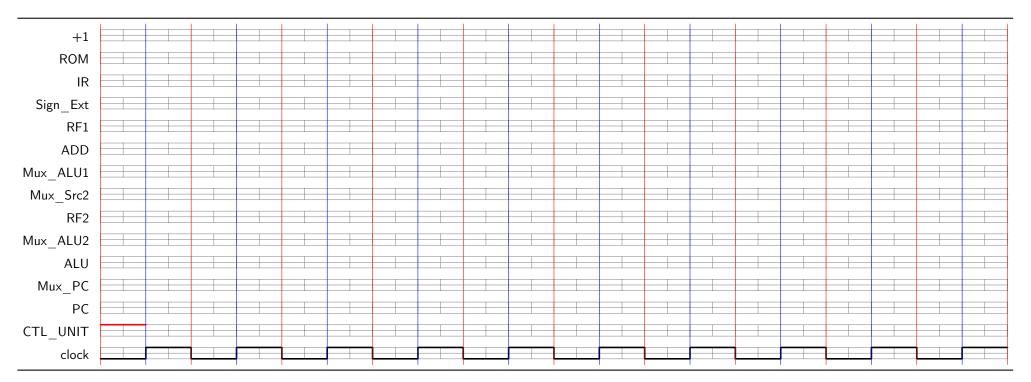


Figure 3: BEQ chronogram