1 Tline – A Transmission Line Calculator

tline is an open-source project licensed under GPLv3 (or later). This program was written to explore the mathematics of transmission lines in a manner that encourages learning and participation. One might ask "Why write a new transmission line calculator when there are existing ones?"

The problem with the existing transmission line calculators we reviewed is that they are invariably proprietary programs, and their source code is not available for study. While they may be good tools for solving specific problems, they are not helpful if one wishes to understand the way the solutions are computed.

Also, since we cannot tell what the programs are doing internally, we have no guarantee that they are actually computing the correct results in all cases. *tline* is intended to provide a more transparent approach.

1.1 Formulas

This section describes the formulas *tline* uses to perform its calculations.

1.1.1 Common Line Properties

In many of the formulas below, we will need several parameters, as defined in this section.

1.1.1.1 Units

Manufacturers can either specify transmission line parameters in the English system or in the Metric system. In all equations that follow, we assume that one measurement system will be chosen and used consistently.

1.1.1.2 Length

The length ℓ of a transmission line is generally expressed in either *meters* or *feet*.

1.1.1.3 Velocity Factor

In a vacuum, electrical waves travel at the speed of light (*c*), which is 299792458 meters per second. In the English system, this is appropriately 983571056 feet per second.

In a transmission line, electrical waves travel more slowly, which we describe by the velocity factor (vf):

$$vf = \frac{\text{speed of electrical wave in transmission line}}{\text{speed of electrical wave in vacuum}}$$
 (1)

The velocity factor is a unitless quantity, and will be less than 1.0; typical values range from 0.6 to 0.9 or so.

1.1.1.4 Wavelength

Wavelength (λ) in a transmission line is defined in terms of the frequency of a signal and the velocity factor of the line:

$$\lambda = \frac{vf \times speed \ of \ light}{frequency} \tag{2}$$

The units of wavelength will typically either be *meters per cycle* or *feet per cycle*, although smaller units may be used at very high frequencies. Often, we just say "the wavelength is 40 meters", but we really mean "40 meters per cycle".

1.1.1.5 Phase Constant

The phase constant (β) is defined in terms of the wavelength in a line, expressed as *radians per unit length*, i.e. *radians per meter* or *radians per foot*:

$$\beta = \frac{2\pi}{\lambda} \tag{3}$$

1.1.1.6 Attenuation

Attenuation (α) is defined in terms of the cable loss, which is typically specified in dB per 100 feet or dB per 100 meters. However, for most equations, we need attenuation as nepers per unit length, i.e. nepers per meter or nepers per foot:

$$\alpha = \frac{attenuation(dB \ per \ 100 \ feet) \times 0.11513(nepers \ per \ dB)}{100}$$
 (4)

$$\alpha = \frac{attenuation(dB \ per \ 100 \ meters) \times 0.11513(nepers \ per \ dB)}{100} \tag{5}$$

1.1.1.7 Complex Loss Coefficient

The complex loss coefficient is defined in terms of α and β :

$$y = \alpha + j\beta \tag{6}$$

1.1.2 Relating Cable Impedance to Resistance and Reactance

While many of the parameters of a transmission line are easy to find in a typical datasheet, cable characteristic resistance R_0 , and reactance X_0 are typically not specified by the cable manufacturers. Therefore, we must calculate R_0 and X_0 from $|Z_0|$, a parameter which is specified by cable manufacturers.

To perform this calculation, we need α, β , and $|Z_0|$. We can find α and β from the velocity factor, wavelength, and attenuation, as described previously.

We know that transmission line impedance has a real and imaginary part, so $Z_0 = R_0 - jX_0$, where the negative sign implies that the reactance is capacitive. R_0 and X_0 are at right angles in the complex plane, so by the Pythagorean theorem, we have:

$$|Z_0| = \sqrt{R_0^2 + X_0^2} \tag{7}$$

We also know that R_0 and X_0 are related by:

$$X_0 = -R_0 \frac{\alpha}{\beta} \tag{8}$$

Substituting Eq. 2 into Eq. 1 and solving for R_0 we get:

$$R_0 = \frac{|Z_0|}{\sqrt{1 + \left(\frac{\alpha}{\beta}\right)^2}} \tag{9}$$

All the variables in Eq. (9) are available on the datasheet, so we can calculate R_0 . We can then find X_0 from Eq. (8).

1.1.3 Manufacturer-Specified Line

Source file cableTypes.cpp contains tables of parameters taken from manufacturer's datasheets for many commercial transmission lines.

Manufacturers typically specify matched line loss at a few frequencies. *tline* needs to interpolate to find the attenuation at other frequencies. If the manufacturer data are plotted on a log-log graph, we generally get a straight line. Therefore, when interpolating, we first take the log of the manufacturer frequencies and corresponding attenuation, perform the interpolation, then take the anti-log of the result. See cableTypes::findAtten() in cableTypes.cpp for the source code.

The tables of data also contain the velocity factor, the cable impedance, and the maximum allowed cable voltage. *tline* uses the table data to solve for the cable's characteristic resistance and reactance as described in *Relating Cable Impedance to Resistance and Reactance* above.

1.1.4 User-Specified Line

While *tline* contains data for many different types of line, it may also be desirable to handle user-specified line. Selecting "User-Defined Transmission Line" in the pull-down on *tline's* main page brings up a dialog where the user can enter the parameters from the manufacturer datasheet. If the user fills in the impedance value, *tline* will calculate the resistance and reactance. The user can also override the calculated resistance and/or reactance; *tline* will then calculate a new value for the impedance. See file userLine.cpp for the source code. In particular:

ResistanceReactanceFromImpedance(), as the name implies, calculates the resistance and reactance from the impedance.

ImpedanceFromResistanceReactance() calculates the impedance from the resistance and reactance.

Note that it is unlikely that the manufacturer will specify the attenuation at the exact frequency one wishes to analyze. Therefore, one will have to manually interpolate the datasheet data to find the attenuation at the desired frequency. It is best to do this on a log-log graph, as previously described. Alternatively, since the source code for *tline* is available, one could add a new cable type, recompile, and let *tline* perform the interpolation.

Note that adding a new cable type to *tline*'s source code involves:

- 1) Editing cable Types.cpp to add the new data tables
- 2) Running the wxFormBuilder tool and adding the exact same cable name string to the ui_cableType wxComboBox *choices* field
- 3) Typing "F8" in wxFormBuilder to regenerate the tlineUI source files

1.1.5 Impedance At The Input Of A Line

The *Transmission Line Equation* can be used to find the impedance at the input of a line. The variables in the transmission line equation are complex numbers, and the equation uses hyperbolic trigonometric functions of complex variables. This is easy to do by computer, but hard to do on paper.

The following variables are needed:

- 1) complex impedance of the load Z_L
- 2) complex characteristic impedance of the cable itself $\,Z_0\,$
- 3) complex loss coefficient γ
- 4) length of the line ℓ

Given those variables, *tline* solves for the input impedance $Z_{\rm in}$:

$$Z_{\rm in} = Z_0 \frac{Z_L \cosh(\gamma \ell) + Z_0 \sinh(\gamma \ell)}{Z_0 \cosh(\gamma \ell) + Z_L \sinh(\gamma \ell)}$$
(10)

This equation may be found in chapter 24 of *Reference Data For Radio Engineers*, 6th edition, ISBN 0-672-21218-8.

See function *impedanceAtInput()* in file *tlineLogic.cpp*.

1.1.6 Impedance At The Far End Of A Line

If we plan to install a remote antenna tuner at an antenna, we may wish to find the impedance at the far end of the transmission line, given a known impedance at the input of the line. I.e. we wish to find Z_L given $Z_{\rm in}$. Similar to the previous section, we can use the inverse form of the *Transmission Line Equation*:

$$Z_{L} = Z_{0} \frac{Z_{\text{in}} \cosh(\gamma \ell) - Z_{0} \sinh(\gamma \ell)}{Z_{0} \cosh(\gamma \ell) - Z_{\text{in}} \sinh(\gamma \ell)}$$
(11)

This equation may be found in chapter 24 of *Reference Data For Radio Engineers*, 6th edition, ISBN 0-672-21218-8.

See function *impedanceAtLoad()* in file *tlineLogic.cpp*.

1.1.7 Voltage And Current Along A Line

The voltage at any point ℓ along a transmission line may be found from:

$$V_{\ell} = V_{in} \left\{ \cosh(\gamma \ell) - \left(\frac{Z_0}{Z_{in}} \right) \sinh(\gamma \ell) \right\}$$
(12)

Similarly, the current at any point ℓ along a transmission line may be found from:

$$I_{\ell} = \frac{V_{\text{in}}}{Z_{\text{in}}} \left\{ \cosh(\gamma \ell) - \left(\frac{Z_{\text{in}}}{Z_{0}} \right) \sinh(\gamma \ell) \right\}$$
(13)


See functions *voltageOut()* and *currentOut()* in file *tlineLogic.cpp*.

1.1.8 L-Network Calculations

The following is based on Royal Aircraft Establishment Technical Report 78049, "Impedance-Matching Networks of the L Type", 4 May 1978, by P. B. Walkley.

We wish to design an *L-network* to match the impedance of two different devices for optimal power transfer. This will happen when the impedance of one device is the complex conjugate of the impedance of the other device. Call one device *Termination-A*, and the other device *Termination-B*.

Consider the following diagram, showing the two devices connected by an L-network:

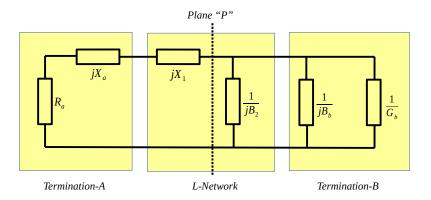

Termination-A is presented as an arbitrary impedance, i.e. a real part R_a and an imaginary part jX_a in series. Similarly termination-B is presented as an arbitrary admittance, i.e. a real part $\frac{1}{G_b}$ and an

imaginary part $\frac{1}{jB_b}$ in parallel. We use *admittance format* for termination B, because admittances in parallel add, which simplifies the math, as we will soon see. Similarly, we use *impedance format* for termination A, because impedances in series add.

Consider Plane "P", which cuts through the center of the "L" network. For maximum power transfer, the combined impedance of everything to the left of plane "P" must equal the complex conjugate of the combined admittance of everything to the right of plane "P".

It is required that $\frac{1}{G_b} \ge R_a$ because the parallel component of the L-network will lower the impedance

looking from Plane "P" towards the right side of the diagram, while the series component of the L-network will raise the impedance looking from Plane "P" towards the left side of the diagram. This restriction is easily accommodated by choosing which device we call "A" and which device we call "B".

Since we are trying to find a complex conjugate match, we wish to solve for X_1 and B_2 in the following equation:

$$R_a + jX_a + jX_1 = \left\{ \frac{1}{G_b + jB_b + jB_2} \right\}^*$$
 (14)

where the "*" represents the complex conjugate. The algebra required is not difficult, but it took a while to find a clean approach, thus we will present the steps in detail.

To solve Eq. 1 for X_1 we first clear the imaginary terms from the denominator of the right hand side by multiplying both the numerator and denominator by the complex conjugate:

$$R_a + jX_a + jX_1 = \left\{ \frac{1}{G_b + jB_b + jB_2} \right\}^* \cdot \left\{ \frac{G_b + jB_b + jB_2}{G_b + jB_b + jB_2} \right\}$$
(15)

Simplifying, we get:

$$R_a + jX_a + jX_1 = \left\{ \frac{G_b + jB_b + jB_2}{G_b^2 + (B_b + B_2)^2} \right\}$$
 (16)

Next, separate the real and imaginary parts to get two simultaneous equations:

$$R_a = \frac{G_b}{G_b^2 + (B_b + B_2)^2} \tag{17}$$

$$X_a + X_1 = \frac{B_b + B_2}{G_b^2 + (B_b + B_2)^2} \tag{18}$$

We now take Eq. (17) through a series of rearrangements, because we want to isolate the $B_b + B_2$ term:

$$R_a G_b^2 + R_a (B_b + B_2)^2 = G_b \tag{19}$$

$$R_a(B_b + B_2)^2 = G_b - R_a G_b^2$$
 (20)

$$(B_b + B_2)^2 = \frac{G_b}{R_a} - G_b^2 \tag{21}$$

$$B_b + B_2 = \pm \sqrt{\frac{G_b}{R_a} - G_b^2} \tag{22}$$

Now we substitute Eq. (21) and Eq. (22) into Eq. (18) to produce Eq. (23):

$$X_a + X_1 = \frac{\pm \sqrt{\frac{G_b}{R_a} - G_b^2}}{G_b^2 + \frac{G_b}{R} - G_b^2}$$
 (23)

Now simplify Eq. (23):

$$X_{a} + X_{1} = \frac{\pm \sqrt{\frac{G_{b}}{R_{a}} - G_{b}^{2}}}{\frac{G_{b}}{R_{a}}}$$
 (24)

$$X_a + X_1 = \pm \frac{R_a}{G_b} \sqrt{\frac{G_b}{R_a} - G_b^2}$$
 (25)

$$X_a + X_1 = \pm R_a \sqrt{\frac{G_b}{R_a G_b^2} - \frac{G_b^2}{G_b^2}}$$
 (26)

$$X_a + X_1 = \pm R_a \sqrt{\frac{1}{R_a G_b} - 1} \tag{27}$$

We now have an equation for the X_1 component of the L-network:

$$X_{1} = -X_{a} \pm R_{a} \sqrt{\frac{1}{R_{a}G_{b}} - 1}$$
 (28)

We will now go through the same process to solve for B_2 but we start by flipping Eq. (14) over and reversing the left hand and right hand sides:

$$(G_b + jB_b + jB_2)^* = \frac{1}{R_a + jX_a + jX_1}$$
(29)

$$(G_b + jB_b + jB_2)^* = \frac{1}{R_a + jX_a + jX_1} \cdot \left[\frac{R_a + jX_a + jX_1}{R_a + jX_a + jX_1} \right]^*$$
(30)

$$(G_b + jB_b + jB_2)^* = \frac{\{R_a + jX_a + jX_1\}^*}{R_a^2 + (X_a + X_1)^2}$$
(31)

This time, we apply the conjugate operator by flipping the signs of all the imaginary terms:

$$(G_b - jB_b - jB_2) = \frac{\{R_a - jX_a - jX_1\}}{R_a^2 + (X_a + X_1)^2}$$
(32)

Again separate the real and imaginary parts to get two simultaneous equations:

$$G_b = \frac{R_a}{R_a^2 + (X_a + X_1)^2} \tag{33}$$

$$B_b + B_2 = \frac{(X_a + X_1)}{R_a^2 + (X_a + X_1)^2}$$
 (34)

Take Eq. (33) through similar transformations to what we did previously:

$$G_b R_a^2 + G_b (X_a + X_1)^2 = R_a \tag{35}$$

$$G_b(X_a + X_1)^2 = R_a - G_b R_a^2$$
(36)

$$(X_a + X_1)^2 = \frac{R_a}{G_b} - R_a^2 \tag{37}$$

$$X_a + X_1 = \pm \sqrt{\frac{R_a}{G_b} - R_a^2} \tag{38}$$

Substitute Eq. (37) and Eq. (38) into Eq. (34):

$$B_{b} + B_{2} = \frac{\pm \sqrt{\frac{R_{a}}{G_{b}} - R_{a}^{2}}}{R_{a}^{2} + \frac{R_{a}}{G_{b}} - R_{a}^{2}}$$
(39)

$$B_{b} + B_{2} = \frac{\pm \sqrt{\frac{R_{a}}{G_{b}} - R_{a}^{2}}}{\frac{R_{a}}{G_{b}}}$$
(40)

$$B_b + B_2 = \pm \frac{G_b}{R_a} \sqrt{\frac{R_a}{G_b} - R_a^2}$$
 (41)

$$B_b + B_2 = \pm G_b \sqrt{\frac{R_a}{R_a^2 G_b} - \frac{R_a^2}{R_a^2}} \tag{42}$$

$$B_b + B_2 = \pm G_b \sqrt{\frac{1}{R_a G_b}} - 1 \tag{43}$$

We now have an equation for the B_2 component of the L-network:

$$B_2 = -B_b \pm G_b \sqrt{\frac{1}{R_a G_b} - 1}$$
 (44)

Both Eq. (28) and Eq. (44) contain $\pm radicals$ which might make us think that we have found four solutions to Eq. (14). However, if we substitute Eq. (28) and Eq. (44) back into Eq. (14), we find that the signs of the radicals must match; i.e. either we take both the Eq. (28) and Eq. (44) radicals to be positive, or we take both to be negative. The combinations where one radical is positive and the other radical is negative are not solutions to Eq. (14).

Summarizing, here are the two valid solutions:

$$X_1 = -X_a + R_a \sqrt{\frac{1}{R_a G_b} - 1}$$
 and $B_2 = -B_b + G_b \sqrt{\frac{1}{R_a G_b} - 1}$ (solution 1)

$$X_1 = -X_a - R_a \sqrt{\frac{1}{R_a G_b} - 1}$$
 and $B_2 = -B_b - G_b \sqrt{\frac{1}{R_a G_b} - 1}$ (solution 2)

Numerically, a positive value for either X_1 or B_2 means that the component is an inductor, while a negative value means that the component is a capacitor. When we apply the equations, we may find an L-network consisting of one inductor and one capacitor, or we may find an L-network consisting of two capacitors or two inductors.

See the various *walkley...()* functions in *tuner.cpp*.

1.2 Future Algorithms

As this is being written, *tline* is in an early stage of development. For example, the PI and T tuner calculations are currently based on a Javascript implementation by John Wetherell, which can be found on the web: http://home.sandiego.edu/~ekim/e194rfs01/jwmatcher/matcher2.htm

However, there is not a lot of documentation on the mathematics underlying the code. Thus, in keeping with the goal of understanding the formulas, we are researching various techniques that might replace that implementation at some point.