This week

Assignment I due Tuesday: you'll have proved your bare-metal

mettle!

■ Lab 2 prep

do pre-lab reading!

bring your kit



Today: C Pointers & Arrays

- Understand str/ldr
- Understand C pointers
- ARM addressing modes, translation to/from C
- Details: volatile qualifier, bare-metal build

Why C?

Higher-level abstractions, structured programming

Named variables, constants

Arithmetic/logical operators

Control flow

Portable

Not tied to particular ISA or architecture

Low-level enough to get to machine when needed


Bitwise operations

Direct access to memory

Embedded assembly, too!

Compiler Explorer

is a neat interactive tool to see translation from C to assembly. Let's try it now!

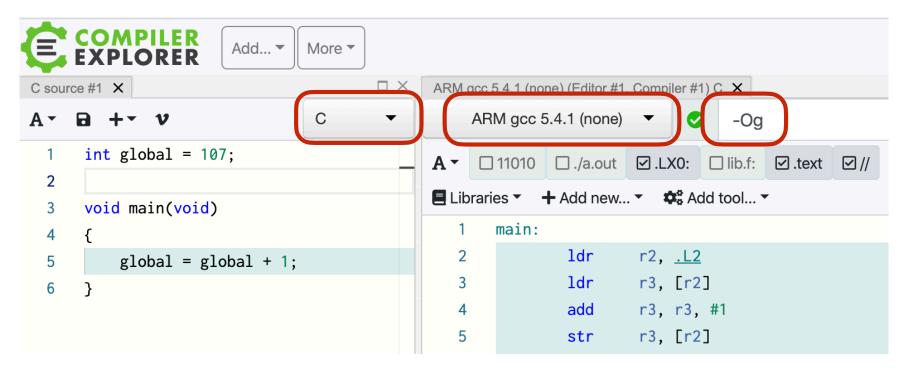

https://godbolt.org

```
Configure settings to follow along:

C

ARM gcc 5.4. I (none)

-Og
```

Memory

Memory is a linear sequence of bytes

Addresses start at 0, go to 2³²-1 (32-bit architecture)

100000000₁₆

02000000016

512 MB

Accessing memory in assembly

ldr copies 4 bytes from memory address to register str copies 4 bytes from register to memory address

The memory address could be:


- the location of a global or local variable or
- the location of program instructions or
- a memory-mapped peripheral or
- an unused/invalid location or ...

The 4 bytes of data being copied could be:

- an address or
- an 32-bit integer or
- 4 characters or
- an ARM instruction, or...

FSEL2: .word 0x20200008 SET0: .word 0x2020001C Idr r0, FSEL2 mov r1, #1 str r1, [r0] Idr r0, SET0 mov r1, #(1<<20) str r1, [r0]

And assembly code doesn't care

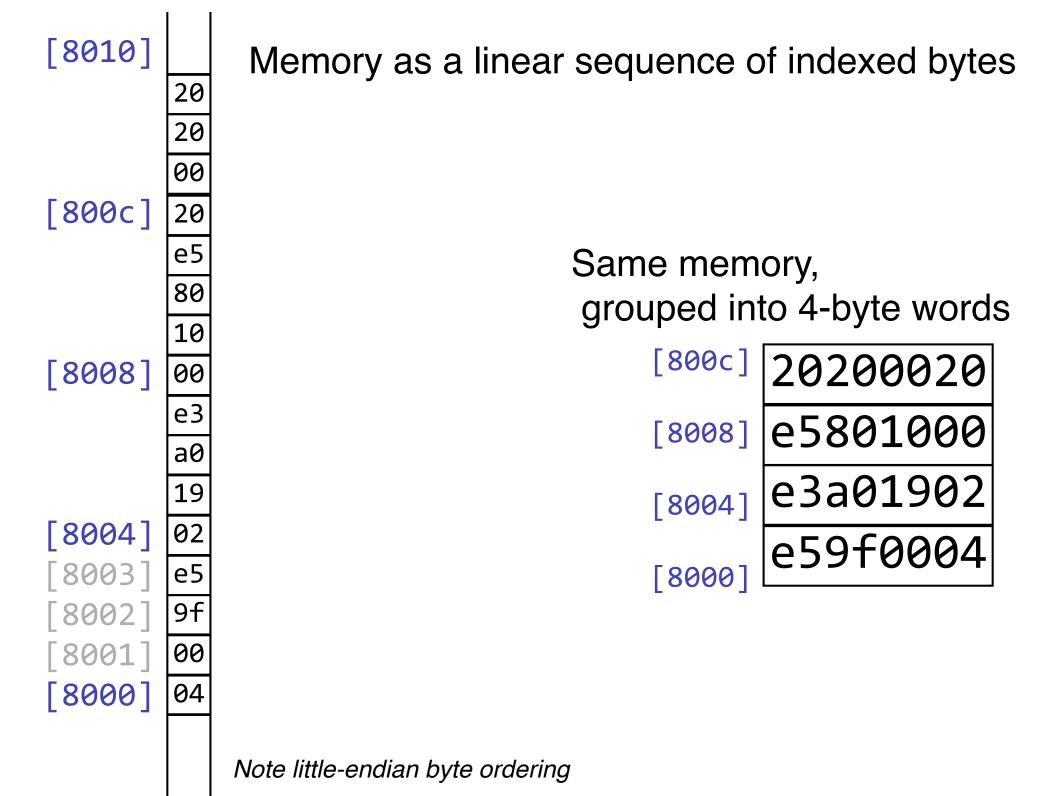

ASM and memory

At the assembly level, a 4-byte word could represent

- an address,
- an int,
- 4 characters
- an ARM instruction

Assembly has no type system to guide or restrict us on what we do with those words.

Keeping track of what's what in assembly is *hard* and very bug-prone.


Funny program

pc is the register containing the address of the current instruction (processor updates it on each execution, changes it on branch instructions)

What does this program do?

```
[8000] ldr r1, [pc - 4]
[8004] add r1, r1, #1
[8008] str r1, [pc - 12]
```

Operand 2 is special

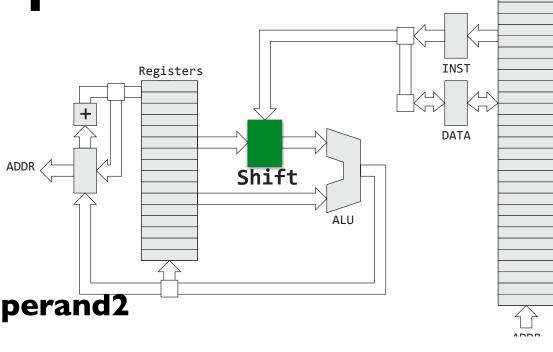

Dest = Operand1 op Operand2

Cond 0 0 I 0 1 0 0 S Operand1 Dest Operand2


add r0, r1, #0x1f000

T=1

Potate

Tempediate

add r0, r1, #0x1f000 sub r0, r1, #6 rsb r0, r1, #6 add r0, r1, r2, Isl #3 mov r1, r2, ror #7

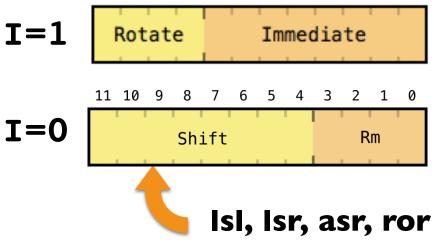

Funny program

pc is the register containing the address of the current instruction (processor updates it on each execution, changes it on branch instructions)

```
What does this program do? add r1, r1, \#1 Adds to the add instruction e2 \ 81 \ 10 \ 01 +1 = e2 \ 81 \ 10 \ 02 +2 = e2 \ 81 \ 10 \ 04 +4 = e2 \ 81 \ 10 \ 08 add r1, r1, \#1 ... str r1, [pc - 12] + 128 = e2 \ 81 \ 11 \ 00
```

Funny program

pc is the register containing the address of the current instruction (processor updates it on each execution, changes it on branch instructions)

Operating on addresses is extremely powerful! We need some safety rails.

C pointer vocabulary

An address is a memory location. Representation is unsigned 32-bit int.

A pointer is a variable that holds an address.

The "pointee" is the data stored at that address.

* is the dereference operator, & is address-of.

C code

int val = 5; val [810c] int *ptr = &val; ptr [8108]

Memory



What do C pointers buy us?

- Access specific memory by address, e.g. FSEL2
- Allow us to specify not only an address, but also what we expect to be stored at that address: the data type
 - int* vs char* vs key_event_t*
- Access data by its offset relative to other nearby data (array elements, struct fields)
 - Storing related data in related locations organizes use of memory
- Efficiently refer to shared data, avoid redundancy/duplication
- Build flexible, dynamic data structures at runtime



IN CODE, IT'S NOT CONSIDERED RUDE TO POINT.



```
int val = 5;
int* ptr = &val;
```

0x0000810c

	0x05	0x00	0x00	0x00
	0x0c	0x81	0x00	0x00

0x0000810c

0x00008110

→	0x05	0x00	0x00	0x00
\	0x0c	0x81	0x00	0x00


$$*ptr = 7;$$

0x0000810c

	0x07	0x00	0x00	0x00
	0x0c	0x81	0x00	0x00

0x0000810c

0x00008110



$$*ptr = 7;$$


0x0000810c

0x00008110

	0x07	0x00	0x00	0x00
	0x0c	0x81	0x00	0x00

0x0000810c

0x00008110

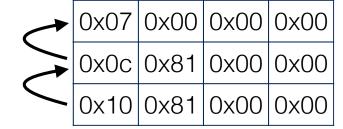

<pre>int val = 5;</pre>	0x0000810c	—	0x05	0x00	0x00	0x00
<pre>int* ptr = &val</pre>	0x00008110		0x0c	0x81	0x00	0x00
		Г		<u> </u>		
*ptr = 7;	0x0000810c	—	0x07	0x00	0x00	0x00
	0x00008110		0x0c	0x81	0x00	0x00
		-				
	0x0000810c	—	0x07	0x00	0x00	0x00
<pre>int** dptr = &ptr</pre>	0x00008110		0x0c	0x81	0x00	0x00
	0x00008114		0x10	0x81	0x00	0x00
	0x0000810c		0x07	0x00	0x00	0x00
*dptr = NULL;	0x00008110	*	0x00	0x00	0x00	0x00
	0x00008114		0x10	0x81	0x00	0x00

```
char a = 'a';
char b = 'b';
char* ptr = &b;
```

0x0000810c


	-0×6	0x62		
	'a'	'b'	0x00	0x00
/	0x0d	0x81	0x00	0x00

```
char a = 'a';
char b = 'b';
char* ptr = &b;
*ptr = 'c';
```

0x0000810c

0x00008110

0x0000810c

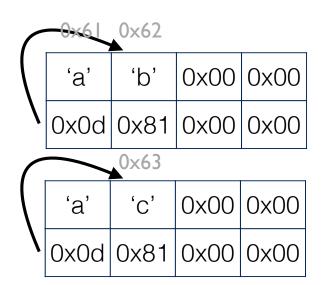

```
char a = 'a';
char b = 'b';
char* ptr = &b;


*ptr = 'c';

char** dptr = &ptr;

0x0000810c
0x00008110

0x00008110

0x00008110
0x00008110
```

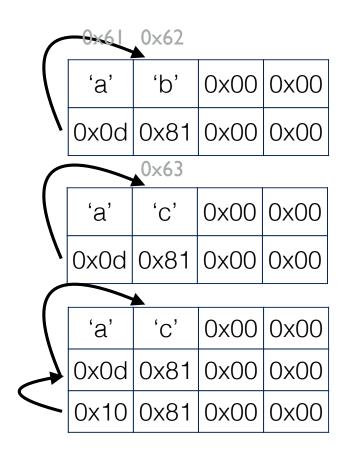

```
char a = 'a';
char b = 'b';
char* ptr = &b;
```

0x0000810c

0x00008110



0x0000810c

0x00008110

char** dptr = &ptr;

0x0000810c

0x00008110


0x00008114

*dptr	=	NULL	•
-------	---	------	---

0x0000810c

0x00008110

0x00008114

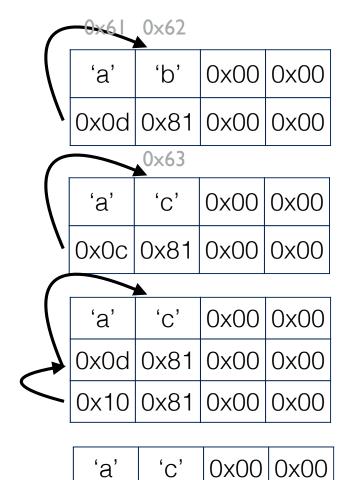

0x00 0x00 0x00

0x81 0x00 0x00

0x00

Pointer Quiz: & *

```
int m, n, *p, *q;
p = &n;
*p = n; // 1. same as prev line?
q = p;
*q = *p;  // 2. same as prev line?
p = &m, q = &n;
*p = *q;
m = n; // 3. same as prev line?
```

C pointer types

C has a type system: tracks the type of each variable.

Operations have to respect the data type.

Can't multiply int*'s, can't deference an int

Distinguishes pointer variables by type of pointee

- Dereferencing an int* is an int
- Dereferencing a char* is a char

C arrays

An array allocates multiple instances of a type contiguously in memory

```
char ab[2];
ab[0] = 'a';
ab[1] = 'b';
```

0x0000810c

UX61	UX62	
ʻa'	ʻb'	

```
int ab[2];
ab[0] = 'a';
ab[1] = 9;
```

0x0000810c

0x00008110

'a'	0x00	0x00	0x00
0x09	0x00	0x00	0x00

Arrays and Pointers

You can assign an array to a pointer

```
int ab[2] = \{5, 7\};
int* ptr = ab; // ptr = &(ab[0]);
```

Incrementing pointers advances address by size of type

```
ptr = ptr + 1; // now points to ab[1]
```

What does the assembly look like? What if ab is a char[2] and ptr is a char*?

Pointer Arithmetic

Incrementing pointers advances address by size of type.

```
struct point {
  int x; // 32 bits, 4 bytes
  int y; // 32 bits, 4 bytes
};
struct point points[100];
struct point* ptr = points;
ptr = ptr + 1; // now points to points[1]
```

Suppose points is at address 0x100. What is the value of ptr after the last line of code?

Pointers and arrays

```
int n, arr[4], *p;
p = arr;
p = &arr[0];  // same as prev line
arr = p; // ILLEGAL, why?
*p = 3;
p[0] = 3; // same as prev line
n = *(arr + 1);
n = arr[1];  // same as prev line
```

Address arithmetic

Fancy ARM addressing modes

(Even fancier variants add pre/post update to move pointer along)

Q: How do these relate to accessing data structures in C?

C source #1 X ARM gcc 5.4.1 (none) (Editor #1, Compiler #1) C X C ARM gcc 5.4.1 (none) ▼ -Oq 1 struct fraction { **A** ▼ □ 11010 □ ./a.out ☑ .LX0: □ lib.f: ☑ int numer; int denom; **}**; main: ldr r3, <u>.L4</u> int arr[9]; 3 ldr r2, [r3] struct fraction *f; mov r3, #7 str r3, [r2, #4] void main(void) ldr r2, <u>.L4+4</u> 10 str r3, [r2, #4] f->denom = 7; 11 mov r3, #0 12 arr[1] = 7;b .L2 13 .L3: 10 for (int i = 0; i < 4; i++) { 14 mov r1, #5 11 15 arr[i] = 5;ldr r2, <u>.L4</u>+4 12 16 } str r1, [r2, r3, asl #2] 13 17 add r3, r3, #1 14

Try CompilerExplorer to find out!

C-strings

```
char *s = "Stanford";
  char arr[] = "University";
  char oldschool[] = {'L','e','l','a','n','d'};
  char buf[100];
  char *ptr;
                                                     64
                                                     63
   which assignments are valid?
                                                     61
   ptr = s;
                                                     6c
 ptr = arr;
                                                     65
3 ptr = buf;
                                                     4c
4 arr = ptr;
5 buf = oldschool;
```

What does a typecast actually do?

Aside: why is this even allowed?

Casting between different types of pointers — perhaps plausible

Casting between pointers and int — sketchy

Casting between pointers and float — bizarre

```
int *p; double *q; char *s;
```

```
ch = *(char *)p;
val = *(int *)s;
val = *(int *)q;
```

Power of Types and Pointers

```
struct gpio {
  unsigned int fsel[6];
  unsigned int reservedA;
  unsigned int set[2];
  unsigned int reservedB;
  unsigned int clr[2];
  unsigned int reservedC;
  unsigned int lev[2];
};
```

Address	Field Name	Description	Size	Read/ Write
0x 7E20 0000	GPFSEL0	GPIO Function Select 0	32	R/W
0x 7E20 0000	GPFSEL0	GPIO Function Select 0	32	R/W
0x 7E20 0004	GPFSEL1	GPIO Function Select 1	32	R/W
0x 7E20 0008	GPFSEL2	GPIO Function Select 2	32	R/W
0x 7E20 000C	GPFSEL3	GPIO Function Select 3	32	R/W
0x 7E20 0010	GPFSEL4	GPIO Function Select 4	32	R/W
0x 7E20 0014	GPFSEL5	GPIO Function Select 5	32	R/W
0x 7E20 0018	-	Reserved	-	-
0x 7E20 001C	GPSET0	GPIO Pin Output Set 0	32	W
0x 7E20 0020	GPSET1	GPIO Pin Output Set 1	32	W
0x 7E20 0024	-	Reserved	-	-
0x 7E20 0028	GPCLR0	GPIO Pin Output Clear 0	32	W
0x 7E20 002C	GPCLR1	GPIO Pin Output Clear 1	32	W
0x 7E20 0030	-	Reserved	-	-
0x 7E20 0034	GPLEV0	GPIO Pin Level 0	32	R
0x 7E20 0038	GPLEV1	GPIO Pin Level 1	32	R

```
volatile struct gpio *gpio = (struct gpio *)0x20200000;
gpio->fsel[0] = ...
```

Pointers: the fault in our *s

Pointers are ubiquitous in C, and inherently dangerous. Be vigilant!


Q. For what reasons might a pointer be invalid?

Q. What is consequence of using an invalid pointer?







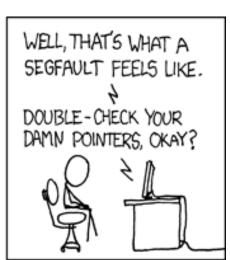

When coding directly in assembly, you get what you see.

For C source, you may need to look at what compiler has generated to be sure of what you're getting.

What transformations are legal? What transformations are desirable?

When Your C Compiler Is Too Smart For Its Own Good


(or, why every systems programmer should be able to read assembly)

```
int i, j;
i = 1;
i = 2;
j = i;
// can be optimized to
i = 2;
j = i;
// is this ever not equivalent/ok?
```

button.c

The little button that wouldn't

button.c: The little button that wouldn't

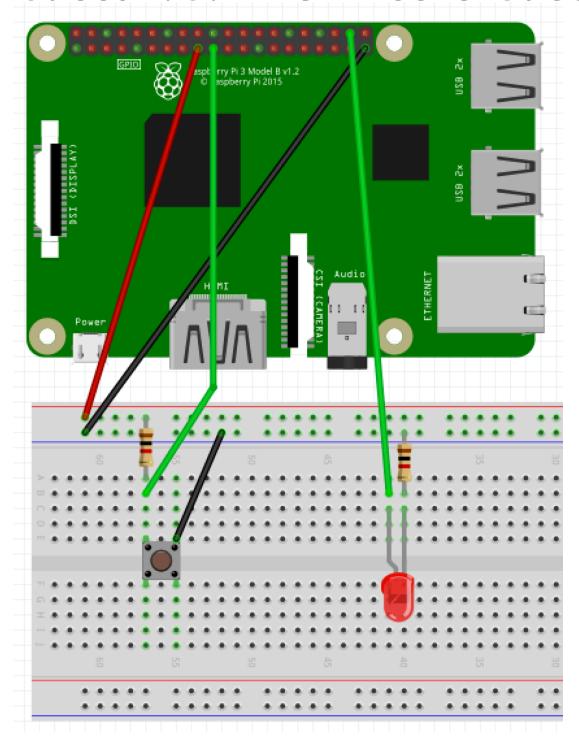

Want cool diagrams like this? Check out <u>fritzing.org</u>

Peripheral registers

These registers are mapped into the address space of the processor (memory-mapped IO).



These registers may behave **differently** than ordinary memory.

For example: Writing a I bit into SET register sets output to I; writing a 0 bit into SET register has no effect. Writing a I bit into CLR sets the output to 0; writing a 0 bit into CLR has no effect. To read the current value, access the LEV (level) register. So writing to SET can change the value of LEV, a different memory address!

Q:What can happen when compiler makes assumptions reasonable for ordinary memory that **don't hold** for these oddball registers?

volatile

Ordinarily, the compiler uses its knowledge of reads/writes to optimize while keeping the same externally visible behavior.

However, for a variable that can be read/written externally in a way the C compiler can't know (by another process, by hardware), these optimizations may not be valid.

The **volatile** qualifier informs the compiler that it cannot remove, coalesce, cache, or reorder references to a variable. The generated assembly must faithfully execute each access to the variable as given in the C code.

(If ever in doubt about what the compiler has done, use tools to review generated assembly and see for yourself...!)