Project Documentation

C64 – Joystick Switch & Rapid-Fire

Project number: 119

Revision: 1

Date: 18.03.2020



C64 - Control Port Switch & Rapid-Fire Rev. 1

Module Description

Most C64 games require the joystick being connected to Control Port 2. Some games, especially those written in the early years of the C64, want the joystick on Control Port 1. To save the hassle of connecting the joystick back and forth, this joystick switch is does it on pressing a button. The selected port is displayed with an LED. The POTX and POTY signal for the paddles is switched as well.

Also, a rapid-fire function is implemented, which is synchronized to the fire button. That means, it starts firing immediately after the fire button was pressed (the maximum delay is 1 ms) at an adjustable frequency. This way, an optimized frequency can be set for every game individually.

The micro controller, which is used in this project is a Pro Micro. They are available for cheap on Ebay and from other online shops, they can be programmed with the free Arduino Software and only a Micro-USB cable is required for the in-system programming of this controller. A I²C connection allows to connect an OLED display to visualize the fire rate.

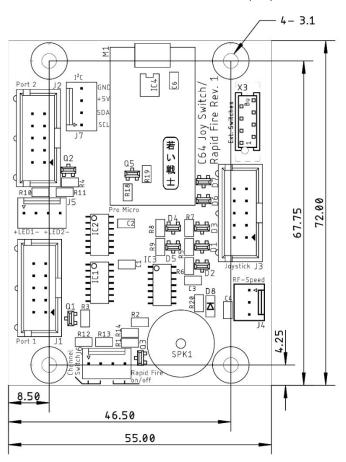


Figure 1: Dimensions of the PCB

A 3D printed case is provided with the project data. Alternatively it fist into the Reichelt RND 455-00959.

For future expansions, a serial (I^2C) EEPROM (IC4) can be installed as a non-volatile memory. Also, the connector X3 is not required.

20.03.2020 15:00

Programming the Pro Micro

The *.ino Sketch needs to be compiled and programmed into the Pro Micro module. This is fairly simple. Only a Micro USB cable is required. Make sure, that the cable is a full USB cable.

Required software:

- Arduino IDE
- Adafruit GFX Library (https://github.com/adafruit/Adafruit-GFX-Library)
- Adafruit SSD1306 Library (https://github.com/adafruit/Adafruit_SSD1306)
- The actual software (joysw rf.ino)

The two libraries should be installed first. This is accomplished within the Arduino IDE: Tools \rightarrow Manage Libraries. Search for the respective library and click Install (in case the library is not INSTALLED).

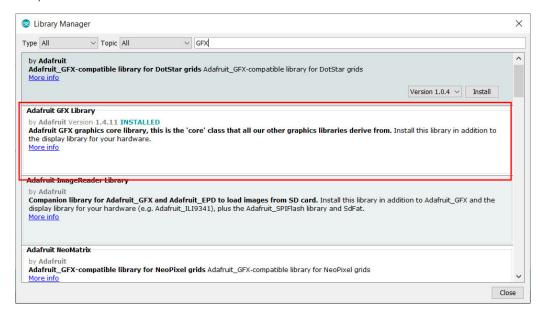


Figure 2: The Adafruit GFX Library in the Library Manager

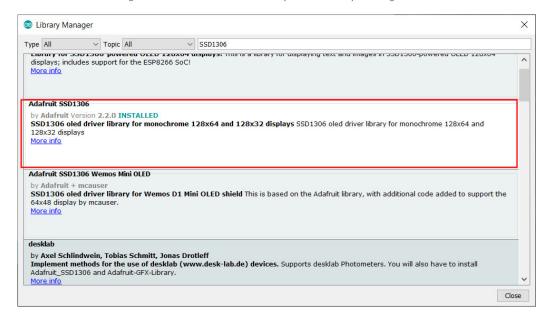


Figure 3: The Adafruit SSD1306 Library

Those libraries are required for the OLED display.

Next is selecting the type of Arduino. The Pro Micro is acting like a Leonardo. So in the Arduino IDE, you have to select Tools \rightarrow Board \rightarrow Arduino Leonardo.

Now make sure, that Pro Micro is connected to the PC via the USB cable (Micro USB). It does not need to be installed in the Control Port Switch. It is powered via USB.

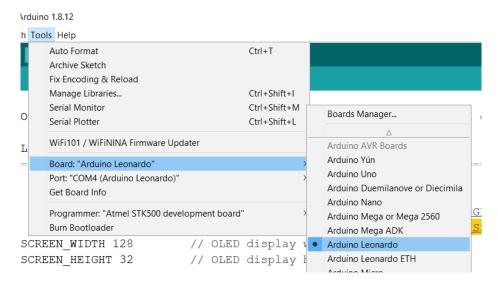


Figure 4: Setting up the board type (Leonardo)

After connecting the Pro Micro, the PC should report a new device is connected. The Pro Micro's programming interface acts as a serial interface (COM-Port). If not, there might be a problem with the drivers or the Pro Micro is broken.

Now, try to find the COM-Port number, that the Pro Micro is configured as:

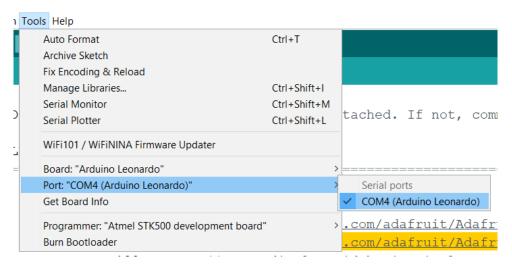


Figure 5: Selecting the COM-port

In Tools \rightarrow Port, this COM-port should be visible. Select it. The COM-port is the serial channel, the Arduino IDE is communication through with the ATmega 32u4 micro controller on the module.

Now you can load the Sketch into the Arduino IDE (File → Open...). The Sketch is the source code of the program. It needs to be compiled (to create a machine program, which the processor understands). In the Arduino IDFE, it is very much simplified. You do not need to care for makefiles etc. like in other development environments for micro controllers. If you are not into this topic, Arduino is for you.

You can even edit the source code. In case you do not want to connect a display (which is recommended), you can put // in front of the #define OLED directive. This makes a comment out of it, so it is not effective anymore. You will see a // comment at almost every line. Feel free to look though it, you might find it interesting. Programming is no witchcraft!

So, to compile and upload the sketch, click the right arrow icon at the top left of the Arduino IDE.

Figure 6: Compiling the Sketch and uploading (right arrow)

If all libraries are installed, the correct board type and COM-Port is selected and the Sketch is unmodified, the code should compile and upload without any error messages.

```
#define LOGO_HEIGHT 30
#define LOGO_WIDTH 34
static const unsigned char PROGMEM logo_bm
{ B00000000, B00000000, B11111001, B111000
B00000000, B00000001, B11110011, B10011000
B00000000, B00000011, B11100111, B10011000

Done uploading.

Global variables use 532 bytes (20%) of dy
```

Figure 7: The Upload is done

So, look out for "Done uploading", like shown in Figure 7. If you don't see this message, you should read the error messages, which are displayed in the bottom of the window.

Wiring the Device

Crimping

Crimping is the preferred way of making cables, the connections are of a good quality (if the crimping carried out well). Unfortunately, it requires some dedicated tools. Fortunately, there are tools available for a fair price. Good results can be accomplished with the Engineer PA-20 and PA-09 tools. The IWISS IWS-2820 is a cheaper alternative, the results are acceptable.

Those tools are two pass tools. That means, the wire crimp and the isolation crimp have to be carried out in two consecutive passes. I prefer the "wire crimp first" method. There are plenty video

tutorials about crimping on Youtube. I also plan to write an essay about crimping on my website (http://tech.guitarsite.de). This is a future project.



Figure 8: My crimp tools (from left to right: IWS-2820, PA-09, PA-20)

After 25 years in industrial engineering, I prefer locking connectors. The widely popular DuPont connectors are also acceptable for hobby projects. They might need to be secured with a drop of silicon glue (hot glue might work, but is harder to separate, if required).

Direct soldering of the wires onto the board, is also a working method, if you don't have any crimp tools or don't want to invest in them. It is not really great and it is hard to separate the components of the built, if required.

Cables



Figure 9: 2x5 and DSub IDC connectors and strain reliefs

20.03.2020 15:00

There are three ribbon cables, two for the control ports, one for the joystick input. Both types of connectors are IDC (<u>Insulation Displacement Connectors</u>). This means, no soldering required, easy make. The little blades on each pin will penetrate the insulation of each wire of the ribbon cable and make a reliable contact with the conductors. It is a technology, which is established since the 1970s.

You don't even need a special tool for making the cables, just a (little) vice (Figure 10). There is a strain relief for both connectors, which is installed last. First, you cut the ribbon cable to length. Then insert the ribbon cable and align to the opposite side of the connector. Keep in mind, that installing the strain relief will cause a 180° turn (Figure 11). So, insert the cable from the opposite side that you finally want the cable to leave the connector. Pin 1 is marked. The wire 1 is also marked on a ribbon cable.

All D-Sub 9 connectors only have 9 pins, the IDC connectors have 2x5 (=10) pins. Thus the 10^{th} wire has to be separated before the cable is inserted (Figure 12) in the D-Sub and finally clipped off.

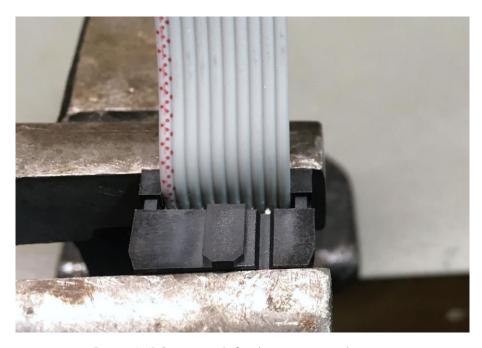


Figure 10: IDC connector before being compressed in a vice

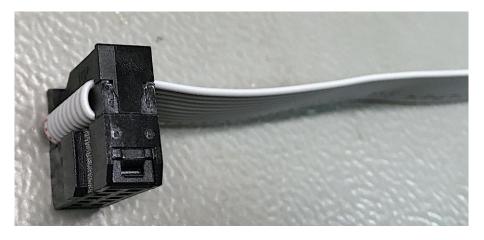


Figure 11: Side view after installing the strain relief

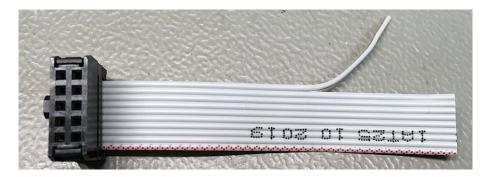


Figure 12: Separated 10th wire of the ribbon cable

Keep in mind, that pin 1 is in a deferent position on male and female D-Sub connectors. On a female connector, the pin numbers are usually shown on the contact face.

The required ribbon cables look like this:

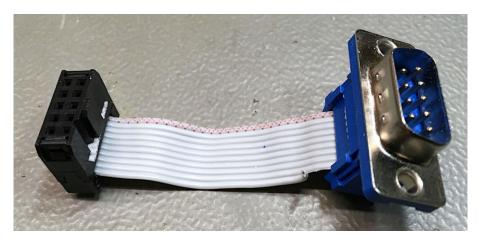


Figure 13: Joystick Input cable: Male D-Sub, 8cm ribbon cable



Figure 14: The output cables: female D-Sub, 8cm ribbon cable

Please note the different orientation of the coding notch in Figure 13 and Figure 14. Also, the marked wires (1) of the ribbon cables are on opposite sides. The cable shown in Figure 14 is required twice.

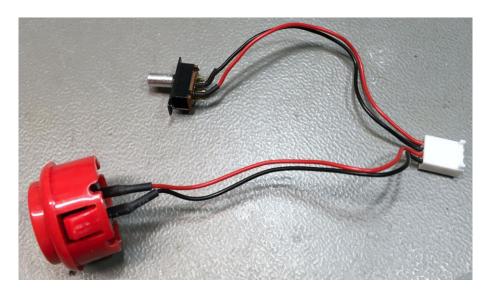


Figure 15: The cable with the rapid-fire button and the channel select switch

The rapid-fire button is sold as "30mm arcade button" on ebay or AliExpress. The switch is a panel mount slide switch, the screw holes (M2) pitch is 19mm. The cable length is 12cm for both switches.

It is advised to use shrinkable sleeve the shown connector is a Molex 22-01-2041 crimp housing (refer to the /Switches). The crimp dies used for the crimp terminal (also for DuPont crimp terminals) are 1.6mm for the wire crimp and 1.9mm for the insulation crimp.



Figure 16: The display cable

DuPont	Signal	Color	Molex
Pin 1	GND	Black	Pin 4
Pin 2	+5V	Red	Pin 3
Pin 4	SDA	Yellow	Pin 2
Pin 3	SCL (also "SCK")	Grey	Pin 1



Figure 17: 0.91" OLED display

The display is a 0.91'' OLED with I^2C bus and an SSD1306 controller. The measures of the display PCB are $38 \text{mm} \times 12 \text{mm}$.

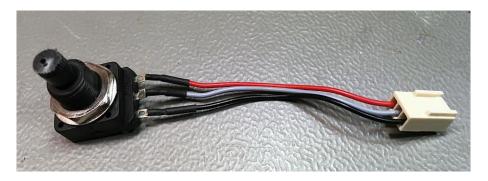


Figure 18: Potentiometer cable

The crimp housing is a Molex 22-01-2031. For the connection, please refer to chapter Pinouts/Fire-Rate Potentiometer.Length 6.5cm.

Pot	Signal	Color	Molex
Clockwise	+5V	Black	Pin 1
Тар	RF-Speed	Red	Pin 2
Counter Clockwise	GND	Yellow	Pin 3

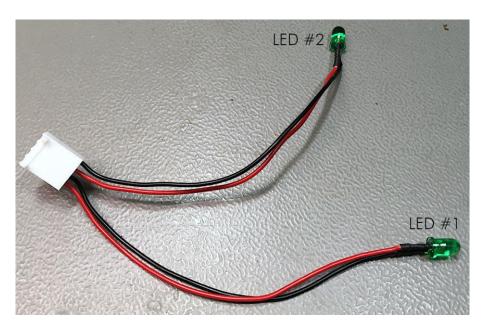


Figure 19: LED cable

Again, there is a Molex 22-01-2041 crimp housing (refer to Chapter Pinouts/LEDs). Note: The LEDs have a polarity. The anode (+) and the cathode (-) must not be confused. The cathode is marked with the flat side. Also, the cathode pin is shorter. It is advised to use shrinkable sleeves for the solder joints. Length: 8cm.

Assembly

The 3D printed housing consists of three parts and a label. Also, some screws are required.



Figure 20: Top view of the completed Control Port Switch

The label is printed on a weatherproof outdoor sticker (I have used HERMA 9500) for laser printing (on my Samsung C1810W color laser printer). Other brands are also suitable. The foil sticks very well.

The top shell, bottom shell and display holder were printed with PLA filament.

Assembling the PCB is pretty straight forward. First populate the surface mount parts (SMD). The Pro Micro might require the pin headers being soldered. To get good and vertical connections, insert the pin headers into the socket strips into the PCB and solder the Pro Micro first. Then solder the socket strips in the PCB.

The through hole parts are soldered last.

Before mounting any parts in the top shell, the label should be installed.



Figure 21: The required screws

The following screws are required

- 2x M3x8 and M3 nuts for the D-Sub connector (Joystick input). Non-Metric screws are possible.
- 2x M2x6 for the slide switch
- 4x C2.2x4.5 for the display holder
- 4x C2.9x9.5 for the case

The tolerances of the display cutout and the display holder are \pm 0.5mm, so such a display should fit in, although the tolerances might be high. Nevertheless, the display should be handles with care. The glass is thin and breaks easily. So, make sure, the display fits before you (carefully) tighten the screws (4x C2.2x4.5). Refer to Figure 22.

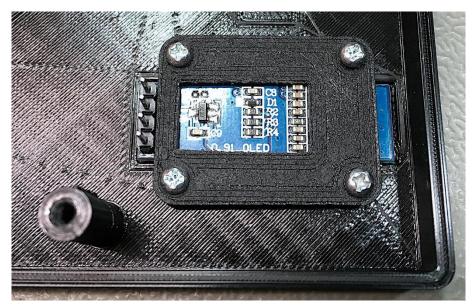


Figure 22: Mounted display

Mount the potentiometer. The pins should point inwards(Figure 23).

The cable with the arcade button can be mounted by inserting the slide switch through the hole. The arcade button snaps in place. There are different arcade buttons available, which might be slightly different. In case the arcade button sits lose, some hot glue can cure that. Do not apply the hot glues near the (open) sides, because it will block the button. Only apply it near the snap-in pins.



Figure 23: The completely assembled top shell

Fix the slide switch with two screws (M2x6). The two connected terminals of the slide switch should point to the side with the pot and the arcade button. Only this way, it will switch to Port #1 when slid downwards (red circle in Figure 23).

For the LEDs, snap in the LED holders and insert the LEDs. They could be confused, so make sure, that the LEDs are mounted in the place, they belong. Refer to Figure 19 and Figure 23.

Finally, mount the display cable. This can be oriented improperly. Refer to Figure 16 and Figure 23.

Assembling the bottom shell is not much work. The joystick input cable ("Male") is screwed to the bottom with two screws (M3x8 and M3 nuts). Refer to Figure 24.

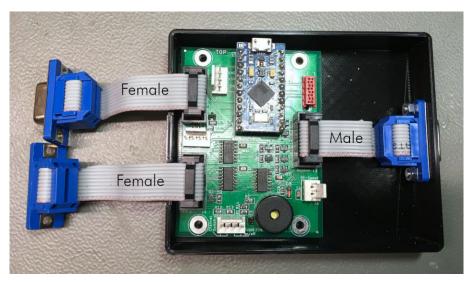


Figure 24: Assembled bottom shell

Put the PCB in place and connect the ribbon cables. The PCB is not yet held in place by screws.

C64_JoySW_RF_ModD.docx

Drafted by Sven Petersen

Page 12 of 16

Doc.-No.: 119-6-01-01

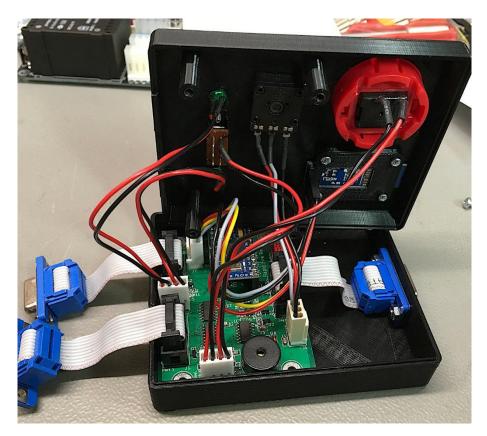


Figure 25: Connecting top shell and bottom shell

The cables from the top shell are now connected to the PCB. The space in the case is restricted and it might take some fiddling to close the case. Without cables being in the way.

Finally, the case is closed with the C2.9x9.5 screws. These screws are passing the mounting holes in the PCB and are screwed into the top shell mounting posts.



Figure 26: Finished Control Port Switch (side view)

Test of the Control Port Switch

For testing, I have used the Joytester II, which can be found on csdb.dk.

Connect the Control Port Switch to the C64, then switch on the computer. The Control Port Switch will issue a beep (1/4 second). The display should first show the 64 logo, then a link to my website (sorry for advertising).

The port selector switch selects one port and the corresponding LED should light up. Sliding the switch to the opposite side should select the other port.

Pushing the arcade button should switch on the rapid-fire. This is displayed on the OLED display. The LED of the selected Port should blink while rapid-fire is on. The blink rate resembles the fire rate. Turn the pot CCW and the fire rate gets less (150 r/min is the minimum in the present software), turning the pot clockwise should increase the fire rate (1500 r/min is the maximum in the present software).

Now load the software and connect the joystick. The joystick should be active on the selected port. All four directions and the fire button should be tested for both ports. They should show some activity on the selected port only.

Trouble Shooting

Make sure, that the cables are connected properly and that the single wires are not confused.

In case the device is dead (no sound, no light, no display), make sure, the Pro Micro is programmed.

Check the orientation of the ICs on the board, check the soldering.

Pinouts

Control Ports

J1 (Port 1) & J2 (Port 2) -2x5 pin header (box connector) for a ribbon cable which connects via a D-SUB 9 (female) to the control port.

Pin	D-SUB	Signal	Pin	D-SUB	Signal
1	1	JOY0 (up)	2	6	FIRE
3	2	JOY1 (down)	4	7	+5V
5	3	JOY2 (left)	6	8	GND
7	4	JOY3 (right)	8	9	POTX
9	5	POTY	10	-	n.c.

Joystick Port

J3 - 2x5 pin header (box connector) for a ribbon cable which connects via a D-SUB 9 (male) to the control port.

Pin	D-SUB	Signal	Pin	D-SUB	Signal
1	1	JOY0 (up)	2	6	FIRE
3	2	JOY1 (down)	4	7	+5V
5	3	JOY2 (left)	6	8	GND
7	4	JOY3 (right)	8	9	POTX
9	5	POTY	10	-	n.c.

20.03.2020 15:00

Fire-Rate Potentiometer

J4 – 3p. Molex 22-27-2031 (2,54mm pitch pin header, friction lock). Mating crimp housing 22-01-2031. Crimp terminal: 2478-TL/0850-0106.

Alternatively, a 2.54mm pitch standard pin header and a Dupont crimp housing and terminals can be used or the potentiometer is wired and soldered in without any connectors.

Pin	Signal	Note
1	+5V	Clockwise
2	RFSPEED	Тар
3	GND	Counterclockwise

Switches

J6 – 4p. Molex 22-27-2041 (2,54mm pitch pin header, friction lock). Mating crimp housing 22-01-2041. Crimp terminal: 2478-TL/0850-0106.

Alternatively, a 2.54mm pitch standard pin header and a DuPont crimp housing and terminals can be used or the switches are wired and soldered in without any connectors.

Pin	Signal	Note
1	/SWITCH	Switch for channel switching
2	GND	The other connection for this switch
3	/RF_ON	Switch for rapid-fire
4	GND	The other connection for this switch

LEDs

J5 – 4p. Molex 22-27-2041 (2,54mm pitch pin header, friction lock). Mating crimp housing 22-01-2041. Crimp terminal: 2478-TL/0850-0106.

Alternatively, a 2.54mm pitch standard pin header and a Dupont crimp housing and terminals can be used or the LEDs are wired and soldered in without any connectors.

Pin	Signal	Note
1	+5V	Anode of LED for Port 1 active
2	/LED1	Cathode LED1, 330Ω resistor on PCB
3	+5V	Anode of LED for Port 2 active
4	/LED2	Cathode LED2, 330Ω resistor on PCB

I²C-Bus

J7 – 4p. Molex 22-27-2041 (2,54mm pitch pin header, friction lock). Mating crimp housing 22-01-2041. Crimp terminal: 2478-TL/0850-0106.

20.03.2020 15:00

The I^2C bus provides a display connection. The total power consumption of the board, the display and the joystick should not exceed 100mA.

Pin	Signal	Note
1	SCL	I ² C Clock
2	SDA	I ² C Data
3	+5V	Supply voltage (I < 100mA)
4	GND	Ground

External Switches

X3 - MPE Garry 369-1-008 (MicroMatch 8p., female, THT).

This is an optional connector to operate this module with an external switch board (Project No. 112) or rotary encoder board (Project No. 118) from the Pi1541 Project. Both boards are suitable for +5V supply, except the LEDs, which then should remain not assembled.


Pin	Signal	Note
1	/SW1_IN	Select
2	/SW2_IN	Up
3	/SW3_IN	Down
4	/SWITCH	Channel Switching
5	/RF_ON	Rapid-fire on/off
6	-	Not connected
7	+5V	Power supply for external switches
8	GND	Ground

Links


- My github: https://github.com/svenpetersen1965
- My website: http://tech.guitarsite.de/
- Arduino IDE: https://www.arduino.cc/en/Main/Software
- The test software: https://csdb.dk/release/?id=170175
- A source of the OLED display: <u>AliExpress: 1 pcs 0.91 inch OLED module 0.91" white/blue OLED 128X32 OLED LCD LED Display Module 0.91" IIC Communicate</u>
- A source of the arcade button: <u>AliExpress: 10 pcs Arcade 30mm Round Button Copy SANWA OBSF-30</u>
- A source of the Pro Micro: <u>AliExpress: TZT Pro Micro ATmega32U4 5V 16MHz Replace</u> <u>ATmega328 For Arduino Pro Mini With 2 Row Pin Head</u>er For Leonardo Mini Usb Interface

Note: The sources are one of plenty.


20.03.2020 15:00

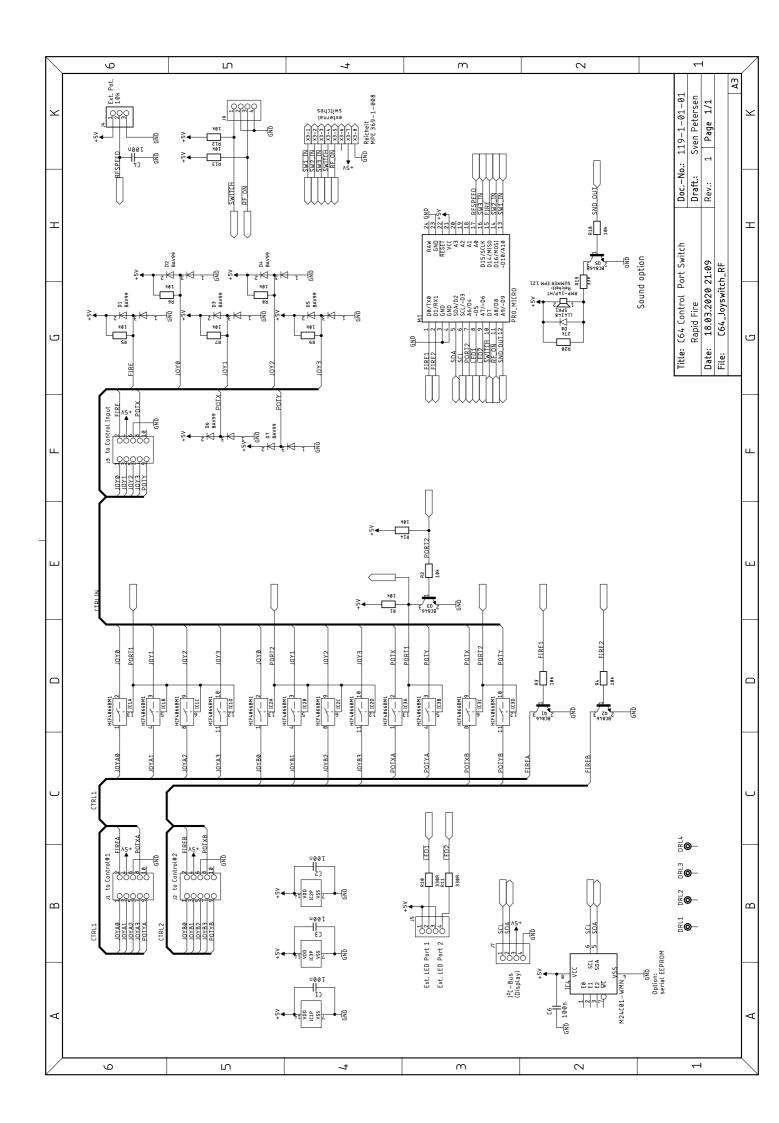


Sven Petersen	Doc	No.: 1	19-2-6	01-01
2019	Cu:	35µm	Cu-Lay	ers: 2
C64_Joyswitch_RF				
18.03.2020 21:12			Rev.:	1
placement component side				

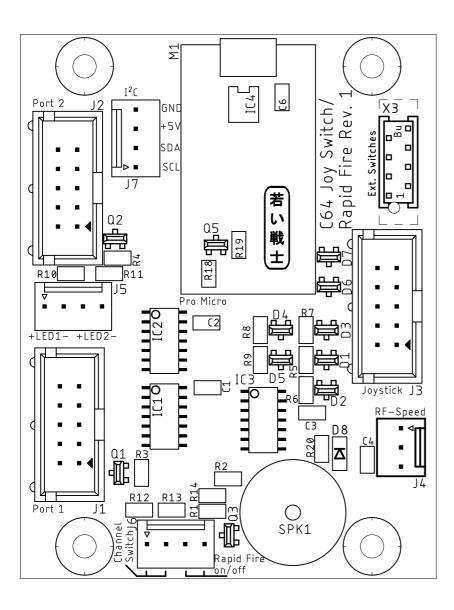


Sven Petersen	DocNo.: 1	19-2-01-01
2019	Cu: 35µm	Cu-Layers: 2
C64_Joyswitch_RF		
18.03.2020 21:20		Rev.: 1
placement component	side	

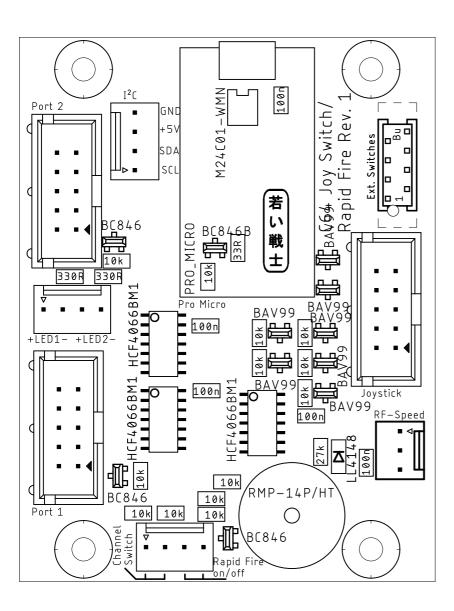


Sven Petersen	DocNo.: 1	19-2-01-01
2019	Cu: 35µm	Cu-Layers: 2
C64_Joyswitch_RF		
18.03.2020 21:20		Rev.: 1
top		

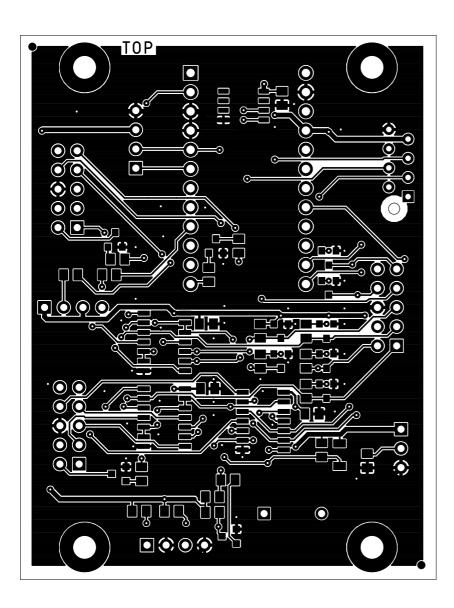


Sven Petersen	DocNo.: 1	19-2-01-01
2019	Cu: 35µm	Cu-Layers: 2
C64_Joyswitch_RF		
18.03.2020 21:20		Rev.: 1
bottom		

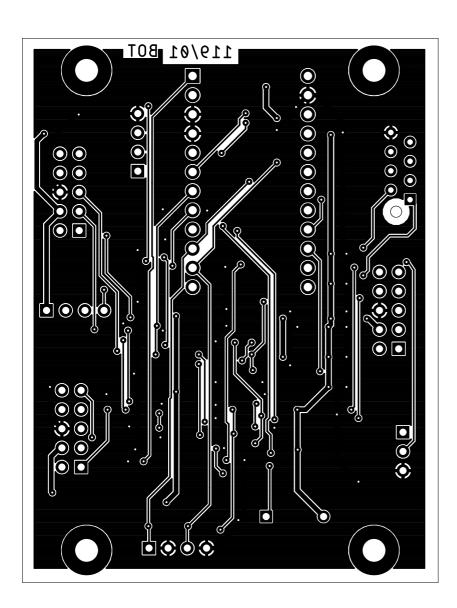


Sven Petersen	DocNo.: 1	19-2-01-01
2019	Cu: 35µm	Cu-Layers: 2
C64_Joyswitch_RF		
18.03.2020 21:20		Rev.: 1
stopmask component	side	

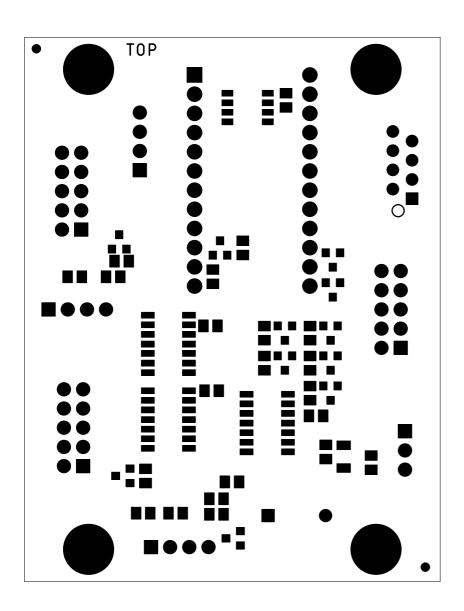

Sven Petersen	DocNo.: 1	19-2-01-01
2019	Cu: 35µm	Cu-Layers: 2
C64_Joyswitch_RF		
18.03.2020 21:20		Rev.: 1
stopmask solder side		

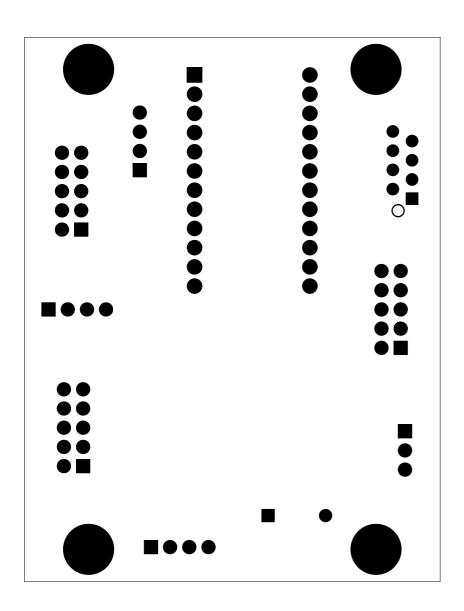

Sven Petersen	DocNo.: 1	19-2-01-01
2019	Cu: 35µm	Cu-Layers: 2
C64_Joyswitch_RF		
18.03.2020 21:12		Rev.: 1
placement component	side mea	sures

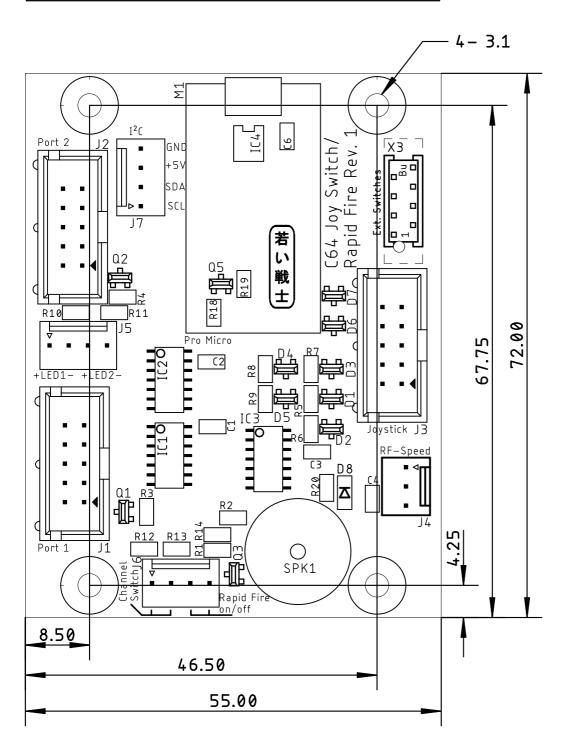

C64 – Control Port Switch & Rapid-Fire Rev. 1

Functional Description

J1 connects top Control Port 1, J2 to Control Port 2. The switching functionality to the four direction channels (JOY0...3) of the joystick is realized in IC1 and IC2. A HIGH level on signal PORT1 switches on the analog switches of IC1 to the active state, while IC2 is switched off. The joystick signals are available on J1 (JOYA0...3).

A HIGH level on signal PORT2 switches IC1 off (PORT1 is the inverted PORT2), while IC2 is switched on. JOY0...3 are now present on JOYB0...3 (J2, Port 2).

The analog signals POTX and POTY are switched with the analog switch IC2. Q3 and R1 invert the signal PORT2. A HIGH level on the resulting Signal PORT1 is switching POTX to POTXA and POTY to POTYA on control port 1.

A HIGH level on PORT2 switches POTX to POTXB and POTY to POTYB (control port 2).

Both Fire signals (FIREA and FIREB) are generated by the micro controller module M1, a Pro Micro. Q1 and Q2 serve as switches. HIGH pulses on the signals FIRE1 and FIRE2 respectively issue LOW pulses on FIREA and FIREB respectively. LOW means, that the fire is active.

/LED1 and /LED2 should indicate the active control port. /SWITCH and /RF_ON are active LOW signals from external switches, the purpose is switching between channels and switching on/off the rapid-fire function.

The FIRE signal is issued by the connected joystick. It is active LOW. The controller is supervising this signal and issuing the HIGH level or pulses on FIRE1 or FIRE, depending on the rapid-fire option is switched off or on and the port, which is selected.

The signal RFSPEED is a voltage level depending on the position of the connected "Speed" potentiometer. The controller is converting it to digital internally.

J7 carries the I^2C bus signals of the controller and supply voltage (+5V) and ground. The purpose is connecting an I^2C bus LCD or OLED display. This can serve to indicate the state and rapid-fire rate.

The twin diodes D1...D7 serve as a basic protection of the joystick input. The digital joystick inputs are connected to 10k pull-up resistors.

IC4 is not necessarily populated. It is an EEPROM and can be used to store parameters that should be non-volatile. It is only required, if the scrip for the Pro Micro supports this feature.

The circuitry around Q5 is driving a piezo buzzer. It is an option and only required, in case the firmware (script) for the Pro Micro supports this feature.

C64 Control Port Switch Rev. 1 Bill of Material Rev. 1.0

Pos.	Qty Value	Footprint	RefNo.	Comment
_	1 119-2-01-01	2 Layer	PCB Rev. 1	2 layer, Cu 35µ, HASL, 72.0mm x 55.0mm, 1.6mm FR4
2	3 2x5 box connector	2X05WV	J1, J2, J3	e.g. Reichelt WSL 10G
က	3 10p IDC receptacle, 2,54mm		(J1), (J2), (J3), (J4)	e.g. Reichelt RND 205-00682
4	2 9p D-SUB (female), IDC		(J1), (J2)	e.g. Reichelt D-SUB BU 09FB
2	1 9p D-SUB (male), IDC		(13)	e.g. Reichelt D-SUB ST 09FB
9	1 6410/22-27-2031	6410-3P	14	Molex KK Pin header, 3p., 2.54mm, e.g. Reichelt MOLEX 22272031
7	1 22-01-2031		(14)	Molex Crimp Housing
∞	1 Potentiometer, 10k, linear,		(14)	e.g. Reichelt PIH PC16IP061033
0	1 knoh for rotary axis 6 mm		(14)	Raichalt KNOPF 10-1508
C	3 6410/22-27-2041	6410_AP	(5.) 5 6 7	Moley KK Pin header An 254mm e a Reichel MOLEX
<u>)</u>		=) - -)		22272041
11	3 22-01-2041		(15), (16), (17)	Molex Crimp Housing
12	15 2759-TL/0850-0114		(14-17)	Molex Crimp Terminal (order more than required)
13	2 3mm/green		(15)	LED, e.g. Reichelt LED 3MM GN
14	1 30 mm arcade button		(76)	From AliExpress, see module description
15	1 miniature slide switch		(76)	hole pitch: 19mm
16	1 OLED 0.91", I ² C, SSD1306		(77)	OLED Display, see documentation
17	1 DuPont Crimp Housing 1x4		(OLED Display)	AliExpress, ebay, other webshops
18	4 DuPont Crimp Terminals		(OLED Display)	AliExpress, ebay, other webshops
19	5 100n	805	C1, C2, C3, C4, C6	0805 SMD ceramic capacitor, 25V or better
20	13 10k	805	R1, R2, R3, R4, R5, R6, R7, R8, R9, R12, R13, R14, R18	0805 SMD chip resistor, 5% or better
21	1 27k	805	R20	0805 SMD chip resistor, 5% or better
22	2 330R	805	R10, R11	0805 SMD chip resistor, 5% or better

C64_JoySwRF_BOM_v1_0.xlsx Draffed by Sven Petersen

20.03.2020 13:56 Doc.No.: 119-5-01-01.0

C64 Control Port Switch Rev. 1 Bill of Material Rev. 1.0

Pos				
	Qty Value	Footprint	RefNo.	Comment
. 23	1 33R	805	R19	0805 SMD chip resistor, 5% or better
24	1 369-1-008	MICMA08B	X3	do not place: MPE, Socket MicroMatch 1.27 mm, 2X04, straight, e.g. Reichelt MPE 369-1-008
25	7 BAV99	SOT23	D1, D2, D3, D4, D5, D6, D7	Twin diode, SMD SOT23
7, 7	4 BC846B	SOT23	Q1, Q2, Q3, Q5	NPN transistor, SMD SOT23. Alternative: BC847B, BC848B,
27	3 HCF4066BM1	SO-14	IC1, IC2, IC3	4066B SMD, e.g. ST-Micro or NXP, Reichelt SMD 4066
. 28	1 LL4148	SOD80C	D8	SMD Diode
. 58	1 M24C01-WMN	SO-08	IC4	do not place
30	1 PRO_MICRO	PRO_MICRO	M1	Micro controller module, ebay or other online shops
3.1	2	1×12	(M1)	12 way socket strip (pitch: 2.54mm), e.g. Reichelt MPE 115-1-012
32	1 RMP-14P/HT	RMP-14P/HT	SPK1	KM, e.g. Reichelt SUMMER EPM 121
33	1 3D printed case			in the project files. Alternative: Plastic case Reichelt RND 455-00959
34	2 LED mounting clip 5mm			e.g. Reichelt MONTAGERING 5MM
35 60cm	Wire, AWG24/0.25mm², red			for wiring
36 60cm	Wire, AWG24/0.25mm², black			for wiring
37 9cm	Wire, AWG24/0.25mm², grey			for wiring
38 9cm	Wire, AWG24/0.25mm², yellow			for wiring
39 11cm	shrinkable sleve			for LEDs and switches
40 25cm	Ribbon Cable, AWG28, 10p			For joystick and control port connections

20.03.2020 13:56 Doc.No.: 119-5-01-01.0