

### **Keyboard layout:**


- CPX may be combined with +, -, x, /,  $\pm$ , x^2,  $\sqrt{x}$ , 1/x, //, !,  $\Gamma$ ,  $\pi$ , IxI, RND, as well as e.g. (HYP) SIN, COS, TAN, logs and their inverses. See the index for more.
- Modes are as described in the paragraph about indicators below.
- → is combined with H, H.MS, DEG, RAD, GRAD, 2, 8, 10, 16 for conversions.
- The keys B, C, and D immediately call the respective user programs if existent.



Active virtual keyboard in <u>hexadecimal</u> mode.  $\rightarrow$  is for addressing and temporary display in another base only (see below). The primary functions of the top left 6 keys are numeric input, so their default primary functions are accessed using f-shift. – In the other integer modes, the active keyboard will look alike, but the keys not needed for numeric input in the respective base will keep their default primary functions (except  $\Sigma$ +).



Active virtual keyboard in <u>alpha</u> mode. Therein, the 15 bytes alpha register is displayed in the dot matrix section and all input is appended directly to this register – the numeric line is accessible by commands only. Primary function of most keys will be inserting the letter printed bottom left of such a key, dark red on the original keyboard. For these keys, f-shift is necessary to reach the function on key top, and g-shift leads to homonymic Greek characters, where applicable. There are three exceptions,  $\psi$  being accessed via g-shifted  $\mathbf{0}$  (below  $\mathbf{PSE}$ ),  $\mathbf{\tau}$  via g-shifted minus (one key below  $\mathbf{T}$ ), and  $\mathbf{\eta}$  via f-shifted  $\mathbf{E}$ . Generally,  $\uparrow$  toggles upper and lower case.  $\mathbf{PSE}$  will insert a space. Only labels printed on green or red background in this picture execute the respective function.

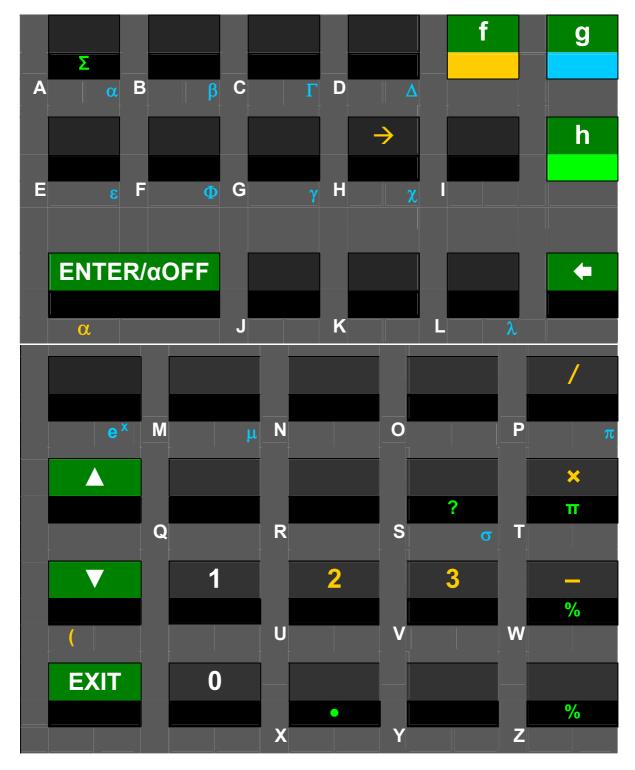

Active virtual keyboard in <u>temporary alpha</u> mode. This mode is called when opening catalogues and during some addressing. The functions printed on green background allow for catalogue browsing, error recovery, and leaving. See regular alpha mode, the addressing tables, and the catalogues for more.

# **MEMORY**

Stack		General purpose registers	Flags	Program memory
L	I	00	00	
		01	01	001
Т		02	02	002
Z				003
Y				
X	Display	86		
		87 Σ In x		
	arithmetic, stack registers ntain the real and imagi-	88 Σ In² x		
nary part of	the first complex number,	89 Σ In y	97	
	<b>T</b> carry the second. Stack kes the imaginary part of	90 Σ ln² y	98	498
the last argution is used.	ument if a complex func-	91 Σ (ln x · ln y)	99	499
As long as	no complex function is	92 Σ (x In y)	B Overflow	500
used, I may eral purpose	be taken as another genregister.	93 Σ (y ln x)	C Carry	
	•	94 n	D Danger	
•	pose registers 87 through	95 Σx		
99 take the	statistical sums indicated	00 5 2	Almha	

Alpha

96 Σ x²

97 Σy

98 Σ y<sup>2</sup>

99 Σxy

as soon as  $\Sigma$ + is used.

Flag D is set if "NaN" and "infinite" are allowed as result of commands.

#### ADDRESSING REGISTERS

1	User	x=		e other comparison	ons	(ISZ), FIX), SCI, Et commands, (	, asto, VIEW, x\\ NG, DISP, BASE, (\) CB and many more b\ OP (e.g. RCL )	it commands
	Display			ha mode is on.			Alpha mode is off.	
2	User input 1	<b>0</b> or <b>1</b>	O or 1 X, Y, Z, ENTER↑ closes alpha. closes alpha.			<b>X</b> , <b>Y</b> , <b>Z</b> , <b>T</b> , <b>L</b> , or <b>I</b> ) <sup>2</sup>	Number of register or flag or bit(s) or decimals <sup>3</sup>	•
	Display	OP n	OP x	OP r_	OP <b>→</b> _	OP s x	OP nn	OP <b>→</b> _
		e.g. x ∠ 0	e.g. x <del>\</del> y			e.g. STO sZ	e.g. <mark>SF 15</mark>	(indirect addressing)
3	User input			Register no.  0 0 9 9	Look right for more about indirect ad- dressing.	Store <b>x</b> on stack level <b>Z</b> .	X, Y, Z, T, L, or I	Register number
	Display			<b>OP r <i>nn</i></b> e.g. x ≠ r23			<b>OP →s x</b> e.g. VIEW →sL	<mark>OP → nn</mark> e.g. <mark>SCI →0</mark> 3
				Compare <b>x</b> with the number in reg. <b>23</b> .			Show the content of the register where <b>LASTx</b> is pointing to.	Select scientific display with the # of decimals specified in register <b>03</b> .

<sup>&</sup>lt;sup>1</sup> For **RCL** and **STO**, an arithmetic operator (+, -, ×, /) as well as MAX or MIN may precede step 2. See the index of operations. **RCL C** calls **CONST**.

<sup>&</sup>lt;sup>2</sup> For **RCL**, **STO**, **VIEW**, and **x<>** only. For **VIEW** and **x<>**, you may address these registers directly without switching to alpha mode before. For **RCL** and **STO**, only the stack registers X, Y, L and I may be addressed directly this way. Some stack operations may be useless but allowed, e.g. x<>sX . It is the user's responsibility not to mix pairs in complex mode, since a complex operation will always affect two registers: the one specified and the adjacent register.

Register and flag numbers may be ① ① ... ⑨ ⑨ , number of decimals up to ① ① , bases up to ① ⑥ , bit numbers up to ⑥ ③ , integer word size up to (6) (4). For numbers <10, you may key in e.g. (5) (ENTER 1) instead of (0) (5). There are three additional flags addressed via (B), (C), and (D).

## **ADDRESSING LABELS**

1	User input		GTO, (XEQ), (LBL), (SOLVE) or (INTEG) 4							
	Display		OP _ (e.g. GTO _ )  Alpha mode is off.							
2	User input	B, C, or D	ENTER to turns alpha mode on.	-	5	2-digit numeric label  0 0 9 9				
	Display	OP ' <i>name</i> ' e.g. GTO'B'	OP '_		→_ ddressing)	OP <i>nn</i> e.g. LBL 07				
3	User input		Label <sup>6</sup> + ENTER †  Last key closes alpha mode.	Any stack level, i.e. $(X)$ , $(Y)$ , $(Z)$ , $(T)$ , $(L)$ , or $(L)^7$	Register number  0 0 9 9					
	Display		<b>OP '<i>name</i>'</b> e.g. SLV'STF'	<b>OP →s x</b> e.g. INT →sY	<b>OP → nn</b> e.g. <mark>XEQ →44</mark>					
			Solve the function <b>STF</b> (with STF keyed in).	Integrate the function which's label is on stack level <b>y</b> .	Execute the routine which's label is in register <b>44</b> .					

HP34S Draft Manual

<sup>&</sup>lt;sup>4</sup> **SOLVE** and **INTEG** will be displayed and listed as SLV and INT, respectively. The labels B, C, and D may be called directly via the 3 keys top left on the keyboard, no need to press **XEQ** here.


<sup>&</sup>lt;sup>5</sup> Works with all these operations except **LBL**.

<sup>&</sup>lt;sup>6</sup> Such a label may consist of up to 3 alphanumeric characters. **ENTER** is only needed if less than 3 characters are entered.

<sup>&</sup>lt;sup>7</sup> You may address these registers directly without switching to alpha mode before.

### **DISPLAY**


The display features 3 sections: numeric, dot matrix and fixed symbols. The latter are called annunciators, and are for indicating modes (see the paragraph about indicators below). The dot matrix is 6 dots high and 43 dots wide, allowing for some 7 to 12 characters, depending on their widths. The numeric section features a sign, 12 digits for the mantissa, a sign for the exponent, and 3 digits for the exponent.

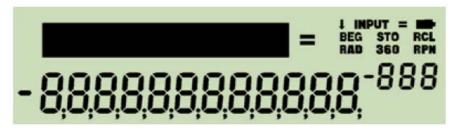

In general, the 34S uses the dot matrix for indication of some more modes than the annunciators allow, for showing the alpha register, and for passing additional information to the user.

Some commands and modes use the display sections in a special way:


1. STATUS displays the status of the flags in a very compact way, allowing a brief status overlook after some training. For example, if the flags 2, 3, 5, 7, 11, 13, 17, 19, and 23 are set, calling STATUS will display this:

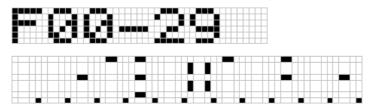

Within the numeric section, each row of horizontal bars in the mantissa shows the status of 10 flags. When a flag is set, the respective bar turns black. So here the top row indicates flags 0 and 1 are clear, flags 2 and 3 are set, and flag 4 is clear. Then, a divider is inserted to separate the first group of five flags from the next. Thereafter, flag 5 is set, 6 is clear, 7 is set, 8 and 9 are clear. Next row starts with flag 10 being clear, 11 set, 12 clear, 13 set, etc. Scrolling down by  $\square$  will display the flags 10 - 39, then 20 - 49 etc. until 90 - D. Scrolling up by  $\square$  reverts this. Alternatively, pressing a digit will show the flags starting with 10 times this digit. The numeric exponent displays the status of the 3 hotkeys top left on the keyboard: if A, b, or C show up, the respective label is defined in program memory.

The STATUS display will disappear when another key is pressed but **□** or **□** or a digit.

- 2. In integer modes, word size and complement setting are shown in the dot matrix, while the exponent indicates the base setting, carry, and overflow (see next paragraph).
- 3. In programming mode, the numeric display indicates the program step (001 500) in the mantissa and the number of unused steps in the exponent, while the dot matrix shows the command contained in the respective step.

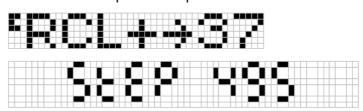

#### **INDICATORS**

There are a number of indicators signaling the mode the calculator is running in.

Indicator	INPUT	b	d	h	0	STO
Mode name if different	α					PRG
Set by op- eration	αON <sup>8</sup>	BASE 2	BASE 10	BASE 16	BASE 8	PRGON
Cleared by operation	αOFF	BASE ≠2 FLOAT FRACT	BASE ≠10 FLOAT FRACT	BASE ≠16 FLOAT FRACT	BASE ≠8 FLOAT FRACT	PRGOFF

Indicator	360	G	H.MS	RAD	/c
Set by op- eration	DEG	GRAD	H.MS >H.MS	RAD	BASE 1 FRACT 2 <sup>nd</sup> 🕠 in input ( \HMS)
Cleared by operation	GRAD RAD	DEG RAD	BASE FLOAT >HR	DEG GRAD	BASE ≠1 FLOAT

INPUT, STO, 360, and RAD are annunciators (see previous paragraph). Outside integer modes, everything else is indicated in the text line. A capital  $\bf C$  shows the last operation executed was a complex one, so you know you have to look at  $\bf x$  and  $\bf y$  then. The different date modes are signaled by  $\bf D.MY$  or  $\bf M.DY$ . Defaults Y.MD and FLOAT are not indicated. RPN may be shown permanently.

Within integer modes, word size and complement setting are shown in the dot matrix in a format WW.C, with C being 1 or 2 for 1's or 2's complement, U for unsigned, or S for sign-and-mantissa mode. In these modes, the exponent is used for further indications: its sign and its first digit show the base, a "c" in the second digit signals a carry bit set, an "o" in the third an overflow. Integer bases are indicated as follows:

Base	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
Display	b	3	4	5	6	7	0	9	d	-1	-2	-3	-4	-5	h	

All inputs are interpreted according to the mode set at input time. - A running program is signaled by a flashing RCL annunciator.

<sup>&</sup>lt;sup>8</sup> Alpha mode may be temporarily entered and left during addressing – see the tables above for more information. Alpha mode will also be entered opening the catalogues X.FCN, P.FCN, STAT, CONST, or CONV to allow for easy finding and selecting the item you are interested in. Keying in a character will jump to the first item starting with it, entering a second one will jump to the first item starting with this sequence, or anything following in the alphabet if this is not found. **ENTER1** will select the item you are on. After executing it, mode will return to the state it had before calling the catalogue, except the command chosen did change the mode in execution.

#### **INDEX OF OPERATIONS**

This lists all functions available on the 34S with the necessary keystrokes. Functions accessible via X.FCN will show up in this catalogue with their names unless specified differently explicitly. Sorting is as follows:  $0 \dots 9$ ,  $A \dots Z$ ,  $\alpha \dots \omega$ , (, ), +, -, \*, /, ±, "," ".", !, ?,  $\leftrightarrow$ ,  $\leftarrow$ ,  $\uparrow$ ,  $\downarrow$ ,  $\rightarrow$ , <,  $\leq$ , =,  $\neq$ ,  $\geq$ , >, #, °, %,  $\sqrt{}$ ,  $\infty$ . Super- and subscripts are handled like normal characters prefixed by  $\uparrow$  or  $\downarrow$ , respectively. Sorting is case insensitive.

The operations will work like on the HP-42S, special bit and integer functions like on the HP-16C, unless stated otherwise under remarks. Functions available on the 34S for the first time on an RPN calculator are highlighted under remarks, as are functions deviating from known ones carrying the same name. If no parameters are specified though required, they will be taken from the stack. Modes are abbreviated by their indicators. In this column an "&" represents logical AND, and a backslash stands for "all but", so e.g. ABS works in all modes but alpha. General operations with modes printed on red background are not programmable.

Name in listings	Keys to press	Works in modes	Remarks
c	(CPX)	FLOAT	Indicates complex operations <sup>9</sup> . <b>CPX</b> may be combined with any function which's name is printed in <i>italics</i> in this table. The three dots will be replaced in the listing by the name of the function attached.
10 <sup>×</sup>	g 10 <sup>x</sup>	FLOAT	
12h	h X.FCN 12h	FLOAT	Sets 12h time display.
1COMPL	h X.FCN 1COMPL	Integer	Like 1's complement in HP-16C.
1/x	f 1/x	FLOAT	
1/X	В	FLOAT	As long as this label is not used yet.
24h	h X.FCN 24h	FLOAT	Sets 24h time display.
2COMPL	h X.FCN 2COMPL	Integer	Like 2's complement in HP-16C.
2 <sup>x</sup>	<b>g 2</b> <sup>x</sup> )	\α	
	f [x]	\α	
ABS	CPX (1 Ixl	FLOAT	Calculates the magnitude $\sqrt{x^2+y^2}$ , returning it in <b>X</b> and clearing <b>Y</b> .
ACOS	g COS-1	FLOAT, H.MS	

Such operations work with pairs of adjacent registers. In each such pair, the first register contains the real and the second the imaginary part of the respective complex number. Unless stated otherwise explicitly, where a real function works with x (and maybe y), its complex sibling works with x + iy (and maybe z + it). Where a real function works with a register at address a, the respective complex function works with the registers at a and a + 1.

\_

Name in listings	Keys to press	Works in modes	Remarks
ACOSH	g HYP-1 COS	FLOAT	
ALL	h X.FCN ALL	FLOAT	
		Integer	
AND	h AND	FLOAT	Works like AND in HP-28S, i.e. <b>x</b> and <b>y</b> are interpreted before executing this operation. Any real number except zero is taken as "true", zero is "false".
ANGLE	h X.FCN ANGLE	FLOAT	Calculates the polar angle of <b>y</b> / <b>x</b> , i.e. the angle between the straight line connecting the origin with the point (x, y), and the positive x-axis.
ASIN	g SIN-1	FLOAT, H.MS	
ASINH	g HYP-1 SIN	FLOAT	
ASR	h X.FCN ASR n	Integer	Works like $n$ (1 64) consecutive ASRs on HP-16C. See the table above for addressing $n$ . In indirect addressing $n$ may be zero.
ATAN	g TAN-1	FLOAT, H.MS	
ATANH	g HYP-1 TAN	FLOAT	
BASE	h X.FCN BASE n		
BASE 2	<b>f</b> 2		Sets the base for integer calculations, with $2 \le n \le 16$ . Popular bases are directly ac-
BASE 8	g 8	\α	cessible on the keyboard. Furthermore, BASE 0 calls FLOAT, and BASE 1 calls
BASE 10	<b>f</b> 10		FRACT. See additional opportunities for <i>n</i> in the table above.
BASE 16	g 16		
BC?	h P.FCN BC? n	Integer	Tests the $n$ -th bit in $x$ . See opportunities for $n$ in the table above.
BESTF	h STAT BESTF	FLOAT	Selects the best curve fit model according to the correlation found like BEST in HP-42S.
BS?	h P.FCN BS? n	Integer	Works in analogy to "BC?".
B#	h X.FCN B#	Integer	Counts bits set like #B on HP-16C.
СВ	h X.FCN CB n	Integer	Clears the <i>n</i> -th bit in <b>x</b> . See opportunities for <i>n</i> in the table above.
CEIL	h (X.FCN) CEIL	FLOAT	Computes the smallest integer ≥ x.

Name in listings	Keys to press	Works in modes	Remarks
CF	n CF n	\α	See opportunities for <i>n</i> in the table above.
CLALL	h X.FCN CLALL	\PRG	Global clear after confirmation.
CLFLAG	h X.FCN CLFLAG	∖PRG	Clears all user flags.
CLPR	h (CLPR)	PRG	Clears current program after confirmation.
OLI IX	(CLPK)	∖PRG, \α	Clears active program after confirmation.
CLREG	h X.FCN CLREG	\α	Clears all general purpose registers.
CLSTK	h CLST	\α	
01	h CLx	\α	
CLx		\α	If no input is pending.
CLα	f CLa	All	Clears the alpha register like CLA in HP-42S.
CLΣ	g CLS	FLOAT	
СОМВ	f Cy,x	FLOAT	
CONJ	h CONJ	FLOAT	Changes the sign of <b>y</b> .
CORR	gr	FLOAT	
cos	f Cos	FLOAT, H.MS	
COSH	f HYP COS	FLOAT	
DATE	h X.FCN DATE	FLOAT	Recalls the date from the real time clock and displays it in the date format selected. See D.MY, M.DY, and Y.MD. The function DATE in HP-12C corresponds to DAYS+ here (see below).
DAY	h X.FCN DAY	FLOAT	Takes <b>x</b> as a date and returns the day of week in the dot matrix and a corresponding integer in the numeric display (Sunday = 7).
DAYS+	h X.FCN DAYS+	FLOAT	Adds a number of days in <b>X</b> on a date in <b>Y</b> and displays the resulting date including the day of week (Sunday = 7). This function works like DATE in HP-12C.
DBLR	h X.FCN DBLR		
DBL*	h (X.FCN) DBL*	Integer	Double precision commands like in HP-16C, but now for up to 128 bits.
DBL/	h X.FCN DBL/		·

Name in listings	Keys to press	Works in modes	Remarks
DEG	g DEG	FLOAT	
DECOMP	h X.FCN DECOMP	/c	Decomposes the fraction in ${\bf X}$ , i.e. puts its numerator in ${\bf Y}$ and its denominator in ${\bf X}$ .
DENANY	h X.FCN DENANY	FLOAT	Default fraction format like in HP-32SII, allowing maximum precision.
DENFAC	h X.FCN DENFAC	FLOAT	"Factors of the maximum denominator" fraction format like in HP-32SII.
DENFIX	h X.FCN DENFIX	FLOAT	Fixed denominator fraction format like in HP-32SII.
DENMAX	h X.FCN DENMAX	FLOAT	Works as /c does in HP-32SII, but maximum (and default) denominator is 9999.
DISP	h X.FCN DISP n	FLOAT	Changes the number of decimals while keeping the mode (FIX, SCI, ENG). See opportunities for <i>n</i> in the table above.
DROP	h X.FCN DROP	\α	Drops $x$ , i.e. changes stack contents from $[x, y, z, t]$ to $[y, z, t, t]$ .
DROPY	h X.FCN DROPY	\α	Changes stack contents from [x, y, z, t] to [x, z, t, t].
DSE	f DSE reg	PRG	See opportunities for <i>reg</i> in the table
DSZ	h P.FCN DSZ reg	TNO	above.
D.MY	h X.FCN D.MY	FLOAT	Sets the format for date calculations.
D→J	h X.FCN D→J	FLOAT	Assumes <b>x</b> is a date and converts it to a Julian day number.
D→R	h X.FCN D→R	FLOAT	Assumes <b>X</b> containing degrees and converts them to radians. Mode is kept constant.
E3OFF	h X.FCN E3OFF	FLOAT	Toggles the thousands separator (either a comma or a point depending on the radix
E3ON	h X.FCN E3ON	TLOAT	setting).
ENG	f ENG n	FLOAT	See opportunities for <i>n</i> in the table above.
ENTER♠	ENTER +	\α	
ERF	h STAT ERF	FLOAT	Calculates the error function erf(x).
EXPF	h STAT EXPF	FLOAT	Selects the exponential curve fit model.
e <sup>x</sup>	g e <sup>x</sup>	FLOAT	
e <sup>x</sup> -1	h X.FCN e <sup>x</sup> -1	FLOAT	

Name in listings	Keys to press	Works in modes	Remarks
FB	h X.FCN FB n	Integer	Inverts ("flips") the <i>n</i> -th bit in <b>x</b> . See opportunities for <i>n</i> in the table above.
FC?	h P.FCN FC? n		
FC?C	h P.FCN FC?C n	\α	See opportunities for <i>n</i> in the table above.
FC?F	h P.FCN FC?F n	, icc	oce opportunities for 17 in the table above.
FC?S	h P.FCN FC?S n		
FF	h X.FCN FF n	\α	Flips the flag specified. See opportunities for <i>n</i> in the table above.
FIB	h X.FCN FIB	\α	Calculates the Fibonacci number $F_x$ .
FILL	h FILL	\α	Copies <b>x</b> in <b>Y</b> , <b>Z</b> , and <b>T</b> .
FIX	f FIX n	FLOAT	See opportunities for <i>n</i> in the table above.
FLOAT	f .d	\α	Works like DECM in HP-42S. Additionally,
LOAT	<b>9 H</b>	H.MS	converts H.MS data in <b>X</b> to decimal.
FLOOR	h X.FCN FLOOR	FLOAT	Computes the largest integer ≤ <b>x</b> .
FP	g FP	FLOAT	
FRACT	g b/c	FLOAT	Sets fraction mode like in HP-32SII. Maximum denominator is 9999. Absolute values must be > 10E-5 and < 10E5.
FS?	h FS? n		
FS?C	h P.FCN FS?C n	\o,	See opportunities for <i>n</i> in the table above.
FS?F	h P.FCN FS?F n	$\frac{\lambda \alpha}{\alpha}$	See opportunities for II in the table above.
FS?S	h P.FCN FS?S n		
F(x)	h STAT F(x)	FLOAT	Like Q(F) in HP-21S. Equals FDIST( <b>x</b> ; <b>r01</b> ; <b>r02</b> ) in MS Excel.
F <sup>-1</sup> (p)	<b>h STAT</b> F <sup>-1</sup> (p)	FLOAT	Like Fp in HP-21S. Equals FINV(x; r01; r02) in MS Excel.
GCD	h X.FCN GCD	\α	Returns the Greatest Common Divisor of $\boldsymbol{x}$ and $\boldsymbol{y}$ .
GRAD	g GRAD	FLOAT	

Name in listings	Keys to press	Works in modes	Remarks
	h GTO label	PRG	
0.70	m GTO Tabel	∖PRG, \α	Like in HP-32S. See opportunities for <i>label</i>
GTO	h GTO . label	· \PRG, \α	in the table above.
	h GTO	1 CO, 100	
H.MS	g H.MS	FLOAT	Sets H.MS mode.
H.MS+	+	H.MS	
H.MS-	-	11.1013	
INT	h INTEG label	FLOAT	Integration parameters will be transferred like in HP-15C. See opportunities for <i>label</i> in the table above.
IP	f P	FLOAT	
ISG	g ISG reg	PRG	See opportunities for <i>reg</i> in the table
ISZ	h P.FCN ISZ reg	PRG	above.
Ιβ	h X.FCN I β	FLOAT	Calculates the regularized incomplete beta function $\beta(\mathbf{x}, \mathbf{a}, \mathbf{b})$ with $\mathbf{a}$ taken from $\mathbf{Z}$ and $\mathbf{b}$ from $\mathbf{Y}$ .
ΙΓ	h X.FCN ΙΓ	FLOAT	Calculates the regularized incomplete gamma function $\gamma(x,y)/\Gamma(x)$ .
J→D	h X.FCN J→D	FLOAT	Assumes <b>x</b> is a Julian day number and converts it to a date.
	g LASTx	\α	
LASTx	CPX g LASTx	FLOAT	Recalls the contents of ${\bf L}$ and ${\bf I}$ into ${\bf X}$ and ${\bf Y}$ .
LBL	f LBL label	PRG	See opportunities for <i>label</i> in the table above.
LCM	h X.FCN LCM	\α	Returns the Least Common Multiple of <b>x</b> and <b>y</b> .
LEAP?	h P.FCN LEAP?	PRG & FLOAT	Takes <b>x</b> as a date, extracts the year, and checks if it is a leap year.
LINF	h STAT LINF	FLOAT	Selects the linear curve fit model.
LJ	h (X.FCN) LJ	Integer	
LN	f LN	FLOAT	
LN1+X	h X.FCN LN1+X	FLOAT	

Name in listings	Keys to press	Works in modes	Remarks		
LNβ	h X.FCN LN β	FLOAT	Calculates the natural logarithm of $\beta$ or $\Gamma$ , respectively. See these functions.		
LNΓ	h X.FCN LN Γ	FLOAT			
LOGF	h STAT LOGF	FLOAT	Selects the logarithmic curve fit model.		
	f LOGy	FLOAT	Calculates the logarithm for base y.		
LOGy	CPX f LOGy	FLOAT	Calculates the logarithm of the complex number $x + iy$ for base $z + it$ .		
LOG <sub>10</sub>	f LG	FLOAT			
LOG <sub>2</sub>	f LOG2	\α	Calculates the logarithm for base 2.		
LR	h L.R.	FLOAT	Calculates the parameters of the fit curve (through the data points accumulated) according to the model selected. Returns A0 in <b>X</b> and A1 in <b>Y</b> . In the linear model, A0 is the intercept and A1 the slope of the regression line.		
MASKL	h X.FCN MASKL n		Work like MASKL and MASKR on HP-16C,		
MASKR	h X.FCN MASKR n	Integer	but with the parameter following the command instead of taken from $\mathbf{X}$ . See opportunities for $n$ in the table above.		
MAX	h X.FCN MAX	\α	Returns the maximum of <b>x</b> and <b>y</b> .		
MEAN	f x	FLOAT			
MIN	h X.FCN MIN	\α	Returns the minimum of <b>x</b> and <b>y</b> .		
MIRROR	h X.FCN MIRROR	Integer	Reflects bit patterns (e.g. 000101 → 101000 for word size 6)		
MOD	h MOD	\α			
M.DY	h X.FCN M.DY	FLOAT	Sets the format for date calculations.		
NAND	h (X.FCN) NAND	Integer			
		FLOAT	Works in analogy to AND.		
NaN?	h P.FCN NaN?	PRG	Asks for "not a number".		
NOP	h P.FCN NOP	PRG			
NOR	h X.FCN NOR	Integer			
		FLOAT	Works in analogy to AND.		
NOT	h NOT	Integer FLOAT	Works in analogy to AND.		

Name in listings	Keys to press	Works in modes	Remarks		
nΣ	<b>h</b> (STAT) ΝΣ	FLOAT	Recalls the number of accumulated data points. Necessary for basic statistics.		
N(x)	h STAT N(x)	FLOAT	Like NORMDIST(x; z; y; 1) in MS Excel.		
N <sup>-1</sup> (p)	<b>N</b> -1(p)	FLOAT	Like NORMINV(x; z; y) in MS Excel.		
OFF	h P.FCN OFF	PRG			
ON	h P.FCN ON	PRG			
OR	h OR	Integer			
		FLOAT	Works in analogy to AND.		
PAUSE	h PSE	PRG			
PERM	g Py.x	FLOAT			
PROMPT	h X.PCN PROMPT	PRG			
PWRF	h STAT PWRF	FLOAT	Selects the power curve fit model.		
Q(x)	f Q	FLOAT	Like Q in HP-32E and Q(z) in HP-21S. Equals NORMSDIST(x; 1) in MS Excel.		
Q <sup>-1</sup> (p)	g Q-1	FLOAT	Like $Q^{-1}$ in HP-32E and $z_P$ in HP-21S. Equals NORMSINV( $\mathbf{x}$ ) in MS Excel.		
RAD	g RAD	FLOAT			
RAND#	h STAT RAND#	\α	Like RAN in HP-42S.		
RCL	RCL reg	\h, \α	See opportunities for <i>reg</i> in the table		
RCL	RCL reg	h	above.		
RCLWS	h X.FCN RCLWS	Integer	Recalls the word size set. See WSIZ.		
RCL+	RCL + reg				
RCL-	RCL - reg		Recalls the content of address $reg$ , executes <b>OP</b> $x$ on it and stores the result in $X$ .		
RCL×	RCL x reg	$\h$ , $\alpha$ (needs	RCL▲ (▼) takes the maximum (minimum) of the value in <i>reg</i> and <i>x</i> . See opportuni-		
RCL/	RCL / reg	in hex mode)	ties for $reg$ in the table above.  Complex RCL affects $x$ and $y$ as well as		
RCL▲	RCL ▲ reg	mode)	two general purpose registers as explained at the top of this table.		
RCL▼	RCL ▼ reg		,		
RDX,		FLOAT	Toggles the redix many		
RDX.	h ./,	FLOAT	Toggles the radix mark.		

Name in listings	Keys to press	Works in modes	Remarks	
RJ	h X.FCN RJ	Integer	Works in analogy to LJ.	
RL	h X.FCN RL n		Works like $n$ consecutive RLs / RLCs on HP-16C. For RL, $1 \le n \le 63$ . For RLC, $1 \le n$	
RLC	h X.FCN RLC n	Integer	≤ 64. See the table above for addressing <i>n</i> . In indirect addressing <i>n</i> may be zero.	
RNDINT	h X.FCN RNDINT	FLOAT	Rounds <b>x</b> to next integer. ½ rounds to 1.	
ROUND	g (RND)	FLOAT	Like RND in HP-42S.	
NOONE	9 (KND)	/c	Like RND in HP-32SII.	
RR	h X.FCN RR n	Integer	Works like <i>n</i> consecutive RRs / RRCs on	
RRC	h X.FCN RRC n	integer	HP-16C. See RL / RLC for more.	
RTN	g RTN	PRG		
RTN+1	n/a	PRG	Internal support routine.	
R/S	R/S	\PRG, \α		
R <b></b>	h Rt	\α		
R♥	R↓	ια		
R→D	h X.FCN R→D	FLOAT	Assumes <b>X</b> containing radians and corverts them to degrees. Mode is kept corstant.	
SB	h X.FCN SB n	Integer	Sets the <i>n</i> -th bit in <b>x</b> . See opportunities for <i>n</i> in the table above.	
SCI	f SCI n	FLOAT	See opportunities for <i>n</i> in the table above.	
SDEV	gs	FLOAT		
SEED	h STAT SEED	FLOAT		
SERR	h STAT SERR	FLOAT	Calculates $\frac{SDEV}{\sqrt{n}}$ .	
SETDAT	h X.FCN SETDAT	FLOAT,	Sets the date for the real time clock.	
SETTIM	h X.FCN SETTIM	H.MS	Sets the time for the real time clock.	
SF	h SF n	\α	See opportunities for <i>n</i> in the table above.	
SIGMA	<b>N</b> STAT SIGMA	FLOAT	Calculatos SDEV n	
SIGIVIA	<b>h</b> STAT σ	PLOAT	Calculates $SDEV \cdot \sqrt{\frac{n}{n-1}}$ .	
SIGN	h X.FCN SIGN	\α		

Name in listings	Keys to press	Works in modes	Remarks		
SIGNMT	h X.FCN SIGNMT	Integer	Sets sign-and-mantissa mode for integers.		
SIN	f SIN	FLOAT, H.MS			
SINC	h X.FCN SINC	FLOAT	Calculates $\frac{\sin(x)}{x}$ .		
SINH	f HYP SIN	FLOAT			
SL	h X.FCN SL n	Integer	Works like $n$ (1 64) consecutive SLs on HP-16C. See the table above for addressing $n$ . In indirect addressing $n$ may be zero.		
SLV	h SOLVE label	FLOAT	See opportunities for <i>label</i> in the table above.		
SR	h X.FCN SR n	Integer	Works like <i>n</i> consecutive SRs on HP-16C. See SL for more.		
STO	STO reg	\-5, \h, \α	See opportunities for <i>reg</i> in the table above.		
370	STO reg	-5, h			
STOP	R/S	PRG			
STO+	STO + reg		Calls the content of address <i>reg</i> , executes		
STO-	STO - reg	. \-5, \h, \α	OP x on it and stores the result into said address. STO ▲ (▼) takes the maximum		
STO×	STO × reg	(needs	(minimum) of the value in <i>reg</i> and <b>x</b> and stores the result. See opportunities for <i>reg</i>		
STO/	STO / reg	modes -5	in the table above.  Complex STO affects $\mathbf{x}$ and $\mathbf{y}$ as well as		
STO▲	STO A reg	and h)	two general purpose registers as explained at the top of this table.		
STO▼	STO ▼ reg		at the top of this table.		
SUM	RCL Σ+	FLOAT			
TAN	f TAN	FLOAT, H.MS			
TANH	f HYP TAN	FLOAT			
TIME	h X.FCN TIME	FLOAT, H.MS	Recalls the time from the real time clock.		
t(x)	h STAT t(x)	FLOAT	Like Q(t) in HP-21S. Equals TDIST(x; r01; 1) in MS Excel.		
t <sup>-1</sup> (p)	<b>h STAT</b> t <sup>-1</sup> (p)	FLOAT	Like tp in HP-21S. Equals TINV(2*x; r01) in MS Excel.		
UNSIGN	N X.FCN UNSIGN	Integer			

Name in listings	Keys to press	Works in modes	Remarks		
VERS	h X.FCN VERS	All Displays the firmware version.			
VIEW	h VIEW reg	All	See opportunities for <i>reg</i> in the table above.		
W	h X.FCN W	FLOAT	Calculates Lambert's W for given x ≥ -1/e		
W <sup>-1</sup>	h X.FCN W <sup>-1</sup>	FLOAT	Inverts W, i.e. calculates x for given W ( ≥ -1).		
WMEAN	h STAT WMEAN	FLOAT	Calculates the weighted mean.		
WSIZ	h X.FCN WSIZ n	Integer	Works like WSIZE on HP-16C, but with the parameter following the command instead of taken from <b>X</b> . WSIZ 0 will set the word size to maximum. See the table above for addressing <i>n</i> .		
		PRG	Calls the respective subroutine.		
XEQ lak	XEQ label	\PRG, \α	Executes the respective program. See opportunities for <i>label</i> in the table above.		
XEQ	<b>B</b> , <b>C</b> , or <b>D</b>	PRG	Calls the respective subroutine, so e.g. XEQ B will be inserted in the program when B is pressed.		
	<b>B</b> , <b>C</b> , or <b>D</b>		Executes the respective program if defined		
XNOR	h (X.FCN) XNOR	Integer			
ANON	(X:1 CN) XNOR	FLOAT	Works in analogy to AND.		
XOR	h XOR	Integer			
	Xer	FLOAT	Works in analogy to AND.		
x!	h !	FLOAT			
χ↔	h x≥ reg	\α	See opportunities for <i>reg</i> in the table above.		
х⇔у	(x≷y)	\α	This performs <b>Re&lt;&gt;Im</b> if a complex operation was executed before.		
A ~ y	CPX x \(\xi\)	FLOAT	Exchanges <b>x</b> and <b>y</b> with <b>z</b> and <b>t</b> .		
x <sup>2</sup>	g x <sup>2</sup>	\α			
$x \rightarrow \alpha$	h (X.FCN) X→α	All	Works like XTOA in HP-42S.		

Name in listings	Keys to press	Works in modes	Remarks	
x < ?	f x arg</td <td></td> <td></td>			
x ≤ ?	g x≤? arg			
x = ?	x = ? arg	\α	Compares <b>x</b> with <i>arg</i> . See opportunities for <i>arg</i> in the table above. The three dots	
x ≠ ?	g x ≠ ? arg		will be replaced in the listing by arg according to the samples given in said table.	
x≥?	f x≥? arg			
x > ?	g x>? arg			
$\overline{\hat{\mathbf{x}}}$	h STAT $\hat{x}$	FLOAT	Predicts a forecast x for a given y according to the curve fit model chosen. See L.R. for more.	
Y.MD	h X.FCN Y.MD	FLOAT	Sets the format for date calculations.	
y*	g yx	FLOAT		
У	C	FLOAT	As long as this label is not used yet.	
ŷ	f ŷ	FLOAT	Predicts a forecast y for a given x ac cording to the curve fit model chosen. See L.R. for more.	
αΑΡΡ	h (X.FCN) αAPP char	\α	Switches to alpha mode for the input of 1 character, appends this to the alpha register, and returns to the mode set before. Eventually, this equals the sequence $\alpha ON$ char $\alpha OFF$ .	
αDATE	h X.FCN αDATE	FLOAT, α	Takes <b>x</b> as a date and appends it to the alpha register in the format selected.	
αDAY	h X.FCN αDAY	FLOAT, α	Takes <b>x</b> as a date, recalls the name of the respective day and appends it to the alpha register.	
αΙΡ	h X.FCN αIP	All	Like AIP in HP-42S.	
αLENG	h X.FCN αLENG	All	Like ALENG in HP-42S.	
αΜΟΝΤΗ	h X.FCN αMONTH	FLOAT, α	Takes <b>x</b> as a date, recalls the name of the month and appends it to the alpha register.	
αOFF	ENTER+	α	Toggle alpha mode like AOFF and AON in	
αΟΝ	f a	\α	HP-42S. Not programmable.	

Name in listings	Keys to press	Works in modes	Remarks			
	f RCL reg	α	Interprets the contents of <i>reg</i> as characters and appends them to the alpha regis-			
αRCL	h (X.FCN) αRCL reg	<u>\</u> α	ter. See opportunities for <i>reg</i> in the table above.			
αRC#	h X.FCN αRC# reg	All	As $\alpha$ RCL, but $\alpha$ RC# interprets the contents of $reg$ as a number and appends this in current format to the alpha register.			
αRL	h X.FCN αRL n		αRL works like AROT in HP-42S, but with a positive parameter following the command			
αRR	h X.FCN αRR n		instead of taken from <b>X</b> . $\alpha$ RR rotates to the right instead.			
αSL	h X.FCN αSL n	All	$\alpha$ SL shifts the <i>n</i> left-most characters out of the alpha register, similar to ASHF in HP-42S. $\alpha$ RR shifts the <i>n</i> right-most characters instead.			
αSR	h X.FCN αSR n		See the table above for addressing <i>n</i> . indirect addressing <i>n</i> may be zero.			
	STO reg	α	See opportunities for <i>reg</i> in the table above.			
αSTO	h X.FCN αSTO reg	\α				
αΤΙΜΕ	h X.FCN αTIME	FLOAT, α	Takes <b>x</b> as a time HH.MMSS, converts it to a string in the format selected, and appends it to the alpha register.			
αVIEW	h X.FCN αVIEW	\α				
$\alpha \rightarrow x$	h $X$ .FCN α→X	All	Like ATOX in HP-42S.			
β	h X.FCN β	FLOAT	Calculates Euler's Beta function B(x, y).			
Γ	h STAT r	FLOAT	Also contained in X.FCN.			
ΔDAYS	h X.FCN ΔDAYS	FLOAT	Calculates the number of days between 2 dates <b>x</b> and <b>y</b> . Works like in HP-12C.			
Δ%	<b>f △</b> %	FLOAT	Like %CH in HP-42S.			
	h T	FLOAT				
π	СРХ 🗅 ш	FLOAT	Returns $\pi$ in <b>X</b> and clears <b>Y</b> for using $\pi$ in complex calculations.			
	D or CPX D	FLOAT	Work as above as long as this label is not used yet.			

Name in listings	Keys to press	Works in modes	Remarks		
Σlnx	h STAT ΣLNX				
Σlnxy	h STAT ΣLNXY				
Σlny	h STAT ΣLNY		Recalls the respective statistical sum.		
Σln <sup>2</sup> x	h STAT ΣLN2X	FLOAT	These sums are necessary for the curve fitting models beyond pure linear. See be-		
Σln²y	h STAT ΣLN2Y		low for more.		
ΣxIny	n stat σxlny				
Σylnx	h STAT ΣΥLNX				
Σχ	<b>h</b> STAT ΣΧ				
Σχγ	<b>h STAT</b> ΣΧΥ		Recalls the respective statistical sum.		
Σx²	<b>h</b> STAT ΣΧ2	FLOAT	These sums are necessary for basic statistics and linear curve fitting. Calling them by		
Σy	<b>h STAT</b> ΣΥ		name enhances readability of program significantly.		
Σy <sup>2</sup>	<b>h</b> STAT ΣΥ2				
Σ+	Σ+)	FLOAT			
Σ-	<b>h</b> Σ-	FLOAT			
χ²	h STAT $\chi^2$	FLOAT	Like $Q(\chi^2)$ in HP-21S. Equals CHIDIST( $\mathbf{x}$ ; $\mathbf{r01}$ ) in MS Excel.		
χ²INV	h STAT $\chi^2$ INV	FLOAT	Like $\chi^2_p$ in HP-21S. Equals CHIINV( $\mathbf{x}$ ; $\mathbf{r01}$ ) in MS Excel.		
+	+				
_	_				
×	x	\α			
/	<b>/</b>				
+/_	+/_				
//	g ///	FLOAT	Calculates $\left(\frac{1}{x} + \frac{1}{y}\right)^{-1}$ .		
→DEG	→ g DEG	FLOAT	Assumes <b>X</b> containing angles in actual angular mode and converts them to degrees. Mode is kept constant.		
→GRAD	→ g GRAD	FLOAT	Works like →DEG, but converts to gon.		

Name in listings	Keys to press	Works in modes	Remarks
→HR	→ f H	H.MS	Takes the hours or degrees in <b>X</b> and converts them into decimal numbers.
→H.MS	→ g H.MS	FLOAT	Assumes <b>X</b> containing <i>decimal</i> hours or degrees and converts them in the format HHH.MMSS.
→POL	g P	FLOAT	Assumes $\mathbf{X}$ and $\mathbf{Y}$ containing the coordinates $\mathbf{x}$ and $\mathbf{y}$ and converts them to $\mathbf{r}$ and $\mathbf{y}$ .
→RAD	→ g RAD	FLOAT, H.MS	Works like →DEG, but converts to radians.
→REC	f ▶R	FLOAT	Assumes <b>X</b> and <b>Y</b> containing the coordinates r and 9 and converts them to x and y.
%	g %	FLOAT	
%Т	h X.FCN h % T	FLOAT	Calculates $\frac{x}{y} \cdot 100$ .
%Σ	h STAT h % Σ	FLOAT	Calculates $\frac{x}{\sum x} \cdot 100$ .
%+	<b>h</b> %+	FLOAT	Adds a markup of <b>x</b> % to <b>y</b> .
%-	<b>h</b> %-	FLOAT	Subtracts a discount of <b>x</b> % from <b>y</b> .
√_	f x	\α	
∞?	h P.FCN ∞?	PRG	Asks for infinity.
			Pure input commands:
0 9	<b>0 9</b> ,	\α, integer modes depending on base setting	Numeric input. The 6 top left keys on the keyboard will be used for input of hexadecimal numbers >10 in HEXM by default. For bases <16, their defaults are switched as applicable. For bases <10, the default
A F	A <b>F</b> (dark red print on keyboard)	-1, -2, -3, -4, -5, h	primary functions of some numeric keys may be blocked.
A Z	A Z (dark red print on keyboard)	α	Alphabetic input. See page 3 for more information.
EEX	<b>E</b> (the key)	FLOAT	
[]or[/]		/c	First , is taken as a space, second as a fraction mark, e.g. 2 , 3 , 4 results in 2 ¾ in the dot matrix display.

Name in listings	Keys to press	Works in modes	Remarks	
	,	FLOAT	Inserts the radix mark as selected.	
[.] or [,]	٠	α	Inserts a comma.	
	h ./,	α	Inserts a point.	
[.]	•	Y.MD, D.MY, M.DY	Separates the leading unit in date modes. It is left to the user to decide if a number displayed represents a date or not.	
[°]	•	H.MS	Separates degrees (or hours) from minutes and seconds, so input format is HH,MMSS.	
			Catalogues (non programmable): calling any catalogue will set alpha mode to allow for keying in the first 2 characters of the item wanted. In general, ▲ and ▼ browse the catalogue, and EXIT will leave it without executing anything. See next paragraphs for their contents.	
CONST	RCL C	FLOAT	Calls the catalogue of constants like in HP35s. See the list of constants stored in a separate table below. <b>ENTER1</b> recalls the constant selected into <b>X</b> .	
	CPX RCL C	FLOAT	Works as above, but clears <b>Y</b> in recalling.	
CONV	h CONY	FLOAT	Calls the catalogue of conversions. The conversions stored are listed in a separate table below. <b>ENTER1</b> converts <b>x</b> according to the conversion selected.	
P.FCN	h (P.FCN)	\α	Calls the catalogue of extra programming functions. <b>ENTER</b> to executes the function selected.	
STAT	h STAT	FLOAT	Calls the catalogue of extra statistical functions. Works like P.FCN.	
		FLOAT	Calls the catalogue of extra real functions. Works like P.FCN.	
VECN	h X.FCN	Integer	Calls the catalogue of extra integer functions. Works like P.FCN.	
X.FCN		α	Calls the catalogue of extra alpha functions. Works like P.FCN.	
	CPX h X.FCN	FLOAT	Calls the catalogue of extra complex functions. Works like P.FCN otherwise.	

Name in listings	Keys to press	Works in modes	Remarks		
			Pure navigation, mode switching and information commands (all non programmable):		
		All	Deletes last digit or character put in, if input is pending.		
DEL		PRG	Deletes current step if no input is pending.		
EXIT	(EXIT)	All	Exits catalogues and other operations with pending input, canceling the execution of this operation.		
	g OFF	All			
	ON	Calc. off			
PRGOFF	h P/R	PRG	Toggle programming mode		
PRGON	h P/R	\PRG, \α	Toggle programming mode.		
	h SHOW	FLOAT, \PRG	Shows the full mantissa.		
SHOW		PRG	Displays a CRC-32 checksum of program memory's contents (8 hex digits), allowing to validate program integrity.		
STATUS	h STATUS	All	Shows the status of all flags, similar to STATUS on HP-16C. See the paragraph about display above.		
	f  / g	Integer	Shift the display window like in HP-16C Useful for numbers with small bases.		
		Status open	Go to previous / next set of flags.		
		Catalogue open	Go to previous / next item in this catalogue.		
	<b>A</b> / <b>V</b>	α	Move the cursor 1 character to the left / right in alpha register. Shifts the display window if necessary.		
		PRG \PRG, \α	Like BST / SST in HP-42S.		
	f t	α	Toggles upper and lower case.		
→BIN	<b>→ f 2</b>				
→DEC	→ f 10	No.	Shows <b>x</b> in target representation until the		
→HEX	→ g 16	\α	next command is executed. Mode is kept constant.		
→ocт	→ g 8				

## **CATALOGUE CONTENTS**

Here the contents of the catalogues X.FCN, P.FCN and STAT are listed. A single operation, e.g. BASE, may be contained in more than one catalogue. The characters necessary to get to a specific function in the catalogue are printed bold in this table − each red character must be replaced by a 
 − if even the last letter of a function name is red, one may need more strokes of to access this function. The catalogues CONST and CONV are found in two paragraphs below.

Name	X.FCN in FLOAT mode	CPX X.FCN	Name	X.FCN in integer modes	Name	X.FCN in alpha mode	Name	STAT
<b>1</b> 2h	Χ		1COMPL	Х	CLALL	Х	<b>B</b> ESTF	Х
<b>2</b> 4h	Х		2COMPL	Х	<b>V</b> ERS	Х	<b>E</b> RF	Х
ALL	Х		ASR	Х	<b>x</b> → α	Х	<b>EX</b> PF	Х
ANGLE	Х		<b>B</b> ASE	Х	αDATE	Х	F(x)	Х
<b>B</b> ASE	Х		В#	Х	αDAY	Х	<b>F</b> <sup>-1</sup> (p)	Х
CEIL	Х		СВ	Х	αIP	Х	LINF	Х
CLALL	Х		CLALL	Х	αLENG	Х	<b>LO</b> GF	Х
CLFLAG	Х		CLFLAG	Х	α <b>M</b> ONTH	Х	nΣ	Х
CLREG	Х		CLREG	Х	α <b>O</b> FF	Х	<b>N(</b> x)	Х
DATE	Х		<b>D</b> BLR	Х	α <b>R</b> C#	Х	<b>N</b> <sup>-1</sup> (p)	Х
DAY	Х		DBL*	Х	αRL	Х	<b>P</b> WRF	Х
DAYS+	Х		DBL/	Х	αRR	Х	<b>R</b> AND#	Х
<b>DE</b> COMP	Х		<b>DR</b> OP	Х	αSL	Х	SEED	Х
DENANY	Х		DROPY	Х	αSR	Х	SERR	Х
DENFAC	Х		<b>F</b> B	Х	α <b>→</b> ×	Х	t(x)	Х
DENFIX	Х		FF	Х			<b>t</b> <sup>-1</sup> (p)	Х
DENMAX	Х		FIB	Х			WMEAN	Х
DISP	Х		<b>G</b> CD	Х			<u>\$</u>	Х
<b>DR</b> OP	Х		LCM	Х			Г	Х
DROPY	Х		MASKL	Х			σ	Х
D.MY	Х		MASKR	Х			ΣInx	Х
D→J	Х		MAX	Х			ΣInxy	Х
D→R	Х		MIN	Х			ΣIny	Х

Name	X.FCN in FLOAT	CPX X.FCN
<b>E</b> 30FF	mode X	
E3ON	Х	
<b>e</b> <sup>x</sup> -1	Х	Х
<b>F</b> F	X	
FIB	Х	Х
FLOOR	Х	
<b>GC</b> D	X	
Ιβ	Х	
IГ	Х	
J→D	Х	
LCM	Х	
LN1+x	Х	Х
LNβ	Х	Х
LN [	Х	Х
MAX	Х	
MIN	Х	
M.DY	Х	
<b>N</b> AND	Х	
<b>NO</b> R	Х	
RNDINT	Х	
<b>R→</b> D	Х	
SETDAT	Х	
SETTIM	Х	
SIGN	Х	Х
SINC	Х	Х
TIME	Х	
VERS	Х	
w	Х	Х

Name	X.FCN in integer modes
MIRROR	Х
NAND	Х
<b>NO</b> R	Х
<b>R</b> AND#	Х
RCLWS	Х
RJ	Х
RL	Х
RLC	Х
RR	Х
RRC	Х
<b>S</b> B	Х
SIGN	Х
SIGNMT	Х
SL	Х
SR	Х
UNSIGN	Х
<b>V</b> ERS	Х
<b>W</b> SIZ	Х
XNOR	Х
<b>x→</b> α	X
αAPP	X
αIP	Х
αLENG	Х
αΟΝ	Х
α <b>R</b> CL	Х
αRC#	Х
αRL	Х
αRR	X

Name	X.FCN in alpha mode
	P.FCN
BC?	Х
BS?	Х
<b>D</b> SZ	Х
FC?	Х
FC?C	Х
FC?F	Х
FC?S	Х
FS?C	Х
FS?F	Х
FS?S	Х
ISZ	Х
LEAP?	Х
<b>N</b> aN?	Х
<b>NO</b> P	Х
<b>O</b> FF	Х
ON	Х
<b>P</b> ROMPT	Х
∞?	Х

Name	STAT
Σln²x	Х
Σln²y	Х
Σχ	Х
<b>Σx</b> Iny	Х
Σχ	Х
Σx <sup>2</sup>	Х
Σy	Х
<b>Σyl</b> nx	Х
Σy²	Х
$\chi^2$	X
χ²INV	Х
%Σ	Х

		,
Name	X.FCN in FLOAT mode	CPX X.FCN
W <sup>-1</sup>	Х	Х
XNOR	Х	
<b>x→</b> α	Х	
Y.MD	Х	
αAPP	Х	
α <b>D</b> ATE	Х	
αDΑΥ	Х	
αIP	Х	
α <b>L</b> ENG	Х	
α <b>M</b> ONTH	Х	
αΟΝ	Х	
α <b>R</b> CL	Х	
αRC#	Х	
αRL	Х	
αRR	Х	
αSL	Х	
αSR	Х	
α <b>ST</b> O	Х	
αΤΙΜΕ	Х	
α <b>V</b> IEW	Х	
α <b>→</b> x	Х	
β	Х	Х
Г	Х	Х
∆DAYS	Х	
%T	Х	

Name	X.FCN in integer modes
αSL	Х
αSR	Х
α <b>ST</b> O	Х
α <b>V</b> IEW	Х
α <b>→</b> x	Х

Name	X.FCN	Nam
	alpha	
	mode	

Name	STAT

## **TABLE OF CONSTANTS**

This lists all constants contained in the catalogue CONST. Names printed in a golden field represent fundamental or measured constants, while the other ones may be derived from them. The constants  $\pi$  and  $\mathbf{e}$  are also found on the keyboard directly. The characters necessary to get to a specific function in the catalogue are printed bold in this index – each red character must be replaced by a  $\blacksquare$ .

Name	Value	Dimension	Remarks
а	365,2425	d	Gregorian year (per definition)
a <sub>0</sub>	5,291772083E-11	m	Bohr radius = $\frac{\alpha}{4\pi R_{\infty}}$
<b>at</b> m	101325	Pa/ atm	Standard pressure $p_0$
С	299792458	m/s	Vacuum speed of light (per definition)
<b>C</b> <sub>1</sub>	374177107E-16	$m^2 \cdot W$	First radiation constant $= 2\pi \cdot h \cdot c^2$
C <sub>2</sub>	0,014387752	$m \cdot K$	Second radiation constant $=\frac{hc}{k}$
е	2, 718281828459045	1	
eV	1,602176462E-19	J = V A s	= Electron charge x 1V
F	96485,3415	$\frac{A \cdot s}{mol}$	Faraday's constant = e N <sub>A</sub>
g	9,80665	$m/s^2$	Standard earth acceleration
G	6,6742867E-11	$\frac{m^3}{kg \cdot s^2}$	Newton's gravitation constant
g <sub>e</sub>	2,002319304362	1	Landé's g-factor
G <sub>o</sub>	7,748091696E-5	$\frac{1}{\Omega}$	Conductance quantum = $\frac{2e^2}{h}$
h	6,62606876E-34	Js	Planck constant
ħ	1,054571596E-34	Js	$=\frac{h}{2\pi}$
k	1,3806503E-23	$J_K$	Boltzmann constant = $R/N_A$
<b>m</b> e	9,10938188E-31	kg	Electron mass
m <sub>n</sub>	1,67492716E-27		Neutron mass

HP34S Draft Manual Edition 1.7 Page 30 of 34

Name	Value	Dimension	Remarks
m <sub>p</sub>	1,67262158E-27		Proton mass
m <sub>u</sub>	1,66053873E-27		Atomic unit mass = 1g / N <sub>A</sub>
m <sub>μ</sub>	1,88353109E-28		Myon mass
N <sub>A</sub>	6,02214199E23	1/mol	Avogadro's number
R	8,314472	$\frac{J}{mol \cdot K}$	Molar gas constant
r <sub>e</sub>	2,817940285E-15	m	Classical electron radius = $\alpha^2 \cdot a_0$
R <sub>K</sub>	25812,80756	Ω	Von Klitzing constant $=\frac{h}{e^2}$
R∞	10973731,5685	1/m	Rydberg constant $=\frac{\alpha^2 m_e c}{2h}$
T <sub>o</sub>	273,15	К	= 0°C, standard temperature (per definition)
<b>V</b> <sub>m</sub>	0,022413996	$m^3/mol$	Molar volume of ideal gas at standard conditions $=\frac{RT_0}{p_0}$
Zo	376,730313461	Ω	Characteristic impedance of vacuum $= \sqrt{\mu_0/\varepsilon_0} = \mu_0 c$
α	7,297352533E-3	1	Fine-structure constant $=\frac{e^2}{4\pi\varepsilon_0\hbar c}$
γем	0,5772156649015328606	1	Euler-Mascheroni constant
γр	267522212	$\frac{1}{s \cdot T}$	Proton gyromagnetic ratio $=\frac{2\mu_P}{\hbar}$
ε <sub>0</sub>	8,854187817E-12	$\frac{A \cdot s}{V \cdot m}$	Electric constant, vacuum permittivity $= \frac{1}{\mu_0 c^2}$
$\lambda_{\mathrm{c}}$	2,426310215E-12		Compton wavelength of electron $= \frac{h}{m_e c}$
$\lambda_{cn}$	1,319590898E-15	m	Compton wavelength of neutron $= \frac{h}{m_n c}$
λ <sub>cp</sub>	1,321409847E-15		Compton wavelength of proton $= \frac{h}{m_p c}$

Name	Value	Dimension	Remarks
μВ	9,27400899E-24		Bohr's magneton $=\frac{e\hbar}{2m_e}$
μ <sub>e</sub>	-9,28476362E-24		Electron magnetic moment
μ <sub>u</sub>	5,05078317E-27	$J_T$	Nuclear magneton $=\frac{e\hbar}{2m_p}$
μ <sub>n</sub>	-9,662364E-27		Neutron magnetic moment
μ <sub>p</sub>	1,410606633E-26		Proton magnetic moment
μο	1,2566370614E-6	$N/A^2$	Magnetic constant, vacuum permeability $= 4\pi \cdot 10^{-7}$ (per definition)
μμ	-4,49044813E-26	$J_T$	Müon magnetic moment
π	3, 141592653589793	1	
σв	5,6704E-8	$\frac{W}{m^2 \cdot K^4}$	Stefan Boltzmann constant $=\frac{2\pi^5 k^4}{15h^3 c^2}$
Φ	1,6180339887498948482	1	Golden ratio $=\frac{1+\sqrt{5}}{2}$
$\Phi_{o}$	2,067833636E-15	V s	Magnetic flux quantum $=\frac{h}{2e}$
oo		1	Infinity

# **TABLE OF CONVERSIONS**

These are the conversions contained in the new catalogue CONV. The characters necessary to get to a specific conversion in the catalogue are printed bold in this index – each red character must be replaced by a  $\square$ . The constants **atm** and  $T_o$  may be useful for conversions, too – they are found in the catalogue CONST.

Conversion	Remarks	Class
<b>a</b> cres→ha	Remember 1 ha = 10 <sup>4</sup> m <sup>2</sup>	Area
au→km	Astronomic units	Length
<b>B</b> tu→J		Energy
<b>c</b> m→inch		Length
<b>f</b> eet→m		Length
<b>fl</b> ozUK→ml	Remember 1 m³ = 10³ l	Volume
flozUS→ml		Volume

Conversion	Remarks	Class
g→oz		Mass
galUK→l		Volume
ga <mark>l</mark> US→I		Volume
<b>h</b> a→acres		Area
inch→cm		Length
<b>J</b> →Btu		Energy
<b>k</b> g→lbm		Mass
<b>km</b> →au		Length
<b>km</b> →ly	Light years	Length
km <mark>→</mark> mi		Length
km <mark>→nm</mark> i	Nautical miles	Length
I→galUK		Volume
I→galUS		Volume
<b>Ib</b> f→N		Force
<b>lbm</b> →kg		Mass
ly→km		Length
m→feet		Length
mi→km		Length
<b>ml</b> →flozUK		Volume
<b>ml→</b> flozUS		Volume
N→lbf		Force
<b>nm</b> i→km		Length
<b>o</b> z→g		Mass
°C→°F		Temperature
<b>°F→</b> °C		Temperature

Edition	Date	Release notes	
1	9.12.08	Start	
1.1	15.12.08	Added the table of indicators; added NAND, NOR, XNOR, RCLWS, STOWS, //, N, SERR, SIGMA, < and >; deleted HR, INPUT, 2 flag commands, and 2 conversions; extended explanations for addressing and COMPLEX &; put XOR on the keyboard; corrected errors.	
1.2	4.1.09	Added ASRN, CBC?, CBS?, CCB, SCB, FLOAT, MIRROR, SLN, SRN, >BIN, >DEC, >HEX, >OCT, BETA, D>R, DATE, DDAYS, D.MY, M.DY, Y.MD, CEIL, FLOOR, DSZ, ISZ, D>R, R>D, EMGAM, GSB, LNBETA, LNGAMMA, MAX, MIN, NOP, REAL, RJ, W and WINV, ZETA, %+ and %-; renamed the top left keys B, C, and D, and bottom left EXIT.	
1.3	17.1.09	Added AIP, ALENG, ARCL, AROT, ASHF, ASTO, ATOX, XTOA, AVIEW, CLA, PROMPT (all taken from 42S), CAPP, FC?C, FS?C, SGMNT, and the# commands; renamed NBITS to BITS and STOWS to WSIZE; specified the bit commands closer; deleted the 4 carry bit operations.	
1.4	10.2.09	Added CONST and a table of constants provided, D>J and J>D, LEAP?, %T, RCL and STO ▲ and ▼, and 2 forgotten statistics registers; deleted CHS, EMGAM, GSB, REAL and ZETA; purged and renamed the bit operations; renamed many commands.	
1.5	5.3.09	Added RNDINT, CONV and its table, a memory table, the description of XEQ B, C, D to the operation index, and $a$ and $g_e$ to the table of constants; put CLSTK on a key, moved CL $\Sigma$ and FILL, changed the % and log labels on the keyboard, put CLALL in X.FCN; checked and cleaned alpha mode keyboard and added a temporary alpha keyboard; rearranged the alphabet to put Greek after Latin, symbols after Greek consistently; separated the input and non programmable commands; cleaned the addressing tables.	
1.6	12.8.09	Added BASE, DAYS+, DROP, DROPY, E3OFF, E3ON, FC?F, FC?S, FIB, FS?F, FS?S, GCD, LCM, SETDAT, SETTIM, SET24, SINC, TIME, VERS, $\alpha$ DAY, $\alpha$ MONTH, $\alpha$ RC#; $\%\Sigma$ , as well as F-, t-, and $\chi^2$ -distributions and their inverses; reassigned DATE, modified DENMAX, FLOAT, $\alpha$ ROT, and $\alpha$ SHIFT; deleted BASE arithmetic, BIN, DEC, HEX, and OCT; updated the alpha keyboards; added flags in the memory table; included indirect addressing for comparisons; added a paragraph about the display; updated the table of indicators; corrected errors.	
1.7	9.9.09	Added P.FCN and STAT catalogues, 4 more conversions, 3 more flags, Greek character access, CLFLAG, DECOMP, DENANY, DENFAC, DENFIX, I $\beta$ , I $\Gamma$ , $\alpha$ DATE, $\alpha$ RL, $\alpha$ RR, $\alpha$ SL, $\alpha$ SR, $\alpha$ TIME, 12h, 24h, fraction mode limits, normal distribution and its inverse for arbitrary $\mu$ and $\sigma$ , and Boolean operations working within FLOAT; deleted $\alpha$ ROT and $\alpha$ SHIFT, the timer, and forced radians after inverse hyperbolics; renamed WINV to W $^{-1}$ , and beta and gamma commands to Greek; added tables of catalogue contents; modified label addressing; relabeled PRGM to P/R and PAUSE to PSE; swapped SHOW and PSE as well as $\Delta$ % and % on the keyboard; relabeled Q; corrected CEIL and FLOOR; updated X.FCN and alpha commands; updated the virtual alpha keyboard.	