
https://github.com/teaksoon/lmaewapm

WORKING MEMORY

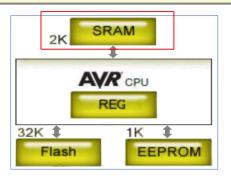

To use the **WORKING MEMORY (SRAM)** in our PROGRAM, we will need "Reserve in BLOCKS of multiple BITS". Each "BLOCK" of "Reserved MEMORY" is commonly known as "VARIABLE"

The C-Language Keywords and Symbols

Keywords		Symbols					
MEMORY	CONTROL	CONTROL	LOGIC		MATH	BIT OP	
01.void	21.return	#	==		*	1	
02.char	22.if	< >	! =		ଚ	&	
03.int	23.else	//	<		/	^	
04.short	24.switch	/* */	>		+	~	
05.long	25.case	()	<= >=		_	<< >>	
06.float	26.default	{ }	>=			<i>>></i>	
07.double	27.while	;	& &				
08.signed	28.do	,					
09.unsigned	29.for	u					
10.struct	30.break	4	!				
11.union	31.continue	=					
12.enum	32.goto	[]					
13.const		:					
14.volatile		?					
15.auto							
16.extern		\					
17.static							
18.register		MEMORY					
19.typedef		&					
20.sizeof		*					

Out of the Total 32 C-Language Keywords
20 Keywords are used to handle the WORKING MEMORY

- The **first 18 Keywords**, are used exclusively for creating/declaring VARIABLES with its various properties and features
- **19.typedef -** utility for us to create a new datatype from the existing datatype
- ${f 20.sizeof}$ utility for us to find out the number of BYTE used in any VARIABLE

That leaves us just 12 Keywords for all the other things. This is how important the WORKING MEMORY is to C-Language

ATMEGA328/Arduino Uno - MEMORY - VARIABLE - PART 1

https://github.com/teaksoon/lmaewapm

Lets look at all the ${\bf 20}$ C-Language Keywords that we use to manipulate the WORKING MEMORY (We do not need to use all of them in our PROGRAM)

BASIC DATATYPE

These are the BASIC DATATYPE used in C-Language

02.char (8-BIT)

03.int (16-BIT for ATMEGA328P) - can be different for others

04.short (16-BIT)

05.long (32-BIT)

06.float (32-BIT)

07.double (32-BIT for ATMEGA328P) - can be different for others

08.signed (Stored number can have **Positive** and **Negative Numbers**)

09.unsigned (Stored number can have **Positive Numbers Only**)

EXTENDED DATATYPE

These are extensions to the BASIC DATATYPE

10.struct (Multiple members of DATATYPE)

11.union (Multiple members of DATATYPE sharing same MEMORY)

12.enum (Multiple members of 16-BIT auto-increment number)

PROPERTIES

also known as type qualifiers

13.const (Variable with Initial Data assigned that cannot be changed)

14.volatile (Prevent the Compiler from Automatic Optimizing of MEMORY)

FEATURES

these are Storage Classes of a Variable

15.auto (DATATYPE from the Initial Data assigned)

16.extern (Variable declaration is stored in a different file)

17.static (Variable with Initial Data assigned just once, retain value)

18.register (Use CPU MEMORY instead of WORKING MEMORY) *compiler decides

DATATYPE UTILITIES

19.typedef (Create a new DATATYPE from the existing DATATYPES)

20.sizeof (Find out the number of BYTE in any DATATYPE) : 1 BYTE = 8 BITS

VOID

01.void (Empty datatype)

- $\boldsymbol{-}$ Most commonly used as function return datatype when a function returns nothing
- Less commonly used as parameter(optional) when functions that does not have any parameters
- Also used as memory pointers to unknown datatype

```
ATMEGA328/Arduino Uno - MEMORY - VARIABLE - PART 1
https://github.com/teaksoon/lmaewapm
  Although we are going through all the 20 C-Language Keywords for WORKING
 MEMORY manipulation. We will probably just need to use a few of them, some
                      maybe only in some rare situation
          We will start with the most commonly used ones in PART 1
                      ( this may be all that you need )
BASIC DATATYPE: Create/Declare Basic Variable
Part1:datatype
Part2:name
Part1:datatype, followed by space
       Part2:name, followed by a semi-colon;
datatype name;
BASIC DATATYPE: Create/Declare Basic Variable with initial value
Part1:datatype
Part2:name
Part3: value
Part1:datatype, followed by space
      Part2:name, followed by an equal sign =
                 Part3: value, followed by a semi colon;
datatype name = value;
Example PROGRAM:
Arduino IDE|Save PROGRAM as: c_variable_basic
Enter codes below and upload. Use the Serial Monitor to see results
int counter = 0;
int temp;
float frac_num = 1.5;
void setup(){
  Serial.begin(9600);
  Serial.print("\nSerial Monitor at 9600 baud...\n");
  Serial.print("\nData stored in variable counter = ");
  Serial.print(counter);
  temp = counter+1;
  Serial.print("\nData stored in variable temp = ");
  Serial.print(temp);
  Serial.print("\nData stored in variable frac_num = ");
  Serial.print(frac_num, 2);
void loop(){}
NOTE: Variables with BASIC DATATYPE are used to store a single number,
```

```
NOTE: Variables with BASIC DATATYPE are used to store a single number,
- char, int, long, short stores whole numbers
- float, double stores numbers with fractions

C-Language Keywords

02.char (8-BIT)

03.int (16-BIT for ATMEGA328P) - can be different for others

04.short (16-BIT)

05.long (32-BIT)

06.float (32-BIT)

07.double (32-BIT for ATMEGA328P) - can be different for others
```

```
ATMEGA328/Arduino Uno - MEMORY - VARIABLE - PART 1
https://github.com/teaksoon/lmaewapm
BASIC DATATYPE: Create/Declare Variable with "unsigned" Keyword
Part1:"unsigned" Keyword
Part2:datatype
Part3:name
Part1: "unsigned" Keyword followed by space
         Part2:datatype, followed by space
                        Part3:name, followed by a semi-colon;
unsigned datatype name;
Or with an initial value
unsigned datatype name = value;
Example PROGRAM:
Arduino IDE | Save PROGRAM as: c_variable_unsigned
Enter codes below and upload. Use the Serial Monitor to see results
unsigned int counter;
void setup(){
  Serial.begin(9600);
  Serial.print("\nSerial Monitor at 9600 baud...\n");
  counter = 1; // Positve Number
  Serial.print("\n1 stored in unsigned variable counter = ");
  Serial.print(counter);
  counter = -1; // Negative Number (this is not allowed)
  // -1 will be converted into positive number
// "int" datatype use twos complement for negative numbers
  // therefore, -1 will be converted to 65535
Serial.print("\n-1 stored in unsigned variable counter = ");
  Serial.print(counter);
void loop(){}
```

```
NOTE: if "unsigned" Keyword is NOT specified, the Created/Declared Variable is "signed" number (default)

If a negative number is assigned to a "unsigned" variable, the number will be converted into a positive number using the following formats,

- "twos complement" format for char, int, long, short (whole numbers)

- "IEEE 754" format for float, double (numbers with fractions)

C-Language Keywords

08.signed (Stored number can have Positive and Negative Numbers)

09.unsigned (Stored number can have Positive Numbers Only)
```

```
ATMEGA328/Arduino Uno - MEMORY - VARIABLE - PART 1
https://github.com/teaksoon/lmaewapm
BASIC DATATYPE: Create/Declare Variable with "const" Keyword
Part1: "const" Keyword
Part2:datatype
Part3:name
Part4: value
Part1: "const" Keyword followed by space
     Part2:datatype, followed by space
                Part3:name, followed by an equal sign =
                         Part4: value, followed by a semi-colon;
const datatype name = value;
Example PROGRAM:
Arduino IDE | Save PROGRAM as: c_variable_const
Enter codes below and upload. Use the Serial Monitor to see results
const int led_pin = 9;
void setup(){
  Serial.begin(9600);
  Serial.print("\nSerial Monitor at 9600 baud...\n");
  Serial.print("\nData stored in const variable led_pin = ");
  Serial.print(led_pin);
```

// the following code will compile with error, un-comment to test

NOTE: A const Variable must be assigned an initial value. After that, the

(Variable with Initial Data assigned that cannot be changed)

assigned initial value is read-only, CANNOT BE CHANGED

// led_pin = 10;

C-Language Keywords

void loop(){}

13.const

```
ATMEGA328/Arduino Uno - MEMORY - VARIABLE - PART 1
```

https://github.com/teaksoon/lmaewapm

```
BASIC DATATYPE: Create/Declare Variable with "static" Keyword
Part1:"static" Keyword
Part2:datatype
Part3:name
Part4:value
```

static datatype name = value;

Example PROGRAM:

Arduino IDE|Save PROGRAM as: c_variable_static
Enter codes below and upload. Use the Serial Monitor to see results

```
void setup(){
  Serial.begin(9600);
  Serial.print("\nSerial Monitor at 9600 baud...\n");
void loop() {
int temp;
  temp = static_var();
  Serial.print("\n\nData from static_var() function = ");
  Serial.print(temp);
 temp = non_static_var();
 Serial.print("\nData from non_static_var() function = ");
  Serial.print(temp);
  delay(2000);
int static_var(){
static int counter = 0; // this is run just once
  counter = counter+1;
  return counter;
int non_static_var() {
int counter = 0;
  counter = counter+1;
  return counter;
```

NOTE: We need to specify an initial Value for this Variable. When used in a function, the initial value will only be set once. Subsequence use of this function will not set initial value for the Variable again, the function will continue with whatever value that is already in the Variable

C-Language Keywords

17. static (Variable with Initial Data assigned just once, retain value)

```
ATMEGA328/Arduino Uno - MEMORY - VARIABLE - PART 1
```

https://github.com/teaksoon/lmaewapm

```
BASIC DATATYPE:Using "void" Keyword for function Declaration and Variable Part1:"void" Keyword Part2:name
```

Part1:"void" Keyword followed by space
Part2:name - Function name declaration

void name(){}

void name(void){}

void can also leave blank)

void *name;

Memory Pointer Variable for unknown datatype

Function with no parameters (instead of

Function with no return value

Part2:name - Variable name declaration

Example PROGRAM:

Arduino IDE|Save PROGRAM as: c_variable_void
Enter codes below and upload. Use the Serial Monitor to see results

```
void setup(){
int
      a = 5;
float b=5.67;
void *ptr; // memory pointer Variable for unknown datatype
  Serial.begin(9600);
  Serial.print("\nSerial Monitor at 9600 baud...\n");
  // calling return_void() function, returns nothing
  return_void();
  // calling no_parameter() function, with no parameters
  no parameter();
  ptr=&a; // Assigning address of integer to void pointer
  Serial.print("\nData stored in memory ptr = ");
  Serial.print( *((int*)ptr) );
  ptr=&b; // Assigning address of float to void pointer
  Serial.print("\nData stored in memory ptr = ");
  Serial.print( *((float*)ptr) );
void loop(){}
void return_void() {
  // do something here
  // this function does not return anything
void no_parameter(void) {
  // function oes not have any parameters
  // we can specify void or just leave the bracket ( ) pair blank
```

NOTE: void is an empty datatype. There are many ways to use it, following are three ways to use it

1. Use when function does not return anything

2. Use when function does not need any parameters (this is optional)

3. Use as memory pointer to unknown datatype

C-Language Keywords

01.void (Empty datatype)