Verigen (verilog generator)

User Guide

version 1.06 May 10, 2024

Important Notice

Freely available under the terms of the 3-Clause BSD License

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Document Revision History

| Doc Revision Number | Date | Description |
|------------------------|------------------|---|
| 1.06 | May 10, 2024 | Simplified the 'module:add_interface' function. |
| 1.05 | March 19, 2024 | add verigen_set_max_showlink() function. |
| 1.04 | March 18, 2024 | Combines set_modport/add_modport functions into one and extends functionality. |
| 1.03 | November 2, 2023 | fix module definition. |
| 1.02 | June 12, 2023 | add default clock, add vfunctions. (\$LOG2, \$RANGE, \$DEMUX_BY_EN, \$MULTICYCLE) |
| 1.01 | June 8, 2023 | add interface:set_top_uppercase function. |
| 1.00 | May 8, 2023 | Initial relase. |

Verigen user guide BSD License.

3

Table of Contents

| 1. | INTRODUCTION | 9 |
|----|---|----|
| | 1.1 Main functions | C |
| | 1.2 Verilog automation creation process | |
| | 1.3 How to run | |
| | 1.4 license grant | |
| | _ | |
| 2. | FAST FOLLOW | 11 |
| | 2.1 Step #1 : Creation of module | 11 |
| | 2.2 Step #2 : module interconnections | 12 |
| | 2.3 Step #3 : Verilog code insertion | |
| 3. | MACRO FUNCTIONS | 22 |
| | 3.1 V macro | 23 |
| | 3.2 vfunction macro | |
| | 3.3 verigen.set_description function | |
| | 3.4 verigen.add reference function | |
| | 3.5 verigen.add verilog function | |
| | 3.6 verigen.set_constraint function | |
| | 3.7 read excel table function | |
| | 3.8 verigen.set_max_showlink function | 30 |
| | 3.9 \$LOG2 function | 32 |
| | 3.10 \$DEMUX_BY_EN function | 33 |
| | 3.11 \$MULTICYCLE function | 32 |
| 4. | CLASS AND METHOD | 36 |
| | 4.1 clock | |
| | 4.1.1 clock:new | |
| | 4.1.2 clock:set_reset | |
| | 4.1.3 clock:get_reset | |
| | 4.1.4 clock:set_speed | |
| | 4.1.5 clock:set_default | |
| | 4.1.6 clock.find | |
| | 4.1.7 clock.is_valid | 44 |
| | 4.1.8 clock.get_default | 45 |
| | 4.2 interface | 46 |
| | 4.2.1 interface:new | |
| | 4.2.2 new_signal | |
| | 4.2.3 interface.find | |
| | 4.2.4 interface.is_valid | |
| | 4.2.5 interface:set_clock | |
| | 4.2.6 interface:get_clock | |
| | 4.2.7 interface:set_signal | |
| | 4.2.8 interface:signal_count | |
| | 4.2.9 interface:set_param | |
| | 4.2.10 interface:get_param | |
| | 4.2.11 interface:set_modport | |
| | 4.2.12 interface:get_modport | |
| | 4.2.13 interface:set_prefix | |
| | 4.2.14 interface:set_bared | |
| | 4.2.15 interface:set_top_uppercase | 64 |

| | 4.2.16 interface_i:set_port | 65 |
|----|--------------------------------------|----|
| | 4.2.17 interface_i:set_desc | 66 |
| | 4.2.18 interface_i:set_prefix | |
| | 4.2.19 interface_i:get_prefix | 68 |
| | 4.3 module | 69 |
| | 4.3.1 module:new | 70 |
| | 4.3.2 module:make_code | 71 |
| | 4.3.3 module:set_inception | 72 |
| | 4.3.4 module:add_document | 74 |
| | 4.3.5 module:get_inception | 75 |
| | 4.3.6 module:set_title | 76 |
| | 4.3.7 module:set_author | 77 |
| | 4.3.8 module:set_param | 78 |
| | 4.3.9 module:get_param | |
| | 4.3.10 module:add_interface | |
| | 4.3.11 module:add_clock | |
| | 4.3.12 module:get_interface | |
| | 4.3.13 module:get_port | |
| | 4.3.14 module:add_module | |
| | 4.3.15 module:get_module | |
| | 4.3.16 module:add_code | |
| | 4.3.17 module.find | |
| | 4.3.18 module.is_valid | |
| | 4.3.19 module.apply_code | |
| | 4.3.20 module_i:set_param | |
| | 4.3.21 module_i:get_param | |
| | 4.3.22 module_i:set_port | |
| | 4.3.23 module_i:get_port | |
| | 4.3.24 module_i.is_valid | 94 |
| 5 | APPENDIX | 05 |
| J. | | |
| | 5.1 Appendix : test : definition lua | 95 |

List of Tables

| Table | Title | Page |
|---|-------|------|
| Table 3-1. Macro function for Lua | | 22 |
| Table 3-2. In-line functions for verilog | | 22 |
| Table 4-1. clock object summary | | |
| Table 4-2. interface object summary | | |
| Table 4-3. interface_i object summary | | |
| Table 4-4. module object summary | | |
| Table 4-5. module i(sub module) object summary. | | |

List of Figures

| Figure | Title | Page |
|---------------------------------|--------------------|------|
| Figure 2-1. Step #1 Hierarchy D | Diagram | 12 |
| | Diagram | |
| | Diagram | |
| | nowlink(unlimited) | |
| Figure 3-2. verigen.set max sh | nowlink(4) | 31 |

Verigen user guide BSD License.

List of Terms

| List | Description |
|-----------|--|
| TestDrive | TestDrive Profiling Master (https://testdrive-profiling-master.github.io/) |
| Lua | Lua script language (Wiki, Homepage) |

Introduction

"Performance can't beat convenience."

When designing with the verilog of a large-scale project, one of the most problematic parts is that it takes a lot of time and effort to configure the control path between modules. In addition, if you need to modify some of the control paths of a design that has been completed with a lot of time and effort, or if you need a major change, you have to be more careful. Otherwise, it may introduce new errors or require the same amount of effort as recreating the design from scratch.

Therefore, I made a verigen tool that creates control paths with minimal design. This tool makes it easy and quick to build a control path programmatically with minimal effort, and has a function that allows you to check the structured control path as a design hierarchy at a glance. It can also allow for faster design changes and sharing of designs with other team members.

NOTE: If you have a new feature to suggest, or find improvements or bugs, please contact me (clonextop@gmail.com).

1.1 Main functions

verigen was created using codegen of TestDrive Profiling Master. This tool runs code written in lua, builds a verilog design, includes all codegen functionality, and generates the following files.

- Automatically generate verilog design (.sv, .f)
- Automatic creation of constraint (.xdc)
- Automatic creation of hierarchy diagram (.svg), HTML highlited source code (.html)

1.2 Verilog automation creation process

Creating a project through verigen proceeds in the following steps.

- 1. Write Lua scripts
 - 1). Create modules
 - 2). Connect modules
 - 3). Declaring parameters and interface to the module (option)
- 2. Write verilog codes
 - 1). Declaring parameters and interface to the module (option)
 - 2). Write Verilog additional code or write Lua mixed code
- 3. Run verigen to generate verilog code

1.3 How to run

To run verigen, run the following command.

```
> verigen
Verilog Generator for TestDrive Profiling Master. v1.06
Usage: verigen [--help] input_file [output_path]
      --help
                            display this help and exit
  input_file
                            input Lua file
```

Verigen user guide **BSD** License.

1. Introduction

output_path output path

default : ./output

NOTE: Command: verigen INPUT_LUA_FILE OUTPUT_PATH

A Lua script corresponding to INPUT_LUA_FILE is created and executed. If OUTPUT_PATH is not specified, the result is created in the default "./output" folder.

1.4 license grant

The source implemented in verigen complies with the BSD license, and the user's individual scripts used to create verilog or derivative works such as verilog are wholly owned by the user.

Verigen user guide BSD License.

2. Fast follow

This section is a quick, example-oriented explanation. To check the class and method in dictionary format, see the next step 'Class and Method'.

The example below describes the implementation at <u>github example</u>. You can achieve the same result by running do test, bat in that folder.

2.1 Step #1 : Creation of module

Generate and run the script code as shown below.

[test_1.lua file]

```
1: verigen.set_description("Test project")
2:
3: -- modules
4: core_wrapper = module:new("test_wrapper") -- top
5: core = {}
6: core.top = module:new("test_core")
7: core.slave_ctrl = module:new("slave_ctrl")
8: core.core_if = module:new("core_if")
9: core.core_ex = module:new("core_ex")
10: core.core_wb = module:new("core_wb")
11: core.mem_ctrl = module:new("mem_ctrl")
12: core.reg_ctrl = module:new("reg_ctrl")
13:
14: -- make code
15: core_wrapper:make_code()
```

It was created by putting the core_wrapper module and core related modules in lua table.

[Run command]

```
> verigen main.lua
*I: Build TOP design : test_wrapper.sv
*W: Empty port module : 'test_wrapper' module
*I: Build contraint : test_wrapper_constraint.xdc
*I: Make design hierarchy : test_wrapper_hierarchy.svg
*I: Make common defines : test_wrapper_defines.vh
*I: Make design file list : test_wrapper.f
```

Briefly declare the modules to be used through the module:new method. And the last module:make_code method generates the actual verilog code, constraint files and hierarchy diagram.

Currently, we have declared several modules, but since there is no module associated with core_wrapper, verilog design only creates one test_wrapper.sv file.

The rest of the test_wrapper_constraint.xdc, test_wrapper_defines.vh, etc. are empty.

[Result : test_wrapper.sv]

```
`include "test_wrapper_defines.vh"

module test_wrapper ();
```

Verigen user guide BSD License.

endmodule

The resulting design is literally an empty module file, and the hierarchy diagram(test_wrapper_hierarchy.svg) is also empty.

[Result : test_wrapper_hierarchy.svg]

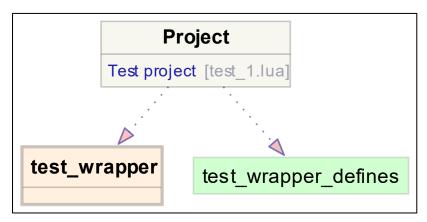


Figure 2-1. Step #1 Hierarchy Diagram

NOTE: You can view the actual verilog codes by clicking on the module name in this image.

2.2 Step #2 : module interconnections

Modify and run the Lua script as shown below.

[test_2.lua file]

```
1: verigen.set_description("Test project")
 3: RunScript("test_definition.lua")
 4:
 5: -- modules
 6: core_wrapper = module:new("test_wrapper")
                                                 -- top
 7: core = {}
 8: core.top = module:new("test_core")
 9: core.slave_ctrl = module:new("slave_ctrl")
10: core.core_if = module:new("core_if")
11: core.core_ex = module:new("core_ex")
12: core.core_wb = module:new("core_wb")
13: core.mem_ctrl = module:new("mem_ctrl")
14: core.reg_ctrl = module:new("reg_ctrl")
15: core.busy_ctrl = module:new("busy_ctrl")
16:
17: -- module connection
18: core_wrapper:add_module(core.mem_ctrl)
19: core_wrapper:add_module(core.slave_ctrl)
20:
21: core.top:add_module(core.core_if)
22: core.top:add_module(core.core_ex)
23: core.top:add_module(core.core_wb)
25: core.slave_ctrl:add_module(core.reg_ctrl)
26:
```

Now, in the added lines 17 to 30, each module is connected with the module:add_module function, and four modules are also created and connected to the core. Include "Appendix: test_definition.lua" at the top (line #3) to use the predefined config.core_size value.

[Run command]

```
> verigen main.lua
*I: Build sub design : mem_ctrl.sv
*W: Empty port module : 'mem_ctrl' module
*I: Build sub design : reg_ctrl.sv
*W: Empty port module : 'reg_ctrl' module
*I: Build sub design : slave_ctrl.sv
*W: Empty port module : 'slave_ctrl' module
*I: Build sub design : core_ex.sv
*W: Empty port module : 'core_ex' module
*I: Build sub design : core_if.sv
*W: Empty port module : 'core_if' module
*I: Build sub design : core_wb.sv
*W: Empty port module : 'core_wb' module
*I: Build sub design : test_core.sv
*W: Empty port module : 'test_core' module
*I: Build TOP design : test_wrapper.sv
*W: Empty port module : 'test_wrapper' module
*I: Build contraint : test_wrapper_constraint.xdc
*I: Make common defines : test_wrapper_defines.vh
*I: Make design hierarchy : test_wrapper_hierarchy.svg
*I: Make design file list : test_wrapper.f
```

In the execution result, other files included in addition to the test_wrapper.sv file are automatically created, and if you look at the top design, only the module is added and the port is not described, so a warning is generated, but each submodule is automatically You can see what has been added.

[Result : test_wrapper.sv]

```
'include "test_wrapper_defines.vh"

module test_wrapper ();

/* no ports in module. (commented out for DRC.)

mem_ctrl mem_ctrl (
);*/

/* no ports in module. (commented out for DRC.)

slave_ctrl slave_ctrl (
);*/

/* no ports in module. (commented out for DRC.)

test_core test_core_0 (
);*/

/* no ports in module. (commented out for DRC.)
```

```
test_core test_core_1 (
);*/

/* no ports in module. (commented out for DRC.)
test_core test_core_2 (
);*/

/* no ports in module. (commented out for DRC.)
test_core test_core_3 (
);*/
endmodule
```

NOTE: In the code above, since the submodule has no input/output at all, it is commented out to avoid 'DRC (Design Rule Check)' errors.

[Result : test_wrapper_hierarchy.svg]

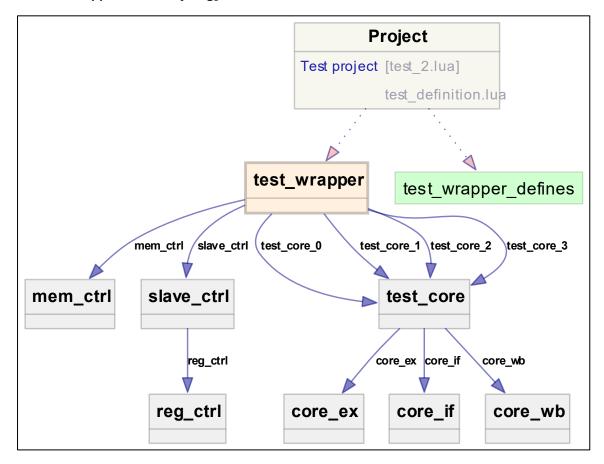


Figure 2-2. Step #2 Hierarchy Diagram

In addition to test_wrapper.sv, other slave_ctrl.sv and test_core.sv also contain submodules, as seen in Figure 2-2.

2.3 Step #3: Verilog code insertion

Modify and run the Lua script as shown below.

[test_3.lua file]

```
1: verigen.set_description("Test project")
 3: RunScript("test_definition.lua")
 4:
 5: -- modules
 6: core_wrapper = module:new("test_wrapper")
                                                -- top
 7: core = {}
 8: core.top = module:new("test_core")
 9: core.slave_ctrl = module:new("slave_ctrl")
10:
11: core.core_if = module:new("core_if")
12: core.core_ex = module:new("core_ex")
13: core.core_wb = module:new("core_wb")
14: core.mem_ctrl = module:new("mem_ctrl")
15: core.reg_ctrl = module:new("reg_ctrl")
16: core.busy_ctrl = module:new("busy_ctrl")
17:
18: -- add master bus
19: bus.maxi4:set_param("DATA_WIDTH", 512)
20: bus.maxi4:set_param("ADDR_WIDTH", 36)
21: bus.maxi4:set_prefix("M#")
22:
23: -- add busy
24: core_busy = new_signal("core_busy")
26: -- module connection
27: core_wrapper:add_module(core.mem_ctrl)
28: core_wrapper:add_module(core.slave_ctrl)
30: core.top:add_module(core.core_if)
31: core.top:add_module(core.core_ex)
32: core.top:add_module(core.core_wb)
34: core.slave_ctrl:add_module(core.reg_ctrl)
35:
36: -- multi-core genration
37: for i = 1, config.core_size do
        core_wrapper:add_module(core.top)
38:
39: end
40:
41: -- add verilog codes
42: verigen.add_verilog("src/*.sv")
43:
44: -- make code
45: core_wrapper:make_code()
```

The code added to the existing Lua script is line #18~24 and #41~42.

The first changes the bit width of data and address of axi4, and the second one adds the two files below through the module.apply_code() function to all *.sv files in the subfolder "./src".

[src/_wrapper.sv]

```
4: //#----
 5: module core_if
 6: $set_param("CORE_ID", "0")
 7: $add_interface(core_i.inst.modport.m, "if_inst")
 8: $add_interface(core_busy.modport.m)
 9:
10: assign core_busy = 1'b0;
11:
12:
13: //#----
14: module core_ex
15: $add_interface(core_i.inst.modport.s, "if_inst")
16: $add_interface(core_i.inst.modport.m, "ex_inst")
17:
18:
19: //#----
20: module core_wb
21: $add_interface(core_i.inst.modport.s, "ex_inst")
```

NOTE: As above, by declaring 'modport' paired with the name of the same type of interface through the \$add_interface() function, the same interfaces declared in two different modules are automatically connected.

[src/ wrapper.sv]

```
1: //#----
 2: module test_wrapper
            $RANGE(config.core_size) core_busy_all;
 4:
 5: ${ -- It's Lua codes
 6:
        module:set_title("Fast Follow")
 7:
       for i = 0, (config.core_size-1) do
 8:
            local core = sub_module["test_core_" .. i]
 9:
10:
            core:set_param("CORE_ID", i)
            core:set_port("core_busy", "core_busy_all[" .. i .. "]")
11:
12.
       end
13:
14:
        sub_module["slave_ctrl"]:set_port("core_busy", "|core_busy_all")
15: }
16:
17: //#-----
18: module slave_ctrl
19: $set_param("BASE_ADDR", "32'h10000000")
20: $add_interface(bus.apb.modport.m, "s_apb")
21: $add_interface(bus.apb.modport.m, "s_apb_0")
22:
23: //#----
24: module mem_ctrl
25: $add_interface(bus.maxi4.modport.m, "maxi")
26:
27: //#----
28: module reg_ctrl
29: $add_interface(core_busy.modport.s)
```

NOTE: You can connect directly through the "module_i:set_param()" and "module_i:set_port()" functions without automatically connecting interfaces or parameters.

After declaring "module <module_name>"(The use of "endmodule" can be omitted.) in the added .sv file, the file can be described using both Verilog and Lua grammars. You can either declare I/O via @set_param() function and

Verigen user guide **BSD** License.

@module:add_interface() function, respectively, or use Verilog syntax directly.

In addition, if you want to directly access a Lua variable or function, you can access it with \$(*), or you can execute a Lua statement by describing it with \${*}.

[Result:test_wrapper_hierarchy.svg]

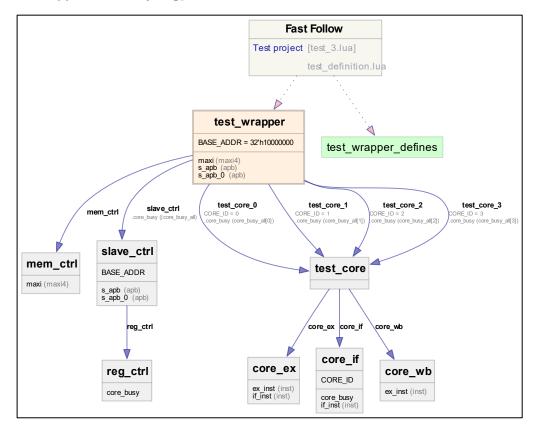


Figure 2-3. Step #3 Hierarchy Diagram

Below is the output of the top design.

[Final result : test_wrapper.sv]

```
`include "test_wrapper_defines.vh"
module test_wrapper #(
    parameter BASE_ADDR
                                 = 32'h10000000
) (
    // clock & reset
                                              // AXI clock
    input
                                 ACLK,
    input
                                               // main clock
                                 CLK,
    input
                                              // APB clock
                                 PCLK,
                                              // reset of 'PCLK' (active low)
    input
                                 PRESETn,
    input
                                              // default global reset (active low)
                                 nRST,
    // maxi
    input
                                 M_AWREADY,
    input
                                 M_WREADY,
    input
                                 M_BVALID,
    input
           [1:0]
                                 M_BRESP,
    input
           [3:0]
                                 M_BID,
```

Verigen user guide **BSD** License.

```
input
                                 M_ARREADY,
    input
                                 M_RVALID,
    input
           [511:0]
                                 M_RDATA,
    input
          [1:0]
                                 M_RRESP,
    input [3:0]
                                 M_RID,
    input [3:0]
                                 M_ARQOS,
    input [3:0]
                                 M_ARREGION,
    output
                                 M_AWVALID,
    output [35:0]
                                 M_AWADDR,
    output [2:0]
                                 M_AWSIZE,
    output [1:0]
                                 M_AWBURST,
    output [3:0]
                                 M_AWCACHE,
    output [2:0]
                                 M_AWPROT,
    output [3:0]
                                 M_AWID,
    output [7:0]
                                 M_AWLEN,
    output
                                 M_AWLOCK,
    output
                                 M_WVALID,
    output
                                 M_WLAST,
    output [511:0]
                                 M_WDATA,
    output [63:0]
                                 M_WSTRB,
    output [3:0]
                                 M_WID,
    output
                                 M_BREADY,
    output
                                 M_ARVALID,
    output [35:0]
                                 M_ARADDR,
    output [2:0]
                                 M_ARSIZE,
    output [1:0]
                                 M_ARBURST,
                                 M_ARCACHE,
    output [3:0]
    output [2:0]
                                 M_ARPROT,
    output [3:0]
                                 M_ARID,
    output [7:0]
                                 M_ARLEN,
    output
                                 M_ARLOCK,
    output
                                 M_RREADY,
    output
                                 M_RLAST,
    output [3:0]
                                 M_AWQOS,
    output [3:0]
                                 M_AWREGION,
    // s_apb
    input
                                 S0_PREADY,
    input [31:0]
                                 SO_PRDATA,
    input
                                 S0_PSLVERR,
    output [1:0]
                                 S0_PSEL,
    output
                                 SO_PENABLE,
    output
                                 S0_PWRITE,
    output [15:0]
                                 SO_PADDR,
    output [31:0]
                                 SO_PWDATA,
    // s_apb_0
    input
                                 S1_PREADY,
    input [31:0]
                                 S1_PRDATA,
                                 S1_PSLVERR,
    input
    output [1:0]
                                 S1_PSEL,
    output
                                 S1_PENABLE,
    output
                                 S1_PWRITE,
    output [15:0]
                                 S1_PADDR,
    output [31:0]
                                 S1_PWDATA
);
```

```
// synopsys template
// interface : maxi
                             maxi();
i_maxi4
assign maxi.AWREADY
                                       = M_AWREADY;
                                       = M_WREADY;
assign maxi.WREADY
assign maxi.BVALID
                                       = M_BVALID;
                                      = M_BRESP;
assign maxi.BRESP
                                      = M_BID;
assign maxi.BID
                                  = M_BID;

= M_ARREADY;

= M_RVALID;

= M_RDATA;

= M_RRESP;

= M_RID;

= M_ARQOS;
assign maxi.ARREADY
assign maxi.RVALID
assign maxi.RDATA
assign maxi.RRESP
assign maxi.RID
                                  = M_ARQOS;
= M_ARREGION;
= maxi.AWVALID;
= maxi.AWADDR;
assign maxi.ARQOS
assign maxi.ARREGION
assign M_AWVALID
assign M_AWADDR
                             = maxi. AWBURST;
= maxi. AWCACHE;
= maxi. AWPROT;
= maxi. AWLD;
= maxi. AWLEN;
= maxi. AWLOCK;
= maxi. WVALID;
= maxi. WLAST;
= maxi. WDATA;
= maxi. WSTRB;
                                      = maxi.AWSIZE;
assign M_AWSIZE
assign M_AWBURST
assign M_AWCACHE
assign M_AWPROT
assign M_AWID
assign M_AWLEN
assign M_AWLOCK
assign M_WVALID
assign M_WLAST
assign M_WDATA
assign M_WSTRB
assign M_WID
                                      = maxi.WID;
                                      = maxi.BREADY:
assign M_BREADY
                                     = maxi.ARVALID;
assign M_ARVALID
                                     = maxi.ARADDR;
assign M_ARADDR
                                      = maxi.ARSIZE
assign M_ARSIZE
                               maxi.ARSIZE;
maxi.ARBURST;
maxi.ARCACHE;
maxi.ARPROT;
maxi.ARID;
maxi.ARLEN;
maxi.ARLOCK;
maxi.RREADY;
maxi.RLAST;
maxi.RLAST;
maxi.AWOOS:
assign M_ARBURST
assign M_ARCACHE
assign M_ARPROT
assign M_ARID
assign M_ARLEN
assign M_ARLOCK
assign M_RREADY
assign M_RLAST
assign M_AWQOS
                                      = maxi.AWQOS;
assign M_AWREGION
                                      = maxi.AWREGION;
// interface : s_apb
                             s_apb();
i_apb
                               = SU_r...
= SO_PRDATA;
assign s_apb.PREADY
assign s_apb.PRDATA
                                      = S0_PSLVERR;
assign s_apb.PSLVERR
assign SO_PSEL
                                      = s_apb.PSEL;
                                   = s_apb.PENABLE;
= s_apb.PWRITE;
= s_apb.PADDR;
assign SO_PENABLE
assign SO_PWRITE
assign SO_PADDR
                                      = s_apb.PWDATA;
assign SO_PWDATA
// interface : s_apb_0
i_apb
                             s_apb_0();
```

```
assign s_apb_0.PREADY
                                 = S1_PREADY;
assign s_apb_0.PRDATA
                                 = S1_PRDATA;
assign s_apb_0.PSLVERR
                                 = S1_PSLVERR;
assign S1_PSEL
                                 = s_apb_0.PSEL;
assign S1_PENABLE
                                 = s_apb_0.PENABLE;
assign S1_PWRITE
                                 = s_apb_0.PWRITE;
assign S1_PADDR
                                 = s_apb_0.PADDR;
assign S1_PWDATA
                                 = s_apb_0.PWDATA;
mem_ctrl mem_ctrl (
    . ACLK
                           (ACLK),
                           (nRST),
    .nRST
    .maxi
                           (maxi)
);
slave_ctrl #(
    .BASE_ADDR
                           (BASE_ADDR)
) slave_ctrl (
    . PCLK
                           (PCLK),
    .PRESETn
                           (PRESETn),
                           (|core_busy_all),
    .core_busy
    .s_apb
                           (s_apb),
                           (s_apb_0)
    .s_apb_0
);
test_core #(
                           (1)
    .CORE_ID
) test_core_0 (
    .CLK
                           (CLK),
    .nRST
                           (nRST),
    .core_busy
                           (core_busy_all[0])
);
test_core #(
    .CORE_ID
                           (2)
) test_core_1 (
    .CLK
                           (CLK),
    .nRST
                           (nRST),
    .core_busy
                           (core_busy_all[1])
);
test_core #(
                           (3)
    .CORE_ID
) test_core_2 (
    .CLK
                           (CLK),
                           (nRST),
    .nRST
                           (core_busy_all[2])
    .core_busy
);
test_core #(
                           (4)
    .CORE_ID
) test_core_3 (
    .CLK
                           (CLK),
    .nRST
                           (nRST),
    .core_busy
                           (core_busy_all[3])
);
```

```
wire [3:0] core_busy_all;
endmodule
```

[Final result : test_core.sv]

```
`include "test_wrapper_defines.vh"
module test_core #(
    parameter CORE_ID
                                = 0
) (
    // clock & reset
                                            // main clock
    input
                                CLK,
    input
                                nRST,
                                             // default global reset (active low)
    // core_busy
    output logic
                                core_busy
);
// synopsys template
// interface : ex_inst
i_inst
                       ex_inst();
// interface : if_inst
i_inst
                        if_inst();
core_ex core_ex (
   .CLK
                          (CLK),
    .nRST
                          (nRST),
    .ex_inst
                          (ex_inst),
    .if_inst
                          (if_inst)
);
core_if #(
    .CORE_ID
                          (CORE_ID)
) core_if (
    .CLK
                          (CLK),
    .nRST
                          (nRST),
                          (core_busy),
    .core_busy
    .if_inst
                          (if_inst)
);
core_wb core_wb (
    .CLK
                          (CLK),
    .nRST
                          (nRST),
    .ex_inst
                          (ex_inst)
endmodule
```

Macro functions 3.

Provides useful macro functions for organizing in your Lua code.

Table 3-1. Macro function for Lua

| Macro | Туре | Description |
|--------------------------|----------|--|
| _V | function | string expansion manipulation |
| vfunction | function | Declaring a function for verilog |
| verigen.set_description | function | Set verigen source code description |
| verigen.add_reference | function | Add link & description to verigen top reference list |
| verigen.add_verilog | function | Add verilog source(s) |
| verigen.set_max_showlink | function | Set design hierarchy tree's maximum link count between the modules |
| verigen.set_constraint | function | Set constaint |
| read_excel_table | function | Read excel sheet table to Lua array |
| sub_module | data | Sub-module instance list |

The functions below are predefined in-line functions as vfunction available in verilog. It can be used as "\$function_name(~)".

Table 3-2. In-line functions for verilog

| vfunction | Туре | Description |
|-----------------|----------|---------------------------------------|
| \$LOG2 | function | log2(X) function |
| \$RANGE | function | verilog bitwidth range template |
| \$DEMUX_BY_EN | function | demux design template |
| \$MULTICYCLE | function | multicycle design template |
| \$add_clock | function | Refer to 4.3.11. module:add_clock |
| \$add_interface | function | Refer to 4.3.10. module:add_interface |
| \$add_code | function | Refer to 4.3.16. module:add_code |
| \$add_document | function | Refer to 4.3.4. module:add_document |
| \$set_param | function | Refer to 4.3.8. module:set_param |
| \$set_inception | function | Refer to 4.3.3. module:set_inception |
| \$set_author | function | Refer to 4.3.7. module:set_author |
| \$_V | function | Refer to 3.1V macro |

Verigen user guide **BSD** License.

3.1 _V macro

| Туре | Description |
|--------------|---|
| Prototype | function _V(s, [start], [end], [step]) |
| Return value | string |
| | Extends a statement by incrementing it by a step from start to end. |
| Remarks | If there is a part of the statement implemented with \$(), only that part is expanded. If there is none, the entire sentence is expanded, and the '#' character in the sentence is assigned a repeated value from start to end. |
| start | start value |
| end | end value (If omitted, it is treated the same as the start value.) |
| step | increase value (If omitted, it increases or decreases by 1 or -1. according to the sign of the end-start value.) |

ex) _V macro example

```
print(_V("assign A = {\{(B[#],)\}; ", 0, 3)})
[Result]
```

```
assign A = {B[0], B[1], B[2], B[3]};
```

Verigen user guide **BSD** License.

v1.06

23

3.2 vfunction macro

| Туре | Description | |
|--------------|---|--|
| Prototype | function vfunction(name, func) | |
| Return value | - | |
| Remarks | You can call lua functions from within verilog with "\$function()". | |
| name | Function name to use within verilog | |
| func | lua function to use in verilog | |

NOTE: By default, the "_V" macro is declared as vfunction, so you can use the \$_V(...) function equivalently within verilog.

ex) vfunction macro example

```
vfunction("RANGE", function(size,step)
   return ("[" .. ((size*(step+1))-1) .. ":" .. (size*step) .. "]")
end)
 [Source input]
wire
           $RANGE(32,1)
 [Result]
wire
           [63:32]
                           Τ;
```

Verigen user guide **BSD** License.

$3.3 \ verigen.set_description \ function$

| Type | Description |
|--------------|--|
| Prototype | function verigen.set_description(desc) |
| Return value | - |
| Remarks | Set verigen source's description in Lua file |
| desc | description of verigen source file |

ex) verigen.set_description macro example

verigen.set_description("Your description")

Verigen user guide **BSD** License.

3.4 verigen.add_reference function

| Type | Description |
|--------------|--|
| Prototype | function verigen_add_reference(filename, desc) |
| Return value | - |
| Remarks | Add link & description to verigen top reference list |
| filename | target source file name |
| desc | description of verigen source file |

ex) verigen.add_reference macro example

verigen.add_reference("__Defines.sv", "Global definitions")

3.5 verigen.add_verilog function

| Type | Description |
|--------------|--|
| Prototype | function verigen_add_verilog(filename) |
| Return value | - |
| Remarks | Add verilog source(s) |
| filename | verilog file name (can use wildcard '*') |

ex) verigen.add_verilog macro example

verigen.add_verilog("*.sv")

3.6 verigen.set_constraint function

| Туре | Description |
|--------------|--|
| Prototype | verigen.set_constaint(name, constaint) |
| Return value | - |
| Remarks | Set constaint for hardware design. If 'name' and 'constaint' is nil, then clear all constaint. |
| name | name of constaint If 'name' is nil, then add constaint to previous named constained. Previous same named constraint will be overwrited. |
| constaint | constaint description |

ex) verigen.set_constraint macro example

```
verigen.set_constraint("Reset constraint for M/S_nRST", "set_false_path -from
[get_ports M_nRST]")
verigen.set_constraint(nil, "set_false_path -from [get_ports S_nRST]")
```

Result: ".xdc" constraint output file

```
# Reset constraint for M/S_nRST
set_false_path -from [get_ports M_nRST]
set_false_path -from [get_ports S_nRST]
```

Verigen user guide BSD License.

3.7 read_excel_table function

| Туре | Description |
|--------------|---|
| Prototype | function read_excel_table(file_name, sheet_name, [tag_name], [position]) |
| Return value | Lua 2D array |
| Remarks | Read excel table sheet to Lua table |
| file_name | Excel file name to read |
| sheet_name | Excel file's sheet name |
| tag_name | Table's base tag name to set a table key [optional] |
| position | Specific table start position on sheet [optional], 'x,y' position or excel position(ex. "B3") |

ex) read_excel_table macro example

```
isa_table = excel_read_table("isa_table.xlsx", "ISA", "#opcode", true, "A4")
read from sheet "ISA"'s "A4"
```

3.8 verigen.set_max_showlink function

| Туре | Description |
|--------------|--|
| Prototype | verigen.set_max_showlink(size) |
| Return value | - |
| Remarks | Set design hierarchy tree's maximum link count between the modules. |
| size | maximum link count. If "size" is 0 or less, all connected links will be shown. (default value : 5) |

ex.1) set verigen.set_max_showlink to unlimited.

```
verigen.set_max_showlink(0)
end)
```

Result:


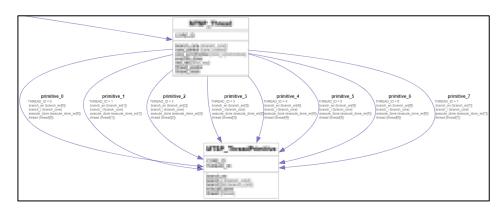


Figure 3-1. verigen.set_max_showlink(unlimited)

ex.2) set verigen.set_max_showlink to 4.

```
verigen.set_max_showlink(4)
end)
```

Result:

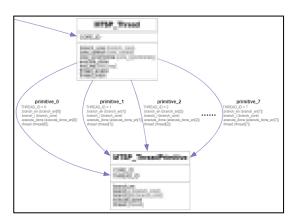

Verigen user guide **BSD** License.

Figure 3-2. verigen.set_max_showlink(4)

3.9 \$LOG2 function

| Туре | Description |
|--------------|---|
| Prototype | \$LOG2(val, [bOverflow]) |
| Return value | number |
| Remarks | Returns log2(val) value. |
| val | log2 input value |
| bOverflow | val must be an integer equal to 2^N . If not, return an error. Set this value to true to force rounding up on the resulting value. If omitted, false is assumed. |

ex) \$LOG2 example

```
val_a = 16
[Source input]

localparam    BITS = $LOG2(val_a);
[Result]

localparam    BITS = 4;
```

3.10 \$DEMUX_BY_EN function

| Туре | Description |
|---------------|---|
| Prototype | \$DEMUX_BY_EN(width, channel_count, en, data_in, data_out) |
| Return value | string |
| Remarks | Implement demux using demux_by_enable module. |
| width | bitwidth per data |
| channel_count | Number of input channels |
| en | input enable signal (string) |
| data_in | Input data (as many as the total number of channel_count, string) |
| data_out | output data (string) |

ex) \$DEMUX_BY_EN example

[Source input]

```
wire
        [31:0]
                     a,b,c,d;
        [3:0]
wire
                     en;
                     odata;
        [31:0]
wire
$DEMUX_BY_EN(32, 4, "en", "{a,b,c,d}", "odata")
[Result]
wire
        [31:0]
                     a,b,c,d;
wire
        [3:0]
                     en;
wire
        [31:0]
                     odata;
demux_by_enable #(
    .WIDTH
                         (32),
    .CHANNELS
                         (4),
    .TRISTATE
                         (1)
) demux_en_pc (
    .EN_BUS
                         (en),
                         ({a,b,c,d}),
    .DIN_BUS
    . DOUT
                         (odata)
);
```

3.11 \$MULTICYCLE function

| Туре | Description |
|------------------|---|
| Prototype | \$MULTICYCLE(module_inst_name, if_name, cycle_count, [instance_count], [clk]) |
| Return value | string |
| Remarks | Multicycle Implementation Using the template "MultiCyclePath" module or "MultiCyclePathEx", a module with one interface is implemented as multicycle. |
| module_inst_name | Module name included as a child of the current module |
| if_name | Specifies the interface instance name corresponding to the module of module_inst_name. |
| cycle_count | cycle count (2 ≤ cycle_count ≤ 12) |
| instance_count | Number of instances of submodules (1 ≤ instance_count ≤ cycle_count) |
| | If omitted, it is regarded as the same number as cycle_count. |
| clk | Clock to use for multicycle implementation |
| | If omitted, the default clock is used. (see clock:set_default() function) |

ex) \$MULTICYCLE example

[Source input]

```
$MULTICYCLE("MTSP_Synchronize", "mtsp_sync", 2, 1)
[Result]
```

```
genvar i;
// multicycle design for MTSP_Synchronize
i_mtsp_sync mtsp_sync();
wire
        mtsp_sync_ie, mtsp_sync_oe, mtsp_sync_iready;
generate
wire
        [7:0]
                pipe_i;
wire
        [1:0]
                pipe_o;
        [1:0]
wire
                 __0;
MultiCyclePathEx #(
    . IWIDTH
                 (8),
    .OWIDTH
                 (2),
    .CYCLE
                 (2),
    . COUNT
                 (1)
) multi_pipe (
    .CLK
                 (MCLK),
    .nRST
                 (nRST),
    .IE
                 (mtsp_sync_ie),
    .IDATA
                 ({mtsp_sync.sync, mtsp_sync.eop}),
    .IREADY
                 ({mtsp_sync_iready}),
    .PIPE_I
                 (pipe_i),
    .PIPE_0
                 (pipe_o),
    .0E
                 (mtsp_sync_oe),
    .ODATA
                 (__0)
);
assign {mtsp_sync.awake, mtsp_sync.done} = __o;
for(i=0; i<1; i=i+1) begin</pre>
```

3. Macro functions

4. Class and Method

There are three object types as shown below.

- clock
 - You can generate clocks and assign them to interfaces. When the corresponding interface is used, the automatically assigned clock and reset matching the clock are declared to the port. If reset is not declared, the default reset nRST signal is automatically generated.
- interface
 - Create an interface to be used in the module. Interfaces can be created by inheriting from other interfaces. Instances requested by add_interface to a module can only call interface_i:* functions.
- module
 - You can create a module, include other submodules via the module:add_module function, or call module:add_interface to create an interface instance.

4.1 clock

Generates or manages clocks to be assigned to interfaces. The assigned clock is automatically declared according to the port of the module when the corresponding interface is used.

In addition, the speed of the corresponding clock is defined in the contraint, and false_path is automatically designated for registers between heterogeneous clocks and reset set for the clock.

Table 4-1. clock object summary

| Member | Туре | Description |
|--------------|----------|--------------------------|
| .name | string | clock name |
| :new | function | clock creation |
| :set_reset | function | setup reset of clock |
| :get_reset | function | return reset of clock |
| :set_speed | function | set clock speed |
| :set_default | function | set default clock |
| .find | function | find clock |
| .is_valid | function | check valid clock object |
| .get_default | function | get defulat clock |

Verigen user guide **BSD** License.

4.1.1 clock:new

| Туре | Description | | |
|--------------|---|--|--|
| Prototype | function clock:new(name, [desc]) | | |
| Return value | clock | | |
| Remarks | Create clock with name. | | |
| name | clock name. | | |
| desc | Used for clock descriptions and comments. (can skip.) | | |

ex) creation example

```
new_clock = clock:new("CLK") -- generated from the base clock
new_clock:set_reset("GRSTn")

new_clock2 = new_clock:new("ACLK") -- Clock cloned from new_clock. It inherits
reset and speed.
```

4.1.2 clock:set_reset

| Type | Description | | |
|--------------|---|--|--|
| Prototype | function clock:set_reset(name) | | |
| Return value | - | | |
| Remarks | Create a reset on the clock. If reset is not generated using this function, the default reset 'nRST' signal is automatically used. | | |
| name | reset name. (active low) | | |

ex) Example of specifying reset

4.1.3 clock:get_reset

| Туре | Description | | |
|--------------|--|--|--|
| Prototype | function clock:get_reset() | | |
| Return value | string | | |
| Remarks | Returns the reset assigned to clock. If no reset is assigned, the default reset signal is returned. | | |

BSD License. 40 v1.06

4.1.4 clock:set_speed

| Type | Description | | |
|--------------|--|--|--|
| Prototype | function clock:set_speed(mhz) | | |
| Return value | - | | |
| Remarks | Specifies the operating speed of the clock. | | |
| | If not specified using this function, the default clock 100MHz is set. | | |
| mhz | speed value of the clock. (MHz) | | |

ex) Example of motion speed designation

```
aclock = clock:new("ACLK")
aclock:set_speed(1000)
                                       -- Set 1GHz to ACK
```

Verigen user guide **BSD** License.

4.1.5 clock:set_default

| Type | Description | | |
|--------------|---|--|--|
| Prototype | function clock:set_default() | | |
| Return value | - | | |
| Remarks | Set the current clock as the default clock. The clock that is created first is set as the default clock, and it is used when a specific clock is explicitly set as the clock separately. | | |

ex) Basic clock setting example

```
aclock = clock:new("MCLK")
aclock:set_default()
```

4.1.6 clock.find

| Type | Description | | |
|--------------|-----------------------------|--|--|
| Prototype | function clock.find(name) | | |
| Return value | clock | | |
| Remarks | Find the clock. | | |
| | Returns 'nil' if not found. | | |
| name | The clock name to find. | | |

ex) clock find example

```
aclock = clock.find("ACLK")
                                        -- Find ACLK
if aclock ~= nil then
    LOGI("ACLK is found.")
                                        -- found.
end
```

Verigen user guide **BSD** License.

4.1.7 clock.is_valid

| Type | Description | | |
|--------------|---|--|--|
| Prototype | function clock.is_valid(obj) | | |
| Return value | boolean | | |
| Remarks | Check that the clock object is correct. | | |
| obj | A clock object to check. | | |

ex) Example of checking the clock object

```
aclock = clock:new("ACLK")

if clock.is_valid(aclock) then
    LOGI("aclock is clock object.") -- clock object is correct.
end
```

4.1.8 clock.get_default

| Type | Description | | |
|--------------|------------------------------|--|--|
| Prototype | function clock.get_default() | | |
| Return value | clock | | |
| Remarks | Returns the default clock. | | |

4.2 interface

The interface object works identically to system verilog's interface technology. If you look at the interface syntax of systemverilog, it is as follows.

[systemverilog interface 선언]

```
interface my_intface;
    logic
    logic
           [3:0]
    // modport example
                                  // slave modport
    modport s (input a, output b);
    modport m (input a, input b);
                                       // master modport
endinterface
```

NOTE: A detailed description of the system verilog interface can be found in external links. See system verilog modport description.

Among them, port configuration is attempted using the modport function that can be synthesized, and it is largely divided into the interface_i object created through add_interface to the interface object, which is the basic object, and the module object.

| Table 4-2. | interface | object | summary |
|------------|-----------|--------|---------|
|------------|-----------|--------|---------|

| Member | Туре | Description | |
|---------------|----------|------------------------------------|--|
| .name | string | Interface name | |
| :new | function | Create interface | |
| new_signal | function | Creating a single signal interface | |
| .find | function | Find interface | |
| .is_valid | function | Check if object is valid interface | |
| :set_clock | function | Assign clock | |
| :get_clock | function | Get clock | |
| :set_signal | function | add signal | |
| :signal_count | function | get total signal count | |
| :set_param | function | Add parameter | |
| :get_param | function | Get parameter | |
| :set_modport | function | setup modport | |
| :add_modport | function | Add modport | |
| :get_modport | function | Get modport | |
| :set_prefix | function | Designate prefix for port export | |
| :set_bared | function | Apply into a bared signal | |

Table 4-3. interface_i object summary

| Member | Туре | Description |
|-------------|----------|----------------------------|
| :set_port | function | set instance to port |
| :set_desc | function | Add instance description |
| :set_prefix | function | Specify prefix of instance |

Verigen user guide **BSD** License.

| Member | Туре | Description |
|----------------------|------|---------------------|
| :get_prefix function | | Get instance prefix |

4.2.1 interface:new

| Туре | Description |
|--------------|--|
| Prototype | function interface:new(name) |
| Return value | interface |
| Remarks | Creates an interface with name. When creating, the default prefix is specified as ('name uppercase' + '#'). |
| name | interface name. |

ex) Example of interface creation

```
i_apb = interface:new("APB") -- APB interface creation
i_apb:set_signal("RARDDR", 32)
```

4.2.2 new_signal

| Type | Description |
|--------------|--|
| Prototype | function new_signal(name, [width]) |
| Return value | interface |
| Remarks | Creates a bared interface with name. |
| name | signal name. |
| width | signal bitwidth. If omitted, it is set to 1. |

The actual implementation inside creates a bared interface as shown below, setting modport 's' to input and modport 'm' to output. Also, because it is a bared interface, it is not even logged as an interface in the [top_module]_include.vh header.

```
function new_signal(name, width)
              signal = interface:new(name)
    local
     if width == nil then
         width = 1
     end
    signal:set_param("WIDTH", width)
     signal:set_signal(name, "WIDTH")
    signal:set_modport("s", {["input"] = {name}})
signal:set_modport("m", {["output"] = {name}})
    signal:set_prefix() -- none prefix
signal:set_bared() -- bared signal
     signal:set_bared()
                                  -- bared signals
    return signal
end
```

ex) signal creation example

```
= new_signal("BUSY_ALL", 4)
s_BUSY
```

Verigen user guide **BSD** License.

v1.06

49

4.2.3 interface.find

| Type | Description |
|--------------|-------------------------------|
| Prototype | function interface.find(name) |
| Return value | interface |
| Remarks | Find the created interface. |
| name | interface name to find |

ex) Example of finding an interface

```
i_APB = interface:new("APB")

if interface.find("APB") ~= nil then
    LOGI("APB interface is existed.")
end
```

4.2.4 interface.is_valid

| Type | Description |
|--------------|---|
| Prototype | function interface.is_valid(obj) |
| Return value | boolean |
| Remarks | Check that the interface object is correct. |
| obj | Clock object to check. |

ex) Example of checking interface object

```
i_APB = interface:new("APB")

if interface.is_valid(i_APB) then
    LOGI("i_APB is interface object.") -- interface object is correct.
end
```

4.2.5 interface:set_clock

| Type | Description |
|--------------|-----------------------------------|
| Prototype | function interface:set_clock(clk) |
| Return value | - |
| Remarks | Assign clock to interface. |
| clk | clock object |

ex) Example of setting clock on interface object

```
i_APB = interface:new("APB")

PCLK = clock:new("PCLK", "APB's clock")
PCLK:set_reset("PRSTn")

i_APB:set_clock(PCLK) -- PCLK setting
```

4.2.6 interface:get_clock

| Type | Description |
|--------------|--|
| Prototype | function interface:get_clock() |
| Return value | clock |
| Remarks | Returns the clock assigned by interface. |

ex) Example of setting clock on interface object

```
i_APB = interface:new("APB")

PCLK = clock:new("PCLK", "APB's clock")
PCLK:set_reset("PRSTn")

i_APB:set_clock(PCLK)

LOGI("APB's clock is " .. i_APB:get_clock().name) -- print clock name
```

4.2.7 interface:set_signal

| Туре | Description |
|--------------|---|
| Prototype | function interface:set_signal(name, [bit_width]) |
| Return value | - |
| Remarks | Set or change signal on interface. |
| name | signal name to set |
| bit_width | The bit width of the signal. If not set, it is regarded as 1. Also, if explicitly set to 0, the corresponding signal is not used. (In addition to constants, parameter values or formulas can be used.) |

ex) Example of adding signal to interface object

```
i_axi3 = interface:new("AXI3")

-- parameter setting
i_axi3:set_param("ADDR_WIDTH", 16)
i_axi3:set_param("DATA_WIDTH", 128)

-- signal setting
i_axi3:set_signal("AWVALID")
i_axi3:set_signal("AWREADY")
i_axi3:set_signal("AWADDR", "ADDR_WIDTH")
i_axi3:set_signal("AWSIZE", 3)
i_axi3:set_signal("AWBURST", 2)
i_axi3:set_signal("WSTRB", "DATA_WIDTH/8")
```

4.2.8 interface:signal_count

| Type | Description |
|--------------|---|
| Prototype | function interface:signal_count() |
| Return value | number |
| Remarks | Returns the number of signals defined in the interface. |

4.2.9 interface:set_param

| Type | Description |
|---------------|---|
| Prototype | function interface:set_param(name, default_value) |
| Return value | - |
| Remarks | Add or change parameters to the interface. |
| name | parameter name |
| default_value | parameter default value. (Constant or formula may be included.) |

ex) Example of adding parameter to interface object

```
i_axi3 = interface:new("AXI3")

-- parameter setting
i_axi3:set_param("ADDR_WIDTH", 16)
i_axi3:set_param("DATA_WIDTH", 128)

-- Modify parameter
i_axi3:set_param("DATA_WIDTH", 256)
```

4.2.10 interface:get_param

| Type | Description |
|--------------|-------------------------------------|
| Prototype | function interface:get_param(name) |
| Return value | number or string |
| Remarks | Return parameters to the interface. |
| name | parameter name |

ex) An example of getting parameters to an interface object

```
i_axi3 = interface:new("AXI3")

-- parameter setting
i_axi3:set_param("ADDR_WIDTH", 16)
i_axi3:set_param("DATA_WIDTH", 128)

-- get parameter and print
LOGI("i_axi3's data width = " .. tostring(i_axi3:get_param("DATA_WIDTH")))
```

4.2.11 interface:set_modport

| Туре | Description |
|--------------|---|
| Prototype | function interface:set_modport(name, modport) |
| Return value | - |
| Remarks | Add/Remove modport to interface. |
| name | modport name, or set dual mirrored modport with 'normal_name/inverted_name' ex) 'm' and 's' modport is exactly mirrored. set_modport("m", m_~) set_modport('s', s_~) = set_modport("m/s", m_~) |
| modport | It is a modport configuration table structure, and is described in the form below. If modport is nil, modport as 'name' will be lost all I/O signal list. add: {["input"]={"",}, ["output"]={"",}, ["inout"]={"",}} remove: {["-input"]={"",}, ["-output"]={"",}, ["-inout"]={"",}} |

ex) set_modport example

```
-- some bus
           = interface:new("some_bus")
some_bus
some_bus:set_param("ADDR_WIDTH", 16)
some_bus:set_param("DATA_WIDTH", 32)
some_bus:set_signal("en")
some_bus:set_signal("addr", "ADDR_WIDTH")
some_bus:set_signal("idata", "DATA_WIDTH")
some_bus:set_signal("oe")
some_bus:set_signal("odata", "DATA_WIDTH")
some_bus:set_signal("ext")
some_bus:set_modport("m", {["input"]={"en", "addr", "idata"}, ["output"]={"oe",
"odata"}})
some_bus:set_modport("s", {["output"]={"en", "addr", "idata"}, ["input" ]={"oe",
"odata"}})
```

All below three cases of code are identically same.

case #1) 2 seperated modport script

```
some_bus:set_modport("m", {["input" ]={"en", "addr", "idata"}, ["output"]={"oe",
"odata"}})
some_bus:set_modport("s", {["output"]={"en", "addr", "idata"}, ["input" ]={"oe",
"odata"}})
```

case #2) dual inverted modport script

```
some_bus:set_modport("m/s", {["input"]={"en", "addr", "idata"}, ["output"]={"oe",
"odata"}})
```

case #3) dual inverted modport script and delete 'ext' signal

Verigen user guide **BSD** License.

```
some_bus:set_modport("m/s", {["input"]={"en", "addr", "idata", "ext"},
["output"]={"oe", "odata"}})
some_bus:set_modport("m/s", {["-input"]={"ext"}) -- delete 'm' input and 's'
output as named 'ext'
```

4.2.12 interface:get_modport

| Type | Description | | |
|--------------|--|--|--|
| Prototype | function interface:get_modport(name, modport) | | |
| Return value | table | | |
| Remarks | Return a table of the interface's existing modports. | | |
| name | modport name | | |

ex) add_modport example

```
-- APB bus
bus_apb
            = interface:new("apb")
bus_apb:set_param("ADDR_WIDTH", 16)
bus_apb:set_param("DATA_WIDTH", 32)
bus_apb:set_param("SEL_WIDTH", 2)
bus_apb:set_signal("PADDR", "ADDR_WIDTH")
bus_apb:set_signal("PSEL", "SEL_WIDTH")
bus_apb:set_signal("PENABLE")
bus_apb:set_signal("PWRITE")
bus_apb:set_signal("PWDATA", "DATA_WIDTH")
bus_apb:set_signal("PREADY")
bus_apb:set_signal("PRDATA", "DATA_WIDTH")
bus_apb:set_signal("PSLVERR")
bus_apb:set_modport("s", {["input"]={"PSEL", "PENABLE", "PWRITE"},
["output"]={"PREADY", "PRDATA", "PSLVERR"}})
bus_apb:set_modport("m", {["output"]={"PSEL", "PENABLE", "PWRITE"},
["input" ]={"PREADY", "PRDATA", "PSLVERR"}})
-- List 'input' of modeport 's'
for i, signal_name in ipairs(bus_apb:get_modport("s").input) do
    LOGI("modport 's' input : " .. signal_name)
end
```

4.2.13 interface:set_prefix

| Туре | Description | | |
|--------------|--|--|--|
| Prototype | unction interface:set_prefix(prefix) | | |
| Return value | | | |
| Remarks | Specify prefix string when displaying port of interface. If several identical interfaces are outputting ports in the same module at the same time, '#' characters are included in the prefix, and the number is changed to increase by 1 from 0. If it is a single interface, the character '#' is removed. | | |
| prefix | prefix string | | |

ex) set_prefix example

```
-- interface example
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst:set_modport("s", {["input" ]={"EN", "INST"}})
inst:set_modport("m", {["output"]={"EN", "INST"}})
inst:set_prefix("I#") -- Signals start with I#_*.
      = module:new("top")
m:add_interface(inst, "inst_0", "m")
"inst_1", "m")
m:make_code()
```

[execution result : top_defines.vh]

```
1: 'ifndef __TOP_DEFINES_VH__
 2: 'define __TOP_DEFINES_VH__
 3: \include "testdrive_system.vh"
                                       // default system defines
 5: //----
 6: // interfaces
7: //----
 8: interface i_inst;
9:
      logic
                             EN;
       logic [31:0]
                             INST;
10:
11:
       modport m (
12:
           output EN, INST
13:
       );
14:
      modport s (
           input EN, INST
15:
16:
       );
17: endinterface
19: \endif//__TOP_DEFINES_VH__
```

[execution result : top.sv]

```
1: 'include "top_defines.vh"
 2:
 3: module top (
 4: // inst_0
 5:
      output
                                  IO_EN,
      output [31:0]
 6:
                                  I0_INST,
 7:
      // inst_1
 8:
 9:
       output
                                  I1_EN,
                                  I1_INST
10:
       output [31:0]
11: );
12:
13: // interface : inst_0
14: i_inst
                          inst_0;
15: assign IO_EN
                                  = inst_0.EN;
16: assign IO_INST
                                  = inst_0.INST;
17:
18: // interface : inst_1
19: i_inst
                          inst_1;
20: assign I1_EN
                                  = inst_1.EN;
                                  = inst_1.INST;
21: assign I1_INST
22:
23:
24: endmodule
```

4.2.14 interface:set_bared

| Type | Description | | |
|--------------|---|--|--|
| Prototype | function interface:set_bared(bared) | | |
| Return value | - | | |
| Remarks | The structure of the interface is unpacked and applied. | | |
| bared | Whether the boolean value is bared or not, if not specified, it is set to true. | | |

Used when configuring bared signals.

ex) set_bared example

```
-- interface example
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst:set_modport("s", {["input"]={"EN", "INST"}})
inst:set_modport("m", {["output"]={"EN", "INST"}})
inst:set_bared() -- bared interface setting
```

v1.06

4.2.15 interface:set_top_uppercase

| Туре | Description | | |
|--------------|--|--|--|
| Prototype | function interface:set_top_uppercase(en) | | |
| Return value | - | | |
| Remarks | When outputting the port of the top of the interface, it is forced to be a forced uppercase or lowercase name. | | |
| en | Uppercase or not, true(uppercase), false(lowercase), nil(original) | | |

4.2.16 interface_i:set_port

| Туре | Description | | |
|--------------|---|--|--|
| Prototype | function interface_i:set_port(modport_name) | | |
| Return value | - | | |
| Remarks | Specifies the interface instance added with the module:add_interface function as the port output. | | |
| modport_name | modport name | | |

When a basic interface is added to a module, the port output (input, output, inout) is determined through this function.

ex) interface_i:set_port example

```
-- interface example
         = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst:set_modport("s", {["input" ]={"EN", "INST"}})
inst:set_modport("m", {["output"]={"EN", "INST"}})
                = module:new("top")
top
top:add_interface(inst):set_port("m") -- Set inst interface to top output as
modport 'm'
```

Verigen user guide **BSD** License.

4.2.17 interface_i:set_desc

| Type | Description | | |
|--------------|--|--|--|
| Prototype | function interface_i:set_desc(desc) | | |
| Return value | - | | |
| Remarks | Adds comments to be used as comments for interface instances added with the module:add_interface function. | | |
| desc | additional descriptive string | | |

ex) interface_i:set_desc example

```
-- interface example
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst:set_modport("s", {["input"]={"EN", "INST"}})
inst:set_modport("m", {["output"]={"EN", "INST"}})

top = module:new("top")

i_int = top:add_interface(inst)
i_int:set_port("m") -- Set inst interface to top output as modport 'm'
i_int:set_desc("main instruction") -- comment description
```

4.2.18 interface_i:set_prefix

| Туре | Description | | |
|--------------|---|--|--|
| Prototype | function interface_i:set_prefix(prefix) | | |
| Return value | - | | |
| Remarks | Specifies the prefix of the interface instance added with the module:add_interface function. If not specified, the prefix of the original interface is used. | | |
| prefix | prefix string | | |

ex) interface_i:set_prefix example

```
-- interface example
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst:set_modport("s", {["input" ]={"EN", "INST"}})
inst:set_modport("m", {["output"]={"EN", "INST"}})
             = module:new("top")
top
i_int = top:add_interface(inst)
i_int:set_port("m")
                          -- Set inst interface to top output as modport 'm'
i_int:set_prefix("IF") -- Specify prefix
```

This interface instance is converted to IF_EN, IF_INST and output as port.

Verigen user guide **BSD** License.

4.2.19 interface_i:get_prefix

| Туре | Description | | |
|--------------|---|--|--|
| Prototype | function interface_i:get_prefix() | | |
| Return value | string | | |
| Remarks | Returns the prefix of the interface instance added with the module:add_interface function. If no prefix is specified in the interface instance, the prefix of the original interface is returned. | | |

ex) interface_i:get_prefix example

4.3 module

An object that matches a verilog module declaration. It is created with the module:new function, and the final result source is output through the module:make_code function. At this time, the declaration of sub modules included in the lower level and interfaces used at least once are also made.

The port of the top module is converted into single signals in the form of input/output, not the systemverilog interface syntax, and the internal sub modules are described according to the interface syntax.

The sub module object added with the module:add_module function is used as the module_i interface.

Table 4-4. module object summary

| Member | Туре | Description |
|----------------|----------|---|
| .name | string | module name |
| :new | function | create module |
| :set_inception | function | Specifies the code inception file. |
| :get_inception | function | Return code inception. |
| :set_title | function | Specifies the title of the code inception. |
| :set_author | function | Specifies the author of the code inception. |
| :set_param | function | Specify parameters. |
| :get_param | function | Search parameter. |
| :add_interface | function | Add interface. |
| :add_clock | function | Add clock. |
| :get_interface | function | Search for added interfaces. |
| :get_port | function | Search ports among the added interfaces. |
| :add_module | function | Add sub module. |
| :get_module | function | Search for sub modules. |
| :add_code | function | Add a user code statement. |
| :add_document | function | Add a document. |
| .find | function | Find the module object. |
| .is_valid | function | Check whether the module exists. |
| .apply_code | function | Apply the code file to the module. |
| .code | String | Added code string object from module |

Table 4-5. module_i(sub module) object summary

| Member | Туре | Description |
|------------|----------|---|
| .name | string | Returns the sub module name. |
| :set_param | function | Specifies the value of the parameter. |
| :get_param | function | Returns the value of parameter. |
| :set_port | function | Specifies the value of port. |
| :get_port | function | Returns the value of port. |
| .is_valid | function | Determines whether object is a valid module_i object. |

Verigen user guide BSD License.

69

4.3.1 module:new

| Туре | Description | | |
|----------------|---|--|--|
| Prototype | function module:new(name) | | |
| Return value | module | | |
| Remarks | Create a module. | | |
| name | module name | | |
| ex) Module cre | eation example | | |
| top | = module:new("top") Module creation example | | |

4.3.2 module:make_code

| Туре | Description | | |
|--------------|--|--|--|
| Prototype | function module:make_code() | | |
| Return value | - | | |
| Remarks | Generates a module into a final output file. Here is the creation list: [top_name]_defines.vh (define and interface declarations) [all used module names].sv (result systemverilog source files) [top_name].f (all reference source names) [top_name]_constraint.xdc (constraint declaration) [top_name]_hierarchy.svg (design hierarchy diagram) | | |

4.3.3 module:set_inception

| Туре | Description |
|--------------|---|
| Prototype | function module:set_inception(filename) |
| Return value | - |
| Remarks | Specifies the file in which code inception is described. You can use the meta sentences below for your code inception technique. YEAR: The current year. Ex) 2023 DATE: The current date. Example) May/08/2023 Mon TITME: The current time. Ex) 19:34:21 AUTHOR: Author specified by the module:set_author function. Default: "testdrive profiling master - verigen" TITLE: Title specified with the module:set_title function. Default: "no_title" |
| filename | File name where code inception is described |
| bit_width | The bit width of the signal. If not set, it is regarded as 1. Also, if explicitly set to 0, the corresponding signal is not used. (In addition to constants, parameter values or formulas can be used.) |

This inception text will be placed at the top of each .sv source. You can separately insert sentences such as license by specifying :set_inception, :set_title, :set_author functions for each module separately.

If you call it with module:set_inception, all generated modules will use the code inception of the base module unless otherwise specified.

ex) set_inception example

```
-- code inception setting
module:set_inception("code_inception.txt")
module:set_title("some title")
module:set_author("me")
            = module:new("top")
top
top:make_code()
```

[code_inception.txt]

```
// Copyright (c) 2013 ~ __YEAR__. HyungKi Jeong(clonextop@gmail.com)
// Freely available under the terms of the 3-Clause BSD License
// (https://opensource.org/licenses/BSD-3-Clause)
// Title : __TITLE__
// Rev. : __DATE__ __TIME__ (__AUTHOR__)
```

execution result

[result file: top.sv]

Verigen user guide **BSD** License.

```
// Copyright (c) 2013 ~ 2023. HyungKi Jeong(clonextop@gmail.com)
// Freely available under the terms of the 3-Clause BSD License
// (https://opensource.org/licenses/BSD-3-Clause)
//
// Title : some title
// Rev. : May/09/2023 Tue 14:10:16 (me)
//========
`include "top_defines.vh"
module top ();
endmodule
```

BSD License. 73 v1.06

4.3.4 module:add_document

| Type | Description |
|--------------|---|
| Prototype | function module:add_document(name, filename) |
| Return value | - |
| Remarks | add module's document |
| name | document diplay name |
| filename | document file name if set Excel file with this function, you can use this with "worksheet@filename" ex) "sheet1@a.xlsx" |

This function only affects "Design map". Display it as a hyperlink in "Design map" so that users can click to edit it.

ex) add_document example

```
top = module:new("top") -- Module creation example
top:add_document("Configuration", "configuration@config.xlsx")
```

4.3.5 module:get_inception

| Type | Description |
|--------------|--|
| Prototype | function module:get_inception() |
| Return value | - |
| Remarks | Returns the result of applying all meta sentences to the code inception phrase set with module:set_inception . |

4.3.6 module:set_title

| Туре | Description |
|--------------|---|
| Prototype | function module:set_title(title) |
| Return value | - |
| Remarks | Specifies the title of the code inception. TITLE meta sentences in code inception are converted to the specified title. |
| title | title string |

BSD License. v1.06

4.3.7 module:set_author

| Type | Description |
|--------------|--|
| Prototype | function module:set_author(name) |
| Return value | - |
| Remarks | Specifies the author of the code inception. TheAUTHOR meta-sentence in code inception translates to the specified author. |
| name | author string |

4.3.8 module:set_param

| Туре | Description |
|--------------|--|
| Prototype | function module:set_param(name, value, [is_local]) |
| Return value | - |
| Remarks | Add module parametes. |
| name | parameter name |
| value | parameter default value |
| is_local | If it is true, it is implemented as a localparam, otherwise it is implemented as a port parameter. Defaults to false if omitted. |

ex) module:set_param example

4.3.9 module:get_param

| Туре | Description |
|--------------|--|
| Prototype | function module:get_param(name) |
| Return value | integer or string |
| Remarks | Returns the default values of the module's parameters. |
| name | parameter name |

4.3.10 module:add_interface

| Type | Description |
|--------------|--|
| Prototype | function module:add_interface(i, [name], [modport]) |
| Return value | interface_i |
| Remarks | Adds an interface instance object to the module. |
| i | interface object or interface modeport |
| name | interface instance name If the name is not specified, the interface name is followed. |
| modport | The modport name, if used for internal declarations other than ports. Do not specify this value. And if 'I' is modport, then this 'modport must be nil. |

BSD License. 80 v1.06

ex) module:add_interface example

4.3.11 module:add_clock

| Туре | Description |
|--------------|--------------------------------|
| Prototype | function module:add_clock(clk) |
| Return value | - |
| Remarks | Add a clock to the module. |
| clk | clock object |

4.3.12 module:get_interface

| Type | Description |
|--------------|--|
| Prototype | function module:get_interface(name) |
| Return value | interface_i |
| Remarks | Retrieves and returns the interface instance object added to the module. |
| name | interface instance object name |

4.3.13 module:get_port

| Туре | Description |
|--------------|--|
| Prototype | function module:get_port(name) |
| Return value | interface_i |
| Remarks | Among the interface instance objects added to the module, the object set as the port is searched and returned. |
| name | interface instance object name |

4.3.14 module:add_module

| Туре | Description |
|--------------|--|
| Prototype | function module:add_module(m, [name]) |
| Return value | - |
| Remarks | Add sub module. |
| m | Module source to be a sub module |
| name | Sub module name. If omitted, it is named the same as the original module name. If there are several omitted sub modules with the same name, put a number in the form of "_#" after each name to avoid duplication. |

84 v1.06

4.3.15 module:get_module

| Туре | Description |
|--------------|---------------------------------------|
| Prototype | function module:get_module(name) |
| Return value | module |
| Remarks | Searches for and returns sub modules. |
| name | sub module name |

BSD License. v1.06

4.3.16 module:add_code

| Туре | Description |
|--------------|--|
| Prototype | function module:add_code(s) |
| Return value | - |
| Remarks | Add user code. These codes are included as statements inserted at the end of each module source. It is appended to the module.code(String) object, and can be usefully used with the _V() macro function. The last character of the added code is ';' If it ends with , the enter code is automatically inserted. |
| S | user add code |

BSD License. 86 v1.06

4.3.17 module.find

| Туре | Description |
|--------------|----------------------------|
| Prototype | function module.find(name) |
| Return value | module |
| Remarks | Find the created module. |
| name | module name to find |

4.3.18 module.is_valid

| Type | Description |
|--------------|--|
| Prototype | function module.is_valid(obj) |
| Return value | boolean |
| Remarks | Check that the object is valid module. |
| obj | Module object to check. |

4.3.19 module.apply_code

| Туре | Description |
|--------------|---|
| Prototype | function module.apply_code(filename) |
| Return value | - |
| Remarks | Code is read from the code description file and inserted into each module as code. After starting with ":module name (option)" in the code description file, the code in the module from the next line is inserted when the result of the option is true. Option is a Lua script with a Boolean result indicating whether sub-specified codes are |
| | inserted. This option can be omitted. (default value: true) |
| filename | code description file name |

ex) module.apply_code example (When you want to add code to Core and ALU modules.)

```
module.apply_code("__core.sv")
```

[__core.sv]

```
:Core
assign A = B; // Core's code
                    // Core's code
assign C = D;
:ALU (config.core_size > 4)
assign E = F; // ALU's code
assign G = H; // ALU's code
wire [15:0] CORE_SIZE = $(config.core_size);
```

NOTE: You can execute lua code by writing '\$(*)' or '\${*}' in the middle of verilog code. '\$(*)' is a string or number returned code, and '\${*}' can describe lua code execution without return.

4.3.20 module_i:set_param

| Туре | Description |
|--------------|--|
| Prototype | function module_i:set_param(name, val) |
| Return value | - |
| Remarks | Specifies the parameter value of the sub module. |
| name | parameter name |
| val | parameter setting value |

BSD License. v1.06

4.3.21 module_i:get_param

| Type | Description |
|--------------|---|
| Prototype | function module_i:get_param(name) |
| Return value | integer or string |
| Remarks | Returns the value specified as the parameter of the sub module. |
| name | parameter name |

4.3.22 module_i:set_port

| Type | Description |
|--------------|--|
| Prototype | function module_i:module_i:set_port(name, val) |
| Return value | - |
| Remarks | Specifies the port value of the sub module. |
| name | port name |
| val | port setting value |

BSD License. v1.06

4.3.23 module_i:get_port

| Туре | Description |
|--------------|---|
| Prototype | function module_i:get_port(name) |
| Return value | interger or string |
| Remarks | Returns the port value of the sub module. |
| name | port name |

4.3.24 module_i.is_valid

| Type | Description |
|--------------|--|
| Prototype | function module_i.is_valid(obj) |
| Return value | boolean |
| Remarks | Returns whether object is a valid module_i(sub module) object. |
| obj | module_i object |

5. Appendix

5.1 Appendix : test_definition.lua

```
-- clock definition
clk
        = {}
           = clock:new("CLK", "main clock") -- for core
clk.MCLK
clk.MCLK:set_speed(1000)
clk.PCLK
            = clock:new("PCLK", "APB clock")
clk.PCLK:set_speed(100)
clk.PCLK:set_reset("PRESETn", "low")
clk.BCLK
           = clock:new("ICLK", "interconnection clock")
clk.BCLK:set_speed(1500)
            = clock:new("ACLK", "AXI clock")
clk.ACLK
clk.ACLK:set_speed(1000)
-- bus interface
       = {}
bus
-- APB bus
bus.apb
            = interface:new("apb")
bus.apb:set_clock(clk.PCLK)
bus.apb:set_param("ADDR_WIDTH", 16)
bus.apb:set_param("DATA_WIDTH", 32)
bus.apb:set_param("SEL_WIDTH", 2)
bus.apb:set_signal("PADDR", "ADDR_WIDTH")
bus.apb:set_signal("PSEL", "SEL_WIDTH")
bus.apb:set_signal("PENABLE")
bus.apb:set_signal("PWRITE")
bus.apb:set_signal("PWDATA", "DATA_WIDTH")
bus.apb:set_signal("PREADY")
bus.apb:set_signal("PRDATA", "DATA_WIDTH")
bus.apb:set_signal("PSLVERR")
bus.apb:set_modport("s", {["input" ]={"PSEL", "PENABLE", "PWRITE", "PADDR",
"PWDATA"}, ["output"]={"PREADY", "PRDATA", "PSLVERR"}})
bus.apb:set_modport("m", {["output"]={"PSEL", "PENABLE", "PWRITE", "PADDR",
"PWDATA"}, ["input" ]={"PREADY", "PRDATA", "PSLVERR"}})
bus.apb:set_prefix("S#")
-- AXI3 master bus
bus.maxi3 = interface:new("maxi3")
bus.maxi3:set_clock(clk.ACLK)
bus.maxi3:set_param("DATA_WIDTH", 128)
```

```
bus.maxi3:set_param("ADDR_WIDTH", 32)
bus.maxi3:set_param("ID_WIDTH", 4)
-- write address
bus.maxi3:set_signal("AWVALID")
bus.maxi3:set_signal("AWREADY")
bus.maxi3:set_signal("AWADDR", "ADDR_WIDTH")
bus.maxi3:set_signal("AWSIZE", 3)
bus.maxi3:set_signal("AWBURST", 2)
bus.maxi3:set_signal("AWCACHE", 4)
bus.maxi3:set_signal("AWPROT", 3)
bus.maxi3:set_signal("AWID", "ID_WIDTH")
bus.maxi3:set_signal("AWLEN", 4)
bus.maxi3:set_signal("AWLOCK", 2)
-- write data
bus.maxi3:set_signal("WVALID")
bus.maxi3:set_signal("WREADY")
bus.maxi3:set_signal("WLAST")
bus.maxi3:set_signal("WDATA", "DATA_WIDTH")
bus.maxi3:set_signal("WSTRB", "DATA_WIDTH/8")
bus.maxi3:set_signal("WID", "ID_WIDTH")
-- write response
bus.maxi3:set_signal("BVALID")
bus.maxi3:set_signal("BREADY")
bus.maxi3:set_signal("BRESP", 2)
bus.maxi3:set_signal("BID", "ID_WIDTH")
-- read address
bus.maxi3:set_signal("ARVALID")
bus.maxi3:set_signal("ARREADY")
bus.maxi3:set_signal("ARADDR", "ADDR_WIDTH")
bus.maxi3:set_signal("ARSIZE", 3)
bus.maxi3:set_signal("ARBURST"
bus.maxi3:set_signal("ARCACHE", 4)
bus.maxi3:set_signal("ARPROT",
                                 3)
bus.maxi3:set_signal("ARID", "ID_WIDTH")
bus.maxi3:set_signal("ARLEN", 4)
bus.maxi3:set_signal("ARLOCK", 2)
-- read data
bus.maxi3:set_signal("RVALID")
bus.maxi3:set_signal("RREADY")
bus.maxi3:set_signal("RLAST")
bus.maxi3:set_signal("RDATA", "DATA_WIDTH")
bus.maxi3:set_signal("RRESP", 2)
bus.maxi3:set_signal("RID", "ID_WIDTH")
bus.maxi3:set_modport("s", {
    ["input"]={
             "AWVALID", "AWADDR", "AWSIZE", "AWBURST", "AWCACHE", "AWPROT", "AWID",
"AWLEN", "AWLOCK"
             "WVALID", "WLAST", "WDATA", "WSTRB", "WID",
             "BREADY",
             "ARVALID", "ARADDR", "ARSIZE", "ARBURST", "ARCACHE", "ARPROT", "ARID",
"ARLEN", "ARLOCK",
             "RREADY", "RLAST"
    ["output"]={
             "AWREADY", "WREADY", "BVALID", "BRESP", "BID", "ARREADY", "RVALID",
"RDATA", "RRESP", "RID"
```

```
})
bus.maxi3:set_modport("m", {
    ["output"]={
             "AWVALID", "AWADDR", "AWSIZE", "AWBURST", "AWCACHE", "AWPROT", "AWID",
"AWLEN", "AWLOCK",
             "WVALID", "WLAST", "WDATA", "WSTRB", "WID",
             "BREADY",
             "ARVALID", "ARADDR", "ARSIZE", "ARBURST", "ARCACHE", "ARPROT", "ARID",
"ARLEN", "ARLOCK",
             "RREADY", "RLAST"
    ["input"]={
             "AWREADY", "WREADY", "BVALID", "BRESP", "BID", "ARREADY", "RVALID",
"RDATA", "RRESP", "RID"
             }
})
bus.maxi3:set_prefix("M#")
-- AXI4 master bus
bus.maxi4 = bus.maxi3:new("maxi4")
bus.maxi4:set_signal("AWLOCK")
                                           -- modified 2bit to 1bit
bus.maxi4:set_signal("ARLOCK")
                                           -- modified 2bit to 1bit
bus.maxi4:set_signal("AWLEN", 8)
                                           -- modified 4bit to 8bit
bus.maxi4:set_signal("ARLEN", 8)
                                           -- modified 4bit to 8bit
bus.maxi4:set_signal("AWQOS", 4)
                                           -- new on AXI4
bus.maxi4:set_signal("AWREGION", 4)
                                           -- new on AXI4
bus.maxi4:set_signal("ARQOS", 4)
                                           -- new on AXI4
bus.maxi4:set_signal("ARREGION", 4)
                                           -- new on AXI4
bus.maxi4:add_modport("s", {
    ["output"]={"ARQOS", "ARREGION"},
    ["input"]={"AWQOS", "AWREGION"}
})
bus.maxi4:add_modport("m", {
    ["input" ]={"ARQOS", "ARREGION"},
["output"]={"AWQOS", "AWREGION"}
})
bus.maxi4:set_prefix("M#")
-- core interface
core_i = {}
core_i.inst
                 = interface:new("inst")
core_i.inst:set_signal("EN")
core_i.inst:set_signal("INST",
core_i.inst:set_signal("READY")
core_i.inst:set_modport("m", {
    ["output"]={"EN", "INST"},
    ["input"] ={"READY"}
core_i.inst:set_modport("s", {
    ["input"]={"EN", "INST"},
    ["output"] ={"READY"}
```

5. Appendix

```
})
core_i.inst:set_clock(clk.MCLK)

-- configuration
-- config = {}
config core_size = 4
```