
17 Gridworks' system

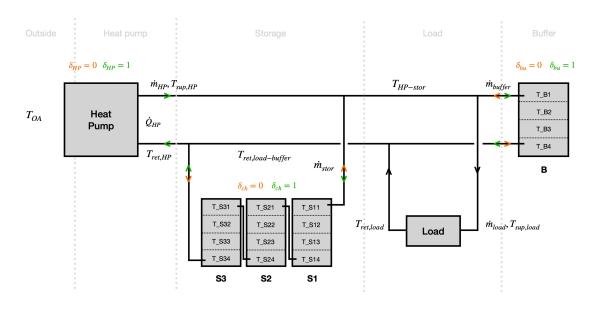

17.1 Variables

Horizon: $t = 0, 1, \dots, N$

Time step: $\Delta t_s = 300 [s], \Delta t_m = 5 [min], \Delta t_h = 1/12 [h]$

State variables [K]: x = (x(0), ..., x(N))

 $x(t) = (x_0(t), ..., x_{15}(t)) = (T_{B1}(t), ..., T_{B4}(t), T_{S11}(t), T_{S12}(t), ..., T_{S34}(t))$

Input variables: u = (u(0), ..., u(N-1))

 $u(t) = (u_0(t), \dots, u_5(t)) = (T_{sup,HP}(t), \dot{m}_{stor}(t), \delta_{ch}(t), \delta_{bu}(t), \delta_{HP}(t), \delta_{R}(t))$

 $T_{sup,HP}$ in [K], m_{stor} in [kg/s]

 $\delta_{ch} = 1$ if charging the storage tanks, 0 otherwise

 $\delta_{bu} = 1$ if charging the buffer tank, 0 otherwise

 $\delta_{HP} = 1$ if the heat pump is on, 0 otherwise

 $\delta_R = 1$ if using the resistive heating, 0 otherwise

(108)

17.2 Parameters

For t = 0, ..., N - 1, define $p(t) = (c_{el}(t), Q_{load}(t), T_{OA}(t), \dot{Q}_{HP,max}(t), COP1(t))$.

Electricity prices [\$/Wh]: $c_{el}(t)$

Required load [Wh]: $Q_{load}(t)$

Outside air temperature [K]: $T_{OA}(t)$ (109)

 \Rightarrow Maximum heat delivered [W]: $\dot{Q}_{HP,max}(t)$

 $\Rightarrow 1/\text{COP term [-]}:$ COP1(t)

17.3 Objective

$$\min_{x,u} \sum_{t=0}^{N-1} c_{el}(t) \cdot (\dot{W}_{HP}(t) + \dot{W}_{R}(t)) \cdot \Delta t_{h}$$
 (110)

$$\dot{W}_{HP}(t) = \dot{Q}_{HP}(t) \cdot \frac{1}{COP}(t)
= \dot{m}_{HP} \cdot c_p \cdot (T_{sup,HP}(t) - T_{ret,HP}(t)) \cdot \delta_{HP} \cdot \frac{1}{COP}(t)$$
(111)

$$\dot{W}_R(t) = \dot{Q}_{R,tot} \cdot \delta_R(t)$$

17.4 Constraints

Bounds

$$T_{sup,HP} \in [T_{sup,HP,min}, T_{sup,HP,max}]$$

$$\dot{m}_{stor} \in [0, \dot{m}_{stor,max}]$$

$$\delta_{ch}, \delta_{bu}, \delta_{HP}, \delta_{R} \in \{0, 1\}$$

$$T_{Bj}, T_{Sij} \in [T_{w,min}, T_{w,max}]$$

$$(112)$$

Heat pump operation

$$\dot{Q}_{HP} \in [\dot{Q}_{HP,min} \cdot \delta_{HP}(t), \dot{Q}_{HP,max}(t)] \tag{113}$$

Load supply temperature

The water going to the load must be hot enough.

$$T_{sup,load} \ge T_{sup,load,min}$$
 (114)

Mass flow rates

$$\dot{m}_{load} = \frac{\dot{Q}_{load}(t)}{c_p \cdot \Delta T_{load}} = \frac{Q_{load}(t)}{\Delta t_h \cdot c_p \cdot \Delta T_{load}}$$
(115)

$$\dot{m}_{buffer} = \left[\dot{m}_{HP} \cdot \delta_{HP} - \dot{m}_{stor} \cdot (2\delta_{ch} - 1) - \dot{m}_{load}\right] \cdot \frac{1}{2\delta_{bu} - 1}$$
(116)

$$\dot{m}_{buffer} \ge 0 \tag{117}$$

Operation constraints

The storage can only be charging if the heat pump is on.

$$\delta_{ch} \le \delta_{HP} \tag{118}$$

System dynamics

The system dynamics are further detailed in the next two sections, which address the buffer and storage tanks separately.

$$x(0) = x_{initial}$$

$$x(t+1) = f(x(t), u(t), p(t))$$
(119)

17.5 Buffer tank

For every water layer j = 1, ..., 4 in the buffer tank: (change in energy stored in layer j) = (rate of energy transfer in) - (rate of energy transfer out)

$$m_{j} \cdot c_{p} \cdot \frac{dT_{Bj}}{dt} = \dot{Q}_{in,j} - \dot{Q}_{out,j}$$

$$\rho Az \cdot c_{p} \cdot \frac{T_{Bj}(t+1) - T_{Bj}(t)}{\Delta t_{s}} \approx \dot{Q}_{in,j} - \dot{Q}_{out,j}$$
(120)

Re-arranging for $T_{B_j}(t+1)$ we get:

$$\Rightarrow T_{Bj}(t+1) = T_{Bj}(t) + \frac{\Delta t_s}{\rho Az \cdot c_p} \cdot (\dot{Q}_{in,j} - \dot{Q}_{out,j})$$
(121)

$$\Rightarrow \begin{cases} T_{B1}(t+1) = T_{B1}(t) + \frac{\Delta t_s}{\rho A z \cdot c_p} \cdot (\dot{Q}_{conv,1} - \dot{Q}_{losses,1} + \dot{Q}_{Top,B}) \\ T_{B2}(t+1) = T_{B2}(t) + \frac{\Delta t_s}{\rho A z \cdot c_p} \cdot (\dot{Q}_{conv,2} - \dot{Q}_{losses,2}) \\ T_{B3}(t+1) = T_{B3}(t) + \frac{\Delta t_s}{\rho A z \cdot c_p} \cdot (\dot{Q}_{conv,3} - \dot{Q}_{losses,3}) \\ T_{B4}(t+1) = T_{B4}(t) + \frac{\Delta t_s}{\rho A z \cdot c_p} \cdot (\dot{Q}_{conv,4} - \dot{Q}_{losses,4} + \dot{Q}_{Bottom,B}) \end{cases}$$
(122)

17.5.1 Heat and mass transfer between layers $\dot{Q}_{conv,j}$

Layer j exchanges heat with the layer above it (j-1) and below it (j+1). The heat exchange is due to both natural convection and water flowing through the layers at mass flow rate \dot{m}_{buffer} .

$$\dot{Q}_{conv,1} = (1 - \delta_{bu}) \cdot (\dot{m}_{buffer} \cdot c_p \cdot (T_{B2} - T_{B1})) + \delta_{bu} \cdot 0
\dot{Q}_{conv,2} = (1 - \delta_{bu}) \cdot (\dot{m}_{buffer} \cdot c_p \cdot (T_{B3} - T_{B2})) + \delta_{bu} \cdot (\dot{m}_{buffer} \cdot c_p \cdot (T_{B1} - T_{B2}))
\dot{Q}_{conv,3} = (1 - \delta_{bu}) \cdot (\dot{m}_{buffer} \cdot c_p \cdot (T_{B4} - T_{B3})) + \delta_{bu} \cdot (\dot{m}_{buffer} \cdot c_p \cdot (T_{B2} - T_{B3}))
\dot{Q}_{conv,4} = (1 - \delta_{bu}) \cdot 0 + \delta_{bu} \cdot (\dot{m}_{buffer} \cdot c_p \cdot (T_{B3} - T_{B4}))$$
(123)

Also need to add free convection.

17.5.2 Water entering at top of buffer $\dot{Q}_{Top,B}$

 $\delta_{bu} = 1$ when buffer is being charged (water entering top \Rightarrow heat transfer to top). $\delta_{bu} = 0$ when buffer is being discharged (water exiting top \Rightarrow no heat transfer to top).

$$\dot{Q}_{Top,B} = \delta_{bu} \cdot \dot{m}_{buffer} \cdot c_p \cdot (T_{HP-stor} - T_{B1}) \tag{124}$$

17.5.3 Water entering at bottom of buffer $\dot{Q}_{Bottom,B}$

 $\delta_{bu} = 1$ when buffer is being charged (water exiting bottom \Rightarrow no heat transfer to bottom). $\delta_{bu} = 0$ when buffer is being discharged (water entering bottom \Rightarrow heat transfer to bottom).

$$\dot{Q}_{Bottom,B} = (1 - \delta_{bu}) \cdot \dot{m}_{buffer} \cdot c_p \cdot (T_{ret,load} - T_{B4})$$
(125)

17.5.4 Losses $Q_{losses,j}$

$$\dot{Q}_{losses} = 0 \text{ for now}$$
 (126)

17.6 Storage tanks

For every water layer j = 1, ..., 4 in every storage tank i = 1, ..., 3: (change in energy stored in layer ij) = (rate of energy transfer in) - (rate of energy transfer out)

$$m_{ij} \cdot c_p \cdot \frac{dT_{Sij}}{dt} = \dot{Q}_{in,ij} - \dot{Q}_{out,ij}$$

$$\rho Az \cdot c_p \cdot \frac{T_{Sij}(t+1) - T_{Sij}(t)}{\Delta t_s} \approx \dot{Q}_{in,ij} - \dot{Q}_{out,ij}$$
(127)

Re-arranging for $T_{Sij}(t+1)$ we get:

$$\Rightarrow T_{Sij}(t+1) = T_{Sij}(t) + \frac{\Delta t_s}{\rho Az \cdot c_p} \cdot (\dot{Q}_{in,ij} - \dot{Q}_{out,ij})$$
(128)

$$\Rightarrow \begin{cases} T_{Si1}(t+1) = T_{Si1}(t) + \frac{\Delta t_s}{\rho Az \cdot c_p} \cdot (\dot{Q}_R + \dot{Q}_{conv,i1} - \dot{Q}_{losses,i1} + \dot{Q}_{Top,Si}) \\ T_{Bi2}(t+1) = T_{Si2}(t) + \frac{\Delta t_s}{\rho Az \cdot c_p} \cdot (\dot{Q}_R + \dot{Q}_{conv,i2} - \dot{Q}_{losses,i2}) \\ T_{Si3}(t+1) = T_{Si3}(t) + \frac{\Delta t_s}{\rho Az \cdot c_p} \cdot (\dot{Q}_R + \dot{Q}_{conv,i3} - \dot{Q}_{losses,i3}) \\ T_{Si4}(t+1) = T_{Si4}(t) + \frac{\Delta t_s}{\rho Az \cdot c_p} \cdot (\dot{Q}_R + \dot{Q}_{conv,i4} - \dot{Q}_{losses,i4} + \dot{Q}_{Bottom,Si}) \end{cases}$$

$$(129)$$

17.6.1 Heat and mass transfer between layers $\dot{Q}_{conv,ij}$

$$\dot{Q}_{conv,i1} = (1 - \delta_{ch}) \cdot (\dot{m}_{stor} \cdot c_p \cdot (T_{Si2} - T_{Si1})) + \delta_{ch} \cdot 0
\dot{Q}_{conv,i2} = (1 - \delta_{ch}) \cdot (\dot{m}_{stor} \cdot c_p \cdot (T_{Si3} - T_{Si2})) + \delta_{ch} \cdot (\dot{m}_{stor} \cdot c_p \cdot (T_{Si1} - T_{Si2}))
\dot{Q}_{conv,i3} = (1 - \delta_{ch}) \cdot (\dot{m}_{stor} \cdot c_p \cdot (T_{Si4} - T_{Si3})) + \delta_{ch} \cdot (\dot{m}_{stor} \cdot c_p \cdot (T_{Si2} - T_{Si3}))
\dot{Q}_{conv,i4} = (1 - \delta_{ch}) \cdot 0 + \delta_{ch} \cdot (\dot{m}_{stor} \cdot c_p \cdot (T_{Si3} - T_{Si4}))$$
(130)

Also need to add free convection.

17.6.2 Water entering top of storage tank i $\dot{Q}_{Top,Si}$

 $\delta_{ch} = 1$ when storage is being charged (water entering at top \Rightarrow heat transfer to top). $\delta_{ch} = 0$ when storage is being discharged (water exiting at top \Rightarrow no heat transfer to top).

$$\dot{Q}_{Top,S1} = \delta_{ch} \cdot \dot{m}_{stor} \cdot c_p \cdot (T_{sup,HP} - T_{S11})
\dot{Q}_{Top,S2} = \delta_{ch} \cdot \dot{m}_{stor} \cdot c_p \cdot (T_{S14} - T_{S21})
\dot{Q}_{Top,S3} = \delta_{ch} \cdot \dot{m}_{stor} \cdot c_p \cdot (T_{S24} - T_{S31})$$
(131)

17.6.3 Water entering bottom of storage tank i $\dot{Q}_{Bottom,Si}$

 $\delta_{ch} = 1$ when storage is being charged (water exiting at bottom \Rightarrow no heat transfer to bottom). $\delta_{ch} = 0$ when storage is being discharged (water entering at bottom \Rightarrow heat transfer to bottom).

$$\dot{Q}_{Bottom,S1} = (1 - \delta_{ch}) \cdot \dot{m}_{stor} \cdot c_p \cdot (T_{S21} - T_{S14})
\dot{Q}_{Bottom,S2} = (1 - \delta_{ch}) \cdot \dot{m}_{stor} \cdot c_p \cdot (T_{S31} - T_{S24})
\dot{Q}_{Bottom,S3} = (1 - \delta_{ch}) \cdot \dot{m}_{stor} \cdot c_p \cdot (T_{ret,load-buffer} - T_{S34})$$
(132)

17.6.4 Electrical resistors \dot{Q}_R

$$\dot{Q}_R = \delta_R \cdot \dot{Q}_{res} \tag{133}$$

17.6.5 Losses $\dot{Q}_{losses,ij}$

$$\dot{Q}_{losses} = 0 \text{ for now} \tag{134}$$

17.7 Water in the circuit

17.7.1 Temperatures entering and exiting the load

Entering the load: mix of water from HP (if on), storage (if discharging) and buffer (is discharging).

$$T_{sup,load} = \frac{\dot{m}_{HP} \cdot T_{sup,HP} \cdot \delta_{HP} + \dot{m}_{stor} \cdot T_{S11} \cdot (1 - \delta_{ch}) + \dot{m}_{buffer} \cdot T_{B1} \cdot (1 - \delta_{bu})}{\dot{m}_{HP} \cdot \delta_{HP} + \dot{m}_{stor} \cdot (1 - \delta_{ch}) + \dot{m}_{buffer} \cdot (1 - \delta_{bu})}$$
(135)

Exiting the load: assumed constant change of temperature across the load ΔT_{load} .

$$T_{ret,load} = T_{sup,load} - \Delta T_{load} \tag{136}$$

17.7.2 Temperatures entering and exiting the heat pump

Leaving the HP: one of the input variables

$$T_{sup,HP}$$
 (137)

Returning to the HP: mix water returning from load, storage (if charging), buffer (if charging).

$$T_{ret,HP} = \frac{\dot{m}_{load} \cdot T_{ret,load} + \dot{m}_{stor} \cdot T_{S34} \cdot \delta_{ch} + \dot{m}_{buffer} \cdot T_{B4} \cdot \delta_{bu}}{\dot{m}_{load} + \dot{m}_{stor} \cdot \delta_{ch} + \dot{m}_{buffer} \cdot \delta_{bu}}$$
(138)

17.7.3 Intermediate temperatures

Mixing water from HP (if on) and storage (if discharging)

$$T_{HP-stor} = \frac{\dot{m}_{HP} \cdot T_{sup,HP} \cdot \delta_{HP} + \dot{m}_{stor} \cdot T_{S11} \cdot (1 - \delta_{ch})}{\dot{m}_{HP} \cdot \delta_{HP} + \dot{m}_{stor} \cdot (1 - \delta_{ch})}$$
(139)

Mixing return from the load and buffer (if charging)

$$T_{ret,load-buffer} = \frac{\dot{m}_{load} \cdot T_{ret,load} + \dot{m}_{buffer} \cdot T_{B4} \cdot \delta_{bu}}{\dot{m}_{load} + \dot{m}_{buffer} \cdot \delta_{bu}}$$
(140)