


## RP2350 Stamp XL 34 Pin Laptop Keyboard Controller


This document will describe how to make a USB controller for a laptop keyboard with up to 34 FPC pins using the [RP2350 Stamp XL from Solder Party](#) shown below.




The Stamp XL uses a Raspberry Pi 2350B controller chip with 48 GPIO's, compared with the 26 GPIO's available on a Raspberry Pi Pico. I designed the circuit board shown below to connect the RP2350 Stamp XL with an FPC adapter board and USB breakout board. The surface mount soldering has already been done, leaving you to solder the thru-hole pads with header pins or wires. All associated files are at my [GitHub repository](#).

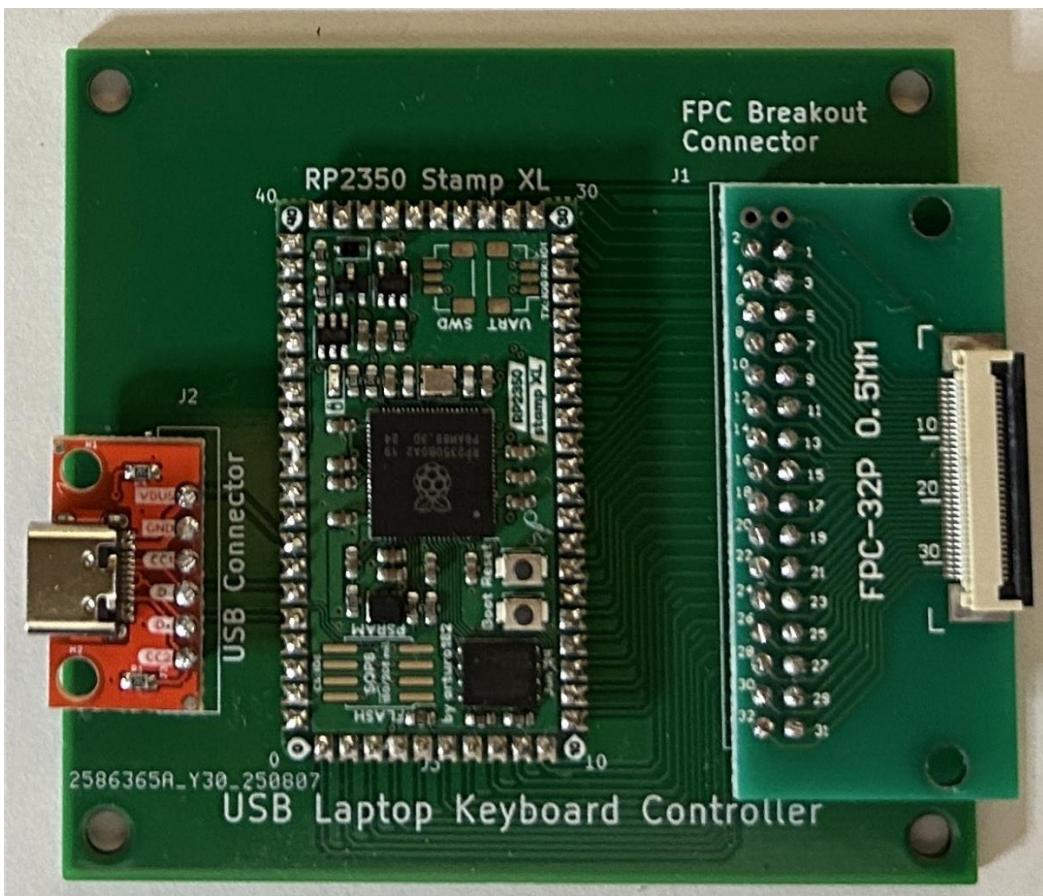

The carrier board is designed in KiCad (instead of Eagle) and measures 2.82 x 2.68 inches (71.7 x 68.0mm). The KiCad board file “2350B\_Keybd\_Cntrl.kicad\_pcb” can be sent to fab houses like [OSHPark.com](https://oshpark.com) (\$38/3 boards) and [Eurocircuits.com](https://eurocircuits.com) (€47/1 board). The zipped Gerber file “2350B\_Keybd\_Cntrl.zip” can be sent to fab houses like [JLCPCB.com](https://jlcpcb.com). With slow economy shipping to the US, the cost is \$10 for 10 boards. The above files are available for download from my [repo](#). The 3 components that attach to my carrier board are shown below prior to soldering.

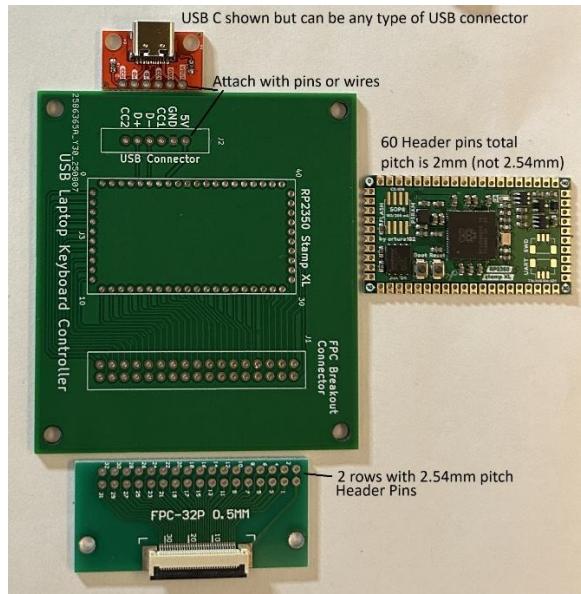

The FPC breakout boards are very common and can be found at [Amazon](https://www.amazon.com), [EBay](https://www.ebay.com), and [AliExpress](https://www.aliexpress.com) among other sellers. Pick the FPC breakout board pitch and pin count that matches your keyboard FPC cable. These boards will have 2 rows of 2.54 mm pitch thru-hole pads. The 32 pin FPC breakout board shown above was needed for a Lenovo E550 keyboard. It's a little different than most breakout boards and has 2 extra pads that are tied together and go to the mounting tab of the FPC connector as a ground/shield. I did not install pins in these two locations because they're not needed and would tie two GPIO pins together. The E550 FPC cable had locking notches that had to be trimmed off with scissors in order to use the FPC adapter board. Avoid the boards that come with the header pins already soldered because this limits how they can be mounted. The typical breakout board uses FPC connectors with bottom contacts. Determine if your FPC cable will end up with its contacts facing up or down when routed to the carrier board. It's common for the FPC cable to be flipped back 180 degrees when the FPC connector is underneath the keyboard. The pictures below show when to solder the FPC breakout board facing up or facing down so it can handle bottom contacts or top contacts on the cable. The left picture shows the cable will be flipped over so the carrier board ends up mounted underneath the keyboard. The right picture shows the FPC cable is not flipped and the carrier board will be mounted under the palm rest.

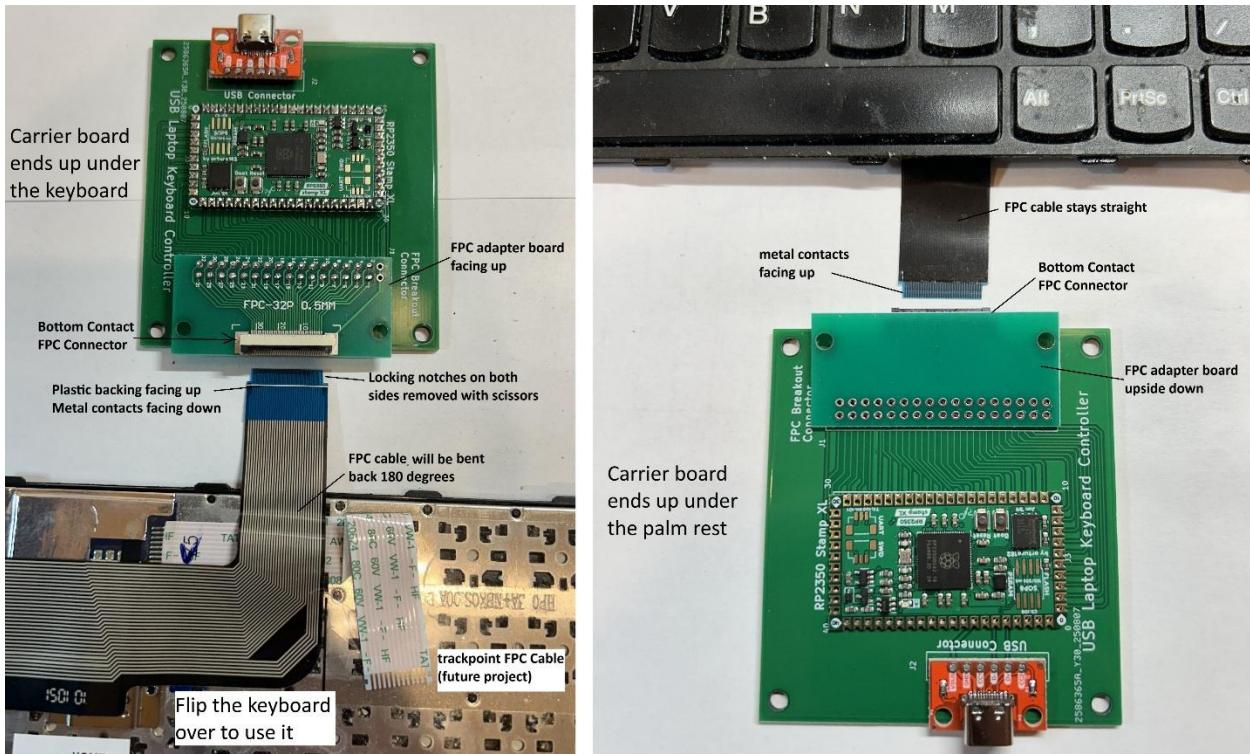


The Type C USB connector board from [Amazon](#), [Sparkfun](#), and [AliExpress](#) can be installed directly on the carrier board with 6 header pins or with 4 wires that allow the USB connector to be at the back or side of your keyboard enclosure. Only 4 wires (VBUS, GND, D+, D-) are needed because CC1 and CC2 are connected to 5.1K resistors on the USB board and are not used by the Stamp XL. You can wire to a USB [Type A](#), [Mini-B](#), or [microB](#) breakout connector if you don't want to use USB C.

Solder Party designed the [RP2350 Stamp XL](#) with the Raspberry Pi 2350B chip which has 48 GPIO's. I could have designed the carrier board for a very large FPC pin count but I seldom see more than 34 pins on an FPC keyboard cable. I wanted to keep the carrier board size as small as possible to keep the cost down.

I'm new to KiCad and couldn't figure out how to make pads with plated holes that are large enough to allow the RP2350 Stamp XL to be soldered directly to the board so you'll have to use header pins.

**Very Important Note:** Solder Party designed the Stamp XL with [2 mm pitch header pins](#) (not the standard 2.54 mm pitch). Be sure to buy the correct pitch pins.

This is how I routed the signals in KiCad. GPIO's 0 thru 33 are connected to the 2 rows of pads for the FPC breakout board. If your FPC connector has less than 34 pins, solder it any way you want. The software will figure out which GPIO signals are connected to key switches and which are no connects. Unlike my Teensy decoder code, this code only deals with GPIO numbers, never pin numbers. This eliminates the problem of defining which end of the connector is pin 1.

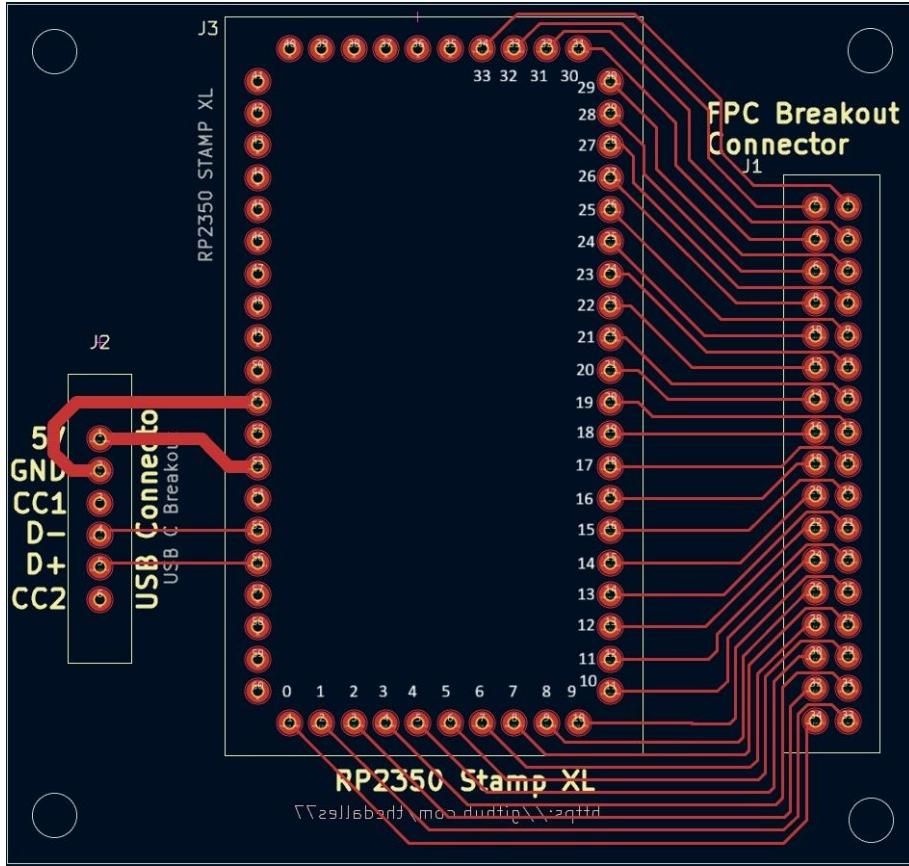

I've chosen to use Circuit Python instead of Arduino to program the Stamp XL board. A good starting point for learning how to write Python code is at [circuitpython.org](https://circuitpython.org). Select the "Get Started" box. The following is a synopsis of the steps that they provide.

To enter into loader mode, hold the boot push button down while plugging in the USB cable. A new folder will show as a USB drive, named RP2350.

If things are acting weird or you want to start with a clean slate, copy the `flash_nuke.uf2` file (downloaded [here](#)) over to the USB drive folder. The drive will blink out and then return all clean. I did this because the Stamp XL arrived with an old version of Python installed.

Python - Start with the [circuitpython.org/downloads](https://circuitpython.org/downloads) page, then select the Stamp XL. Download and copy the latest Adafruit Circuit Python uf2 over to the drive folder. The drive will blink out

and return as CIRCUITPY with an empty lib folder. The code.py file is a one-line "Hello world" program. You will be replacing this file later.

Keyboard library – Go to [circuitpython.org/libraries](https://circuitpython.org/libraries) and download/unzip the library bundle that matches the version of Python you are using (I used CircuitPython 10). The bundle includes lots of libraries but you only need to copy the Adafruit\_HID folder into the lib folder on the CIRCUITPY drive.

As you write and debug your Python code, you will need an editor. I prefer Thonny and it can be downloaded at [thonny.org/](https://thonny.org/).

Download my [Matrix Decoder RP2350B.py](#) code. In Thonny, select File, Open, This Computer and navigate to the Matrix Decoder code you downloaded. This will bring it up in the editor and you can read thru the comments to get an idea of how it works. In Thonny, select the "Stop" icon to halt the "Hello World" program. Next select File, Save As, CircuitPython Device.

Overwrite the "Hello World" code.py file with your Thonny code (renamed to code.py). With the keyboard not connected, hit the "Stop" icon and then "Run" icon to see if any numbers are sent over USB and displayed in the Thonny console window. If they are, you have a solder short that must be fixed. Disconnect the USB cable each time you need to power down and debug problems. When ready, re-attach the USB cable to power back up. The code will start running as soon as power is applied but it's best to hit the "Stop" icon and then the "Run" icon so you can watch the Thonny console window. Once your shorts are cleared, you can prove the program will send numbers by shorting two GPIO's together with a wire. Now that the program and board are ready, disconnect the USB cable and hook up the keyboard FPC cable, then connect the USB cable. When you hit the "Stop" icon and then the "Run" icon, if the program sends two numbers before any keys are pressed, these are probably grounds or LEDs in the keyboard that must be skipped by removing them from the I\_O array starting on line 33 in the code. Once you have no numbers reported when you hit "Run", you're ready to make a key matrix.

Bring up another editor like Notepad++ and load the blank [keyboard\\_pin\\_list](#) text file that has all the possible keyboard keys. Place the cursor to the far right of the first key in the list. This is where the Python program will send the GPIO numbers when you push a key. After each key press and release, the program will send a down arrow to position the cursor for the next key. Once you have GPIO numbers for all keys, you can use the manual procedure described in step 12 of this Instructable to determine the row and column GPIO's. Next you will build a matrix table, as described in step 13 with the key names at the row/column intersection. The translation described in step 14 is not needed since FPC pin numbers are not used, only GPIO numbers.

The Lenovo E550 key list is Appendix A at the bottom of this document. It was created using the Matrix\_Decoder\_RP2350B.py routine. As described in Step 12 of the [Instructable](#), look at the modifier keys to find many of the column GPIO's. The control keys show 2 and 8 are columns. The Shift keys show 0 and 2 are columns (we already knew 2). Alts show 1 and 11 are columns and GUI uses 0 which we already knew is a column. Lenovo keyboards typically give the Fn key its own two signals so 28 and 29 will be treated separately. So far, the columns we know are 0, 1, 2, 8, 11. We know from the modifier keys that 17, 3, 18, and 19 are rows so scan down the list and find when these are used and if they reveal a new column. 18 is used with 5 for the Calc key so 5 is a column. Next start with "A", looking for numbers not yet known to be rows or columns. "A" uses 6 and 4 so look at other keys that use either 6 or 4. "Z" uses 6 and 2 but we already knew 2 is a column so 6 must be a row. Going back to "A", if 6 is a row, 4 is a column. Now the known columns are 0, 1, 2, 4, 5, 8, 11. Typically there are 8 columns so there's 1 more to find. Going down the list, "E" uses 10 and 7 but "C" tells us that 10 is a row so 7 must be the last column. To confirm all columns are identified, I put all the keys into a matrix. I picked 29 as a column for Fn but 28 would also have worked. The Lenovo E550 Key matrix is given below.

GPIO	0	1	2	4	5	7	8	11	29
3	LSHIFT		RSHIFT						
6	TAB		Z	A	1	Q	GRAVE	ESC	
9	Y	N	M	J	7	U	6	H	
10	F3		C	D	3	E	F2	F4	
12	CAPS		X	S	2	W	F1		
13	T	B	V	F	4	R	5	G	
14	F7		PERIOD	L	9	O	F8		
15	LBRC	SLASH		SCOLON	0	P	MINUS	QUOTE	
16	RBRC		COMMA	K	8	I	EQUAL	F6	
17			RCTRL				LCTRL		
18		RALT			CALC			LALT	
19	LGUI	RIGHT			F12		WWW		
20		LEFT	KPDOT		END		APP	UP	
21		DOWN			F11		HOME		
22	BKSPC	SPACE	ENTER	BSLASH	F10		F9	F5	
23		PGDOWN	PGUP	PSCREEN	INS		DELETE		
24									
25									
26									
27									
28									FN
30	KP/	KP+	KP9	KP7	KP8	KP*	KP-	NUMLK	
31	KP5	KP0	KP_ENT	KP2	KP3	KP6	KP1	KP4	

To turn the matrix table into a USB keyboard routine, I used KMK (instead of Arduino). It's open-source firmware normally used for mechanical keyboards but it also works for laptop keyboards (once you have the matrix). KMK uses CircuitPython which is why I also wrote the matrix decoder code in CircuitPython. All of the hard work of scanning key switches and communicating over USB is embedded in KMK. All you need to do is edit my KMK example keyboard code with your key matrix information. Getting started with KMK is described at their KMK [GitHub repo](#) which I will detail below.

For step 1, you already have CircuitPython installed.

For step 2, click on “get an up-to-date copy of KMK”.

For step 3, unzip the kmk\_firmware-main folder. It has many folders and files. Copy the KMK folder and boot.py to the CIRCUITPY drive on the Stamp.

For step 4, use [code\\_Dell1545.py](#) as a starting point for keyboards without a number pad. If your keyboard has a number pad, use [code\\_LenovoE550.py](#) so you can see how the number pad key names are done. Load the code into Thonny and edit as described below:

Change keyboard.col\_pins to list the GPIO column pins left to right across the top of your matrix.

Change keyboard.row\_pins to list the GPIO row pins top to bottom along the side of your matrix.

Change the keyboard.keymap matrix for the base layer per the table you created. The basic keycode names that KMK uses are given [here](#) plus you can see the names I used in the [E550 code example](#). Keypad keys must start with KC.P followed by the name or number from the keycode basic list. Each keycode name (except FN) must be preceded with KC. Put KC.NO in each matrix location that has no key at that position.

Copy the layer 0: Base Layer over to the layer 1: Fn Media Layer. Now look at your keyboard's media keys to see which (if any) you want to make work. The media keycode names are given [here](#). For the Lenovo E550, I wanted the Mute, Volume Down, Volume Up, Brightness Down, and Brightness Up keys to work when Fn is pressed. These media keycode names replaced the corresponding Function key names at F1, F2, F3, F5, and F6 in the matrix.

Click the “Stop” icon in Thonny just to make sure it's ready for new code. Save your code to your computer and then save it to the Stamp's CIRCUITPY drive with the name "code.py" (this will overwrite your previous code.py that was the matrix decoder).

Now click the “Run” icon in Thonny and see if you have any typos reported in the console window. Once all typos are cleared, you should be able to type on the keyboard to test if all the keys work.

For normal USB keyboard operation (without Thonny), you can just plug in the USB cable. This will bring up a CIRCUITPY drive folder which you can close. The Stamp will start running the code as soon as USB power is applied.

## Appendix A – Key Connections for a Lenovo E550 Keyboard

LCTRL	17	8
RCTRL	17	2
LSHIFT	3	0
RSHIFT	3	2
LALT	18	11
RALT	18	1
LGUI	19	0
FN	29	28
A	6	4
B	13	1
C	10	2
D	10	4
E	10	7
F	13	4
G	13	11
H	11	9
I	16	7
J	9	4
K	16	4
L	14	4
M	9	2
N	9	1
O	14	7
P	15	7
Q	7	6
R	13	7
S	12	4
T	13	0
U	9	7
V	13	2
W	12	7
X	12	2
Y	9	0

Z	6	2
GRAVE `	8	6
N1 (number 1)	6	5
N2	12	5
N3	10	5
N4	13	5
N5	13	8
N6	9	8
N7	9	5
N8	16	5
N9	14	5
N0	15	5
MINUS	15	8
EQUAL	16	8
BSPACE	22	0
ESC	11	6
F1	12	8
F2	10	8
F3	10	0
F4	11	10
F5	22	11
F6	16	11
F7	14	0
F8	14	8
F9	22	8
F10	22	5
F11	21	5
F12	19	5
INSERT	23	5
DELETE	23	8
RIGHT	19	1
LEFT	20	1
UP	20	11
DOWN	21	1
SLASH /	15	1

DOT .	14	2	
COMMA ,	16	2	
SCOLON ;	15	4	
QUOTE '	15	11	
ENTER	22	2	
LBRC [	15	0	
RBRC ]	16	0	
BSLASH \	22	4	
CAPS	12	0	
TAB	6	0	
SPACE	22	1	
HOME	21	8	
END	20	5	
PGUP	23	2	
PGDOWN	23	1	
PSCREEN	23	4	
VOLD (VOL DOWN)	10	8	FN-F2
VOLU (VOL UP)	10	0	FN-F3
MUTE	12	8	FN-F1
BRIU (BRIGHT UP)	16	11	FN-F6
BRID (BRIGHT DOWN)	22	11	FN-F5
NUM	30	11	
KP_SLASH	30	0	
KP_ASTERISK	30	7	
KP_MINUS	30	8	
KP_PLUS	30	1	
KP_ENTER	31	2	
KP_DOT	20	2	
KP_0	31	1	
KP_1	31	8	
KP_2	31	4	
KP_3	31	5	
KP_4	31	11	
KP_5	31	0	
KP_6	31	7	

KP_7	30	4
KP_8	30	5
KP_9	30	2
CALCULATOR	18	5
Globe	19	8
Folder	20	8
Lock	18	7