



# Variant: Preliminary

## Integrated Actuators Laboratory (LAI)

Semester project: 02/2025 - 06/2025

Student: Théo Heng - theoheng@icloud.com


Supervisors: Maël Dagon, Paolo Germano

2025-04-15

Rev 1.0

Page	Index	Page	Index	Page	Index	Page	Index
1	Cover Page	11	Motor Control - Drivers	21	Motor Control - Driver 9	31	Power - Sequencing
2	Block Diagram	12	Motor Control - Driver 0	22	Motor Control - Driver 10	32	Revision History
3	Project Architecture	13	Motor Control - Driver 1	23	Motor Control - Driver 11	33	.....
4	MCU - Unit	14	Motor Control - Driver 2	24	Motor Control - Driver 12	34	.....
5	Power - Battery Management	15	Motor Control - Driver 3	25	Motor Control - Driver 13	35	.....
6	Power - Wireless Receiver & USB	16	Motor Control - Driver 4	26	Motor Control - Driver 14	36	.....
7	Power - Path & Generation	17	Motor Control - Driver 5	27	Motor Control - Driver 15	37	.....
8	Logic - I2C Mux	18	Motor Control - Driver 6	28	Motor Control - Driver 16	38	.....
9	User - RGB LED Indicator	19	Motor Control - Driver 7	29	Motor Control - Driver 17	39	.....
10	Sensing - IMU	20	Motor Control - Driver 8	30	Misc - Mounting Holes & Fiducials	40	.....

### TOP VIEW

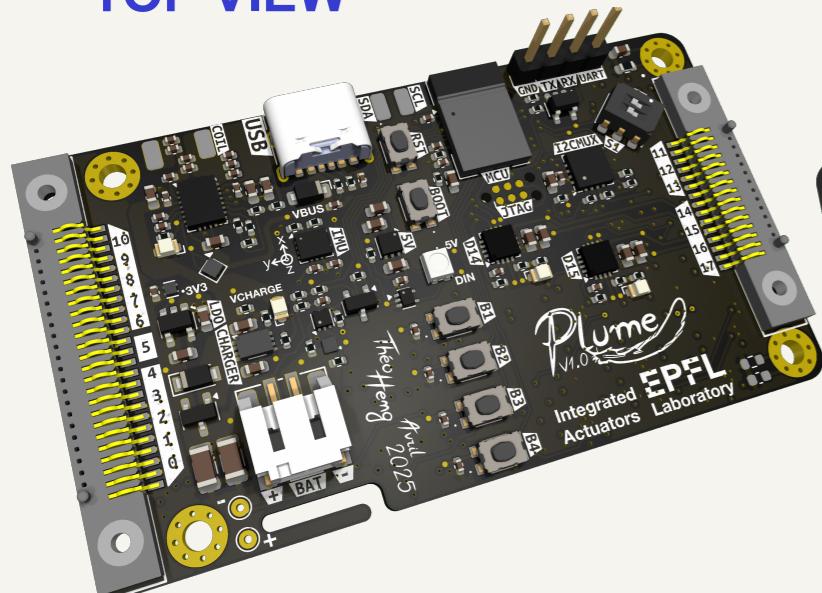

### BOTTOM VIEW



### DESIGN CONSIDERATIONS

DESIGN NOTE:  
Example text for informational design notes.

DEBUG NOTE:  
Example text for debug notes.

DESIGN NOTE:  
Example text for cautionary design notes.

DESIGN NOTE:  
Example text for critical design notes.

LAYOUT NOTE:  
Example text for critical layout guidelines.

### NOTES

#### MULTIPLE MOTOR CONTROLLER WITH SENSORLESS POSITION CONTROL

Not fitted components are marked as

DRAFT - Very early stage of schematic, ignore details.

PRELIMINARY - Close to final schematic.


CHECKED - There shouldn't be any mistakes. Contact the engineer if you find any.

RELEASED - A board with this schematic has been sent to production.

Preliminary - XX/XX/2025

Comments: KiCad Template by Vincent Nguyen	Laboratory: <b>Integrated Actuators Laboratory</b>	Variant: <b>EPFL</b>
Board Name: <b>Plume</b>		Project Name: 
Sheet Title: Cover Page	File Name: Plume.kicad_sch	Designer: Théo Heng
Sheet Path: /	Supervisor: Maël Dagon, Paolo Germano	Date: 2025-04-05
		Revision: 1.0
	Size: <b>A3</b>	Sheet: <b>1 of 32</b>

## [2] Block Diagram

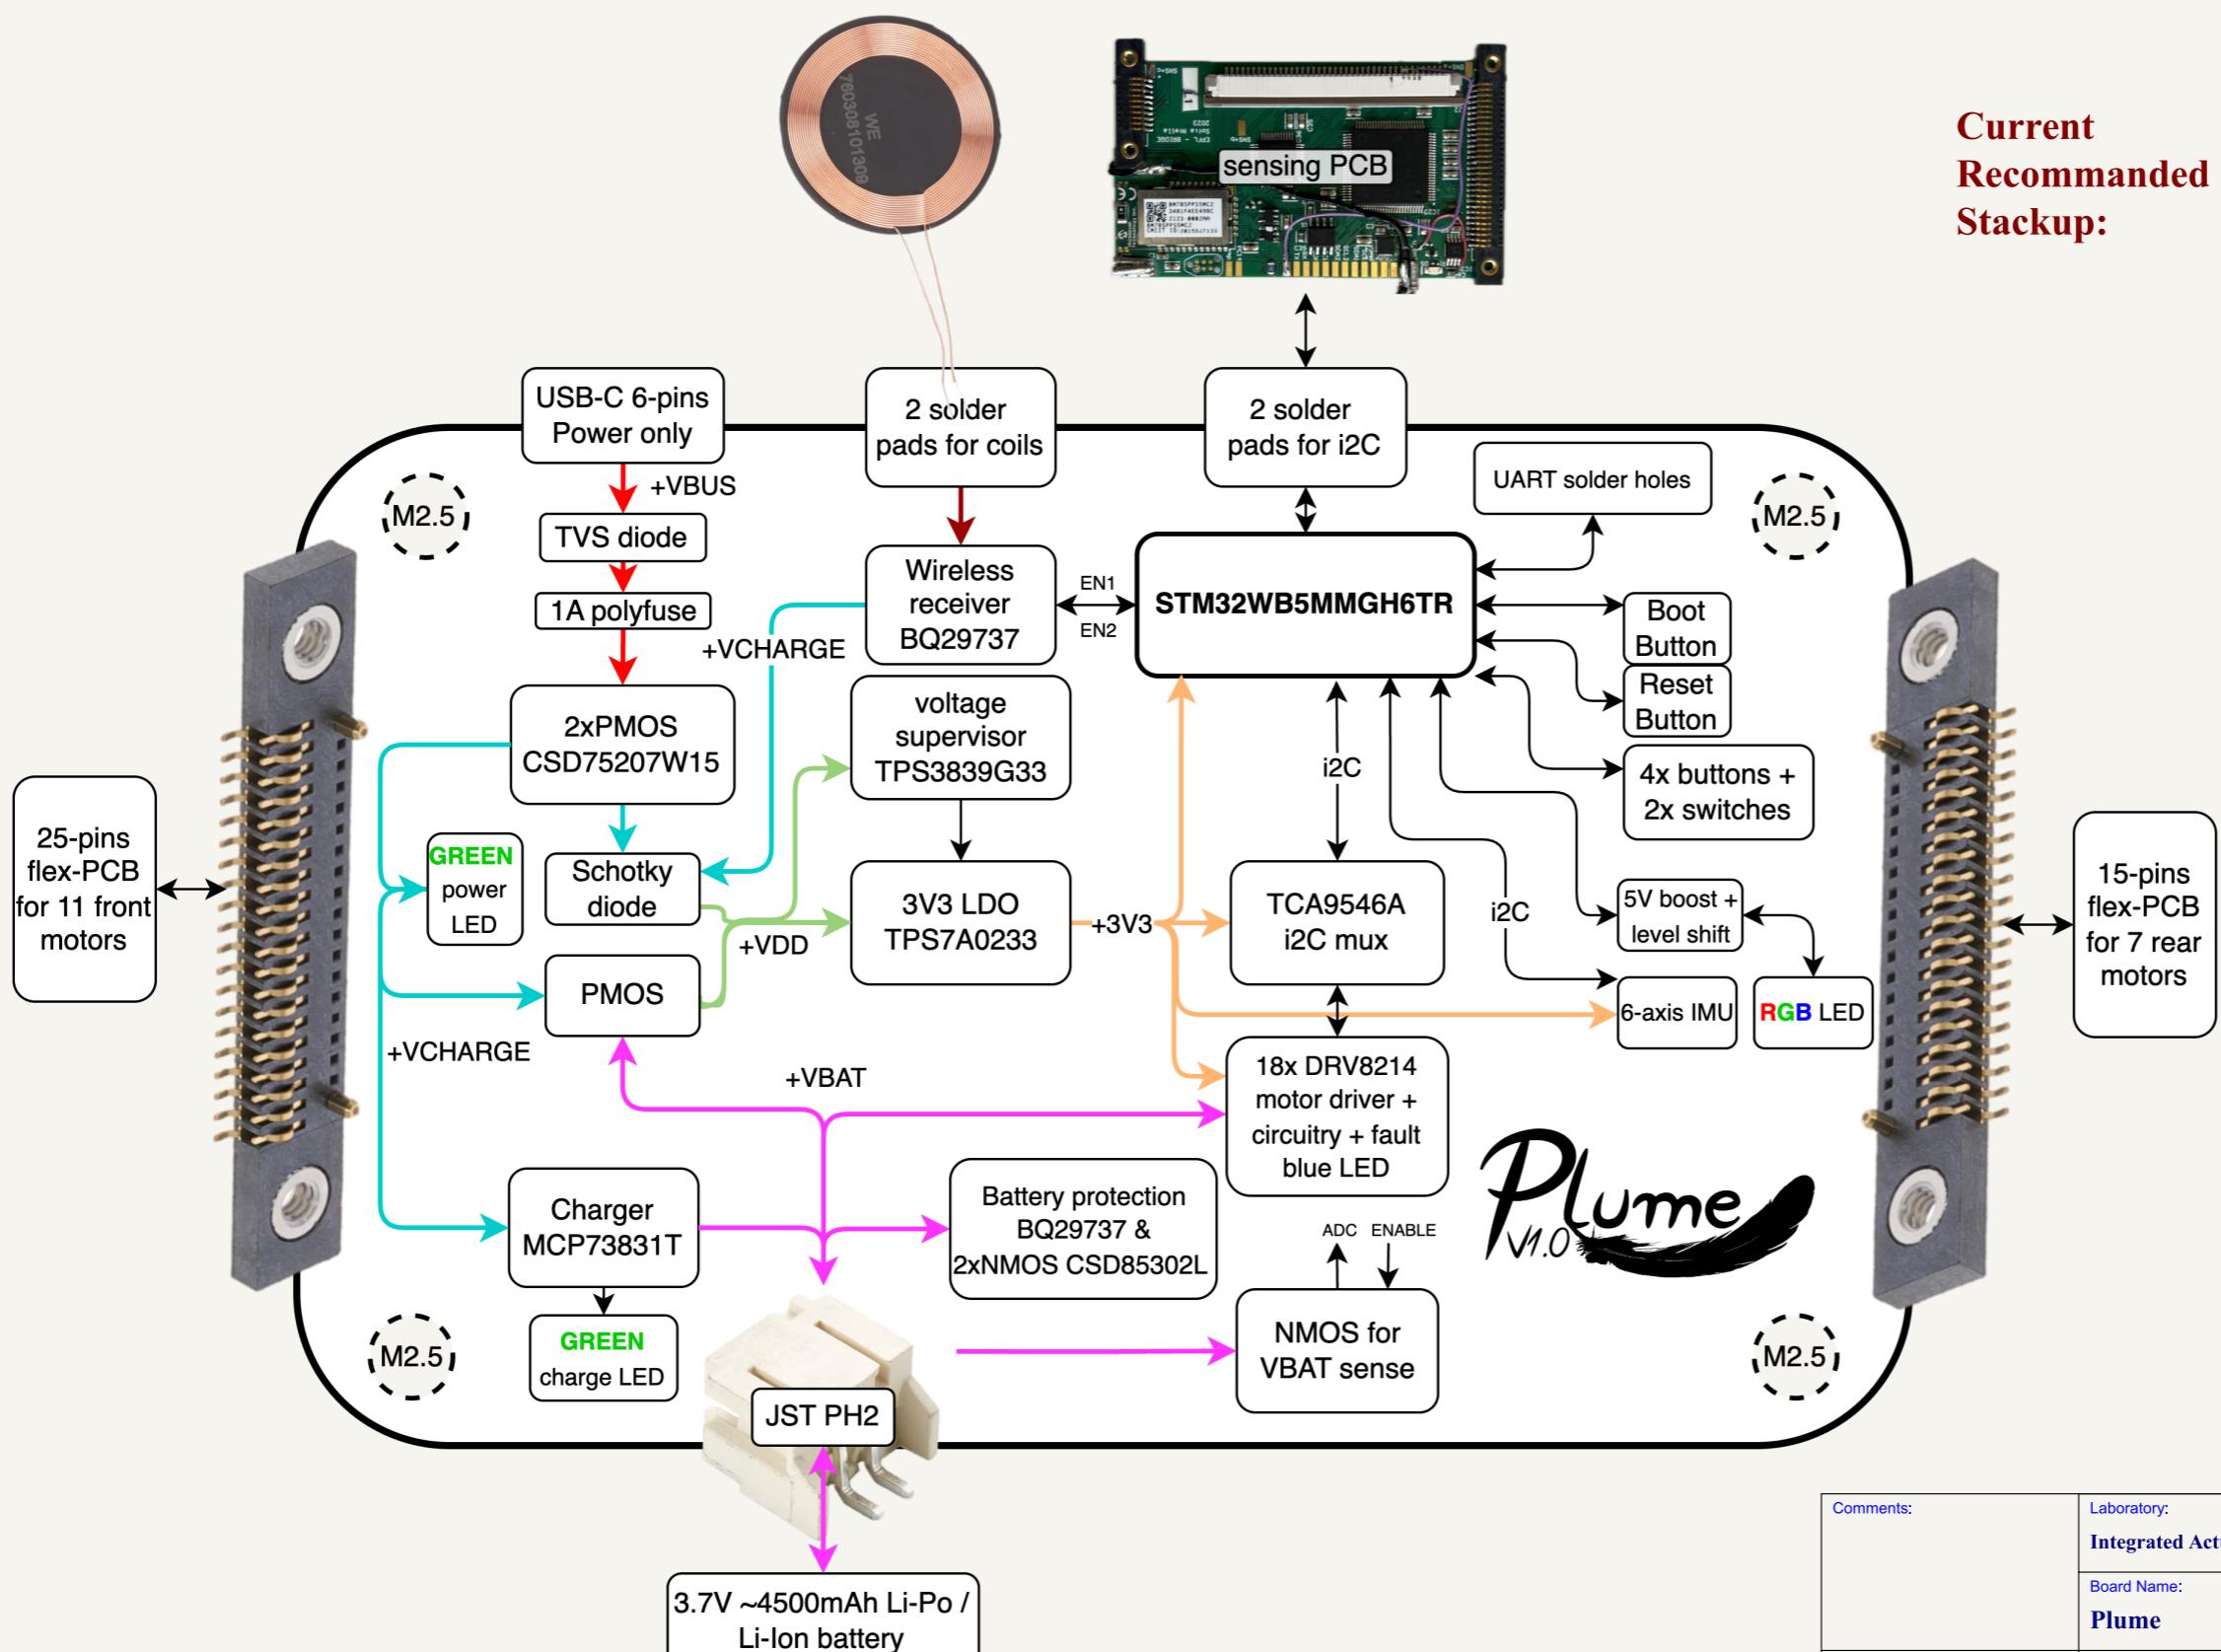

OLD stackup,  
not used:

JLC061611-7628(Special)		JLC061611-7628(Standard)	
Impedance (Ω)	Type	Signal Layer	Top Ref
50	Single Ended (Non coplanar)	L1	/
	Material		
L1	Outer Copper Weight 1oz		
Prepreg	7628, RC 49%, 8.6 mil		
L2	Inner Copper Weight		
Core	0.25mm 1/10Z without copper		
L3	Inner Copper Weight		
Prepreg	3313 RC57% 4.2mil		
L4	Inner Copper Weight		
Core	0.25mm 1/10Z without copper		
L5	Inner Copper Weight		
Prepreg	7628, RC 49%, 8.6 mil		
L6	Outer Copper Weight 1oz		

8 layer, 1oz out/1oz in stackup:  
**JLC081611-2116 (Finished thickness 1.65mm±10%)**


JLC081611-2116(Special)		JLC081611-2116(Standard)	
Impedance (Ω)	Type	Signal Layer	Top Ref
50	Single Ended (Non coplanar)	L1	/
	Material		
L1	Outer Copper Weight 1oz		
Prepreg	2116 RC54% 4.0mil		
L2	Inner Copper Weight		
Core	0.25mm 1/10Z without copper		
L3	Inner Copper Weight		
Prepreg	2116 RC54% 4.0mil		
L4	Inner Copper Weight		
Core	0.25mm 1/10Z without copper		
L5	Inner Copper Weight		
Prepreg	2116 RC54% 4.0mil		
L6	Inner Copper Weight		
Core	0.25mm 1/10Z without copper		
L7	Inner Copper Weight		
Prepreg	2116 RC54% 4.0mil		
L8	Outer Copper Weight 1oz		

### Target specifications:


Battery Input voltage:	3.08 - 4.25 V
Max charge current:	200 mA
Nb of controlled motors:	18
Max load current:	3A
Standby Current:	50 mA
Sleep Current:	15 uA

Comments:	Laboratory: Integrated Actuators Laboratory	Variant: EPFL
Board Name: <b>Plume</b>	Project Name: <b>Plume</b>	
Sheet Title: Block Diagram	File Name: Block Diagram.kicad_sch	Designer: Théo Heng
Sheet Path: /Block Diagram/	Supervisor: Maël Dagon, Paolo Germano	Date: 2025-04-05
		Revision: 1.0
	Size: <b>A3</b>	Sheet: <b>2</b> of <b>32</b>

# [3] Project Architecture

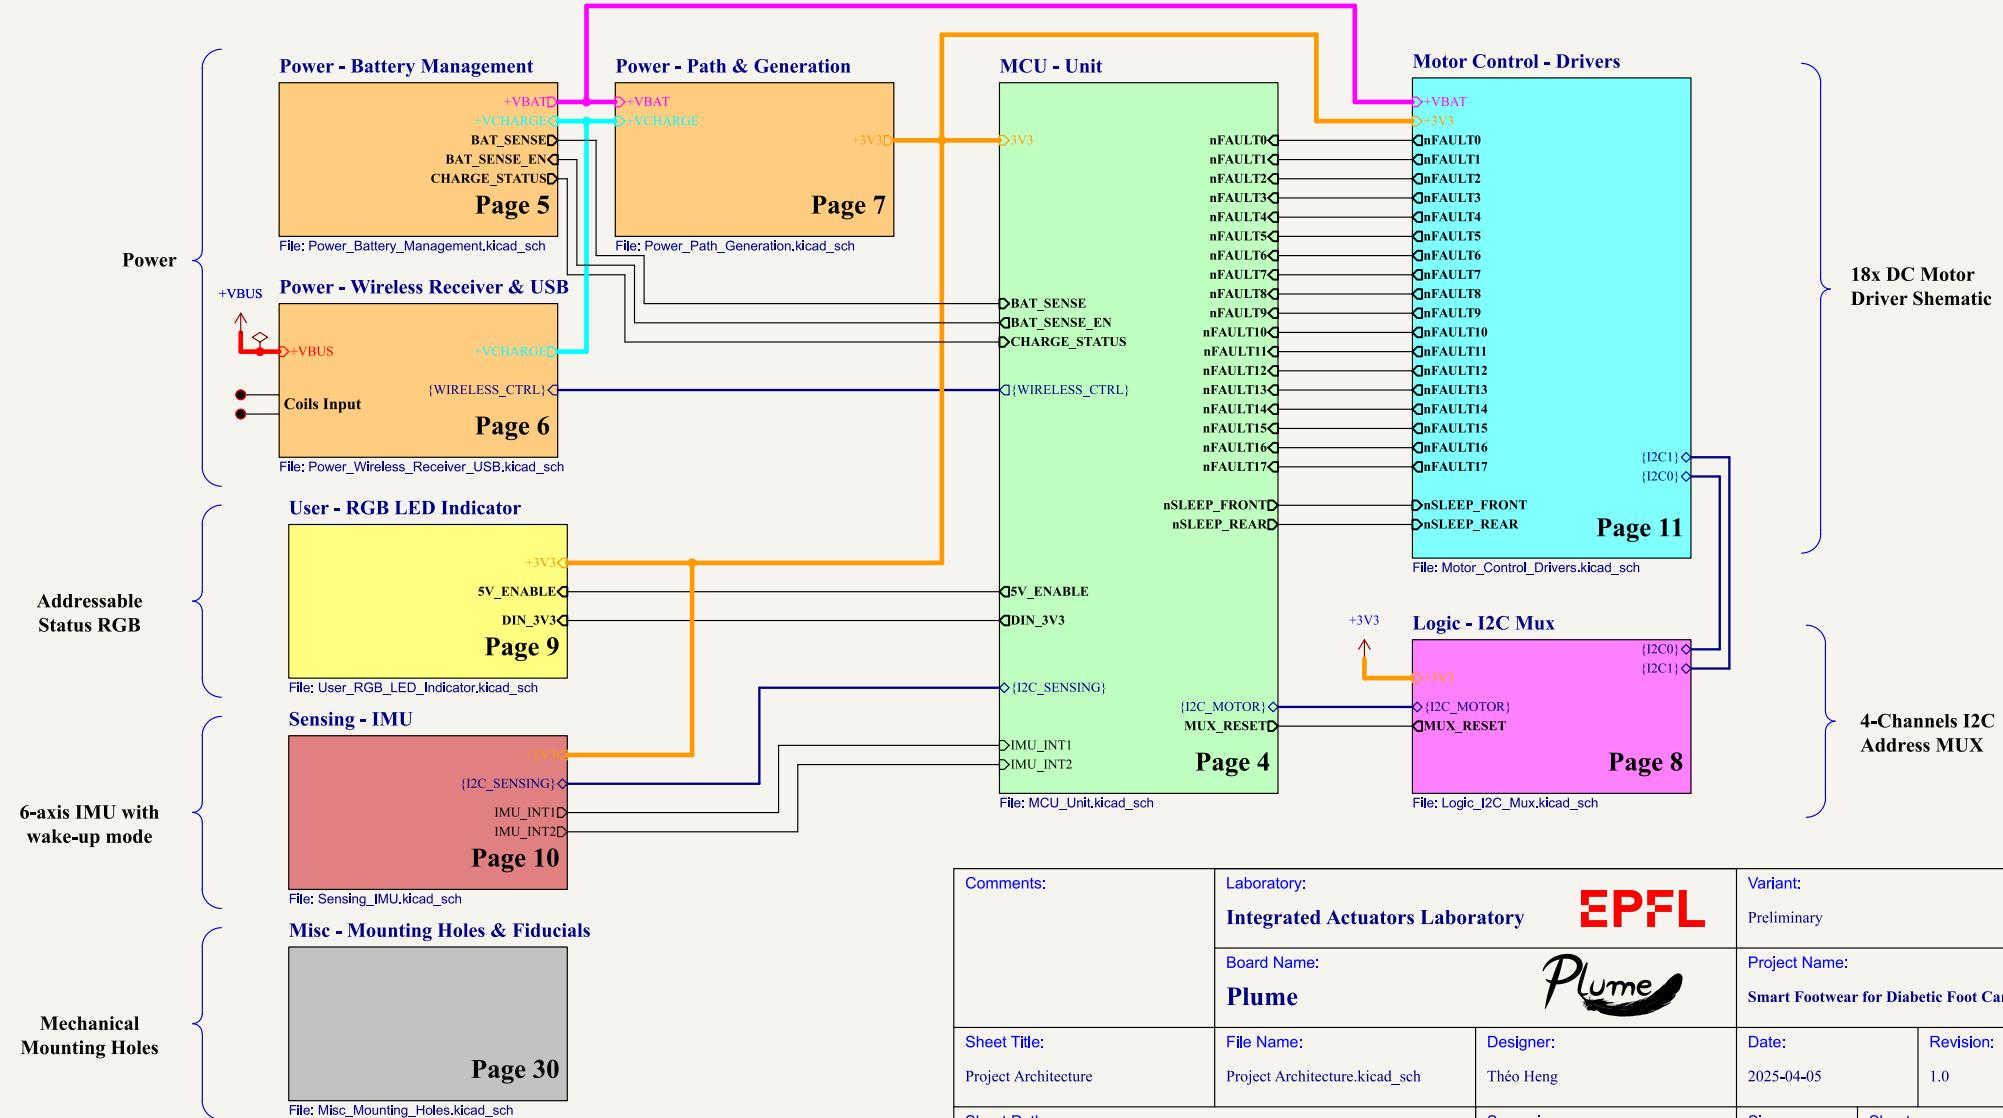

## [4] MCU - Unit

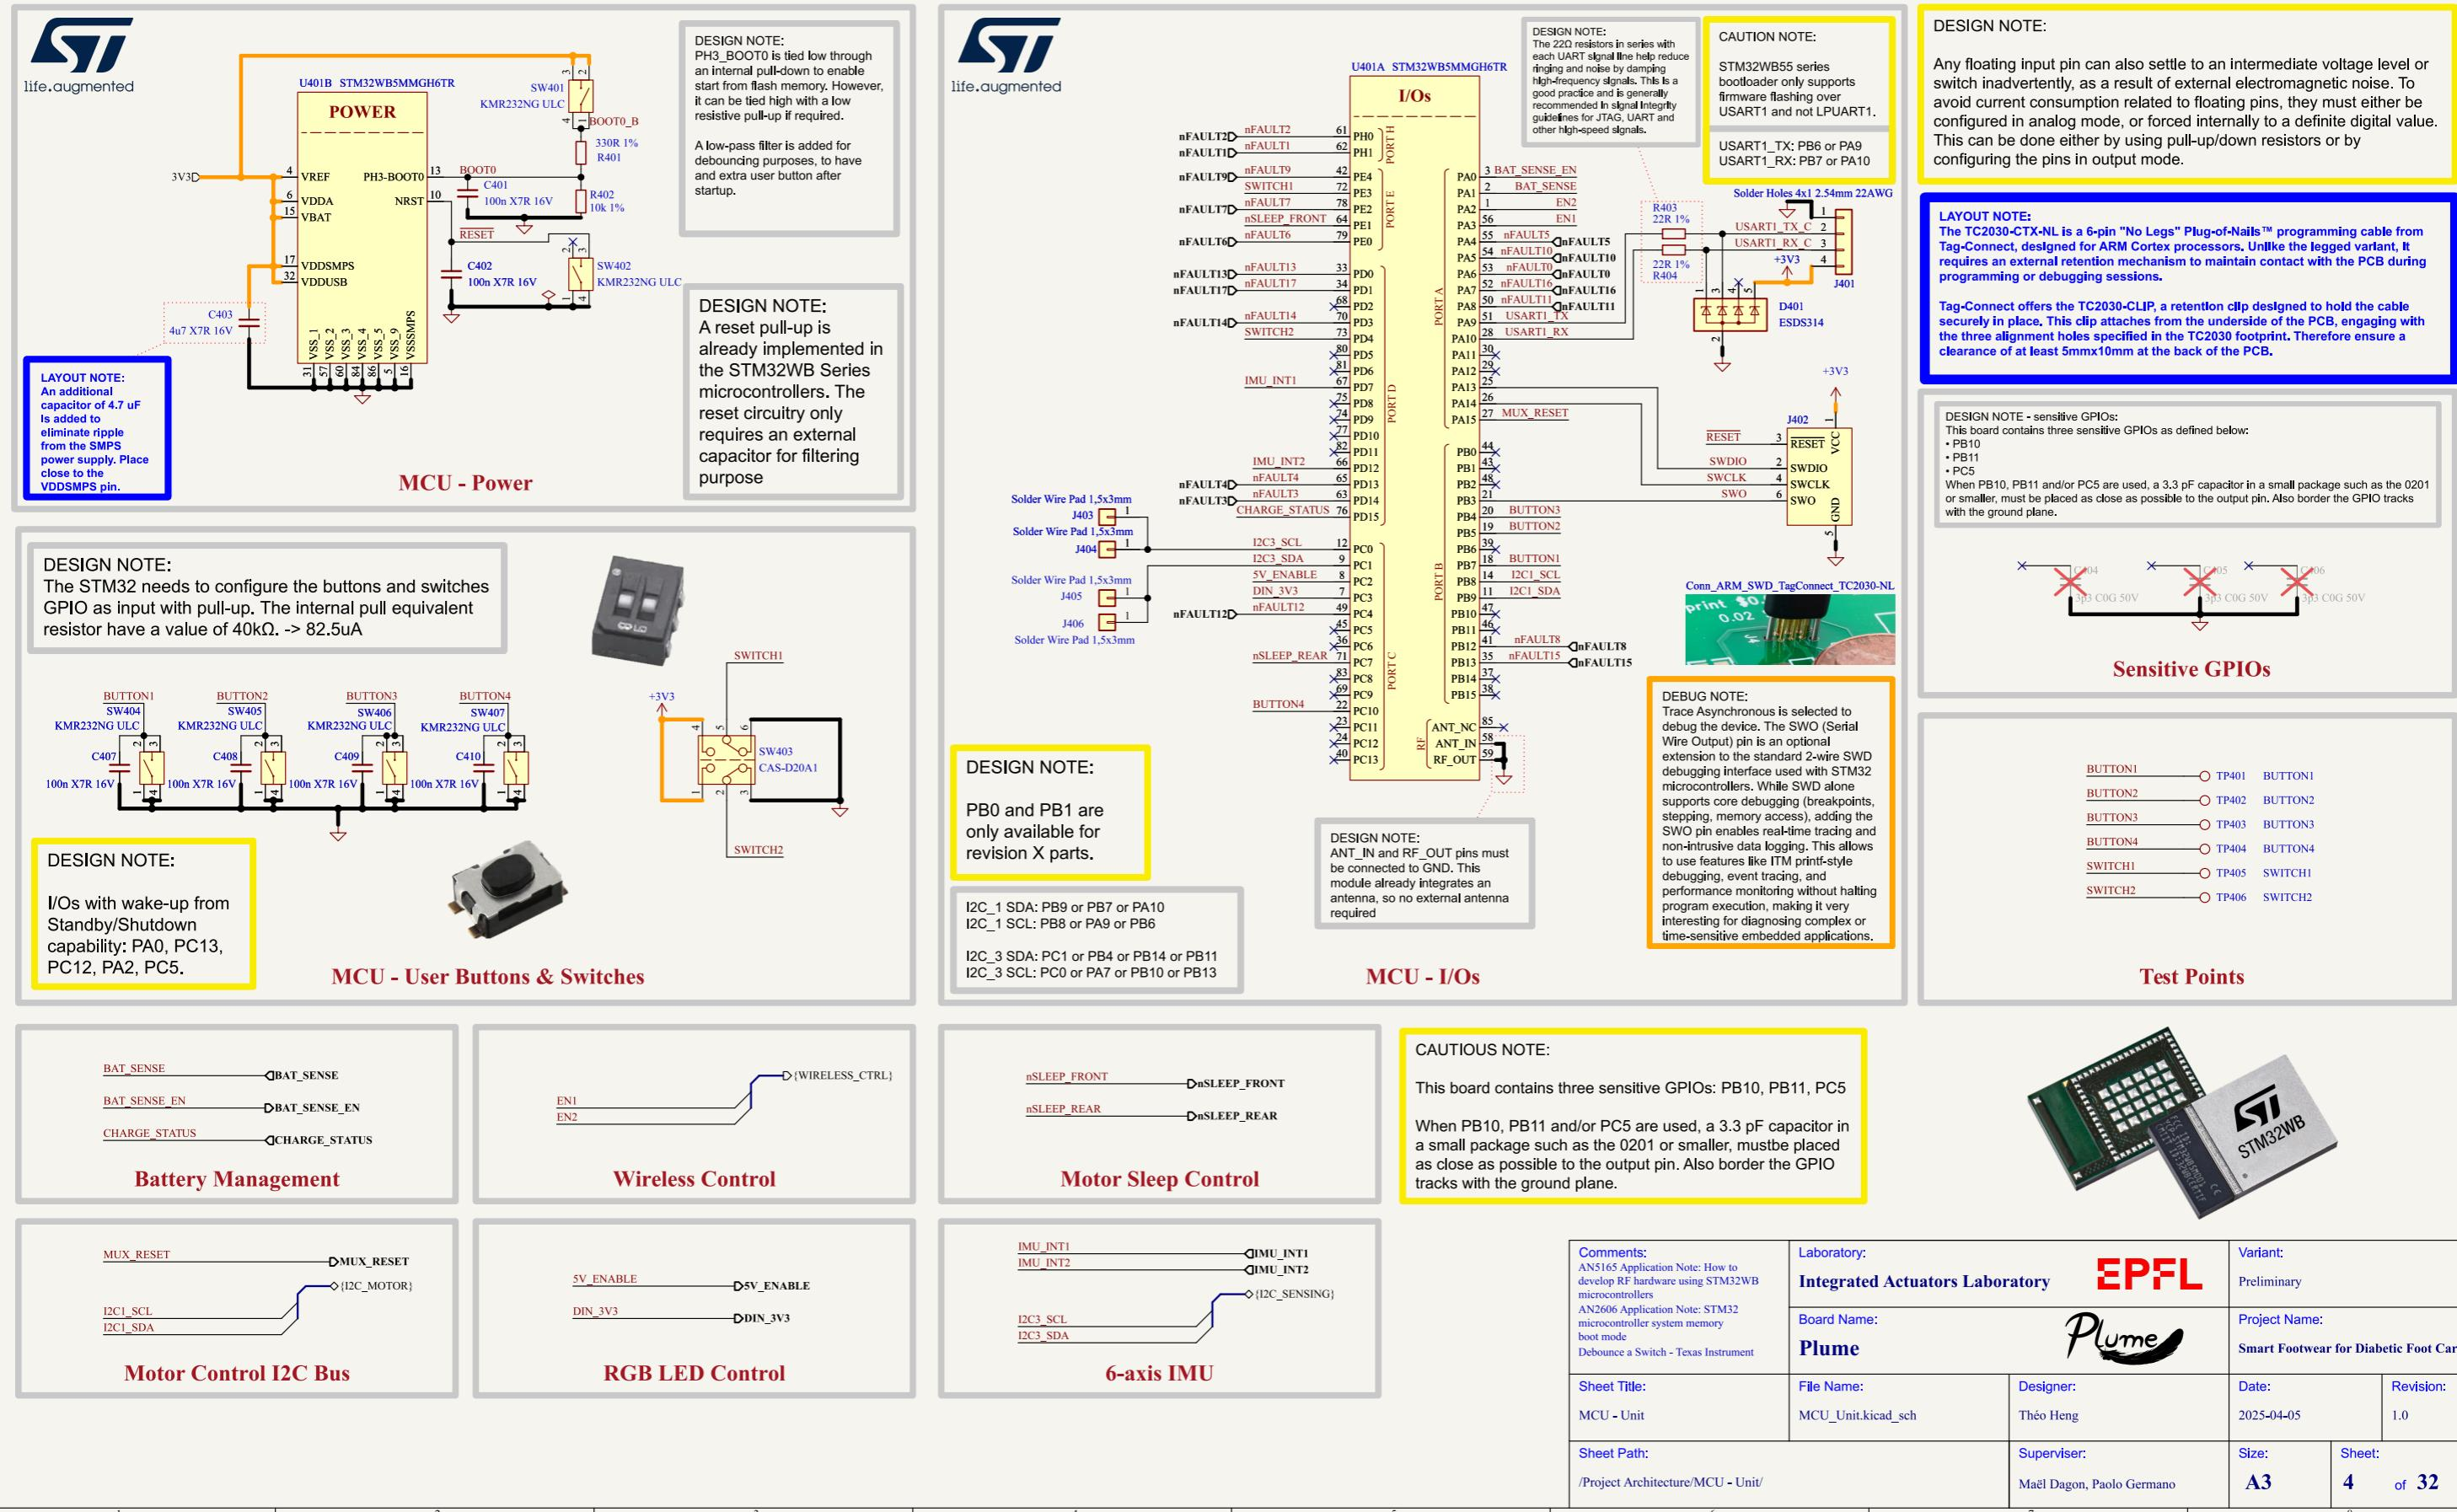

# [5] Power - Battery Management

Current analysis:

Normal:  
BQ29737: 4uA  
MCP73831: 100nA

Shutdown:  
BQ29737: 100nA  
MCP73831: 100nA

DESIGN NOTE - gate-source resistors:

TI recommends placing a high impedance 5MO across the gate source of each external FET to deplete any charge on the gate-source capacitance.

DESIGN NOTE - EXTERNAL PROTECTION FETs:


The external FET selection is important to ensure the battery pack selection is sufficient and complies to the requirements of the system.

BQ29737 charge overcurrent threshold: -50mV  
BQ29737 discharge overcurrent threshold: 100mV

The CSD85302L when driven at 3.7V at the gate, have a source to source resistance of ~22 mΩ.

Resulting charge overcurrent protection:  
50mV / 22mΩ ≈ 2.27A

Resulting discharge overcurrent protection:  
100mV / 22mΩ ≈ 4.54A

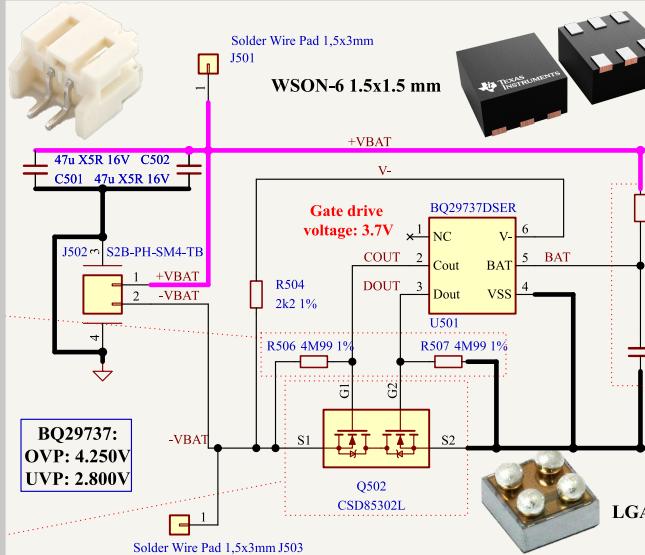



**Voltage and Current Protection Integrated Circuit for Single-Cell Li-Ion and Li-Polymer Batteries and Miniature Single-Cell, Fully Integrated Li-Ion, Li-Polymer Charge Management Controller**

COUT	TP501	COUT
DOUT	TP502	DOUT
CHARGE_STATUS	TP503	CHARGE_STATUS
BAT_SENSE_EN	TP504	BAT_SENSE_EN
BAT_SENSE	TP505	BAT_SENSE
-VBAT	TP506	-VBAT
-VBAT	TP507	-VBAT
+VBAT	TP508	+VBAT
+VBAT	TP509	-VBAT

Test Points

Comments:	Laboratory: <b>Integrated Actuators Laboratory</b>	Variant: Preliminary
Board Name: <b>Plume</b>		Project Name: <b>Smart Footwear for Diabetic Foot Care</b>
Sheet Title: Power - Battery Management	File Name: Power_Battery_Management.kicad_sch	Designer: Théo Heng
Sheet Path: /Project Architecture/Power - Battery Management/	Supervisor: Maël Dagon, Paolo Germano	Date: 2025-04-05
		Revision: 1.0
	Size: <b>A4</b>	Sheet: <b>5</b> of <b>32</b>

# [6] Power - Wireless Receiver & USB

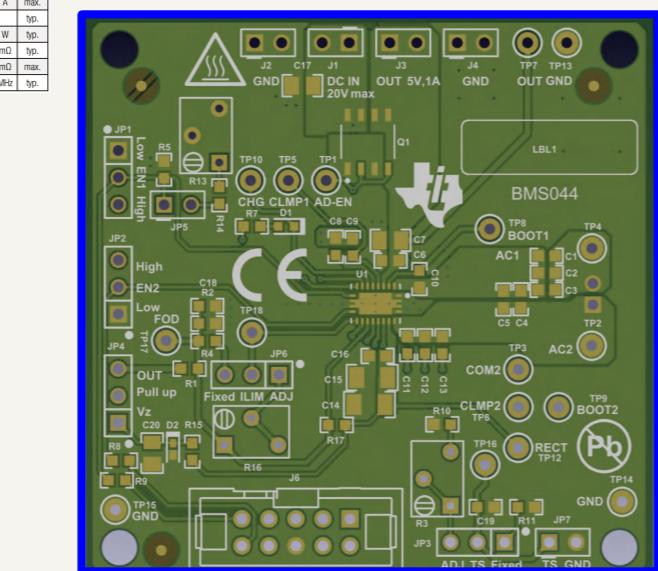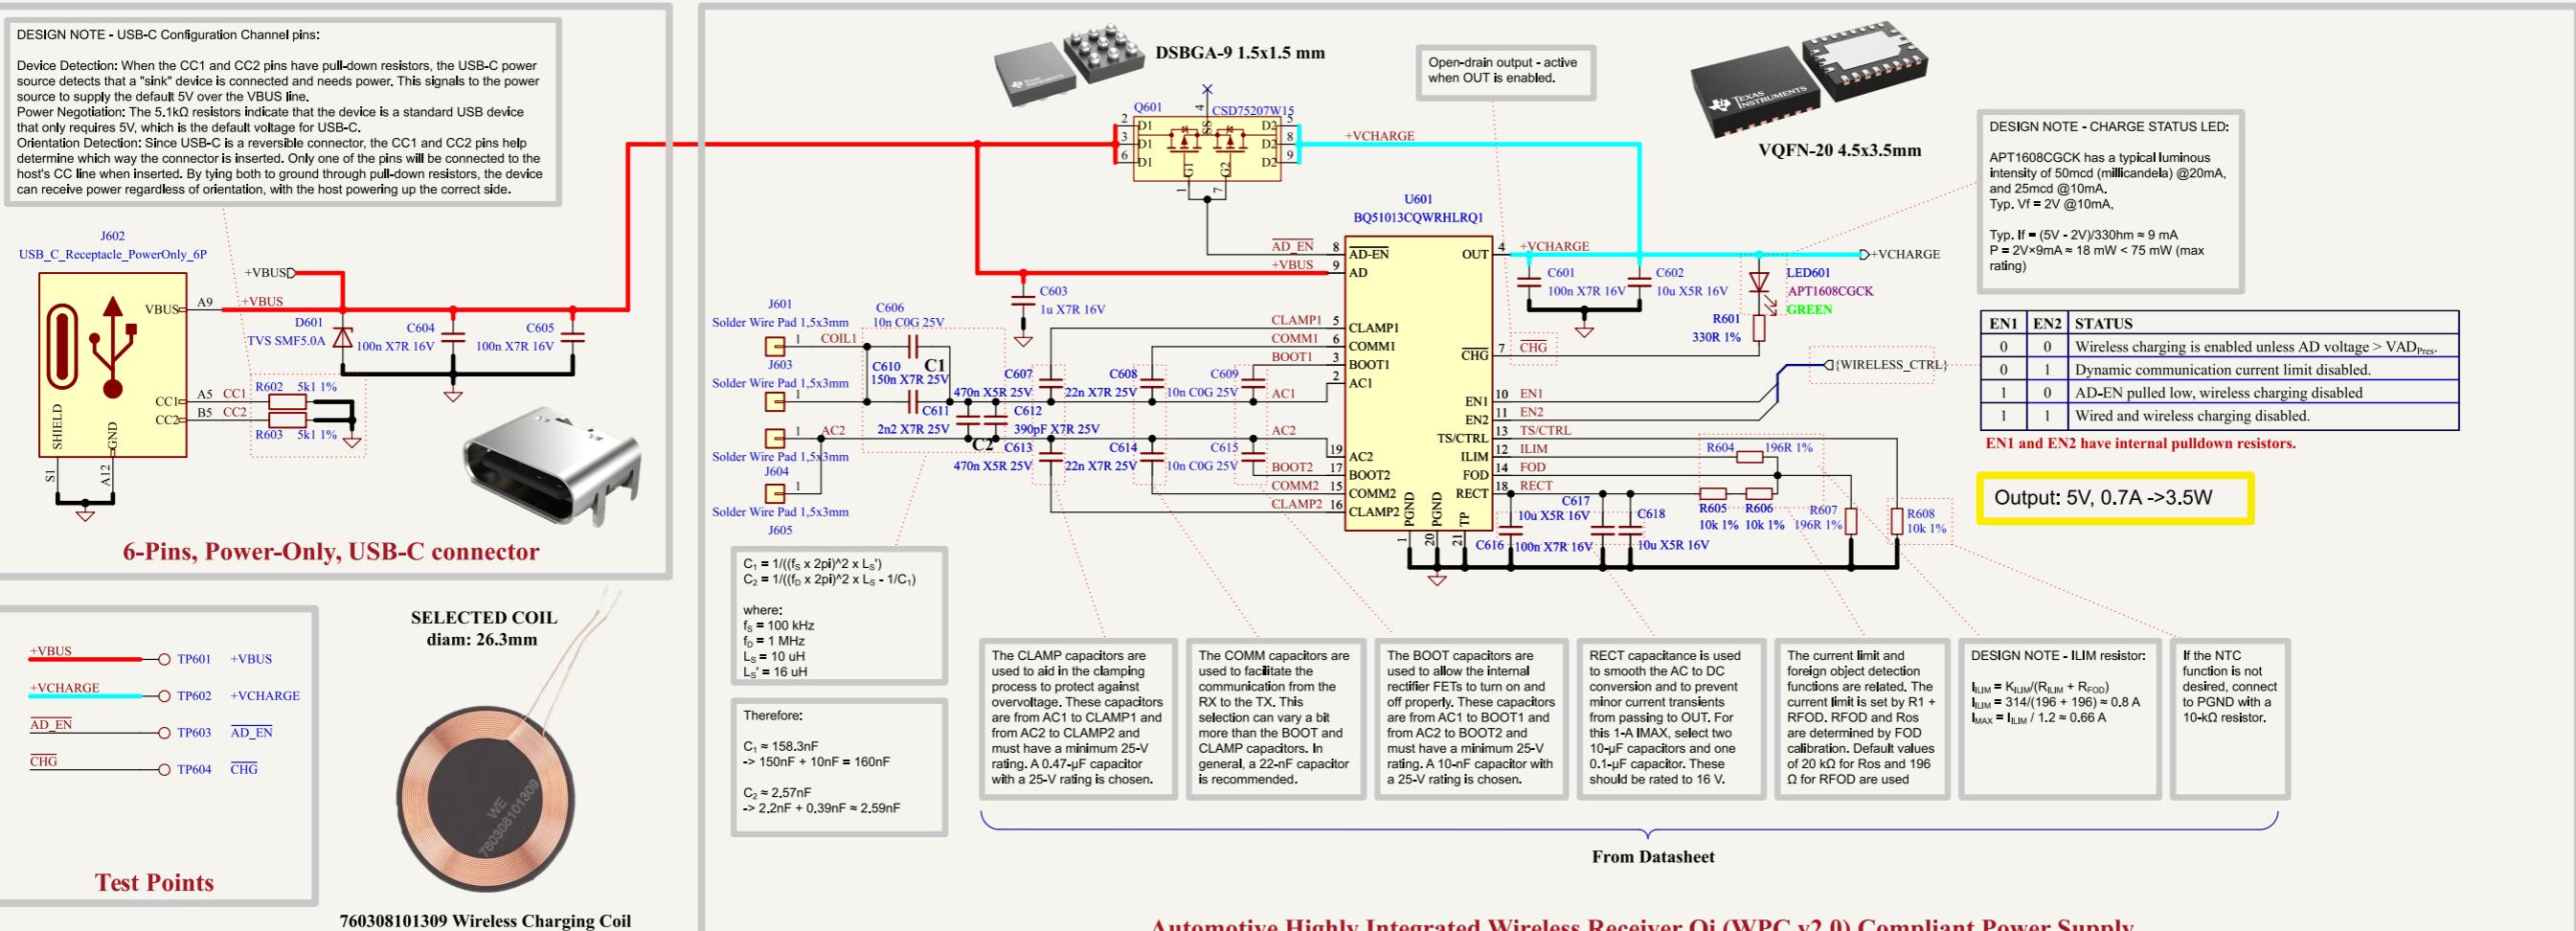

Comments: EVM User's Guide: BQ51013C-Q1EVM BQ51013C-Q1 Evaluation Module	Laboratory: <b>Integrated Actuators Laboratory</b>	Variant: <b>EPFL</b>
Board Name: <b>Plume</b>	Project Name: 	
Sheet Title: Power - Wireless Receiver & USB	File Name: Power_Wireless_Receiver_USB.kicad	Designer: sdhéo Heng
Sheet Path: /Project Architecture/Power - Wireless Receiver & USB/	Supervisor: Maël Dagon, Paolo Germano	Date: 2025-04-05
		Revision: 1.0
	Size: <b>A3</b>	Sheet: <b>6 of 32</b>

# [7] Power - Path & Generation

Design Note - Simple Power-Path with PMOS and Schottky diode:


When no USB-C supply nor coil power is present, this simple circuit will by default conduct the battery to the LDO, through the PMOS.

But if USB-C supply or coil power is active, the PMOS will turn off, and the LDO will use the power from the external power supply through the schottky diode.

Design Note - Power Path Schottky diode:


A diode is required to prevent reverse current from flowing to the power source. Selecting the right diode can minimize the leakage current and the forward voltage drop from the power source to the system load. A schottky diode, which has lower forward voltage drop, is recommended. Forward voltage @ If = 200mA: 420mV Reverse current @ Vr = 5V: 70nA

This pull down resistor ensures that the gate is properly pulled to GND when VBUS and VCOIL are not connected.

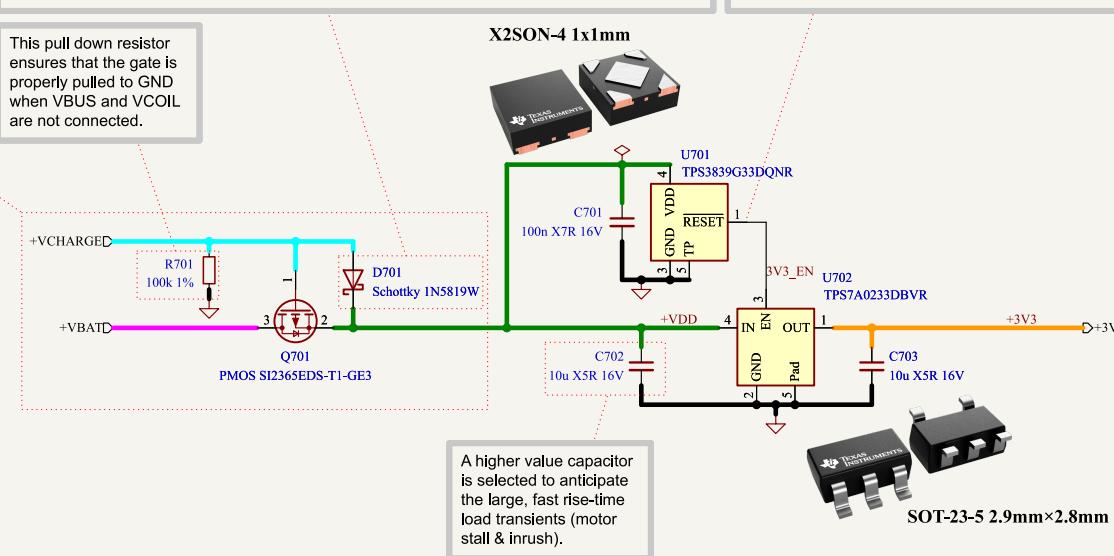

Current analysis:

Normal:  
TPS3839: 150nA  
TPS7A02: 25nA  
PMEG60T20ELR: 65nA  
  
Shutdown:  
TPS3839: 150nA  
TPS7A02: 3nA  
PMEG60T20ELR: 60nA

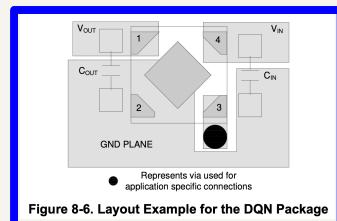


3.3V current draw estimation:

STM32 absolute max: <= 130mA  
Pull-ups: 33uA/Pull-up -> max 1mA  
I2C MUX: <1mA  
I2C Pull-ups: 2.2mA x 2 ~5mA  
Fault LEDs: 2mA/LED -> max 36mA  
RGB LED: (1mA + 3x5mA)x1.25 = 20mA  
IMU: max 1mA

Total Max: 194mA < 200mA

Nanopower IQ, 25-nA, 200-mA, Low-Dropout Voltage Regulator With Fast Transient Response paired with 150-nA, Ultralow Power, Supply Voltage Monitor



Test Points

Comments:	Laboratory: <b>Integrated Actuators Laboratory</b>	Variant: Preliminary
Board Name: <b>Plume</b>	Project Name: <b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title: Power - Path & Generation	File Name: Power_Path_Generation.kicad_sch	Designer: Théo Heng
Sheet Path: /Project Architecture/Power - Path & Generation/	Supervisor: Maël Dagon, Paolo Germano	Date: 2025-04-05
	Size: <b>A4</b>	Revision: 1.0
	Sheet: <b>7</b>	of <b>32</b>

# [8] Logic - I2C Mux

## DESIGN NOTE - I2C pull-up resistors:

$R_{MIN} = (VDD_{MAX} - VOL_{MAX}) / IOL$   
 System I/O voltage: VDD = 3.3V +- 5% -> 3.47V  
 Low level output voltage (I2C specs): VOL<sub>MAX</sub> = 0.4V  
 Low level output current (I2C specs): IOL = 3mA  
 $R_{MIN} = (3.47V - 0.4V) / 3mA \approx 1k\Omega$

$R_{MAX} \approx (1.18 \times t_{RMAX}) / C_{bMAX}$   
 Standard mode (I2C specs):  $t_{RMAX} = 1000\text{ns}$   
 Fast mode (I2C specs):  $t_{RMAX} = 300\text{ns}$

The maximum bus capacitance for an I2C bus must not exceed 400 pF for fast-mode operation. The bus capacitance can be approximated by adding the capacitance of the STM32,  $C_{STM}$ , the TCA9546A,  $C_{TCA}$ , the capacitance of wires/connections/traces,  $C_{TRACE}$ , and the capacitance of each individual slave (driver) on a given channel  $C_{DRV}$ . If multiple channels will be activated simultaneously, each of the slaves on all channels will contribute to total bus capacitance.

$C_{STM}$  worst case = (not specified in the datasheet, we assume  $10\text{pF} \times 2 = 20\text{pF}$ )  
 $C_{TCA\_IN}$  worst case =  $19\text{pF} \times 2 = 38\text{pF}$  on the SCL, SDA lines  
 $C_{TCA\_OUT}$  worst case =  $8\text{pF} \times 2 = 16\text{pF}$  on the SC3-SC0, SD3-SD0 lines  
 $C_{DRV}$  worst case = (not specified in the datasheet, we assume  $8\text{pF} \times 2 = 16\text{pF}$ )  
 $C_{TRACE}$  = nb of traces x (length of a trace / 25mm) X  $2.5\text{pF}$   
 $C_{TRACE}$  =  $2 \times (75\text{mm} / 25\text{mm}) \times 2.5\text{pF} = 15\text{pF}$



For one active channel:  
 $C_{bMAX} = C_{STM} + C_{TCA\_IN} + 2 \times C_{TCA\_OUT} + 9 \times C_{DRV} + C_{TRACE}$   
 $C_{bMAX} = 20\text{pF} + 38\text{pF} + 16\text{pF} + 9 \times 16\text{pF} + 15\text{pF} \approx 233\text{pF}$   
 $\rightarrow R_{MAX} = (1.18 \times 300\text{ns}) / 113\text{pF} \approx 151\Omega$

To be safe, a value of  $1k\Omega$  is chosen. Since both the master I2C lines and fanned channels need pull ups, there will be 2 resistors in parallel, when a channel is activated. Therefore,  $3k\Omega$  resistors are chosen, in order to get  $1k\Omega$ .

For two active channel:  
 $C_{bMAX} = C_{STM} + C_{TCA\_IN} + 2 \times C_{TCA\_OUT} + 18 \times C_{DRV} + 1.66 \times C_{TRACE}$   
 $C_{bMAX} = 20\text{pF} + 38\text{pF} + 32\text{pF} + 18 \times 16\text{pF} + 25\text{pF} \approx 403\text{pF} > 400$

Therefore, only one channel can be enabled at a time, meaning that 9 drivers only can be driven simultaneously.


Smaller resistors decrease rise time but increase power consumption. In our case:  $I = 3V3 / 1500 \approx 2.2\text{mA}$

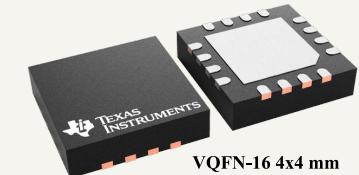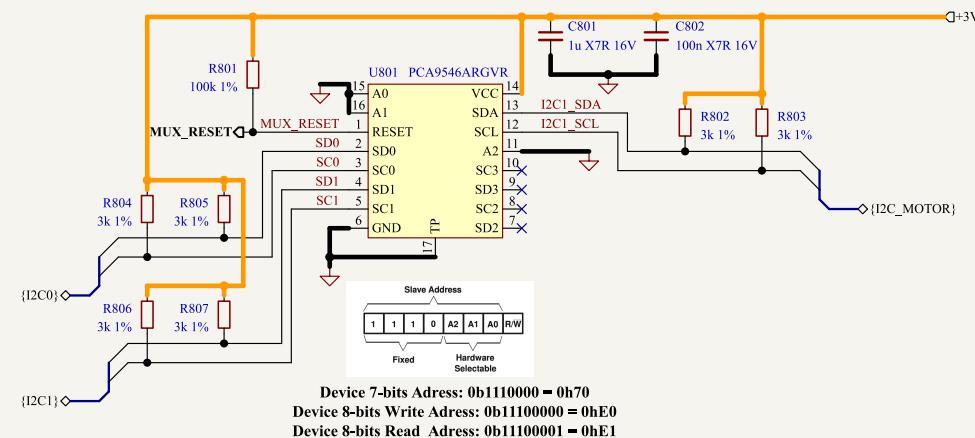


Low Voltage 4-Channel I2C and SMBus Switch with Reset Function

## Current analysis:

Normal:  
 PCA9546A = 3uA  
 Pull-ups =  $(3.3/1500) \times 2 \times 0.5 = 2.2\text{mA}$   
 Standby:  
 PCA9546A = 1uA  
 Pull-ups = 0uA





## Test Points

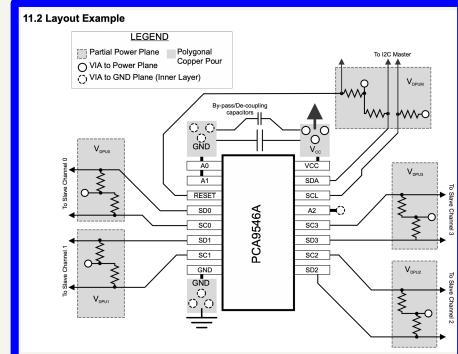

Comments:	Laboratory: Integrated Actuators Laboratory	Variant: Preliminary
Board Name: <b>Plume</b>	Project Name: <b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title: Logic - I2C Mux	File Name: Logic_I2C_Mux.kicad_sch	Date: 2025-04-05      Revision: 1.0
Sheet Path: /Project Architecture/Logic - I2C Mux/	Supervisor: Maël Dagon, Paolo Germano	Size: <b>A4</b> Sheet: <b>8</b> of <b>32</b>


# [9] User - RGB LED Indicator

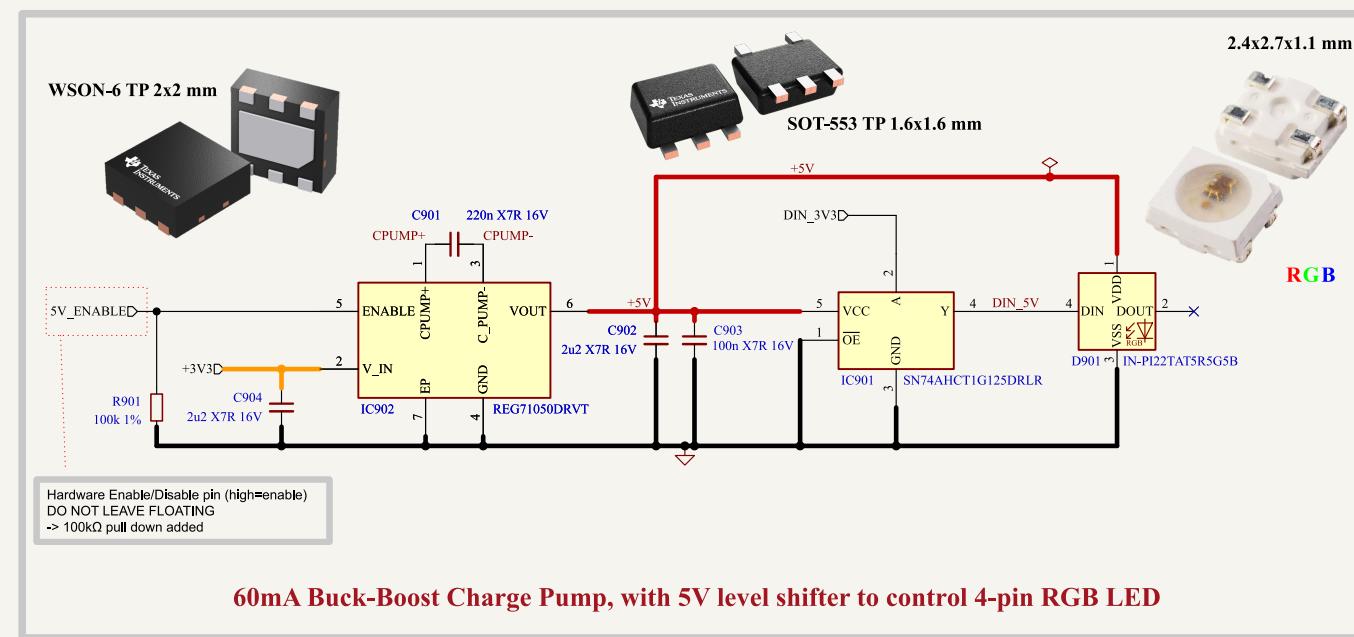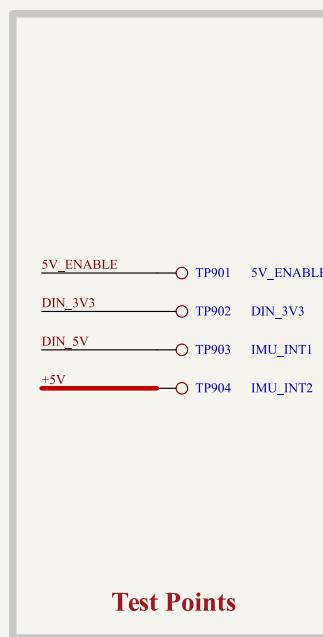

**Current analysis:**

Normal:  
REG71050: 65µA  
SN74AHCT1G125: 10µA  
IN-PI22TAT5R5GSB: 1mA

Shutdown:  
REG71050: 10nA  
SN74AHCT1G125: OFF  
IN-PI22TAT5R5GSB: OFF

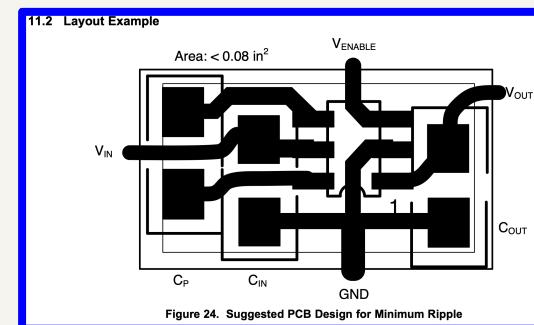


**Comments:**  
This LED was chosen as it is relatively small compared to other well-known alternatives (e.g. WS2812B). The saved space is used to provide proper 5V supply and logic. This LED might work with 3V3 but this approach is safer.

Laboratory:	<b>EPFL</b>	Variant:
Variant:	Preliminary	
Board Name:	<b>Plume</b>	Project Name:
		Smart Footwear for Diabetic Foot Care
Sheet Title:	File Name:	Date:
User - RGB LED Indicator	User_RGB_LED_Indicator.kicad_sch	Théo Heng
		2025-04-05
Sheet Path:	Supervisor:	Revision:
/Project Architecture/User - RGB LED Indicator/	Maël Dagon, Paolo Germano	1.0
	Size:	
	<b>A4</b>	Sheet:
	<b>9</b>	of <b>32</b>

# [10] Sensing - IMU

IMU\_INT1 → TP1001 IMU\_INT1  
IMU\_INT2 → TP1002 IMU\_INT2

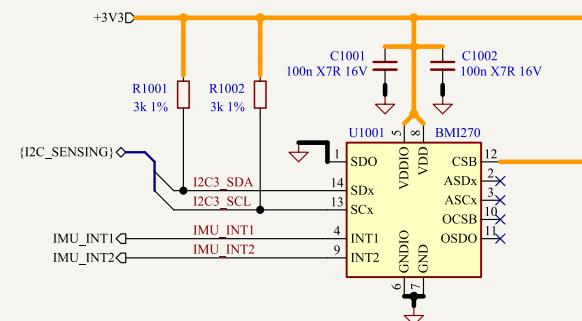

Test Points

6-axis, smart, low power Inertial Measurement Unit for high-performance applications



Current analysis BMI270:  
Normal: A+G Performance mode: 970uA  
Wake-up mode: 5uA  
Sleep: 3uA


## DESIGN NOTE - I<sup>2</sup>C address:

The default I<sup>2</sup>C address of the device is 0b1101000 (0x68). It is used if the SDO pin is pulled to 'GND'. The alternative address 0b1101001 (0x69) is selected by pulling the SDO pin to 'VDDIO'.


Comments:	EPFL		Variant:	
			Preliminary	
Board Name:	Plume		Project Name:	
Plume	Smart Footwear for Diabetic Foot Care			
Sheet Title:	File Name:	Designer:	Date:	Revision:
Sensing - IMU	Sensing_IMU.kicad_sch	Théo Heng	2025-04-05	1.0
Sheet Path:	Supervisor:		Size:	Sheet:
/Project Architecture/Sensing - IMU/	Maël Dagon, Paolo Germano		A4	10 of 32

# [11] Motor Control


## - Drivers x18

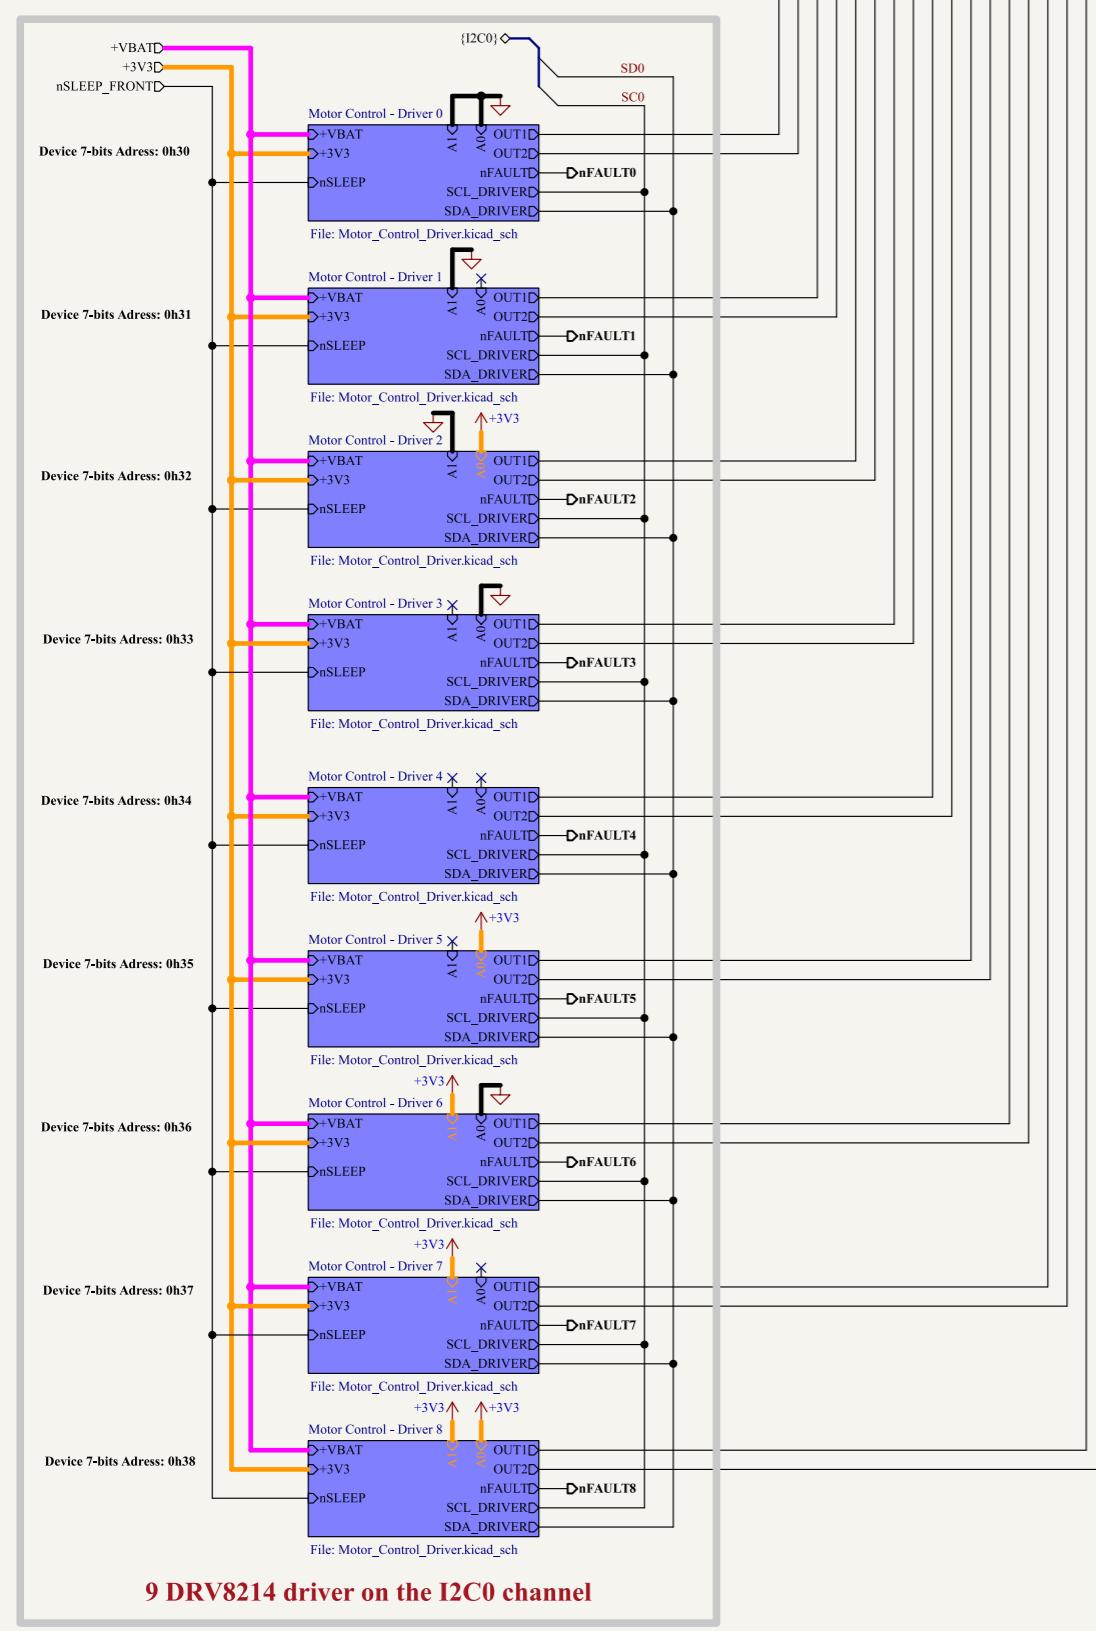

## 9 DRV8214 driver on the I2C0 channel

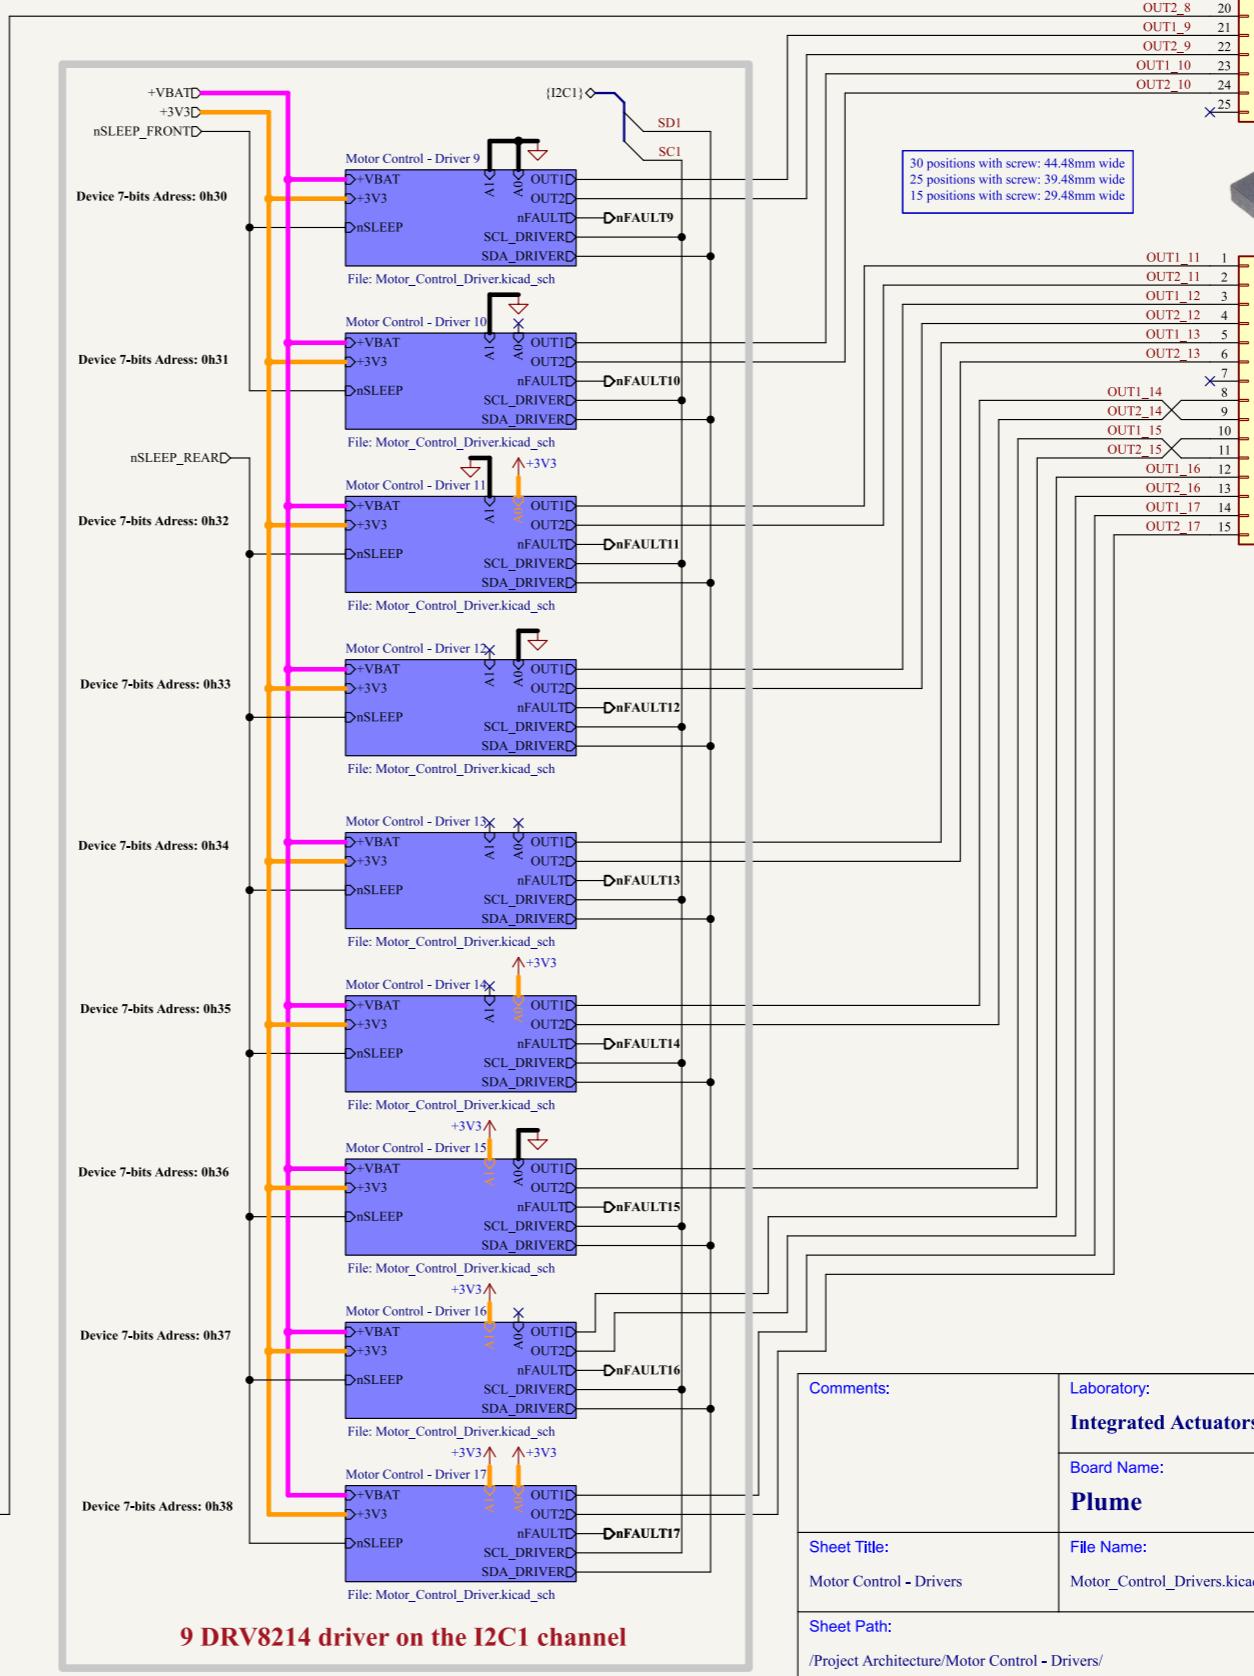

## 9 DRV8214 driver on the I2C1 channel

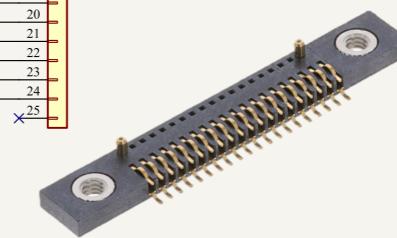

## DEBUG NOTE:

The specific Samtec connectors used on this PCB are not usually in stock on Mouser/Digikey so they are directly ordered from Samtec's website.

## LAYOUT NOTE:

**Use the "Replicate Layout" KiCad Plugin to layout copy-paste the layout of each driver unit.**

**DESIGN NOTE:**  
This first iteration implements 18 drivers module, with 11 of them used at the front of the

Each module is similar, with the DRV8214RTER IC, decoupling and bulk capacitors, test points, and LED driver resistors.

For the layout, every module are routed in the exact same way.

nSLEEP\_FRONT TP1101 nSLEEP\_FRONT

## Test Points

Comments:	Laboratory: <b>Integrated Actuators Laboratory</b>		Variant: Preliminary	
	Board Name: <b>Plume</b>		Project Name: Smart Footwear for Diabetic Foot Care	
Sheet Title: Motor Control - Drivers	File Name: Motor_Control_Drivers.kicad_sch	Designer: Théo Heng	Date: 2025-04-05	Revision: 1.0
Sheet Path: /Project Architecture/Motor Control - Drivers/		Superviser: Maël Dagon, Paolo Germano	Size: <b>A3</b>	Sheet: <b>11</b> of <b>32</b>

# [12] Motor Control - Driver 12

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external I<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilux) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

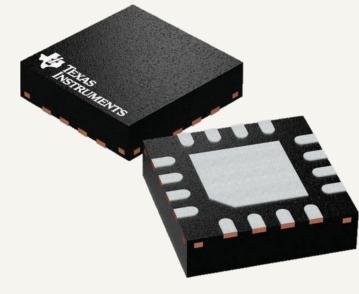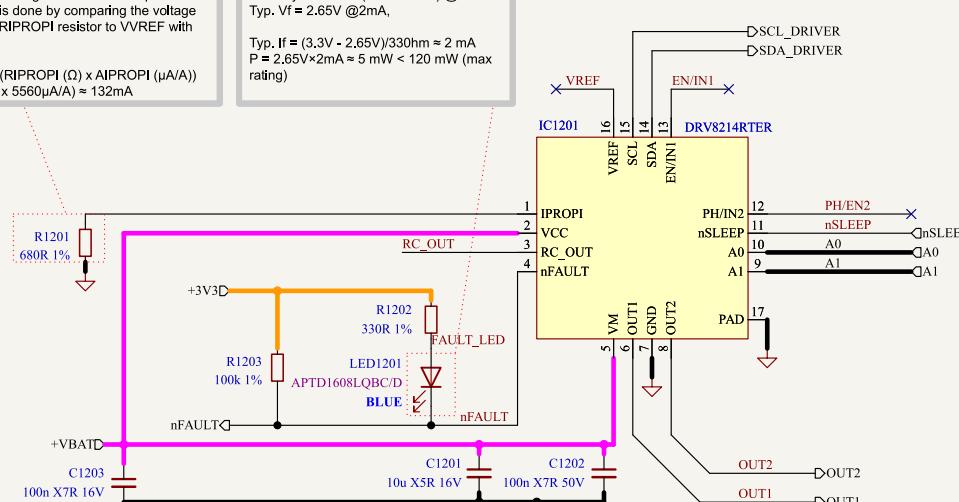

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP1201	nFAULT
RC_OUT	TP1202	RC_OUT
OUT1	TP1203	OUT1
OUT2	TP1204	OUT2
A0	TP1205	A0
A1	TP1206	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b> <b>Plume</b>	Preliminary
Board Name:	Project Name:	
<b>Plume</b>	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Designer:	Revision:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 0/	Maël Dagon, Paolo Germano	1.0
Supervisor:	Size:	Sheet:
	<b>A4</b>	<b>12 of 32</b>

# [13] Motor Control - Driver 13

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$


$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (milliluxela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

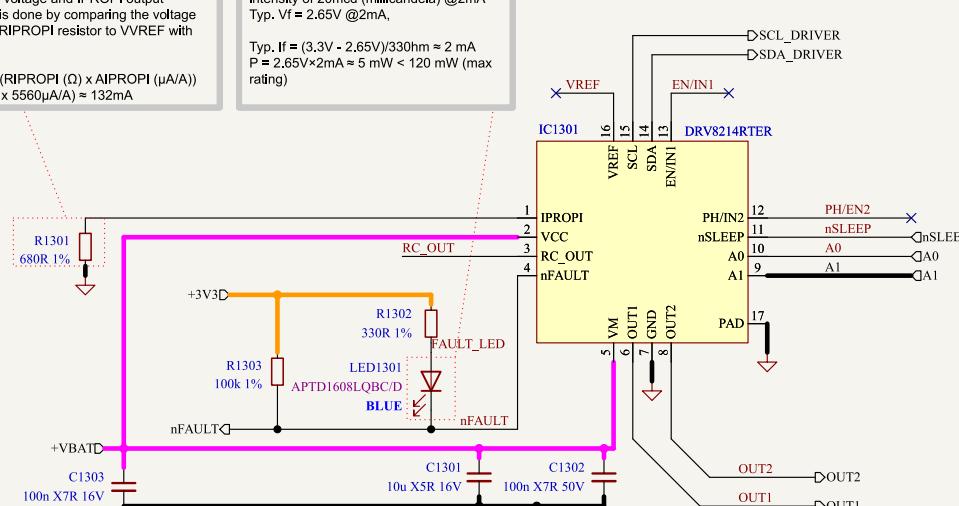

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP1301	nFAULT
RC_OUT	TP1302	RC_OUT
OUT1	TP1303	OUT1
OUT2	TP1304	OUT2
A0	TP1305	A0
A1	TP1306	A1

**Test Points**

Comments:	Laboratory:	Variant:
	EPFL	Preliminary
Board Name:	Project Name:	
Plume	Smart Footwear for Diabetic Foot Care	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Revision:	
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 1/	Supervisor:	Size:
	Maël Dagon, Paolo Germano	A4
		Sheet:
		13 of 32

# [14] Motor Control - Driver 14

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external I<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilambela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

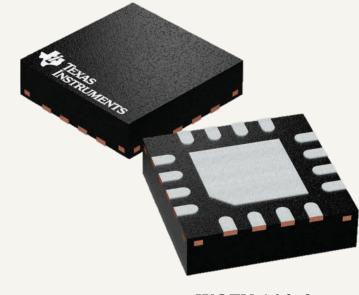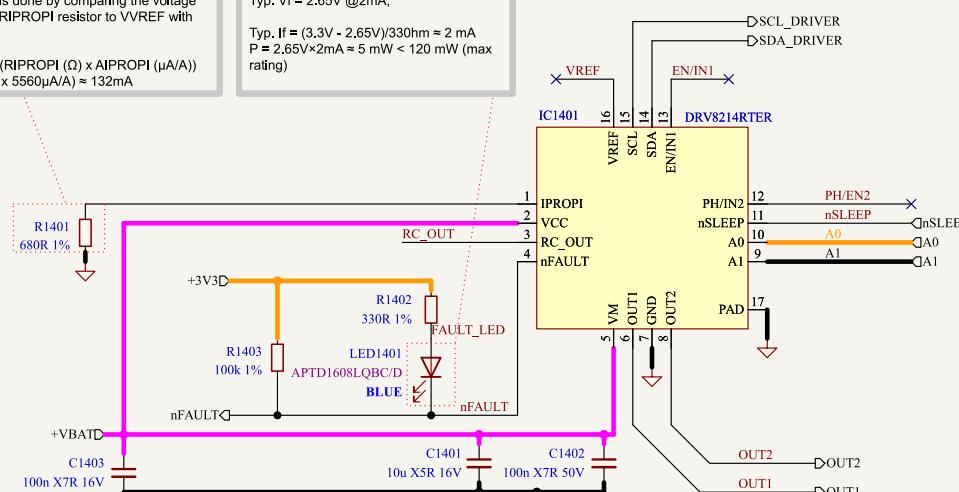

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP1401	nFAULT
RC_OUT	TP1402	RC_OUT
OUT1	TP1403	OUT1
OUT2	TP1404	OUT2
A0	TP1405	A0
A1	TP1406	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b>	Preliminary
Board Name: <b>Plume</b>	Project Name: <b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title: Motor Control - Driver	File Name: Motor_Control_Driver.kicad_sch	Designer: Théo Heng
Sheet Path: /Project Architecture/Motor Control - Drivers/Motor Control - Driver 2/	Supervisor: Maël Dagon, Paolo Germano	Date: 2025-04-05
	Size: <b>A4</b>	Revision: 1.0
		D

# [15] Motor Control - Driver 15

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilambela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

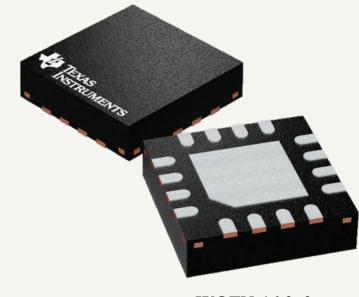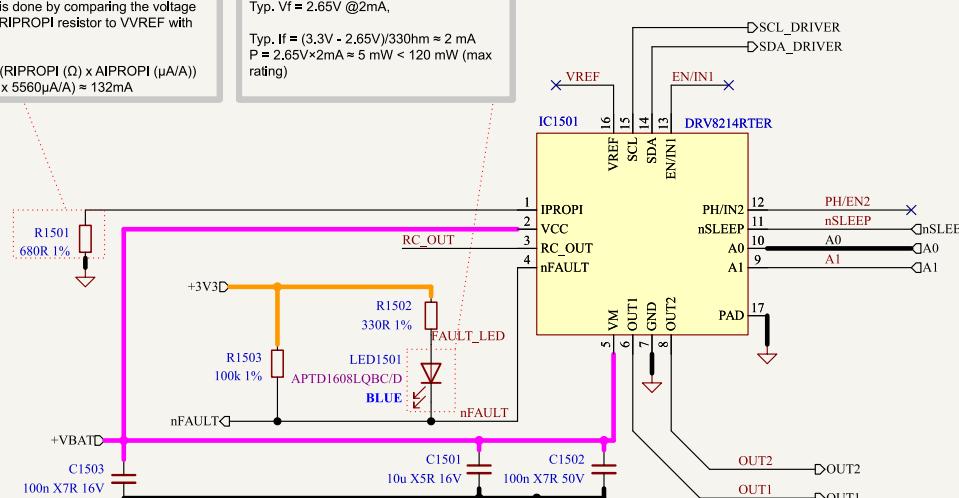

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP1501	nFAULT
RC_OUT	TP1502	RC_OUT
OUT1	TP1503	OUT1
OUT2	TP1504	OUT2
A0	TP1505	A0
A1	TP1506	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b> <b>Plume</b>	Preliminary
Board Name:	Project Name:	
<b>Plume</b>	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Designer:	Revision:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 3/	Maël Dagon, Paolo Germano	1.0
Supervisor:	Size:	Sheet:
	<b>A4</b>	<b>15</b> of <b>32</b>

# [16] Motor Control - Driver 16

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (ITRIP) is set through a combination of the VREF voltage and IPROPI output resistor (RIPROPI). This is done by comparing the voltage drop across the external RIPROPI resistor to VVREF with an internal comparator

$$\text{ITRIP (A)} = \text{VVREF (V)} / (\text{RIPROPI} (\Omega) \times \text{AIPROPI} (\mu\text{A}/\text{A}))$$



$$\text{ITRIP (A)} = 0.5V / (680\Omega \times 5560\mu\text{A}/\text{A}) \approx 132\text{mA}$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (milliluxela) @2mA  
Typ.  $V_f = 2.65V$  @2mA,

$$\text{Typ. } I_f = (3.3V - 2.65V) / 330\text{hm} \approx 2 \text{ mA}$$

$$P = 2.65V \times 2\text{mA} \approx 5 \text{ mW} < 120 \text{ mW} \text{ (max rating)}$$

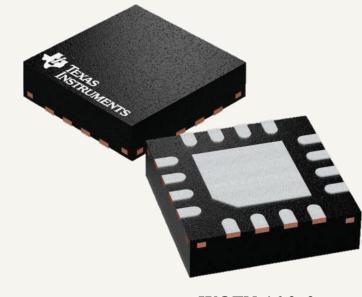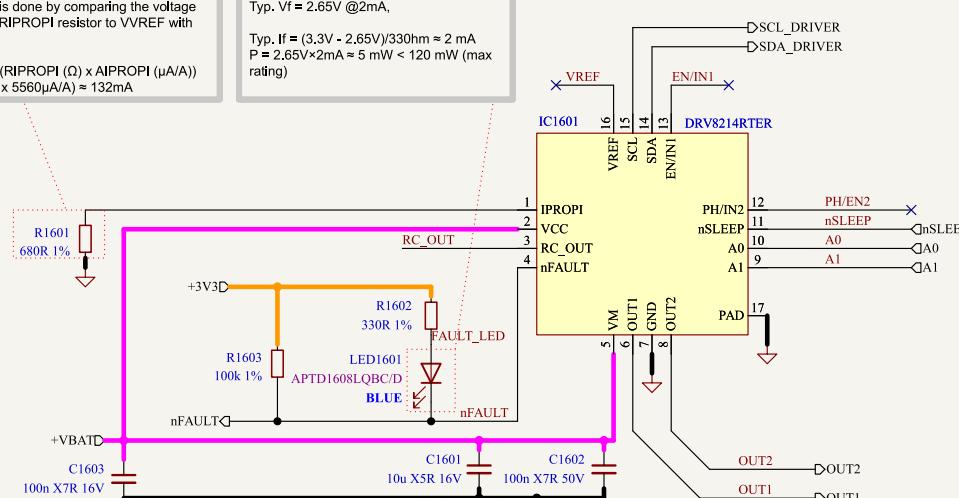

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP1601	nFAULT
RC_OUT	TP1602	RC_OUT
OUT1	TP1603	OUT1
OUT2	TP1604	OUT2
A0	TP1605	A0
A1	TP1606	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b> <b>Plume</b>	Preliminary
Board Name:	Project Name:	
<b>Plume</b>	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Designer:	Revision:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 4/	Maël Dagon, Paolo Germano	1.0
	Supervisor:	Size:
		<b>A4</b>
		Sheet:
		<b>16</b> of <b>32</b>

# [17] Motor Control - Driver 17

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilambela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

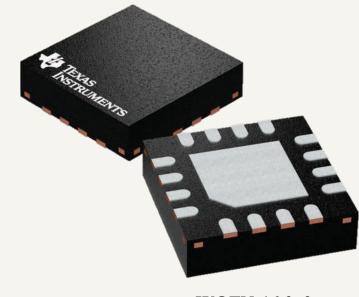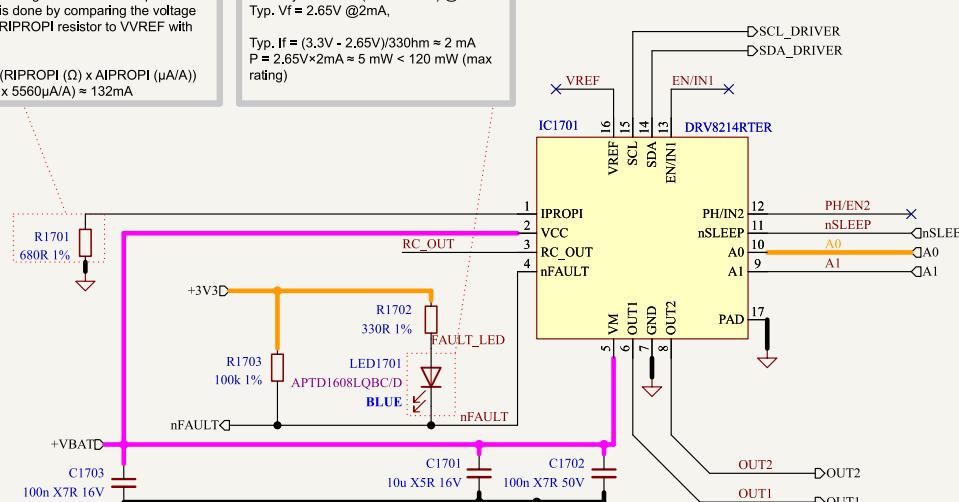

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP1701	nFAULT
RC_OUT	TP1702	RC_OUT
OUT1	TP1703	OUT1
OUT2	TP1704	OUT2
A0	TP1705	A0
A1	TP1706	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b> <b>Plume</b>	Preliminary
Board Name:	Project Name:	
<b>Plume</b>	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Designer:	Revision:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 5/	Maël Dagon, Paolo Germano	1.0
	Supervisor:	Size:
		<b>A4</b>
		Sheet: <b>17</b> of <b>32</b>

# [18] Motor Control - Driver 18

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external I<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilambela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

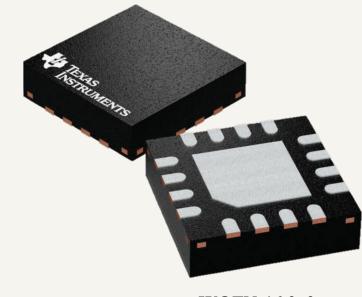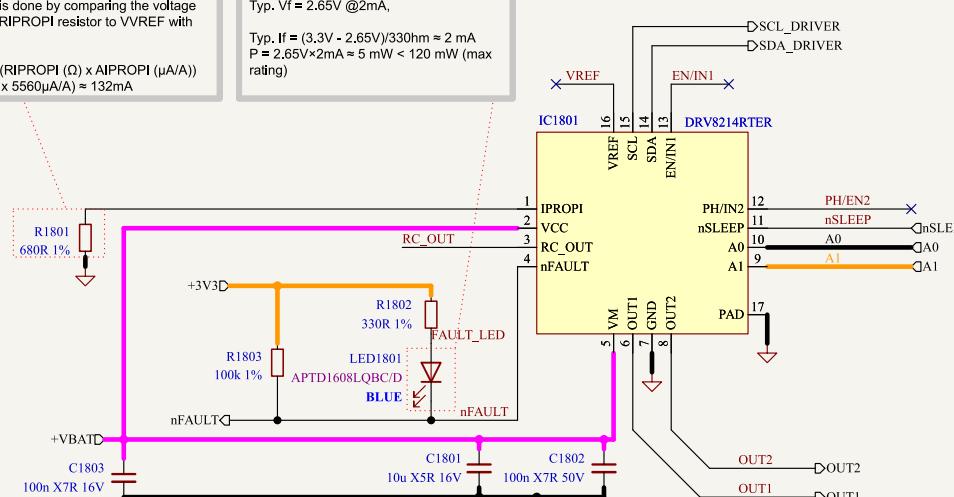

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP1801	nFAULT
RC_OUT	TP1802	RC_OUT
OUT1	TP1803	OUT1
OUT2	TP1804	OUT2
A0	TP1805	A0
A1	TP1806	A1

**Test Points**

Comments:	Laboratory:	Variant:
	EPFL	Preliminary
Board Name:		Project Name:
Plume		Smart Footwear for Diabetic Foot Care
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Supervisor:	Revision:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 6/	Maël Dagon, Paolo Germano	1.0
	Size:	Sheet:
	A4	18 of 32

# [19] Motor Control - Driver 19

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilambela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

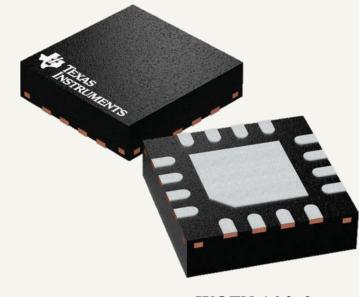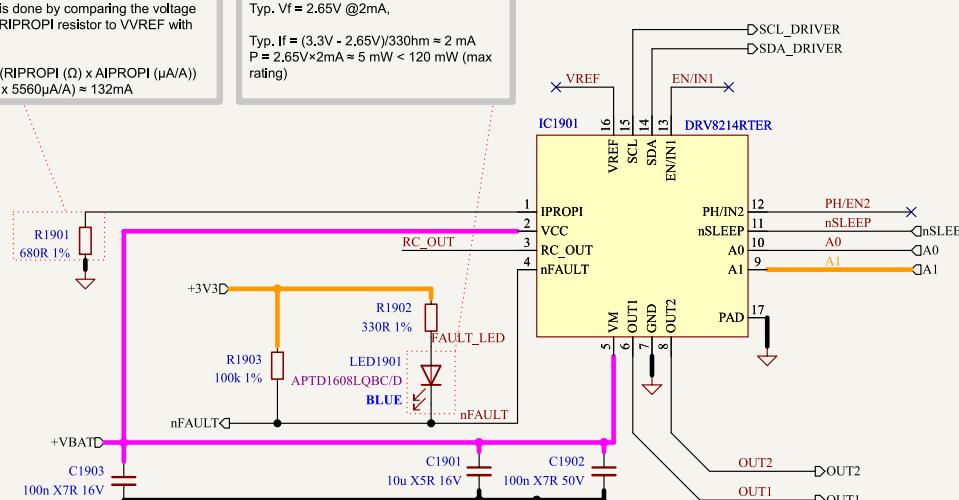

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP1901	nFAULT
RC_OUT	TP1902	RC_OUT
OUT1	TP1903	OUT1
OUT2	TP1904	OUT2
A0	TP1905	A0
A1	TP1906	A1

**Test Points**

Comments:	Laboratory:	Variant:
	EPFL	Preliminary
Board Name:	Project Name:	
Plume	Smart Footwear for Diabetic Foot Care	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Revision:	
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 7/	Maël Dagon, Paolo Germano	
Supervisor:	Size:	Sheet:
	A4	19 of 32

# [20] Motor Control - Driver 20

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millicandela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

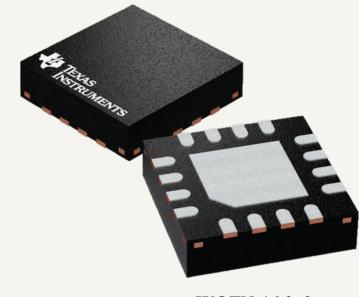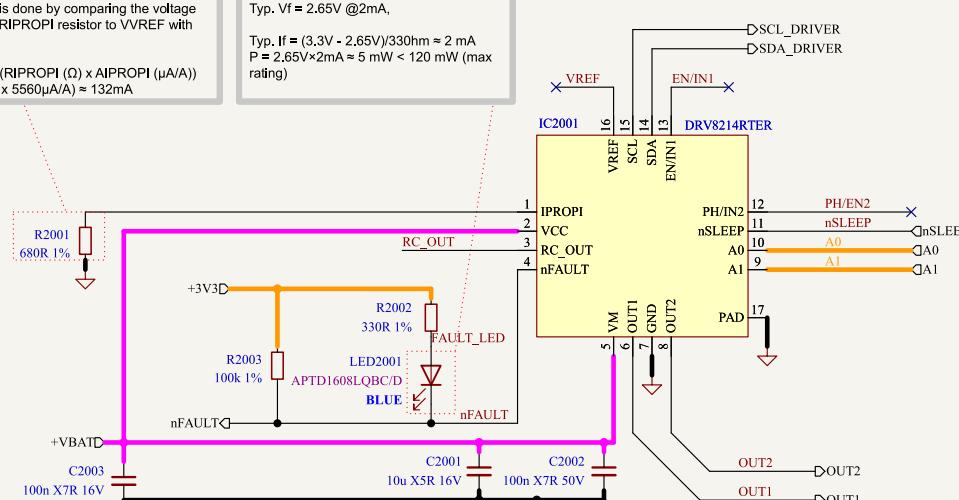

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2001	nFAULT
RC_OUT	TP2002	RC_OUT
OUT1	TP2003	OUT1
OUT2	TP2004	OUT2
A0	TP2005	A0
A1	TP2006	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b>	Preliminary
Board Name:	<b>Plume</b>	
Project Name:	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng
Sheet Path:	/Project Architecture/Motor Control - Drivers/Motor Control - Driver 8/	
Supervisor:	Size:	Revision:
Maël Dagon, Paolo Germano	<b>A4</b>	1.0
	<b>20</b>	of <b>32</b>

# [21] Motor Control - Driver 21

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (ITRIP) is set through a combination of the VREF voltage and IPROPI output resistor (RIPROPI). This is done by comparing the voltage drop across the external RIPROPI resistor to VVREF with an internal comparator

$$\text{ITRIP (A)} = \text{VVREF (V)} / (\text{RIPROPI} (\Omega) \times \text{AIPROPI} (\mu\text{A}/\text{A}))$$


$$\text{ITRIP (A)} = 0.5V / (680\Omega \times 5560\mu\text{A}/\text{A}) \approx 132\text{mA}$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilux) @2mA  
Typ.  $V_f = 2.65V$  @2mA,

$$\text{Typ. } I_f = (3.3V - 2.65V) / 330\text{hm} \approx 2 \text{ mA}$$

$$P = 2.65V \times 2\text{mA} \approx 5 \text{ mW} < 120 \text{ mW} \text{ (max rating)}$$

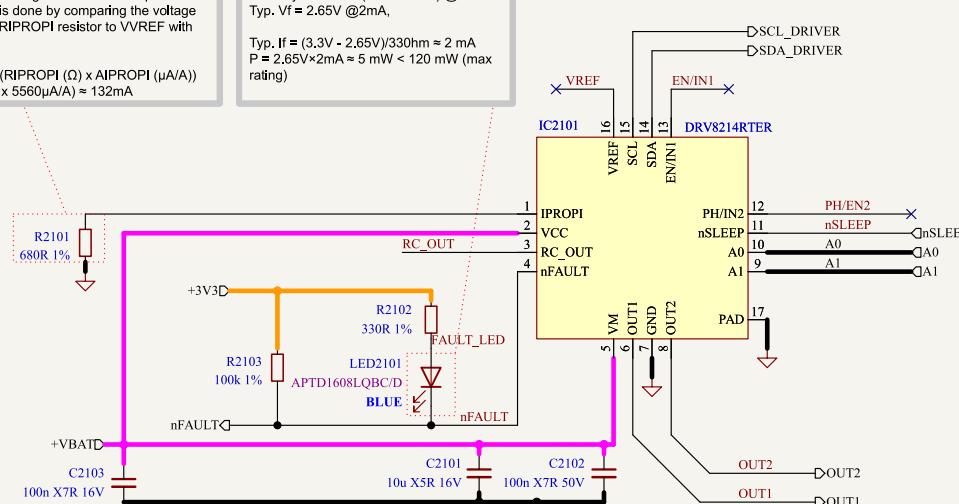
**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2101	nFAULT
RC_OUT	TP2102	RC_OUT
OUT1	TP2103	OUT1
OUT2	TP2104	OUT2
A0	TP2105	A0
A1	TP2106	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b> <b>Plume</b>	Preliminary
Board Name:	Project Name:	
<b>Plume</b>	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Designer:	Revision:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 9/	Maël Dagon, Paolo Germano	1.0
Supervisor:	Size:	Sheet:
	<b>A4</b>	<b>21</b> of <b>32</b>

# [22] Motor Control - Driver 22

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (ITRIP) is set through a combination of the VREF voltage and IPROPI output resistor (RIPROPI). This is done by comparing the voltage drop across the external RIPROPI resistor to VVREF with an internal comparator

$$\text{ITRIP (A)} = \text{VVREF (V)} / (\text{RIPROPI} (\Omega) \times \text{AIPROPI} (\mu\text{A}/\text{A}))$$



$$\text{ITRIP (A)} = 0.5V / (680\Omega \times 5560\mu\text{A}/\text{A}) \approx 132\text{mA}$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilux) @2mA  
Typ.  $V_f = 2.65V$  @2mA,

$$\text{Typ. If} = (3.3V - 2.65V) / 330\text{hm} \approx 2 \text{ mA}$$

$$P = 2.65V \times 2\text{mA} \approx 5 \text{ mW} < 120 \text{ mW} \text{ (max rating)}$$

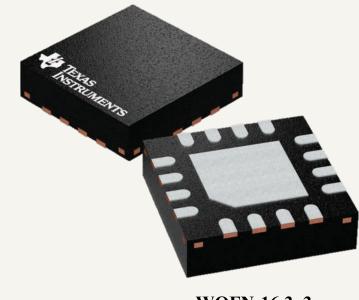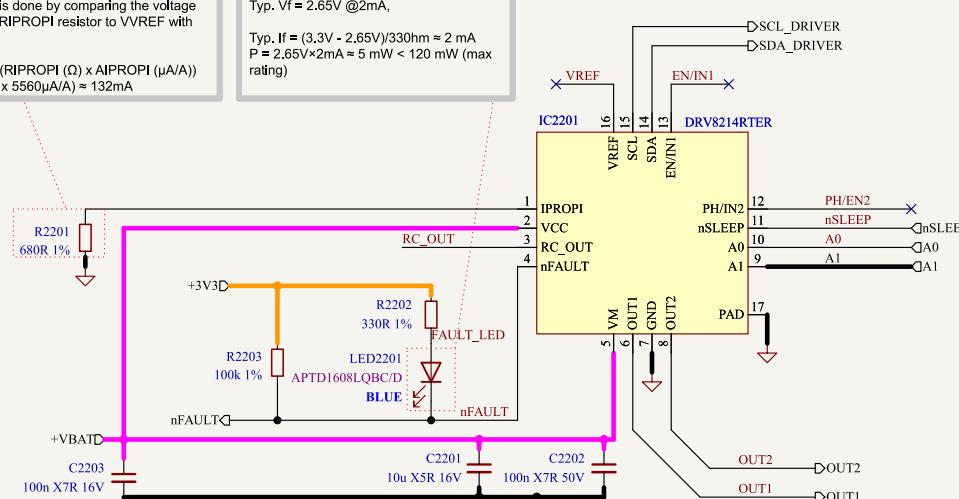

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2201	nFAULT
RC_OUT	TP2202	RC_OUT
OUT1	TP2203	OUT1
OUT2	TP2204	OUT2
A0	TP2205	A0
A1	TP2206	A1

**Test Points**

Comments:	Laboratory:	Variant:
	EPFL	Preliminary
Board Name:		Project Name:
Plume		Smart Footwear for Diabetic Foot Care
Sheet Title:	File Name:	Date:
Motor Control - Driver		2025-04-05
Designer:	Revision:	1.0
Supervisor:		Size:
Maël Dagon, Paolo Germano		A4
Sheet:		22 of 32

# [23] Motor Control - Driver 23

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilambela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

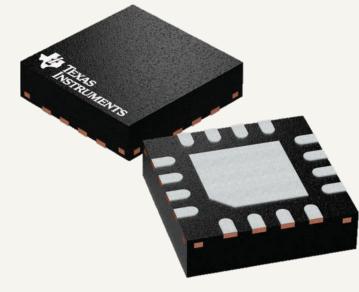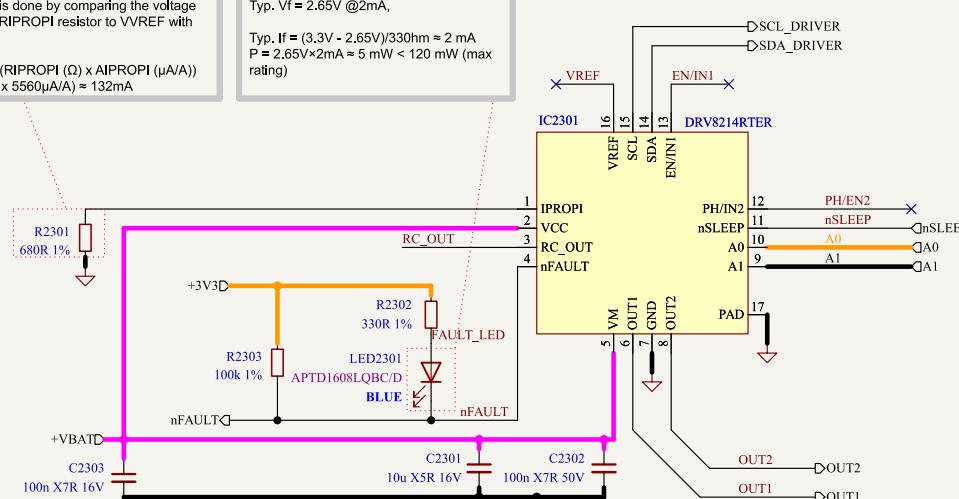

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2301	nFAULT
RC_OUT	TP2302	RC_OUT
OUT1	TP2303	OUT1
OUT2	TP2304	OUT2
A0	TP2305	A0
A1	TP2306	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b>	Preliminary
Board Name:	<b>Plume</b>	
Project Name:	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Designer:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng
Sheet Path:	/Project Architecture/Motor Control - Drivers/Motor Control - Driver 11/	
Supervisor:	Size:	Revision:
Maël Dagon, Paolo Germano	<b>A4</b>	<b>23</b> of <b>32</b>

# [24] Motor Control - Driver 24

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external I<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (milliluxela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V) / 330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

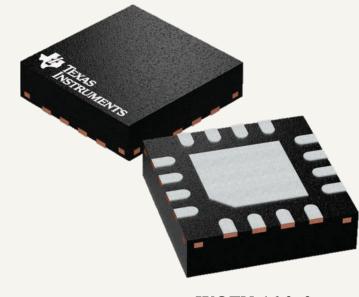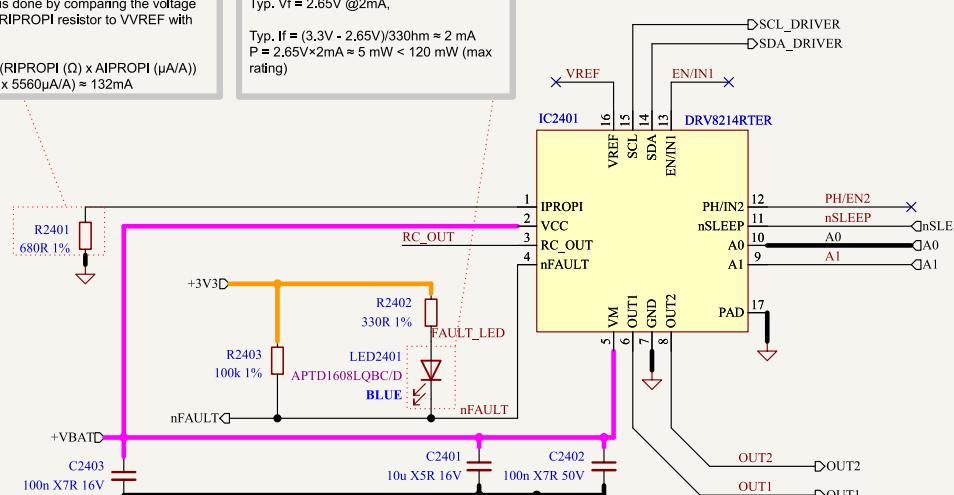

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2401	nFAULT
RC_OUT	TP2402	RC_OUT
OUT1	TP2403	OUT1
OUT2	TP2404	OUT2
A0	TP2405	A0
A1	TP2406	A1

**Test Points**

Comments:	Laboratory:	Variant:
	EPFL	Preliminary
Board Name:	Project Name:	
Plume	Smart Footwear for Diabetic Foot Care	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Supervisor:	Revision:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 12/	Maël Dagon, Paolo Germano	A4 1.0
	Sheet:	
	24	of 32

# [25] Motor Control - Driver 25

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilux) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

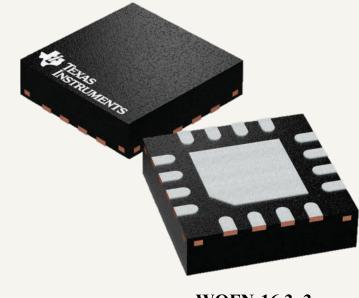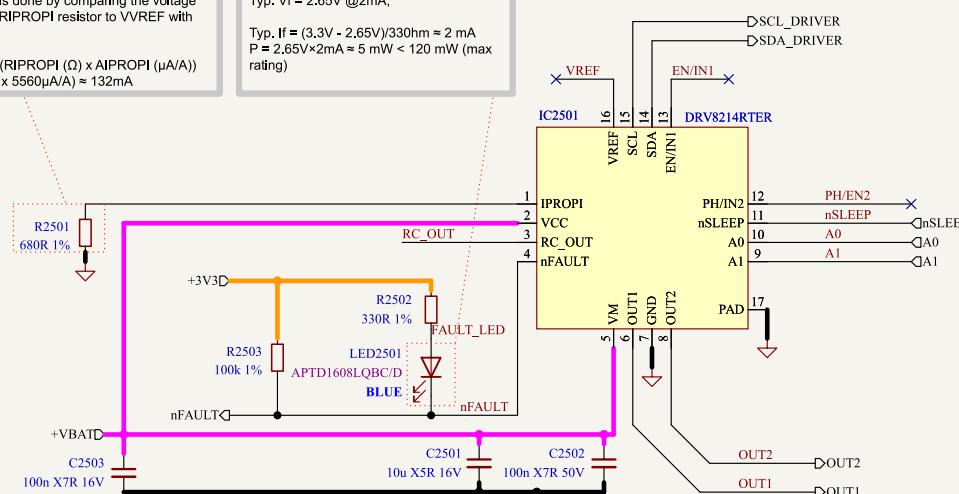

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2501	nFAULT
RC_OUT	TP2502	RC_OUT
OUT1	TP2503	OUT1
OUT2	TP2504	OUT2
A0	TP2505	A0
A1	TP2506	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b>	Preliminary
Board Name:	<b>Plume</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Supervisor:	Size:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 13/	Maël Dagon, Paolo Germano	<b>A4</b>
	Sheet:	<b>25</b> of <b>32</b>

# [26] Motor Control - Driver 26

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external I<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilux) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

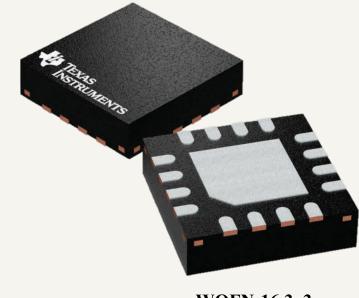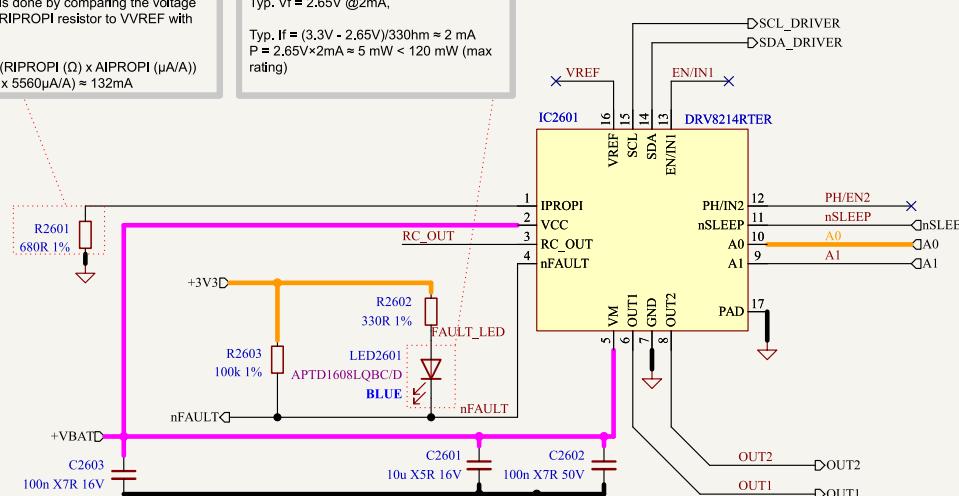

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2601	nFAULT
RC_OUT	TP2602	RC_OUT
OUT1	TP2603	OUT1
OUT2	TP2604	OUT2
A0	TP2605	A0
A1	TP2606	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b>	Preliminary
Board Name:	<b>Plume</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Supervisor:	Size:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 14/	Maël Dagon, Paolo Germano	<b>A4</b>
	Sheet:	<b>26</b> of <b>32</b>

# [27] Motor Control - Driver 27

**DESIGN NOTE - Bulk Capacitance:**  
Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:  
 • The highest current required by the motor system  
 • The capacitance of the power supply and ability to source current  
 • The amount of parasitic inductance between the power supply and motor system  
 • The acceptable voltage ripple  
 • The type of motor used (brushed DC, brushless DC, stepper)  
 • The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.



The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**  
The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$

$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**  
APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilambela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,  
Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm ≈ 2 mA  
P = 2.65V×2mA ≈ 5 mW < 120 mW (max rating)

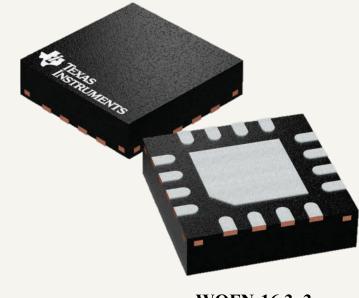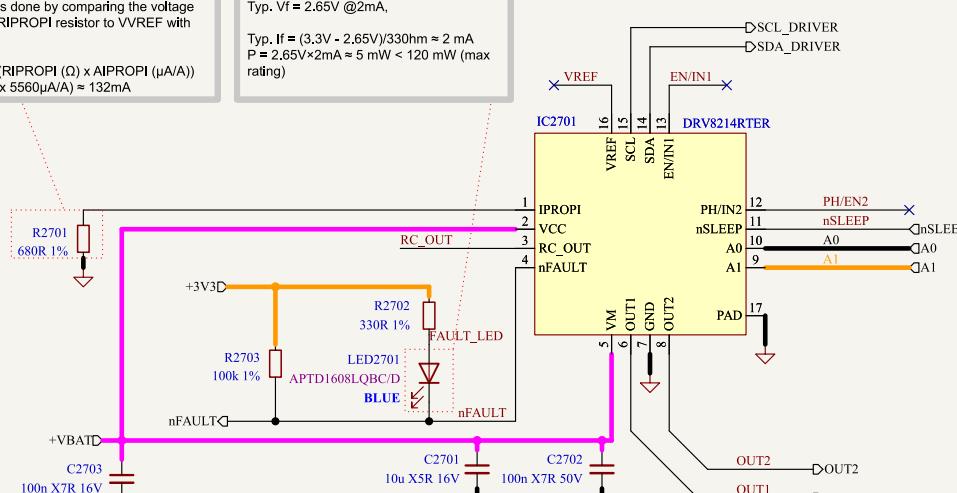

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2701	nFAULT
RC_OUT	TP2702	RC_OUT
OUT1	TP2703	OUT1
OUT2	TP2704	OUT2
A0	TP2705	A0
A1	TP2706	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b> <b>Plume</b>	Preliminary
Board Name:	Project Name:	
<b>Plume</b>	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Date:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng 2025-04-05
Sheet Path:	Designer:	Revision:
/Project Architecture/Motor Control - Drivers/Motor Control - Driver 15/	Maël Dagon, Paolo Germano	1.0
Supervisor:	Size:	Sheet:
	<b>A4</b>	<b>27 of 32</b>

# [28] Motor Control - Driver 28

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (ITRIP) is set through a combination of the VREF voltage and IPROPI output resistor (RIPROPI). This is done by comparing the voltage drop across the external RIPROPI resistor to VVREF with an internal comparator

$$\text{ITRIP (A)} = \text{VVREF (V)} / (\text{RIPROPI} (\Omega) \times \text{AIPROPI} (\mu\text{A}/\text{A}))$$



$$\text{ITRIP (A)} = 0.5V / (680\Omega \times 5560\mu\text{A}/\text{A}) \approx 132\text{mA}$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilux) @2mA  
Typ.  $V_f = 2.65V$  @2mA,

$$\text{Typ. } I_f = (3.3V - 2.65V) / 330\text{hm} \approx 2 \text{ mA}$$

$$P = 2.65V \times 2\text{mA} \approx 5 \text{ mW} < 120 \text{ mW} \text{ (max rating)}$$

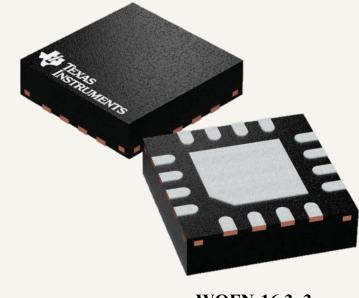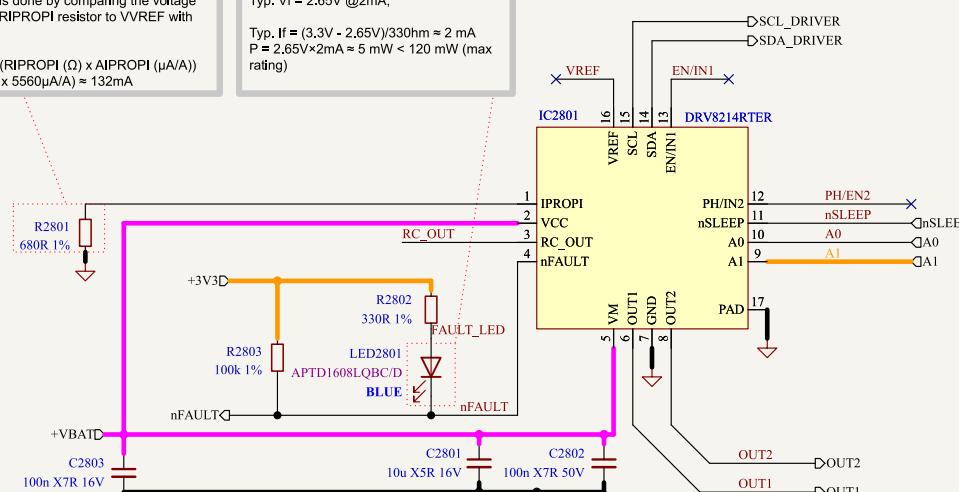

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2801	nFAULT
RC_OUT	TP2802	RC_OUT
OUT1	TP2803	OUT1
OUT2	TP2804	OUT2
A0	TP2805	A0
A1	TP2806	A1

**Test Points**

Comments:	Laboratory:	Variant:
	EPFL	Preliminary
Board Name: <b>Plume</b>		Project Name: <b>Smart Footwear for Diabetic Foot Care</b>
Sheet Title: <b>Motor Control - Driver</b>		Date: 2025-04-05
File Name: <b>Motor_Control_Driver.kicad_sch</b>	Designer: Théo Heng	Revision: 1.0
Sheet Path: <b>/Project Architecture/Motor Control - Drivers/Motor Control - Driver 16/</b>		Supervisor: Maël Dagon, Paolo Germano
Size: <b>A4</b>	Sheet: <b>28</b>	of <b>32</b>

# [29] Motor Control - Driver 29

**DESIGN NOTE - Bulk Capacitance:**

Having appropriate local bulk capacitance is an important factor in motor drive system design. Having more bulk capacitance is generally beneficial, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- The highest current required by the motor system
- The capacitance of the power supply and ability to source current
- The amount of parasitic inductance between the power supply and motor system
- The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- The motor braking method

The inductance between the power supply and motor drive system limits how the rate current can change from the power supply. If the local bulk capacitance is too small, the system responds to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

**DESIGN NOTE - IPROPI Resistor:**

The current regulation threshold (I<sub>TRIP</sub>) is set through a combination of the V<sub>REF</sub> voltage and I<sub>PROPI</sub> output resistor (R<sub>PROPI</sub>). This is done by comparing the voltage drop across the external R<sub>PROPI</sub> resistor to V<sub>REF</sub> with an internal comparator

$$I_{TRIP} (A) = V_{REF} (V) / (R_{PROPI} (\Omega) \times A_{PROPI} (\mu A/A))$$



$$I_{TRIP} (A) = 0.5V / (680\Omega \times 5560\mu A/A) \approx 132mA$$

**DESIGN NOTE - FAULT LED:**

APTD1608LQBC/D has a typical luminous intensity of 20mcd (millilambela) @2mA  
Typ. V<sub>f</sub> = 2.65V @2mA,

$$Typ. I<sub>f</sub> = (3.3V - 2.65V)/330hm \approx 2 mA$$

$$P = 2.65V \times 2mA \approx 5 mW < 120 mW (max rating)$$

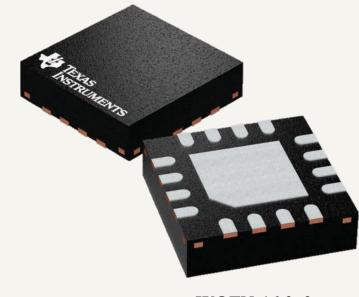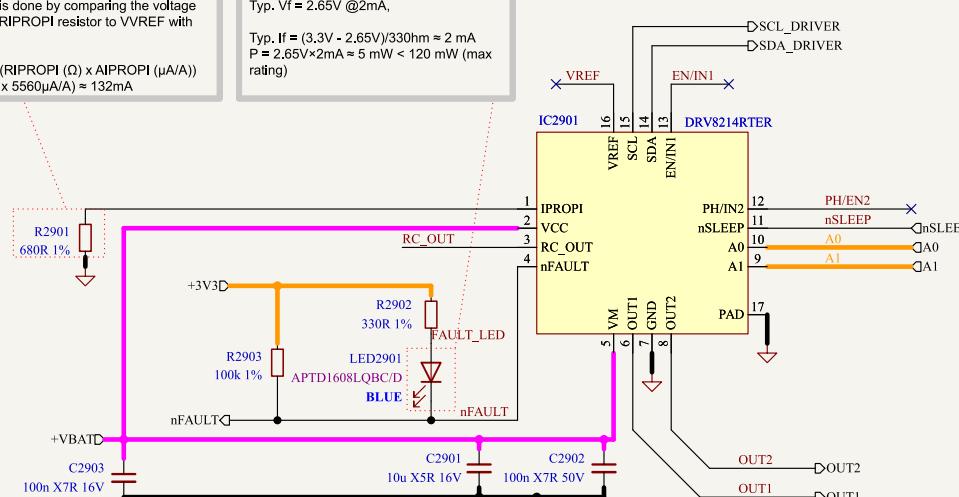

**DRV8214 2-A Brushed DC Motor Driver with Ripple Counting, Stall Detection, and Speed Regulation**

nFAULT	TP2901	nFAULT
RC_OUT	TP2902	RC_OUT
OUT1	TP2903	OUT1
OUT2	TP2904	OUT2
A0	TP2905	A0
A1	TP2906	A1

**Test Points**

Comments:	Laboratory:	Variant:
	<b>EPFL</b>	Preliminary
Board Name:	<b>Plume</b>	
Project Name:	<b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:	File Name:	Designer:
Motor Control - Driver	Motor_Control_Driver.kicad_sch	Théo Heng
Sheet Path:	/Project Architecture/Motor Control - Drivers/Motor Control - Driver 17/	
Supervisor:	Size:	Revision:
Maël Dagon, Paolo Germano	<b>A4</b>	<b>29</b> of <b>32</b>


# [30] Misc - Mounting Holes

## DEBUG NOTE:

HOLE 1 is connected to GND and can be very useful if used as a GND reference for multimeter debug.

## DESIGN NOTE:

Fiducials are omitted due to space constraints and are in any case unnecessary in the foreseeable future because manual assembly is required since the DRV8214 ICs, among others, are unavailable on JLCPCB parts store.

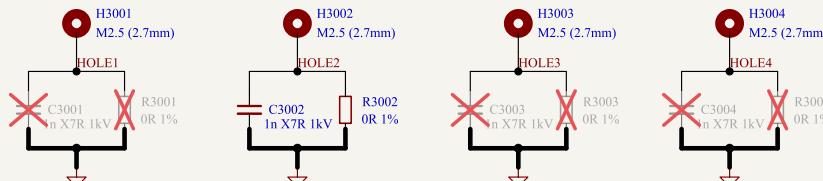

Mechanical Mounting holes

## DESIGN NOTE:

In general, do not ground mounting holes that are connected to chassis if there is a risk that the chassis sends current into the PCB and damages it or if the PCB works with high voltage and there is a risk for the user which is in contact with the chassis.


For a PCB in a metallic enclosure, the enclosure can act like a big antenna. The cavities (space between the ground plane on the PCB and the bottom metallic plane of the enclosure) cause capacitive coupling. This is because we have two metallic planes separated by a dielectric, at a separated potential, causing common mode noise, and result in the noise being amplified by the metal enclosure. Ideally, in this case, the case should be grounded. But the grounding will cause multiple return paths if multiple mounting holes are connected to GND. In that case, some current will flow in the enclosure and can give a little shock when the user touches it. This can be fine for small battery operated devices.

The best option is therefore to ground only one mounting hole.

Comments: Inspired by Amulet controller Schematics by Vincent Nguyen  How to connect mounting holes. PCB Mounting Holes	Laboratory:    	Variant: Preliminary
Board Name:  <b>Plume</b>	Project Name:  <b>Smart Footwear for Diabetic Foot Care</b>	
Sheet Title:  Misc - Mounting Holes	File Name:  Misc_Mounting_Holes.kicad_sch	Designer:  Théo Heng
Sheet Path:  /Project Architecture/Misc - Mounting Holes & Fiducials/	Supervisor:  Maël Dagon, Paolo Germano	Date: 2025-04-05      Revision: 1.0

# [31] Power - Sequencing

NAME	SOURCE	LEVEL
+??V	SOURCE NAME	??V ± ??%
+??V	SOURCE NAME	??V ± ??%
+??V	SOURCE NAME	??V ± ??%
+??V	SOURCE NAME	??V ± ??%
+??V	SOURCE NAME	??V ± ??%

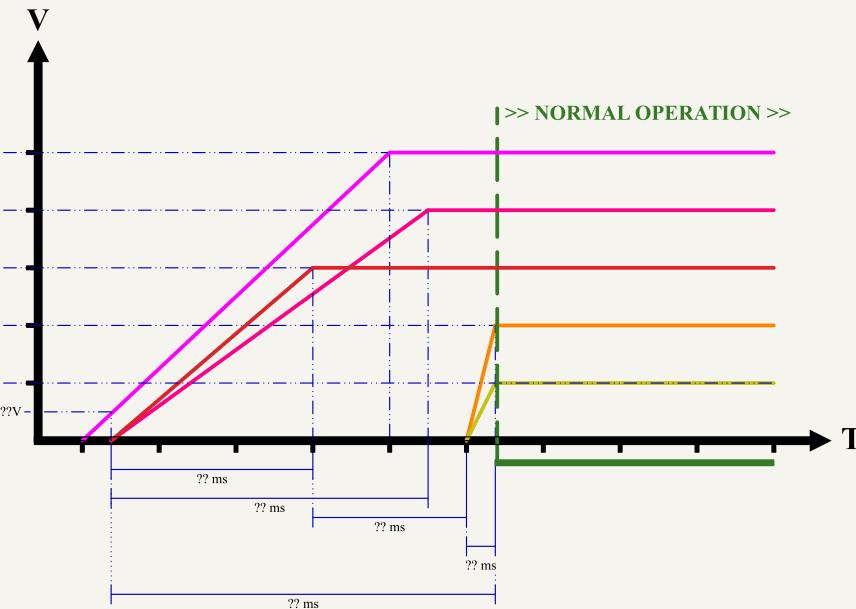

## TO BE TESTED

Comments:	Laboratory: Integrated Actuators Laboratory	Variant: Preliminary
	Board Name: <b>Plume</b>	Project Name: Smart Footwear for Diabetic Foot Care
Sheet Title: Power - Sequencing	File Name: Power - Sequencing.kicad_sch	Designer: Théo Heng
Sheet Path: /Power - Sequencing/	Supervisor: Maël Dagon, Paolo Germano	Date: 2025-04-05
		Revision: 1.0
		Size: <b>A4</b>
		Sheet: <b>31</b> of <b>32</b>

# [32] Revision History

A	DD.MM.YYYY - xxx Revision Variant: xxx	A			
B	-	-	-	-	B
C	-	-	-	-	C
D	-	-	-	-	D

Comments:	Laboratory: <b>Integrated Actuators Laboratory</b>	Variant: Preliminary
	Board Name: <b>Plume</b>	Project Name: <b>Smart Footwear for Diabetic Foot Care</b>
Sheet Title: Revision History	File Name: Revision History.kicad_sch	Designer: Théo Heng
Sheet Path: /Revision History/	Supervisor: Maël Dagon, Paolo Germano	Date: 2025-04-05
		Revision: 1.0
	Size: <b>A4</b>	Sheet: <b>32</b> of <b>32</b>