### Lecture Module - Data Acquisition

ME3023 - Measurements in Mechanical Systems

Mechanical Engineering
Tennessee Technological University

Module 8 - Data Acquisition



#### Module 8 - Data Acquisition

- Topic 1 Analog to Digitial Conversion
- Topic 2 DAQ Hardware and Applications
- Topic 3 Sampling and Aliasing

#### Topic 1 - Analog to Digitial Conversion

- DAQ and Computer Storage
- Number Types
- Analog to Digital Conversion and DAQ
- Activity: ADC Resolution Calculation

# DAQ and Computer Storage

#### Types of Signals:


- Analog magnitude is continuous in time
- Discrete Time magnitude at points in time
  - sampling at repeated time intervals
- Digital exists in discrete points in time
  - magnitude is also discrete

Sampling and Aliasing

lumber Types nalog to Digital Conversion and DAQ ctivity: ADC Resolution Calculation

# DAQ and Computer Storage

A data acquisition system is the portion of a measurement system that quantifies and stores data. - Theory and Design of Mechanical Measurements

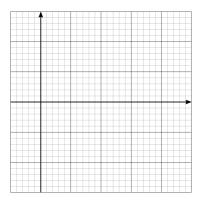

- Integers
  - Binary
  - Decimal
  - Hexadecimal
- Fixed Point
- Floating Point

Dinami	Decimal	Hexadecimal
Binary	Decimai	пехацесітаі
0	0	0
1	1	1
10	2	2
11	3	3
100	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	10	A
	11	В

Binary	Decimal	Hexadecimal
	12	С
	13	D
	14	Е
	15	F
	16	
	17	
	18	
	19	
	20	
	21	
	22	
	23	


Binary	Decimal	Hex.
0	0	0
1	1	1
10	2	2
11	3	3
100	4	4

Binary		Decimal	Hex.
	0	0	0
	1	1	1
	10	2	2
	11	3	3
	100	4	4

AQ and Computer Storage umber Types nalog to Digital Conversion and DAQ ctivity: ADC Resolution Calculation

### Number Types

Standard storage of a floating point value in memory sign exponent (8 bits) fraction (23 bits)

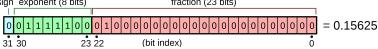

DAQ and Computer Storage lumber Types unalog to Digital Conversion and DAQ uctivity: ADC Resolution Calculation

DAQ and Computer Storage lumber Types snalog to Digital Conversion and DAQ sctivity: ADC Resolution Calculation

Integer	Floating Point	Fixed Point
Pros:	Pros:	Pros:
Cons:	Cons:	Cons:
Examples:	Examples:	Examples:

## Analog to Digital Conversion and DAQ

In electronics, an analog-to-digital converter (ADC, A/D, or A-to-D) is a system that converts an analog signal, such as a sound picked up by a microphone or light entering a digital camera, into a digital signal. An ADC may also provide an isolated measurement such as an electronic device that converts an analog input voltage or current to a digital number representing the magnitude of the voltage or current. Typically the digital output is a two's complement binary number that is proportional to the input, but there are other possibilities.






wikipedia, image

DAQ and Computer Storage Number Types Analog to Digital Conversion and DAQ Activity: ADC Resolution Calculation

# Analog to Digital Conversion and DAQ

# Activity: ADC Resolution Calculation

It is important to realize the potential for data loss resulting in a reduced quality measurement based on the parameters of the analog to digital conversion process. This issue can occur when designing systems around a low-level analog to digital converter as well as when using high-end DAQ equippment.

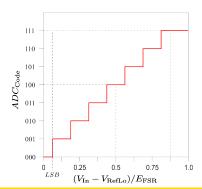

## Activity: ADC Resolution Calculation

Activity: - Consider setting up a data acquisition system to record pressure measurements in a vehicle system. Multiple sensors are available, and the DAQ device has different operating modes. Each sensor and DAQ mode has a different input and output signal ranges and different sampling frequencies.

#### Signal

Measure Variable: Pressure (psi) in automobile tire

Expected Range: 0-100 psi

Sensor+Trans	sducer Input Range	(psi) Output Range (vo	lts)
Α	0-200	0-3.0	
В	0-120	0-0.50	
DAQ Mode	Input Range (volts)	ADC Resolution	
1	0 to 3.3	10 bit	
2	0 to 10	12 bit	



## Activity: ADC Resolution Calculation

#### Activity (continued):

Choose a sensor+transducer pair and an appropriate DAQ mode to record the signal shown with best (lowest) possible resolution. Support your choices with a resolution calculation for smallest detectable voltage (volts) and smallest detectable pressure (psi)

② Approximate the sensivity of the measurement system in units of  $\frac{psi}{volts}$ .

#### Topic 2 - DAQ Hardware and Applications

- Signal Types and DAQ
- EMI Considerations
- Available Hardware
- Software Integration

# Signal Types and DAQ

Most data acquisition devices and systems measure and record analog voltage signals and possibly additional signal types. Signal generation may also be a feature on some systems.

A voltage signal requires a common reference or ground.

#### Signal Sources:

- Grounded or Ground-Referenced
- Ungrounded or Floating

#### Measurement (DAQ) Systems:

- Common Ground
- Common Mode Voltage
- Isolated Ground

#### NI, Digilent

# Signal Types and DAQ

Most data acquisition devices and systems measure and record analog voltage signals and possibly additional signal types. Signal generation may also be a feature on some systems.

#### 2 Major Configurations:

Single-Ended Signals
 The signal is measured as a voltage between a single conductor and the ground which must be carried on a separate conductor or wire.

Double-Ended (Differential) Signals

The signal is measured as the difference between two voltages (double) carried on separate conductors, or wires. Typically a **ground** is shared between the two devices requiring a third conductor.

# Signal Types and DAQ

Single-Ended Signals	Double-Ended Signals
Pros:	Pros:
Cons:	Cons:
Examples:	Examples:

### **EMI** Considerations

Electromagnetic interference (EMI), also called radio-frequency interference (RFI) when in the radio frequency spectrum, is a disturbance generated by an external source that affects an electrical circuit by electromagnetic induction, electrostatic coupling, or conduction.

A combination of naturally occuring and human made sources of interference is always present. The total EMI affecting a system is determined by the local conditions as well as global environmental influences.

#### Sources of EMI:

- Televsion transimission, celular networks, AM FM radio
- Lightening storms, solar activity
- Power transmission Lines
- Electronic devices such as computers, power supplies, motors, welders
- Intentional (weaponized) EMI



### **EMI** Considerations

In data acquisition, electromagnetic interference (EMI) can cause reduction of signal quality and data loss due in the form of noise and or drift.

Consider the case of an analog signal transmitted from a sensor to a DAQ device. What can be done to avoid issues associated with EMI?

Methods of reducing EMI affects:

- Proximity reduce length of signal conductors to minimum, if possible locate on same PCB or in same enclosure
- Differential signal double ended signals are preferred when EMI is expected and close proxity is not available
- Noise rejection cables/wires twisted pair, foil sheild, wire braided sheild, combos

### Available Hardware

- National Instruments
- Measurement Computing
- dSPACE
- Arduino or other

### Available Hardware

- National Instruments
- Measurement Computing
- dSPACE
- Arduino or other

Signal Types and DAG EMI Considerations EMI Considerations Available Hardware Software Integration

#### Available Hardware

Signal Types and DAG EMI Considerations EMI Considerations Available Hardware Software Integration

# Software Integration

Signal Types and DAG EMI Considerations EMI Considerations Available Hardware Software Integration

# Software Integration

### Topic 3 - Sampling and Aliasing


- Sampling
- The Aliasing Phenomenon
- Example by Hand
- MATLAB Example

#### Sampling

The Aliasing Phenomenon The Aliasing Phenomenon MATLAB Example

## Sampling

... A discrete time signal usually results from the sampling of a continuous variable at repeated finite time intervals. ...

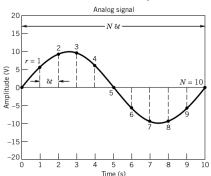

Discrete time signal		
{y(rδt)}		
r	Discrete data	
0	0	
1	5.9	
2	9.5	
3	9.5	
4	5.9	
5	0	
6	-5.9	
7	-9.5	
8	-9.5	
9	-5.9	
10	0	

Text, Figure: Theory and Design for Mechanical Measurements Ch. 7 👝 🔻 🥙 🔞 🔻 😩 🔻 🛫 🗸

#### Sampling

The Aliasing Phenomenon The Aliasing Phenomenon MATLAB Example

## Sampling

## The Aliasing Phenomenon


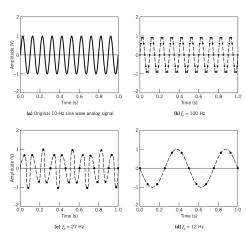


Figure: Theory and Design for Mechanical Measurements Ch. 7

Sampling
The Aliasing Phenomenon
The Aliasing Phenomenon
MATLAB Example

## Example by Hand

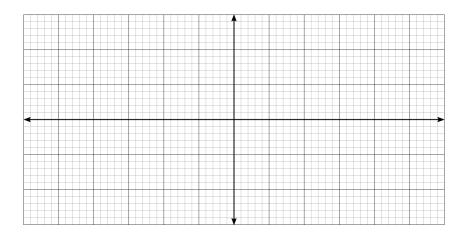

lmage: T.Hill

## Example by Hand

### MATLAB Example

```
% ME3023 - Tennessee Technological University
% Tristan Hill - October 10, 2019 - April 14,
   2021
% Data Acquisition Topic 3 - Sampling and
   Aliasing
clear variables; close all; clc
% simulate a continuous signal
A1=5: f1=3:
w1=2*pi*f1;
dt_sim=0.001; t_stop=6;
t_sim=0:dt_sim:t_stop;
v_sim=A1*sin(w1*t_sim);
```

### MATLAB Example

```
% simulate sampling the signal
dt_sam = 0.3;
t_sam=0:dt_sam:t_stop;
y_sam=A1*sin(w1*t_sam);

% show the figure
figure(1); hold on
plot(t_sim,y_sim,'-',t_sam,y_sam,'o')
axis([0 t_stop -1.2*A1 1.2*A1])
grid on
```

MATLAB code: T. Hill