Remotely Connected Electric Field Generator for Particle Separation in a Fluid Team May1612

Dee, Timothy timdee@iastate.edu

Long, Justin jlong@iastate.edu

McDonnel, Brandon bmcdonnel@iastate.edu

April 17, 2016

Contents

1	Introduction	3			
2	Project Definition 2.1 Deliverables	3 3 3			
3	Functional Decomposition 3.1 Raspberry Pi	3 3 4 5 5 5 5			
4	Software Components 4.1 Web Interface 4.2 Web Server 4.3 Modifying Frequency 4.4 Controlling Voltage 4.4.1 Programmable Gain Amplifier(PGA)	5 5 6 7 7 7			
5	Cost Considerations	7			
6	6.1 Testing Process 6.1.1 Theorize a design 6.1.2 Acquire necessary components 6.1.3 Implement design 6.1.4 Understand problems 6.1.5 Return to step 1 6.2 Testing Results 6.3 Known Issues 6.3.1 B23 6.4 other?	77 77 78 88 88 88 88 88 88 88			
7	Concluding Remarks	8			
A	Operation Manual A.1 Setup A.2 Demo	9 9			
В	B.1 Frequency Control B.2 Voltage Control B.2.1 Digital Potentiometer B.2.2 Transistor switch	10 10 10 10 10			
C	Other Considerations 1				
D	Code	12			

Abstract

This document details the design and implementation of a remotely connected electric field generator. The goal of this design is to provide an easy interface for manipulating the output voltage and frequency of a circuit remotely in order to generate an electric field. This electric field, when applied to a fluid over a long period of time will cause particles in the fluid to separate. The hardware and software components used to accomplish the aforementioned goal are described in detail.

1 Introduction

New research has shown that certain particles may be separated from fluids through dielectrophoresis. This process involves applying an electric field to a fluid. The field may be manipulated in order to attract or repel certain particles. The particles the electric field will attract or repel depends on characteristics of the electric filed which may be controlled by varying the voltage and frequency of the electronics driving the field.

This technology has many useful applications in health care. The proposed end use of this equipment is for separating particles bodily fluids, such as spinal fluid. Such medial applications could be useful in testing or filtering these fluids.

Being capable of separating though the application of an electric field would represent an advancement over existing solutions. It introduces a new method of testing which could be more precise when compared to existing technologies.

2 Project Definition

In our implementation, an electric field is applied to two metal plates. Through varying the voltage and frequency applied to these plates, the properties of the electric field may be changed.

Our job is to construct a system containing an electronic circuit capable of providing the necessary voltages and frequencies required to drive a pair of metal plates. This system must enable the circuit to be controllable through the use of a web interface. In addition, a small form factor must be maintained.

The system must be able to generate up to a 60 V peak-peak sine wave with user-controlled variable frequency from 10 kHz to 1 MHz.

2.1 Deliverables

There are four items which must be constructed for this project:

For the analog circuit components, functionality of the circuit will be tested using an oscilloscope to verify the requirements have been satisfied. This method can also be used to ensure the output signal contains minimal amounts of noise and distortion.

The construction of this device is the first phase of the project. After the completion of this component, the device will be used to experiment with particle separation in various fluid types. These experiments constitute the remainder of the project. For these experiments our advisor at Minetronix, John Pritchard, will be the main source of guidance and testable material.

2.2 Constraints

Constraints on this project fall within the size, voltage, and portability domains.

The size requirements of this project are directly related to the portability of the final design. The design requirements specify this system must be easily and quickly moved around from one workstation to another. The maximal allowed size is approximately the size of a backpack with smaller sizes being more desirable but not explicitly required. With the electronics currently being used, these requirements will easily be met.

Another constraint arises from the power supply requirements. The power supply must deliver at least 60V DC in order to feed the amplifier circuit. Due to this, the final design requires a power brick similar to one which would be used to charge a laptop. Importantly, this would require the device to be plugged into a wall outlet. This is not seen as an issue. Every location this device will operate will most likely have other equipment with similar power requirements.

In order to use this system, there are other items which are required apart from the device itself. The first requirement is a network connection between the device and a computer. This connection is necessary to be able to interact with the web server hosted on the Raspberry Pi. Without a computer to interact with this system there is no practical means of utilizing the device's functionality. The next requirement, as mentioned above, is a network connection to the Raspberry Pi. The third system requirement is a standard wall outlet to accommodate the power needs of the system.

2.3 System Analysis

A user will interface with this system though the web interface. This web interface may be accessed by typing the IP address of the device into a standard web browser. The interface will allow the user to choose the values for Voltage and Frequency. Once these values have been entered, update scripts on the Raspberry Pi will set the voltage and frequency output of the circuit according to the values entered.

3 Functional Decomposition

This system has four fundamental functional blocks. These include the Web Interface, Raspberry Pi, Minigen Signal Generator, and Amplifier Circuit. The project will be described in terms of these components and their interactions.

3.1 Raspberry Pi

The Raspberry Pi will act as the bridge between the user and the circuit. The Raspberry Pi will host a web server allowing the user to interact with the system. Based on the results of this user interaction, the Raspberry Pi will update the state of the GPIO pins. The GPIO pins connect to a circuit causing the output to change based on their state.

In addition to hosting the web server the Raspberry pi is used to communicate with the Minigen Signal Generator and amplifier circuit. This communication is accomplished via the Raspberry Pi's SPI interface and GPIO pins respectively.


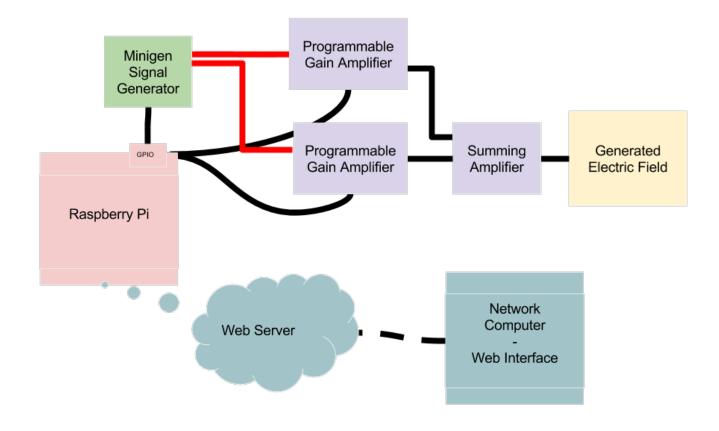


Figure 1: Block Diagram provides an overview of the system components.

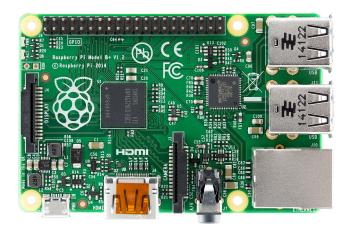


3.2 Minigen

The Minigen Function Generator device controls the frequency output by the circuit. Varying the frequency is accomplished by writing to registers present on the Minigen. This communication is completed over SPI between the Raspberry Pi and the Minigen. The frequency produced is a function of the values contained in the Minigen's frequency registers.

The Minigen outputs a waveform from -0.5V to 0.5V. This waveform may be a triangle, square, or sine wave. The voltage output by the Minigen is not variable. Given that the design specification requires a variable voltage, the voltage needs to be adjusted separately. Accordingly, the output of the Minigen is supplied to the input of the amplifier circuit.

The Minigen is controlled by setting five registers, two registers for frequency, two for phase shift and one as a control. There exists no need for phase shifting to meet the design requirements, however the frequency and control registers are needed. By having two frequency registers, data can be sent to one register while it is not in use, followed by a write to the control register to use this register. This allows for a nicer gradient, because the frequency will not change until the entire frequency register is written. The control register also allows for changing between sine, square and triangle waveforms. In the event that the frequency needs to be finely adjusted, this system utilizes the functionality of the control register to modify the way in which writes to the frequency registers are received. The way writes are received by the frequency registers can be varied between two modes. In one mode, two consecutive 14-bit writes to a fre-

quency register are used. In the other mode, one write to the lower 14-bits of the 28-bit frequency register is used. This functionality affords the ability to accurately dial in small changes to the register values quickly.

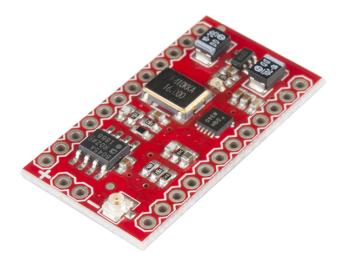

Until this point, several functional benefits of the Minigen Signal Generator have been discussed. An additional benefit which increases the practicality of this solution is the Minigen's small form factor. The small chip size allows the Minigen to fit easily into a small case with the Raspberry Pi. This is consistent with the system's requisite small footprint.

3.3 Amplifier Circuit

As mentioned in the previous section, the output of the Minigen Function Generator is applied to the amplifier circuit as input. The amplifier also receives input from the GPIO pins of the Raspberry Pi. These GPIO pins act as switches which help to control the output voltage. Based on these inputs the amplifier circuit manages the overall voltage and frequency output.

The project requirements state that the system must generate signals which range from $1V_{pp}$ to $60V_{pp}$. To accomplish this, various circuit components were used to accomplish the amplification. The overall scheme is to split the output voltages into three different ranges. One component is used to adjust the voltage within each of the ranges while other comp are used to change the range the voltage adjuster is acting within.

A schematic illustrating the amplifier circuit as a whole is

3.3.1 Summing Amplifier

The summing amplifier is the last component in the amplifier circuit. The overall voltage range which needs to be produced is divided into three segments. Each of these segments have their output connected as input to the summing amplifier. One of the segments utilizes a programmable gain amplifier(PGA) to vary

the voltage within one third of the range. While the relays are used to increase the voltage by one third of the overall voltage range when they are turned on.

The advantage of this design is that it allows for three times the number of voltage steps allowed for by a single PGA. This could also be accomplished by using multiple PGA's. Utilizing the relays in increase the voltage instead of additional PGA's allows for reduced software and hardware complexity.

3.3.2 Relay

The overall voltage range, $1V_{pp}$ to $60V_{pp}$, is divided into three $20V_{pp}$ ranges. The relay's have two states, on and off, which allow for moment between the ranges. When on, the input the the Amplifier circuit is amplified to $20V_{pp}$. This $20V_{pp}$ signal is input to the summing amplifier. There are two of these relay circuits used. Turning them on or off allows the voltage range to be chosen. These relay circuits are controlled by GPIO pins on the Raspberry Pi.

3.3.3 Programmable Gain Amplifier(PGA)

There are three $20V_{pp}$ voltage ranges. Which range being acted in is chosen by the relay circuits. Within a given range, however, a PGA is used to control the voltage output. In our implementation, a PGA has control over a $20V_{pp}$ range. The PGA has 8 steps within this range. This Device is controlled by the SPI interface on the Raspberry Pi.

4 Software Components

The web interface displayed by the web server hosted on the Raspberry Pi is the user's window into the system. Through this interface, the user can seamlessly control various components of the system cause the desired voltage and frequency to be produced. Previously covered are the hardware components used to accomplish this. This section describes the software counterparts used to control the hardware.

4.1 Web Interface

The web interface is hosted on the Raspberry Pi using an Apache web server. This web server displays an interface which allows the user to set a voltage and frequency output by the system. The interface is simple and interactive, implemented using cgiscripts on the Apache web server.

Our implementation provides several functionalities. Among these are the ability to set: voltage and frequency, sine or triangle or square waveforms, and the ability to set a voltage and frequency for an amount of time. The table displayed in the figure below provides the ability to set voltage and frequency for the number of minutes specified. The "Go" button will cause the first voltage and frequency to be set for the corresponding amount of time. After the time has expired, the next voltage and frequency will be set for the corresponding amount of time. This process continues until the table entries are completed or the user presses the "Stop" button.

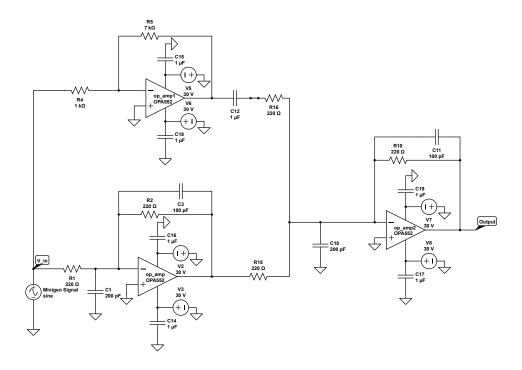


Figure 2: Amplifier circuit design to vary voltage within range $1V_{pp}$ to $60V_{pp}$.


Voltage (V): 1 * Sine Triangle Update Frequency (KHz): 10 Square Square Voltage(V) Frequency(Khz) Time(minutes) 0

Set Voltage and Frequency

4.2 Web Server

The primary function of the web server is to communicate with the Raspberry Pi. This is the primary method of control afforded to the user by the system. The web pages displayed by the server have the ability to control the voltage and frequency output by the circuit.

Displaying this interface is accomplished by running an Apache web server on the Raspberry Pi. When the user clicks update, the server could executes a cgi-script performing the update functionality.

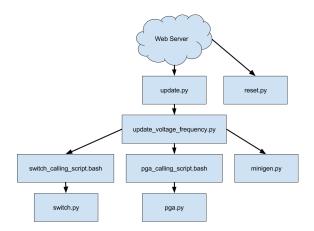

4.3 Modifying Frequency

The frequency output by the circuit is controlled by the Minigen Function Generator. Thus the software components used to modify the output frequency are in essence a method of communication with the Minigen device.

The process begins when the user enters a new frequency value into the web interface and clicks the "update" button. The *update.py* script parses the parameters contained in the URL resulting from the user's update request. These parameters are than passed on to *update_voltage_frequency.py* which determines the appropriate update procedure with which to call *minigen.py*.

4.4 Controlling Voltage

4.4.1 Programmable Gain Amplifier(PGA)

5 Cost Considerations

The monetary cost of this project is fairly low. The precise costs of components in the future are unknown, but a table of current prices has been provided along with the necessary quantity of each component. The projected cost of op-amps and other electronic components is minimal. The largest expenditure of the project is the purchase of the Raspberry Pi 2 and Minigen Function Generator. The Raspberry Pi 2 package is currently priced at \$99.95 and the Minigen cost at \$29.95. Thinking conservatively the cost of the major hardware will be \$129.90. In addition, the cost of a resistor kit, a capacitor kit, and a handful of op-amps must be included.

The Minigen Function Generator may be acquired from http://www.sparkfun.com. This website also provides a resistor kit for \$7.95 which includes all necessary resistors. From this same website, individual capacitors may be purchased at a rate of \$0.25 per capacitor. Operational amplifiers may also be purchased at a rate of \$0.95 per amplifier. Given this, the total cost is approximated at \$152.35. This is far below the maximum allotted funds of \$1,000 specified in the project description.

Item	Part Num-	Quantity	Price(\$)
	ber		
Raspberry	-	1	99.95
Pi 2 Kit			
Minigen	AD9837	1	29.95
Function			
Generator			
Resistor	-	1	7.95
Pack			
Capacitor	-	1	5.00
Pack			
Op Amps	-	8	9.50
Total	-	-	152.35

6 Testing

In order to discuss testing in a more clear way it is useful to define a number of steps in the testing process. Each of these steps can than be developed for each of the various components to the project. The flow of the testing process involved an iterative process of:

- 1. Theorize a design
- 2. Acquire necessary components
 - knowledge
 - hardware components
- 3. Implement design
- 4. Understand problems
- 5. Return to step 1

It is important to recognize that many of these steps may be different for different components. A program written to be run by the web server will inevitably have different testing requirements from a new integrated circuit component.

6.1 Testing Process

Each phase of the testing process poses unique challenges. Here are presented some of those challenges and how each phase related to specific aspects of this project. Importantly, the time it takes to complete a testing cycle varies drastically. Hardware components, for instance, take far longer to test as they must be constructed on a breadboard in order that measurements may be taken with lab equipment. The length of the testing cycle is directly proportional to the extent to which a component may be tested. For objects with long testing cycles, much more time is spent in the theorizing a design phase compared to objects with shorter testing cycles.

6.1.1 Theorize a design

In this phase of development, the goal is to determine:

- A design which should work
- What knowledge is needed to complete an implementation
- What physical components will be necessary

Often times it is wise to determine the above for multiple potential solutions. The time necessary to implement each solution can then be estimated and weighed against the potential for success with such a design.

Which design is chosen for implementation is some combination of the estimated time and potential for success. The decision to abandon a design is often due to a change in one of these factors. This change can occur either in the current design or in one of the alternative designs. An example which might motivate abandonment of a particular solution might be the finding that a certain hardware component contained in the current design is incapable of working at a high enough frequency to produce the overall output.

6.1.2 Acquire necessary components

The goal of this phase is self-explanatory. The necessary components must be acquired. While the goal may be clear and simple; it may not be easy. The term acquisition may refer to physical hardware, but it also refers to the knowledge necessary to implement a given system. Every potential implementation has a knowledge component. Even if the knowledge is already known by the group as a whole, it may be useful to consolidate the information.

Fundamentally this process tries to answer the question, "What do I need to know in order to create x result". Where x is the goal of the component as a whole, or x is a subgoal which is thought to contribute to the overall goal of the component. This phase of testing sets the theorized design against existing knowledge. Often times it is necessary to return to the theorizing phase and reconstitute the design given new information which has been acquired.

6.1.3 Implement design

Of all the phases, this phase constitutes the largest investment. The majority of time spent on the project is used to implement a design. The goal of this phase is both obvious and complex.

An increased degree of efficiency may be achieved by constructing a minimal working example(MWE). The benefit in doing this is twofold. First, a MWE is often easier to construct compared to a version which is constructed into the other components of the project. Second, because constructing a MWE requires that this sample implementation not be integrated into the rest of the project, issues which arise from the interplay between devices are not present. This helps to isolate issues which are a product of the specific aspect of the project which is being implemented.

6.1.4 Understand problems

6.1.5 Return to step 1

Many times it is found that designs would not work and thus this process is reset to the beginning. This step can be disheartening, but it is wholly necessary. Emotions of anguish may cloud a person's judgment causing them to stick with a particular implementation for far longer than what is necessary to determine

better solutions exist. Developing a control over these emotions yields decisions which reduce the time taken to complete a project and often produce better results.

Much wisdom is needed to be able to objectively evaluate one's current situation and determine whether it is advisable to continue down the current path or whether The new information gathered in the "understanding problems" phase warrants the construction of a new design or significant portion of design. Often times this can be reduced to answering the following question honestly, "Given what is now known, is it wise to invest in the current course of action, or is there something else which might have an improved probability of success"

6.2 Testing Results

A typical testing environment includes:

- Oscilloscope
- Raspberry Pi
 - Connected for monitor for web interface access
 - Connected to circuit to control Minigen, PGA's
- Multiple breadboards
 - Minigen Function Generator
 - PGA's
 - Summing amplifier

6.3 Known Issues

The current solution has some noteworthy issues which need to be addressed. Issues are defined as unintended issues of unknown origin. Possible reasons for each of the issues are discussed as well as the accommodations made in this implementation to lessen their impact. Potential solutions are also mentioned.

6.3.1 B23

In the current prototype, there is an ongoing issue with the Minigen Function Generator. This device works as expected in most cases. The exception occurs when bit 23 of either frequency register is set high. This case will cause the Minigen device to produce a 4Mhz sine wave. There is potential that the specific Minigen device used is responsible for this bug. Further testing is required.

The solution currently implemented is to detect conditions which will cause the error and avert these situations problematically. Whenever bit 23 is set to high in a frequency register write, the current implementation sets bit 23 to low and sets all less significant bits to high.

6.4 other?

7 Concluding Remarks

A Operation Manual

- A.1 Setup
- A.2 Demo

B Initial Designs

This section covers the designs that have been tried throughout the course of the project. These were problems with each of these designs which motivated a change from that design to a more resent design. Designs are presented in roughly chronological order in each section to perhaps make it more clear what motivated a particular design choice. Each component underwent various adaptations over the duration of the project.

In an introductory economics class, it is common that students are taught about sunk costs. Sunk costs refer to those costs which have already been incurred and cannot be recovered. These classes teach that suck costs should not be considered in making future investments. In other words, one should not ask themselves the extent of current investment down a particular path. Rather, one should ask, given what is known now, which investment is more intelligent.

While economics classes teach about sunk costs in the context of monetary investment, the same logic may be applied to other domains. In the case of this project, the investment capital is time and energy. Regardless of how much energy has been invested in a particular design, it is necessary to evaluate alternatives to that design. If these alternatives than look better given what is known about both designs than the design should be modified accordingly to fit the alternative design.

Throughout the course of this project, several components needed to be redesigned. Below is some mention of these designs and the issues encountered which motivated deviation from them.

B.1 Frequency Control

The Raspberry pi is capable of producing square waves by turning the GPIO pins on and off rapidly. We can use this functionality to produce a wave of the frequency indicated by the user. The GPIO pins can also be used to set the voltage by communicating with the circuit how much the output waveform should be amplified. The downside to this approach is the analog circuit component will need to be more complex. The analog circuit needs to output a sine wave. With this approach we would need to integrate the square wave produced by the GPIO pin.

There exist alternatives to using the GPIO pins to generate a signal with a given frequency. We could instead use the GPIO pins on the raspberry pi to communicate with a small signal generator, such as *sparkfun.coms* Minigen Function Generator. This would make programming the Raspberry pi more complex, but could lead to higher quality waveforms. Producing a sine wave using the Minigen signal generator is likely to to produce fewer distortions compared to integrating a square wave produced by the RPIs GPIO pin twice.

B.2 Voltage Control

B.2.1 Digital Potentiometer

The output of the digital potentiometer has 128 steps. This Translates into our ability to set 128 different gains on our amplifier. We will need multiple stages of amplifier to go between 1 and 60 Vpp. The most prominent reason for this is due to the

gain bandwidth of the op-amps. We will not be able to have a large gain while still producing a frequency of 1Mhz.

One problem we foresee with the digital potentiometer is that it cannot handle a large amount of power. This may force us to come up with different amplifier configurations, or use the digital potentiometer in a different way. Another way we could possibly use this device is as an attenuator at the input to the amplifier.

Another problem which might arise with the digital potentiometer is the capacitance of the wiper. We dont have any context for understanding how much this will affect the output signal. According to some preliminary calculations, we have determined that the capacitance will not present a large problem. This design was replaced by a programmable gain amplifier.

B.2.2 Transistor switch

The overall voltage output by the amplifier circuit varies between $1V_{pp}$ to $60V_{pp}$. In our implementation, this range is segmented into three parts of $20V_{pp}$ each. Each of the three segments are input to a summing amp to create up to $60V_{pp}$ overall.

A PGA is used for fine adjustment of one $20V_{pp}$ range while the other two ranges are either $20V_{pp}$ or $0V_{pp}$. In other words, there ranges are turned on or off.

The original design for turning on and off the ranges required that a BJT transistor switch circuit be used. The intent was for this circuit to have either $20V_{pp}$ or $0V_{pp}$ depending on a GPIO pin from the Raspberry Pi. This design did not work as intended. Even when the transistors were off there was still current leakage. This current leakage caused problems when input to the summing amplifier. For this reason, the BJT transistor switch ciruits were replaced with solid state relays.

B.2.3 Relay

The proposed use for the relays was similar to the to the transistor switch. The advantage the relays have is the use of an internal led to allow or disallow current though the relay. One way this might work is by connecting a GPIO pin from the Raspberry Pi to the led pin on the relay. Setting this GPIO pin to high would then cause the led to shine allowing the signal from the Minigen to flow through the relay.

The problem which occurred with this solution was that the relays were incapable of operating at the desired frequency. The relays began to have problems at only $25K_{hz}$. Compare this to the required $1M_{hz}$ frequency, and it is obvious that the relays are not a good solution.

B.3 other?

B.4 Software Components

C Other Considerations

An argument can be made that there cannot be a truly accurate model of life. Any such model with an infinite degree of accuracy would need to contain the model of life within it. And that model would then need to contain the model of the model. This is scenario is impossible and illustrates why it is necessary to develop simplified models.

Every model is based in reality, but the model is not reality. Sometimes simplifications are made in the construction of the model which mask some of the issues which can arise if it turns out this simplification was not valid in the use scenario.

The project description for this industry project determined it was advisable for the group working on it to have three computer engineers and three electrical engineers. Instead, our original group consisted of four computer engineers. After the first semester of this project, one of our group members dropped leaving only three computer engineers. As a group we were able to accomplish most of the goals for the project. Especially the goals more central to the topics covered in the undergraduate computer engineering work at Iowa State University.

The fundamental issue with the portions of the project more

suited to an electrical engineer is tour models are oversimplifications of the physical circuit components. This coupled with a lack of advanced knowledge about circuits in general led our group the have a tough time with the circuits component.

Many issues throughout the semester arose due to general lack of knowledge about circuits. One of the clearest examples of this is occurred in the interactions among components. We did no understand how to separate components initially. This led to scenarios where the input, output of two components could work perfectly, but when these components were connected in series the output of the overall circuit did not work as expected.

The lack of experience also manifested in the amount of time it would take for us to debug "simple" circuit problems. We would, for instance, see an odd wave on the oscilloscope which might clearly indicate there wasn't a common ground or that the power supply wasn't turned on (oops). Not knowing this, we would proceed to the next logical step, staring at the circuit for exorbitant amounts of time and checking all the connections. Eventually we learned what certain types of oscilloscope traces might imply about the problem, but experience would have made this process much faster.

D Code

Listing 1: Bash script used to evoke GPIO library

```
#! /bin/bash

# open python thing

cd /home/pi/cpre494/cpre492/cgi-bin

echo -e "import_pga\np_amp=pga.pga()\np_amp.setGain($1)" | sudo python

#sudo python import pga

#sudo python p_amp = pga.pga()

#sudo python p_amp.setGain(-1)
```

Listing 2: Update Website Script

```
1
   #! /usr/bin/python2.7
2
3
   import cgi
   import cgitb
5
   import update_voltage_frequency
6
7
   # create instance of field storage to get values
8
   parameters = cgi.FieldStorage()
9
10
   # get the data from the fields
11
   #update_voltage = parameters.getvalue('update_voltage')
   #update_frequency = parameters.getvalue('update_frequency')
12
13
14
   voltage_value = parameters.getvalue('voltage')
15
   frequency_value = parameters.getvalue('frequency')
16
17
   # Update the frequency and voltage
   update_voltage_frequency.update_voltage(voltage_value)
18
19
   update_voltage_frequency . update_frequency (frequency_value)
20
21
   # This script is designed to count as a test
22
   print "Content-type: text/html\r\n\r\n"
23
   print "<html>"
   print "<head>"
24
25
   print "<title >CGI-Update-Procedure </title >"
26
   print "<head>"
   print "<body>"
27
28
   print "<h1>Current_Values:</h1>"
29
   print "<h3>Voltage: _%s _V</h3>" % (voltage_value)
30
   print "<h3>Frequency: \[ \lambda s \] Khz</h3>" \( \lambda \) (frequency \[ \text{value} \))
   print "</body>"
31
32
   print "</html>"
33
34
   # Reprint index.html so that the user may change the voltage again
35
   with open('/home/pi/cpre494/cpre492/www/index.html', 'r') as file:
36
        line = file.readline()
37
38
        while line:
            # print "\""+line+"\""
39
```

```
print line
line = file.readline()
```

Listing 3: Update Voltage and Frequency Script

```
1
   #! /usr/bin/python2.7
2
   import spidev
3
   import minigen
   #import cPickle as pickle
6
   #import pga
7
   import subprocess
8
   #Designed to communicate with a Minigen connected to the GPIO pins
9
10
   spi = spidev.SpiDev()
11
12
   # Test function
13
   def main():
14
      print 'running _in _test _mode'
15
16
     # Test setting the frequency using spi
17
     #update_frequency (100)
18
19
     # Test setting the voltage using I2c
20
      update_voltage("22")
21
22
   # define variables
23
   # minigen_pickle_file = "/tmp/mini_pickle"
   #digital_pot_pickle_file = "/tmp/pot_pickle"
24
25
26
   # Update the voltage level to the specified value.
27
   # This is not the voltage output by the minigen,
28
   # Instead it is the voltage output by the circuit as a whole.
29
   def update_voltage (voltage):
30
     # range of each step fed into the summer
31
     # pga will have many steps between 0 -> step_range
32
     # ex: if max value of the pga is 10 vpp, then step_range is 10
33
     # ADJUST STEP RANGE TO COSNTANT AMPLIFIER OUTPUT
34
      step_range = 10
35
      pga_step_size = step_range / 7.0
36
37
     # compute voltage values
38
     pga_voltage = int(voltage)
39
40
      if ( pga_voltage > step_range ):
        state_0 = "1"
41
42
        pga_voltage -= step_range
43
      else:
44
        state_0 = 0
45
46
      if ( pga_voltage > step_range ):
47
        state_1 = "1"
48
        pga_voltage -= step_range
49
      else:
50
        state_1 = "0"
```

```
51
52
      # convert the pga voltage into a pga gain
53
      pga_gain = pga_voltage / pga_step_size
54
55
      # debug: print out pga_voltage and states of pins
56
       print str(pga_voltage)
57
     # print str(state_0)
58
      #print str(state_1)
59
       print str(int(round(pga_gain)))
60
61
      # call a script that will set the pga values
      subprocess.call("./pga_calling_script.bash_" + str(int(round(-1*pga_gain))), shell=True)
62
63
64
      # set switch 0
65
      subprocess.call("./switch_calling_script.bash_0_" + state_0, shell=True)
66
67
      # set switch 1
68
      subprocess.call("./switch_calling_script.bash_1_" + state_1, shell=True)
69
70
      #print 'voltage updated'
71
72
      # make an instance of the voltage_regulator class to handle the connection
73
      #vr = voltage_regulator.voltage_regulator()
74
      #vr = get_pickle_digital_pot()
75
76
      # ask vr to set the voltage to the given value
77
    # vr.set_voltage(voltage)
78
79
      # update pickled information
      \#\#\# \,s\,e\,t\,\_p\,i\,c\,k\,l\,e\,\_d\,i\,g\,i\,t\,a\,l\,\_p\,o\,t\,(\,v\,r\,)
80
81
82
      # preform cleanup actions
83
      #vr.close_regulator()
84
85
    # Update the frequency to the specified value. Values are given in Khz.
    def update_frequency (frequency):
86
87
      #print 'frequency_updated'
88
89
      # make an instance of the minigen class to handle the connection
90
      m = minigen.minigen()
91
     # m = get_pickle_minigen()
92
93
      # ask the minigen to set the new frequency
94
      m. setFrequency (float (frequency) *1000)
95
96
      # update pickled information
97
      ### set_pickle_minigen (m)
98
99
      #close the conection
100
      m. close ()
101
102
    # attempt to grab pickeled information about minigen
103
    # if no pickle is found, create new minigen object
104 | #def get_pickle_minigen():
```

```
105
     # try:
106
       # m = pickle.load( open( minigen_pickle_file , "rb" ) )
107
        ## print "pickle_loaded_successfully"
108
      #except:
109
       # m = minigen.minigen()
        #print "new_object_created"
110
111
112
     # return m
113
114
    # attempt to grab pickeled information about ditital pot
115
    # if no pickle is found, create new minigen object
116
    #def get_pickle_digital_pot():
117
       try:
         vr = pickle.load( open( digital_pot_pickle_file , "rb" ) )
118
119
       except:
120
         vr = voltage_regulator.voltage_regulator()
121
122
       return vr
123
124
    # set pickeled information about minigen
125
    #def set_pickle_minigen(m):
126
       pickle.dump( m, open(minigen_pickle_file , "wb" ) )
127
128
    # set pickeled information about digital pot
129
    #def set_pickle_digital_pot(vr):
       pickle.dump( vr, open(digital_pot_pickle_file, "wb" ) )
130
131
132
    if ( __name__ == "__main__"):
133
      main()
```

Listing 4: Minigen Control Script

```
1
   #! /usr/bin/python2.7
2
3
   import spidev
   import time
4
5
   import sys
   # Designed to provide some of the functionality from SparkFun_MiniGen.cpp
6
7
   # designed so that you only need to use set_frequency to set the frequency
8
   class minigen:
9
     # initialize the connection with the minigen
10
     def __init__(self):
11
        self.spi = spidev.SpiDev()
12
13
       # open(bus, device)
        self.spi.open(0, 0)
14
15
16
       # minigen is driven at 40Mhz
17
       \# self.spi.max_speed_hz = 15000000
18
19
        self.controlReg = [False] * 16
20
        self.controlReg[16-13] = True
21
22
        self.freqReg0 = [False]*32
23
        self.freqReg1 = [False]*32
```

```
24
25
        self.freqReg0[31-30] = True
26
        self.freqReg0[31-14] = True
27
28
        self.freqReg1[31-31] = True
29
        self.freqReg1[31-15] = True
30
31
        self.fudgeFactor = 1
32
33
   #########
                     Control Register 16 Bits
34
       Bit Number
                      Name
                               Function
35
       D15
                    Addr1
                               Always 0
                                                D15 and D14 is the address of the control
       register
36
       D14
                    Addr0
                               Always 0
       D13
37
                    B28
                               When 1: allows a complete word to be loaded into a freq reg with
        two consecutive write. First contains 14 LSB, second contains
38
   #
                               14 MSB. (First two bits is freq reg addr) Consecutive writes to
        the same freq register is not allowed, you must alternate.
39
   #
                               When 0: Configures the 28 bit freq reg is act as two 14 bit regs.
        One contains 14 LSB, the other 14MSB. This allows for coarse, or fine
40
                               grain tuning. HLB defines which to change.
41
42
   #
43
   #
   #
44
       D12
                    HLB
                               This allows the user to continiously load the MSB or LSB of a
       freq reg. Ignoring ther other 14 bits. When B28 = 1, this is ignored.
45
   #
                               When 1: Allows write to 14 MSB
46
   #
                               When 0: Allows write to 14 LSB
47
48
   #
   #
49
   #
       D11
                    FSEL
50
                               Selects either freq0 or freq1
51
   #
       D10
                    PSEL
                               Selects either phase0 or phase1
52
       D09
                  reserved
   #
                  RESET
                             When 1: resets internal regs to 0. When 0: disables the reset
53
       D08
       function.
54
   #
       D07
                  Sleep1
                               Enables or disables MCLK
55
   #
       D06
                  Sleep12
                               Powers down on chip DAC
56
   #
       D05
                  OPBITEN
57
   #
       D04
58
   #
       D03
59
   #
       D02
                    TODO
60
   #
       D01
61
   #
       D00
62
63
     def chooseFreq0(self):
64
        self.controlReg[15-11] = False
65
     def chooseFreq1(self):
66
        self.controlReg[15-11] = True
67
     def enableB28 (self):
68
        self.controlReg[15-13] = True
69
     def disableB28(self):
70
        self.controlReg[15-13] = False
71
     def enableHLB(self):
```

```
72
         self.controlReg[15-12] = True
73
       def disableHLB(self):
74
         self.controlReg[15-12] = False
75
       def sendControlReg(self):
 76
77
         controlRegNum = self.boolListToInteger(self.controlReg)
78
         self.spi.xfer([controlRegNum >> 8, controlRegNum & 0xFF])
79
 80
       def getControlReg(self):
 81
         return (self.boolListToInteger(self.controlReg))
 82
 83
 84
      #Frequency Functions
 85
      #Frequency Registers are set up as one 1 32 bit register with [31-30] and [15-14] defined
 86
           to be the address
 87
 88
 89
       def setFreqRegister(self, freqReg, isMSB, num):
 90
         if (num > 0x3FFF):
 91
           return -1
 92
         bitString = bin(num)[2:][::-1]
 93
         if(isMSB == 1):
 94
           x = 15
 95
         else:
 96
           x = 31
 97
         for i in bitString:
98
           if int(i) == 1:
99
             if(freqReg == 0):
               self.freqReg0[x] = True
100
101
             else:
102
               self.freqReg1[x] = True
103
           else:
104
             if(freqReg == 0):
105
               self.freqReg0[x] = False
106
             else:
107
               self.freqReg1[x] = False
108
          x = x - 1
109
         return 1
110
111
112
       def setFreqOMSB(self, num):
113
         return self.setFreqRegister(0,1,num)
114
115
       def setFreq0LSB(self,num):
         return self.setFreqRegister(0,0,num)
116
117
118
       def setFreq1MSB(self, num):
119
         return self.setFreqRegister(1,1,num)
120
121
       def setFreq1LSB(self, num):
122
         return self.setFreqRegister(1,0,num)
123
124
       def setEntireFreqRegO(self, num):
```

```
125
         actualValue = self.calculateFrequency(num)
126
         if (actual Value > 0x3FFFFFFF):
127
           return -1
         self.setFreq0LSB(actualValue & 0x3FFF)
128
129
         self.setFreq0MSB(actualValue >> 14)
130
         return 1
131
132
      def setEntireFreqReg1(self, num):
133
         actualValue = self.calculateFrequency(num)
         if (actual Value > 0x3FFFFFFF):
134
135
           return -1
136
         self.setFreq1LSB(actualValue & 0x3FFF)
         self.setFreq1MSB(actualValue >> 14)
137
138
         return 1
139
140
141
      def getFreqReg0(self):
         return (self.boolListToInteger(self.freqReg0))
142
143
      def getFreqReg1(self):
         return (self.boolListToInteger(self.freqReg1))
144
145
146
      def sendFreqReg0MSB(self):
147
        sendFreqRegNum = self.boolListToInteger(self.freqReg0)
148
         self.spi.xfer([sendFreqRegNum >> 24, (sendFreqRegNum >> 16) & 0xFF])
149
150
      def sendFreqRegOLSB(self):
151
        sendFreqRegNum = self.boolListToInteger(self.freqReg0)
152
         self.spi.xfer([(sendFreqRegNum >> 8) & 0xFF, (sendFreqRegNum) & 0xFF])
153
      def sendFreqReg1MSB(self):
154
        sendFreqRegNum = self.boolListToInteger(self.freqReg1)
155
         self.spi.xfer([sendFreqRegNum >> 24, (sendFreqRegNum >> 16) & 0xFF])
156
157
158
      def sendFreqReg1LSB(self):
        sendFreqRegNum = self.boolListToInteger(self.freqReg1)
159
160
         self.spi.xfer([(sendFreqRegNum >> 8) & 0xFF, (sendFreqRegNum) & 0xFF])
161
162
      def setFrequency(self, freq):
163
         if (freq < 10000):
164
           return -1
165
         self.enableB28()
166
         self.chooseFreq1()
167
         self.sendControlReg()
         self.setEntireFreqReg0(freq)
168
169
         self.sendFreqReg0MSB()
170
         self.sendFreqReg0LSB()
         self.chooseFreq0()
171
172
         self.sendControlReg()
173
        return 1
174
175
      def setFrequency1(self, freq):
176
         self.disableB28()
177
         self.enableHLB()
178
         self.chooseFreq1()
```

```
180
181
         calculatedValue = self.calculateFrequency(freq)
182
         if (calculated Value > 0x3FFF):
183
           return -1
184
185
        MSB = (calculatedValue >> 14) & 0x3FFF
         self.setFreqRegister(0, 1, MSB)
186
187
         self.sendFreqReg0MSB()
         self.disableHLB()
188
189
         self.sendControlReg()
190
        LSB = calculatedValue & 0x3FFF
191
         self.setFreqRegister(0,0,LSB)
192
         self.sendFreqReg0LSB()
193
194
         self.chooseFreq0()
195
         self.sendControlReg()
196
197
       def calculateFrequency(self, num):
        #print "Calculated_Value:_" + str(int(num/(.0596)))*self.fudgeFactor
198
199
         return int(num/(.0596)) * self.fudgeFactor
200
201
       def close(self):
202
         self.spi.close()
203
204
      #Converts a boolean array to a number
205
      def boolListToInteger(self, lst):
206
         return int( ''.join(['1' if x else '0' for x in 1st]),2)
207
208
    # Test function
209
    def main():
      print 'running _in _test _mode'
210
211
      m = minigen()
212
      m. setFrequency (float (sys.argv[1]))
213
       print "Frequency_Register: " + bin(m.getFreqReg0())
214
      m. close()
215
216
217
    if ( __name__ == "__main__"):
218
      main()
```

179

self . sendControlReg()

Listing 5: PGA Control Script

```
1
   #! /usr/bin/python2.7
2
3
   import RPi.GPIO as GPIO
   import time
5
   import os
6
   import sys
7
8
   class pga:
9
10
     def __init__(self):
11
       #Switch user
12
       #sudoPassword = 'root'
```

```
13
        \#command = `sudo\_-i'
14
        #p = os.system('echo_%s|sudo_-S_%s' % (sudoPassword, command))
15
16
        #Default Gx pins
17
        self.pinGx = [4, 17, 27]
18
19
        self.gainList = [0, -1, -2, -3, -4, -5, -6, -7]
20
21
22
        \#6910-2
        \# self. gaintList = [0, -1, -2, -4, -8, -16, -32, -64]
23
24
25
        #6910 - 3
        \# self. gainList = [0, -1, -2, -5, -10, -20, -50, -100]
26
27
28
29
        GPIO. setmode (GPIO.BCM)
30
        GPIO. setwarnings (False)
31
        self.updatePins()
32
33
34
      def updatePins(self):
35
        GPIO.cleanup()
36
        for pos in range (0,3):
37
          GPIO. setup (self.pinGx[pos], GPIO.OUT)
38
39
      def setPinGO(self, pin):
40
        self.pinGx[0] = pin
41
        self.updatePins()
42
43
      def setPinG1(self, pin):
        self.pinGx[1] = pin
44
45
        self.updatePins()
46
47
      def setPinG2(self, pin):
48
        self.pinGx[2] = pin
49
        self.updatePins()
50
51
      def setGainList(self, list):
52
        if(len(list) == 8):
53
          self.gainList = list
54
          return True
55
        return False
56
57
      def getGainList(self):
58
        return self.gainList
59
60
      def printGainList(self):
61
        print self.gainList
62
63
     # Only Allows for gains set in the given list
64
      def setGain(self, gain):
65
        try:
66
          binNum = '{:03b}'.format(self.gainList.index(gain))
```

```
67
          #print binNum
68
          binNum = binNum[::-1]
69
          for pos in range (0, 3):
70
            if int(binNum[pos]) == 1:
71
              GPIO.output(self.pinGx[pos], 1)
72
            else:
73
              GPIO.output(self.pinGx[pos], 0)
74
        except ValueError:
75
          print "Gain_not_Found"
76
77
78
   def main():
79
      print "Running _PGA_ test"
80
     p = pga()
81
     p.setGain(int(sys.argv[1]))
82
83
84
    \# self. gainList = [0, -1, -2, -5, -10, -20, -50, -100]
   if ( __name__ == "__main__"):
85
      main()
86
```

Listing 6: Reset Script

```
1
   #! /usr/bin/python2.7
2
3
   # TODO the purpose of this script is to reset the minigen to a default state
4
5
6
   # This script is designed to count as a test
7
   print "Content-type: text/html\r\n\r\n"
   print "<html>"
   print "<head>"
   print "<title >Reset-Procedure </title >"
10
11
   print "<head>"
   print "<body>"
12
13
   print "</body>"
14
   print "</html>"
15
16
   # reprint index.html
17
   with open('/home/pi/senior_design/www/index.html', 'r') as file:
18
     line = file.readline()
19
20
     while line:
       #print "\""+line+"\""
21
22
        print line
23
        line = file.readline()
```