

AMERICAN INTERNATIONAL UNIVERSITY-BANGLADESH (AIUB)

Faculty of Engineering Department of Electrical and Electronic Engineering

EXPERIMENT NO: 05 MID TERM

SEC: E

Data Communication

EXPERIMENT TITLE: Study of Analog to Digital Conversion using MATLAB

Submitted to:

Raja Rashidul Hasan

Assistant Professor

Faculty of Engineering

Department of EEE

Semester: Spring 2023

Date of Submission: 02/03/2023

SUBMITTED BY:

GROUP NO:

Serial no	Student's Name	OA ID	Dept.
16	MAHBUB, SAJID IBNA	20-42109-1	CSE
17	NAKIB, MOHAMMAD IMTIAZ	20-42121-1	CSE
26	AHMMAD, MD. TANVIR	20-43015-1	CSE
27	SHILA, SHABIHA PARVIN	20-43065-1	CSE
31	FAISAL, MD.OMAR FARUK	20-43669-2	CSE
33	RATRI, SAIMA SADIA	20-43793-2	CSE

Title: Study of Analog to Digital Conversion using MATLAB

Abstract:


This experiment is designed to-

- 1.To understand the use of MATLAB for solving communication engineering problems.
- 2.To develop understanding of Digital to Analog conversion using MATLAB.


Introduction:

- I. ANALOG TO DIGITAL CONVERSION: Digital signal is superior to analog signal. The tendency today is to change an analog signal to digital data. In this section we describe two techniques, pulse code modulation and delta modulation. After the digital data are created (digitization), we can use one of the line coding techniques to convert the digital data to a digital signal.
- II. PULSE CODE MODULATION (PCM): The most common technique to change an analog signal to digital data (digitization) is called pulse code modulation (PCM). A PCM encoder has three processes, as shown in the following figure.
 - a. The analog signal is sampled.
 - b. The sampled signal is quantized.
 - c. The quantized values are encoded as streams of bits

Figure 1 Components of PCM encoder

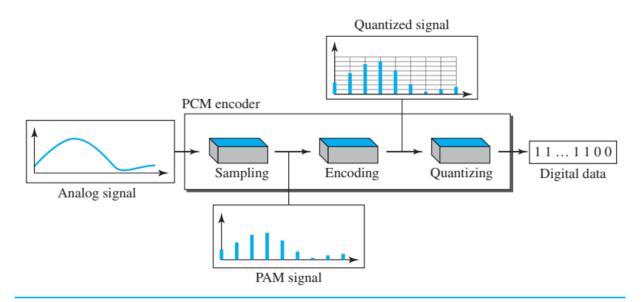

III. SAMPLING: The first step in PCM is sampling. The analog signal is sampled every T_s s, where T_s is the sample interval or period. The inverse of the sampling interval is called the sampling rate or sampling frequency and denoted by f_s , where $f_s = 1/T_s$. There are three sampling methods—ideal, natural, and flat-top—as shown in the following figure.

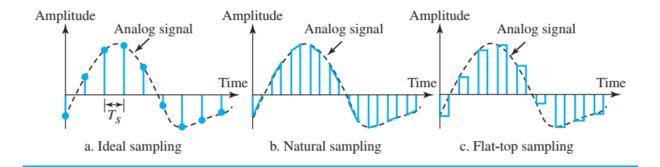

In ideal sampling, pulses from the analog signal are sampled. This is an ideal sampling method and cannot be easily implemented. In natural sampling, a high-speed switch is turned on for only the small period of time when the sampling occurs. The result is a sequence of samples that retains the shape of the analog signal. The most common sampling method, called sample and hold, however, creates flat-top samples by using a circuit. The sampling process is sometimes referred to as pulse amplitude modulation (PAM). We need to remember, however, that the result is still an analog signal with nonintegral values. According to the Nyquist theorem, the sampling rate must be at least twice the highest frequency contained in the signal.

$$f_s = 2 \times f_{max}$$

IV. QUANTIZATION: The following are the steps in quantization:

- a. We assume that the original analog signal has instantaneous amplitudes between V_{min} and V_{max}
- b. We divide the range into L zones, each of height Δ (delta)

$$\Delta = \frac{V_{max} - V_{min}}{I_{\cdot}}$$

- c. We assign quantized values of 0 to L-1 to the midpoint of each zone.
- d. We approximate the value of the sample amplitude to the quantized values. As a simple example, assume that we have a sampled signal and the sample amplitudes are between -20 V and +20 V. We decide to have eight levels (L = 8). This means that Δ = 5 V


QUANTIZATION LEVELS:

The choice of *L*, the number of levels, depends on the range of the amplitudes of the analog signal and how accurately we need to recover the signal.

The contribution of the quantization error to the SNR_{dB} of the signal depends on the number of quantization levels L, or the bits per sample n_b , as shown in the following formula:

$$SNR_{dB} = 6.02n_b + 1.76 \text{ dB}$$

Figure 3 Quantization and encoding of a sampled signal

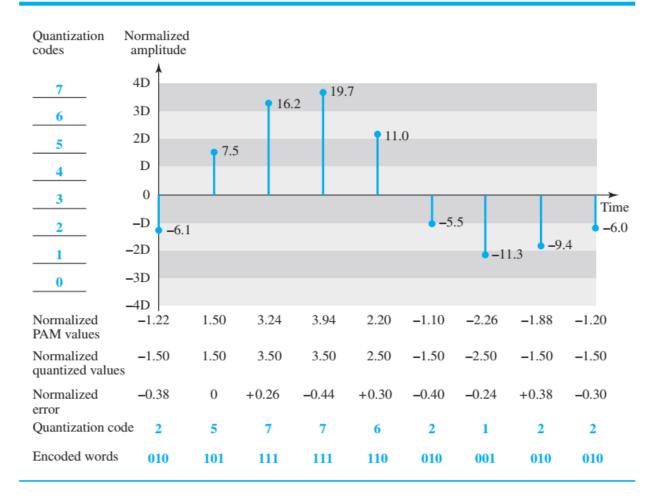

A simple method of quantization which can be implemented on MATLAB is given below:

Input Analog Signal = x Number of Quantization Levels = L Step Size, $\Delta = (x_{max} - x_{min})/(L-1)$ Quantized Signal, $x_q = x_{min} + round((x - x_{min})/\Delta)*\Delta$

where, x_{max} and x_{min} are the maximum value and minimum values, respectively, of the analog input signal x. The symbol L denotes the number of quantization levels. The symbol Δ is the step size of the quantizer or the ADC resolution. Finally, x_q indicates the quantization level, and i is an index corresponding to the binary code.

V. ENCODING: The last step in PCM is encoding. After each sample is quantized and the number of bits per sample is decided, each sample can be changed to an n_b -bit code word. Note that the number of bits for each sample is determined from the number of quantization levels. If the number of quantization levels is L, the number of bits is

$$n_b = log_2(L)$$

Index for Encoding,

$$i = round((x - x_{min})/\Delta)$$

Required bit rate (BR) for the encoding scheme can be determined as


$$BR = f_s \times n_h$$


MATLAB code for Pulse Code Modulation (Sampling, Quantizing, Encoding) of an Analog Signal:

```
clc
clear all
close all
% Analog to Digital Conversion
time duration = 0.2;
%% Analog-like signal's representation
% Analog signal generation is not possible in MATLAB
a = [0.4 \ 0.6 \ 0.8]; % amplitude array for composite signal
f = [5 12 20]; % frequency array for composite signal
analog t = 0:0.0001:time duration;
analog sig = a(1) * sin(2*pi*f(1)*analog t) +
a(2)*cos(2*pi*f(2)*analog t) + a(3)*sin(2*pi*f(3)*analog t +
pi/4);
figure
subplot(1,2,1)
plot(analog t, analog sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('analog signal')
%% Sampling Frequency
fs = 250;
ts = 1/fs;
%% Sampling
```

```
samp t = 0:1/fs:time duration;
samp sig = a(1) * sin(2*pi*f(1)*samp t) +
a(2) * cos(2*pi*f(2)*samp t) + a(3)*sin(2*pi*f(3)*samp t + pi/4);
subplot(1,2,2)
plot(samp t, samp sig, 'o', 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title(['sampled signal for ', num2str(fs), ' Hz sampling
frequency'])
%% Levels for Quantization
L = 8;
%% Quantizing
delta = (max(samp sig) - min(samp sig))/(L-1); % step size
quant sig = min(samp sig) + round((samp sig-
min(samp sig))/delta)*delta; % quantized signal
figure
subplot(1,2,1)
plot(samp t, samp sig, 'o', 'linewidth', 1.5)
xlabel('time in seconds')
ylabel('amplitude in volts')
title('sampled signal')
subplot(1,2,2)
plot(samp t, quant sig,'x','linewidth',1.5);
xlabel('time')
ylabel('amplitude')
title('quantized samples')
%% Number of Bits/Sample
nb = log2(L);
%% Encoding
i = round((samp sig-min(samp sig))/delta); % index for encoding
dig data matrix = de2bi(i,nb); % encoded binary bits are as a
matrix here
dig data = reshape(dig data matrix',1,[]); % encoded binary bits
are as an array here
disp(['The index values for encoding from quantization of the
sampled signal are: ',num2str(i)])
disp(['The converted bits from the input analog signal are:
', num2str(dig data)])
```

Output Figure 2 for Quantizing:

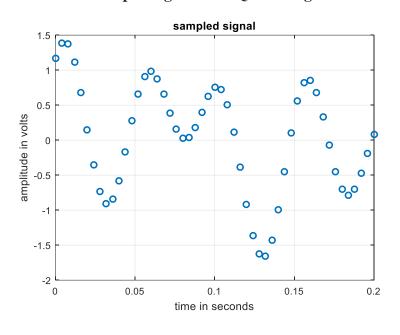

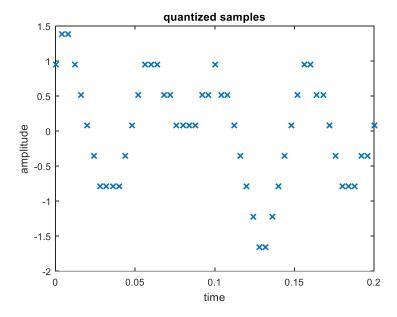

Output for Encoding:

									_						_						
Th	e i	nde	X V	alu	les	for	en	cod	ing	fr	om	qua	nti	Lzat	ion	of	th	e s	amp	led	
si	gna	l a	re:	6	7	7	6	5	4	3	2	2	2	2	3	4	5	6	6	6	5
5	4	4	4	4	5	5	6	5	5	4	3	2	1	0	0	1	2	3	4	5	6
6	5	5	4	3	2	2	2	3	3	4											
Th	ес	onv	ert	ed	bit	s f	rom	th	e in	npu	ta	anal	og	sig	nal	are	∋:	0	1	1	1
1	1	1	1	1	0	1	1	1	0	1	0	0	1	1	1	0	0	1	0	0	1
0	0	1	0	0	1	0	1	1	0	0	0	1	1	0	1	0	1	1	0	1	1
0	1	1	1	0	1	1	0	1	0	0	1	0	0	1	0	0	1	0	0	1	1
0	1	1	0	1	0	1	1	1	0	1	1	0	1	0	0	1	1	1	0	0	1
0	1	0	0	0	0	0	0	0	0	1	0	0	0	1	0	1	1	0	0	0	1
1	0	1	0	1	1	0	1	1	1	0	1	1	0	1	0	0	1	1	1	0	0
1	0	0	1	0	0	1	0	1	1	0	1	1	0	0	0	1					

Software:

MATLAB2016a

Performance Task for Lab Report: (your ID = AB-CDEFG-H)

Convert the following analog signal into digital data:

$$sig = a1*sin(2*pi*f1*t) + a2*cos(2*pi*f2*t) + a3*sin(2*pi*f3*t) + a4*sin(2*pi*f4*t);$$

$$[a1 = F + 1, a2 = F + 3, a3 = F + 2, a4 = F + 4, f1 = G + 5, f2 = G + 7, f3 = G + 1, f4 = G + 2]$$

- a) Show analog signal, sampled signal, and quantized signal.
- b) Show the digital data from the analog signal.
- c) What are the appropriate values of sampling frequency and number of levels of quantization if minimum required SNR and bandwidth of the channel are 25 dB and 150 Hz respectively.

Name: Sajid Ibna Mahbub

ID: 20-42109-1

Serial: 16

Performance Task for Lab Report: (your ID = AB-CDEFG-H)


A	В	C	D	E	F	G	H
2	0	4	2	1	0	9	1

1) Code:

```
close all;
 clc;
A=2;
 B = 0;
 C=4;
D=2;
 E=1;
 F=0;
 G=9;
 H=1;
 % Analog to Digital Conversion
 \(\frac{1}{2}\) \(\frac{1}\) \(\frac{1}{2}\) \(\frac{1}2\) \(\frac{1}2\) \(\frac{1}2\) \(\frac{1}2\) \(\frac{1
time duration = 0.2;
%% Analog-like signal's representation
 % Analog signal generation is not possible in
MATLAB
a1 = F + 1;
 a2 = F + 3;
```

```
a3 = F + 2;
a4 = F + 4;
f1 = G + 5;
f2 = G + 7;
f3 = G + 1;
f4 = G + 2;
a = [a1 \ a2 \ a3];
f=[f1 f2 f3];
analog t = 0:0.0001:time duration;
analog sig = a1*sin(2*pi*f1*analog t) +
a2*cos(2*pi*f2*analog t) +
a3*sin(2*pi*f3*analog t) +
a4*sin(2*pi*f4*analog t);
figure
hold on
subplot(1,2,1)
plot(analog t, analog sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title ('analog signal')
%% Sampling Frequency
fs = 250;
ts = 1/fs;
%% Sampling
samp t = 0:1/fs:time duration;
samp sig = a1*sin(2*pi*f1*samp t) +
a2*cos(2*pi*f2*samp t) + a3*sin(2*pi*f3*samp t) +
a4*sin(2*pi*f4*samp t);
hold on
subplot(1,2,2)
plot(samp t, samp sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title(['sampled signal for ', num2str(fs), ' Hz
sampling frequency'])
%% Levels for Quantization
```

```
L = 8;
%% Quantizing
delta = (\max(\text{samp sig}) - \min(\text{samp sig}))/(L-1); %
step size
quant sig = min(samp sig) + round((samp sig-
min(samp sig))/delta)*delta; % quantized signal
figure
subplot(1,2,1)
plot(samp t, samp sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('sampled signal')
subplot(1,2,2)
plot(samp t, quant sig, 'linewidth', 1.5);
xlabel('time')
ylabel('amplitude')
title('quantized samples')
%% Number of Bits/Sample
nb = log2(L);
%% Encoding
i = round((samp sig-min(samp sig))/delta); % index
for encoding
dig data matrix = de2bi(i,nb); % encoded binary
bits are as a matrix here
dig data = reshape(dig data matrix',1,[]); %
encoded binary bits are as an array here
disp(['The index values for encoding from
quantization of the sampled signal are:
',num2str(i)])
disp(['The converted bits from the input analog
signal are: ',num2str(dig data)])
```

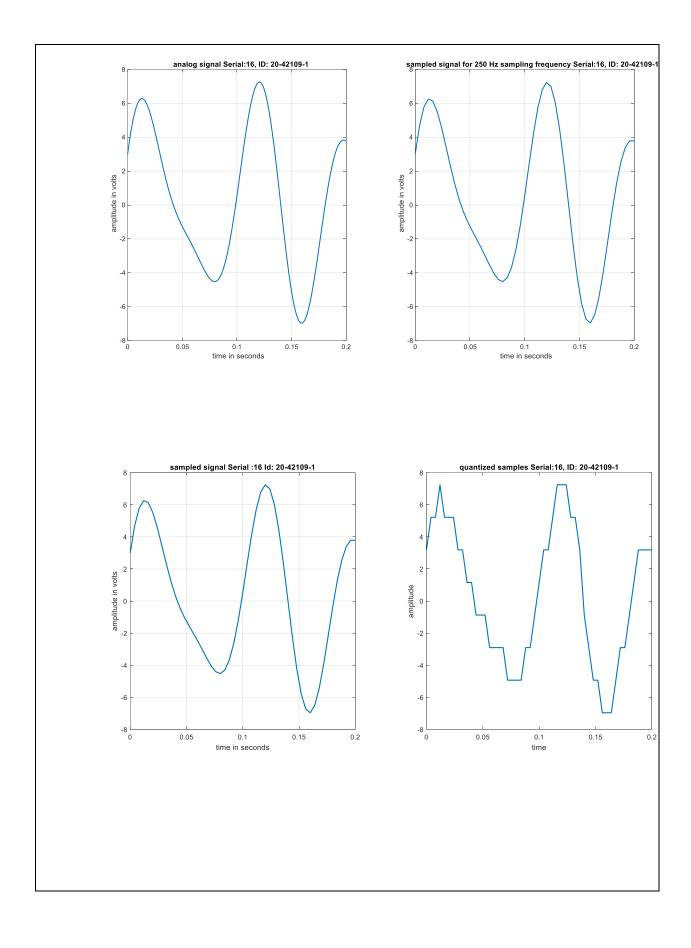

LAB Task 05

Name: Mohammad Imtiaz Nakib

ID: 20-42121-1

Serial: 17

close all;


Section: [E]


Performance Task for Lab Report: (your ID = AB-CDEFG-H)

A	В	C	D	E	F	G	H
2	0	4	2	1	2	1	1

```
clc;
A=2;
B=0;
C=4;
D=2;
E=1;
F=2;
G=1;
H=1;
$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$
% Analog to Digital Conversion
time duration = 0.2;
%% Analog-like signal's representation
% Analog signal generation is not possible in MATLAB
a1 = F + 1;
a2 = F + 3;
a3 = F + 2;
a4 = F + 4;
f1 = G + 5;
f2 = G + 7;
f3 = G + 1;
f4 = G + 2;
a=[a1 \ a2 \ a3];
f=[f1 f2 f3];
analog_t = 0:0.0001:time_duration;
```

```
analog sig = a1*sin(2*pi*f1*analog t) + a2*cos(2*pi*f2*analog t) +
a3*sin(2*pi*f3*analog t) + a4*sin(2*pi*f4*analog t);
figure
hold on
subplot(1,2,1)
plot(analog t, analog sig, 'linewidth', 1.5)
arid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('analog signal')
%% Sampling Frequency
fs = 250;
ts = 1/fs;
%% Sampling
samp t = 0:1/fs:time duration;
samp sig = a1*sin(2*pi*f1*samp t) + a2*cos(2*pi*f2*samp t) +
a3*sin(2*pi*f3*samp t) + a4*sin(2*pi*f4*samp t);
hold on
subplot(1,2,2)
plot(samp t, samp sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title(['sampled signal for ',num2str(fs),' Hz sampling frequency'])
%% Levels for Quantization
L = 8;
%% Quantizing
delta = (max(samp sig) - min(samp sig))/(L-1); % step size
quant sig = min(samp sig) + round((samp sig-min(samp sig))/delta)*delta; %
quantized signal
figure
subplot(1,2,1)
plot(samp t, samp sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('sampled signal')
subplot(1,2,2)
plot(samp t, quant sig, 'linewidth', 1.5);
xlabel('time')
vlabel('amplitude')
title('quantized samples')
%% Number of Bits/Sample
nb = log2(L);
%% Encoding
i = round((samp sig-min(samp sig))/delta); % index for encoding
dig data matrix = de2bi(i,nb); % encoded binary bits are as a matrix here
dig data = reshape(dig data matrix',1,[]); % encoded binary bits are as an
array here
disp(['The index values for encoding from quantization of the sampled signal
are: ',num2str(i)])
disp(['The converted bits from the input analog signal are:
', num2str(dig data)])
```

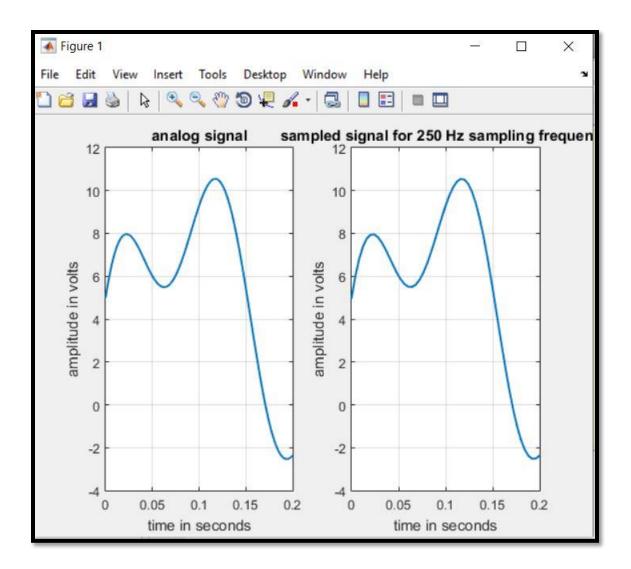

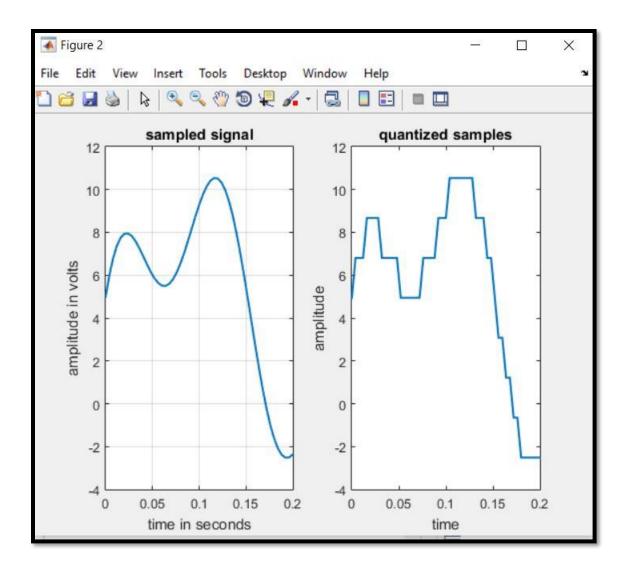

Name: Md. Tanvir Ahmmad ID: 20-43015-1 SN: 26

```
close all;
clc;
A=2;
B=0;
C=4;
D=3;
E=0;
F=1;
G=5;
H=1;
% Analog to Digital Conversion
$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$
time duration = 0.2;
%% Analog-like signal's representation
% Analog signal generation is not possible in MATLAB
a1 = F + 1;
a2 = F + 3;
a3 = F + 2;
a4 = F + 4;
f1 = G + 5;
f2 = G + 7;
f3 = G + 1;
f4 = G + 2;
a=[a1 \ a2 \ a3];
f=[f1 f2 f3];
analog t = 0:0.0001:time duration;
analog sig = a1*sin(2*pi*f1*analog t) + a2*cos(2*pi*f2*analog t) +
a3*sin(2*pi*f3*analog t) + a4*sin(2*pi*f4*analog t);
figure
hold on
subplot(1,2,1)
plot(analog t, analog sig,'linewidth',1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('analog signal')
%% Sampling Frequency
fs = 250;
ts = 1/fs;
%% Sampling
samp t = 0:1/fs:time duration;
samp sig = a1*sin(2*pi*f1*samp t) + a2*cos(2*pi*f2*samp t) +
a3*sin(2*pi*f3*samp t) + a4*sin(2*pi*f4*samp t);
hold on
subplot(1,2,2)
plot(samp t, samp sig, 'linewidth', 1.5)
```

```
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title(['sampled signal for ',num2str(fs),' Hz sampling frequency'])
%% Levels for Quantization
L = 8;
%% Ouantizing
delta = (max(samp sig) - min(samp sig))/(L-1); % step size
quant sig = min(samp sig) + round((samp sig-min(samp sig))/delta)*delta; %
quantized signal
figure
subplot(1,2,1)
plot(samp t, samp sig, 'linewidth', 1.5)
xlabel('time in seconds')
ylabel('amplitude in volts')
title('sampled signal')
subplot(1,2,2)
plot(samp t, quant sig, 'linewidth', 1.5);
xlabel('time')
ylabel('amplitude')
title('quantized samples')
%% Number of Bits/Sample
nb = log2(L);
%% Encoding
i = round((samp sig-min(samp sig))/delta); % index for encoding
dig data matrix = de2bi(i,nb); % encoded binary bits are as a matrix here
dig data = reshape(dig data matrix',1,[]); % encoded binary bits are as an
array here
disp(['The index values for encoding from quantization of the sampled signal
are: ', num2str(i)])
disp(['The converted bits from the input analog signal are:
', num2str(dig data)])
```




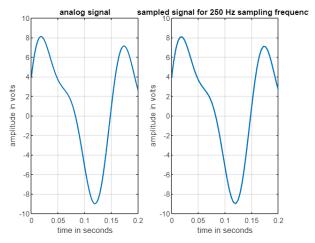


Figure 1 × Figure 2 × +

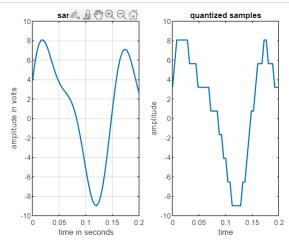


The index values for encoding from quantization of the sampled signal are: 5 6 7 7 7 7 7 7 6 6 6 6 5 5 5 5 5 5 4 4 4 4 3 3 2 2 1 1 1 1 2 3 4 4 5 6 6 6 7 7 6 6 6 5 The converted bits from the input analog signal are: 1

```
ID: 20-43065-1
SN: 27
close all;
clc;
A=2;
B=0;
C=4;
D=3;
E=0;
F=6;
G=5;
H=1;
% Analog to Digital Conversion
$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$$
time duration = 0.2;
%% Analog-like signal's representation
a1 = F + 1;
a2 = F + 3;
a3 = F + 2;
a4 = F + 4;
f1 = G + 5;
f2 = G + 7;
f3 = G + 1;
f4 = G + 2;
a=[a1 \ a2 \ a3];
f=[f1 f2 f3];
analog t = 0:0.0001:time duration;
analog sig = a1*sin(2*pi*f1*analog t) + a2*cos(2*pi*f2*analog t) +
a3*sin(2*pi*f3*analog t) + a4*sin(2*pi*f4*analog t);
figure
hold on
subplot(1,2,1)
plot(analog t, analog sig,'linewidth',1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('analog signal')
%% Sampling Frequency
fs = 250;
ts = 1/fs;
%% Sampling
samp t = 0:1/fs:time duration;
samp sig = a1*sin(2*pi*f1*samp t) + a2*cos(2*pi*f2*samp t) +
a3*sin(2*pi*f3*samp t) + a4*sin(2*pi*f4*samp t);
hold on
subplot(1,2,2)
plot(samp t, samp sig, 'linewidth', 1.5)
```

Name: Shabiha Parvin Shila

```
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title(['sampled signal for ',num2str(fs),' Hz sampling frequency'])
%% Levels for Quantization
L = 8;
%% Quantizing
delta = (max(samp sig) - min(samp sig))/(L-1); % step size
quant sig = min(samp sig) + round((samp sig-min(samp sig))/delta)*delta; %
quantized signal
figure
subplot(1,2,1)
plot(samp t, samp sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('sampled signal')
subplot(1,2,2)
plot(samp t, quant sig,'linewidth',1.5);
xlabel('time')
ylabel('amplitude')
title('quantized samples')
%% Number of Bits/Sample
nb = log2(L);
%% Encoding
i = round((samp sig-min(samp sig))/delta); % index for encoding
dig data matrix = de2bi(i,nb); % encoded binary bits are as a matrix here
dig data = reshape(dig data matrix',1,[]); % encoded binary bits are as an
array here
disp(['The index values for encoding from quantization of the sampled signal
are: ', num2str(i)])
disp(['The converted bits from the input analog signal are:
', num2str(dig data)])
Figure 1 × Figure 2 × +
                    nalog signa
                             ed signal for 250 Hz sampling frequence
```

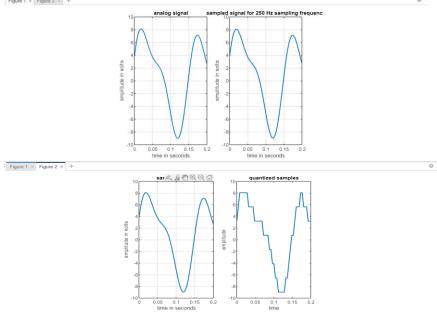



The index values for encoding from quantization of the sampled signal are: 5 6 7 7 7 7 7 7 6 6 6 6 5 5 5 5 5 5 4 4 4 4 3 3 2 2 1 1 0 0 0 0 0 1 1 2 3 4 4 5 6 6 6 7 7 6 6 6 5 5 5 The converted bits from the input analog signal are: 1 0 1 0 1 0 1 1 0 1 1 0 1 1 0 1 1 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 1 0 1 0 0 1 0 0 1 0 0 1 0 0 1 1 $1 \;\; 1 \;\; 0 \;\; 0 \;\; 1 \;\; 0 \;\; 1 \;\; 0 \;\; 1 \;\; 0 \;\; 1 \;\; 0 \;\;$ 0 1


Name: Faisal, MD. Omar Faruk Serial no: 31 ID:20-43669-2

```
1.
close all;
clc;
A=2;
B=0;
C=4;
D=3;
E=6;
F=6;
G=9;
H=2;
time duration = 0.2;
a1 = F + 1;
a2 = F + 3;
a3 = F + 2;
a4 = F + 4;
f1 = G + 5;
f2 = G + 7;
f3 = G + 1;
f4 = G + 2;
a=[a1 \ a2 \ a3];
f=[f1 f2 f3];
analog t = 0:0.0001:time_duration;
analog sig = a1*sin(2*pi*f1*analog t) + a2*cos(2*pi*f2*analog t) +
a3*sin(2*pi*f3*analog t) + a4*sin(2*pi*f4*analog t);
figure
hold on
subplot(1,2,1)
plot(analog t, analog sig,'linewidth',1.5)
grid on
xlabel('Time in seconds')
ylabel('Amplitude in volts')
title('analog signal SL:-31, ID:20-43669-2')
fs = 250;
ts = 1/fs;
samp t = 0:1/fs:time duration;
```

```
samp sig = a1*sin(2*pi*f1*samp t) + a2*cos(2*pi*f2*samp t) +
a3*sin(2*pi*f3*samp t) + a4*sin(2*pi*f4*samp t);
hold on
subplot(1,2,2)
plot(samp t, samp sig, 'linewidth', 1.5)
arid on
xlabel('time in seconds')
vlabel('amplitude in volts')
title(['sampled signal for ', num2str(fs),' Hz sampling frequency
SL:-31, ID:20-43669-2'])
L = 8;
delta = (max(samp sig) - min(samp sig))/(L-1); % step size
quant sig = min(samp sig) + round((samp sig-
min(samp sig))/delta)*delta; % quantized signal
figure
subplot(1,2,1)
plot(samp t, samp sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('sampled signal SL:-31 ID:20-43669-2')
subplot(1,2,2)
plot(samp t, quant sig, 'linewidth', 1.5);
xlabel('time')
ylabel('amplitude')
title('quantized samples SL:-31, ID:20-43669-2'
nb = log2(L);
i = round((samp sig-min(samp sig))/delta); % index for encoding
dig data matrix = de2bi(i,nb); % encoded binary bits are as a matrix
here
dig data = reshape(dig data matrix',1,[]); % encoded binary bits are
as an array here
disp(['The index values for encoding from quantization of the
sampled signal are: ', num2str(i)])
disp(['The converted bits from the input analog signal are:
', num2str(dig data)])
```

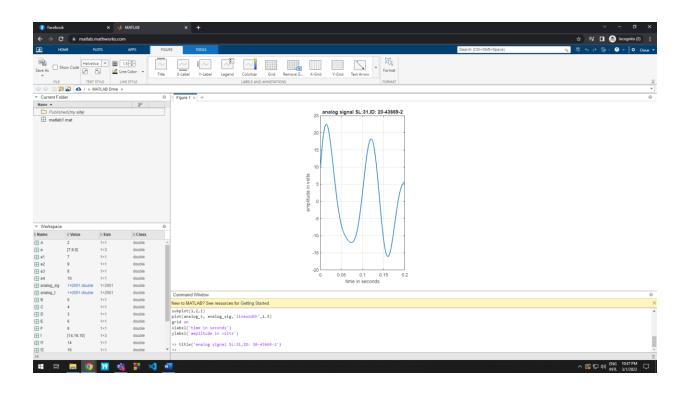

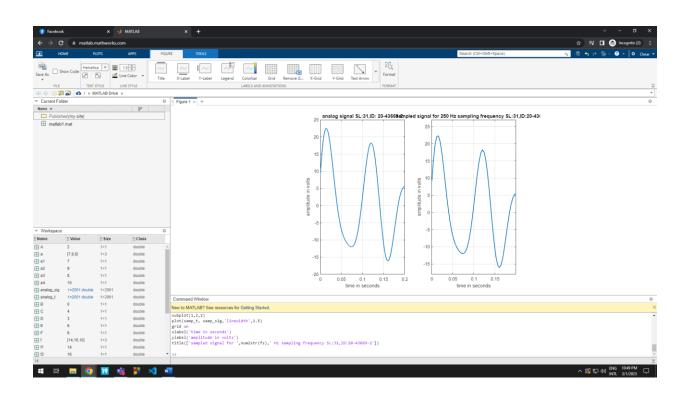

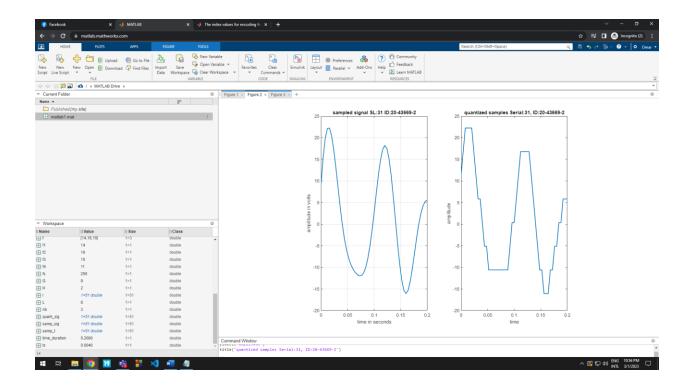



The index values for encoding from quantization of the sampled signal are: 5 6 7 7 7 7 6 5 4 4 3 2 2 1 1 1 1 1 1 1 1 2 3 3 4 5 6 6 6 6 6 5 4 3 2 1 1 0 0 0 1 1 2 2 3 3 4 4 4


```
Name: SAIMA SADIA RATRI
Serial no: 33
ID:20-43793-2
1.
close all;
clc;
A=2;
B = 0;
C=4;
D=3;
E=7;
F=9;
G=3;
H=2;
% Analog to Digital Conversion
time duration = 0.2;
%% Analog-like signal's representation
% Analog signal generation is not possible in MATLAB
a1 = F + 1;
a2 = F + 3;
a3 = F + 2;
a4 = F + 4;
f1 = G + 5;
f2 = G + 7;
f3 = G + 1;
f4 = G + 2;
a=[a1 \ a2 \ a3];
f=[f1 f2 f3];
analog t = 0:0.0001:time duration;
analog sig = a1*sin(2*pi*f1*analog t) +
a2*cos(2*pi*f2*analog t) + a3*sin(2*pi*f3*analog t) +
a4*sin(2*pi*f4*analog t);
figure
hold on
subplot(1,2,1)
```

```
plot(analog t, analog sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
vlabel('amplitude in volts')
title('analog signal Serial:33, ID: 20-43793-2')
%% Sampling Frequency
fs = 250;
ts = 1/fs;
%% Sampling
samp t = 0:1/fs:time duration;
samp sig = a1*sin(2*pi*f1*samp t) + a2*cos(2*pi*f2*samp t)
+ a3*sin(2*pi*f3*samp t) + a4*sin(2*pi*f4*samp t);
hold on
subplot(1,2,2)
plot(samp t, samp sig, 'linewidth', 1.5)
grid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title(['sampled signal for ', num2str(fs), ' Hz sampling
frequency Serial:33, ID: 20-43793-2'1)
%% Levels for Quantization
L = 8;
%% Quantizing
delta = (max(samp sig) - min(samp sig))/(L-1); % step size
quant sig = min(samp sig) + round((samp sig-
min(samp sig))/delta)*delta; % quantized signal
figure
subplot(1,2,1)
plot(samp t, samp sig, 'linewidth', 1.5)
arid on
xlabel('time in seconds')
ylabel('amplitude in volts')
title('sampled signal Serial :33 Id: 20-43793-2')
subplot(1,2,2)
plot(samp t, quant sig, 'linewidth', 1.5);
xlabel('time')
ylabel('amplitude')
title('quantized samples Serial:33, ID: 20-43793-2')
%% Number of Bits/Sample
nb = log2(L);
%% Encoding
```

```
i = round((samp_sig-min(samp_sig))/delta); % index for
encoding
dig_data_matrix = de2bi(i,nb); % encoded binary bits are as
a matrix here
dig_data = reshape(dig_data_matrix',1,[]); % encoded binary
bits are as an array here
disp(['The index values for encoding from quantization of
the sampled signal are: ',num2str(i)])
disp(['The converted bits from the input analog signal are:
',num2str(dig data)])
```

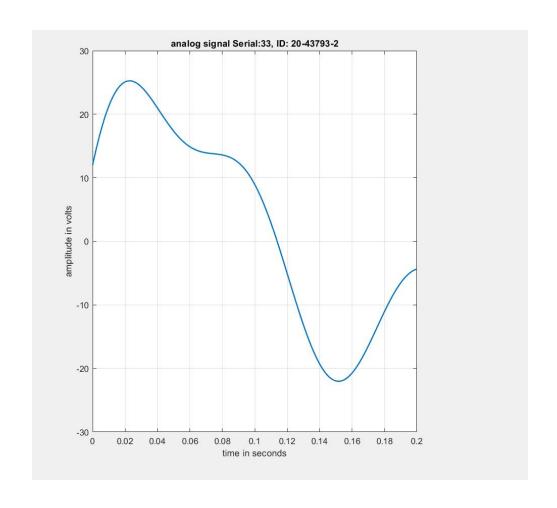

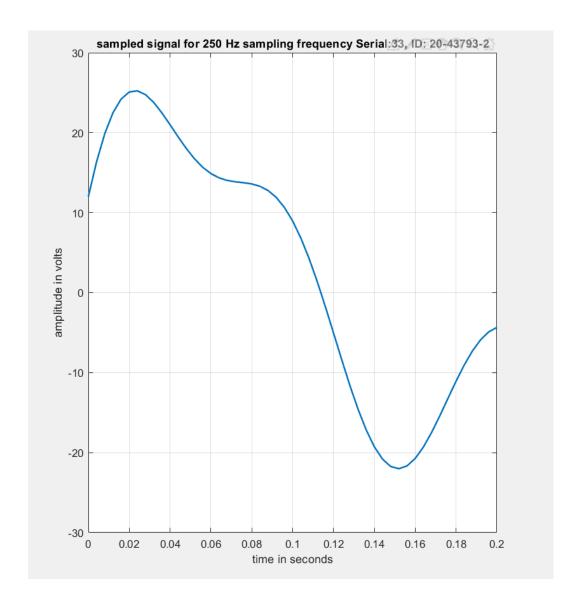

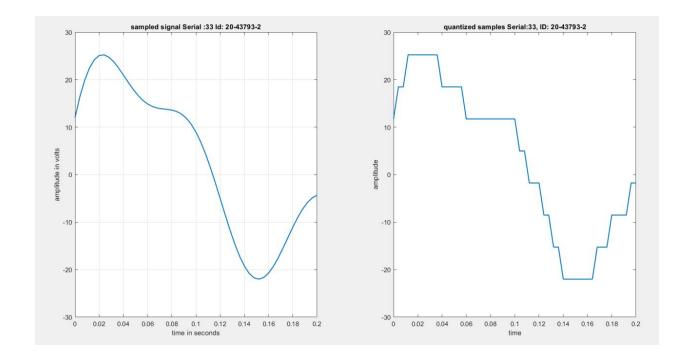

The index values for encoding from quantization of the sampled signal are: $5\ 6\ 6\ 7\ 7\ 7\ 7\ 7\ 6\ 6\ 6\ 6\ 5\ 5\ 5\ 5\ 5\ 5\ 5\ 5\ 5\ 5\ 5\ 4\ 4\ 3\ 3\ 3\ 2\ 2\ 1\ 1\ 0\ 0\ 0\ 0\ 0\ 1\ 1\ 1\ 2\ 2\ 2\ 2\ 3\ 3$

References:

- 1. MATLAB user guide.
- 2. Prof. Dr.-Ing. Andreas Czylwik, "MATLAB" for Communications.

Discussion:

The goal of this lab experiment was understanding of Analog to Digital Conversion using MATLAB. The code manual was first verified. Every line of code was entered into MATLAB and every

instruction was thoroughly studied. We using our ID number. The main purpose of this experiment is to understand the use of MATLAB for solving communication engineering problems. And develop understanding of Digital to Analog conversion using MATLAB.