# SUPER RES DATA WRANGLER (CLI) USER MANUAL

This user manual is for the command line (CLI) version.

For information on how to use the graphical user interface (GUI) version, please refer to the Super Res Data Wrangler (GUI) User Manual.



Tristan Wallis <u>t.wallis@uq.edu.au</u>

Alex McCann <u>a.mccann2@uq.edu.au</u>

Single Molecule Neuroscience Laboratory (Fred Meunier)

Queensland Brain Institute

The University of Queensland, Australia

# Introduction

# Meunier lab super resolution data analysis pipeline:

Super resolution data analysis often requires the sequential use of different analysis software, with each performing a different role.

Our lab uses either PalmTracer or TrackMate to first locate single particle centroids in each frame (localisation) and subsequently connect these centroids together to form trajectories (tracking), prior to drift correction in SharpViSu and cluster analysis in NASTIC, segNASTIC or BOOSH, followed by meta-analysis of the clustering results in NASTIC Wrangler.

Each of these steps in the super resolution analysis pipeline requires different input filetypes and produce different output filetypes.

Table 1: Analysis software that make up the super-resolution analysis pipeline used in the Meunier lab, with input and output filetypes shown for each.

Analysis software	Input filetype	Output filetype					
Step 1: Localisation and Tracking							
PalmTracer (Metamorph plugin)	Mutliframe time-lapse acquisition (e.g., .czi, .tif)	.txt .trc					
TrackMate (FIJI plugin)	.csv						
	Step 2: Drift correction						
SharpViSu	.ascii .id (uncorrected)	.ascii .id (drift corrected)					
Step 3: Cluster analysis							
NASTIC, segNASTIC and BOOSH	.trxyt	metrics.tsv					
Step 4: Meta analysis of clustering data							
NASTIC Wrangler	metrics.tsv	processed_metrics.tsv					

#### **Super Res Data Wrangler:**

The purpose of the Super Res Data Wrangler is to bridge the gaps between the software used in this super-resolution analysis pipeline by enabling the conversion between the different trajectory filetypes.

# Input filetypes that can be converted:

The command line version can convert 6 different input filetypes (using preset input filetype parameters):

File format	Software	Assumed X,Y units	Assumed Time units	
.txt PalmTracer		Pixels (px)	Frames	
.trc	PalmTracer	Pixels (px)	Frames	
.trxyt	NASTIC, segNASTIC, BOOSH	Microns (um)	Seconds (s)	
.ascii (uncorrected)	SharpViSu	Pixels (px)	Frames	
.ascii (drift corrected)	SharpViSu	Nanometers (nm)	Frames	
.csv	TrackMate	Microns (um)	Frames	

See Appendix 1 for detailed information on each trajectory filetype.

NOTE: To convert trajectory filetypes other than the ones shown above, please use the GUI version of the Super Res Data Wrangler (see the Super Res Data Wrangler GUI User Manual for more details).

# Output filetypes that can be generated:

The command line version can generate the 5 below output filetypes from the input filetypes mentioned above:

File format	File format Software		Assumed Time units	
.txt	PalmTracer	Pixels (px)	Frames	
.trc	PalmTracer	Pixels (px)	Frames	
.trxyt	NASTIC, segNASTIC, BOOSH	Microns (um)	Seconds (s)	
.ascii (uncorrected)	SharpViSu	Pixels (px)	Frames	
.ascii (drift corrected) SharpViSu		Nanometres (nm)	Frames	

See Appendix 1 for detailed information on each trajectory filetype.

# **Computer requirements**

The NASTIC suite (which includes the Super Res Data Wrangler CLI) consists of Python scripts that require Python 3.8 or later, and a number of Python modules to run. Python is available for most computer platforms so you can run it on Windows, Linux and Mac. It will not run on the older version of Python 2.7 which is still lingering on a lot of computer systems. You are strongly encouraged to either visit <a href="https://www.python.org">https://www.python.org</a> and download and install the latest version. You will also need to install a number of Python modules, which is simple to do from a command line.

The Python module versions used in the most recent version of the Super Res Data Wrangler CLI are:

scipy	v1.13.1
numpy	v1.23.2
scikit-learn	v1.1.2

To install these specific Python module versions, open a new instance of the command line and copy-paste in the following:

```
python -m pip install scipy==1.13.1 numpy==1.23.2 scikit-learn==1.1.2
```

```
C:\Users\uqamcc11>python -m pip install scipy==1.13.1 numpy==1.23.2 scikit-learn==1.1.2
```

# **Updates**

The Super Res Data Wrangler CLI along with other NASTIC family members is periodically updated with new functionalities.

Check the GitHub for updates using this link:


https://github.com/tristanwallis/smlm\_clustering/releases

# **Running the Super Res Data Wrangler CLI**


# Step 1 - Copy the script to the top-level directory:

Copy the **super\_res\_data\_wrangler\_cli.py** script from the NASTIC folder to the top-level directory containing the trajectory files that you wish to convert.

Screenshot of NASTIC folder containing the super\_res\_data\_wrangler\_cli.py script:

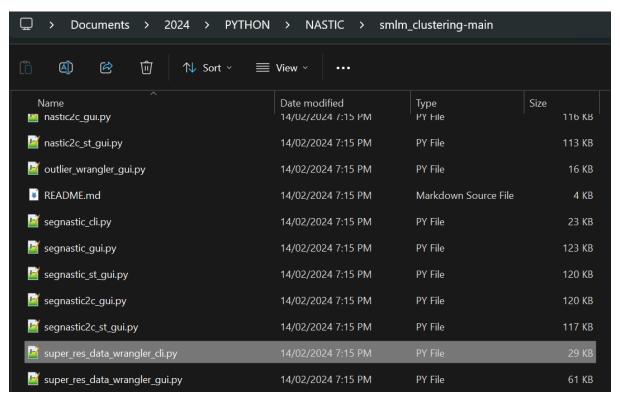

Screenshot showing example directory containing trajectory files to be converted, and a copy of the super res data wrangler cli.py script:

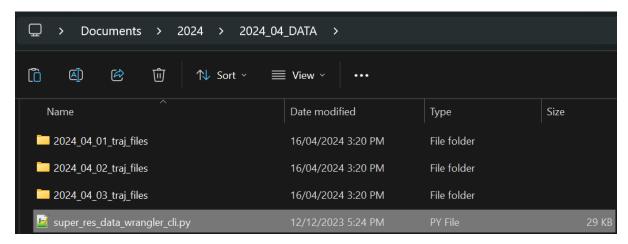

## Step 2 - Run the script:

## Option 1 – double click on the script:

Double click on **super\_res\_data\_wrangler\_cli.py** script, and a simple text mode interface will launch in a terminal:

# Option 2 – run the script using the terminal:

Alternatively, this can be done by opening a terminal, navigating to the location of the **super\_res\_data\_wranlger\_cli.py** script, and typing the following before pressing the return key:

```
C:\Users\uqamcc11\Documents\2024\2024_04_DATA>python super_res_data_wrangler_cli.py
```

This will launch the simple text mode interface in the terminal:

# **Step 3 – Select the input filetype:**

Type the letter corresponding to the filetype you wish to convert FROM followed by the return key. E.g., if converting FROM PalmTracer .txt, type the letter t followed by the return key:

```
Ctrl-c to quit at any time

Select a file type to convert from: [a]scii (px) [d]rift corrected ascii (nm) [t]xt t[r]c tr[x]yt [c]sv (um; Frames) t
```

#### **Step 4 – Select the output filetype:**

When prompted, type the letter corresponding to the filetype you wish to convert TO followed by the return key. E.g., if converting TO .trxyt for cluster analysis in NASTIC, type the letter x followed by the return key:

## **Step 5 – (Optional) Define the pixel size:**

Internally the Super Res Data Wrangler works in microns (um). Filetypes that are in pixels (px) therefore need to be converted using the 'pixel size (um/px)' parameter, which works as a conversion factor (default value = 0.106 um/px).

If the spatial units in the input filetype are different to that of the output filetype, the 'pixel size (um/px)' parameter will appear:

```
SUPER RES DATA WRANGLER CLI - Tristan Wallis 20240424

Ctrl-c to quit at any time

Select a file type to convert from: [a]scii (px) [d]rift corrected ascii (nm) [t]xt t[r]c tr[x]yt [c]sv (um; Frames) t

Select a file type to convert to: [a]scii [d]rift corrected ascii [t]xt t[r]c tr[x]yt

X

Enter pixel size of txt file in microns/pixel (default = 0.106um/px):
```

To set the pixel size, type the pixel size followed by the return key. E.g., for a pixel size of  $0.100 \mu m/px$ , type 0.100 followed by the return key:

## **Step 6 – (Optional) Define the acquisition frequency:**

Internally the Super Res Data Wrangler works in seconds (s). Filetypes that have Time units in Frames therefore need to be converted using the 'acquisition frequency (Hz)' parameter, which works as a conversion factor (default value = 50.0 Hz). To find the Acquisition frequency of a file, divide 1 by the time taken to acquire each individual frame (e.g., if a single frame is acquired every 0.02 seconds: 1/0.02 = 50 Hz).

If the temporal units in the input filetype are different to that of the output filetype, the 'acquisition frequency (Hz)' parameter will appear:

To set the acquisition frequency, type the acquisition frequency followed by the return key. E.g., for an acquisition frequency of 100 (1 frame acquired every 10 ms), type 100 followed by the return key:

```
Command Prompt-python s × + \

SUPER RES DATA WRANGLER CLI - Tristan Wallis 20240424

Ctrl-c to quit at any time

Select a file type to convert from: [a]scii (px) [d]rift corrected ascii (nm) [t]xt t[r]c tr[x]yt [c]sv (um; Frames) t

Select a file type to convert to: [a]scii [d]rift corrected ascii [t]xt t[r]c tr[x]yt

X

Enter pixel size of txt file in microns/pixel (default = 0.106um/px):0.100

Enter acquistion frequency of trxyt file in Hz (default = 50.0Hz):100
```

#### Step 7 – Select files to convert.

After selecting the input and output filetypes (and if applicable the pixel size and acquisition frequency parameters) the terminal will display a numbered list of every trajectory file that has the file extension of the selected input filetype that was found in the top directory.

Note: every file with the selected input filetype extension will be shown (including non-trajectory files). If a file is selected for conversion and cannot be read, the Super Res Data Wrangler will just skip over it and continue onto the next file.

```
Enter acquistion frequency of trxyt file in Hz (default = 50.0Hz):100

11 txt files found in this directory:
    [1] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C1_trcPALMTracer.txt
    [2] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C2_trcPALMTracer.txt
    [3] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D2_C1_trcPALMTracer.txt
    [4] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D2_C2_trcPALMTracer.txt
    [5] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_02_Sample1_D1_C1_trcPALMTracer.txt
    [6] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D1_C2_trcPALMTracer.txt
    [7] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_D2_traj_files\2024_04_02_Sample1_D1_C2_trcPALMTracer.txt
    [8] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D2_C2_trcPALMTracer.txt
    [9] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D1_C2_trcPALMTracer.txt
    [10] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C1_trcPALMTracer.txt
    [11] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [12] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [13] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [14] C:\Users\uqamcc11\Documents\2024\2024_04_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [15] C:\Users\uqamcc11\Documents\2024\2024_04_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [15] C:\Users\uqamcc11\Documents\2024\2024_04_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [15] C:\
```

#### Option 1 – Convert all files:

To convert every file found in the directory, type the letter a followed by the enter key:

```
Enter acquistion frequency of trxyt file in Hz (default = 50.0Hz):100

11 txt files found in this directory:
    [1] C:\Users\uqamcc11\Documents\2024\2024_04_0H_DATA\2024_0H_01_traj_files\2024_04_01_Sample1_D1_C1_trcPALMTracer.txt
    [2] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_01_traj_files\2024_0H_01_Sample1_D1_C2_trcPALMTracer.txt
    [3] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_01_traj_files\2024_0H_01_Sample1_D2_C1_trcPALMTracer.txt
    [4] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_01_traj_files\2024_0H_01_Sample1_D2_C2_trcPALMTracer.txt
    [5] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_01_traj_files\2024_0H_01_Sample1_D2_C2_trcPALMTracer.txt
    [6] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_01_traj_files\2024_0H_02_Sample1_D1_C1_trcPALMTracer.txt
    [7] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_02_traj_files\2024_0H_02_Sample1_D1_C2_trcPALMTracer.txt
    [8] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_02_traj_files\2024_0H_02_Sample1_D2_C2_trcPALMTracer.txt
    [9] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_02_traj_files\2024_0H_02_Sample1_D2_C2_trcPALMTracer.txt
    [10] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_03_traj_files\2024_0H_03_Sample1_D1_C1_trcPALMTracer.txt
    [11] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_03_traj_files\2024_0H_03_Sample1_D1_C2_trcPALMTracer.txt
    [11] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_03_traj_files\2024_0H_03_Sample1_D1_C2_trcPALMTracer.txt
    [12] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_03_traj_files\2024_0H_03_Sample1_D1_C2_trcPALMTracer.txt
    [13] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_03_traj_files\2024_0H_03_Sample1_D1_C2_trcPALMTracer.txt
    [14] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_03_traj_files\2024_0H_03_Sample1_D1_C2_trcPALMTracer.txt
    [15] C:\Users\uqamcc11\Documents\2024\2024_0H_DATA\2024_0H_03_traj_files\2024_0H_03_Sample1_D1_C2_trcPALMTracer.txt
    [15] C:\Users\
```

The Super Res Data Wrangler will start reading each input file and converting them into the selected output file format:

```
11 txt files found in this directory:

[1] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C1_trcPALMTracer.txt
[2] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C2_trcPALMTracer.txt
[3] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D2_C1_trcPALMTracer.txt
[4] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D2_C1_trcPALMTracer.txt
[5] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_0.01_Sample1_D2_C2_trcPALMTracer.txt
[6] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_0.02_Sample1_D1_C2_trcPALMTracer.txt
[7] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_0.02_Sample1_D1_C2_trcPALMTracer.txt
[8] C:\Users\uqamcc11\Documents\2024\2024_04_04_DATA\2024_04_02_traj_files\2024_04_0.02_Sample1_D1_C2_trcPALMTracer.txt
[9] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_02_Sample1_D2_C2_trcPALMTracer.txt
[10] C:\Users\uqamcc11\Documents\2024\2024_204_DATA\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C1_trcPALMTracer.txt
[11] C:\Users\uqamcc11\Documents\2024\2024_204_DATA\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
[12] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
[13] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
[14] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C1_trcPALMTracer.txt...

Select files (comma separated, a = select all):a

Reading C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C2_trcPALMTracer-20240416-161106.trxyt...
319331 lines read

Writing C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C2_trcPALMTracer
```

The converted output file will be saved in the same location as the original input file, with a datestamp following the original filename. (E.g., originalfilename.txt -> originalfilename\_YYYYMMDD-hhmmss.trxyt).

Note: If a file is selected for conversion and cannot be read, the Super Res Data Wrangler will just skip over it and continue onto the next file:

```
Reading C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D2_C2_trcPALMTracer.txt...
319331 lines read

Writing C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D2_C2_trcPALMTracer-20240416-161112.trxyt...
319331 lines written

Reading C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\data.txt...
ALERT: 0 lines read.
Please make sure the file is not empty.

Reading C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D1_C1_trcPALMTracer.txt...
319331 lines read

Writing C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D1_C1_trcPALMTracer.20240416-161114.trxyt...
319331 lines written
```

Once every file has been converted, the console will print 'Done!' and will start from the beginning to allow for another round of file conversion:

#### Option 2 – Convert a subset of files:

To convert a subset of the files found in the directory, type the number corresponding to each file to be converted, separated by a comma followed by the return key.

E.g., to convert files [1] [2] [6] [7] [10] and [11], type 1,2,6,7,10,11 followed by the return key:

```
11 txt files found in this directory:
    [1] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C1_trcPALMTracer.txt
    [2] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D1_C2_trcPALMTracer.txt
    [3] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D2_C1_trcPALMTracer.txt
    [4] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Sample1_D2_C2_trcPALMTracer.txt
    [5] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_02_Sample1_D2_C2_trcPALMTracer.txt
    [6] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D1_C1_trcPALMTracer.txt
    [7] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D1_C2_trcPALMTracer.txt
    [8] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D1_C2_trcPALMTracer.txt
    [9] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D2_C2_trcPALMTracer.txt
    [10] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Sample1_D2_C2_trcPALMTracer.txt
    [11] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C1_trcPALMTracer.txt
    [12] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [13] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [14] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [15] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [15] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Sample1_D1_C2_trcPALMTracer.txt
    [15] C:\Users\uqamcc11\Documents\2024\2024_04_04_DATA\2024_04_03_traj_files\2024_04_04_03_Sam
```

The Super Res Data Wrangler will start reading each selected input file and converting them into the selected output file format:

```
11 txt files found in this directory:
[1] C:\Users\uqamcc11\Documents\2024\2024_04_01_DATA\2024_04_01_traj_files\2024_04_01_01_samplel_D1_C1_trcPALMTracer.txt
[2] C:\Users\uqamcc11\Documents\2024\2024_04_01_DATA\2024_04_01_traj_files\2024_04_01_01_samplel_D1_C2_trcPALMTracer.txt
[3] C:\Users\uqamcc11\Documents\2024\2024_04_0DATA\2024_04_01_traj_files\2024_04_01_01_samplel_D2_C1_trcPALMTracer.txt
[4] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_samplel_D2_C2_trcPALMTracer.txt
[5] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_02_04_02_Samplel_D1_C1_trcPALMTracer.txt
[6] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_04_02_samplel_D1_C1_trcPALMTracer.txt
[7] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Samplel_D2_C1_trcPALMTracer.txt
[8] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Samplel_D2_C1_trcPALMTracer.txt
[9] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_02_traj_files\2024_04_02_Samplel_D1_C1_trcPALMTracer.txt
[11] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Samplel_D1_C1_trcPALMTracer.txt
[12] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Samplel_D1_C1_trcPALMTracer.txt
[13] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_03_traj_files\2024_04_03_Samplel_D1_C2_trcPALMTracer.txt
[14] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_04_1Samplel_D1_C1_trcPALMTracer.txt
[15] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_04_1Samplel_D1_C1_trcPALMTracer.txt
[16] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Samplel_D1_C2_trcPALMTracer.txt
[17] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Samplel_D1_C2_trcPALMTracer.txt
[18] C:\Users\uqamcc11\Documents\2024\2024_04_DATA\2024_04_01_traj_files\2024_04_01_Samplel_D1_C2_trcPALMTracer.txt
[18] C:\Users\u
```

The converted output file will be saved in the same location as the original input file, with a datestamp following the original filename. (E.g., originalfilename.txt -> originalfilename YYYYMMDD-hhmmss.trxyt).

Once every file has been converted, the console will print 'Done!' and will start from the beginning to allow for another round of file conversion:

# **Appendix 1: Trajectory filetypes**

#### PalmTracer .txt file format:

Contain 3 headers (number of rows before data rows starts).

Each data line (row) contains 8 tab separated values (columns):

```
[1] Track; (Trajectory #, counting up from 1)
```

[2] Plane; (Temporal information, Frame #, counting up from 1)

[3] CentroidX(px); (Spatial information, X-position, pixels)

[4] CentroidY(px); (Spatial information, Y-position, pixels)

\*[5] CentroidZ(um);

\*[6] Integrated\_Intensity;

\*[7] id;

\*[8] Pair-Distance(px);

Width 329	Height 158	nb_Planes 8000 8081	nb_Tracks 0.106	Pixel_Size(um) None False	Frame	_Duration(s)	Gauss	ian_Fit	Spectral
Track	Plane	<pre>CentroidX(px)</pre>	<pre>CentroidY(px)</pre>	CentroidZ(um)	Integ	rated_Intensity	id	Pair_D:	istance(px)
1	1	276.2695728307	06 47.086	95395577243	0	13089.15283203	313	43	0
1	2	274.3031335163	52 48.278	32523520935	0	7672.348876953	313	76	0
1	3	274.8919703169	22 47.52	79810094224	0	9931.117431646	963	146	0
1	4	273.6696149968	79 47.80	70693296009	0	5767.410888671	L88	236	0
1	5	275.4145759539	96 47.39 <sup>7</sup>	7724656005	0	7558.373779296	88	291	0
1	6	275.9340675349	4 46.664	45400960479	0	6259.390136718	375	308	0
1	7	275.8404658351	88 46.123	39353282329	0	3471.964599609	938	416	0
1	8	275.4380062695	73 46.214	49241717978	0	2029.815185546	88	440	0
1	9	274.7914787893	54 45.809	95767231888	0	9122.863525396	963	524	0
				<u>'</u>					

<sup>\* =</sup> Columns not needed for conversion, can be any number. If converting from another filetype, columns 5, 7 and 8 will be replaced with a 0, and column 6 will be replaced with -1 if the input filetype does not contain integrated intensity information.

#### PalmTracer .trc file format:

Contain 0 headers.

Each data line (row) consists of 6 tab separated values (columns):

- [1] Trajectory#;
- [2] Frame#;
- [3] X-position(px);
- [4] Y-position(px);
- \*[5] -1;
- \*[6] Integrated Intensity;

```
      276.269572723821
      47.080539615183 -1
      13089.1525878906

      274.303133599286
      48.2782523061602
      -1
      7672.34838867188

      274.891970360777
      47.5279809124645
      -1
      9931.11694335938

      273.669614968534
      47.8070693377678
      -1
      5767.4111328125

      275.414575972816
      47.3977246431582
      -1
      7558.3740234375

                           2
                           3
1
                          4
1
                                                 275.93406753494 46.664540057044 -1 6259.39013671875
275.840465753652 46.12393526663 -1 3471.96435546875
275.43800630337 46.2149242190112 -1 2029.81530761719
                           6
1
1
                          8

      274.791478757012
      45.809576798377 -1
      9122.86328125

      275.824958927795
      46.5723829447615 -1
      8954.3144

      58.6367908782501
      101.742870799136 -1
      12686.416

      58.361849347087
      102.198444512936 -1
      10684.8942871094

      58.3014790906691
      102.042988140333 -1
      16990.997

1
                          9
                          1
                                                                                                                                                                                                               -1 8954.314453125
                           2
                                                                                                                                                                                                                                          12686.4106445313
2
                          3

      58.3014790906691
      102.042988140333

      58.3724221575284
      101.936737912003

2
                           4
                                                                                                                                                                                                                                             16990.9973144531
                           5
                                                                                                                                                                                                                  -1
                                                                                                                                                                                                                                     15367.7707519531
```

<sup>\* =</sup> Columns not needed for conversion, can be any number. Column 6 will be replaced with -1 if the input filetype does not contain integrated intensity information.

# NASTIC/segNASTIC/BOOSH .trxyt file format:

Contain 0 headers.

Each data line (row) consists of 4 space separated values (columns):

[1] Trajectory #; (trajectory number)

[2] X-position(um); (spatial information, microns)

[3] Y-position(um); (spatial information, microns)

[4] Time(s); (temporal information, seconds)

```
1 29.284574708725025 4.990537199209398 0.02
1 29.076132161524317 5.117494744452981 0.04
1 29.138548858242363 5.037965976721237 0.06
1 29.008979186664604 5.067549349803387 0.08
1 29.193945053118497 5.024158812174769 0.1
1 29.24901115870364 4.946441246046664 0.12
1 29.23908936988711 4.88913713826278 0.14
1 29.19642866815722 4.8987819672151875 0.16
1 29.12789674824327 4.855815140627962 0.18
1 29.23744564634627 4.936672592144719 0.2
2 6.215499833094511 10.784744304708415 0.02
2 6.186356030791222 10.833035118371216 0.04
2 6.179956783610924 10.816556742875298 0.06
2 6.18747674869801 10.805294218672318 0.08
```

# SharpViSu .ascii file format:

.ascii files contain 0 headers

Each ascii data line (row) consists of 9 comma separated values (columns):

```
*[1] 1;
[2] Frame #;
[3] n;
[4] X-position; (pixels (px))
[5] Y-position; (pixels (px))

*[6] Integrated_intensity;

*[7] 0;

*[8] 0;

*[9] 0;
```

#### Example:

```
1,0,1,12.144466281714381,16.719987550850586,7627.04278564453,0,0,0
1,0,2,21.380060175448545,7.56700319416653,3152.89190673828,0,0,0
1,0,3,13.336731143401561,15.698784374751062,2915.20043945313,0,0,0
1,0,4,17.45391412842103,11.668108966769635,2463.55096435547,0,0,0
1,0,5,16.36251646438727,13.082774724648425,2459.45245361328,0,0,0
1,0,6,14.997891859239918,14.165645956501866,2051.84259033203,0,0,0
1,0,7,8.574230579986414,20.73708293209756,1937.65270996094,0,0,0
1,0,8,15.630849608989978,13.848777888406932,1683.87921142578,0,0,0
1,0,9,14.904775879085415,14.559877912338266,1505.90997314453,0,0,0
1,0,10,8.150807399969825,21.237625625700968,1455.61853027344,0,0,0
```

NOTE: SharpViSu assumes pixel size is 0.100um/px (hardcoded value = 100). For acqusition files with other pixel sizes (e.g., 0.106um/px), navigate to the SharpViSu folder downloaded onto your computer, open the adjustformat.m script, adjust the '100' value in line 15 and 16 to the appropriate pixel size, and save. For example, if using a pixel size of 0.106: change line 15 from 'A(:,4:5) = A(:,4:5) \* 100 % x, y in nm' to 'A(:,4:5) = A(:,4:5) \* 106 % x, y in nm' and change line 16 from 'A(:,8:9) = A(:,8:9) \* 100; % sigmas in nm' to 'A(:,8:9) = A(:,8:9) \* 106; % sigmas in nm'.

<sup>\* =</sup> Columns not needed for conversion, can be any number

NOTE: when generating .ascii files, a trajectory .id file containing the Trajectory ID (Trajectory#) of each .ascii data line (row) is generated (with the same name and in the same folder as the .ascii), which is then used to convert back from the .ascii file format to other formats.

Each id data line (row) contains 1 value (column):

[1] Trajectory#;

Example:

#### SharpViSu .ascii (drift corrected) file format:

```
.ascii (drift corrected) files contain 0 headers

Each ascii data line (row) consists of 9 comma separated values (columns):

*[1] 1;

[2] Frame #;

[3] n;

[4] X-position; (nanometers (nm))

[5] Y-position; (nanometers (nm)))

*[6] Integrated_intensity;

*[7] 0;

*[8] 0;
```

#### Example:

\*[9] 0;

```
1,0,1, 209045.592443744, 142834.293217347, 50870.0478515625,0,0,0
1,0,2, 208435.743897142, 63666.8300319305, 10899.9936523438,0,0,0
1,0,3, 240230.942584511, 64285.0805918474, 8377.55151367188,0,0,0
1,0,4, 282032.840365532, 57774.6372087263, 6812.4140625,0,0,0
1,0,5, 127394.518568774, 86333.3469009349, 4333.64733886719,0,0,0
1,0,6, 286850.200721154, 38867.410435638, 2464.98876953125,0,0,0
1,1,1, 209045.196432015, 142698.726294003, 43768.1682128906,0,0,0
1,1,2, 208493.705895093, 63104.1156726907, 4010.64306640625,0,0,0
1,1,3, 240629.923029567, 64106.8561613844, 9554.67211914063,0,0,0
1,1,4, 281878.790360555, 57749.7140474961, 6441.98608398438,0,0,0
1,1,5, 125282.625184993, 89023.4809920917, 2805.40869140625,0,0,0
1,1,6, 283664.077863468, 38413.2870736027, 3613.64709472656,0,0,0
1,1,7, 58150.0695109681, 53421.1913628692, 9916.34057617188,0,0,0
```

NOTE: when generating .ascii files, a trajectory .id file containing the Trajectory ID (Trajectory#) of each .ascii data line (row) is generated (with the same name and in the same folder as the .ascii), which is then used to convert back from the .ascii file format to other formats.

<sup>\* =</sup> Columns not needed for conversion, can be any number

Each id data line (row) contains 1 value (column):

[1] Trajectory#;

# Example:

#### TrackMate .csv file format:

The number of headers can vary (requires manual selection in the 'Set parameters' tab).

Each line (row) contains several comma separated columns, 4 of which must contain the following information:

[ ] Trajectory #; (e.g., TRACK\_ID)
[ ] X-position; (e.g., POSITION\_X)
[ ] Y-position; (e.g., POSITION\_Y)
[ ] Time (Frames); (e.g., FRAME)

Note: The X,Y units for TrackMate files depends on how FIJI interpreted the microscope metadata. If FIJI was unable to read the metadata, the units will be set to pixels (px). It is highly recommended that the user changes the units back to microns (um) in FIJI prior to file conversion.

Note: The command line version of the Super Res Data Wrangler assumes that the X,Y units of TrackMate .csv files are in microns, and the Time units of TrackMate .csv files are in frames. For the conversion of TrackMate .csv files with X,Y units in pixels (px) or nanometers (nm), or with Time units in Seconds (s), please use the Super Res Data Wrangler GUI (see Super Res Data Wrangler GUI User Manual for more information).

	А	В	С	D	Е	F	G	Н	1
1	LABEL	ID	TRACK_ID	QUALITY	POSITION_X	POSITION_Y	POSITION_Z	POSITION_T	FRAME
2	Label	Spot ID	Track ID	Quality	X	Υ	Z	T	Frame
3	Label	Spot ID	Track ID	Quality	Χ	Y	Z	T	Frame
4				(quality)	(micron)	(micron)	(micron)	(sec)	
5	ID282628	282628	2	298.08950	21.768646719	36.30233107	0	55.17871248	1723
6	ID200706	200706	2	609.30944	21.773257041	36.38438244	0	7.621899925	238
7	ID192512	192512	2	640.43560	21.761712355	36.40632485	0	4.419420965	138
8	ID229377	229377	2	579.67681	21.762051124	36.42347658	0	20.91218760	653
9	ID270343	270343	2	181.92572	21.733771126	36.28705446	0	45.41115165	1418
10	ID286722	286722	2	156.44577	21.760403180	36.3576551	0	58.63738976	1831
11	ID245770	245770	2	187.68449	21.725414183	36.37344346	0	29.91115348	934
12	ID204808	204808	2	791.29510	21.809109041	36.37986998	0	9.319213774	291
13	ID184334	184334	2	665.27423	21.767030449	36.50159964	0	1.313016373	41
14	ID237583	237583	2	200.45962	21.799884501	36.30813471	0	25.26755899	789
15	ID266260	266260	2	256.41061	21.717192211	36.36169707	0	42.68904453	1333