Chapter 2: Instruction Set Architecture (Language of the Computer)

Ngo Lam Trung

[with materials from Computer Organization and Design, 4th Edition, Patterson & Hennessy, © 2008, MK and M.J. Irwin's presentation, PSU 2008]

Content

- Introduction
- MIPS Instruction Set Architecture
 - MIPS operands
 - MIPS instruction set
- Programming structures
 - Branching
 - Procedure call
- Practice
 - MIPS simulator
 - Writing program for MIPS

What is MIPS, and why MIPS?


- CPU designed by John Hennessy's team
 - Stanford's president 2000-2016
 - 2017 Turing award for RISC development
 - "god father" of Silicon Valley
- Very successful CPU in 80s-90s, the first that have 64 bit architecture
- Still very popular in embedded market: set top box, game console,...
- Simple instruction set, appropriate for education (the mini instruction set)

Computer language: hardware operation

- Want to command the computer?
 - → You need to speak its language!!!
- Example: MIPS assembly instruction

add a, b, c
$$\#a \leftarrow b + c$$

- Operation performed
 - add b and c,
 - then store result into a

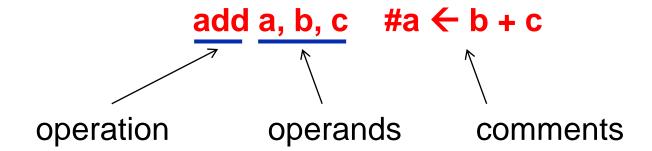

Hardware operation

■ What does the following code do?

```
add t0, g, h
add t1, i, j
sub f, t0, t1
```

Equivalent C code

$$f = (g + h) - (i + j)$$

→ Why not making 4 or 5 inputs instructions?

→ DP1: Simplicity favors regularity!

Operands

- Object of operation
 - Source operand: provides input data
 - Destination operand: stores the result of operation
- MIPS operands
 - Registers
 - Memory locations
 - Constant/Immediate


MIPS operands

Name	Example	Comments
32 registers	\$s0-\$s7, \$t0-\$t9, \$zero, \$a0-\$a3, \$v0-\$v1, \$gp, \$fp, \$sp, \$ra, \$at	Fast locations for data. In MIPS, data must be in registers to perform arithmetic, register \$zero always equals 0, and register \$at is reserved by the assembler to handle large constants.
2 ³⁰ memory words	Memory[0], Memory[4], , Memory[4294967292]	Accessed only by data transfer instructions. MIPS uses byte addresses, so sequential word addresses differ by 4. Memory holds data structures, arrays, and spilled registers.

Register operand: MIPS Register File

- Special memory inside CPU, called register file
- 32 slots, each slot is called a register
- Each register holds 32 bits of data (a word)
- Each register has an unique address, and a name
- Register's address is from 0 to 31, represented by 5 bits


Data types in MIPS

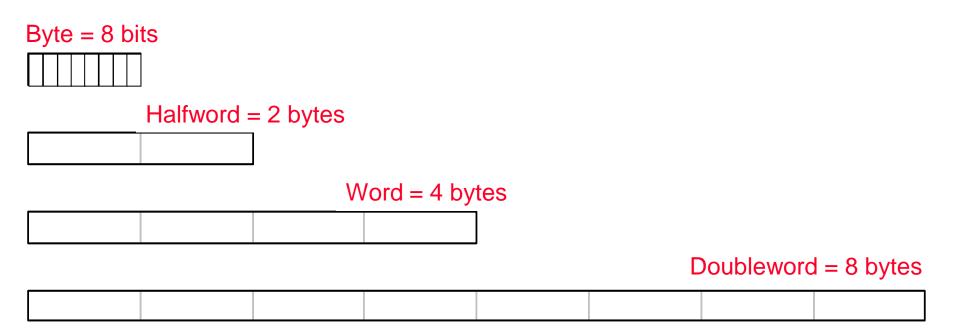


MIPS32 registers hold 32-bit (4-byte) words. Other common data sizes include byte, halfword, and doubleword.

Register operand: MIPS Register File

- Register file in MIPS CPU
 - Two read ports with two source address
 - One write port with one destination address
 - □ Located in CPU → fast, small size

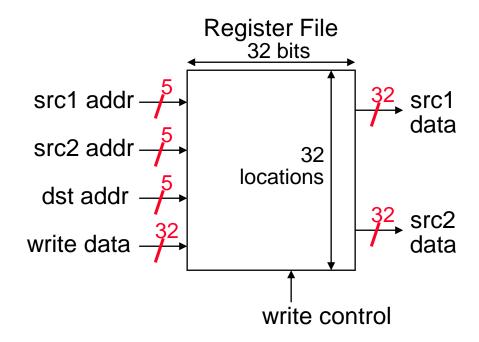

MIPS Register Convention

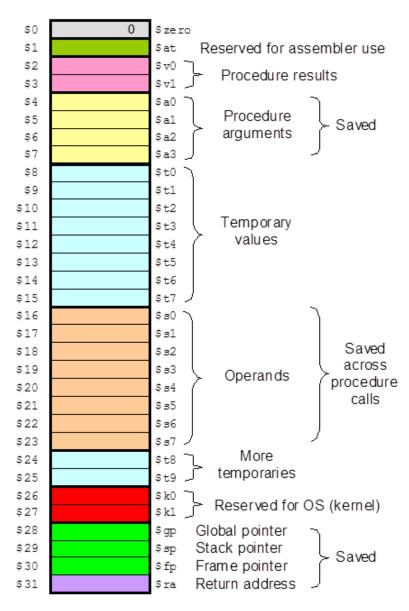

- MIPS: load/store machine.
- Typical operation
 - Load data from memory to register
 - Data processing in CPU
 - Store data from register to memory

Register operand: MIPS Register File


- □ Register file: "work place" right inside CPU.
- Larger register file should be better, more flexibility for CPU operation.
- Moore's law: doubled number of transistor every 18 mo.
- Why only 32 registers, not more?

→ DP2: Smaller is faster!

Effective use of register file is critical!


Memory operand

- Data stored in computer's main memory
 - Large size
 - □ Outsize CPU →Slower than register
- Operations with memory operand
 - Load values from memory to register
 - Store result from register to memory

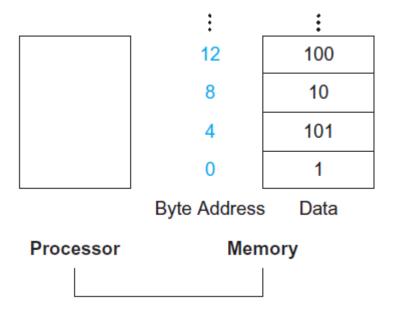

Byte addressable Word aligned

MIPS memory organization

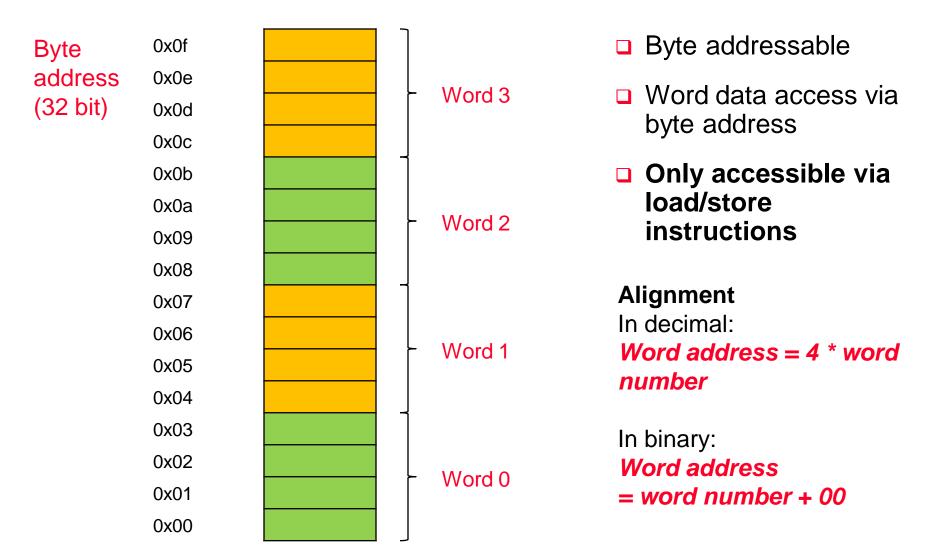

Memory operand

Sample instruction

```
lw $t0,32($s3)
#do sth
#
sw $t0,48($s3)
                    CPU
                                         32
                                S3
                                 Memory
```


Byte Addresses

□ Big Endian: leftmost byte is word address

IBM 360/370, Motorola 68k, MIPS, Sparc, HP PA

□ Little Endian: rightmost byte is word address

Intel 80x86, DEC Vax, DEC Alpha (Windows NT)

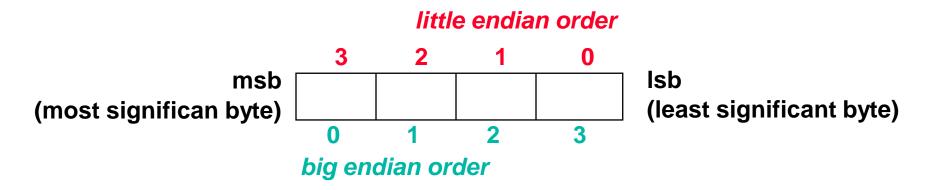

Example

- Consider a word in MIPS memory consists of 4 byte with hexa value as below
- What is the word's value?

address	value	
X+3	68	
X+2	1B	
X+1	5D	
X	FA	

MIPS is big-endian: address of MSB is X

→ word's value: FA5D1B68

Immediate operand

- Immediate value specified by the constant number
- Does not need to be stored in register file or memory
 - Value encoded right in instruction → very fast
 - Fixed value specified when developing the program
 - Cannot change value at run time

Immediate operand

- What is the mostly used constant?
- □ The special register: \$zero
- Constant value of 0
- Why?

→ DP3: Making common cases fast!

What are stored inside operands?

- Data, of course!
- And data is represented as binary numbers
- Then how binary numbers are treated by MIPS?
 - As integers
 - Unsigned
 - Signed

Unsigned Binary Integers

Using n-bit binary number to represent non-negative integer

$$\begin{split} x &= x_{n-1} x_{n-2} ... x_1 x_0 \\ &= x_{n-1} 2^{n-1} + x_{n-2} 2^{n-2} + \dots + x_1 2^1 + x_0 2^0 \end{split}$$

- □ Range: 0 to +2ⁿ 1
- Example

0000 0000 0000 0000 0000 0000 0000 1011₂
= 0 + ... +
$$1 \times 2^3 + 0 \times 2^2 + 1 \times 2^1 + 1 \times 2^0$$

= 0 + ... + 8 + 0 + 2 + 1 = 11_{10}

Data range using 32 bits

0 to
$$2^{32}$$
-1 = 4,294,967,295

Eg: 32 bit Unsigned Binary Integers

Hex	Binary	Decimal
0x00000000	00000	0
0x0000001	00001	1
0x00000002	00010	2
0x00000003	00011	3
0x0000004	00100	4
0x0000005	00101	5
0x00000006	00110	6
0x0000007	00111	7
0x00000008	01000	8
0x00000009	01001	9
0xFFFFFFC	11100	2 ³² -4
0xFFFFFFD	11101	2 ³² -3
0xFFFFFFE	11110	2 ³² -2
0xFFFFFFF	11111	2 ³² -1

Exercise

Convert to 32 bit integers

25 = 0000 0000 0000 0000 0000 0000 0001 1001

 $125 = 0000\ 0000\ 0000\ 0000\ 0000\ 0000\ 0111\ 1101$

255 = 0000 0000 0000 0000 0000 0000 1111 1111

Convert 32 bit integers to decimal value

 $0000\ 0000\ 0000\ 0000\ 0000\ 1100\ 1111 = 207$

 $0000\ 0000\ 0000\ 0000\ 0001\ 0011\ 0011 = 307$

Signed binary integers

Using n-bit binary number to represent integer, including negative values

$$\begin{split} x &= x_{n-1} x_{n-2} ... x_1 x_0 \\ &= -x_{n-1} 2^{n-1} + x_{n-2} 2^{n-2} + \dots + x_1 2^1 + x_0 2^0 \end{split}$$

- □ Range: -2^{n-1} to $+2^{n-1} 1$
- Example

Using 32 bits

Signed integer negation

- □ Given $x = xn_1x_{n-2}$ x_1x_0 , how to calculate -x?
- □ Let $\bar{x} = 1$'s complement of x

$$\bar{x} = 1111 \dots 11_2 - x$$

(1 \rightarrow 0, 0 \rightarrow 1)

Then

$$\bar{x} + x = 1111 \dots 112 = -1$$

$$\rightarrow$$
 $\bar{x} + 1 = -x$

Example: find binary representation of -2

$$+2 = 0000 \ 0000 \dots 0010_2$$

 $-2 = 1111 \ 1111 \dots 1101_2 + 1$
 $= 1111 \ 1111 \dots 1110_2$

Signed binary negation

		2'sc binary	decimal
	-2 ³ =	1000	-8
	$-(2^3 - 1) =$	1001	-7
		1010	-6
×		1011	-5
complement all the bits		1100	-4
0101	1011	1101	-3
0101		1110	-2
	and add a 1	1111	-1
and add a 1		0000	0
0110	1010	0001	1
\		0010	2
	complement all the bits	0011	3
		0100	4
		0101	5
		→ 0110	6
CO&ISA, NLT 2020	2 ³ - 1 =	0111	7

Exercise

Find 16 bit signed integer representation of

```
16 = 0000\ 0000\ 0001\ 0000
```

-16 = 1111 1111 1111 0000

100 = 0000 0000 0110 0100

-100 = 1111 1111 1001 1100

Sign extension

- □ Given n-bit integer $x = xn_{-1}x_{n-2} x_1x_0$
- □ Find corresponding m-bit representation (m > n) with the same numeric value

$$x = xm_{-1}x_{m-2}$$
 x_1x_0

- □ → Replicate the sign bit to the left
- □ Examples: 8-bit to 16-bit
 - +2: 0000 0010 => 0000 0000 0000 0010
 - -2: 1111 1110 => 1111 1111 1111 1110

Instruction set

- 3 instruction formats:
 - Register (R)
 - Immediate (I)
 - Branch (J)
- R-instruction: all operands are register
- I-instruction: one operand is immediate
- J-instruction: the unconditional branch
- Note: All MIPS instructions are 32 bits long
- → Why not only one format?
- → DP4: Good design demands good compromises!

5 instruction types

- Arithmetic: addition, subtraction
- Data transfer: transfer data between registers, memory, and immediate
- □ Logical: and, or, shift
- Conditional branch
- Unconditional branch

Overview of MIPS instruction set

MIPS assembly language

Category	Instruction	Example	Meaning	Comments	
Arithmetic	add	add \$s1,\$s2,\$s3	\$s1 = \$s2 + \$s3	Three register operands	
	subtract	sub \$s1,\$s2,\$s3	\$s1 = \$s2 - \$s3	Three register operands	
	add immediate	addi \$s1,\$s2,20	\$s1 = \$s2 + 20	Used to add constants	
	load word	lw \$s1,20(\$s2)	\$s1 = Memory[\$s2 + 20]	Word from memory to register	
	store word	sw \$s1,20(\$s2)	Memory[\$s2 + 20] = \$s1	Word from register to memory	
	load half	lh \$s1,20(\$s2)	\$s1 = Memory[\$s2 + 20]	Halfword memory to register	
	load half unsigned	lhu \$s1,20(\$s2)	\$s1 = Memory[\$s2 + 20]	Halfword memory to register	
5 .	store half	sh \$s1,20(\$s2)	Memory[$$s2 + 20$] = $$s1$	Halfword register to memory	
Data transfer	load byte	lb \$s1,20(\$s2)	\$s1 = Memory[\$s2 + 20]	Byte from memory to register	
tialisiei	load byte unsigned	lbu \$s1,20(\$s2)	\$s1 = Memory[\$s2 + 20]	Byte from memory to register	
	store byte	sb \$s1,20(\$s2)	Memory[\$s2 + 20] = \$s1	Byte from register to memory	
	load linked word	11 \$s1,20(\$s2)	\$s1 = Memory[\$s2 + 20]	Load word as 1st half of atomic swap	
	store condition. word	sc \$s1,20(\$s2)	Memory[\$s2+20]=\$s1;\$s1=0 or 1	Store word as 2nd half of atomic swap	
	load upper immed.	lui \$s1,20	\$s1 = 20 * 2 ¹⁶	Loads constant in upper 16 bits	
	and	and \$s1,\$s2,\$s3	\$s1 = \$s2 & \$s3	Three reg. operands; bit-by-bit AND	
	or	or \$s1,\$s2,\$s3	\$s1 = \$s2 \$s3	Three reg. operands; bit-by-bit OR	
	nor	nor \$s1,\$s2,\$s3	\$s1 = ~ (\$s2 \$s3)	Three reg. operands; bit-by-bit NOR	
Logical	and immediate	andi \$s1,\$s2,20	\$s1 = \$s2 & 20	Bit-by-bit AND reg with constant	
	or immediate	ori \$s1,\$s2,20	\$s1 = \$s2 20	Bit-by-bit OR reg with constant	
	shift left logical	sll \$s1,\$s2,10	\$s1 = \$s2 << 10	Shift left by constant	
	shift right logical	srl \$s1,\$s2,10	\$s1 = \$s2 >> 10	Shift right by constant	
	branch on equal	beq \$s1,\$s2,25	if (\$s1 == \$s2) go to PC + 4 + 100	Equal test; PC-relative branch	
	branch on not equal	bne \$s1,\$s2,25	if (\$s1!= \$s2) go to PC + 4 + 100	Not equal test; PC-relative	
Conditional	set on less than	slt \$s1,\$s2,\$s3	if (\$s2 < \$s3) \$s1 = 1; else \$s1 = 0	Compare less than; for beq, bne	
branch	set on less than unsigned	sltu \$s1,\$s2,\$s3	if (\$s2 < \$s3) \$s1 = 1; else \$s1 = 0	Compare less than unsigned	
	set less than immediate	slti \$s1,\$s2,20	if (\$s2 < 20) \$s1 = 1; else \$s1 = 0	Compare less than constant	
	set less than immediate unsigned	sltiu \$s1,\$s2,20	if (\$s2 < 20) \$s1 = 1; else \$s1 = 0	Compare less than constant unsigned	
Unconditional jump	jump	j 2500	go to 10000	Jump to target address	
	jump register	jr \$ra	go to \$ra	For switch, procedure return	
	jump and link	jal 2500	\$ra = PC + 4; go to 10000	For procedure call	
	I.	I .			

Fig. 2.1

MIPS Instruction set: Arithmetic operations

MIPS arithmetic statement

```
add rd, rs, rt #rd ← rs + rt

sub rd, rs, rt #rd ← rs - rt

addi rd, rs, const #rd ← rs + const
```

- rs 5-bits register file address of the first source operand
- rt 5-bits register file address of the second source operand
- rd 5-bits register file address of the result's destination

Example

- □ Currently \$s1 = 6
- What is value of \$s1 after executing the following instruction

```
addi $s2, $s1, 3
```

addi \$s1, \$s1, -2

sub \$s1, \$s2, \$s1

MIPS Instruction set: Logical operations

Basic logic operations

```
and rd, rs, rt  #rd ← rs & rt

andi rd, rs, const #rd ← rs & const

or rd, rs, rt  #rd ← rs | rt

ori rd, rs, const #rd ← rs | const

nor rd, rs, rt  #rd ← rs | rt)
```

 \blacksquare Example \$s1 = 8 = 0000 1000, \$s2 = 14 = 0000 1110

```
and $s3, $s1, $s2
or $s4, $s1, $s2
```

MIPS Instruction set: Logical operations

Logical shift and arithmetic shift: move all the bits left or right

MIPS Instruction set: Memory Access Instructions

MIPS has two basic data transfer instructions for accessing memory

```
lw $t0, 4($s3) #load word from memory
sw $t0, 8($s3) #store word to memory
```

- □ The data is loaded into (lw) or stored from (sw) a register in the register file
- □ The memory address is formed by adding the contents of the base address register to the offset value
- Offset can be negative, and must be multiple of 4

MIPS Instruction set: Load Instruction

Load/Store Instruction Format:

CO&ISA, NLT 2020

data

0x00000000

word address (hex)

MIPS Control Flow Instructions

Exit: ...

MIPS conditional branch instructions:

```
bne $s0, $s1, Exit #go to Exit if $s0\neq$s1
beq $s0, $s1, Exit #go to Exit if $s0=$s1

• Ex: if (i==j)

• h = i + j;

bne $s0, $s1, Exit

• add $s3, $s0, $s1
```

CO&ISA, NLT 2020

start:

addi s0, zero, 2 #load value for s0

addi s1, zero, 2

addi s3, zero, 0

beq s0, s1, Exit

add s3, s2, s1

Exit: add s2, s3, s1

.end start

What is final value of s2?

CO&ISA, NLT 2020

In Support of Branch Instructions

- □ How to use beq, bne, to support other kinds of branches (e.g., branch-if-less-than)?
- Set flag based on condition: slt
- Set on less than instruction:

```
slt $t0, $s0, $s1  # if $s0 < $s1  then  # $t0 = 1  else  # $t0 = 0
```

Alternate versions of slt

```
slti $t0, $s0, 25  # if $s0 < 25 then $t0=1 ...
sltu $t0, $s0, $s1  # if $s0 < $s1 then $t0=1 ...
sltiu $t0, $s0, 25  # if $s0 < 25 then $t0=1 ...</pre>
```

How about set on bigger than?

Unconditional branch

MIPS also has an unconditional branch instruction or jump instruction:

```
j label #go to label
```

Write assembly code to do the following

```
if (i<5)
    X = 3;
else
    X = 10;</pre>
```

Solution

Representation of MIPS instruction

- All MIPS instructions are 32 bits wide
- Instructions are 32 bits binary number

3 Instruction Formats: all 32 bits wide

ор	rs	rt	rd	sa	funct	R format
ор	rs	rt	immediate			I format
op jump target					J format	

Reference: MIPS Instruction Reference (MIPS_IR.pdf)


R-format instruction

All fields are encoded by mnemonic names



op	6-bits	opcode that specifies the operation
rs	5-bits	register file address of the first source operand
rt	5-bits	register file address of the second source operand
rd	5-bits	register file address of the result's destination
shamt	5-bits	shift amount (for shift instructions)
funct	6-bits	function code augmenting the opcode

Example of R-format instruction

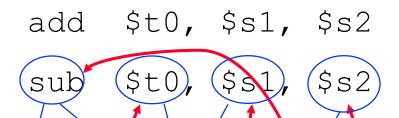

- Each instruction performs one operation
- □ Each specifies exactly three operands that are all contained in the datapath's register file (\$t0,\$s1,\$s2)

destination ← source1 op source2

Binary code of Instruction



Find machine codes of the following instructions

```
lw $t0,0($s1) # initialize maximum to A[0]
addi $t1,$zero,0 # initialize index i to 0
add $t1,$t1,1 # increment index i by 1
```

Example of I-format instruction


slti \$t0, \$s2, 15
$$\#$t0 = 1 if $s2<15$$

Machine format (I format):

	4.0		0.05
\cup \cap \setminus \cap \wedge	18	l 8	() y ()⊢
	10		J OAOI


- The constant is kept inside the instruction itself!
 - □ Immediate format limits values to the range +2¹⁵—1 to -2¹⁵

How MIPS executes program?

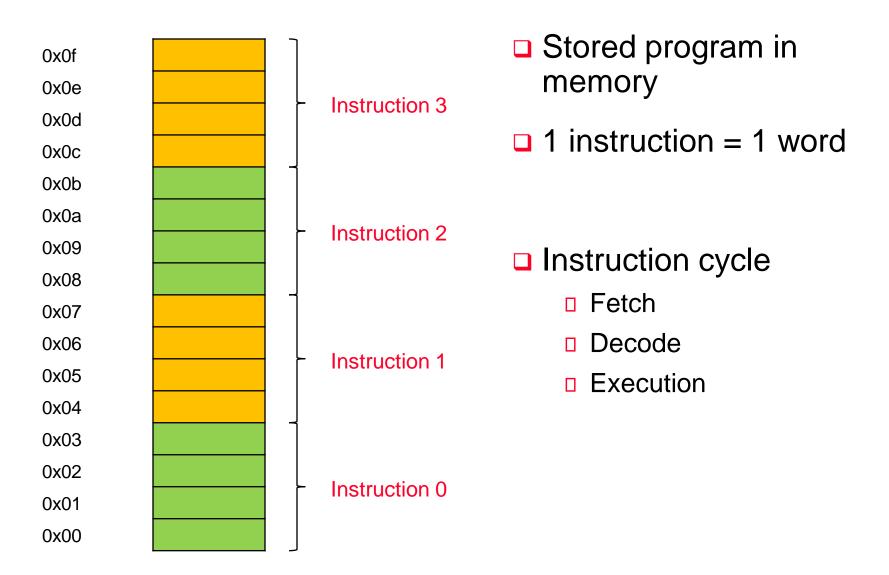

MIPS instruction cycle

- Program flow controlled by the PC register
 - □ PC: Program Counter
 - Specifies address of the next instruction to be fetched
 - Auto-increment after each instruction fetch
- MIPS instruction fetch cycle

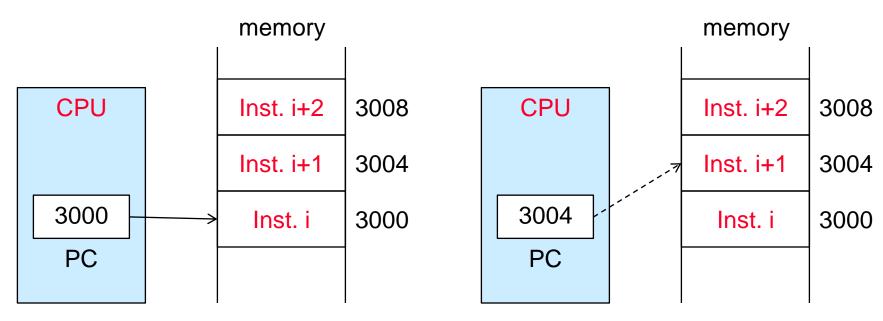

Before fetching instruction i

After fetching instruction i

The simple switch

```
switch(test) {
    case 0:
        a=a+1; break;
    case 1:
        a=a-1; break;
    case 2:
        b=2*b; break;
    default:
}
```

Assuming that: test, a, b are stored in \$s1,\$s2,\$s3

```
Solution
     beq s1,t0,case 0
     beq s1,t1,case 1
     beq s1,t2,case 2
       default
     h
case 0:
     addi s2,s2,1
                        #a=a+1
            continue
      h
case 1:
                        \#a = a - 1
           s2,s2,t1
      sub
            continue
      h
case 2:
            s3,s3,s3
                        \#b = 2 * b
      add
      b
            continue
default:
continue:
```

Exercise

How branch instruction is executed?

```
slti $t0,$s1,5

bne $t0,$zero,0xffffffe to the "else" label?

addi $t1,$zero,3

j endif

else: addi $t1,$zero,10

endif:...
```

Write assembly code correspond to the following C code

```
for (i = 0; i < n; i++)
sum = sum + A[i];
```

loop:

```
add s1,s1,1
                  #i=i+step
add t1,s1,s1
                  #t1=2*s1
add t1,t1,t1
                  #+1=4*s1
                  #t1 <- address of A[i]</pre>
add
     t1,t1,s2
lw
     t0,0(t1)
                  #load value of A[i] in t0
add s5,s5,t0
                  \#sum = sum + A[i]
bne s1,s3,loop #if i != n, goto loop
```

```
The simple while loop: while (A[i]==k) i=i+1;
```

Assuming that: i, A, k are stored in \$s1,\$s2,\$s3

Solution

```
loop: add $t1,$s1,$s1
                                # t1 = 4*i
      add $t1,$t1,$t1
                                #
      add $t1,$t1,$s2
                                # t1 = A + 4*I,
                                  address of A[i]
            $t0,0($t1)
      lw
                                # load data in A[i]
                                  into t0
      bne $t0,$s3,endwhl
                                #
                                #
      addi $s1,$s1,1
                                #
            loop
endwhl: ...
                                #
```

Instructions for Accessing Procedures

MIPS procedure call instruction:

```
jal ProcedureAddress #jump and link
```

- Saves PC+4 in register \$ra to have a link to the next instruction for the procedure return
- Machine format (J format):

0x03 26 bit address	
---------------------	--

Then can do procedure return with


Instruction format (R format):

31		0x08

Six Steps in the Execution of a Procedure


- Main routine (caller) places parameters in a place where the procedure (callee) can access them
 - \$a0 \$a3: four argument registers
- 2. Caller transfers control to the callee (jal)
- 3. Callee acquires the storage resources needed
- 4. Callee performs the desired task
- Callee places the result value in a place where the caller can access it
 - \$v0 \$v1: two value registers for result values
- Callee returns control to the caller (jr)
 - \$ra: one return address register to return to the point of origin

Illustrating a Procedure Call

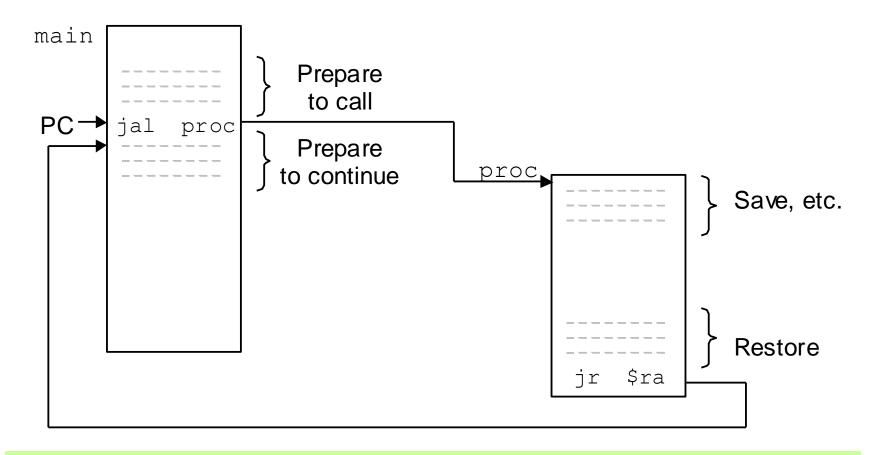


Relationship between the main program and a procedure.

Nested Procedure Calls

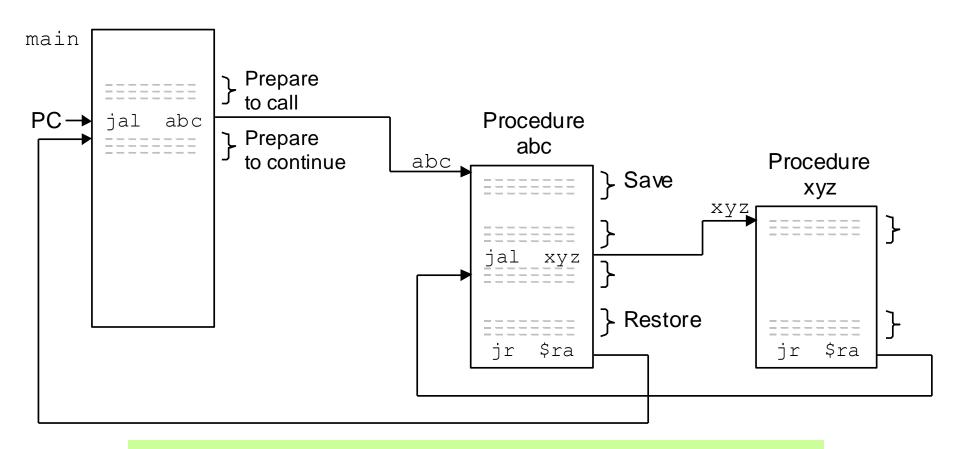

Example of nested procedure calls.

MIPS Organization

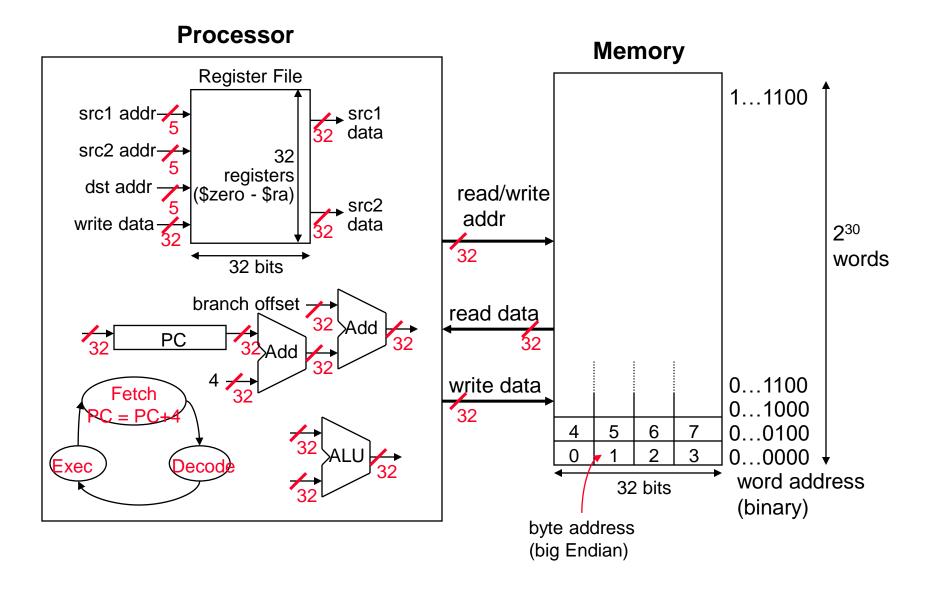

Summary

- Provided one problem to be solved by computer
 - Can it be implemented?
 - Can it be programmed?
 - Which CPU is suitable?
- Metric of performance
 - How many bytes does the program occupy in memory?
 - How many instructions are executed?
 - How many clocks are required per instruction?
 - How much time is required to execute the program?
- → Largely depend on Instruction Set Architecture (ISA)