
ETSI TS 125 453 V7.3.0 (2006-06)

Technical Specification

Universal Mobile Telecommunications System (UMTS); UTRAN lupc interface Positioning Calculation Application Part (PCAP) signalling (3GPP TS 25.453 version 7.3.0 Release 7)

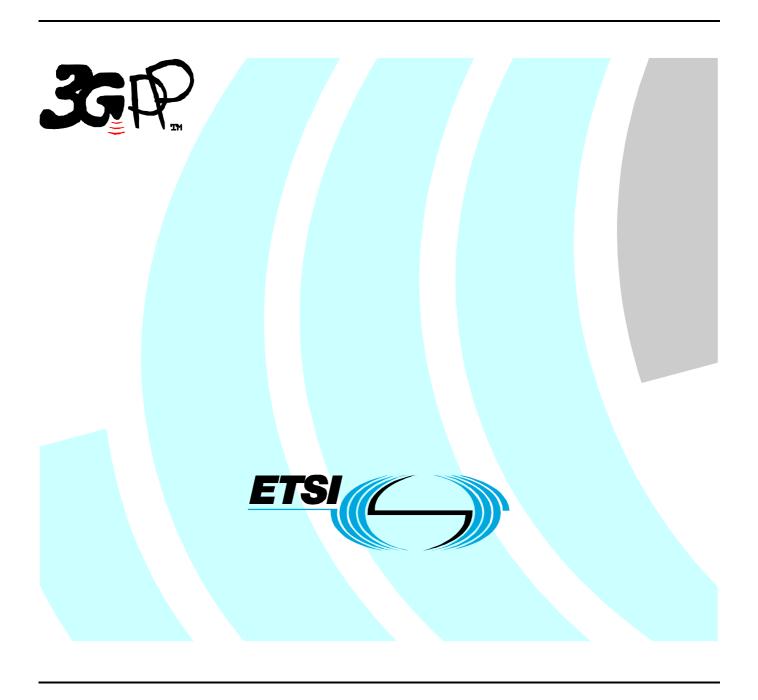

Reference
RTS/TSGR-0325453v730

Keywords
UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, please send your comment to one of the following services: http://portal.etsi.org/chaircor/ETSI_support.asp

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2006. All rights reserved.

DECTTM, **PLUGTESTS**TM and **UMTS**TM are Trade Marks of ETSI registered for the benefit of its Members. **TIPHON**TM and the **TIPHON logo** are Trade Marks currently being registered by ETSI for the benefit of its Members. **3GPP**TM is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Contents

Intell	llectual Property Rights	2
Forev	eword	2
Forev	eword	7
1	Scope	8
2	References	8
	Definitions and abbreviations	
3		
3.1	Definitions	
3.2	Addreviations	>
4	General	10
4.1	Procedure Specification Principles	10
4.2	Forwards and Backwards Compatibility	10
4.3	Specification Notations	11
5	PCAP Services	11
6	Services Expected from Signalling Transport	11
7	Functions of PCAP	
8	PCAP Procedures	
8.1	Elementary Procedures	
8.2 8.2.1	Position Calculation	
8.2.1		
8.2.3		
8.2.4	•	
8.3	Information Exchange Initiation.	
8.3.1	· · · · · · · · · · · · · · · · · · ·	
8.3.2		
8.3.3	1	
8.3.4	1	
8.4	Information Reporting	
8.4.1	ė -	
8.4.2	Successful Operation	18
8.4.3	Abnormal Conditions	18
8.5	Information Exchange Termination	19
8.5.1	General	19
8.5.2	1	19
8.5.3		
8.6	Information Exchange Failure	
8.6.1		
8.6.2	1	
8.7	Error Indication	
8.7.1		
8.7.2	1	
8.7.3		
8.8 8.8.1	Position Initiation	
8.8.2		
8.8.3	1	
8.8.4	1	
8.9	Position Activation	
8.9.1		
8.9.2		
8.9.3		

8.9.4	Abnormal Conditions	
8.10	Position Parameter Modification	24
8.10.1	General	24
8.10.2	Successful Operation	24
8.10.3	Abnormal Conditions	24
8.11	Abort	24
8.11.1	General	24
8.11.2	Successful Operation	25
8.11.3	Abnormal Conditions	25
0 5	1 C DCAD C ' ('	0.7
	lements for PCAP Communication	
9.1	Message Functional Definition and Content	
9.1.1	General	
9.1.2	Message Contents	
9.1.2.1	Presence	
9.1.2.2	Criticality	
9.1.2.3	Range	
9.1.2.4	Assigned Criticality	
9.1.3	POSITION CALCULATION REQUEST	
9.1.4	POSITION CALCULATION RESPONSE	
9.1.5	POSITION CALCULATION FAILURE	
9.1.6	INFORMATION EXCHANGE INITIATION REQUEST	
9.1.7	INFORMATION EXCHANGE INITIATION RESPONSE	
9.1.8	INFORMATION EXCHANGE INITIATION FAILURE	
9.1.9	INFORMATION REPORT	
9.1.10	INFORMATION EXCHANGE TERMINATION REQUEST	
9.1.11	INFORMATION EXCHANGE FAILURE INDICATION	
9.1.12	ERROR INDICATION	
9.1.13	POSITION INITIATION REQUEST	
9.1.14	POSITION INITIATION RESPONSE	
9.1.15	POSITION INITIATION FAILURE	
9.1.16	POSITION ACTIVATION REQUEST	
9.1.17	POSITION ACTIVATION RESPONSE	
9.1.18	POSITION ACTIVATION FAILURE	
9.1.19	POSITION PARAMETER MODIFICATION	
9.1.20	ABORT	
9.2	Information Element Functional Definitions and Contents	
9.2.1	General	
9.2.2	Radio Network Layer Related IEs	
9.2.2.1	Almanac and Satellite Health SIB	
9.2.2.2	Altitude and direction	
9.2.2.3	Cause	
9.2.2.4	Criticality Diagnostics	
9.2.2.5	DGPS Corrections	
9.2.2.6	Geographical Area	
9.2.2.7	Geographical Coordinates	
9.2.2.8	GPS Acquisition Assistance	
9.2.2.9	GPS Almanac and Satellite Health	
9.2.2.10	GPS Clock and Ephemeris Parameters	
9.2.2.11	GPS Ionospheric Model	
9.2.2.12	GPS Measured Results	
9.2.2.13	GPS Navigation Model	
9.2.2.14	GPS Real Time Integrity	
9.2.2.15	GPS Reference Time	
9.2.2.16	GPS Transmission TOW	
9.2.2.17	GPS UTC Model	
9.2.2.18	GPS-UTRAN Time Relationship Uncertainty	
9.2.2.19	Information Exchange ID	
9.2.2.20	Information Exchange Object Type	
9.2.2.21	Information Report Characteristics	
9.2.2.22	Information Type	
9.2.2.23	Message Structure	55

9.2.2.24	Message Type	
9.2.2.25	Method Type	
9.2.2.26	Requested Data Value	
9.2.2.27	Requested Data Value Information	
9.2.2.28	Transaction ID	
9.2.2.29	Transmission TOW Indicator	
9.2.2.30	Uncertainty Ellipse	
9.2.2.31	Cell-ID Measured Results Info List	
9.2.2.32	OTDOA Measured Results Info List	59
9.2.2.33	OTDOA Neighbour Cell Info	
9.2.2.34	OTDOA Reference Cell Info	
9.2.2.35	UE Positioning Measurement Quality	
9.2.2.36	UTRAN Access Point Position with Altitude	65
9.2.2.37	UTRAN Cell Identifier (UC-ID)	65
9.2.2.38	Horizontal Accuracy Code	65
9.2.2.39	Vertical Accuracy Code	65
9.2.2.40	Accuracy Fulfilment Indicator	66
9.2.2.41	Uplink DPCH information	
9.2.2.42	Frequency information	66
9.2.2.43	PRACH parameters	
9.2.2.44	Compressed Mode Assistance Data	
9.2.2.45	C-RNTI	68
9.2.2.46	Primary Scrambling Code	
9.2.2.47	PRACH information	
9.2.2.48	TFS	69
9.2.2.49	CTFC	70
9.2.2.50	Request Type	70
9.2.2.51	UE Positioning Capability	71
9.2.2.52	Response Time	71
9.2.2.53	Positioning Priority	
9.2.2.54	Client Type	72
9.2.2.55	Positioning Method	
9.2.2.56	U-TDOA Bit Count	
9.2.2.57	U-TDOA Time Interval	72
9.2.2.58	Additional Method Type	
9.2.2.59	UE Positioning OTDOA Assistance Data	
9.2.2.60	UL TrCH information	
9.2.2.61	Semi-static Transport Format Information	
9.2.2.62	Environment Characterisation	
9.2.2.63	Chip Offset	
9.2.2.64	Frame Offset	
9.2.2.65	Position Data	
9.2.2.66	Transmission Gap Pattern Sequence Information	
9.2.2.67	Active Pattern Sequence Information.	
9.2.2.68	CFN	
9.2.2.69	Positioning Response Time	
9.2.2.70	Reference Cell Position	
9.2.2.71	UE Positioning IPDL Parameters	
9.2.2.72	Burst Mode Parameters	
9.2.2.73	SFN-SFN Relative Time Difference1	
9.2.2.74	UTDOA Group	
9.2.2.75	Maximum Set of E-DPDCHs	
9.2.1.76	Puncture Limit	
9.2.2.77	E-DCH Transport Format Combination Set Information (E-TFCS Information)	
9.2.2.78	Reference E-TFCI Power Offset	
9.2.2.79	E-TTI	
9.2.2.80	E-DPCCH Power Offset	
9.2.2.81	Cell Parameter ID	
9.2.2.82	TFCI Coding	
9.2.2.83	Repetition Length	
9.2.2.84	Repetition Period	
9.2.2.85	TDD DPCH Offset	85

9.2.2.8		
9.2.2.8		
9.2.2.8	**	
9.2.2.8		
9.2.2.9		
9.2.2.9		
9.2.2.9		
9.2.2.9		
9.2.2.9 9.2.2.9		
9.2.2.9. 9.2.2.9		
9.2.2.9	· · · · · · · · · · · · · · · · · · ·	
9.2.2.9	•	
9.2.2.9	· · · · · · · · · · · · · · · · · · ·	
9.2.2.1	· ·	
9.2.2.1	·	
9.2.2.1		
9.2.2.1		
9.2.2.1	04 UTRAN-GPS Reference Time Result	93
9.2.2.1	05 T _{UTRAN-GPS} Drift Rate	94
9.3	Message and Information Element Abstract Syntax (with ASN.1)	
9.3.0	General	
9.3.1	Usage of private message mechanism for non-standard use	
9.3.2	Elementary Procedure Definitions	
9.3.3	PDU Definitions	
9.3.4	Information Element Definitions	
9.3.5	Common Definitions	
9.3.6	Constant Definitions	
9.3.7	Container Definitions	
9.4	Message Transfer Syntax	149
10	Handling of Unknown, Unforeseen and Erroneous Protocol Data	149
10.1	General	
10.2	Transfer Syntax Error	
10.3	Abstract Syntax Error	
10.3.1	General	
10.3.2	Criticality Information	
10.3.3	Presence Information	
10.3.4	Not comprehended IE/IE group	
10.3.4.		
10.3.4. 10.3.4.	V1 &	
10.3.4.	Missing IE or IE group	
10.3.5	IEs or IE groups received in wrong order or with too many occurrences or erroneously present	
10.3.0	Logical Error	
10.5	Exceptions	
	•	
Annex	X A (informative): Guidelines for Usage of the Criticality Diagnostics IE	156
A.1	EXAMPLE MESSAGE Layout	156
	Example on a Received EXAMPLE MESSAGE	
	•	
	Content of Criticality Diagnostics	
A.3.1	Example 1	
A.3.2 A.3.3	Example 3	
A.3.4	Example 3 Example 4	
A.3.4 A.3.5	Example 5	
	•	
A.4	ASN.1 of EXAMPLE MESSAGE	163
Annex	x B (informative): Change history	165
Histor		166

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the *Positioning Calculation Application Part (PCAP)* between the Radio Network Controller (RNC) and the Stand-Alone SMLC (SAS). It fulfills the RNC-SAS communication requirements specified in [6] and thus defines the Iupc interface and its associated signaling procedures.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

[1]	3GPP TS 25.450: "UTRAN Iupc interface general aspects and principles".
[2]	3GPP TS 25.451: "UTRAN Iupc interface layer 1".
[3]	3GPP TS 25.452: "UTRAN Iupc interface signalling transport".
[4]	3GPP TS 25.331: "Radio Resource Control (RRC) Protocol Specification".
[5]	3GPP TS 25.401: "UTRAN Overall Description".
[6]	3GPP TS 25.305: "Stage 2 functional specification of UE positioning in UTRAN".
[7]	$ITU-T\ Recommendation\ X.680\ (07/2002): "Information\ technology\ -\ Abstract\ Syntax\ Notation\ One\ (ASN.1): Specification\ of\ basic\ notation".$
[8]	ITU-T Recommendation X.681 07/2002): "Information technology - Abstract Syntax Notation One (ASN.1): Information object specification".
[9]	ITU-T Recommendation X.691 (07/2002): "Information technology - ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)".
[10]	ICD-GPS-200: (12 April 2000) "Navstar GPS Space Segment/Navigation User Interface".
[11]	3GPP TS 23.032: "Universal Geographical Area Description (GAD)".
[12]	3GPP TR 25.921: "Guidelines and principles for protocol description and error handling".
[13]	3GPP TS 25.133: "Requirements for support of Radio Resource management (FDD)".
[14]	3GPP TS 25.123: "Requirements for support of Radio Resource management (TDD)".
[15]	3GPP TS 22.071: "Location Services (LCS); Service Description; Stage1".
[16]	3GPP TS 25.212: "Multiplexing and Channel Coding (FDD)".
[17]	3GPP TS 25.213: "Spreading and Modulation (FDD)".
[18]	3GPP TS 25.223: "Spreading and Modulation (TDD)".
[19]	3GPP TS 25.221: "Physical channels and mapping of transport channels onto physical channels (TDD)".
[20]	3GPP TS 25.101: "User Equipment (UE) radio transmission and reception (FDD)".

[21] 3GPP TS 25.102: "UE radio transmission and reception (TDD)".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the following terms and definitions apply:

Stand-Alone SMLC (SAS): logical node that interconnects to the RNC over the Iupc interface via the PCAP protocol An SAS performs the following procedures:

- provide GPS related data to the RNC;
- performs the position calculation function based upon UE Positioning measurement data.
- in SAS centric mode, selects the positioning method and controls the positioning procedure.

Elementary Procedure: PCAP consists of Elementary Procedures (EPs)

An Elementary Procedure is a unit of interaction between the RNC and the SAS. An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- Class 1: Elementary Procedures with response (success or failure).
- Class 2: Elementary Procedures without response.

For Class 1 EPs, the types of responses can be as follows:

Successful:

- A signalling message explicitly indicates that the elementary procedure successfully completed with the receipt of the response.

Unsuccessful:

- A signalling message explicitly indicates that the EP failed.

Class 2 EPs are considered always successful.

Information Exchange Context: Information Exchange Context is created by the first Information Exchange Initiation Procedure initiated by the RNC and requested from the SAS.

The Information Exchange Context is deleted after the Information Exchange Termination or the Information Exchange Failure procedure when there is no more Information Exchange to be provided by the RNC to the SAS. The Information Exchange Context is identified by an SCCP connection as, for Information Exchanges, only the connection oriented mode of the signalling bearer is used.

Positioning Initiation Context: In the SAS centric mode of operation each positioning request is assigned a unique logical connection identity, i.e., SCCP Source and Destination Local Reference numbers.

RNC Centric Mode of Operation: The RNC determines, initiates and controls the positioning method to be used for each positioning request.

SAS Centric Mode of Operation: The SAS determines, initiates and controls the positioning method to be used for each positioning request.

Positioning Event: The activity associated with the positioning of a UE resulting from the reception of UE positioning request from the CN.

3.2 Abbreviations

For the purposes of the present document, the following abbreviations apply:

A-GPS Assisted GPS

ASN.1 Abstract Syntax Notation One

CN Core Network **CRNC** Controlling RNC **DGPS** Differential GPS EP **Elementary Procedure FDD** Frequency Division Duplex **GPS Global Positioning System** MSC Mobile services Switching Center **OTDOA** Observed Time Difference Of Arrival **PCAP** Positioning Calculation Application Part

PRC Pseudorange Correction
RNC Radio Network Controller
RNS Radio Network Subsystem
RRC Radio Resource Control
SAS Stand-Alone SMLC

SCCP Signalling Connection Control Part

SIB System Information Block SMLC Serving Mobile Location Center

SRNC Serving RNC SRNS Serving RNS

TDD Time Division Duplex

TOW Time of Week UE User Equipment

U-TDOA Uplink Time Difference Of Arrival

UTRAN Universal Terrestrial Radio Access Network

4 General

4.1 Procedure Specification Principles

The principle for specifying the procedure logic is to specify the functional behaviour of the SAS exactly and completely. The RNC functional behaviour is left unspecified.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:
 - 1) Functionality which "shall" be executed:
 - The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.
 - 2) Functionality which "shall, if supported" be executed:
 - The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.
- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included.

4.2 Forwards and Backwards Compatibility

The forwards and backwards compatibility of the protocol is assured by mechanism where all current and future messages, and IEs or groups of related IEs, include Id and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification Notations

For the purposes of the present document, the following notations apply:

[FDD - ...] This tagging indicates that the enclosed text following the "[FDD - " applies only to FDD.

Multiple sequential paragraphs applying only to FDD are enclosed separately to enable insertion of TDD specific (or common) paragraphs between the FDD specific paragraphs.

[TDD - ...] This tagging indicates that the enclosed text following the "[TDD - " applies only to TDD, including 3.84Mcps TDD, 7.68Mcps TDD and 1.28Mcps TDD. Multiple sequential paragraphs applying only to TDD are enclosed separately to enable insertion of FDD specific (or common) paragraphs between the TDD specific paragraphs.

Procedure When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g. Position Calculation procedure.

When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g. POSITION CALCULATION REQUEST message.

IE When referring to an information element (IE) in the specification the *Information Element Name* is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g. *Request Type* IE.

Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in clause 9.2 enclosed by quotation marks, e.g. "Abstract Syntax Error (Reject)" or "Geographical Coordinates".

5 PCAP Services

Message

PCAP provides the signalling services between RNC and SAS that are required to fulfill the PCAP functions described in clause 7. PCAP services are categorized as follows:

- 1. Position Calculation Service: They are related to a single UE and involve the transfer of UE Positioning measurement data and UE position estimate data over the Iupc interface between the SRNC and the SAS. They utilise connectionless signalling transport provided by the Iupc signalling bearer.
- 2. Information Exchange Service: They involve the transfer of GPS related data over the Iupc interface between the RNC and the SAS on demand, on modification, or at regular intervals. They utilise connection-oriented signalling transport provided by the Iupc signalling bearer.
- 3. SAS Centric Position Service: They are related to the capability of the SAS to determine the positioning method used for individual positioning events. In this case the SRNC may allow A-GPS, OTDOA, Cell ID and U-TDOA positioning events for a single UE to be originated by the SAS via PCAP messages. They utilise connection-oriented signalling transport provided by the Iupc signalling bearer.

6 Services Expected from Signalling Transport

Signalling transport [3] shall provide the following service for the PCAP.

- 1. Connection oriented data transfer service. This service is supported by a signalling connection between the RNC and the SAS. It shall be possible to dynamically establish and release signalling connections based on the need. Each point-to-point operation shall have its own signalling connection. The signalling connection shall provide in sequence delivery of PCAP messages. PCAP shall be notified if the signalling connection breaks.
- 2. Connectionless data transfer service. PCAP shall be notified in case a PCAP message did not reach the intended peer PCAP entity.

7 Functions of PCAP

PCAP has the following functions:

- Position Calculation. This function enables the SRNC to interact with an SAS in the process of performing a position estimate of a UE.
- Information Exchange. This function enables the RNC to obtain GPS related data from an SAS.
- Reporting of General Error Situations. This function allows reporting of general error situations for which function specific error messages have not been defined.
- SAS Centric Position. This function enables the SRNC to interact with an SAS in the process of performing a position estimate of a UE.

The mapping between the above functions and PCAP elementary procedures is shown in the table 1.

Table 1: Mapping between functions and PCAP elementary procedures

Function	Elementary Procedure(s)
Position Calculation	a) Position Calculation
	b) Position Parameter Modification
	c) Abort
Information Exchange	a) Information Exchange Initiation
-	b) Information Reporting
	c) Information Exchange Termination
	d) Information Exchange Failure
Reporting of General Error Situations	a) Error Indication
SAS Centric Position	a) Position Initiation
	b) Position Activation
	c) Position Parameter Modification
	d) Abort

8 PCAP Procedures

8.1 Elementary Procedures

In the following tables, all EPs are divided into class 1 and class 2 EPs (see clause 3.1 for explanation of the different classes).

Table 2: Class 1

Elementary	Initiating	Successful Outcome	Unsuccessful Outcome	
Procedure	Message	Response message	Response message	
Position	POSITION	POSITION CALCULATION	POSITION CALCULATION	
Calculation	CALCULATION REQUEST	RESPONSE	FAILURE	
Information	IINFORMATION	INFORMATION	INFORMATION EXCHANGE	
Exchange	EXCHANGE	EXCHANGE INITIATION	INITIATION FAILURE	
Initiation	INITIATION	RESPONSE		
	REQUEST			
Position Initiation	POSITION	POSITION INITIATION	POSITION INITIATION	
	INITIATION	RESPONSE	FAILURE	
	REQUEST			
Position	POSITION	POSITION ACTIVATION	POSITION ACTIVATION	
Activation	ACTIVATION	RESPONSE	FAILURE	
	REQUEST			

Elementary Procedure Message **INFORMATION REPORT** Information Reporting Information Exchange Termination INFORMATION EXCHANGE TERMINATION REQUEST Information Exchange Failure INFORMATION EXCHANGE **FAILURE INDICATION Error Indication ERROR INDICATION** Position Parameter Modification POSITION PARAMETER **MODIFICATION ABORT** Abort

Table 3: Class 2

8.2 Position Calculation

8.2.1 General

The purpose of the Position Calculation procedure is to enable an SRNC to query an SAS for a position estimate of a UE. The procedure uses connectionless signalling.

8.2.2 Successful Operation

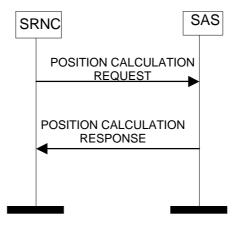


Figure 1: Position Calculation procedure, Successful Operation

The procedure is initiated with a POSITION CALCULATION REQUEST message sent from the SRNC to the SAS. When the SAS receives the POSITION CALCULATION REQUEST message, it shall calculate the UE position and, if supported and requested, velocity based on the provided measurement data.

If the *Initial UE Position Estimate* IE is included in the POSITION CALCULATION REQUEST message, the SAS shall use this value for the calculation of the UE Position Estimate in case of A-GPS positioning methods are used. The SAS may use this value for the calculation of the UE Position when any other methods are used.

If the *Horizontal Accuracy Code* IE and possibly the *Vertical Accuracy Code* IE are included in the POSITION CALCULATION REQUEST message, the SAS shall use these values in order to assess whether the resulting position estimation fulfills the requested accuracy.

If the SAS Response Time IE is included in the POSITION CALCULATION REQUEST message, the SAS shall send a POSITION CALCULATION RESPONSE message within the indicated time after reception of the POSITION CALCULATION REQUEST message.

If the *Include Velocity* IE is set to "requested" in the POSITION CALCULATION REQUEST message, the SAS shall include the *Velocity Estimate* IE, if available, in the POSITION CALCULATION RESPONSE message.

Response Message:

If the SAS was able to calculate the position estimate, it shall respond with a POSITION CALCULATION RESPONSE message.

Whenever one of the geographic area shapes *Ellipsoid point with uncertainty Ellipse* IE, *Ellipsoid point with altitude and uncertainty Ellipsoid* IE or *Ellipsoid Arc* IE is reported, the *Confidence* IE shall indicate the probability that the UE is located within the uncertainty region of the shape. The value of the *Confidence* IE shall be in the interval of "1" to "100".

If at least the *Horizontal Accuracy Code* IE was included in the POSITION CALCULATION REQUEST message and the calculated position estimate fulfils the requested accuracy, the *Accuracy Fulfilment Indicator* IE with the value "requested accuracy fulfilled" shall be included in the POSITION CALCULATION RESPONSE message. If the calculated position estimate does not fulfil the requested accuracy, the *Accuracy Fulfilment Indicator* IE with the value "requested accuracy not fulfilled" shall be included in the POSITION CALCULATION RESPONSE message.

8.2.3 Unsuccessful Operation

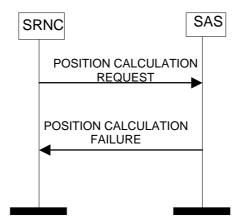


Figure 2: Position Calculation procedure, Unsuccessful Operation

If the SAS is unable to perform the position estimate for any reason, it shall return a POSITION CALCULATION FAILURE message to the SRNC.

Typical cause values are:

- Invalid reference information;
- Position calculation error: invalid GPS measured results;
- Initial UE Position Estimate missing;
- Processing Overload;
- Hardware Failure;
- O&M Intervention.:
- Invalid U-TDOA measured results;
- U-TDOA positioning method not supported;
- U-TDOA positioning method not supported in specified UTRAN cell;
- SAS unable to perform U-TDOA positioning within Response Time.

8.2.4 Abnormal Conditions

If the *Vertical Accuracy Code* IE is included and the *Horizontal Accuracy Code* IE is not included in the POSITION CALCULATION REQUEST message, the SAS shall reject the procedure.

If the RRC State is indicated as being *CELL_DCH* in the POSITION CALCULATION REQUEST message and [FDD - neither the *DCH Information* IE nor the *E-DPCH Information* IE][TDD – no *DCH Information* IE] is included, the SAS shall reject the procedure using the POSITION CALCULATION FAILURE message.

8.3 Information Exchange Initiation

8.3.1 General

This procedure is used by a RNC to request the initiation of an information exchange with a SAS.

This procedure uses the signalling bearer connection for the Information Exchange Context.

8.3.2 Successful Operation

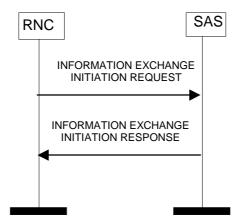


Figure 3: Information Exchange Initiation procedure, Successful Operation

The procedure is initiated with an INFORMATION EXCHANGE INITIATION REQUEST message sent from RNC to SAS.

If the Information Type IE is set to 'Implicit', the SAS is responsible for selecting the type of assistance data.

Upon reception, the SAS shall provide the requested information according to the parameters given in the request. Unless specified below, the meaning of the parameters are given in other specifications.

Information Report Characteristics:

The Information Report Characteristics IE indicates how the reporting of the information shall be performed.

If the *Information Report Characteristics* IE is set to 'On-Demand', the SAS shall report the requested information immediately.

If the *Information Report Characteristics* IE is set to "Periodic", the SAS shall report the requested information immediately and then shall periodically initiate the Information Reporting procedure for all the requested information, with the requested report frequency.

If the *Information Report Characteristics* IE is set to "On-Modification", the SAS shall report the requested information immediately if available. If the requested information is not available at the moment of receiving the INFORMATION EXCHANGE INITIATION REQUEST message, but expected to become available after some acquisition time, the SAS shall initiate the Information Reporting procedure when the requested information becomes available. The SAS shall then initiate the Information Reporting procedure in accordance to the following conditions:

- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Almanac and Satellite Health", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change in the t_{oa} or WN_a parameter has occurred in almanac/health information for at least one visible satellite.

- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "UTC Model", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change in the t_{ot} or WN_t parameter has occurred in the GPS UTC model.
 - If the *Transmission TOW Indicator* IE is set to "requested", then the SAS shall include the *GPS Transmission TOW* IE in the INFORMATION REPORT message.
- If the *Information Type* IE is set to 'Explicit' and the *Explicit Information Item* IE includes "Ionospheric Model", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the GPS ionospheric model.
 - If the *Transmission TOW Indicator* IE is set to "requested", then the SAS shall include the *GPS Transmission TOW* IE in the INFORMATION REPORT message.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Navigation Model", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the clock/ephemeris information for at least one visible satellite or in the list of visible satellites.
 - If the *Transmission TOW Indicator* IE is set to "requested", then the SAS shall include the *GPS Transmission TOW* IE in the INFORMATION REPORT message.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "DGPS Corrections", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the quality of the DGPS corrections information for at least one visible satellite or in the list of visible satellites.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Reference Time", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the time-of-week assistance information for at least one visible satellite or in the list of visible satellites.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Acquisition Assistance", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in acquisition assistance information for at least one visible satellite or in the list of visible satellites.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Real Time Integrity", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the real-time integrity status of at least one visible satellite.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Almanac and Satellite Health SIB", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in almanac/health information for at least one visible satellite.
 - If the *Transmission TOW Indicator* IE is set to "requested", then the SAS shall include the *GPS Transmission TOW* IE in the INFORMATION REPORT message.
- If any of the above *Information Type* IEs becomes temporarily unavailable, the SAS shall initiate the Information Reporting procedure for this specific Information Item by indicating "Information Not Available" in the *Requested Data Value Information* IE. If the Information becomes available again, the SAS shall initiate the Information Reporting procedure for this specific Information.

Response message:

If the SAS is able to determine the information requested by the RNC, it shall respond with the INFORMATION EXCHANGE INITIATION RESPONSE message. The message shall include the same Information Exchange ID that was included in the INFORMATION EXCHANGE INITIATION REQUEST message. When the *Report Characteristics* IE is set to "On Modification" or "Periodic", the INFORMATION EXCHANGE INITIATION RESPONSE message shall contain the *Requested Data Value* IE if the data are available. When the *Report Characteristics* IE is set to "On Demand", the INFORMATION EXCHANGE INITIATION RESPONSE message shall contain the *Requested Data Value* IE.

When the response message includes data to be reported (see above), the SAS shall include at least one IE in the *Requested Data Value* IE.

8.3.3 Unsuccessful Operation

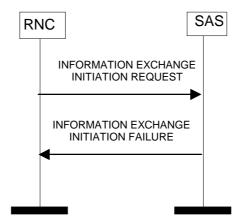


Figure 4: Information Exchange Initiation procedure, Unsuccessful Operation

If the requested Information Type received in the *Information Type* IE indicates a type of information that SAS cannot provide, the SAS shall regard the Information Exchange Initiation procedure as failed.

If the requested information provision cannot be carried out, the SAS shall send the INFORMATION EXCHANGE INITIATION FAILURE message. The message shall include the same Information Exchange ID that was used in the INFORMATION EXCHANGE INITIATION REQUEST message and the *Cause* IE set to an appropriate value.

Typical cause values are as follows:

- Information temporarily not available;
- Information Provision not supported for the object;
- Processing Overload;
- Hardware Failure;
- O&M Intervention.

8.3.4 Abnormal Conditions

If the *Information Exchange Object Type* IE is set to "Reference Position" and the *Information Type* IE set to 'Explicit' and the *Explicit Information Item* IE is set to "Reference Location" the SAS shall reject the Information Exchange Initiation procedure and shall send the INFORMATION EXCHANGE INITIATION FAILURE message.

The allowed combinations of the Information Type and Information Report Characteristics are shown in the table below marked with "X". For not allowed combinations, the SAS shall reject the Information Exchange Initiation procedure using the INFORMATION EXCHANGE INITIATION FAILURE message.

Туре	Information Report Characteristics Type		
	On Demand	Periodic	On Modification
Almanac and Satellite Health	Х	Х	Х
UTC Model	X	Х	X
Ionospheric Model	X	Х	X
Navigation Model	X	Х	X
DGPS	X	Х	Х
Corrections			
Reference Time	X	X	X
Acquisition	X	X	X
Assistance			
Real Time	X	Х	X
Integrity			
Almanac and	X	X	X
Satellite Health SIB			
Reference Location	X		

Table 3a: Allowed Information Type and Information Report Characteristics combinations

8.4 Information Reporting

8.4.1 General

This procedure is used by a SAS to report the result of information requested by a RNC using the Information Exchange Initiation.

This procedure uses the signalling bearer connection for the Information Exchange Context.

8.4.2 Successful Operation

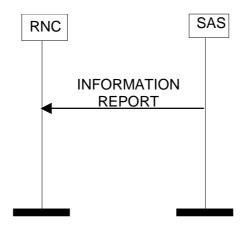


Figure 5: Information Reporting procedure, Successful Operation

If the requested information reporting criteria are met, the SAS shall initiate an Information Reporting procedure. Unless specified below, the meaning of the parameters are given in other specifications.

The *Information Exchange ID* IE shall be set to the Information Exchange ID provided by the RNC when initiating the information exchange with the Information Exchange Initiation procedure.

The Requested Data Value IE shall include at least one IE containing the data to be reported.

8.4.3 Abnormal Conditions

-

8.5 Information Exchange Termination

8.5.1 General

This procedure is used by a RNC to terminate the information exchange requested using the Information Exchange Initiation.

This procedure uses the signalling bearer connection for the Information Exchange Context.

8.5.2 Successful Operation

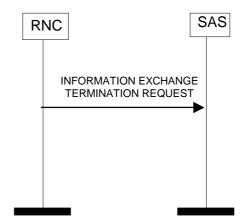


Figure 6: Information Exchange Termination procedure, Successful Operation

This procedure is initiated with an INFORMATION EXCHANGE TERMINATION REQUEST message.

Upon reception, the SAS shall terminate the information exchange corresponding to the Information Exchange ID.

8.5.3 Abnormal Conditions

_

8.6 Information Exchange Failure

8.6.1 General

This procedure is used by a SAS to notify a RNC that the information exchange it previously requested using the Information Exchange Initiation can no longer be reported.

This procedure uses the signalling bearer connection for the Information Exchange Context.

8.6.2 Successful Operation

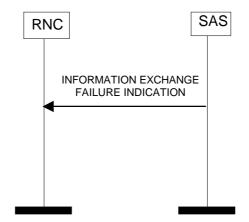


Figure 7: Information Exchange Failure procedure, Successful Operation

This procedure is initiated with a INFORMATION EXCHANGE FAILURE INDICATION message, sent from the SAS to the RNC, to inform the RNC that information previously requested by the Information Exchange Initiation procedure can no longer be reported. The message shall include the same Information Exchange ID that was used in the INFORMATION EXCHANGE INITIATION REQUEST message and the *Cause* IE set to an appropriate value.

Typical cause values are as follows:

- Information temporarily not available.

8.7 Error Indication

8.7.1 General

The Error Indication procedure is used by a node to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

8.7.2 Successful Operation

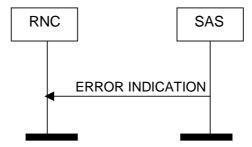


Figure 8: Error Indication procedure, SAS Originated, Successful Operation

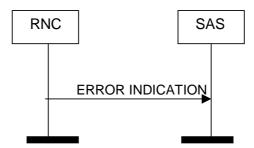


Figure 9: Error Indication procedure, RNC Originated, Successful Operation

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node. This message shall use the same mode of the signalling bearer and the same signalling bearer connection (if connection oriented) as the message that triggers the procedure.

The ERROR INDICATION message shall include either the *Cause* IE, or the *Criticality Diagnostics* IE, or both the *Cause* IE and the *Criticality Diagnostics* IE.

Typical cause values are as follows:

- Transfer Syntax Error;
- Abstract Syntax Error (Reject);
- Abstract Syntax Error (Ignore and Notify);
- Message not Compatible with Receiver State;
- Unspecified.

8.7.3 Abnormal Conditions

_

8.8 Position Initiation

8.8.1 General

This procedure is used by an SRNC to request from an SAS the position of a UE using the SAS centric mode of operation.

The connection-oriented service of the signalling bearer shall be established in conjunction with this procedure.

8.8.2 Successful Operation

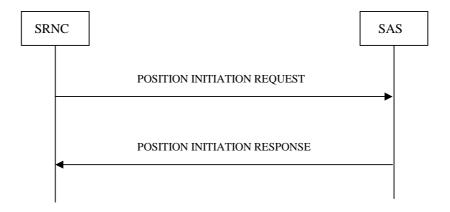


Figure 9a: Position Initiation procedure, Successful Operation

This procedure is initiated with a POSITION INITIATION REQUEST message sent from the SRNC to the SAS and ends with a POSITION INITIATION RESPONSE message from the SAS to the SRNC.

Response Message:

Following completion of one or more positioning attempts, possibly using multiple positioning methods, the SAS shall pass the UE position to the SRNC in a POSITION INITIATION RESPONSE message.

Whenever one of the geographic area shapes *Ellipsoid point with uncertainty Ellipse* IE, *Ellipsoid point with altitude* and uncertainty *Ellipsoid* IE or *Ellipsoid Arc* IE is reported, the *Confidence* IE shall indicate the probability that the UE

is located within the uncertainty region of the shape. The value of the *Confidence* IE shall be in the interval of "1" to "100".

If at least the *Horizontal Accuracy Code* IE was included in the POSITION INITIATION REQUEST message and the calculated position estimate fulfils the requested accuracy, the *Accuracy Fulfilment Indicator* IE with the value "requested accuracy fulfilled" shall be included in the POSITION INITIATION RESPONSE message. If the calculated position estimate does not fulfil the requested accuracy, the *Accuracy Fulfilment Indicator* IE with the value "requested accuracy not fulfilled" shall be included in the POSITION INITIATION RESPONSE message.

8.8.3 Unsuccessful Operation

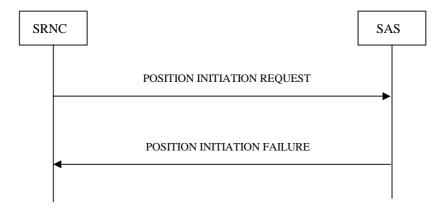


Figure 9b: Position Initiation procedure, Unsuccessful Operation

When the SAS is unable to accept a POSITION INITIATION REQUEST message or the SAS cannot provide a position estimate, the POSITION INITIATION FAILURE message shall be sent to the SRNC.

Typical cause values are:

- Processing Overload;
- Hardware Failure;
- O&M Intervention;
- Information temporarily not available

8.8.4 Abnormal Conditions

If the *Vertical Accuracy Code* IE is included and the *Horizontal Accuracy Code* IE is not included in the POSITION INITIATION REQUEST message, the SAS shall reject the procedure.

8.9 Position Activation

8.9.1 General

The purpose of the Position Activation procedure is to enable the SAS to initiate a particular positioning method used for an individual positioning event. This procedure uses connection-oriented signalling.

8.9.2 Successful Operation

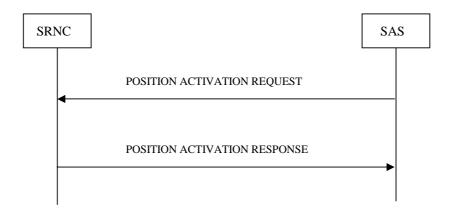


Figure 9c: Position Activation procedure, Successful Operation

The SAS initiates this procedure by sending a POSITION ACTIVATION REQUEST message to the SRNC containing the required positioning method and any assistance data and instructions associated with that positioning method. The SRNC then sends a POSITION ACTIVATION RESPONSE message to the SAS confirming the requested action and providing any information required by the requested positioning method; e.g. UE channel information for the U-TDOA positioning method or A-GPS measurements for UE assisted A-GPS. In the POSITION ACTIVATION RESPONSE message, the SRNC should include either the *UE Position Estimate Info* IE, *GPS Measurement Results* IE, *Cell-ID Measured Results Sets* IE, *OTDOA Measured Results Sets* IE or *UTDOA Group* IE.

If the SRNC receives a new POSITION ACTIVATION REQUEST message before it has responded to a previous request, the SRNC should terminate all activity for the previous request, without sending any response to the initial request, and process the new request.

If the RRC State is indicated as being *CELL_DCH* in the POSITION ACTIVATION RESPONSE message, [FDD - either the *DCH Information* IE] or the *E-DPCH Information* IE] [TDD - the *DCH Information* IE] should be included.

8.9.3 Unsuccessful Operation

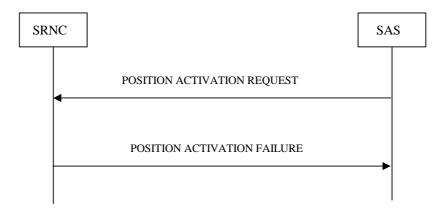


Figure 9d: Position Activation procedure, Unsuccessful Operation

When the SRNC is unable to accept a POSITION ACTIVATION REQUEST message, the POSITION ACTIVATION FAILURE message should be sent to the SAS.

Typical cause values are:

- Processing Overload;

- Hardware Failure;
- O&M Intervention;
- Positioning Method Not Supported
- Location Measurement Failure

8.9.4 Abnormal Conditions

_

8.10 Position Parameter Modification

8.10.1 General

The purpose of the Position Parameter Modification procedure is to inform the SAS of any relevant changes to the RF connection during a positioning event. This procedure uses connectionless signalling when invoked in RNC centric mode and connection-oriented signalling when invoked in SAS centric mode.

8.10.2 Successful Operation



Figure 9e: Position Parameter Modification procedure, Successful Operation

If the SAS receives a POSITION PARAMETER MODIFICATION message, the SAS shall apply the information to the ongoing position estimate (e.g. reconfigure LMUs for U-TDOA) or to a new positioning attempt (e.g. use new serving cell to provide A-GPS assistance data). If there is more than one signalling connection for a UE, the SRNC should send the POSITION PARAMETER MODIFICATION message on each connection. When operating in the RNC centric mode the *Transaction ID* IE should be used to associate the POSITION PARAMETER MODIFICATION message to the correct positioning event.

In the POSITION PARAMETER MODIFICATION message, only one of the *UTRAN Cell Identifier* IE or the *UTDOA GROUP* IE should be included.

8.10.3 Abnormal Conditions

_

8.11 Abort

8.11.1 General

The purpose of the Abort procedure is to inform the SAS that the RNC is unable to continue the current positioning activity for a particular UE. This procedure uses connectionless signalling when invoked in RNC centric mode and connection-oriented signalling when invoked in SAS centric mode.

8.11.2 Successful Operation

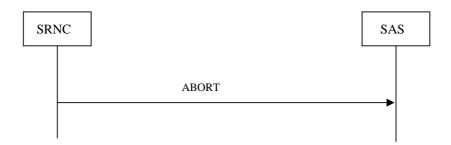


Figure 9f: Abort procedure, Successful Operation

The SRNC should send an ABORT message when the SRNC is unable to continue positioning activity due to cell reselection that results in a different SRNC, loss of contact with the UE or any other reason. When operating in the RNC centric mode the *Transaction ID* IE should be used to associate the ABORT message to the correct positioning event.

If the SAS receives an ABORT message while in the SAS centric mode it should immediately cease positioning attempts and return a POSITION INITIATION RESPONSE message to the SRNC carrying any location estimate already obtained or a POSITION INITIATION FAILURE message if no location estimate was obtained.

If the SAS receives an ABORT message while in the RNC centric mode it should immediately cease positioning attempts and return a POSITION CALCULATION RESPONSE message to the SRNC carrying any location estimate already obtained or a POSITION CALCULATION FAILURE message if no location estimate was obtained. After sending an ABORT message the SRNC should cease positioning activity, if any.

Typical cause values are:

- Processing Overload;
- Hardware Failure;
- O&M Intervention;
- Loss of contact with the UE

8.11.3 Abnormal Conditions

_

9 Elements for PCAP Communication

9.1 Message Functional Definition and Content

9.1.1 General

Clause 9.1 presents the contents of PCAP messages in tabular format. The corresponding ASN.1 definitions are presented in clause 9.3. In case there is contradiction between the tabular format in clause 9.1 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional IEs, where the tabular format shall take precedence.

NOTE: The messages have been defined in accordance to the guidelines specified in [12].

9.1.2 Message Contents

9.1.2.1 Presence

All information elements in the message descriptions below are marked mandatory, optional or conditional according to table 4.

Table 4: Meaning of abbreviations used in PCAP messages

Abbreviation	Meaning	
M	IEs marked as Mandatory (M) shall always be included in the	
	message.	
0	IEs marked as Optional (O) may or may not be included in the	
	message.	
С	IEs marked as Conditional (C) shall be included in a message only if	
	the condition is satisfied. Otherwise the IE shall not be included.	

9.1.2.2 Criticality

Each Information Element or Group of Information Elements may have a criticality information applied to it. Following cases are possible.

Table 5: Meaning of content within "Criticality" column

Abbreviation	Meaning
_	No criticality information is applied explicitly.
YES Criticality information is applied. This is usable only for repeatable IEs	
GLOBAL	The IE and all its repetitions together have one common criticality information. This is usable only for repeatable IEs.
EACH	Each repetition of the IE has its own criticality information. It is not allowed to assign different criticality values to the repetitions. This is usable only for repeatable IEs.

9.1.2.3 Range

The Range column indicates the allowed number of copies of repetitive IEs/IE groups.

9.1.2.4 Assigned Criticality

This column provides the actual criticality information as defined in clause 10.3.2, if applicable.

9.1.3 POSITION CALCULATION REQUEST

Table 6

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.2.24		YES	reject
Transaction ID	М		9.2.2.28		_	-
Initial UE Position Estimate	0		Geographical Area 9.2.2.6		YES	reject
GPS Measured Results		0 <maxnoofsets></maxnoofsets>			GLOBAL	reject
>GPS Measured Results	М		9.2.2.12		_	
Cell-ID Measured Results Sets		0 <maxnoofmea surements></maxnoofmea 			GLOBAL	reject
>Cell-ID Measured Results Info List	М		9.2.2.31		_	
OTDOA Measurement Group		01			YES	reject
>OTDOA Reference Cell Info	М		9.2.2.34		_	
>OTDOA Neighbour Cell Info List		1 <maxnoofmea sNCell></maxnoofmea 			_	
>>OTDOA Neighbour Cell Info	М		9.2.2.33		_	
>OTDOA Measured Results Sets		1 <maxnoofmea surements=""></maxnoofmea>			_	
>>OTDOA Measured Results Info List	М		9.2.2.32		_	
Horizontal Accuracy Code	0		9.2.2.38		YES	ignore
Vertical Accuracy Code	0		9.2.2.39		YES	ignore
UTDOA Group	0		9.2.2.74		YES	reject
SAS Response Time	0		Positioning Response Time 9.2.2.69	Indicates the interval allowed for a SAS response for U-TDOA positioning.	YES	ignore
Include Velocity	0		9.2.2.97		YES	ignore

Table 7

Range bound	Explanation
maxNoOfMeasNCell	Maximum number of neighbouring cells on which information can be reported. The value of maxNoOfMeasCell is 32.
maxNoOfSets	Maximum number of sets of Measured Results included in the Position Calculation Request message. The value for maxNoOfSets is 3.
maxNoOfMeasurements	Maximum number of Measurements of Cell-ID Measured Results Info List and OTDOA Measured Results Info List included in the Position Calculation Request message. The value for maxNoOfMeasurements is 16.

9.1.4 POSITION CALCULATION RESPONSE

Table 8

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
UE Position Estimate	M		Geographical Area 9.2.2.6		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore
Accuracy Fulfilment Indicator	0		9.2.2.40		YES	ignore
Velocity Estimate	0		9.2.2.98		YES	ignore

9.1.5 POSITION CALCULATION FAILURE

Table 9

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
Cause	M		9.2.2.3		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.6 INFORMATION EXCHANGE INITIATION REQUEST

Table 10

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	reject
CHOICE Information Exchange Object Type	M				YES	reject
>Reference Position					_	
>>Reference Position Estimate/UE Initial Position >Additional Information Exchange Object Types >>Reference Position UC-ID >>>UTRAN Cell Identifier/UE Initial Position	M		Geographi cal Area 9.2.2.6 UTRAN Cell Identifier 9.2.2.37	For RNC-centric mode. For SAS-centric mode.	-	
Information Type	М		9.2.2.22		YES	reject
Information Report Characteristics	M		9.2.2.21		YES	reject
GPS-UTRAN Time Relationship Uncertainty	C-GPS		9.2.2.18		YES	reject

Table 11

Condition	Explanation
GPS	The IE shall be present if the information requested in
	the Information Type IE contains GPS-related data

9.1.7 INFORMATION EXCHANGE INITIATION RESPONSE

Table 12

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	ignore
CHOICE Information Exchange Object Type	0				YES	ignore
>Reference Position					_	
>>Requested Data Value	М		9.2.2.26		_	
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.8 INFORMATION EXCHANGE INITIATION FAILURE

Table 13

IE/Group Name	Presence	Range	IE Type	Semantics	Criticality	Assigned
			and	Description		Criticality
			Reference			
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	ignore
Cause	M		9.2.2.3		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.9 INFORMATION REPORT

Table 14

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	ignore
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	ignore
CHOICE Information Exchange Object Type	М				YES	ignore
>Reference Position					_	
>>Requested Data Value Information	M		9.2.2.27		_	

9.1.10 INFORMATION EXCHANGE TERMINATION REQUEST

Table 15

30

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	ignore
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	ignore

9.1.11 INFORMATION EXCHANGE FAILURE INDICATION

Table 16

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	ignore
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	ignore
Cause	M		9.2.2.3		YES	ignore

9.1.12 ERROR INDICATION

Table 17

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	ignore
Transaction ID	M		9.2.2.28		-	
Cause	0		9.2.2.3		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.13 POSITION INITIATION REQUEST

Table 17a

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		-	•
Request Type	M		9.2.2.50		YES	reject
UE Positioning Capability	M		9.2.2.51		YES	reject
UTRAN Cell Identifier	M		9.2.2.37		YES	reject
Vertical Accuracy Code	0		9.2.2.39		YES	ignore
Response Time	0		9.2.2.52		YES	ignore
Positioning Priority	0		9.2.2.53		YES	ignore
Client Type	0		9.2.2.54		YES	ignore
Include Velocity	0		9.2.2.97		YES	ignore

9.1.14 POSITION INITIATION RESPONSE

Table 17b

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		-	
UE Position Estimate	М		Geographi cal Area 9.2.2.6		YES	reject
Position Data	M		9.2.2.65		YES	ignore
Accuracy Fulfilment Indicator	0		9.2.2.40		YES	ignore
Velocity Estimate	0		9.2.2.98		YES	ignore

9.1.15 POSITION INITIATION FAILURE

Table 17c

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		-	
Cause	M		9.2.2.3		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.16 POSITION ACTIVATION REQUEST

Table 17d

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		ı	
Positioning Method	M		9.2.2.55		YES	reject
RNC Response Time	M		Positioning Response Time 9.2.2.69	Indicates the interval allowed for a RNC response	YES	ignore
Positioning Priority	0		9.2.2.53		YES	ignore
Environment Characterisation	0		9.2.2.62		YES	ignore
U-TDOA Positioning		01		Only present if Positioning Method is U- TDOA	YES	reject
>U-TDOA Bit Count	М		9.2.2.56	Used if UE is in CELL_FACH mode	1	
>U-TDOA Time Interval	М		9.2.2.57	Used if UE is in CELL_FACH mode	-	
GPS Positioning		01		Only present if Positioning Method is A- GPS	YES	reject
>GPS Positioning Instructions	М		9.2.2.101		-	
>Requested Data Value	0		9.2.2.26		_	
OTDOA Assistance Data		01		Only present if Positioning Method is OTDOA	YES	reject
>UE Positioning OTDOA Assistance data	М		9.2.2.59		_	
Include Velocity	0		9.2.2.97		YES	ignore

9.1.17 POSITION ACTIVATION RESPONSE

Table 17e

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		-	
UE Position Estimate Info	0		9.2.2.102	Position information for UE based positioning methods	YES	ignore
GPS Measured Results		0 <ma xNoOfS ets></ma 			GLOBAL	reject
>GPS Measured Results	М		9.2.2.12		_	
Cell-ID Measured Results Sets		0 <ma xNoOf Measur ements ></ma 			GLOBAL	reject
>Cell-ID Measured Results Info List	М		9.2.2.31		-	
OTDOA Measured Results Sets		0 <ma xNoOf Measur ements ></ma 			GLOBAL	reject
>OTDOA Measured Results Info List	M		9.2.2.32		_	
UTDOA Group	0		9.2.2.74		YES	reject
Velocity Estimate	0		9.2.2.98		YES	ignore

Table 17f

Range bound	Explanation
maxNoOfSets	Maximum number of sets of Measured Results included in the
	Position Activation Response message. The value for maxNoOfSets
	is 3.
maxNoOfMeasurements	Maximum number of Measurements of Cell-ID Measured Results
	Info List and OTDOA Measured Results Info List included in the
	Position Activation Response message. The value for
	maxNoOfMeasurements is 16.

9.1.18 POSITION ACTIVATION FAILURE

Table 17g

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		-	
Cause	M		9.2.2.3		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.19 POSITION PARAMETER MODIFICATION

Table 17h

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		-	
UTRAN Cell Identifier	0		9.2.2.37		YES	reject
UTDOA Group	0		9.2.2.74		YES	reject

9.1.20 ABORT

Table 17i

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		-	
Cause	M		9.2.2.3		YES	ignore

9.2 Information Element Functional Definitions and Contents

9.2.1 General

Clause 9.2 presents the PCAP IE definitions in tabular format. The corresponding ASN.1 definitions are presented in clause 9.3. In case there is contradiction between the tabular format in clause 9.2 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, where the tabular format shall take precedence.

When specifying information elements which are to be represented by bitstrings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bitstrings from other specifications, the first bit of the bitstring contains the first bit of the concerned information;

9.2.2 Radio Network Layer Related IEs

9.2.2.1 Almanac and Satellite Health SIB

Table 18

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS Almanac and Satellite Health	M		9.2.2.9	
SatMask	M		BIT STRING(132)	indicates the satellites that contain the pages being broadcast in this data set
LSB TOW	M		BIT STRING (8)	

9.2.2.2 Altitude and direction

Table 19

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Direction of Altitude	М		ENUMERATED (Height, Depth)	
Altitude	M		INTEGER (02 ¹⁵ -1)	The relation between the value (N) and the altitude (a) in meters it describes is $N \le a < N+1$, except for $N=2^{15}-1$ for which the range is extended to include all greater values of (a).

9.2.2.3 Cause

The purpose of the cause information element is to indicate the reason for a particular event for the whole protocol.

Table 20

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause Group				
>Radio Network Layer				
>Radio Network Layer >>Radio Network Layer Cause	M		ENUMERATED (invalid reference information, information temporarily not available, information provision not supported for the object, position calculation error: invalid GPS measured results,, position calculation error: invalid Cell-ID measured results, position calculation error: invalid Cell-ID measured results, position calculation error: invalid OTDOA measured results, position calculation error: A-GPS positioning method not supported, position calculation error: Cell-ID positioning method not supported, position calculation error: OTDOA positioning method not supported, Initial UE Position Estimate missing, position calculation error: invalid U-TDOA measured results, position calculation error: U-TDOA positioning method not supported, positioning method not supported, positioning method not supported, positioning method not supported in specified UTRAN cell, positioning method not supported, loss of contact with UE, SAS unable to perform U-TDOA positioning within Response Time, Location measurement failure, UE Positioning Error: Not enough OTDOA cells, UE Positioning Error: Not enough GPS Satellites, UE Positioning Error: Reference Cell not serving cell, UE Positioning Error: Not Accomplished GPS Timing of Cell Frames, UE Positioning Error: Undefined Error	
>Transport Layer				
>>Transport Layer Cause	М		ENUMERATED (Transport Resource Unavailable, Unspecified,)	
>Protocol				
>>Protocol Cause	M		ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Unspecified, Abstract Syntax Error (Falsely Constructed Message),)	
>Misc	<u> </u>		5,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
>>Misc Cause	M		ENUMERATED (Processing Overload, Hardware Failure, O&M Intervention, Unspecified,)	

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerning capability is missing. On the other hand, "not available" cause values indicate that the concerning capability is present, but insufficient resources were available to perform the requested action.

Table 21

Radio Network Layer cause	Meaning
Invalid reference information	The reference information (GPS-UTRAN Time Relationship
	Uncertainty and/or Initial UE Position Estimate) provided by the
	RNC are invalid
Information temporarily not	The information requested by RNC is temporarily not available
available	, , , , , , , , , , , , , , , , , , , ,
Information Provision not supported	The SAS does not support provision of the requested information
for the object	for the concerned object types
Position calculation error: invalid	The SAS cannot calculate position due to invalid GPS measured
GPS measured results	results
Position calculation error: invalid	The SAS cannot calculate position due to invalid Cell-ID measured
Cell-ID measured results	results
Position calculation error: invalid	The SAS cannot calculate position due to invalid OTDOA
OTDOA measured results	measured results
Position calculation error: A-GPS	The SAS cannot calculate position because it does not support the
positioning method not supported	A-GPS positioning method
Position calculation error: Cell-ID	The SAS cannot calculate position because it does not support the
positioning method not supported	Cell-ID positioning method
Position calculation error: OTDOA	The SAS cannot calculate position because it does not support the
positioning method not supported	OTDOA positioning method
Position calculation error: invalid U-	The SAS cannot calculate position due to invalid U-TDOA
TDOA measured results	measured results
Position calculation error: U-TDOA	The SAS cannot calculate position because it does not support the
positioning method not supported	U-TDOA positioning method
Position calculation error: U-TDOA	The SAS cannot calculate position because it does not support the
positioning method not supported	U-TDOA positioning method in the specified UTRAN cell
in specified UTRAN cell	
Positioning method not supported	The RNC does not support the requested positioning method
Loss of contact with UE	The RNC reports that it has lost contact with the UE
SAS unable to perform U-TDOA	The SAS did not send a U-TDOA position estimate within the
positioning within Response Time	interval defined by the Response Time IE
Location measurement failure	The SRNC cannot deliver the requested positioning measurement
	due to measurement failure.
UE Positioning Error: Not enough	The SRNC cannot deliver the requested positioning measurement
OTDOA cells	due to UE positioning error reported by the UE with error reason
	'Not enough OTDOA cells'.
UE Positioning Error: Not enough	The SRNC cannot deliver the requested positioning measurement
GPS Satellites	due to UE positioning error reported by the UE with error reason
	'Not enough GPS Satellites'.
UE Positioning Error: Reference	The SRNC cannot deliver the requested positioning measurement
Cell not serving cell	due to UE positioning error reported by the UE with error reason
	'Reference Cell not serving cell'
UE Positioning Error: Not	The SRNC cannot deliver the requested positioning measurement
Accomplished GPS Timing of Cell	due to UE positioning error reported by the UE with error reason
Frames	'Not Accomplished GPS Timing of Cell Frames'
UE Positioning Error: Undefined	The SRNC cannot deliver the requested positioning measurement
Error	due to UE positioning error reported by the UE with error reason
	'Undefined Error'

Table 22

Transport Network Layer cause	Meaning	
Transport resource unavailable	The required transport resources are not available	
Unspecified	Sent when none of the above cause values applies but still the	
	cause is Transport Network Layer related	

38

Protocol cause	Meaning
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the concerning criticality indicated "reject" (see clause 10.3)
Abstract Syntax Error (Ignore and Notify)	The received message included an abstract syntax error and the concerning criticality indicated "ignore and notify" (see clause 10.3)
Abstract syntax error (falsely	The received message contained IEs or IE groups in wrong order
constructed message)	or with too many occurrences (see clause 10.3)
Message not Compatible with Receiver State	The received message was not compatible with the receiver state (see clause 10.4)
Semantic Error	The received message included a semantic error (see clause 10.4)
Transfer Syntax Error	The received message included a transfer syntax error (see clause 10.2)
Unspecified	Sent when none of the above cause values applies but still the cause is Protocol related

Table 24

Miscellaneous cause	Meaning
Processing Overload	RNC/SAS processing overload
Hardware Failure	RNC/SAS hardware failure
O&M Intervention	Operation and Maintenance intervention related to RNC/SAS equipment
Unspecified	Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol

9.2.2.4 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the RNC or the SAS when parts of a received message have not been comprehended or are missing. It contains information about which IE was not comprehended or is missing.

For further details on how to use the Criticality Diagnostics IE, see annex A.

Table 25

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	0		INTEGER (0255)	
Triggering Message	0		ENUMERAT ED (initiating message, successful outcome, unsuccessful outcome, outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication.
Procedure Criticality	0		ENUMERAT ED (reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
Transaction ID Information Element	0	O manna of	9.2.2.28	
Criticality Diagnostics		0 <maxnoof errors=""></maxnoof>		
>IE Criticality	М		ENUMERAT ED (reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value 'Ignore' shall never be used.
>IE ld	M		INTEGER (065535)	The IE Id of the not understood or missing IE as defined in the ASN.1 part of the specification.
>Repetition Number	0		INTEGER (0255)	The Repetition Number IE gives - in case of a not understood IE: The number of occurrences of the reported IE up to and including the not understood occurrence - in case of a missing IE: The number of occurrences up to but not including the missing occurrence. Note: All the counted occurrences of the reported IE must have the same top-down hierarchical message structure of IEs with assigned criticality above them.
>Message Structure	0		9.2.2.23	The Message Structure IE describes the structure where the not understood or missing IE was detected. This IE is included if the not understood IE is not the top level of the message.
>Type of Error	М		ENUMERAT ED(not understood, missing,)	

Range bound	Explanation
maxnooferrors	Maximum number of IE errors allowed to be reported with a single
	message. The value for maxnooferrors is 256.

9.2.2.5 DGPS Corrections

This IE contains DGPS corrections, which may be employed to compensate for ranging errors due to atmospheric delay, orbital modelling, and satellite clock drift.

Table 27

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS TOW sec	М		INTEGER (0604799)	In seconds GPS time-of-week when the DGPS corrections were calculated
Status/Health	M		ENUMERAT ED (UDRE scale 1.0, UDRE scale 0.75, UDRE scale 0.5, UDRE scale 0.3, UDRE scale 0.2, UDRE scale 0.1, no data, invalid data)	
DPGS information	C- Status/Hea Ith	1 <maxsat ></maxsat 	,	
>SatID	M		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>IODE	М		INTEGER (0255)	
>UDRE	М		ENUMERAT ED (UDRE < 1.0 m, 1.0m < UDRE < 4.0m, 4.0m < UDRE < 8.0m, 8.0m < UDRE)	The value in this field shall be multiplied by the UDRE Scale Factor in the IE Status/Health to determine the final UDRE estimate for the particular satellite.
>PRC	М		INTEGER (- 20472047.)	Scaling factor 0.32 Meters
>Range Rate Correction	М		INTEGER (- 127127)	Scaling factor 0.032 meters/sec

Table 28

Condition	Explanation		
Status/Health	This IE shall be present if the Status/Health IE is not		
	equal to "no data" or "invalid data"		

Table 29

Range bound	Explanation	
MaxSat	Maximum number of satellites for which data is included in this IE.	

9.2.2.6 Geographical Area

Geographical Area IE is used to identify an area using geographical coordinates. The reference system is the same as the one used in [11].

Table 30

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Geographical Area				
>Point				Ellipsoid point
>>Geographical Coordinates	М		9.2.2.7	
>Point With Uncertainty				Ellipsoid point with uncertainty circle
>>Geographical Coordinates	М		9.2.2.7	
>>Uncertainty Code	M		INTEGER (0127)	The uncertainty "r" expressed in meters is derived from the "Uncertainty Code" k by r = 10x(1.1 ^k -1)
>Polygon				List of Ellipsoid points
>>Polygon		1 <maxnoofpoints></maxnoofpoints>		
>>>Geographical Coordinates	М		9.2.2.7	
>Ellipsoid point with uncertainty Ellipse				
>>Geographical Coordinates	М		9.2.2.7	
>>Uncertainty Ellipse	М		9.2.2.30	
>>Confidence	М		INTEGER (0100)	In percentage
>Ellipsoid point with altitude			0100)	
>>Geographical Coordinates	М		9.2.2.7	
>>Altitude and direction	M		9.2.2.2	
>Ellipsoid point with altitude and uncertainty Ellipsoid				
>>Geographical Coordinates	М		9.2.2.7	
>>Altitude and direction	М		9.2.2.2	
>>Uncertainty Ellipse	M		9.2.2.30	
>>Uncertainty Altitude	М		INTEGER (0127)	The uncertainty altitude 'h' expressed in metres is derived from the 'Uncertainty Altitude' <i>k</i> , by: h=45x(1.025 ^k -1)
>>Confidence	M		INTEGER (0100)	In percentage
>Ellipsoid Arc				
>>Geographical Coordinates	М		9.2.2.7	
>>Inner radius	M		INTEGER (02 ¹⁶ -1)	The relation between the value (N) and the radius (r) in meters it describes is $5N \le r < 5(N+1)$, except for $N=2^{16}-1$ for which the range is extended to include all grater values of (r).
>>Uncertainty radius	M		INTEGER (0127)	The uncertainty "r" is derived from the "Uncertainty radius" k by r = 10x(1.1 ^k -1)

IE/Group Name	Presence	Range	IE type and reference	Semantics description
>>Offset angle	М		INTEGER (0179)	The relation between the value (N) and the angle (a) in degrees it describes is 2N≤ a <2(N+1)
>>Included angle	М		INTEGER (0179)	The relation between the value (N) and the angle (a) in degrees it describes is 2N< a ≤2(N+1)
>>Confidence	M		INTEGER (0100)	

Table 31

Range bound	Explanation
maxnoofPoints	Maximum no. of points in polygon. Value is 15.

9.2.2.7 Geographical Coordinates

This IE contains the geographical coordinates.

Table 32

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Latitude Sign	M		ENUMERATED (North, South)	
Degrees Of Latitude	M		INTEGER (02 ²³ -1)	The IE value (N) is derived by this formula: N≤2 ²³ X /90 < N+1 X being the latitude in degree (0° 90°)
Degrees Of Longitude	М		INTEGER (-2 ²³ 2 ²³ -1)	The IE value (N) is derived by this formula: N≤2 ²⁴ X /360 < N+1 X being the longitude in degree (-180°+180°)

9.2.2.8 GPS Acquisition Assistance

This IE contains parameters that enable fast acquisition of the GPS signals in UE-assisted GPS positioning.

Table 33

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
GPS TOW msec	M		INTEGER (06.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).	_	
Satellite information		1 <ma xSat></ma 			_	
>SatID	M		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].	-	
>Doppler (0 th order term)	М		INTEGER (- 20482047)	Scaling factor 2.5Hz	-	
>Extra Doppler		01	,		-	
>>Doppler (1 st order term)	М		INTEGER (- 4221)	Scaling factor 1/42	1	
>>Doppler Uncertainty	M		ENUMERAT ED (12.5,25,50, 100,200,)	In Hz	-	
>Code Phase	M		INTEGER (01022)	In Chips, specifies the centre of the search window	-	
>Integer Code Phase	М		INTEGER (019)	Number of 1023 chip segments	-	
>GPS Bit number	M		INTEGER (03)	Specifies GPS bit number (20 1023 chip segments)	-	
>Code Phase Search Window	M		ENUMRATE D (1023,1,2,3, 4,6,8,12,16,2 4,32,48,64,9 6,128,192)	Specifies the width of the search window.	-	
>Azimuth and Elevation		01			_	
>>Azimuth	М		INTEGER (031)	Scaling factor 11.25 Degrees	-	
>>Elevation	М		INTEGER (07)	Scaling factor 11.25 Degrees	_	
UTRAN GPS Reference Time	0		9.2.2.103	This IE may only be present if SAS operates in SAS-centric mode.	YES	ignore

Table 34

Range bound	Explanation
mMaxSat	Maximum number of satellites for which data is included in this IE.
	The value of maxSat is 16.

9.2.2.9 GPS Almanac and Satellite Health

This IE contains a reduced-precision subset of the clock and ephemeris parameters.

Table 35

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	
WNa	M		BIT STRING (8)		
Satellite information		1 <maxsat Almanac></maxsat 	, ,		
>DataID	M		BIT STRING (2)	See [10]	
>SatID	М		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].	
>e	M		BIT STRING (16)	Eccentricity [10]	
>t _{oa}	M		BIT STRING (8)	Reference Time of Almanac [10]	
>δί	M		BIT STRING (16)	Correction to Inclination (semi- circles) [10]	
>OMEGADOT	M		BIT STRING (16)	Rate of Right Ascension (semi-circles/sec) [10]	
>SV Health	М		BIT STRING (8)	[10]	
>A ^{1/2}	M		BIT STRING (24)	Semi-Major Axis (meters) ^{1/2} [10]	
>OMEGA ₀	М		BIT STRING (24)	Longitude of Ascending Node of Orbit Plane at Weekly Epoch (semi-circles) [10]	
>M ₀	M		BIT STRING (24)	Mean Anomaly at Reference Time (semi-circles) [10]	
>ω	M		BIT STRING (24)	Argument of Perigee (semi- circles) [10]	
>af ₀	M		BIT STRING (11)	apparent clock correction [10]	
>af ₁	M		BIT STRING (11)	apparent clock correction [10]	
SV Global Health	0		BIT STRING (364)	This enables GPS time recovery and possibly extended GPS correlation intervals	

Table 36

Range bound	Explanation
maxSatAlmanac	Maximum number of satellites for which data is included in this IE.
	The value of maxSatAlmanac is 32.

9.2.2.10 GPS Clock and Ephemeris Parameters

The IE contains the GPS clock information and GPS Ephemeris.

Table 37

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	
C/A or P on L2	М	M BIT STRING (2)		Code(s) on L2 Channel [10]	
URA Index	M		BIT STRING (4)	User Range Accuracy [10]	
SV Health	М		BIT STRING (6)	[10]	
IODC	М		BIT STRING (10)	Issue of Data, Clock [10]	
L2 P Data Flag	М		BIT STRING (1)	[10]	
SF 1 Reserved	М		BIT STRING (87)	[10]	
T _{GD}	М		BIT STRING (8)	Estimated group delay differential [10]	
toc	М		BIT STRING (16)	apparent clock correction [10]	
af ₂	М		BIT STRING (8)	apparent clock correction [10]	
af ₁	М		BIT STRING (16)	apparent clock correction [10]	
af ₀	М		BIT STRING (22)	apparent clock correction [10]	
C _{rs}	М		BIT STRING (16)	Amplitude of the Sine Harmonic Correction Term to the Orbit Radius (meters) [10]	
Δη	M BIT STRING M (16) C		Mean Motion Difference From Computed Value (semi- circles/sec) [10]		
M ₀	М		BIT STRING (32)	Mean Anomaly at Reference Time (semi-circles) [10]	
Cuc	М		BIT STRING (16)	Amplitude of the Cosine Harmonic Correction Term To The Argument Of Latitude (radians) [10]	
е	М	M BIT STRING (32)		Eccentricity [10]	
Cus	М		BIT STRING (16)	Amplitude of the Sine Harmonic Correction Term To The Argument Of Latitude (radians) [10]	
(A) ^{1/2}	М		BIT STRING (32)	Semi-Major Axis (meters) ^{1/2} [10]	
t _{oe}	М		BIT STRING (16)	Reference Time Ephemeris [10]	
Fit Interval Flag	М		BIT STRING	[10]	
AODO	М		BIT STRING (5)	Age Of Data Offset [10]	
C _{ic}	M BIT STRING Amplitude of the (16) Harmonic Corre The Angle Of Ir		Amplitude of the Cosine Harmonic Correction Term To The Angle Of Inclination (radians) [10]		
OMEGA ₀	M BIT STRING Longitude of As (32) Orbit Plane at V (semi-circles) [Longitude of Ascending Node of Orbit Plane at Weekly Epoch (semi-circles) [10]		
C _{is}	М	M BIT STRING Amplitude of the Sin (16) Correction Term To		Amplitude of the Sine Harmonic Correction Term To The Angle Of Inclination (radians) [10]	
i _o	М		BIT STRING (32)	Inclination Angle at Reference Time (semi-circles) [10]	
Crc	M	M BIT STRING Amplitude of the C (16) Harmonic Correction		Amplitude of the Cosine Harmonic Correction Term to the Orbit Radius (meters) [10]	

ω	M	BIT STRING (32)	Argument of Perigee (semicircles) [10]
OMEGAdot	M	BIT STRING	Rate of Right Ascension (semi-
		(24)	circles/sec) [10]
Idot	M	BIT STRING	Rate of Inclination Angle (semi-
		(14)	circles/sec) [10]

9.2.2.11 GPS Ionospheric Model

The IE contains fields needed to model the propagation delays of the GPS signals through the ionosphere.

Table 38

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
α_0	M		BIT STRING (8)	NOTE 1
α_1	М		BIT STRING (8)	NOTE 1
α_2	М		BIT STRING (8)	NOTE 1
α_3	М		BIT STRING (8)	NOTE 1
β_0	М		BIT STRING (8)	NOTE 2
β ₁	М		BIT STRING (8)	NOTE 2
β2	М		BIT STRING (8)	NOTE 2
β ₃	М		BIT STRING (8)	NOTE 2

NOTE 1: The parameters α_n are the coefficients of a cubic equation representing the amplitude of the vertical delay [10].

NOTE 2: The parameters β_n are the coefficients of a cubic equation representing the period of the ionospheric model [10].

9.2.2.12 GPS Measured Results

The purpose of this information element is to provide reported GPS measurement information from the SRNC to the SAS.

Table 39

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
GPS TOW msec	М		INTEGER (06.048*1 0 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).	-	
				If the UTRAN GPS reference time Result is present, this IE shall be set to 0 by the transmitter and ignored by the receiver.		
Measurement Parameters		1 <ma xSat></ma 			_	
>Satellite ID	М		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].	-	
>C/N₀	M		INTEGER (063)	The estimate of the carrier-to-noise ratio of the received signal from the particular satellite used in the measurement. It is given in units of dB-Hz (Typical levels will be in the range of 20 – 50 dB-Hz).	-	
>Doppler	М		INTEGER (-32768 32768)	Hz, scale factor 0.2.	-	
>Whole GPS Chips	М		INTEGER (01022)	Unit in GPS chips	_	
>Fractional GPS Chips	М		INTEGER (0(2 ¹⁰ -1))	Scale factor 2 ⁻¹⁰	_	
>Multipath Indicator	М		ENUMERA TED (NM, low, medium, high)	See NOTE 1	-	
>Pseudorange RMS Error	М		INTÉGER (063)	See NOTE 2	_	
UTRAN GPS Reference Time Result	0		9.2.2.104	This IE may only be present if SAS operates in SAS- centric mode.	YES	ignore

NOTE 1: Table 41 gives the mapping of the multipath indicator field.

NOTE 2: Table 42 gives the bitmapping of the Pseudorange RMS Error field.

Table 40

Range bound	Explanation
maxSat	Maximum number of satellites for which data is included in this IE.
	The value of maxSat is 16.

Table 41

Value	Multipath Indication
NM	Not measured
Low	MP error < 5m
Medium	5m < MP error < 43m
High	MP error > 43m

Table 42

Value	Mantissa	Exponent	Floating-Point value, x _i	Pseudorange value, P
0	000	000	0.5	P < 0.5
1	001	000	0.5625	0.5 <= P < 0.5625
i	X	Υ	0.5 * (1 + x/8) * 2y	xi-1 <= P < xi
62	110	111	112	104 <= P < 112
63	111	111		112 <= P

9.2.2.13 GPS Navigation Model

This IE contain information required to manage the transfer of precise navigation data to the GPS-capable UE.

Table 43

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Satellite information		1 <maxs at></maxs 		
>SatID	М	417	INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>Satellite Status	М		ENUMERAT ED (NS_NN, ES_SN, ES_NN, REVD)	See NOTE
>GPS Clock and Ephemeris parameters	C-Satellite status		9.2.2.10	

NOTE: The UE shall interpret enumerated symbols as follows.

Table 44

Value	Indication
NS_NN	New satellite, new Navigation Model
ES_SN	Existing satellite, same Navigation Model
ES_NN	Existing satellite, new Navigation Model
REVD	Reserved

Condition	Explanation
Satellite status	The IE shall be present if the Satellite Status IE is not
	set to ES_SN

Table 46

Range bound	Explanation
maxSat	Maximum number of satellites for which data is included in this IE.
	The value of maxSat is 16.

9.2.2.14 GPS Real Time Integrity

Table 47

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Bad Satellites				
Presence				
>Bad Satellites				
>>Satellite information		1 <maxno< td=""><td></td><td></td></maxno<>		
		Sat>		
>>>BadSatID	M		INTEGER	Identifies the satellite and is
			(063)	equal to (SV ID No - 1) where
				SV ID No is defined in [10].
>No Bad Satellites			NULL	

Table 48

Range bound	Explanation
maxNoSat	Maximum number of satellites for which data is included in this IE.
	The value of maxNoSat is 16.

9.2.2.15 GPS Reference Time

Table 49

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
GPS Week	М		INTEGER (01023)		ı	
GPS TOW msec	M		INTEGER (06.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).	_	
GPS TOW Assist		0 <maxs at></maxs 			-	
>SatID	М		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].	-	
>TLM Message	М		BIT STRING (14)		_	
>Anti-Spoof	М		BOOLEAN		_	
>Alert	M		BOOLEAN		_	
>TLM Reserved	M		BIT STRING (2)		1	
UTRAN GPS Reference Time	0		9.2.2.103	This IE may only be present if SAS operates in SAS-centric mode.	YES	ignore
SFN-TOW Uncertainty	0		GPS- UTRAN Time Relationship Uncertainty 9.2.2.18	This IE may only be present if SAS operates in SAS-centric mode.	YES	ignore
T _{UTRAN-GPS} Drift Rate	0		9.2.2.105	This IE may only be present if SAS operates in SAS-centric mode.	YES	ignore

Table 50

Range bound	Explanation
maxSat	Maximum number of satellites for which data is included in this IE.
	The value of maxSat is 16.

9.2.2.16 GPS Transmission TOW

Table 51

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS Transmission TOW			INTEGER (0604799)	The GPS time-of-week in seconds

9.2.2.17 GPS UTC Model

The UTC Model field contains a set of parameters needed to relate GPS time to Universal Time Coordinate (UTC).

Table 52

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
A ₁	M		BIT STRING (24)	sec/sec [10]
A_0	M		BIT STRING (32)	seconds [10]
t _{ot}	M		BIT STRING (8)	seconds [10]
Δt_{LS}	M		BIT STRING (8)	seconds [10]
WNt	M		BIT STRING (8)	weeks [10]
WN _{LSF}	M		BIT STRING (8)	weeks [10]
DN	M		BIT STRING (8)	days [10]
Δt_{LSF}	M		BIT STRING (8)	seconds [10]

9.2.2.18 GPS-UTRAN Time Relationship Uncertainty

This IE contains the uncertainty of the GPS and UTRAN time relationship.

Table 53

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS-UTRAN Time Relationship Uncertainty			ENUMERATED (50ns, 500ns, 1us, 10us, 1ms, 10ms, 100ms, unreliable)	RNC or SAS estimate of uncertainty in GPS-UTRAN time relationship

9.2.2.19 Information Exchange ID

The Information Exchange ID uniquely identifies any requested information per RNC-SAS pair.

Table 54

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Information Exchange ID			INTEGER (0	
			2^20-1)	

9.2.2.20 Information Exchange Object Type

Void.

9.2.2.21 Information Report Characteristics

The information report characteristics define how the reporting shall be performed.

Table 56

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Information Report	M		ENUMERAT	
Characteristics Type			ED(On	
			Demand,	
			Periodic,	
			On	
			Modification,	
)	
CHOICE Information Report Periodicity	C-Periodic			Indicates the frequency with which the SAS shall send broadcast data reports.
>Min				
>>Minutes	M		INTEGER	
			(160,)	
>Hour				
>>Hours	M		INTEGER	
			(124,)	

Table 57

Condition	Explanation
Periodic	This IE shall be present if the Information Report
	Characteristics Type IE indicates 'periodic'

9.2.2.22 Information Type

The Information Type indicates which kind of information the SAS shall provide.

Table 58

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Information Type				
>Implicit				
>>Method Type	М		9.2.2.25	
>Explicit			0.2.2.20	
>>Explicit Information		1 <maxnoofexpinfo></maxnoofexpinfo>		
>>>CHOICE Explicit	М	,		
Information Item				
>>>>Almanac and			NULL	
Satellite Health			.,,,,,	
>>>UTC Model				
>>>>Transmission	М		9.2.2.29	
TOW Indicator			0.2.2.20	
>>>Ionospheric Model				
>>>>Transmission	М		9.2.2.29	
TOW Indicator	141		5.2.2.23	
>>>Navigation Model				
>>>>Transmission	M		9.2.2.29	
TOW Indicator	IVI		3.2.2.23	
>>>>Nav. Model		01		
Additional Data		0 1		
>>>>GPS	M		INTEGER	
Week	IVI		(01023)	
>>>>GPS_Toe	M		INTEGER	GPS time of ephemeris in
/////JOI 5_10e	IVI		(0167)	hours of the latest ephemeris
			(0107)	set
>>>>T-Toe limit	М		Integer	ephemeris age tolerance in
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			(010)	hours
>>>>Satellite related data		0 <maxsat></maxsat>	(GIII G)	
>>>>SatID	М		INTEGER	Identifies the satellite and is
			(063)	equal to (SV ID No - 1) where
			,	SV ID No is defined in [10].
>>>>>IODE	М		INTEGER	Issue of Data Ephemeris for
			(0255)	SatID
>>>DGPS			NULL	
Corrections				
>>>Reference Time			NULL	
>>>Acquisition			NULL	
Assistance				
>>>Real Time			NULL	
Integrity				
>>>Almanac and				
Satellite Health SIB				
>>>>Transmission	М		9.2.2.29	
TOW Indicator				
>>>Reference			NULL	This IE may only be present if
Location			_	SAS operates in SAS-centric mode.

Table 59

Range Bound	Explanation
maxnoofExpInfo	Maximum number of Explicit Information supported in one
·	Information Exchange. The value of maxnoofExpInfo is 32.
maxSat	Maximum number of satellites for which data is included in this IE.
	The value of maxSat is 16.

9.2.2.23 Message Structure

The *Message Structure* IE gives information for each level with assigned criticality in an hierarchical message structure from top level down to the lowest level above the reported level for the occured error (reported in the *Information Element Criticality Diagnostics* IE).

Table 60

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Message structure		1 <maxnoo flevels></maxnoo 		The first repetition of the Message Structure IE corresponds to the top level of the message. The last repetition of the Message Structure IE corresponds to the level above the reported level for the occurred error of the message.
>IE ID	M		INTEGER (065535)	The IE ID of this level's IE containing the not understood or missing IE.
>Repetition Number	0		INTEGER (1256)	The Repetition Number IE gives, if applicable, the number of occurrences of this level's reported IE up to and including the occurrence containing the not understood or missing IE. Note: All the counted occurrences of the reported IE must have the same top-down hierarchical message structure of IEs with assigned criticality above them.

Table 61

Range bound	Explanation			
maxnooflevels	Maximum no. of message levels to report. The value for			
	maxnooflevels is 256.			

9.2.2.24 Message Type

Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

Table 62

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Procedure Code	M		INTEGER(0255)	'1' = Position Calculation '2' = Information Exchange Initiation '3' = Information Reporting '4' = Information Exchange Termination, '5' = Information Exchange Failure '6' = Error Indication '8' = Position Parameter Modification '9' = Position Initiation '10' = Position Activation '11' = Abort
Type of Message	M		ENUMERATED (Initiating Message, Successful Outcome, Unsuccessful Outcome, Outcome)	

9.2.2.25 Method Type

Table 63

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Method Type			ENUMERATED	
			(UE_Assisted,	
			UE_Based)	

9.2.2.26 Requested Data Value

The Requested Data Value contains the relevant data concerning the ongoing information exchange, or positioning event.

Table 64

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
GPS Almanac and	0		9.2.2.9		-	
Satellite Health						
GPS UTC Model	0		9.2.2.17		ı	
GPS Ionospheric Model	0		9.2.2.11		_	
GPS Navigation Model	0		9.2.2.13		-	
DGPS Corrections	0		9.2.2.5		-	
GPS Reference Time	0		9.2.2.15		-	
GPS Acquisition	0		9.2.2.8		_	
Assistance						
GPS Real Time Integrity	0		9.2.2.14		ı	
Almanac and Satellite Health SIB	0		9.2.2.1		ı	
GPS Transmission TOW	0		9.2.2.16		_	
GPS Reference Location	0		Geo- graphical Area 9.2.2.6	This IE may only be present if SAS operates in SAS-centric mode.	YES	ignore

9.2.2.27 Requested Data Value Information

The *Requested Data Value Information* IE provides information on whether or not the Requested Data Value is available in the message and also the Requested Data Value itself if available.

In case of "Periodic" and "On Modification" reporting, "Information Not Available" shall be used when at least one part of the requested information was not available at the moment of initiating the Information Reporting procedure.

Table 65

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
CHOICE Information Availability Indicator	М				_	
>Information Available					_	
>>Requested Data Value	М		9.2.2.26		_	
>Information not Available			NULL		_	

9.2.2.28 Transaction ID

The Transaction ID is used to associate all the messages belonging to the same procedure. Messages belonging to the same procedure shall use the same Transaction ID.

The Transaction ID is determined by the initiating peer of a procedure.

The Transaction ID shall uniquely identify a procedure among all ongoing parallel procedures using the same procedure code, and initiated by the same protocol peer.

Table 66

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Transaction ID Length				The Transaction ID shall be interpreted for its integer value, not for the type of encoding ("short' or "long').
>Short				
>>Transaction ID Value	M		INTEGER (0127)	
>Long				
>>Transaction ID Value	М		INTEGER (032767)	

9.2.2.29 Transmission TOW Indicator

Table 67

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transmission TOW Indicator			ENUMERATE D (requested,	
			not	
			requested)	

9.2.2.30 Uncertainty Ellipse

This IE contains the uncertainty ellipse of a geographical area.

Table 68

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Uncertainty semi-major	M		INTEGER (0127)	The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
Uncertainty semi-minor	M		INTEGER (0127)	The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
Orientation of major axis	M		INTEGER (089)	The relation between the IE value (N) and the angle (a) in degrees it describes is 2N≤ a <2(N+1)

9.2.2.31 Cell-ID Measured Results Info List

This IE contains the Cell-ID measurements of signals associated with one or more cells.

Table 69

IE/Group Name	Presenc e	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Cell-ID Measured Results Info		1 <maxno OfMeasNC ell></maxno 	1010101101		_	
>UC-ID	М	- Cir	9.2.2.37	The identifier of the measured cell.	_	
>UTRAN Access Point Position with Altitude	М		9.2.2.36	Exact geographical position of the base station antenna.	-	
				If the SAS operates in SAS-centric mode, the values of this IE shall be set to 0 by the transmitter and shall be ignored by the receiver.		
>Geographical Area	0		9.2.2.6	May only be present if the SAS operates in RNC-centric mode.	-	
>Round Trip Time Info		01		FDD only	_	
>>UE Rx-Tx Time Difference Type 2	M		INTEGER (08191)	According to mapping in [13].	_	
>>UE Positioning Measurement Quality	М		9.2.2.35	Quality of the UE Rx-Tx time difference measurement.	-	
>>Round Trip Time	М		INTEGER (032766)	According to mapping in [13].	_	
>Rx Timing Deviation Info		01		3.84Mcps TDD only	_	
>>Rx Timing Deviation	М		INTEGER (08191)	According to mapping in [14].	_	
>>Timing Advance	М		INTEGER (063)	According to [4].	_	
>Rx Timing Deviation LCR Info		01		1.28Mcps TDD only	_	
>>Rx Timing Deviation LCR	М		INTEGER (0511)	According to mapping in [14].	_	
>>Timing Advance LCR	М		INTEGER (02047)	According to mapping in [14].	_	
>Pathloss	0		INTEGER (46158)	Unit: dB downlink pathloss as defined in [4] subclause 10.3.7.3	-	
>Rx Timing Deviation 768Info		01		7.68Mcps TDD only	-	
>>Rx Timing Deviation 7.68Mcps	М		INTEGER (0 65535)	According to mapping in [14].	YES	reject
>>Timing Advance 7.68Mcps	М		INTEGER (0 511)	According to [4].	YES	reject
>Rx Timing Deviation 384ext Info		01	,	3.84Mcps TDD only	_	

>>Rx Timing Deviation	М	INTEGER (0 32767)	According to mapping in [14].	YES	reject
>>Timing Advance	М	INTEGER (0 255)	According to [4].	YES	reject

Range bound	Explanation
maxNoOfMeasNCell	Maximum number of neighbour cells on which information can be
	reported. The value of maxNoOfMeasNCell is 32.

9.2.2.32 OTDOA Measured Results Info List

This IE contains the OTDOA measurements of signals sent from the reference and neighbour cells.

Table 71

Presenc e	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
	1 <maxno ofMeasNC ell></maxno 			-	
M		9.2.2.37	The identifier of the neighbour cell.	1	
	1			_	
М		INTEGER (040961)	Gives the observed timing of the neighbour cell relative to the reference cell.	-	
M		9.2.2.35	Quality of the observed time difference measurement.	-	
М		INTEGER (065535)	The interval of time, in units of 10ms frames, spanning the following two events:	-	
			1) Time of applicability of the SFN-SFN Value or TUTRAN-GPS/SFN relationship provided for the corresponding neighbour cell in 9.2.2.33.		
			2) The point in time when this corresponding SFN-SFN observed time difference measurement was captured by the UE.		
			If the SAS operates in SAS-centric mode, 1) above shall be set to zero. I.e., in SAS-centric mode this IE indicates the SFN during which the corresponding SFN-SFN observed time		
	M M	e 1 <maxno ell="" ofmeasnc=""> M 1 M</maxno>	e and Reference 1 Maxno of Meas NC ell> M 9.2.2.37 1 INTEGER (040961) M 9.2.2.35 M INTEGER (1 M INTEGER (1 M INTEGER (1 M INTEGER (1	e	e

			measurement was captured by the UE.		
>Additional OTDOA Measured Results	0		This IE may only be present if SAS operates in SAS-centric mode.	YES	ignore
>>Primary CPICH Info	M	Primary Scrambling Code 9.2.2.46	The identifier of the neighbour cell.	1	

Range bound	Explanation
MaxNoOfMeasNCell	Maximum number of neighbouring cells on which information can be
	reported. The value of MaxNoOfMeasNCell is 32.

9.2.2.33 OTDOA Neighbour Cell Info

Table 73

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UC-ID	М		9.2.2.37	The identifier of the neighbour cell.
UTRAN Access Point Position with Altitude	М		9.2.2.36	Exact geographical position of the base station antenna.
CHOICE Relative Timing Difference Info	М			
>SFN-SFN Measurement				
Value Information				
>>SFN-SFN Value	M		INTEGER (0614399)	
>>SFN-SFN Quality	0		INTEGER (0255)	Indicates the standard deviation (std) of the SFN-SFN otd (observed time difference) measurements in 1/16 chip. SFN-SFN Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported SFN-SFN Value, where x is the reported SFN-SFN Value and μ = $E[x]$ is the expectation value of x.
>>SFN-SFN Drift Rate	М		INTEGER (-100+100)	Indicates the SFN-SFN drift rate in 1/256 chip per second. A positive value indicates that the Reference cell clock is running at a greater frequency than the measured neighbouring cell.
>>SFN-SFN Drift Rate Quality	0		INTEGER (0100)	Indicates the standard deviation (std) of the SFN-SFN drift rate measurements in 1/256 chip per second. SFN-SFN Drift Rate Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported SFN-SFN Drift Rate, where x is the reported SFN-SFN Drift Rate and $\mu = E[x]$ is the expectation value of x.
>T _{UTRAN-GPS} Measurement Value Information				
>>SFN	М		INTEGER (04095)	SFN during which the T _{UTRAN-GPS} measurement was performed
>>T _{UTRAN-GPS}		1		Indicates the UTRAN GPS Timing of Cell Frame for LCS.
>>>MS	М		INTEGER (016383)	Most significant part
>>>LS	М		INTEGER (042949672 95)	Least significant part
>>Tutran-gps Quality	0		INTEGER (0255)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ measurements in 1/16 chip. $T_{UTRAN-GPS}$ Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Value, where x is the reported $T_{UTRAN-GPS}$ Value and $\mu = E[x]$ is the expectation value of x.
>>Tutran-gps Drift Rate	М		INTEGER (-50+50)	Indicates the T _{UTRAN-GPS} drift rate in 1/256 chip per second. A positive value indicates that

			the UTRAN clock is running at a lower frequency than GPS clock.
>>T _{UTRAN-GPS} Drift Rate Quality	0	INTEGER (050)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ drift rate measurements in 1/256 chip per second. $T_{UTRAN-GPS}$ Drift Rate Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Drift Rate, where x is the reported $T_{UTRAN-GPS}$ Drift Rate and $\mu = E[x]$ is the expectation value of x.

9.2.2.34 OTDOA Reference Cell Info

Table 74

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UC-ID	M		9.2.2.37	The identifier of the reference cell.
UTRAN Access Point Position with Altitude	M		9.2.2.36	Exact geographical position of the base station antenna.
T _{UTRAN-GPS} Measurement Value Information		01		
>SFN	M		INTEGER (04095)	SFN during which the T _{UTRAN-} _{GPS} measurement was performed
>T _{UTRAN-GPS}		1		Indicates the UTRAN GPS Timing of Cell Frame for LCS.
>>MS	M		INTEGER (016383)	Most significant part
>>LS	M		INTEGER (042949672 95)	Least significant part
>T _{UTRAN-GPS} Quality	0		INTEGER (0255)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ measurements in 1/16 chip. $T_{UTRAN-GPS}$ Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Value, where x is the reported $T_{UTRAN-GPS}$ Value and μ = $E[x]$ is the expectation value of x.
>T _{UTRAN-GPS} Drift Rate	M		INTEGER (-50+50)	Indicates the T _{UTRAN-GPS} drift rate in 1/256 chip per second. A positive value indicates that the UTRAN clock is running at a lower frequency than GPS clock.
>T _{UTRAN-GPS} Drift Rate Quality	0		INTEGER (050)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ drift rate measurements in 1/256 chip per second. $T_{UTRAN-GPS}$ Drift Rate Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Drift Rate, where x is the reported $T_{UTRAN-GPS}$ Drift Rate and $\mu = E[x]$ is the expectation value of x .

9.2.2.35 UE Positioning Measurement Quality

Table 75

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Std Resolution	M		BIT STRING (2)	Std Resolution field includes the resolution used in Std of Measurements field. Encoding on two bits as follows: '00' 10 meters '01' 20 meters '10' 30 meters '11' Reserved
Number of Measurements	M		BIT STRING (3)	The 'Number of Measurements' field indicates how many measurements have been used in the UE to determine the sample standard deviation of the measurements. Following 3 bit encoding is used: '001' 5-9 '010' 10-14 '011' 15-24 '100' 25-34 '101' 35-44 '110' 45-54 '111' 55 or more Special case: '000':In this case the field 'Std of Measurements' contains the std of the reported measurement value = $\sqrt{E[(x-\mu)^2]}$, where x is the reported value and μ = $E[x]$ is the expectation value (i.e. the true value) of x. This std can be used irrespective of the number of measurements and reporting of the number of measurements is not needed. Also other measurements such as Ec/No or Rx levels can be utilised in this case to evaluate the 'Std of Measurements' reported in this IE.
Std of Measurements	M		BIT STRING (5)	Std of Measurements field includes sample standard deviation of measurements (when number of measurements is reported in 'Number of Measurements' field) or standard deviation of the reported measurement value = $\sqrt{E[(x-\mu)^2]}$, where x is the reported value and μ = $E[x]$ is the expectation value (i.e. the true value) of x (when '000' is given in 'Number of Measurements' field). Following linear 5 bit encoding is used: '00000' 0 - (R*1-1) meters '00001' R*1 - (R*2-1) meters

	'00010' R*2 – (R*3-1) meters
	'11111' R*31 meters or more where R is the resolution defined by Std Resolution field. E.g. R=20 m corresponds to 0-19 m, 20-39
	m,,620+ m.

9.2.2.36 UTRAN Access Point Position with Altitude

The UTRAN Access Point Position with Altitude indicates the exact geographical position of the base station antenna. The altitude shall be included when available.

Table 76

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Geographical Coordinates	M		9.2.2.7	
Altitude and direction	0		9.2.2.2	

9.2.2.37 UTRAN Cell Identifier (UC-ID)

The UC-ID (UTRAN Cell identifier) is the identifier of a cell in one UTRAN.

Table 77

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RNC-ID	М		INTEGER (04095)	The identifier of one RNC in UTRAN.
C-ID	М		INTEGER (065535)	The identifier of a cell in one RNS.

9.2.2.38 Horizontal Accuracy Code

Table 78

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Horizontal Accuracy Code	M		INTEGER(0127)	The requested accuracy "r" is derived from the "Horizontal Accuracy Code" k by r = 10x(1.1 ^k -1)

9.2.2.39 Vertical Accuracy Code

Table 79

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Vertical Accuracy Code	M		INTEGER(0127)	The requested accuracy "v" is derived from the "Vertical Accuracy Code" k by v = 45x(1.025 ^k -1).

9.2.2.40 Accuracy Fulfilment Indicator

This IE indicates whether the returned position estimate satisfies the requested accuracy or not.

Table 80

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Accuracy Fulfilment Indicator	M		ENUMERATED	
			(requested	
			accuracy	
			fulfilled,	
			requested	
			accuracy not	
			fulfilled,	
)	

9.2.2.41 Uplink DPCH information

This IE indicates the Uplink DPCH information used in the U-TDOA positioning method.

Table 81

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Choice mode	M			
>FDD				
>>Scrambling code type	M		ENUMERATED	
			(short, long)	
>>Scrambling code number	M		INTEGER(016 777215)	
>>TFCI existence	М		BOOLEAN	TRUE means existence.
>>Number of FBI bits	M		INTEGER(02)	In bits.
>TDD				
>>Cell Parameter ID	M		9.2.2.81	
>>TFCI Coding	M		9.2.2.82	
>>Puncture Limit	M		9.2.2.76	
>>Repetition Period	M		9.2.2.84	
>>Repetition Length	M		9.2.2.83	
>>TDD DPCH Offset	M		9.2.2.85	
>>UL Timeslot Information	М		9.2.2.86	
>>Frame Offset	М		9.2.2.64	
>>Special Burst Scheduling	М		9.2.2.92	

9.2.2.42 Frequency information

This IE indicates the Frequency information used for the U-TDOA positioning method.

Table 82

IE/Group name	Presence	Range	IE Type and Reference	Semantics description
CHOICE mode	M			
>FDD				
>>UARFCN uplink (Nu)	0		INTEGER (016383)	If this IE is not present, the default duplex distance defined for the operating frequency band shall be used [20]
>>UARFCN downlink (Nd)	М		INTEGER (0 16383)	[20]
>TDD				
>>UARFCN	М		INTEGER (0 16383)	[21]

9.2.2.43 PRACH parameters

This IE indicates the PRACH parameter used for the U-TDOA positioning method.

Table 83

IE/Group name	Presence	Range	IE Type and Reference	Semantics description
PRACH parameters		1		
		<maxp< td=""><td></td><td></td></maxp<>		
		RACH>		
>PRACH information	M		9.2.2.47	
>TFS	M		9.2.2.48	
>TFCS		1 <max< td=""><td></td><td></td></max<>		
		TFC>		
>>CTFC	M		9.2.2.49	

Table 84

Range bound	Explanation				
maxPRACH	Maximum number of PRACHs in a cell. The value is 16.				
maxTFC	Maximum number of TFC. Value is 1024.				

9.2.2.44 Compressed Mode Assistance Data

This IE provides the assistance data used for the U-TDOA positioning method when the UE is operating in the compressed mode.

Table 85

IE/Group name	Presence	Range	IE Type and Reference	Semantics description
CHOICE mode	M			
>FDD				
>>Downlink information		1		
>>>Primary Scrambling Code	М		9.2.2.65	
>>>Chip Offset	M		9.2.2.63	
>>>Frame Offset	M		9.2.2.64	
>>Uplink information		1		

IE/Group name	Presence	Range	IE Type and Reference	Semantics description
>>>Transmisson Gap Pattern Sequence Information	M		9.2.2.66	
>>>Active Pattern Sequence Information	М		9.2.2.67	
>>>CFN	M		9.2.2.68	

9.2.2.45 C-RNTI

The cell RNTI (C-RNTI) identifies a UE having a RRC connection within a cell that is used for the U-TDOA positioning method.

Table 86

IE/Group name	Presence	Range	IE Type and Reference	Semantics description
C-RNTI			BIT STRING(16)	

9.2.2.46 Primary Scrambling Code

This IE gives the DL scrambling code of a cell.

Table 87

IE/Group name	Presence	Range	IE Type and Reference	Semantics description
Primary Scrambling Code			INTEGER(0511)	

9.2.2.47 PRACH information

This IE contains the PRACH information used for the U-TDOA positioning method.

Table 88

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE mode	M			
>FDD				
>>Available Signature	M		BIT STRING (16)	Each bit indicates availability for a signature, where the signatures are numbered "signature 0" up to "signature 15". The value 1 of a bit indicates that the corresponding signature is available and the value 0 that it is not available.
>>Available SF	M		ENUMERATED (32,64,128,256,)	In chips per symbol Defines the minimum allowed SF (i.e. the maximum rate)
>>Preamble scrambling code number	М		INTEGER(015)	Identification of scrambling code see [17]
>>Puncturing Limit	M		9.2.2.76	
>>Available Sub Channel Number	M		BIT STRING (12)	Each bit indicates availability for a subchannel, where the subchannels are numbered "subchannel 0" to "subchannel 11". The value 1 of a bit indicates that the corresponding subchannel is available and the value 0 indicates that it is not available.
>TDD				
>>Time Slot	M		9.2.2.87	
>>TDD Channelisation Code	M		9.2.2.91	
>>Max PRACH Midamble Shifts	М		9.2.2.93	
>>PRACH Midamble	M		9.2.2.94	

9.2.2.48 TFS

This IE contains the TFS parameters used for the U-TDOA positioning method.

Table 89

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Dynamic Transport Format Information		1 <maxt F></maxt 		
>RLC Size	М		INTEGER(12950 55)	Unit is bits
>Number of TBs and TTI List		1 <maxt F></maxt 		Present for every valid number of TB's (and TTI) for this RLC Size.
>>Transmission time interval	C- dynamicTT I		ENUMERATED(1 0, 20, 40, 80, dynamic,)	In ms. The value dynamic is only used in TDD mode.
>>Number of Transport blocks Semi-static Transport Format Information	M M		INTEGER(0512) 9.2.2.61	

Range bound	Explanation				
maxTF	Maximum number of Transport Formats. The value is 32.				

Table 91

Condition	Explanation			
dynamicTTI	This IE shall be present if TTI IE in Semi-static Transport Format			
	Information IE is set to dynamic.			

9.2.2.49 CTFC

This IE identifies the TFC used for the U-TDOA positioning method.

Table 92

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE CTFC Size				
>2 bit CTFC				
>>CTFC information	M		INTEGER(03)	
>4 bit CTFC				
>>CTFC information	M		INTEGER(015)	
>6 bit CTFC				
>>CTFC information	M		INTEGER(063)	
>8 bit CTFC				
>>CTFC information	M		INTEGER(0255)	
>12 bit CTFC				
>>CTFC information	M		INTEGER(0409 5)	
>16 bit CTFC				
>>CTFC information	М		INTEGER(0655 35	
>24 bit CTFC				
>>CTFC information	М		INTEGER(0167 77215)	

9.2.2.50 Request Type

This IE contains the Request Type parameters used for SAS centric positioning method selection.

Table 93

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Event	М		ENUMERATED(S top Change of service area, Direct, Change of service area, Stop Direct,,)	Requests related to service area reporting are not supported in the current version of this specification.
Report Area	М		ENUMERATED(S ervice Area, Geographical Area,)	
Horizontal Accuracy Code	0		INTEGER(0127)	The requested accuracy "r" is derived from the "accuracy code" k by r = 10x(1.1k-1).

9.2.2.51 UE Positioning Capability

This IE contains the UE Positioning Capability information used for SAS centric positioning method selection.

Table 94

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Standalone location method(s) supported	M		BOOLEAN	Defines if a UE can measure its location by some means unrelated to UTRAN. TRUE means supported
UE based OTDOA supported	M		BOOLEAN	TRUE means supported
Network Assisted GPS support	M		ENUMERATED (Network based, UE based, Both, None,)	Defines if the UE supports network based or UE based GPS methods.
Support for GPS timing of cell frames measurement	М		BOOLEÁN	Defines if a UE has the capability to perform the UE GPS timing of cell frames measurement [4]. TRUE means capable
Support for IPDL	M		BOOLEAN	Defines if a UE has the capability to use IPDL to enhance its 'SFN-SFN observed time difference – type 2' measurement. TRUE means supported
Support for Rx-Tx time difference type2 measurement	М		BOOLEAN	TRUE means supported
Support for UE assisted GPS measurement validity in CELL_PCH and URA_PCH states	М		BOOLEAN	TRUE means supported
Support for SFN-SFN observed time difference type 2 measurement	М		BOOLEAN	TRUE means supported

9.2.2.52 Response Time

This IE contains the Response Time used for SAS centric mode.

Table 95

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Response Time			ENUMERATED(The value refers to [15].
			Low Delay, Delay	
			Tolerant,)	

9.2.2.53 Positioning Priority

This IE contains the Positioning Priority used for SAS centric mode.

Table 96

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Positioning Priority			ENUMERATED(High Priority, Normal Priority,)	The value refers to [15]

9.2.2.54 Client Type

This IE contains the Client Type used for SAS centric mode.

Table 97

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Client Type			ENUMERATED(Emergency Services, Value Added Services, PLMN Operator Services, Lawful Intercept Services, PLMN Operator - broadcast services, PLMN Operator - O&M, PLMN Operator - anonymous statistics, PLMN Operator - Target MS service support,)	Identifies the type of client.

9.2.2.55 Positioning Method

This IE contains the Positioning Method used for SAS centric positioning method selection.

Table 98

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Additional Method Type	M		9.2.2.58	
Selected Position Method	M		ENUMERATED(OTDOA, GPS, OTDOA or GPS, Cell ID, UTDOA,)	

9.2.2.56 U-TDOA Bit Count

This IE contains the recommended number of pre-coded bits to be transmitted by the UE when the U-TDOA positioning method is selected.

Table 99

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
U-TDOA Bit Count			INTEGER (05000)	Number of bits to be transmitted by the target UE

9.2.2.57 U-TDOA Time Interval

This IE contains the recommended maximum time interval for transmission of the U-TDOA Bit Count number of bits for U-TDOA positioning.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
U-TDOA Time Interval			INTEGER (03000)	Time in ms in which the U- TDOA Bit Count is to be
			(03000)	transmitted by the UE

9.2.2.58 Additional Method Type

This IE contains the selected positioning method type for SAS-centric mode.

Table 101

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Additional Method Type			ENUMERATED (UE_Assisted, UE_Based, UE_Based is preferred but UE_assisted is allowed, UE_Assisted is preferred but UE_Assisted is allowed, UE_Based is allowed,)	

9.2.2.59 UE Positioning OTDOA Assistance Data

This IE contains the UE Positioning OTDOA Assistance Data used in the SAS centric mode.

Table 102

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UE Positioning OTDOA Reference Cell Info	0			
>SFN	0		INTEGER (04095)	Time stamp (SFN of Reference Cell) of the SFN-SFN relative time differences and SFN-SFN drift rates. Included if any SFN-SFN drift value is included in IE UE positioning OTDOA neighbour cell info.
>CHOICE mode				
>>Fdd >>>Primary CPICH	M		Primary	
Information	IVI		scrambling code 9.2.2.46	
>>Tdd >Frequency Info	0		9.2.2.42	Default value is the existing value of frequency information. This IE shall always be set to default value
>CHOICE positioning mode				
>>UE Based >>> Cell position	0		Reference Cell Position 9.2.2.70	The position of the antenna that defines the cell.
>>> Round Trip Time	0		INTEGER (032766)	According to mapping in [13].
>>UE Assisted				
>UE positioning IPDL parameters	0		9.2.2.71	If this element is not included there are no idle periods present
UE Positioning OTDOA Neighbour Cell List	0			
>UE positioing OTDOA Neighbour cell info		1maxCel IMeas		
>>CHOICE mode >>>FDD				
>>>Primary CPICH Information	M		Primary scrambling code 9.2.2.46	
>>>TDD				
>>Frequency Info	0		9.2.2.42	Default value is the existing value of frequency information
>>UE positioning IPDL parameters	0		9.2.2.71	
>>SFN-SFN Relative Time difference1	M		9.2.2.73	
>>SFN Offset Validity	0		ENUMERATED (false)	Absence of this element means SFN offset is valid. False means SFN offset is not valid.
>>SFN-SFN Drift	0		ENUMERATED (0,1,2,3,4,5,8,10 ,15,25,35,50,65, 80,100,-1,-2,-3,-4,-5,-8,-10,-15,-25,-35,-50,-65,-80,-100,)	Indicates the SFN-SFN drift rate in 1/256 chip per second.
>>Search Window Size	M		ENUMERATED (c20, c40, c80, c160, c320, c640, c1280, moreThan1280,	In chips. If the value is X then the expected SFN-SFN observed time difference is in the range [RTD-X, RTD+X] where RTD is the value of the

)	field SFN-SFN relative time difference.
>>CHOICE positioning mode			
>>>UE Based			
>>>>Relative North	0	INTEGER (- 2000020000)	Seconds of angle, scale factor 0.03. Relative position compared to reference cell.
>>>Relative East	0	INTEGER (- 2000020000)	Seconds of angle, scale factor 0.03. Relative position compared to reference cell.
>>>Relative Altitude	0	INTEGER (- 40004000)	Relative altitude in meters compared to ref. cell.
>>>Fine SFN-SFN	0	INTEGER (015)	Gives finer resolution
>>>Round Trip Time	0	INTEGER (032766)	In chips. Included if cell is in active set
>>> UE assisted			

Table 103

Range bound	Explanation
maxCellMeas	Maximum number of cells to measure. The value is 32.

9.2.2.60 UL TrCH information

This IE contains the UL TrCH information used for the U-TDOA positioning method.

Table 104

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Uplink transport channel type	М		ENUMERATED (DCH,USCH,)	USCH is TDD only
TFS	M		9.2.2.48	

9.2.2.61 Semi-static Transport Format Information

This IE contains the Semi-static Transport Format information used for the U-TDOA positioning method.

Table 105

IE/Group Name	Presence	Range	IE Type and	Semantics description
			Reference	_
Transmission time interval	М		ENUMERATED(5,	In ms. The value dynamic is
			10, 20, 40, 80,	only used in TDD mode
			dynamic,)	
Type of channel coding	M		ENUMERATED(N	The option "No coding" is
			o coding,	only valid for TDD.
			Convolutional,	
			Turbo,)	
Coding Rate	C-Coding		ENUMERATED(1/	
			2, 1/3,)	
Rate matching attribute	М		INTEGER(1hiRM	
-)	
CRC size	M		ENUMERATED(0,	In bits
			8, 12, 16, 24,)	

Condition	Explanation
Coding	This IE shall be present if Type of channel coding IE is 'Convolutional'.

Table 107

Constant	Explanation	Value
HiRM	Maximum number that could be set as rate	256
	matching attribute for a transport channel	

9.2.2.62 Environment Characterisation

This IE contains the Environment Characterisation information used for the SAS centric mode.

Table 108

IE/Group Name	Presence	Range	IE Type and Reference	Semantics description
Environment Characterisation			ENUMERATED(hea vy multipath and NLOS conditions, no or light multipath and usually LOS conditions, not defined or mixed environment,)	

9.2.2.63 Chip Offset

This IE contains the Chip Offset information used for the U-TDOA positioning method.

The Chip Offset is defined as the radio timing offset inside a radio frame. The Chip offset is used as offset relative to the Primary CPICH timing for the DL DPCH or for the F-DPCH.

Table 109

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Chip Offset			INTEGER(038399)	Unit: chips

9.2.2.64 Frame Offset

This IE contains the Frame Offset information used for the U-TDOA positioning method.

The Frame Offset is the required offset between the dedicated channel downlink transmission frames (CFN, Connection Frame Number) and the broadcast channel frame offset (Cell Frame Number). The Frame Offset is used in the translation between Connection Frame Number (CFN) on Iub/Iur and the least significant 8 bits of SFN (System Frame Number) on Uu. The Frame Offset is UE and cell specific

Table 110

	IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Ī	Frame Offset			INTEGER(0255)	Unit: Frames

9.2.2.65 Position Data

This IE provides data related to the positioning methods used and reported in the SAS centric mode.

Table 111

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Position Data				
>Positioning Data Discriminator	M		BIT STRING (4)	The positioning data discriminator defines the type of data provided for each positioning method: 0000 indicates usage of each positioning method that was successfully used to obtain the location estimate; 1 octet of data is provided for each positioning method included. All other values are reserved.
>Positioning Data Set	C- ifDiscrimina tor=0			

Desident MA (I.)	4	OOTET OTDING	0 - 40
>>Positioning Method	1 <maxset></maxset>	OCTET STRING	Coding of positioning
and Usage		(1)	method (bits 8-4):
			00000 Reserved
			00001 Reserved
			00010 Reserved
			00011 Reserved
			00100 Reserved
			00101 Mobile Assisted
			GPS
			00110 Mobile Based GPS
			00111 Conventional GPS
			01000 U-TDOA
			01001 OTDOA
			01010 IPDL
			01011 RTT
			01100 Cell ID
			01101 to 01111 reserved
			for other location
			technologies
			10000 to 11111 reserved
			for network specific
			positioning methods
			Coding of usage (bits 3-1):
			000 Attempted `
			unsuccessfully due to
			failure or interruption -
			not used.
			001 Attempted
			successfully: results not
			used to generate
			location - not used.
			010 Attempted
			successfully: results
			used to verify but not
			generate location - not
			used.
			011 Attempted
			successfully: results
			used to generate
			location
			100 Attempted
			successfully: case
			where MS supports
			multiple mobile based
			positioning methods
			and the actual method
			or methods used by the
			MS cannot be
			determined.

Condition	Explanation
ifDiscriminator=0	This IE is present if the Positioning Data Discriminator IE is set to
	"0000"

Table 113

Range bound	Explanation
maxSet	Maximum size of the data set. Value is 9.

9.2.2.66 Transmission Gap Pattern Sequence Information

This IE contains the Transmission Gap Pattern Sequence information used for the U-TDOA positioning method when the UE is operating in the compressed mode.

Table 114

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transmission Gap Pattern Sequence Information		1 <maxtgps></maxtgps>		
>TGPS Identifier	М		INTEGER(1ma xTGPS)	Transmission Gap Pattern Sequence Identifier: Establish a reference to the compressed mode pattern sequence. Up to <maxtgps> simultaneous compressed mode pattern sequences can be used.</maxtgps>
>TGSN	M		INTEGER(014)	Transmission Gap Starting Slot Number: The slot number of the first transmission gap slot within the TGCFN.
>TGL1	M		INTEGER(114)	The length of the first Transmission Gap within the transmission gap pattern expressed in number of slots.
>TGL2	0		INTEGER(114)	The length of the second Transmission Gap within the transmission gap pattern. If omitted, then TGL2=TGL1.
>TGD	M		INTEGER(0,15 269)	Transmission Gap Distance: indicates the number of slots between the starting slots of two consecutive transmission gaps within a transmission gap pattern. If there is only one transmission gap in the transmission gap pattern, this parameter shall be set to "0" ("0" =undefined).
>TGPL1	М		INTEGER(114 4,)	The duration of transmission gap pattern 1 in frames.
>Uplink Compressed Mode Method	M		ENUMERATED(SF/2, Higher Layer Scheduling,)	Method for generating uplink compressed mode gap.

Table 115

Range bound	Explanation
maxTGPS	Maximum number of transmission gap pattern sequences. The
	value is 6.

9.2.2.67 Active Pattern Sequence Information

This IE contains the Active Pattern Sequence information used for the U-TDOA positioning method when the UE is operating in the compressed mode.

Table 116

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CM Configuration Change CFN	M		CFN 9.2.2.68	
Transmission Gap Pattern Sequence Status		0 <maxtgps></maxtgps>		
>TGPS Identifier	M		INTEGER(1ma xTGPS)	If the group is not present, none of the pattern sequences are activated. References an already defined sequence.
>TGPRC	М		INTEGER(051 1)	The number of transmission gap patterns within the Transmission Gap Pattern Sequence. "0"=Infinity
>TGCFN	М		CFN 9.2.2.68	Connection Frame Number of the first frame of the first pattern 1 within the Transmission Gap Pattern Sequence.

Range bound	Explanation	
maxTGPS	Maximum number of transmission gap pattern sequences.	The
	value is 6.	

9.2.2.68 CFN

This IE contains the CFN used for the U-TDOA positioning method when the UE is operating in the compressed mode.

Table 118

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CFN			INTEGER(0255)	

9.2.2.69 Positioning Response Time

This IE contains the Positioning Response Time information used for SAS centric mode.

Table 119

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Positioning Response Time			ENUMERATED(250, 500, 1000, 2000, 3000, 4000, 6000, 8000, 12000, 16000, 20000, 24000, 28000, 32000, 64000,)	Unit: millisecond

9.2.2.70 Reference Cell Position

Reference Cell Position IE is used to identify the position of the reference cell using geographical coordinates. The reference system is the same as the one used in [11].

Table 120

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Geographical Area				
>Point				Ellipsoid point
>>Geographical Coordinates	М		9.2.2.7	
>Ellipsoid point with altitude				
>>Geographical Coordinates	М		9.2.2.7	
>>Altitude and direction	M	•	9.2.2.2	

9.2.2.71 UE Positioning IPDL Parameters

The UE Positioning IPDL Parameters IE is used for OTDOA in the SAS centric mode.

Table 121

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
CHOICE mode				
>FDD				
>>IP Spacing	M			
>>IP Length	M			
>>IP Offset	M		INTEGER(09)	
>>Seed	M		INTEGER(063)	
>TDD				
Burst Mode Parameters	0		9.2.2.72	

9.2.2.72 Burst Mode Parameters

Burst Mode Parameters IE is used for OTDOA in the SAS centric mode.

Table 122

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Burst Start	M		INTEGER(015)	
Burst Length	M		INTEGER(102 5)	
Burst Frequency	M		INTEGER(116)	

9.2.2.73 SFN-SFN Relative Time Difference1

SFN-SFN Relative Time Difference IE is used for OTDOA in the SAS centric mode

Table 123

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SFN Offset	M		INTEGER	
			(04095)	
SFN-SFN-Relative Time	M		INTEGER	
Difference			(038399)	

9.2.2.74 UTDOA Group

This IE contains information used for the U-TDOA positioning method.

Table 124

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UTRAN Cell Identifier	M		9.2.2.37	
Frequency Information	M		9.2.2.42	
Choice RRC State	M			
>CELL_DCH				
>>Uplink DPCH Information	М		9.2.2.41	
>>Compressed Mode Assistance Data	0		9.2.2.44	FDD only
>>DCH Information	01			
>>>TFCS	1 <maxtf C></maxtf 			
>>>CTFC	M		9.2.2.49	
>>>TrCH Information List	1 <maxtr CH></maxtr 			
>>>UL TrCH Information	М		9.2.2.60	
>>E-DPCH Information	01			FDD only
>>>Maximum Set of E- DPDCHs	M		9.2.2.75	
>>>Puncture Limit	M		9.2.2.76	
>>>E-TFCS Information	M		9.2.2.77	
>>>E-TTI	M		9.2.2.79	
>>>E-DPCCH Power Offset	0		9.2.2.80	
>CELL_FACH				
>>PRACH Parameters	M		9.2.2.43	
>>C-RNTI	M		9.2.2.45	
>>USCH parameters	0		9.2.2.95	TDD only

Table 125

Range bound	Explanation		
maxTFC	Maximum number of TFC. The value is 1024.		
maxTrCH	Maximum number of Transport Channels. The value is 32.		

9.2.2.75 Maximum Set of E-DPDCHs

The Maximum Set of E-DPDCHs parameter, as defined in [16], is used in UTDOA positioning method.

Table 126

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Maximum Set of E-DPDCHs			ENUMERATED (vN64, vN32, vN16, vN8, vN4, v2xN4, v2xN2, v2xN2plus2xN4,)	

9.2.1.76 Puncture Limit

The Puncture Limit parameter is used in UTDOA positioning method indicating the limit in the amount of puncturing that can be applied in order to minimise the number of dedicated physical channels.

Table 127

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Puncture Limit			INTEGER (015)	Unit: % Range: 40100 % Step: 4 % 100% means no puncturing

9.2.2.77 E-DCH Transport Format Combination Set Information (E-TFCS Information)

This IE is used in UTDOA positioning method. Whereas the related Transport Block sizes are standardised in [ref is FFS] this IE gives details on the referenced Transport Block Size Table and the Reference E-TFCIs.

Table 128

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
E-DCH Transport Format Combination Set Index	M		INTEGER (14,)	Indicates which standardised E-TFCS Transport Block Size Table shall be used. The related tables are specified in [ref FFS].
Reference E-TFCI Information		0 <maxnoofrefetf Cls></maxnoofrefetf 		
>Reference E-TFCI	М		INTEGER (0127)	
>Reference E-TFCI Power Offset	M		9.2.2.78	

Table 129

Range Bound	Explanation
maxnoofRefETFCIs	Maximum number of signalled reference E-TFCIs

9.2.2.78 Reference E-TFCI Power Offset

The Reference E-TFCI Power Offset is used in UTDOA positioning method indicating how to calculate the reference E-TFC gain factor.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Reference E-TFCI Power Offset			INTEGER (08)	According to mapping in ref. [17] subclause 4.2.1.3

9.2.2.79 E-TTI

The E-TTI parameter is used in UTDOA positioning method indicating the Transmission Time Interval for E-DPCH operation.

Table 131

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
E-TTI			ENUMERATED (2ms, 10ms,)	

9.2.2.80 E-DPCCH Power Offset

The E-DPCCH Power Offset is used in UTDOA positioning method indicating how to calculate the E-DPCCH gain factor.

Table 132

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
E-DPCCH Power Offset			INTEGER (08)	According to mapping in ref. [17] subclause 4.2.1.3.

9.2.2.81 Cell Parameter ID

The Cell Parameter ID identifies unambiguously the Code Groups, Scrambling Codes, Midambles and Toffset (see ref. [18]).

Table 133

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell Parameter ID			INTEGER (0127,)	

9.2.2.82 TFCI Coding

The TFCI Coding describes the way how the TFCI bits are coded. By default 1 TFCI bit is coded with 4 bits, 2 TFCI bits are coded with 8 bits, 3-5 TFCI bits are coded with 16 bits and 6-10 TFCI bits are coded with 32 bits.

Table 134

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TFCI Coding			ENUMERATED	
			(4 8 16 32)	

9.2.2.83 Repetition Length

The Repetition Length represents the number of consecutive Radio Frames inside a Repetition Period in which the same Time Slot is assigned to the same Physical Channel see ref. [4].

Table 135

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Repetition Length			INTEGER (163)	

9.2.2.84 Repetition Period

The Repetition Period represents the number of consecutive Radio Frames after which the same assignment scheme of Time Slots to a Physical Channel is repeated. This means that if the Time Slot K is assigned to a physical channel in the Radio Frame J, it is assigned to the same physical channel also in all the Radio Frames J+n*Repetition Period (where n is an integer) see ref. [4].

Table 136

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Repetition Period			ENUMERATED	
			(1, 2, 4, 8, 16, 32,	
			64,)	

9.2.2.85 TDD DPCH Offset

The Offset represents the phase information for the allocation of a group of dedicated physical channels. The first range is used when a starting offset is not required and the TDD Physical channel offset for each DPCH in the CCTrCH shall be directly determined from the TDD DPCH Offset. The second range is used when a starting offset is required. The TDD DPCH Offset shall map to the CFN and the TDD Physical Channel Offet for each DPCH in this CCTrCH shall calculated by TDD DPCH Offset *mod* Repetition period, see ref. [4].

Table 137

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Offset Type				
>Initial Offset				
>>TDD DPCH Offset Value	M		INTEGER (0255)	
>No Initial Offset				
>>TDD DPCH Offset Value	M		INTEGER (063)	

9.2.2.86 UL Timeslot Information

The UL Timeslot Information IE provides information on the time slot allocation for an UL DPCH.

Table 138

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL Timeslot Information		1 <maxno ofULts></maxno 		
>Time Slot	M		9.2.2.87	
>Midamble Shift And Burst Type	М		9.2.2.88	
>TFCI Presence	M		9.2.2.89	
>UL Code Information	M		9.2.2.90	

9.2.2.87 Time Slot

The Time Slot represents the minimum time interval inside a Radio Frame that can be assigned to a Physical Channel.

Table 139

	IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
•	Time Slot			INTEGER (014)	

9.2.2.88 Midamble Shift And Burst Type

This information element indicates burst type and midamble allocation.

The 256 chip midamble supports 3 different time shifts, the 512 chips midamble may support 8 or even 16 time shifts.

Three different midamble allocation schemes exist:

Default midamble: the midamble shift is selected by layer 1 depending on the associated channelisation code (DL and UL)

Common midamble: the midamble shift is chosen by layer 1 depending on the number of channelisation codes (possible in DL only)

UE specific midamble: a UE specific midamble is explicitly assigned (DL and UL)

Table 140

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Burst Type				
>Type1				
>>Midamble Configuration Burst Type 1 And 3	М		INTEGER (4, 8, 16)	As defined in [19]
>>CHOICE Midamble Allocation Mode	М			
>>>Default Midamble			NULL	
>>>Common Midamble			NULL	
>>>UE Specific Midamble				
>>Midamble Shift Long	М		INTEGER (015)	
>Type2				
>>Midamble Configuration Burst Type 2	М		INTEGER (3,6)	As defined in [19]
>>CHOICE Midamble Allocation Mode	М			
>>>Default Midamble			NULL	
>>>Common Midamble			NULL	
>>>UE Specific Midamble				
>>Midamble Shift Short	M		INTEGER (05)	
>Type3				UL only
>>Midamble Configuration Burst Type 1 And 3	М		INTEGER (4, 8, 16)	As defined in [19]
>>CHOICE Midamble Allocation Mode	М			
>>>Default Midamble			NULL	
>>>UE Specific Midamble				
>>Midamble Shift Long	M		INTEGER (015)	

9.2.2.89 TFCI Presence

The TFCI Presence parameter indicates whether the TFCI shall be included. [TDD - If it is present in the timeslot, it will be mapped to the channelisation code defined by [19].]

Table 141

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TFCI presence			ENUMERATED (
			Present,	
			Not Present)	

9.2.2.90 TDD UL Code Information

The TDD UL Code Information IE provides information for UL Codes that have been established.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD UL Code Information		1 <maxno ofDPCHs></maxno 		
>TDD Channelisation Code	М		9.2.2.91	

Table 143

Range Bound	Explanation		
maxnoofDPCHs	Maximum number of DPCHs in one CCTrCH		

9.2.2.91 TDD Channelisation Code

The Channelisation Code Number indicates which Channelisation Code is used for a given Physical Channel. In TDD the Channelisation Code is an Orthogonal Variable Spreading Factor code, that can have a spreading factor of 1, 2, 4, 8 or 16.

Table 144

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TDD Channelisation Code			ENUMERATED ((1/1), (2/1), (2/2), (4/1), (4/4), (8/1), (8/8), (16/1), (16/16),)	

9.2.2.92 Special Burst Scheduling

This information element expresses the number of frames between special burst transmissions during DTX.

Table 145

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Special Burst Scheduling			INTEGER (1256)	Number of frames between special burst transmission during DTX

9.2.2.93 Max PRACH Midamble Shift

Indicates the maximum number of Midamble shifts to be used in a cell.

Table 146

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Max PRACH Midamble Shift			ENUMERATED	
			(4, 8,)	

9.2.2.94 PRACH Midamble

The PRACH Midamble indicates if only the Basic Midamble Sequence or also the time-inverted Midamble Sequence is used.

Table 147

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PRACH Midamble			ENUMERATED (Inverted, Direct,)	

9.2.2.95 USCH Parameters

In Cell-FACH state, when the UE supports the USCH, and the CRNC is equal to the SRNC, the UE may be given periodic allocations on the uplink shared channel. Furthermore, the UE may also be configured to generate special bursts instead of uplink shared channel transmissions. This information element defines the uplink shared channel transmissions.

Table 148

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell Parameter ID	M		9.2.2.81	
TFCI Coding	M		9.2.2.82	
Puncture Limit	М		9.2.2.76	
Repetition Period	М		9.2.2.84	This is the scheduling interval on the USCH.
USCH Scheduling Offset	M		9.2.2.96	
UL Timeslot Information	M		9.2.2.86	
TFCS	1 <maxtf C></maxtf 			
>CTFC	M		9.2.2.49	
TrCH Information List	1 <maxtr CH></maxtr 			
>UL TrCH Information	M		9.2.2.60	

Table 149

Range bound	Explanation
maxTFC	Maximum number of TFC. The value is 1024.
maxTrCH	Maximum number of Transport Channels. The value is 32.

9.2.2.96 USCH Scheduling Offset

This information element indicates the offset relative to CFN=0 that the transmission on the uplink shared channel shall take place.

Table 150

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
USCH scheduling offset			INTEGER(0255)	

9.2.2.97 Include Velocity

This element indicates that the UE"s velocity is requested.

Table 151

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Include Velocity	M		ENUMERATED (requested)	

9.2.2.98 Velocity Estimate

The Velocity Estimate IE is used to describe the UE"s velocity. The reference system is the same as used in [11].

Table 152

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Choice Velocity Estimate				
>Horizontal Velocity				Horizontal speed and bearing (the direction of travel).
>>Horizontal Speed and Bearing	M		9.2.2.99	
>Horizontal with Vertical Velocity				Horizontal speed and bearing (the direction of travel) as well as vertical speed and the direction (upward or downward)
>>Horizontal Speed and Bearing	M		9.2.2.99	
>>Vertical Velocity	M		9.2.2.100	
>Horizontal Velocity with Uncertainty				Horizontal speed, bearing (the direction of travel), and the uncertainty of the reported speed.
>>Horizontal Speed and Bearing	M		9.2.2.99	
>>Uncertainty Speed	М		INTEGER (0255)	Uncertainty speed is encoded in increments of 1 kilometer per hour using an 8 bit binary coded number (N). The value of N gives the uncertainty speed except for N=255 which indicates that the uncertainty is not specified
>Horizontal with Vertical Velocity and Uncertainty				Horizontal speed and bearing (the direction of travel) as well as vertical speed and the direction (upward or downward) and the uncertainty of the reported speed.
>>Horizontal Speed and Bearing	М		9.2.2.99	
>>Vertical Velocity	М		9.2.2.100	
>>Horizontal Uncertainty Speed	М		INTEGER (0255)	Horizontal Uncertainty Speed is encoded in increments of 1 kilometer per hour using an 8 bit binary coded number (N). The value of N gives the uncertainty speed except for N=255 which indicates that the uncertainty is not specified
>>Vertical Uncertainty Speed	M		INTEGER (0255)	Vertical Uncertainty Speed is encoded in increments of 1 kilometer per hour using an 8 bit binary coded number (N). The value of N gives the uncertainty speed except for N=255 which indicates that the uncertainty is not specified

9.2.2.99 Horizontal Speed and Bearing

This IE contains the two components of horizontal velocity: speed and bearing

Table 153

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bearing	M		INTEGER (0359)	The direction of movement is given in degrees where "0" represents North, "90" represents East, etc.
Horizontal Speed	М		INTEGER (0< 2 ¹¹ -1)	The relationship between (N) and the horizontal speed (h) in kilometers per hour it describes is: $N \le h < N + 0.5$ (N=0) $N - 0.5 \le h < N + 0.5$
				$ \begin{array}{c} N - 0.5 \le N < N + 0.5 \\ (0 < N < 2^{11} - 1) \\ N - 0.5 \le h \end{array} $ $ (N = 2^{11} - 1) $

9.2.2.100 Vertical Velocity

This IE contains the two components of vertical velocity: speed and direction

Table 154

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Vertical Speed	M		INTEGER (02 ⁸ -1)	The relationship between (N) and the vertical speed (v) in kilometers per hour it describes is: $N \le v < N + 0.5 \qquad (N = 0)$ $N - 0.5 \le v < N + 0.5 \qquad (0 < N < 2^8 - 1)$ $N - 0.5 \le v (N = 2^8 - 1)$
Vertical Speed Direction			ENUMERATED (upward, downward)	

9.2.2.101 GPS Positioning Instructions

This information element contains positioning instructions for GPS positioning method in SAS-centric mode.

Table 155

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Horizontal Accuracy Code	0		9.2.2.38	
Vertical Accuracy Code	0		9.2.2.39	
GPS Timing of Cell Wanted	М		BOOLEAN	This IE is set to TRUE if the UE is requested to report SFN-GPS timing of the reference cell.
Additional Assistance Data Request	М		BOOLEAN	TRUE indicates that the UE is requested to send an additional assistance data request if the provided assistance data are not sufficient.

9.2.2.102 UE Position Estimate Info

The UE Position Estimate Info is used in UE-based positioning methods providing the UE position estimate from the RNC to the SAS in SAS-centric mode.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Reference Time	M			
>UTRAN GPS reference time Result			9.2.2.104	
>GPS reference time only				
>>GPS TOW msec	M		INTEGER (06.048*10 ⁸ -1,)	GPS Time of Week in milliseconds.
>Cell timing				
>>SFN	M		INTEGER (04095)	SFN during which the position was calculated.
>>UC-ID	M		UTRAN Cell Identifier 9.2.2.37	Identifies the reference cell for SFN.
UE Position Estimate	M		Geographical Area 9.2.2.6	

9.2.2.103 UTRAN-GPS Reference Time

Table 157

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UTRAN GPS timing of cell frames	М		INTEGER (0 2322431999999,)	GPS timing of cell frames in steps of 1 chip.
UC-ID	0		UTRAN Cell Identifier 9.2.2.37	Identifies the reference cell for the GPS TOW-SFN relationship.
SFN	М		INTEGER (04095)	The SFN which the UTRAN GPS timing of cell frames time stamps.

9.2.2.104 UTRAN-GPS Reference Time Result

Table 158

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UE GPS timing of cell frames	M		INTEGER(0 37158911999999,)	GPS Time of Week in units of 1/16 th UMTS chips according to [13].
UC-ID	М		UTRAN Cell Identifier 9.2.2.37	Identifies the reference cell for the GPS TOW-SFN relationship
SFN	М		INTEGER(04095)	This IE indicates the SFN at which the UE timing of cell frame is captured.

$9.2.2.105 \qquad T_{UTRAN\text{-}GPS} \ Drift \ Rate$

Table 159

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Tutran-gps Drift Rate	0		ENUMERATED (0, 1, 2, 5, 10, 15, 25, 50, -1, -2, -5, -10, -15, -25, -50,)	In 1/256 chips per sec.

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.0 General

PCAP ASN.1 definition conforms with [7], [8], and [9].

The ASN.1 definition specifies the structure and content of PCAP messages. PCAP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct a PCAP message according to the PDU definitions module and with the following additional rules (Note that in the following IE means an IE in the object set with an explicit id. If one IE needed to appear more than once in one object set, then the different occurrences have different IE ids):

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list where the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

If a PCAP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.3.6.

Clause 9.3 presents the Abstract Syntax of PCAP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this clause and the tabular format in clauses 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, where the tabular format shall take precedence.

9.3.1 Usage of private message mechanism for non-standard use

The private message mechanism for non-standard use may be used:

- for special operator- (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor interoperability;
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.2 Elementary Procedure Definitions

```
IMPORTS
   Criticality,
    ProcedureCode,
   TransactionID
FROM PCAP-CommonDataTypes
    PositionCalculationRequest,
    PositionCalculationResponse,
    PositionCalculationFailure,
    InformationExchangeInitiationRequest,
    InformationExchangeInitiationResponse,
    InformationExchangeInitiationFailure,
    InformationReport,
    InformationExchangeTerminationRequest,
    InformationExchangeFailureIndication,
    ErrorIndication,
    PrivateMessage,
    PositionInitiationRequest,
    PositionInitiationResponse,
    PositionInitiationFailure,
    PositionActivationRequest,
    PositionActivationResponse,
    PositionActivationFailure.
    PositionParameterModification,
    Abort
FROM PCAP-PDU-Contents
    id-PositionCalculation,
    id-InformationExchangeInitiation,
    id-InformationReporting,
    id-InformationExchangeTermination,
    id-InformationExchangeFailure,
    id-ErrorIndication,
    id-privateMessage,
    id-PositionInitiation,
    id-PositionActivation,
    id-PositionParameterModification,
    id-Abort
FROM PCAP-Constants;
__ *******************
-- Interface Elementary Procedure Class
PCAP-ELEMENTARY-PROCEDURE ::= CLASS {
                            Criticality DEFAULT ignore
WITH SYNTAX {
   H SYNTAX {
INITIATING MESSAGE
[SUCCESSFUL OUTCOME &SuccessfulOutcome]
[UNSUCCESSFUL OUTCOME &UnsuccessfulOutcome]
[OUTCOME &OUTCOME &OUTCOME]

PROCEDURE CODE &procedureCode
    PROCEDURE CODE
                             &procedureCode
    [CRITICALITY
                             &criticality]
}
__ ********************************
-- Interface PDU definitions
__ **********************************
UnsuccessfulOutcome,
    outcome
                         Outcome,
```

__ *********************

```
}
InitiatingMessage ::= SEQUENCE {
   procedureCode PCAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                   ({PCAP-ELEMENTARY-PROCEDURES}),
    criticality PCAP-ELEMENTARY-PROCEDURE.&criticality
                                                                   ({PCAP-ELEMENTARY-
PROCEDURES \ {@procedureCode \} ) ,
    transactionID TransactionID,
                   PCAP-ELEMENTARY-PROCEDURE.&InitiatingMessage
                                                                   ({PCAP-ELEMENTARY-
PROCEDURES \ { @procedureCode \} )
SuccessfulOutcome ::= SEQUENCE {
   procedureCode pCAP-ELEMENTARY-PROCEDURE.&procedureCode criticality PCAP-ELEMENTARY-PROCEDURE.&criticality
                                                                    ({PCAP-ELEMENTARY-PROCEDURES}),
                                                                    ({PCAP-ELEMENTARY-
{\tt PROCEDURES} \\ \{ @ procedureCode \} \; ) \; ,
    transactionID TransactionID,
                   PCAP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome
                                                                   ({PCAP-ELEMENTARY-
    value
PROCEDURES \ { @procedureCode \} )
UnsuccessfulOutcome ::= SEQUENCE {
   procedureCode PCAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                   ({PCAP-ELEMENTARY-PROCEDURES}),
    criticality
                   PCAP-ELEMENTARY-PROCEDURE.&criticality
                                                                   ({PCAP-ELEMENTARY-
PROCEDURES \ {@procedureCode \} ) ,
   transactionID TransactionID,
                   PCAP-ELEMENTARY-PROCEDURE. & Unsuccessful Outcome ({PCAP-ELEMENTARY-
PROCEDURES \ { @procedureCode \} )
Outcome ::= SEQUENCE {
   procedureCode PCAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                   ({PCAP-ELEMENTARY-PROCEDURES}),
                   PCAP-ELEMENTARY-PROCEDURE.&criticality
                                                                   ({PCAP-ELEMENTARY-
    criticality
PROCEDURES \ {@procedureCode \} ) ,
   transactionID TransactionID,
                   PCAP-ELEMENTARY-PROCEDURE.&Outcome
                                                                   ({PCAP-ELEMENTARY-
    value
PROCEDURES \ {@procedureCode \} )
}
__ **********************************
-- Interface Elementary Procedure List
__ *********************
PCAP-ELEMENTARY-PROCEDURES PCAP-ELEMENTARY-PROCEDURE ::= {
    PCAP-ELEMENTARY-PROCEDURES-CLASS-1
    PCAP-ELEMENTARY-PROCEDURES-CLASS-2
}
PCAP-ELEMENTARY-PROCEDURES-CLASS-1 PCAP-ELEMENTARY-PROCEDURE ::= {
   positionCalculation
   informationExchangeInitiation,
    positionInitiation |
   positionActivation
}
PCAP-ELEMENTARY-PROCEDURES-CLASS-2 PCAP-ELEMENTARY-PROCEDURE ::= {
    informationReporting
    information {\tt ExchangeTermination}
    informationExchangeFailure
    errorIndication
   privateMessage,
   positionParameterModification |
}
__ **********************
-- Interface Elementary Procedures
```

```
__ **********************
positionCalculation PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE PositionCalculationRequest SUCCESSFUL OUTCOME PositionCalculationResponse
                                    PositionCalculationResponse
     UNSUCCESSFUL OUTCOME PositionCalculationFailure
PROCEDURE CODE id-PositionCalculation
CRITICALITY reject
}
informationExchangeInitiation PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE InformationExchangeInitiationRequest SUCCESSFUL OUTCOME InformationExchangeInitiationResponse
     UNSUCCESSFUL OUTCOME INFORMATIONEXCHANGEINITIATION.COSPONICS
UNSUCCESSFUL OUTCOME InformationExchangeInitiationFailure
PROCEDURE CODE id-InformationExchangeInitiation
CRITICALITY reject
}
positionInitiation PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE PositionInitiationRequest
SUCCESSFUL OUTCOME POsitionInitiationResponse
UNSUCCESSFUL OUTCOME PositionInitiationFailure
PROCEDURE CODE id-PositionInitiation
CRITICALITY reject.
     CRITICALITY
                                    reject
}
positionActivation PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE PositionActivationRequest
SUCCESSFUL OUTCOME PositionActivationResponse
UNSUCCESSFUL OUTCOME PositionActivationFailure
PROCEDURE CODE id-PositionActivation
CRITICALITY reject
}
informationReporting PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE InformationReport
     PROCEDURE CODE
                                    id-InformationReporting
     CRITICALITY
                                    ignore
}
INITIATING MESSAGE InformationExchangeTerminationRequest
PROCEDURE CODE id-InformationExchangeTermination
     CRITICALITY
                                    ignore
}
informationExchangeFailure PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE InformationExchangeFailureIndication PROCEDURE CODE id-InformationExchangeFailure
     PROCEDURE CODE 10-111.
\verb|errorIndication|| \verb|PCAP-ELEMENTARY-PROCEDURE|| ::= \{ |
     INITIATING MESSAGE ErrorIndication
     PROCEDURE CODE
                                     id-ErrorIndication
     CRITTCALITY
                                   ignore
}
privateMessage PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE PrivateMessage
     PROCEDURE CODE
                                     id-privateMessage
     CRITICALITY
                                   ignore
positionParameterModification PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE PositionParameterModification PROCEDURE CODE id-PositionParameterModificat:
                                    id-PositionParameterModification
     CRITICALITY
                                    ignore
}
abort PCAP-ELEMENTARY-PROCEDURE ::= {
     INITIATING MESSAGE Abort
     PROCEDURE CODE
                                     id-Abort
```

```
CRITICALITY ignore }

END
```

9.3.3 PDU Definitions

```
***********
-- PDU definitions for PCAP.
PCAP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-PDU-Contents (1) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ *********************
-- IE parameter types from other modules.
__ **********************************
IMPORTS
   Cause,
   CriticalityDiagnostics,
   GPS-UTRAN-TRU,
   InformationExchangeID,
   InformationReportCharacteristics,
   InformationType,
   MeasuredResultsList,
   RequestedDataValue,
   RequestedDataValueInformation,
   UE-PositionEstimate,
   CellId-MeasuredResultsSets,
   OTDOA-MeasurementGroup,
   AccuracyFulfilmentIndicator,
   HorizontalAccuracyCode,
   VerticalAccuracyCode,
   RequestType,
   UE-PositioningCapability,
   UC-ID,
   ResponseTime,
   PositioningPriority,
   ClientType,
   PositioningMethod,
   UTDOAPositioning,
   GPSPositioning,
   OTDOAAssistanceData,
   UTDOA-Group,
   Positioning-ResponseTime,
   EnvironmentCharacterisation,
   PositionData,
   IncludeVelocity
   VelocityEstimate,
   UE-PositionEstimateInfo,
   OTDOA-MeasuredResultsSets
FROM PCAP-IEs
   TransactionID
FROM PCAP-CommonDataTypes
   ProtocolExtensionContainer{},
   ProtocolIE-ContainerList(),
   ProtocolIE-Container{},
   ProtocolIE-Single-Container{},
   PrivateIE-Container{},
   PCAP-PRIVATE-IES,
   PCAP-PROTOCOL-EXTENSION,
   PCAP-PROTOCOL-IES
FROM PCAP-Containers
```

id-Cause,

```
id-CriticalityDiagnostics,
   id-GPS-UTRAN-TRU.
   id-InformationExchangeID,
   id-InformationExchangeObjectType-InfEx-Rprt,
   id-InformationExchangeObjectType-InfEx-Rqst,
   id-InformationExchangeObjectType-InfEx-Rsp,
   id-InformationReportCharacteristics,
   id-InformationType,
   id-GPS-MeasuredResultsList,
   id-RequestedDataValue,
   id-RequestedDataValueInformation,
   id-TransactionID,
   id-UE-PositionEstimate,
   id-CellId-MeasuredResultsSets,
   id-OTDOA-MeasurementGroup,
   id-AccuracyFulfilmentIndicator,
   id-HorizontalAccuracyCode,
   id-VerticalAccuracyCode,
   id-RequestType,
   id-UE-PositioningCapability,
   id-UC-id,
   id-ResponseTime,
   id-PositioningPriority,
   id-ClientType,
   id-PositioningMethod,
   id-UTDOAPositioning,
   id-GPSPositioning,
   id-OTDOAAssistanceData,
   id-UTDOA-Group,
   id-Positioning-ResponseTime,
   id-EnvironmentCharacterisation,
   id-PositionData,
   id-IncludeVelocity,
   id-VelocityEstimate,
   id-UE-PositionEstimateInfo,
   id-UC-ID-InfEx-Rqst,
   id-OTDOA-MeasuredResultsSets
FROM PCAP-Constants;
__ *******************
-- POSITION CALCULATION REQUEST
__ *******************
PositionCalculationRequest ::= SEQUENCE {
  protocolIEs     ProtocolIE-Container { {PositionCalculationRequestIEs} },
   protocolExtensions ProtocolExtensionContainer { {PositionCalculationRequestExtensions} }
   OPTIONAL,
PositionCalculationRequestIEs PCAP-PROTOCOL-IES ::= {
   PRESENCE optional } |
   { ID id-GPS-MeasuredResultsList
                                        CRITICALITY reject TYPE MeasuredResultsList
         PRESENCE optional },
PositionCalculationRequestExtensions PCAP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional } |
                                   CRITICALITY reject EXTENSION OTDOA-MeasurementGroup
   { ID id-OTDOA-MeasurementGroup
      PRESENCE optional } |
   { ID id-HorizontalAccuracyCode
                                   CRITICALITY ignore EXTENSION HorizontalAccuracyCode
      PRESENCE optional }
   { ID id-VerticalAccuracyCode
                                   CRITICALITY ignore EXTENSION VerticalAccuracyCode
      PRESENCE optional } |
                                   CRITICALITY reject EXTENSION UTDOA-Group
   { ID id-UTDOA-Group
      PRESENCE optional } |
   PRESENCE optional } |
   { ID id-IncludeVelocity
                                   CRITICALITY ignore EXTENSION IncludeVelocity
      PRESENCE optional },
```

```
}
__ *******************
-- POSITION CALCULATION RESPONSE
__ *********************
PositionCalculationResponse ::= SEQUENCE {
 protocolIEs ProtocolIE-Container { {PositionCalculationResponseIEs} },
  protocolExtensions ProtocolExtensionContainer { {PositionCalculationResponseExtensions} }
  OPTIONAL.
PositionCalculationResponseIEs PCAP-PROTOCOL-IES ::= {
  PRESENCE
mandatory } |
  PRESENCE
optional },
PositionCalculationResponseExtensions PCAP-PROTOCOL-EXTENSION ::= {
  { ID id-AccuracyFulfilmentIndicator CRITICALITY ignore EXTENSION AccuracyFulfilmentIndicator
  PRESENCE optional },
}
__ **********************
-- POSITION CALCULATION FAILURE
__ ********************************
PositionCalculationFailure ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {PositionCalculationFailureIEs} },
  protocolExtensions ProtocolExtensionContainer { {PositionCalculationFailureExtensions} }
  OPTIONAL.
PositionCalculationFailureIEs PCAP-PROTOCOL-IES ::= {
                        CRITICALITY ignore TYPE Cause
  { ID id-Cause
                                                           PRESENCE
mandatory} |
  optional },
PositionCalculationFailureExtensions PCAP-PROTOCOL-EXTENSION ::= {
}
__ *******************
-- INFORMATION EXCHANGE INITIATION REQUEST
__ **********************************
\verb|Extensions|| \} \qquad \qquad \verb|OPTIONAL|,
}
InformationExchangeInitiationRequest-IES PCAP-PROTOCOL-IES ::= {
                       CRITICALITY reject TYPE
  { ID id-InformationExchangeID
InformationExchangeID
                                PRESENCE mandatory } |
  -- This IE represents both the Information Exchange Object Type IE and the choice based on the
Information Exchange Object Type
```

```
-- as described in the tabular message format in clause 9.1.
   { ID id-InformationType
                                                 CRITICALITY reject TYPE InformationType
                               PRESENCE
                                          mandatory } |
   { ID id-InformationReportCharacteristics
                                                CRITICALITY reject TYPE
                                          PRESENCE mandatory } |
InformationReportCharacteristics
                                                CRITICALITY reject TYPE GPS-UTRAN-TRU
  { ID id-GPS-UTRAN-TRU
                               PRESENCE conditional },
   -- This IE shall be present if the information requested in the Information Type IE contains
GPS-related data
}
InformationExchangeInitiationRequest-Extensions PCAP-PROTOCOL-EXTENSION ::= {
}
InformationExchangeObjectType-InfEx-Rqst ::= CHOICE {
   referencePosition
                                                    RefPosition-InfEx-Rqst,
   extension-InformationExchangeObjectType-InfEx-Rqst
                                                    Extension-InformationExchangeObjectType-
InfEx-Rast
RefPosition-InfEx-Rqst ::= SEQUENCE {
   referencePositionEstimate UE-PositionEstimate,
                               ProtocolExtensionContainer { { RefPositionItem-InfEx-Rqst-
   iE-Extensions
ExtIEs } OPTIONAL,
   . . .
}
RefPositionItem-InfEx-Rqst-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
Extension-InformationExchangeObjectType-InfEx-Rqst ::= ProtocolIE-Single-Container {{ Extension-
InformationExchangeObjectType-InfEx-RqstIE }}
UC-ID-InfEx-Rqst ::= SEQUENCE {
   referenceUC-ID
                               UC-ID.
                               ProtocolExtensionContainer { { UCIDItem-InfEx-Rqst-ExtIEs} }
   iE-Extensions
   OPTIONAL,
}
UCIDItem-InfEx-Rqst-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ **********************
-- INFORMATION EXCHANGE INITIATION RESPONSE
__ *********************
InformationExchangeInitiationResponse ::= SEQUENCE {
   protocolIEs ProtocolIE-Container protocolExtensions ProtocolExtensionContain
                                             `{{InformationExchangeInitiationResponse-IEs}},
                       ProtocolExtensionContainer {{InformationExchangeInitiationResponse-
Extensions}}
OPTIONAL,
}
InformationExchangeInitiationResponse-IEs PCAP-PROTOCOL-IES ::= {
                                                CRITICALITY ignore TYPE
   { ID id-InformationExchangeID
                                             PRESENCE
InformationExchangeID
                                                       mandatory }
   { ID id-InformationExchangeObjectType-InfEx-Rsp CRITICALITY ignore TYPE
InformationExchangeObjectType-InfEx-Rsp PRESENCE optional } |
   { ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore TYPE
CriticalityDiagnostics
                                             PRESENCE optional
                                                                   },
}
InformationExchangeInitiationResponse-Extensions PCAP-PROTOCOL-EXTENSION ::= {
```

```
}
InformationExchangeObjectType-InfEx-Rsp ::= CHOICE {
   referencePosition
                             RefPosition-InfEx-Rsp,
}
RefPosition-InfEx-Rsp ::= SEQUENCE {
   requestedDataValue
                              RequestedDataValue,
   iE-Extensions
                              ProtocolExtensionContainer { { RefPositionItem-InfEx-Rsp-
ExtIEs} } OPTIONAL,
}
RefPositionItem-InfEx-Rsp-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
__ ********************
-- INFORMATION EXCHANGE INITIATION FAILURE
__ **********************
protocolIEs ProtocolIE-Container {{InformationExchangeInitiationFailure-IEs}} protocolExtensions ProtocolExtensionContainer {{InformationExchangeInitiationFailure-
Extensions}}
OPTIONAL,
InformationExchangeInitiationFailure-IES PCAP-PROTOCOL-IES ::= {
   { ID id-InformationExchangeID CRITICALITY ignore TYPE InformationExchangeID
   PRESENCE mandatory } |
   { ID id-Cause
                                    CRITICALITY ignore TYPE Cause
   PRESENCE mandatory } |
   PRESENCE optional },
InformationExchangeInitiationFailure-Extensions PCAP-PROTOCOL-EXTENSION ::= {
}
__ **********************************
-- POSITION INITIATION REQUEST
__ *****************
PositionInitiationRequest ::= SEQUENCE {
   protocolIEs ProtocolIE-Container { {PositionInitiationRequestIEs} },
protocolExtensions ProtocolExtensionContainer { {PositionInitiationRequestExtensions} }
   OPTIONAL,
}
PositionInitiationRequestIEs PCAP-PROTOCOL-IES ::= {
   { ID id-RequestType
                                 CRITICALITY reject TYPE RequestType
                                                                             PRESENCE
mandatory } |
   mandatory } |
                                 CRITICALITY reject TYPE UC-ID
   { ID id-UC-id
                                                                             PRESENCE
mandatory } |
   { ID id-VerticalAccuracyCode
                                CRITICALITY ignore TYPE VerticalAccuracyCode
                                                                             PRESENCE
optional } |
   { ID id-ResponseTime
                                 CRITICALITY ignore TYPE ResponseTime
                                                                             PRESENCE
optional } |
   { ID id-PositioningPriority
                                CRITICALITY ignore TYPE PositioningPriority
                                                                             PRESENCE
optional } |
   { ID id-ClientType
                                 CRITICALITY ignore TYPE ClientType
                                                                             PRESENCE
optional },
PositionInitiationRequestExtensions PCAP-PROTOCOL-EXTENSION ::= {
```

```
{ ID id-IncludeVelocity
                             CRITICALITY ignore EXTENSION IncludeVelocity
   PRESENCE optional },
}
__ *******************************
-- POSITION INITIATION RESPONSE
__ *********************************
PositionInitiationResponse ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {PositionInitiationResponseIEs} },
protocolExtensions ProtocolExtensionContainer { {PositionInitiationResponseExtensions} }
  OPTIONAL,
}
PositionInitiationResponseIEs PCAP-PROTOCOL-IES ::= {
  mandatory } |
  { ID id-PositionData
                                 CRITICALITY ignore TYPE PositionData
                                                                     PRESENCE
mandatory } |
   PRESENCE optional },
}
PositionInitiationResponseExtensions PCAP-PROTOCOL-EXTENSION ::= {
  optional },
  . . .
}
__ ********************************
-- POSITION INITIATION FAILURE
__ **********************
PositionInitiationFailure ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {PositionInitiationFailureIEs} },
   protocolExtensions ProtocolExtensionContainer { {PositionInitiationFailureExtensions} }
   OPTIONAL,
}
PositionInitiationFailureIEs PCAP-PROTOCOL-IES ::= {
  { ID id-Cause
                  CRITICALITY ignore TYPE Cause
                                                                    PRESENCE
mandatory } |
  { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                    PRESENCE
optional },
}
PositionInitiationFailureExtensions PCAP-PROTOCOL-EXTENSION ::= {
}
__ ********************
-- POSITION ACTIVATION REQUEST
__ **********************
PositionActivationRequest ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {PositionActivationRequestIEs} },
  protocolExtensions ProtocolExtensionContainer { {PositionActivationRequestExtensions} }
OPTIONAL,
   . . .
PositionActivationRequestIEs PCAP-PROTOCOL-IES ::= {
  { ID id-PositioningMethod CRITICALITY reject TYPE PositioningMethod
   PRESENCE mandatory } |
```

```
PRESENCE mandatory }
   PRESENCE optional } |
   { ID id-EnvironmentCharacterisation CRITICALITY ignore TYPE EnvironmentCharacterisation
   PRESENCE optional }
   { ID id-UTDOAPositioning
                              CRITICALITY reject TYPE UTDOAPositioning
   PRESENCE optional }
   { ID id-GPSPositioning
                              CRITICALITY reject TYPE GPSPositioning
   PRESENCE optional } |
   { ID id-OTDOAAssistanceData
                              CRITICALITY reject TYPE OTDOAAssistanceData
   PRESENCE optional },
}
PositionActivationRequestExtensions PCAP-PROTOCOL-EXTENSION ::= {
   { ID id-IncludeVelocity CRITICALITY ignore EXTENSION IncludeVelocity
   PRESENCE optional },
}
__ *********************
-- POSITION ACTIVATION RESPONSE
__ **********************
PositionActivationResponse ::= SEQUENCE {
   protocolIEs ProtocolIE-Container { {PositionActivationResponseIEs} }, protocolExtensions ProtocolExtensionContainer { {PositionActivationResponseExtensions} }
  protocolIEs
   OPTIONAL,
   . . .
}
PositionActivationResponseIEs PCAP-PROTOCOL-IES ::= {
   PRESENCE optional } |
   PRESENCE optional } |
   { ID id-CellId-MeasuredResultsSets
                                 CRITICALITY reject TYPE CellId-MeasuredResultsSets
  PRESENCE optional } |
   PRESENCE optional } |
   { ID id-UTDOA-Group
                                 CRITICALITY reject TYPE UTDOA-Group
   PRESENCE optional },
}
PositionActivationResponseExtensions PCAP-PROTOCOL-EXTENSION ::= {
 { ID id-VelocityEstimate
                                 CRITICALITY ignore EXTENSION VelocityEstimate PRESENCE
optional},
__ ********************
-- POSITION ACTIVATION FAILURE
__ *****************
PositionActivationFailure ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {PositionActivationFailureIEs} },
protocolExtensions ProtocolExtensionContainer { {PositionActivationFailureExtensions} }
   OPTIONAL,
   . . .
}
PositionActivationFailureIEs PCAP-PROTOCOL-IES ::= {
                           CRITICALITY ignore TYPE Cause
   { ID id-Cause
                                                                     PRESENCE
mandatory } |
  { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                     PRESENCE
optional },
PositionActivationFailureExtensions PCAP-PROTOCOL-EXTENSION ::= {
```

```
}
__ **********************
-- INFORMATION REPORT
__ *******************
InformationReport ::= SEQUENCE {
   protocolIEs ProtocolIE-Container {{InformationReport-IEs}},
protocolExtensions ProtocolExtensionContainer {{InformationReport-Extensions}}
   protocolIEs
   OPTIONAL,
}
InformationReport-IEs PCAP-PROTOCOL-IES ::= {
  { ID id-InformationExchangeID
                                                     CRITICALITY ignore TYPE
InformationExchangeID
                                             PRESENCE mandatory } |
  { ID id-InformationExchangeObjectType-InfEx-Rprt CRITICALITY ignore TYPE
InformationExchangeObjectType-InfEx-Rprt PRESENCE mandatory },
InformationReport-Extensions PCAP-PROTOCOL-EXTENSION ::= {
InformationExchangeObjectType-InfEx-Rprt ::= CHOICE {
  referencePosition
                               RefPosition-InfEx-Rprt,
}
{\tt RefPosition-InfEx-Rprt} \; ::= \; {\tt SEQUENCE} \; \left\{ \right.
   requestedDataValueInformation RequestedDataValueInformation, iE-Extensions ProtocolExtensionContainer {{ RefPositionItem-InfEx-Rprt-ExtIEs
   OPTIONAL,
} }
RefPositionItem-InfEx-Rprt-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
-- INFORMATION EXCHANGE TERMINATION REQUEST
InformationExchangeTerminationRequest ::= SEQUENCE {
               ProtocolIE-Container
                                                 \{\,\{\, {\tt InformationExchangeTerminationRequest-}
   protocolIEs
IEs}},
   protocolExtensions
                       ProtocolExtensionContainer {{InformationExchangeTerminationRequest-
Extensions}}
OPTIONAL,
}
{\tt InformationExchangeTerminationRequest-IEs\ PCAP-PROTOCOL-IES\ ::=\ \{
 { ID id-InformationExchangeID CRITICALITY ignore TYPE InformationExchangeID
          PRESENCE mandatory },
}
InformationExchangeTerminationRequest-Extensions PCAP-PROTOCOL-EXTENSION ::= {
}
__ ********************
-- INFORMATION EXCHANGE FAILURE INDICATION
```

```
InformationExchangeFailureIndication ::= SEQUENCE {
               ProtocolIE-Container
                                              {{InformationExchangeFailureIndication-
   protocolIEs
IEs}},
                     {\tt ProtocolExtensionContainer} \quad \{ \{ {\tt InformationExchangeFailureIndication-protocolExtensionContainer} \} \\
  protocolExtensions
Extensions}}
OPTIONAL,
InformationExchangeFailureIndication-IES PCAP-PROTOCOL-IES ::= {
  { ID id-InformationExchangeID
                                 CRITICALITY ignore
InformationExchangeID PRESENCE
                                    mandatory }|
                                     CRITICALITY ignore
                                                             TYPE Cause
  { ID id-Cause
            PRESENCE mandatory },
}
InformationExchangeFailureIndication-Extensions PCAP-PROTOCOL-EXTENSION ::= {
__ ********************
-- ERROR INDICATION
__ **********************************
ErrorIndication ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {ErrorIndicationIEs} },
   protocolExtensions ProtocolExtensionContainer { {ErrorIndicationExtensions} } OPTIONAL,
ErrorIndicationIEs PCAP-PROTOCOL-IES ::= {
                               CRITICALITY ignore TYPE Cause
  { ID id-Cause
                                                                           PRESENCE
optional } |
  { ID id-CriticalityDiagnostics
                               CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                          PRESENCE
optional },
}
{\tt ErrorIndicationExtensions\ PCAP-PROTOCOL-EXTENSION\ ::=\ \{}
__ ********************
-- POSITION PARAMETER MODIFICATION
__ *********************************
PositionParameterModification ::= SEQUENCE {
  OPTIONAL,
}
PositionParameterModificationIEs PCAP-PROTOCOL-IES ::= {
  { ID id-UC-id
                                CRITICALITY reject TYPE UC-ID
                                                                            PRESENCE
optional }
  { ID id-UTDOA-Group
                              CRITICALITY reject TYPE UTDOA-Group
                                                                           PRESENCE
optional },
}
PositionParameterModificationExtensions PCAP-PROTOCOL-EXTENSION ::= {
__ ********************
-- PRIVATE MESSAGE
__ **********************
```

9.3.4 Information Element Definitions

```
__ **********************************
-- Information Element Definitions
__ **********************
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-IEs (2) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   maxNrOfErrors,
   maxSat,
   maxSatAlmanac,
   maxNrOfLevels,
   maxNrOfMeasNCell,
   maxNrOfMeasurements,
   maxNrOfPoints,
   maxNrOfExpInfo,
   maxNrOfSets,
   maxRateMatching,
   maxNrOfTFs,
   maxTTI-count,
   maxTS-1.
   maxCCTrCH,
   maxTF,
   maxTFC,
   maxPRACH,
   maxTrCH,
   maxTGPS,
   maxNoOfMeasurements,
   maxCellMeas,
   maxNrOfEDPCCH-PO-QUANTSTEPs,
   maxNrOfRefETFCI-PO-QUANTSTEPs,
   maxNrOfRefETFCIs,
```

```
maxSet,
   id-UTRAN-GPSReferenceTime,
   id-UTRAN-GPSReferenceTimeResult,
   id-GPS-UTRAN-TRU,
   id-UTRAN-GPS-DriftRate,
   id-OTDOA-AddMeasuredResultsInfo,
   id-GPS-ReferenceLocation,
   id-rxTimingDeviation768Info,
   {\tt id-rxTimingDeviation384extInfo}
FROM PCAP-Constants
   Criticality,
   ProcedureCode,
   ProtocolIE-ID,
   TransactionID,
   TriggeringMessage
FROM PCAP-CommonDataTypes
   ProtocolExtensionContainer{},
   PCAP-PROTOCOL-EXTENSION
FROM PCAP-Containers;
__ ********************************
-- Accuracy Fulfilment Indicator
__ *****************
\verb|AccuracyFulfilmentIndicator ::= ENUMERATED||
   requested-Accuracy-Fulfilled,
   requested-Accuracy-Not-Fulfilled,
}
__ *********************************
-- Additional Method Type
__ **********************
AdditionalMethodType ::= ENUMERATED {
   ue-assisted,
   ue-based,
   ue-based-preferred-but-ue-assisted-allowed,
   ue-assisted-preferred-but-ue-based-allowed,
}
__ **********************************
-- Almanac and Satellite Health SIB
__ *****************
AlmanacAndSatelliteHealthSIB ::= SEQUENCE {
                             GPS-AlmanacAndSatelliteHealth,
   gpsAlmanacAndSatelliteHealth
   satMask
                                 BIT STRING (SIZE (1..32)),
   lsbTOW
                                 BIT STRING (SIZE (8)),
                                 ProtocolExtensionContainer { { AlmanacAndSatelliteHealthSIB-
   \verb"iE-Extensions"
ExtIEs } } OPTIONAL,
}
AlmanacAndSatelliteHealthSIB-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ **********************
```

```
-- Cause IE
__ ********************
Cause ::= CHOICE {
                        CauseRadioNetwork,
   radioNetwork
                          CauseTransport,
   t.ransport
   protocol
                          CauseProtocol,
   misc
                          CauseMisc,
CauseRadioNetwork ::= ENUMERATED {
   invalid-reference-information.
   information-temporarily-not-available,
   information-provision-not-supported-for-the-object,
   position-calculation-error-invalid-GPS-measured-results,
   position-calculation-error-invalid-CellID-measured-results,
   position-calculation-error-invalid-OTDOA-measured-results,
   position-calculation-error-AGPS-positioning-method-not-supported,
   \verb|position-calculation-error-CellID-positioning-method-not-supported|,\\
   \verb|position-calculation-error-OTDOA-positioning-method-not-supported|,\\
    initial-UE-position-estimate-missing,
   position-caclulation-error-invalid-UTDOA-measured-results,
   \verb"position-calculation-error-UTDOA-positioning-method-not-supported",
   position-calculation-error-UTDOA-not-supported-UTRAN-cell,
   positioning-method-not-supported,
   loss-of-contact-with-UE,
   sAS-unable-to-perform-UTDOA-positioning-within-response-time,
   location-measurement-failure,
   ue-positioning-error-Not-enough-OTDOA-cells,
   ue-positioning-error-Not-enough-GPS-Satellites,
   ue-positioning-error-Reference-Cell-not-serving-cell,
   \verb"ue-positioning-error-Not-Accomplished-GPS-Timing-of-Cell-Frames",
   ue-positioning-error-Undefined-Error
}
CauseTransport ::= ENUMERATED {
   transport-resource-unavailable,
   unspecified,
}
CauseProtocol ::= ENUMERATED {
   transfer-syntax-error,
   abstract-syntax-error-reject,
   abstract-syntax-error-ignore-and-notify,
   message-not-compatible-with-receiver-state,
   semantic-error,
   unspecified,
   abstract-syntax-error-falsely-constructed-message,
}
CauseMisc ::= ENUMERATED {
   processing-overload,
   hardware-failure,
   o-and-m-intervention,
   unspecified,
}
__ ********************
-- Cell Id Measured Results Sets
__ **********************
CellId-MeasuredResultsSets ::=
                                      SEQUENCE (SIZE (1..maxNrOfMeasurements)) OF
   CellId-MeasuredResultsInfoList
CellId-MeasuredResultsInfoList ::=
                                      SEQUENCE (SIZE (1..maxNrOfMeasNCell)) OF
   CellId-MeasuredResultsInfo
CellId-MeasuredResultsInfo ::=
                                      SEQUENCE {
   uC-ID
                                      UC-ID.
                                      UTRANAccessPointPositionAltitude,
   uTRANAccessPointPositionAltitude
```

```
ue-PositionEstimate
                                     UE-PositionEstimate
                                                                 OPTIONAL,
   roundTripTimeInfo
                                      RoundTripTimeInfo
                                                                  OPTIONAL, -- FDD only
   rxTimingDeviationInfo RxTimingDeviationInfo OPTIONAL, -- FDD only rxTimingDeviationLCRInfo RxTimingDeviationLCRInfo OPTIONAL, -- 3.84Mcps TDD only rxTimingDeviationLCRInfo OPTIONAL, -- 1.28Mcps TDD only nathloss
   pathloss
                                      Pathloss
                                                                  OPTIONAL,
   iE-Extensions
                                      ProtocolExtensionContainer { { CellId-MeasuredResultsInfo-
ExtIEs } } OPTIONAL,
}
CellId-MeasuredResultsInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
    { ID id-rxTimingDeviation384extInfo CRITICALITY reject EXTENSION RxTimingDeviation384extInfo
                  PRESENCE optional }, -- 3.84Mcps TDD only
}
RoundTripTimeInfo ::=
   ndTripTimeInto :=

ue-RxTxTimeDifferenceType2

UE-RxTxTimeDifferenceType2

UE-PositioningMeasQuality,
                                      SEQUENCE {
                                      UE-RxTxTimeDifferenceType2,
   roundTripTime
                                     RoundTripTime,
   iE-Extensions
                                      ProtocolExtensionContainer { { RoundTripTimeInfo-ExtIEs } }
      OPTIONAL,
}
RoundTripTimeInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
UE-RxTxTimeDifferenceType2 ::=
                                     INTEGER (0..8191)
UE-PositioningMeasQuality ::=
                                     SEQUENCE {
   stdResolution
                                     BIT STRING (SIZE (2)),
   numberOfMeasurements
                                      BIT STRING (SIZE (3)),
                                    BIT STRING (SIZE (5)),
   stdOfMeasurements
                                      ProtocolExtensionContainer { { UE-PositioningMeasQuality-
   iE-Extensions
              OPTIONAL,
ExtIEs } }
   . . .
}
UE-PositioningMeasQuality-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
                                      INTEGER (0..32766)
RoundTripTime ::=
-- Actual value RoundTripTime = IE value * 0.0625 + 876
UTRANAccessPointPositionAltitude ::=
                                    SEQUENCE {
   geographicalCoordinates
                                       GeographicalCoordinates,
                                       GA-AltitudeAndDirection
   ga-AltitudeAndDirection
                         OPTIONAL,
   iE-Extensions
                                       ProtocolExtensionContainer { {
UTRANAccessPointPositionAltitude-ExtIEs } }
                                             OPTIONAL,
UTRANAccessPointPositionAltitude-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
RxTimingDeviationInfo ::=
                                      SEQUENCE {
   rxTimingDeviation
                                       RxTimingDeviation,
   timingAdvance
                                       TimingAdvance,
                                      iE-Extensions
} } OPTIONAL,
RxTimingDeviationInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
RxTimingDeviationLCRInfo ::=
                                      SEQUENCE {
                                      RxTimingDeviationLCR,
   rxTimingDeviationLCR
   timingAdvanceLCR
                                      TimingAdvanceLCR,
```

```
iE-Extensions
                                    ProtocolExtensionContainer { { RxTimingDeviationLCRInfo-
ExtIEs } } OPTIONAL,
}
RxTimingDeviationLCRInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
RxTimingDeviation768Info ::=
                                    SEQUENCE {
                                  RxTimingDeviation768,
  rxTimingDeviation768
   timingAdvance768
                                    TimingAdvance768,
                                   ProtocolExtensionContainer { { RxTimingDeviation768Info-
   iE-Extensions
ExtIEs } } OPTIONAL,
}
RxTimingDeviation768Info-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
RxTimingDeviation384extInfo ::=
                                SEQUENCE {
RxTimingDeviation384ext,
   rxTimingDeviation384ext
                                   TimingAdvance384ext,
   timingAdvance384ext
                                   ProtocolExtensionContainer { { RxTimingDeviation384extInfo-
   iE-Extensions
ExtIEs } } OPTIONAL,
   . . .
}
RxTimingDeviation384extInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
                                   INTEGER (0..8191)
RxTimingDeviation ::=
RxTimingDeviationLCR ::=
                                   INTEGER (0..511)
RxTimingDeviation768 ::=
                                   INTEGER (0..65535)
RxTimingDeviation384ext ::=
                                   INTEGER (0..32767)
TimingAdvance ::=
                                   INTEGER (0..63)
TimingAdvanceLCR ::=
                                   INTEGER (0..2047)
TimingAdvance768 ::=
                                   INTEGER (0..511)
TimingAdvance384ext ::=
                                   INTEGER (0..255)
Pathloss ::=
                                    INTEGER (46..158)
-- Unit: dB; as defined in [4] subclause 10.3.7.3
__ ********************
-- Client Type
__ ********************
ClientType ::= ENUMERATED {
   emergency-services,
   value-added-services,
   plmn-operator-services,
   lawful-intercept-services,
   plmn-operator-broadcast-services,
   plmn-operator-oam,
   plmn-operator-anonymous-statistics,
   plmn-operator-target-ms-service-support,
}
__ **********************************
-- CriticalityDiagnostics
__ ********************************
CriticalityDiagnostics ::= SEQUENCE {
```

```
procedureCode
                            ProcedureCode
   OPTIONAL,
   triggeringMessage
                            TriggeringMessage
   OPTIONAL,
   procedureCriticality
                            Criticality
   OPTIONAL,
                             TransactionID
   transactionID
   OPTIONAL,
   iE-Extensions
                             ProtocolExtensionContainer { (CriticalityDiagnostics-ExtIEs) }
   OPTIONAL,
}
CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
   SEOUENCE {
       iECriticality
                             Criticality,
       iE-ID
                             ProtocolIE-ID,
       repetitionNumber
                            CriticalityDiagnosticsRepetition
       OPTIONAL,
                            MessageStructure
       messageStructure
       OPTIONAL,
       typeOfError
                             TypeOfError,
                            ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs}
       iE-Extensions
   OPTIONAL,
}
CriticalityDiagnostics-IE-List-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnostics-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
CriticalityDiagnosticsRepetition ::= INTEGER (0..255)
TypeOfError ::= ENUMERATED {
   not-understood,
   missing,
__ **********************
-- DGPSCorrections
__ *********************************
DGPSCorrections ::=
                                 SEQUENCE {
                                    INTEGER (0..604799),
   gps-TOW-sec
   statusHealth
                                    DiffCorrectionStatus,
   dgps-CorrectionSatInfoList
                                    DGPS-CorrectionSatInfoList
   OPTIONAL,
    -- not included if satelliteHealth is equal to noData or invalidData
   iE-Extensions
                                    ProtocolExtensionContainer { { DGPSCorrections-ExtIEs } }
   OPTIONAL.
}
DGPSCorrections-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
}
DiffCorrectionStatus ::=
                                 ENUMERATED {
                                    udre-1-0, udre-0-75, udre-0-5, udre-0-3,
                                    udre-0-2, udre-0-1, noData, invalidData }
                                 SEQUENCE (SIZE (1..maxSat)) OF
DGPS-CorrectionSatInfoList ::=
                                    DGPS-CorrectionSatInfo
DGPS-CorrectionSatInfo ::=
                                 SEQUENCE {
                                    INTEGER (0..63),
   satID
```

```
iode
                                      INTEGER (0..255),
   udre
                                      UDRE,
   prc
                                     PRC,
   rrc
                                      RRC,
   iE-Extensions
                                      ProtocolExtensionContainer { { DGPS-CorrectionSatInfo-ExtIEs
   OPTIONAL,
}
DGPS-CorrectionSatInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
UDRE ::=
                                  ENUMERATED {
                                      lessThan1,
                                      between1-and-4,
                                      between4-and-8,
                                      over8 }
PRC ::=
                                  INTEGER (-2047..2047)
RRC ::=
                                  INTEGER (-127..127)
__ ********************************
-- UE-PositionEstimate (i.e., Geographical Area)
__ ********************
-- UE-PositionEstimate is based on Geographical Area Description in 23.032
UE-PositionEstimate ::= CHOICE {
                              GA-Point,
   point
   pointWithUnCertainty
                            GA-PointWithUnCertainty,
                             GA-Polygon,
   pointWithUncertaintyEllipse GA-PointWithUnCertaintyEllipse,
   pointWithAltitude GA-PointWithAltitude,
   pointWithAltitudeAndUncertaintyEllipsoid
                                                GA-PointWithAltitudeAndUncertaintyEllipsoid,
   {\tt ellipsoidArc}
                              GA-EllipsoidArc,
   . . .
}
GeographicalCoordinates ::= SEQUENCE {
   latitudeSign ENUMERATED {north, south}, latitude INTEGER (0..8388607),
   latitude
                          INTEGER (-8388608..8388607),
   longitude
   iE-Extensions
                         ProtocolExtensionContainer { {GeographicalCoordinates-ExtIEs} }
OPTIONAL,
}
GeographicalCoordinates-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
GA-AltitudeAndDirection ::= SEQUENCE {
   }
GA-EllipsoidArc ::= SEQUENCE {
   geographicalCoordinates
                              GeographicalCoordinates,
   innerRadius INTEGER (0..65535), uncertaintyRadius INTEGER (0..127), offsetAngle INTEGER (0..179),
   includedAngle
                            INTEGER (0..179),
INTEGER (0..100),
   confidence
   iE-Extensions
                             ProtocolExtensionContainer { { GA-EllipsoidArc-ExtIEs} } OPTIONAL,
}
GA-EllipsoidArc-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
```

```
}
GA-Point ::= SEQUENCE {
                                geographicalCoordinates
    iE-Extensions
}
GA-Point-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
GA-PointWithAltitude ::= SEQUENCE {
    {\tt geographicalCoordinates} \qquad {\tt GeographicalCoordinates},
    geographicalcool_
altitudeAndDirection
                                   GA-AltitudeAndDirection,
                                 ProtocolExtensionContainer { GA-PointWithAltitude-ExtIEs} }
    iE-Extensions
OPTIONAL,
}
GA-PointWithAltitude-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
GA-PointWithAltitudeAndUncertaintyEllipsoid ::= SEQUENCE {
    geographicalCoordinates
altitudeAndDirection
uncertaintyEllipse
uncertaintyAltitude
confidence
Transions

GA-AltitudeAndDirection
GA-UncertaintyEllipse,
INTEGER (0..127),
INTEGER (0..100),
ProtocolExtensionContainer { GA-
    {\tt geographicalCoordinates} \qquad {\tt GeographicalCoordinates},
PointWithAltitudeAndUncertaintyEllipsoid-ExtIEs} } OPTIONAL,
}
GA-PointWithAltitudeAndUncertaintyEllipsoid-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
GA-PointWithUnCertainty ::=SEQUENCE {
    geographicalCoordinates GeographicalCoordinates,
    geographicalcol-
uncertaintyCode
                                   INTEGER (0..127),
                                  ProtocolExtensionContainer { GA-PointWithUnCertainty-ExtIEs} }
    iE-Extensions
OPTIONAL,
    ...}
GA-PointWithUnCertainty-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
GA-PointWithUnCertaintyEllipse ::= SEQUENCE {
   geographicalCoordinates GeographicalCoordinates, uncertaintyEllipse GA-UncertaintyEllipse,
    uncertaintyEllipse
                                  INTEGER (0..100),
    confidence
                                  ProtocolExtensionContainer { { GA-PointWithUnCertaintyEllipse-
    iE-Extensions
ExtIEs } OPTIONAL,
GA-PointWithUnCertaintyEllipse-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
{\tt GA-Polygon} ::= {\tt SEQUENCE} ({\tt SIZE} (1..maxNrOfPoints)) {\tt OF}
    SEQUENCE {
        geographicalCoordinates
                                    GeographicalCoordinates,
ProtocolExtensionContainer { {GA-Polygon-ExtIEs} } OPTIONAL,
                                        GeographicalCoordinates,
        iE-Extensions
    }
GA-Polygon-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
GA-UncertaintyEllipse ::= SEQUENCE {
    uncertaintySemi-major INTEGER (0..127),
    uncertaintySemi-minor
                                   INTEGER (0..127),
```

```
orientationOfMajorAxis
                        INTEGER (0..89),
}
__ **********************************
-- UE-PositionEstimateInfo
__ *******************
UE-PositionEstimateInfo ::= SEQUENCE {
  referenceTimeChoice ReferenceTimeChoice, ue-positionEstimate UE-PositionEstimate,
   iE-Extensions
                         ProtocolExtensionContainer { { UE-PositionEstimateInfo-ExtIEs } }
OPTIONAL,
UE-PositionEstimateInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
ReferenceTimeChoice ::= CHOICE {
                             UTRAN-GPSReferenceTimeResult,
  utran-GPSReferenceTimeResult
                                INTEGER (0..604799999, ...),
   gps-ReferenceTimeOnly
   cell-Timing
                                Cell-Timing,
}
Cell-Timing ::= SEQUENCE {
         INTEGER (0..4095),
   uC-ID
                   UC-ID,
   iE-Extensions ProtocolExtensionContainer { { Cell-Timing-ExtIEs } } OPTIONAL,
Cell-Timing-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ **************
-- Position Data
__ **************
PositionData ::= SEQUENCE {
  positioningDataDiscriminator PositioningDataDiscriminator, positioningDataSet PositioningDataSet OPTIONAL,
-- This IE shall be present if the PositioningDataDiscriminator IE is set to the value "0000" --
  iE-Extensions ProtocolExtensionContainer { {PositionData-ExtIEs} } OPTIONAL,
}
PositionData-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
PositioningDataDiscriminator ::= BIT STRING (SIZE(4))
PositioningDataSet ::= SEQUENCE(SIZE(1..maxSet)) OF PositioningMethodAndUsage
PositioningMethodAndUsage ::= OCTET STRING (SIZE(1))
-- GPS-AcquisitionAssistance:
__ *********************
GPS-AcquisitionAssistance ::= SEQUENCE {
   gps-TOW-1msec
ExtIEs } } OPTIONAL,
```

```
}
GPS-AcquisitionAssistance-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional },
}
AcquisitionSatInfoList ::= SEQUENCE (SIZE (1..maxSat)) OF
                                    AcquisitionSatInfo
                                SEQUENCE {
AcquisitionSatInfo ::=
                                   INTEGER (0..63),
   satID
   doppler0thOrder
                                     INTEGER (-2048..2047),
                                    ExtraDopplerInfo
   extraDopplerInfo
       OPTIONAL,
   codePhase
                                    INTEGER (0..1022),
   integerCodePhase
                                   INTEGER (0..19),
                                     INTEGER (0..3),
   gps-BitNumber
   gps-BitNumber INTEGER (0..3),
codePhaseSearchWindow CodePhaseSearchWindow,
azimuthAndFlevation
   azimuthAndElevation
                                    AzimuthAndElevation
       OPTIONAL,
                                    ProtocolExtensionContainer { { AcquisitionSatInfo-ExtIEs } }
   iE-Extensions
      OPTIONAL,
}
AcquisitionSatInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
ExtraDopplerInfo ::=
    doppler1stOrder
    dopplerUncertainty
                                SEQUENCE {
                                INTEGER (-42..21),
DopplerUncertainty,
                                    ProtocolExtensionContainer { { ExtraDopplerInfo-ExtIEs } }
   iE-Extensions
   OPTIONAL,
}
ExtraDopplerInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
DopplerUncertainty ::= ENUMERATED {
                                     hz12-5, hz25, hz50, hz100, hz200, ...}
CodePhaseSearchWindow ::=
                                 ENUMERATED {
                                     w1023, w1, w2, w3, w4, w6, w8,
                                     w12, w16, w24, w32, w48, w64,
                                     w96, w128, w192 }
AzimuthAndElevation ::=
                                SEQUENCE {
                                   INTEGER (0..31),
INTEGER (0..7),
   azimuth
   elevation
                                    ProtocolExtensionContainer { { AzimuthAndElevation-ExtIEs }
   iE-Extensions
  OPTIONAL,
}
AzimuthAndElevation-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ *********************
-- GPS Almanac and Satellite Health
__ **********************************
GPS-AlmanacAndSatelliteHealth ::= SEQUENCE {
                                     BIT STRING (SIZE (8)),
   wn-a
```

```
almanacSatInfoList
                                     AlmanacSatInfoList,
                                      BIT STRING (SIZE (364)) OPTIONAL,
   svGlobalHealth
                                     ProtocolExtensionContainer { { GPS-
   iE-Extensions
AlmanacAndSatelliteHealth-ExtIEs } }
                                         OPTIONAL,
GPS-AlmanacAndSatelliteHealth-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
AlmanacSatInfoList ::=
                                  SEQUENCE (SIZE (1..maxSatAlmanac)) OF
                                     AlmanacSatInfo
                                  SEQUENCE {
AlmanacSatInfo ::=
                                     BIT STRING (SIZE (2)),
   dataID
   satID
                                      INTEGER (0..63),
                                      BIT STRING (SIZE (16)),
   e
                                     BIT STRING (SIZE (8)),
   t-oa
   deltaI
                                     BIT STRING (SIZE (16))
                                      BIT STRING (SIZE (16)),
   omegaDot
                                     BIT STRING (SIZE (8)),
   satHealth
                                      BIT STRING (SIZE (24)),
   a-Sgrt.
                                      BIT STRING (SIZE (24)),
   omega0
   m0
                                     BIT STRING (SIZE (24)),
   omega
                                      BIT STRING (SIZE (24)),
   af0
                                     BIT STRING (SIZE (11)),
   af1
                                      BIT STRING (SIZE (11)),
                                      ProtocolExtensionContainer { { AlmanacSatInfo-ExtIEs } }
   iE-Extensions
   OPTIONAL,
}
AlmanacSatInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ ********************************
-- GPS Clock And Ephemeris Parameters
GPS-ClockAndEphemerisParameters ::= SEOUENCE {
   codeOnL2
                                      BIT STRING (SIZE (2)),
   uraIndex
                                      BIT STRING (SIZE (4)),
   satHealth
                                      BIT STRING (SIZE (6)),
                                      BIT STRING (SIZE (10)),
   iodc
   12Pflag
                                      BIT STRING (SIZE (1)),
   sf1Revd
                                      SubFrame1Reserved,
   t-GD
                                      BIT STRING (SIZE (8)),
   t-oc
                                      BIT STRING (SIZE (16)),
   af2
                                      BIT STRING (SIZE (8)),
   af1
                                      BIT STRING (SIZE (16))
   af0
                                     BIT STRING (SIZE (22)),
                                      BIT STRING (SIZE (16)),
   c-rs
                                      BIT STRING (SIZE (16)),
   delta-n
   m0
                                      BIT STRING (SIZE (32)),
                                      BIT STRING (SIZE (16)),
   c-uc
                                     BIT STRING (SIZE (32)),
   е
   c-us
                                      BIT STRING (SIZE (16)),
   a-Sgrt
                                      BIT STRING (SIZE (32)),
   t-oe
                                     BIT STRING (SIZE (16)),
                                      BIT STRING (SIZE (1)),
   fitInterval
                                     BIT STRING (SIZE (5)),
   aodo
                                      BIT STRING (SIZE (16)),
   c-ic
   omega0
                                      BIT STRING (SIZE (32)),
   c-is
                                      BIT STRING (SIZE (16)),
   i0
                                      BIT STRING (SIZE (32)),
                                      BIT STRING (SIZE (16)).
   c-rc
   omega
                                      BIT STRING (SIZE (32)),
   omegaDot
                                      BIT STRING (SIZE (24)),
                                     BIT STRING (SIZE (14)),
                                      ProtocolExtensionContainer { { GPS-
   iE-Extensions
ClockAndEphemerisParameters-ExtIEs } }
                                         OPTIONAL,
```

```
}
GPS-ClockAndEphemerisParameters-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SubFrame1Reserved ::=
                                 SEQUENCE {
   reserved1
                                   BIT STRING (SIZE (23)),
                                     BIT STRING (SIZE (24)),
   reserved2
                                     BIT STRING (SIZE (24)),
   reserved3
                                     BIT STRING (SIZE (16))
   reserved4
}
__ *********************
-- GPS Ionospheric Model
__ *****************
 GPS-Ionospheric-Model ::=
                                SEQUENCE {
                                     BIT STRING (SIZE (8)),
   alfa0
                                     BIT STRING (SIZE (8)),
   alfa1
   alfa2
                                     BIT STRING (SIZE (8)),
                                     BIT STRING (SIZE (8)),
   alfa3
   beta0
                                     BIT STRING (SIZE (8)),
   beta1
                                     BIT STRING (SIZE (8)),
   beta2
                                     BIT STRING (SIZE (8)),
                                    BIT STRING (SIZE (8)),
   beta3
   iE-Extensions
                                     ProtocolExtensionContainer { { GPS-Ionospheric-Model-ExtIEs
} } OPTIONAL,
}
GPS-Ionospheric-Model-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ ********************
-- GPS Measured Results
__ *******************
                               SEQUENCE (SIZE (0..maxNrOfSets)) OF
MeasuredResultsList ::=
   GPS-MeasuredResults
GPS-MeasuredResults ::= SEQUENCE {
    gps-TOW-1msec INTEGER (0..604799999),
    gps-MeasurementParamList GPS-MeasurementParamList,
    iE-Extensions ProtocolExtensionContainer { GPS-MeasuredResults-ExtIEs }
} OPTIONAL,
}
GPS-MeasuredResults-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
   {ID id-UTRAN-GPSReferenceTimeResult CRITICALITY ignore EXTENSION UTRAN-GPSReferenceTimeResult
   PRESENCE optional },
}
GPS-MeasurementParamList ::= SEQUENCE (SIZE (1..maxSat)) OF
                                     GPS-MeasurementParam
                                SEQUENCE {
GPS-MeasurementParam ::=
   {\tt satelliteID}
                                   INTEGER (0..63),
                                     INTEGER (0..63),
    c-N0
   doppler
                                     INTEGER (-32768..32768),
    wholeGPS-Chips
                                     INTEGER (0..1022),
INTEGER (0..1023),
   fractionalGPS-Chips
                        MultipathIndicator,
   multipathIndicator
   pseudorangeRMS-Error
                                     INTEGER (0..63),
```

```
iE-Extensions
                               ProtocolExtensionContainer { GPS-MeasurementParam-ExtIEs }
}
  OPTIONAL,
}
MultipathIndicator ::=
                            ENUMERATED {
                                nm.
                                low,
                                medium,
                                high }
GPS-MeasurementParam-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
-- GPS Navigation Model
GPS-NavigationModel ::= SEQUENCE (SIZE (1..maxSat)) OF
                               NavigationModelSatInfo
{\tt Navigation Model Sat Info} ::= \\ {\tt SEQUENCE} \ \big\{
  satID
                               INTEGER (0..63),
   satelliteStatus
                               SatelliteStatus,
   gps-clockAndEphemerisParms
                               GPS-ClockAndEphemerisParameters
         OPTIONAL,
   -- This IE is not present if satelliteStatus is es-SN
   iE-Extensions
                                ProtocolExtensionContainer { { NavigationModelSatInfo-ExtIEs
} } OPTIONAL,
NavigationModelSatInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SatelliteStatus ::=
                             ENUMERATED {
                               ns-NN,
                                es-SN,
                                es-NN,
                                rev2.
                                rev }
__ *********************************
-- GPS Real Time Integrity
GPS-RealTimeIntegrity ::= CHOICE {
  badSatellites BadSatList,
noBadSatellites NoBadSatellites,
}
BadSatList ::=
                            SEQUENCE (SIZE (1..maxSat)) OF
                                INTEGER (0..63)
NoBadSatellites ::= NULL
-- GPS Reference Location
__ *******************
GPS-ReferenceLocation ::= SEQUENCE {
   ue-PositionEstimate UE-Pos
  ue-PositionEstimate
                              UE-PositionEstimate,
```

```
iE-Extensions
                                ProtocolExtensionContainer { { GPS-ReferenceLocation-ExtIEs
} } OPTIONAL,
}
GPS-ReferenceLocation-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ **********************
-- GPS Reference Time
__ ********************
GPS-ReferenceTime ::=
                            SEOUENCE {
                                INTEGER (0..1023),
   gps-Week
   gps-TOW-1msec
                                INTEGER (0..604799999),
   gps-TOW-AssistList
                                GPS-TOW-AssistList
   OPTIONAL,
                              ProtocolExtensionContainer { { GPS-ReferenceTime-ExtIEs } }
   iE-Extensions
   OPTIONAL,
}
GPS-ReferenceTime-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional |
   {ID id-GPS-UTRAN-TRU
                               CRITICALITY ignore EXTENSION GPS-UTRAN-TRU
   PRESENCE optional |
   {ID id-UTRAN-GPS-DriftRate
                               CRITICALITY ignore EXTENSION UTRAN-GPS-DriftRate
   PRESENCE optional },
}
GPS-TOW-AssistList ::=
                            SEQUENCE (SIZE (1..maxSat)) OF
                               GPS-TOW-Assist
GPS-TOW-Assist ::=
                             SEQUENCE {
                                INTEGER (0..63),
   satID
                                BIT STRING (SIZE (14)),
   tlm-Message
   antiSpoof
                                BOOLEAN,
   alert
                                BOOLEAN,
   tlm-Reserved
                                BIT STRING (SIZE (2)),
   iE-Extensions
                                ProtocolExtensionContainer { { GPS-TOW-Assist-ExtIEs } }
   OPTIONAL,
}
GPS-TOW-Assist-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
UTRAN-GPS-DriftRate ::=
                             ENUMERATED {
                             utran-GPSDrift0, utran-GPSDrift1, utran-GPSDrift2,
                             utran-GPSDrift5, utran-GPSDrift10, utran-GPSDrift15,
                             utran-GPSDrift25, utran-GPSDrift50, utran-GPSDrift-1,
                             utran-GPSDrift-2, utran-GPSDrift-5, utran-GPSDrift-10,
                             utran-GPSDrift-15, utran-GPSDrift-25, utran-GPSDrift-50,
                             . . . }
-- GPS Transmission TOW
__ *********************************
GPS-Transmission-TOW ::= INTEGER (0..604799)
-- GPS UTC Model
```

```
__ **********************************
GPS-UTC-Model ::=
                              SEQUENCE {
  a1
                                 BIT STRING (SIZE (24)),
   a0
                                 BIT STRING (SIZE (32)),
                                 BIT STRING (SIZE (8)),
  t.-ot.
   delta-t-LS
                                 BIT STRING (SIZE (8)),
   wn-t
                                BIT STRING (SIZE (8)),
   wn-lsf
                                 BIT STRING (SIZE (8)),
                                BIT STRING (SIZE (8)),
   dn
                                BIT STRING (SIZE (8)),
ProtocolExtensionContainer { { GPS-UTCmodel-ExtIEs } }
   delta-t-LSF
   iE-Extensions
   OPTIONAL,
}
GPS-UTCmodel-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ *********************
-- GPS UTRAN Time Relationship Uncertainty
-- nsec=nanosecond, usec=microsecond, msec=millisecond, sec=second
__ *******************************
GPS-UTRAN-TRU ::= ENUMERATED {
                   nsec-50,
                    nsec-500,
                    usec-1.
                    usec-10,
                    msec-1,
                    msec-10,
                    msec-100,
                    unreliable,
__ *********************
-- Information Exchange ID
__ *******************
InformationExchangeID ::= INTEGER (0..1048575)
-- Information Report Characteristics
__ *****************
InformationReportCharacteristics ::= SEQUENCE {
   type InformationReportCharacteristicsType,
periodicity InformationReportPeriodicity OPTIONAL,
   -- present if type indicates periodic
}
InformationReportCharacteristicsType ::= ENUMERATED {
   onDemand,
   periodic,
   onModification,
}
{\tt InformationReportPeriodicity} ::= {\tt CHOICE} \ \big\{
  min INTEGER (1..60, ...),
-- Unit min, Step 1min
               INTEGER (1..24, ...),
-- Unit hour, Step 1hour
```

```
}
__ ********************
-- Information Type
__ *********************************
InformationType ::= CHOICE {
   implicitInformation
                             MethodType,
   explicitInformation
                             ExplicitInformationList,
}
ExplicitInformationList ::= SEQUENCE (SIZE (1..maxNrOfExpInfo)) OF ExplicitInformation
ExplicitInformation ::= CHOICE {
   almanacAndSatelliteHealth
                                 AlmanacAndSatelliteHealth,
   ut.cModel
                                 UtcModel,
   ionosphericModel
                                 IonosphericModel,
   navigationModel
                                 NavigationModel,
   dgpsCorrections
                                 DgpsCorrections,
   referenceTime
                                 ReferenceTime,
   acquisitionAssistance
                                 AcquisitionAssistance,
   realTimeIntegrity
                                RealTimeIntegrity,
   {\tt almanacAndSatelliteHealthSIB} \qquad {\tt AlmanacAndSatelliteHealthSIB-InfoType}\,,
    . . . .
   referenceLocation
                                ReferenceLocation
}
AlmanacAndSatelliteHealth ::= NULL
UtcModel ::= SEQUENCE {
   transmissionTOWIndicator TransmissionTOWIndicator,

iF-Extensions ProtocolExtensionContainer { { UtcModel-ExtIEs } } OPTIONAL,
}
UtcModel-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
IonosphericModel ::= SEQUENCE {
   transmissionTOWIndicator
                              TransmissionTOWIndicator,
                             ProtocolExtensionContainer { { IonosphericModel-ExtIEs } } OPTIONAL,
   iE-Extensions
IonosphericModel-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
NavigationModel ::= SEQUENCE {
   transmissionTOWIndicator TransmissionTOWIndicator,
   OPTIONAL,
}
NavigationModel-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
NavModelAdditionalData ::= SEQUENCE {
                          INTEGER (0..1023),
   gps-Week
   gps-TOE
                              INTEGER (0..167),
   t-TOE-limit
                             INTEGER (0..10),
   satRelatedDataList SatelliteRelatedDataList,
iE-Extensions ProtocolExtensionContainer { { NavModelAdditionalData-ExtlEs } }
OPTIONAL,
NavModelAdditionalData-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
```

```
}
SatelliteRelatedDataList ::= SEQUENCE (SIZE (0..maxSat)) OF SatelliteRelatedData
SatelliteRelatedData ::= SEQUENCE {
                             INTEGER (0..63),
   satID
                             INTEGER (0..255),
   iode
                            ProtocolExtensionContainer { { SatelliteRelatedData-ExtIEs } }
   iE-Extensions
OPTIONAL,
   . . .
SatelliteRelatedData-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
DgpsCorrections ::= NULL
ReferenceTime ::= NULL
AcquisitionAssistance ::= NULL
RealTimeIntegrity ::= NULL
{\tt AlmanacAndSatelliteHealthSIB-InfoType} \ ::= \ {\tt SEQUENCE} \ \big\{
   transmissionTOWIndicator TransmissionTOWIndicator,
   iE-Extensions
                            ProtocolExtensionContainer { { AlmanacAndSatelliteHealthSIB-
InfoType-ExtIEs } } OPTIONAL,
AlmanacAndSatelliteHealthSIB-InfoType-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
ReferenceLocation ::= NULL
TransmissionTOWIndicator ::= ENUMERATED {
  requested,
   not-Requested
}
__ *******************
-- Message Structure
__ ***********************************
MessageStructure ::= SEQUENCE (SIZE (1..maxNrOfLevels)) OF
   SEQUENCE {
                            ProtocolIE-ID,
      iE-ID
       repetitionNumber
                           MessageStructureRepetition
   OPTIONAL,
      iE-Extensions
                           ProtocolExtensionContainer { {MessageStructure-ExtIEs} }
OPTIONAL,
MessageStructureRepetition ::= INTEGER (1..256)
MessageStructure-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
__ *******************
-- Method Type
__ *******************************
MethodType ::= ENUMERATED {
   ue-assisted,
   ue-based
}
```

```
__ *********************
-- OTDOA Measurement Group
__ **********************
   OA-MeasurementGroup ::= SEQUENCE {
  otdoa-ReferenceCellInfo OTDOA-ReferenceCellInfo,
  otdoa-NeighbourCellInfoList OTDOA-NeighbourCellInfoList,
  otdoa-MeasuredResultsSets OTDOA-MeasuredResultsSets,
  iE-Extensions ProtocolExtensionContainer {
OTDOA-MeasurementGroup ::=
    iE-Extensions
                                        ProtocolExtensionContainer { { OTDOA-MeasurementGroup-ExtIEs
} }
       OPTIONAL,
}
OTDOA-MeasurementGroup-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
OTDOA-ReferenceCellInfo ::=
                                         SEQUENCE {
   uC-ID
                                         UC-ID,
    \verb"uTRANAccessPointPositionAltitude" UTRANAccessPointPositionAltitude",
    tUTRANGPSMeasurementValueInfo TUTRANGPSMeasurementValueInfo
               OPTIONAL,
                                       ProtocolExtensionContainer { { OTDOA-ReferenceCellInfo-
   iE-Extensions
ExtIEs } } OPTIONAL,
OTDOA-ReferenceCellInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= \{
OTDOA-NeighbourCellInfoList ::= SEQUENCE (SIZE (1..maxNrOfMeasNCell)) OF
    OTDOA-NeighbourCellInfo
OTDOA-NeighbourCellInfo ::=
                                        SEQUENCE {
   uC-ID
                                         UC-ID,
   \verb"utranaccessPointPositionAltitude" UtranaccessPointPositionAltitude",
   relativeTimingDifferenceInfo RelativeTimingDifferenceInfo,
    iE-Extensions
                                         ProtocolExtensionContainer { { OTDOA-NeighbourCellInfo-
ExtIEs } } OPTIONAL,
OTDOA-NeighbourCellInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
OTDOA-MeasuredResultsSets ::=
                                         SEQUENCE (SIZE (1..maxNrOfMeasurements)) OF
   OTDOA-MeasuredResultsInfoList
OTDOA-MeasuredResultsInfoList ::=
                                       SEQUENCE (SIZE (1..maxNrOfMeasNCell)) OF
   OTDOA-MeasuredResultsInfo
                                         SEQUENCE {
OTDOA-MeasuredResultsInfo ::=
   uC-ID
                                         UC-ID,
    \verb"ue-SFNSFNTimeDifferenceType2Info" UE-SFNSFNTimeDifferenceType2Info",
                                         ProtocolExtensionContainer { { OTDOA-MeasuredResultsInfo-
    iE-Extensions
ExtIEs } } OPTIONAL,
OTDOA-MeasuredResultsInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
    {ID id-OTDOA-AddMeasuredResultsInfo CRITICALITY ignore EXTENSION OTDOA-AddMeasuredResultsInfo
    PRESENCE optional },
    . . .
}
OTDOA-AddMeasuredResultsInfo ::= SEQUENCE {
   primaryCPICH-Info PrimaryScramblingCode, iE-Extensions ProtocolExtensionConta
                            ProtocolExtensionContainer { { OTDOA-AddMeasuredResultsInfo-ExtIEs } }
       OPTIONAL,
}
OTDOA-AddMeasuredResultsInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
```

```
}
ProtocolExtensionContainer { { UE-SFNSFNTimeDifferenceInfo-
    iE-Extensions
ExtIEs } } OPTIONAL,
UE-SFNSFNTimeDifferenceInfo-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
UC-ID ::=
                                       SEQUENCE {
                                       INTEGER (0..4095),
   rNC-ID
    c-ID
                                       INTEGER (0..65535),
                                       ProtocolExtensionContainer { { UC-ID-ExtIEs } }
   iE-Extensions
   OPTIONAL,
}
UC-ID-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
RelativeTimingDifferenceInfo ::= CHOICE {
   sFNSFNMeasurementValueInfo SFNSFNMeasurementValueInfo, tUTRANGPSMeasurementValueInfo, TUTRANGPSMeasurementValueInfo,
SFNSFNMeasurementValueInfo ::= SEQUENCE {
    sFNSFNValue
                                      SFNSFNValue,
    sFNSFNQuality
                                       SFNSFNQuality
      OPTIONAL,
    sFNSFNDriftRate
                                      SFNSFNDriftRate,
   sFNSFNDriftRateQuality
                                      SFNSFNDriftRateQuality
      OPTIONAL,
   iE-Extensions
                                       ProtocolExtensionContainer { { SFNSFNMeasurementValueInfo-
ExtIEs } } OPTIONAL,
SFNSFNMeasurementValueInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SFNSFNValue ::=
                                       INTEGER (0..614399)
SFNSFNQuality ::=
                                       INTEGER (0..255)
-- Unit chip, Step 1/16 chip, Range 0.. 255/16 chip
SFNSFNDriftRate ::=
                                      INTEGER (-100..100)
-- Unit chip/s, Step 1/256 chip/s, Range -100/256..+100/256 chip/s
SFNSFNDriftRateQuality ::=
                                      INTEGER (0..100)
-- Unit chip/s, Step 1/256 chip/s, Range 0..100/256 chip/s
{\tt TUTRANGPSMeasurementValueInfo} ::= {\tt SEQUENCE} \ \{
    sFN
                                       SFN,
                                       TUTRANGPS,
    tUTRANGPSQuality
                                       TUTRANGPSQuality
          OPTIONAL.
                                     TUTRANGPSDriftRate,
    tUTRANGPSDriftRate
    tUTRANGPSDriftRateQuality
                                      TUTRANGPSDriftRateQuality
          OPTIONAL,
   iE-Extensions
                                       ProtocolExtensionContainer { {
TUTRANGPSMeasurementValueInfo-ExtIEs } } OPTIONAL,
}
TUTRANGPSMeasurementValueInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SFN ::=
                                       INTEGER (0..4095)
```

```
TUTRANGPS ::=
                                   SEQUENCE {
                                   INTEGER (0..16383),
  ms-part
                                   INTEGER (0..4294967295)
   ls-part
TUTRANGPSOuality ::=
                                   INTEGER (0..255)
-- Unit chip, Step 1/16 chip, Range 0.. 255/16 chip
TUTRANGPSDriftRate ::=
                                  INTEGER (-50..50)
-- Unit chip/s, Step 1/256 chip/s, Range -50/256..+50/256 chip/s
TUTRANGPSDriftRateQuality ::=
                                 INTEGER (0..50)
-- Unit chip/s, Step 1/256 chip/s, Range 0..50/256 chip/s
__ *****************
-- Positioning Method
__ *******************
PositioningMethod ::= SEQUENCE {
   additionalMethodType AdditionalMethodType, selectedPositionMethod, SelectedPositionMethod,
   iE-Extensions ProtocolExtensionContainer { { PositioningMethod-ExtIEs } } OPTIONAL,
}
PositioningMethod-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SelectedPositionMethod ::= ENUMERATED {
  oTDOA,
   aPS,
   oTDOA-or-GPS,
   cell-id,
   uTDOA,
}
__ ********************************
-- Positioning Priority
__ ***********************************
PositioningPriority ::= ENUMERATED {
   high-priority,
   normal-priority,
}
__ *********************
-- Requested Data Value
__ *****************
RequestedDataValue ::= SEQUENCE {
   gpsAlmanacAndSatelliteHealth
                                 GPS-AlmanacAndSatelliteHealth
   OPTIONAL.
   gps-UTC-Model
                                  GPS-UTC-Model
   OPTIONAL,
   gps-Ionospheric-Model
                                  GPS-Ionospheric-Model
   OPTIONAL,
   gps-NavigationModel
                                  GPS-NavigationModel
   OPTIONAL,
   dgpsCorrections
                                   DGPSCorrections
   OPTIONAL,
   referenceTime
                                  GPS-ReferenceTime
   OPTIONAL,
   gps-AcquisitionAssistance
                                  GPS-AcquisitionAssistance
   OPTIONAL,
```

```
gps-RealTime-Integrity
                                GPS-RealTimeIntegrity
   OPTIONAL,
   almanacAndSatelliteHealthSIB
                                AlmanacAndSatelliteHealthSIB
   OPTIONAL,
   gps-Transmission-TOW
                                 GPS-Transmission-TOW
   OPTIONAL,
                                 ProtocolExtensionContainer { { RequestedDataValue-ExtIEs} }
   iE-Extensions
   OPTIONAL,
--at least one of the above IEs shall be present in the requested data value
RequestedDataValue-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
   optional },
}
__ *********************
-- Requested Data Value Information
__ *********************
RequestedDataValueInformation ::= CHOICE {
   informationAvailable InformationAvailable, informationNotAvailable InformationNotAvailable
}
InformationAvailable::= SEQUENCE {
  requestedDataValue RequestedDataValue,
   iE-Extensions
                      ProtocolExtensionContainer { { InformationAvailable-ExtIEs} }
   OPTIONAL,
}
InformationAvailable-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
InformationNotAvailable ::= NULL
__ *********************
-- Request Type
RequestType ::= SEQUENCE {
   event RequestTypeEvent, reportArea RequestTypeReportArea,
  horizontalaccuracyCode RequestTypeAccuracyCode
                                             OPTIONAL.
  iE-Extensions ProtocolExtensionContainer { { RequestType-ExtIEs} } OPTIONAL,
}
RequestType-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
RequestTypeEvent ::= ENUMERATED {
   stop-change-of-service-area,
   direct,
   change-of-service-area,
   stop-direct,
RequestTypeReportArea ::= ENUMERATED {
   service-area,
   geographical-area,
}
RequestTypeAccuracyCode ::= INTEGER (0..127)
__ **********************
```

```
-- Response Time
__ *********************
ResponseTime ::= ENUMERATED {
   low-delay,
   delay-tolerant,
}
__ *********************
-- Horizontal Accuracy Code
__ *******************************
                          ::= INTEGER (0..127)
HorizontalAccuracyCode
__ **********************************
-- UE Positioning Capability
__ *********************************
UE-PositioningCapability ::= SEQUENCE {
   standAloneLocationMethodsSupported BOOLEAN,
                           BOOLEAN,
NetworkAssistedGPSSuport,
   ueBasedOTDOASupported
   networkAssistedGPSSupport
   supportGPSTimingOfCellFrame BOOLEAN,
                                 BOOLEAN,
   supportForIPDL
   supportForRxTxTimeDiff
   supportForUEAGPSinCellPCH
                                BOOLEAN,
BOOLEAN,
   supportForSFNSFNTimeDiff
                                 ProtocolExtensionContainer { {UE-PositioningCapability-
   \verb"iE-Extensions"
ExtIEs} } OPTIONAL,
}
UE-PositioningCapability-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
NetworkAssistedGPSSuport ::= ENUMERATED {
  network-based.
   ue-based,
   both,
   none,
}
__ **********************************
-- UTDOA Positioning (Position Activation Request Message)
__ **********************
UTDOAPositioning ::= SEQUENCE {
   utdoa-BitCount UTDOA-BitCount, utdoa-timeInterval UTDOA-TimeInterval,
   iE-Extensions ProtocolExtensionContainer { { UTDOAPositioning-ExtIEs } } OPTIONAL,
}
UTDOAPositioning-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
}
UTDOA-BitCount ::= INTEGER (0..5000)
UTDOA-TimeInterval ::= INTEGER (0..3000)
EnvironmentCharacterisation ::= ENUMERATED { heavyMultipathandNLOSconditions,
             noOrLightMultipathAndUsuallyLOSconditions,
             notDefinedOrMixedEnvironment,
```

```
__ **********************
-- GPS Positioning (Position Activation Request Message)
__ **********************
GPSPositioning ::= SEQUENCE {
   OPTIONAL,
   . . .
GPSPositioning-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
   MOIIZUMLAIACCURACYCOde HorizontalAccuracyCode OPTIONAL, verticalAccuracyCode VerticalAccuracyCode OPTIONAL, gpsTimingOfCellWanted Additional OPTIONAL
GPSPositioningInstructions ::= SEQUENCE {
  horizontalAccuracyCode
   additionalAssistanceDataRequest BOOLEAN,
   iE-Extensions
                                ProtocolExtensionContainer { { GPSPositioningInstructions-
ExtIEs } } OPTIONAL,
}
GPSPositioningInstructions-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ *********************
-- OTDOA Assistance Data
__ **********************************
OTDOAAssistanceData ::= SEQUENCE {
   uE-Positioning-OTDOA-AssistanceData UE-Positioning-OTDOA-AssistanceData,
                                ProtocolExtensionContainer { { OTDOAAssistanceData-ExtIEs }
   iE-Extensions
} OPTIONAL,
OTDOAAssistanceData-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ ******************
-- UE Positioning OTDOA Assistance Data
__ ***********
OPTIONAL.
   ue-positioning-OTDOA-NeighbourCellList
                                              UE-Positioning-OTDOA-NeighbourCellList
      OPTIONAL,
                                 ProtocolExtensionContainer { { UE-Positioning-
   iE-Extensions
OTDOAAssistanceData-ExtIEs } } OPTIONAL,
UE-Positioning-OTDOAAssistanceData-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
UE-Positioning-OTDOA-ReferenceCellInfo ::= SEQUENCE {
                                SFN
                                                              OPTIONAL.
   modeSpecificInfo CHOICE {
                                        SEQUENCE {
       primaryCPICH-Info
                                        PrimaryScramblingCode,
      },
      tdd
                                        SEQUENCE {
      --- coding is FFS
      },
```

```
frequencyInfo
                                     FrequencyInfo
                                                                          OPTIONAL,
    positioningMode CHOICE {
       ueBased
                                               SEQUENCE {
          cellPosition
                                                  ReferenceCellPosition OPTIONAL,
           -- actual value roundTripTime = (IE value * 0.0625) + 876
                                                                            OPTIONAL.
           roundTripTime
                                               INTEGER (0..32766)
                                               SEQUENCE {
        ueAssisted
       }, ...
        . . .
    },
    ue-positioning-IPDL-Paremeters
iE-Extensions
                                              UE-Positioning-IPDL-Parameters OPTIONAL,
                                      ProtocolExtensionContainer { { UE-Positioning-
    iE-Extensions
OTDOAReferenceCellInfo-ExtIEs } } OPTIONAL,
}
UE-Positioning-OTDOAReferenceCellInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
ReferenceCellPosition ::=
                                  CHOICE {
                                   GeographicalCoordinates,
   ellipsoidPoint
   ellipsoidPointWithAltitude
                                      GA-PointWithAltitude,
}
                                          SEQUENCE {
UE-Positioning-IPDL-Parameters ::=
                                      CHOICE {
   modeSpecificInfo
                                       SEQUENCE {
       fdd
                                              IP-Spacing,
           ip-Spacing
                                               IP-Length,
           ip-Length
           ip-Offset
                                              INTEGER (0..9),
           seed
                                              INTEGER (0..63),
        },
        tdd
                                         SEQUENCE {
            -- coding is FFS
        },
                        BurstModeParameters OPTIONAL,
ProtocolExtensionContainer { { UE-Positioning-IPDL-
   burstModeParameters
   iE-Extensions
Parameters-ExtIEs } } OPTIONAL,
}
UE-Positioning-IPDL-Parameters-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
                                   ENUMERATED {
IP-Spacing ::=
                                      e5, e7, e10, e15, e20,
                                       e30, e40, e50, ... }
                                   ENUMERATED {
IP-Length ::=
                                      ipl5, ipl10, ... }
BurstModeParameters ::= burstStart
                                   SEQUENCE {
                                   INTEGER (0..15),
   burstLength
                                       INTEGER (10..25),
   burstFreq
                                      INTEGER (1..16),
                                      ProtocolExtensionContainer { { BurstModeParameters-ExtIEs }
   iE-Extensions
} OPTIONAL,
}
BurstModeParameters-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
```

```
UE-Positioning-OTDOA-NeighbourCellList ::= SEQUENCE (SIZE (1..maxCellMeas)) OF
                                              UE-Positioning-OTDOA-NeighbourCellInfo
UE-Positioning-OTDOA-NeighbourCellInfo ::= SEQUENCE {
    modeSpecificInfo CHOICE {
           primaryCPICH-Info
                                          PrimaryScramblingCode,
        },
        tdd
                                         SEQUENCE {
            -- coding is FFS
        },
    frequencyInfo
                                                                               OPTIONAL,
                                         FrequencyInfo
    ue-positioning-IPDL-Parameters UE-Positioning-IPDL-Parameters Sfn-SFN-RelTimeDifference SFN-SFN-RelTimeDifferencel,
                                                                               OPTIONAL,
    sfn-Offset-Validity
                                         SFN-Offset-Validity
                                                                               OPTIONAL,
    sfn-SFN-Drift
                                        SFN-SFN-Drift
                                                                               OPTIONAL,
   searchWindowSize
positioningMode CHOICE {
                                         OTDOA-SearchWindowSize,
        ueBased
                                                  SEQUENCE {
                                                  INTEGER (-20000..20000)
INTEGER (-20000..20000)
            relativeNorth
                                                                                       OPTIONAL,
                                                                                       OPTIONAL,
            relativeEast
                                                                                        OPTIONAL,
            relativeAltitude
                                                  INTEGER (-4000..4000)
            fineSFN-SFN
                                                  FineSFNSFN
                                                                                        OPTIONAL,
            -- actual value roundTripTime = (IE value * 0.0625) + 876
            roundTripTime
                                                  INTEGER (0.. 32766)
                                                                                       OPTIONAL,
        ueAssisted
                                                  SEQUENCE {
        },
    iE-Extensions
                                         ProtocolExtensionContainer { { UE-Positioning-
OTDOANeighbourCellInfo-ExtIEs } } OPTIONAL,
UE-Positioning-OTDOANeighbourCellInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SFN-SFN-RelTimeDifferencel ::=
                                     SEOUENCE {
                                      INTEGER (0 .. 4095),
   sfn-Offset
   sin-Offset
sfn-sfn-Reltimedifference
                                         INTEGER (0.. 38399),
                                         ProtocolExtensionContainer { { SFN-SFN-RelTimeDifference1-
    iE-Extensions
ExtIEs } } OPTIONAL,
SFN-SFN-RelTimeDifference1-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SFN-Offset-Validity ::=
                                ENUMERATED { false }
OTDOA-SearchWindowSize ::=
                                     ENUMERATED {
                                         c20, c40, c80, c160, c320,
                                          c640, c1280, moreThan1280, ... }
                                     ENUMERATED {
SFN-SFN-Drift ::=
                                         sfnsfndrift0, sfnsfndrift1, sfnsfndrift2,
                                          sfnsfndrift3, sfnsfndrift4, sfnsfndrift5,
                                          sfnsfndrift8, sfnsfndrift10, sfnsfndrift15,
                                         sfnsfndrift25, sfnsfndrift35, sfnsfndrift50,
                                          {\tt sfnsfndrift65}, \ {\tt sfnsfndrift80}, \ {\tt sfnsfndrift100},\\
                                          sfnsfndrift-1, sfnsfndrift-2, sfnsfndrift-3,
                                         sfnsfndrift-4, sfnsfndrift-5, sfnsfndrift-8,
                                          {\tt sfnsfndrift-10}\,,\,\,{\tt sfnsfndrift-15}\,,\,\,{\tt sfnsfndrift-25}\,,
                                          sfnsfndrift-35, sfnsfndrift-50, sfnsfndrift-65,
```

```
sfnsfndrift-80, sfnsfndrift-100, ...}
FineSFNSFN
             ::= INTEGER (0..15)
-- Range 0..0.9375 step size 0.0625
__ *******************
-- Vertical Accuracy Code
__ *********************************
VerticalAccuracyCode
                            ::= INTEGER (0..127)
__ *****************
-- UTDOA Group
__ ********************
UTDOA-Group ::= SEQUENCE {
                                   UC-ID,
   uC-ID
   frequencyInfo
                                   FrequencyInfo,
   uTDOA-ChannelSettings
                                   UTDOA-RRCState,
   iE-Extensions
                                  ProtocolExtensionContainer { { UTDOA-Group-ExtIEs } }
   OPTIONAL,
}
UTDOA-Group-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
                                SEQUENCE {
FrequencyInfo ::=
   modeSpecificInfo
                                   CHOICE {
       fdd
                                       FrequencyInfoFDD,
       tdd
                                       FrequencyInfoTDD,
       },
   iE-Extensions
                           ProtocolExtensionContainer { { FrequencyInfo-ExtIEs } }
   OPTIONAL,
   . . .
}
FrequencyInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
                                SEQUENCE {
FrequencyInfoFDD ::=
   uarfcn-UL
                                   UARFCN
                                                    OPTIONAL,
   uarfcn-DL
   iE-Extensions
                          ProtocolExtensionContainer { { FrequencyInfoFDD-ExtIEs } }
   OPTIONAL,
}
FrequencyInfoFDD-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
FrequencyInfoTDD ::=
                                SEQUENCE {
   uarfcn
                                   UARFCN,
   iE-Extensions ProtocolExtensionContainer { {FrequencyInfoTDD-ExtIEs} }
   OPTIONAL,
}
FrequencyInfoTDD-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
UTDOA-RRCState ::= CHOICE {
    uTDOA-CELLDCH UTDOA-CELLDCH,
```

```
uTDOA-CELLFACH UTDOA-CELLFACH,
}
__ ******************
-- UTDOA Cell DCH Information
__ **********
UTDOA-CELLDCH ::= SEQUENCE {
   uL-DPCHInfo
                                               UL-DPCHInfo,
    compressedModeAssistanceData
                                               Compressed-Mode-Assistance-Data OPTIONAL,
                                               DCH-Information OPTIONAL, E-DPCH-Information OPTIONAL,
   dCH-Information
   dCH-Information
e-DPCH-Information
    iE-Extensions
                                   ProtocolExtensionContainer { { UTDOA-CELLDCH-ExtIEs} },
}
UTDOA-CELLDCH-ExtIES PCAP-PROTOCOL-EXTENSION ::= {
                                   CHOICE {
UL-DPCHInfo ::=
                                           SEQUENCE {
                                               ScramblingCodeType,
           scramblingCodeType
           scramblingCode
                                               UL-ScramblingCode,
           tfci-Existence
                                               BOOLEAN,
           numberOfFBI-Bits NumberOfFBI-Bits,
iE-Extensions ProtocolExtensionContainer { { UL-DPCHInfoFDD-ExtIEs} },
        },
                                           SEQUENCE {
           cellParameterID
                                               CellParameterID,
           tFCI-Coding
                                               TFCI-Coding,
           punctureLimit
                                               PuncturingLimit,
           repetitionPeriod
                                              RepetitionPeriod,
                                               RepetitionLength,
           repetitionLength
           tdd-DPCHOffset
                                               TDD-DPCHOffset,
           uL-Timeslot-Information
                                             UL-Timeslot-Information,
           frameOffset
                                               FrameOffset,
           specialBurstScheduling
                                               SpecialBurstScheduling,
           iE-Extensions ProtocolExtensionContainer { { UL-DPCHInfoTDD-ExtIEs} },
       },
        . . .
UL-DPCHInfoFDD-ExtIES PCAP-PROTOCOL-EXTENSION ::= {
UL-DPCHInfoTDD-ExtIES PCAP-PROTOCOL-EXTENSION ::= {
}
Compressed-Mode-Assistance-Data ::= SEQUENCE {
           dl-information ul-information
                                           DL-InformationFDD,
                                           III.-InformationFDD.
                                           ProtocolExtensionContainer { { Compressed-Mode-
           iE-Extensions
Assistance-DataFDD-ExtIEs} },
           . . .
}
Compressed-Mode-Assistance-DataFDD-ExtIEs
                                             PCAP-PROTOCOL-EXTENSION ::= {
                                   SEQUENCE {
DL-InformationFDD ::=
           primaryScramblingCode
                                                   PrimaryScramblingCode,
           chipOffset
                                          ChipOffset,
           frameOffset
                                           FrameOffset,
           \verb|iE-Extensions| & \verb|ProtocolExtensionContainer| \{ & \verb|DL-InformationFDD-ExtIEs| \} \},
           . . .
        }
```

```
DL-InformationFDD-ExtIEs
                              PCAP-PROTOCOL-EXTENSION ::= {
}
UL-InformationFDD ::=
                                   SEQUENCE {
           transmissionGapPatternSequenceInfo
                                                       Transmission-Gap-Pattern-Sequence-
Information.
                                                        Active-Pattern-Sequence-Information,
           activePatternSequenceInfo
           cFN
                                                        CFN,
           iE-Extensions
                                          ProtocolExtensionContainer { { UL-InformationFDD-ExtIEs}
},
    }
UL-InformationFDD-ExtIEs
                              PCAP-PROTOCOL-EXTENSION ::= {
Transmission-Gap-Pattern-Sequence-Information ::= SEQUENCE (SIZE (1..maxTGPS)) OF
   SEQUENCE {
       tGPSID
                                            TGPSID.
        tGSN
                                            TGSN,
        tGL1
                                            GapLength,
        tGL2
                                            GapLength OPTIONAL,
        t GD
                                           TGD.
        tGPL1
                                           GapDuration,
        uplink-Compressed-Mode-Method
                                           Uplink-Compressed-Mode-Method,
                              ProtocolExtensionContainer { {Transmission-Gap-Pattern-Sequence-
        iE-Extensions
{\tt Information-ExtIEs}\}\ \ {\tt OPTIONAL}\,,
Transmission-Gap-Pattern-Sequence-Information-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
                   ::= INTEGER (0|15..269)
-- 0 = Undefined, only one transmission gap in the transmission gap pattern sequence
TGPRC
                   ::= INTEGER (0..511)
-- 0 = infinity
TGPSID
                   ::= INTEGER (1.. maxTGPS)
TGSN
                   ::= INTEGER (0..14)
Uplink-Compressed-Mode-Method ::= ENUMERATED {
   sFdiv2,
   higher-layer-scheduling,
}
                     ::= INTEGER (1..144,...)
GapDuration
-- Unit frame
GapLength
                       ::= INTEGER (1..14)
-- Unit slot
Active-Pattern-Sequence-Information ::= SEQUENCE {
    {\tt cMConfigurationChangeCFN}
                                                CFN.
    transmission-Gap-Pattern-Sequence-Status
                                               Transmission-Gap-Pattern-Sequence-Status-List
   OPTIONAL,
                                               ProtocolExtensionContainer { {Active-Pattern-
   iE-Extensions
Sequence-Information-ExtIEs} } OPTIONAL,
}
Active-Pattern-Sequence-Information-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
Transmission-Gap-Pattern-Sequence-Status-List ::= SEQUENCE (SIZE (1..maxTGPS)) OF
    SEQUENCE {
                           TGPSID,
        tGPRC
                            TGPRC,
        tGCFN
                            CFN,
```

```
iE-Extensions
                         ProtocolExtensionContainer { { Transmission-Gap-Pattern-Sequence-Status-
List-ExtIEs } } OPTIONAL,
}
Transmission-Gap-Pattern-Sequence-Status-List-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
DCH-Information ::=
                    SEQUENCE {
   tFCS
                                              TFCS,
   trChInfo
                                              TrChInfoList,
                                  ProtocolExtensionContainer { { DCH-Information-ExtIEs} },
   iE-Extensions
DCH-Information-ExtIEs
                         PCAP-PROTOCOL-EXTENSION ::= {
TrChInfoList ::= SEQUENCE (SIZE(1..maxTrCH)) OF
       UL-TrCHInfo
UL-TrCHInfo ::=
                 SEQUENCE {
   uL-TrCHtype
                                      UL-TrCHTvpe,
   tfs
                                      TransportFormatSet,
   iE-Extensions
                                      ProtocolExtensionContainer { { UL-TrCHInfo-ExtIEs} },
}
                     PCAP-PROTOCOL-EXTENSION ::= {
UL-TrCHInfo-ExtIEs
UL-TrCHType ::= ENUMERATED {dch, usch, ...}
E-DPCH-Information ::= SEOUENCE {
   maxSet-E-DPDCHs
                                              Max-Set-E-DPDCHs,
   ul-PunctureLimit
                                              PuncturingLimit,
   e-TFCS-Information
                                              E-TFCS-Information,
   e-TTI
                                              E-TTI.
                                                                OPTIONAL,
   e-DPCCH-PO
                                              E-DPCCH-PO
                                              ProtocolExtensionContainer { { E-DPCH-Information-
   iE-Extensions
ExtIEs} } OPTIONAL,
E-DPCH-Information-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
}
Max-Set-E-DPDCHs ::= ENUMERATED {
   vN64, vN32, vN16, vN8, v2xN4, v2xN2, v2xN2plus2xN4,
-- Values related to [16]
E-TFCS-Information ::= SEQUENCE {
   e-DCH-TFCS-Index
                                                 E-DCH-TFCS-Index,
   reference-E-TFCI-Information
                                                  Reference-E-TFCI-Information
                                                                               OPTIONAL,
                                                 ProtocolExtensionContainer { {E-TFCS-
   iE-Extensions
OPTIONAL,
E-TFCS-Information-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
E-DCH-TFCS-Index ::= INTEGER (1..4,...)
Reference-E-TFCI-Information ::= SEQUENCE (SIZE (1..maxNrOfRefETFCIs)) OF Reference-E-TFCI-
Reference-E-TFCI-Information-Item ::= SEQUENCE {
```

```
E-TFCI,
   reference-E-TFCI
   reference-E-TFCI-PO
                                  Reference-E-TFCI-PO,
                                  ProtocolExtensionContainer { { Reference-E-TFCI-Information-
   iE-Extensions
Item-ExtIEs} }
OPTIONAL,
Reference-E-TFCI-Information-Item-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
Reference-E-TFCI-PO ::= INTEGER (0.. maxNrOfRefETFCI-PO-QUANTSTEPs)
   -- FFS according to mapping in [17]
E-TFCI ::= INTEGER (0..127)
E-TTI ::= ENUMERATED {
   e-TTI-2ms,
   e-TTI-10ms,
}
E-DPCCH-PO ::= INTEGER (0..maxNrOfEDPCCH-PO-QUANTSTEPs)
CellParameterID ::= INTEGER (0..127,...)
TFCI-Coding ::= ENUMERATED {
   v4,
   v8,
   v16.
   v32,
   . . .
}
RepetitionLength ::= INTEGER (1..63)
RepetitionPeriod ::= ENUMERATED {
   v1,
   v2.
   v4,
   v8,
   v16.
   v32,
   v64,
   . . .
}
TDD-DPCHOffset ::= CHOICE {
   initialOffset INTEGER (0..255),
noinitialOffset INTEGER (0..63)
}
UL-Timeslot-Information ::= SEQUENCE (SIZE (1..maxNrOfULTSs)) OF UL-Timeslot-InformationItem
maxNrOfULTSs
                         INTEGER ::= 15
{\tt UL-Timeslot-InformationItem} \; ::= \; {\tt SEQUENCE} \; \; \{ \;
   timeSlot
                                          TimeSlot,
   midambleShiftAndBurstType
                                          MidambleShiftAndBurstType,
   tFCI-Presence
                                          BOOLEAN,
   uL-Code-InformationList
                                          TDD-UL-Code-Information.
                                          ProtocolExtensionContainer { { UL-Timeslot-
   iE-Extensions
InformationItem-ExtIEs} }
OPTIONAL,
UL-Timeslot-InformationItem-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
TimeSlot ::= INTEGER (0..14)
MidambleShiftAndBurstType ::=
                                 CHOICE {
                                      SEQUENCE {
       midambleAllocationMode CHOICE {
           defaultMidamble
                                              NULL,
           commonMidamble
                                              NULL,
```

```
ueSpecificMidamble
                                             MidambleShiftLong,
       },
   type2
                                     SEQUENCE {
       \verb| midamble| Configuration BurstType2| Midamble| Configuration BurstType2|,
       midambleAllocationMode
                                         CHOICE {
          defaultMidamble
                                             NULL
           {\tt commonMidamble}
                                             NULL,
           ueSpecificMidamble
                                             MidambleShiftShort,
       },
       . . .
   },
   type3
                                     SEQUENCE {
       midambleAllocationMode CHOICE {
          defaultMidamble
           ueSpecificMidamble
                                             MidambleShiftLong,
       },
       . . .
   },
}
MidambleShiftLong ::=
                                 INTEGER (0..15)
MidambleShiftShort ::=
                                 INTEGER (0..5)
\label{eq:midambleConfigurationBurstTypelAnd3} ::= \qquad \texttt{ENUMERATED} \ \{ v4 \,, \ v8 \,, \ v16 \}
MidambleConfigurationBurstType2 ::= ENUMERATED {v3, v6}
TDD-UL-Code-Information ::= SEQUENCE (SIZE (1..maxNrOfDPCHs)) OF TDD-UL-Code-InformationItem
maxNrOfDPCHs
                          INTEGER ::= 240
TDD-UL-Code-InformationItem ::= SEQUENCE {
   tdd-ChannelisationCode
                                          TDD-ChannelisationCode,
                                         ProtocolExtensionContainer { { TDD-UL-Code-
   iE-Extensions
}
TDD-UL-Code-InformationItem-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
TDD-ChannelisationCode ::= ENUMERATED {
   chCodeldiv1.
   chCode2div1,
   chCode2div2,
   chCode4div1,
   chCode4div2,
   chCode4div3,
   chCode4div4,
   chCode8div1,
   chCode8div2.
   chCode8div3,
   chCode8div4,
   chCode8div5,
   chCode8div6,
   chCode8div7,
   chCode8div8,
   chCode16div1,
   chCode16div2,
   chCode16div3,
   chCode16div4,
   chCode16div5,
   chCode16div6,
   chCode16div7.
   chCodel6div8,
   chCode16div9,
   chCode16div10,
   chCode16div11,
   chCode16div12,
```

```
chCode16div13,
   chCode16div14,
   chCode16div15,
   chCode16div16,
}
SpecialBurstScheduling ::= INTEGER (1..256) -- Number of frames between special burst transmission
__ *******************
-- UTDOA Cell Fach Information
__ ******************
UTDOA-CELLFACH ::= SEQUENCE {
  pRACHparameters
                                            PRACHparameters,
                                            C-RNTI,
                                                                   OPTIONAL,
   uschParameters
                                            UschParameters
   \verb|iE-Extensions| & ProtocolExtensionContainer { ( UTDOA-CELLFACH-ExtIEs) }, \\
}
{\tt UTDOA-CELLFACH-ExtIEs} \qquad \qquad {\tt PCAP-PROTOCOL-EXTENSION} \; ::= \; \big\{
PRACHparameters ::= SEQUENCE (SIZE (1..maxPRACH)) OF
   PRACH-ChannelInfo
PRACH-ChannelInfo ::= SEQUENCE {
   pRACH-Info
                               PRACH-Info.
    tFS
                               TransportFormatSet,
    tFCS
                               TFCS,
   iE-Extensions ProtocolExtensionContainer { { PRACH-ChannelInfo-ExtIEs} },
}
PRACH-ChannelInfo-ExtIEs
                              PCAP-PROTOCOL-EXTENSION ::= {
                                    CHOICE {
PRACH-Info ::=
                                    SEQUENCE {
       fdd
                                       AvailableSignatures,
           availableSignatures
           availableSF
                                               SF-PRACH,
           preambleScramblingCodeWordNumber puncturingLimit PuncturingLimit, availableSubChannelNumbers AvailableSubChannelNumbers,
           iE-Extensions ProtocolExtensionContainer { { PRACH-Info-FDD-ExtIEs} },
        },
        tdd
                                      SEQUENCE {
                   timeSlot
                                                           TimeSlot,
           tdd-ChannelisationCode
                                                   TDD-ChannelisationCode,
           maxPRACH-MidambleShifts
                                                   MaxPRACH-MidambleShifts,
           pRACH-Midamble
                                                   PRACH-Midamble,
           iE-Extensions ProtocolExtensionContainer { { PRACH-Info-TDD-ExtIEs} },
        },
}
PRACH-Info-FDD-ExtIEs
                          PCAP-PROTOCOL-EXTENSION ::= {
PRACH-Info-TDD-ExtIEs
                          PCAP-PROTOCOL-EXTENSION ::= {
                                    ENUMERATED {
SF-PRACH ::=
                                       sfpr32, sfpr64, sfpr128, sfpr256, ... }
```

```
AvailableSignatures ::=
                                  BIT STRING {
                                       signature15(0),
                                       signature14(1),
                                       signature13(2),
                                       signature12(3),
                                       signature11(4),
                                       signature10(5),
                                       signature9(6),
                                       signature8(7),
                                       signature7(8),
                                       signature6(9),
                                       signature5(10),
                                       signature4(11),
                                       signature3(12),
                                       signature2(13),
                                       signature1(14),
                                       signature0(15)
                                        }
                                            (SIZE(16))
PreambleScramblingCodeWordNumber ::=
                                          INTEGER (0..15)
PuncturingLimit ::=
                         INTEGER (0..15)
-- 0: 40%; 1: 44%; ... 14: 96%; 15: 100%
AvailableSubChannelNumbers ::=
                                       BIT STRING {
                                            subCh11(0),
                                            subCh10(1),
                                            subCh9(2),
                                            subCh8(3),
                                            subCh7(4),
                                            subCh6(5),
                                            subCh5(6),
                                            subCh4(7),
                                            subCh3(8),
                                            subCh2(9),
                                            subCh1(10),
                                            subCh0(11)
                                            }
                                                (SIZE(12))
                                       ENUMERATED {
ScramblingCodeType ::=
                                            shortSC,
                                            longSC }
UL-ScramblingCode ::=
                                       INTEGER (0..16777215)
                                       INTEGER (0..2)
NumberOfFBI-Bits ::=
                                                        SEQUENCE {
TransportFormatSet ::=
                       TransportFormatSet-DynamicPartList,
TransportFormatSet-Semi-staticPart,
   dynamicPart
    semi-staticPart
    iE-Extensions
                             ProtocolExtensionContainer { { TransportFormatSet-ExtIEs} }
    OPTIONAL,
    . . .
}
TransportFormatSet-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
 \texttt{TransportFormatSet-DynamicPartList} \ ::= \ \texttt{SEQUENCE} \ (\texttt{SIZE} \ (\texttt{1..maxNrOfTFs})) \ \texttt{OF} 
   SEQUENCE {
        rlc-Size RLC-Size,
numberOfTbsTTIList SEQUENCE (SIZE (1..maxNrOfTFs)) OF TbsTTIInfo,
iE-Extensions ProtocolExtensionContainer { { TransportFormatSet-
DynamicPartList-ExtIEs} } OPTIONAL,
TransportFormatSet-DynamicPartList-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
TbsTTIInfo ::= SEQUENCE {
                          TransportFormatSet-TransmissionTimeIntervalDynamic
                          TransportFormatSet-NrOfTransportBlocks,
    numberOfTbs
                          ProtocolExtensionContainer { { TbsTTIInfo-ExtIEs} },
    iE-Extensions
```

```
}
TbsTTIInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
RLC-Size ::= INTEGER (129..5055)
TransportFormatSet-NrOfTransportBlocks ::= INTEGER (0..512)
TransportFormatSet-Semi-staticPart ::= SEQUENCE {
   transmissionTimeInterval
                                    TransportFormatSet-TransmissionTimeIntervalSemiStatic,
    channelCoding
                                   TransportFormatSet-ChannelCodingType,
                                    TransportFormatSet-CodingRate
                                                                                 OPTIONAL.
   codingRate
    -- This IE shall be present if the Type of channel coding IE is set to 'convolutional' or
   rbo'
rateMatchingAttribute
                                    TransportFormatSet-RateMatchingAttribute,
                                    TransportFormatSet-CRC-Size,
                                    ProtocolExtensionContainer { { TransportFormatSet-Semi-
    iE-Extensions
staticPart-ExtIEs} } OPTIONAL,
}
{\tt TransportFormatSet-Semi-staticPart-ExtIEs} \ \ {\tt PCAP-PROTOCOL-EXTENSION} \ ::= \ \big\{
TransportFormatSet-TransmissionTimeIntervalSemiStatic ::= ENUMERATED {
   msec-5,
   msec-10,
   msec-20,
   msec-40,
   msec-80,
   dynamic,
    . . .
}
TransportFormatSet-ChannelCodingType ::= ENUMERATED {
   no-codingTDD.
    convolutional-coding,
    turbo-coding,
    . . .
}
TransportFormatSet-CodingRate ::= ENUMERATED {
    third,
}
TransportFormatSet-RateMatchingAttribute ::= INTEGER (1..maxRateMatching)
TransportFormatSet-CRC-Size ::= ENUMERATED {
   v0,
    v8,
   v12,
   v16.
   v24,
    . . .
}
TransportFormatSet-TransmissionTimeIntervalDynamic ::= ENUMERATED {
   msec-10,
   msec-20,
   msec-40,
   msec-80,
   dynamic,
}
TFCS ::=
               SEQUENCE (SIZE (1..maxTFC)) OF CTFC
CTFC ::=
                                CHOICE {
```

```
ctfc2Bit
                                      SEQUENCE (SIZE (1..maxTFC)) OF INTEGER (0..3),
                                      SEQUENCE (SIZE (1..maxTFC)) OF INTEGER (0..15),
      ctfc4Bit
                                      SEQUENCE (SIZE (1..maxTFC)) OF INTEGER (0..63),
      ctfc6Bit
                                      SEQUENCE (SIZE (1..maxTFC)) OF INTEGER (0..255),
      ctfc8Bit
      ctfc12Bit
                                      SEQUENCE (SIZE (1..maxTFC)) OF INTEGER (0..4095),
      ctfc16Bit
                                      SEQUENCE (SIZE (1..maxTFC)) OF INTEGER (0..65535),
                                      SEQUENCE (SIZE (1..maxTFC)) OF INTEGER (0..16777215),
      ctfc24Bit
C-RNTI ::=
                              BIT STRING (SIZE (16))
UARFCN ::=
                          INTEGER (0..16383)
CFN ::= INTEGER (0..255)
ChipOffset ::= INTEGER (0..38399)
-- Unit Chip
FrameOffset ::= INTEGER (0..255)
PrimaryScramblingCode ::= INTEGER (0..511)
UschParameters ::= SEQUENCE {
  cellParameterID
                                  CellParameterID,
   tFCI-Coding
                                  TFCI-Coding,
  punctureLimit
                                  PuncturingLimit,
   repetitionPeriod
                                 RepetitionPeriod,
   uSCH-SchedulingOffset
                                  USCH-SchedulingOffset,
                                  UL-Timeslot-Information,
   uL-Timeslot-Information
   tFCS
                                  TFCS,
                                  TrChInfoList,
   trChInfo
   iE-Extensions ProtocolExtensionContainer { { UschParameters-ExtIEs} } ,
}
USCH-SchedulingOffset ::= INTEGER (0..255)
MaxPRACH-MidambleShifts ::= ENUMERATED {
  shift4.
   shift8,
}
PRACH-Midamble ::= ENUMERATED {
  inverted,
   direct,
   . . .
}
__*************
-- Positioning Response Time
__*************
                                     ENUMERATED { ms250, ms500, s1, s2, s3, s4, s6,
Positioning-ResponseTime ::=
                          s8, s12, s16, s20, s24, s28, s32, s64,
                           . . .
                         }
__ *********************************
-- Include Velocity
__ *****************
requested
```

```
__ *********************
-- VelocityEstimate
__ *********************************
-- VelocityEstimate is based on Description of Velocity in 23.032
VelocityEstimate ::= CHOICE {
        horizontalVelocity
                                                                                                          Horizontal Velocity,
       horizontalWithVority
                                                                                                          HorizontalWithVerticalVelocity,
                                                                                                         HorizontalVelocityWithUncertainty,
       horizontal \verb|WithVeritcalVelocity| And \verb|Uncertainty| \\ Horizontal \verb|WithVerticalVelocity| And \verb|Uncertainty|, \\ Horizontal \verb|WithVerticalVelocity| And Uncertainty|, \\ Horizontal \verb|WithVerticalVelocity| 
}
HorizontalVelocity ::= SEQUENCE {
       horizontalSpeedAndBearing
                                                                          HorizontalSpeedAndBearing,
        iE-Extensions ProtocolExtensionContainer { { HorizontalVelocity-ExtIEs} } OPTIONAL,
HorizontalVelocity-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
HorizontalWithVerticalVelocity ::= SEQUENCE {
       horizontalSpeedAndBearing
                                                                                                           HorizontalSpeedAndBearing,
        veritcalVelocity
                                                                                                                   VerticalVelocity,
                                              ProtocolExtensionContainer { { HorizontalWithVerticalVelocity-ExtIEs} }
        iE-Extensions
OPTIONAL,
}
HorizontalWithVerticalVelocity-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
\label{thm:contalvelocityWithUncertainty} \mbox{ ::= SEQUENCE } \{
        horizontalSpeedAndBearing
                                                                                                           HorizontalSpeedAndBearing,
        uncertaintySpeed
                                                                                                                   INTEGER (0..255),
        iE-Extensions
                                                ProtocolExtensionContainer { { HorizontalVelocityWithUncertainty-ExtIEs} }
OPTIONAL.
HorizontalVelocityWithUncertainty-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
HorizontalWithVerticalVelocityAndUncertainty ::= SEQUENCE {
       horizontalSpeedAndBearing
                                                                                                           HorizontalSpeedAndBearing,
        veritcalVelocity
                                                                                                            VerticalVelocity,
       horizontalUncertaintySpeed
                                                                                                           INTEGER (0..255),
       verticalUncertaintySpeed
                                                                                                                   INTEGER (0..255),
                                                ProtocolExtensionContainer { { HorizontalWithVerticalVelocityAndUncertainty-
        iE-Extensions
ExtIEs } OPTIONAL,
HorizontalWithVerticalVelocityAndUncertainty-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
}
HorizontalSpeedAndBearing ::= SEQUENCE {
        bearing
                                                                                                           INTEGER (0..359),
       horizontalSpeed
                                                                                                           INTEGER (0..2047)
}
VerticalVelocity ::= SEQUENCE {
       veritcalSpeed
                                                                                                          INTEGER (0..255),
        veritcalSpeedDirection
                                                                                                           VerticalSpeedDirection
}
```

```
VerticalSpeedDirection ::= ENUMERATED {
   upward,
   downward
}
__************
-- UTRAN-GPS Reference Time
__************
UTRAN-GPSReferenceTime ::= SEQUENCE {
  utran-GPSTimingOfCell
                                    INTEGER (0..2322431999999, ...),
                                                                    OPTIONAL,
   uC-ID
                                   UC-ID
                                   INTEGER (0..4095),
   sfn
                                   ProtocolExtensionContainer { { UTRAN-GPSReferenceTime-ExtIEs
   iE-Extensions
} } OPTIONAL,
}
UTRAN-GPSReferenceTime-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
}
__*************
-- UTRAN-GPS Reference Time Result
UTRAN-GPSReferenceTimeResult ::= SEQUENCE {
   ue-GPSTimingOfCell INTEGER (0..37158911999999, ...),
uC-ID UC-ID,
                           INTEGER (0..4095),
ProtocolExtensionContainer { { UTRAN-GPSReferenceTimeResult-ExtIEs }
   sfn
   iE-Extensions
} OPTIONAL,
}
UTRAN-GPSReferenceTimeResult-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
END
```

9.3.5 Common Definitions

```
__ *********************************
-- Common definitions
__ *****************
PCAP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ **********************
-- Extension constants
__ *********************************
maxPrivateIEs
                                     INTEGER ::= 65535
maxProtocolExtensions
                                     INTEGER ::= 65535
maxProtocolIEs
                                     INTEGER ::= 65535
```

```
__ *********************
-- Common Data Types
__ *********************
Criticality ::= ENUMERATED { reject, ignore, notify }
             ::= ENUMERATED { optional, conditional, mandatory }
Presence
\texttt{PrivateIE-ID} \qquad ::= \texttt{CHOICE} \ \big\{
         INTEGER (0..65535),
  local
                    OBJECT IDENTIFIER
   global
}
ProcedureCode
                ::= INTEGER (0..255)
                ::= INTEGER (0..maxProtocolIEs)
ProtocolIE-ID
TransactionID
                ::= CHOICE {
  shortTID
longTID
                    INTEGER (0..127),
   longTID
                    INTEGER (0..32767)
TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome,
outcome }
```

9.3.6 Constant Definitions

```
__ ********************************
-- Constant definitions
__ **********************************
PCAP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-Constants (4) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
  ProcedureCode.
  ProtocolIE-ID
FROM PCAP-CommonDataTypes;
__ *********************************
-- Elementary Procedures
id-InformationReporting
                           ProcedureCode ::= 3
id-InformationExchangeTermination ProcedureCode ::= 4
id-InformationExchangeFailure ProcedureCode ::= 5
ProcedureCode ::= 5
id-ErrorIndication
                           ProcedureCode ::= 6
                           ProcedureCode ::= 7
id-privateMessage
id-PositionActivation
                           ProcedureCode ::= 10
id-Abort
                           ProcedureCode ::= 11
__ *********************************
-- Lists
```

```
__ ***********************************
maxNrOfErrors
                                        INTEGER ::= 256
maxSat
                                        INTEGER ::= 16
                                       INTEGER ::= 32
maxSatAlmanac
                                      INTEGER ::= 256
INTEGER ::= 15
maxNrOfLevels
maxNrOfPoints
                                      INTEGER ::= 32
INTEGER ::= 32
maxNrOfExpInfo
maxNrOfMeasNCell
                                       INTEGER ::= 16
maxNrOfMeasurements
                                      INTEGER ::= 3

INTEGER ::= 256

INTEGER ::= 32
maxNrOfSets
maxRateMatching
maxNrOfTFs
maxTTI-count
                                       INTEGER ::= 4
                                       INTEGER ::= 13
maxTS-1
                                       INTEGER ::= 8
INTEGER ::= 32
maxCCTrCH
maxTF
                                       INTEGER ::= 1024
maxTFC
maxPRACH
                                        INTEGER ::= 16
                                       INTEGER ::= 32
maxTrCH
                                      INTEGER ::= 6
INTEGER ::= 16
INTEGER ::= 32
maxTGPS
maxNoOfMeasurements
maxCellMeas
maxNrOfEDPCCH-PO-QUANTSTEPS INTEGER ::= 8
maxNrOfRefETFCI-PO-QUANTSTEPS INTEGER ::= 8
                                                         -- FFS
                                                        -- FFS
maxNrOfRefETFCIs
                                       INTEGER ::= 8
maxSet
                                        INTEGER ::= 9
__ *********************
-- IEs
__ *********************************
id-Cause
                                                     ProtocolIE-ID ::= 1
id-CriticalityDiagnostics
                                                     ProtocolIE-ID ::= 2
                                                     ProtocolIE-ID ::= 3
id-GPS-UTRAN-TRU
id-InformationExchangeID
                                                    ProtocolIE-ID ::= 4
id-InformationExchangeObjectType-InfEx-Rprt
id-InformationExchangeObjectType-InfEx-Rprt
id-InformationExchangeObjectType-InfEx-Rqst
id-InformationExchangeObjectType-InfEx-Rsp
ProtocolIE-ID ::= 5
ProtocolIE-ID ::= 5
ProtocolIE-ID ::= 5
ProtocolIE-ID ::= 6
ProtocolIE-ID ::= 7
ProtocolIE-ID ::= 8
id-InformationReportCharacteristics
                                                     ProtocolIE-ID ::= 8
id-InformationType
                                                    ProtocolIE-ID ::= 9
id-GPS-MeasuredResultsList
                                                     ProtocolIE-ID ::= 10
                                                    ProtocolIE-ID ::= 11
id-MethodType
                                                   ProtocolIE-ID ::= 12
ProtocolIE-ID ::= 13
id-RefPosition-InfEx-Rqst
id-RefPosition-InfEx-Rsp
                                                   ProtocolIE-ID ::= 14
id-RefPosition-Inf-Rprt
id-RequestedDataValue
                                                   ProtocolIE-ID ::= 15
ProtocolIE-ID ::= 16
id-RequestedDataValueInformation
id-TransactionID
                                                   ProtocolIE-ID ::= 17
                                                     ProtocolIE-ID ::= 18
id-UE-PositionEstimate
                                                    ProtocolIE-ID ::= 20
id-CellId-MeasuredResultsSets
                                                   ProtocolIE-ID ::= 22
ProtocolIE-ID ::= 23
id-OTDOA-MeasurementGroup
id-AccuracyFulfilmentIndicator
                                                   ProtocolIE-ID ::= 24
id-HorizontalAccuracyCode
id-VerticalAccuracyCode
                                                     ProtocolIE-ID ::= 25
                                                     ProtocolIE-ID ::= 26
id-UTDOA-Group
                                                    ProtocolIE-ID ::= 28
id-RequestType
id-UE-PositioningCapability
                                                     ProtocolIE-ID ::= 29
                                                    ProtocolIE-ID ::= 30
id-UC-id
id-ResponseTime
                                                     ProtocolIE-ID ::= 31
                                                     ProtocolIE-ID ::= 32
id-PositioningPriority
id-ClientType
                                                     ProtocolIE-ID ::= 33
                                                     ProtocolIE-ID ::= 34
\verb"id-PositioningMethod"
id-UTDOAPositioning
                                                     ProtocolIE-ID ::= 35
                                                     ProtocolIE-ID ::= 36
id-GPSPositioning
                                                     ProtocolIE-ID ::= 37
id-OTDOAAssistanceData
id-Positioning-ResponseTime
                                                    ProtocolIE-ID ::= 38
id-EnvironmentCharacterisation
                                                     ProtocolIE-ID ::= 39
                                                    ProtocolIE-ID ::= 40
id-PositionData
id-IncludeVelocity
                                                     ProtocolIE-ID ::= 41
id-VelocityEstimate
                                                     ProtocolIE-ID ::= 42
id-rxTimingDeviation768Info
                                                    ProtocolIE-ID ::= 43
id-UC-ID-InfEx-Rast
                                                     ProtocolIE-ID ::= 44
                                                     ProtocolIE-ID ::= 45
id-UE-PositionEstimateInfo
```

```
id-UTRAN-GPSReferenceTime
id-UTRAN-GPSReferenceTimeResult
id-UTRAN-GPS-DriftRate
id-OTDOA-AddMeasuredResultsInfo
id-GPS-ReferenceLocation
id-OTDOA-MeasuredResultsSets
id-rxTimingDeviation384extInfo
ProtocolIE-ID ::= 49
ProtocolIE-ID ::= 50
ProtocolIE-ID ::= 51
ProtocolIE-ID ::= 55
```

END

9.3.7 Container Definitions

```
__ **********************************
-- Container definitions
__ **********************
PCAP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-Containers (5) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ **********************
-- IE parameter types from other modules.
__ *******************
IMPORTS
  Criticality,
  Presence,
  PrivateIE-ID,
  ProtocolIE-ID,
  maxPrivateIEs.
  maxProtocolExtensions,
  maxProtocolIEs
FROM PCAP-CommonDataTypes;
__ *********************
-- Class Definition for Protocol IEs
__ **********************************
PCAP-PROTOCOL-IES ::= CLASS {
              ProtocolIE-ID UNIQUE,
Criticality,
  &id
   &criticality
   &Value,
                Presence
  &presence
WITH SYNTAX {
               &id
&criticality
  ID
  CRITICALITY
  TYPE
                 &Value
  PRESENCE
                 &presence
}
__ *********************
-- Class Definition for Protocol Extensions
__ *******************
PCAP-PROTOCOL-EXTENSION ::= CLASS {
           ProtocolIE-ID UNIQUE,
  ьiд
  &criticality
                Criticality,
   &Extension,
  &presence
                 Presence
WITH SYNTAX {
  ID
                  &id
```

```
CRITICALITY &criticality EXTENSION &Extension
   PRESENCE
                   &presence
}
-- Class Definition for Private IEs
__ **********************
PCAP-PRIVATE-IES ::= CLASS {
   &id PrivateIE-ID, &criticality,
   &Value,
                   Presence
   &presence
WITH SYNTAX {
   CRITICALITY
                   &criticality
   TYPE
                    &Value
   PRESENCE
                   &presence
-- Container for Protocol IEs
__ *****************
ProtocolIE-Container {PCAP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
      ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Single-Container {PCAP-PROTOCOL-IES : IEsSetParam} ::=
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {PCAP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
   id PCAP-PROTOCOL-IES.&id criticality PCAP-PROTOCOL-IES.&criticality
                                                   ({IEsSetParam}),
                                                   ({IEsSetParam}{@id}),
   value
                    PCAP-PROTOCOL-IES.&Value
                                                   ({IEsSetParam}{@id})
}
__ *******************
-- Container Lists for Protocol IE Containers
__ *********************
ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, PCAP-PROTOCOL-IES :
IEsSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
      ProtocolIE-Container {{IEsSetParam}}
__ *********************
-- Container for Protocol Extensions
__ ***********************************
ProtocolExtensionContainer {PCAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
   SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
      ProtocolExtensionField {{ExtensionSetParam}}
ProtocolExtensionField {PCAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
   id PCAP-PROTOCOL-EXTENSION.&id criticality PCAP-PROTOCOL-EXTENSION.&criticality extensionValue PCAP-PROTOCOL-EXTENSION.&Extension
                                                  ({ExtensionSetParam}),
                                                       ({ExtensionSetParam}{@id}),
                                                     ({ExtensionSetParam}{@id})
}
__ *********************
-- Container for Private IEs
__ **********************************
PrivateIE-Container {PCAP-PRIVATE-IES : IEsSetParam } ::=
    SEQUENCE (SIZE (1.. maxPrivateIEs)) OF
```

9.4 Message Transfer Syntax

PCAP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in [9].

Handling of Unknown, Unforeseen and Erroneous Protocol Data

10.1 General

Protocol Error cases can be divided into three classes:

- Transfer Syntax Error.
- Abstract Syntax Error.
- Logical Error.

Protocol errors can occur in the following functions within a receiving node.

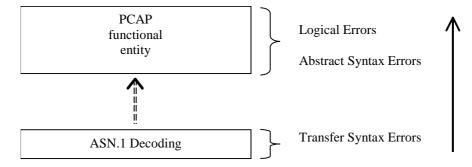


Figure 10: Protocol Errors in PCAP

The information stated in subclauses 10.2, 10.3 and 10.4, to be included in the message used when reporting an error, is what at minimum shall be included. Other optional information elements within the message may also be included, if available. This is also valid for the case when the reporting is done with a response message. The latter is an exception to what is stated in subclause 4.1.

10.2 Transfer Syntax Error

A Transfer Syntax Error occurs when the receiver is not able to decode the received physical message. Transfer syntax errors are always detected in the process of ASN.1 decoding. If a Transfer Syntax Error occurs, the receiver should initiate Error Indication procedure with appropriate cause value for the Transfer Syntax protocol error.

Examples for Transfer Syntax Errors are:

- Violation of value ranges in ASN.1 definition of messages. e.g.: If an IE has a defined value range of 0 to 10 (ASN.1: INTEGER (0..10)), and 12 will be received, then this will be treated as a transfer syntax error.

- Violation in list element constraints. e.g.: If a list is defined as containing 1 to 10 elements, and 12 elements will be received, than this case will be handled as a transfer syntax error.
- Missing mandatory elements in ASN.1 SEQUENCE definitions (as sent by the originator of the message).
- Wrong order of elements in ASN.1 SEQUENCE definitions (as sent by the originator of the message).

10.3 Abstract Syntax Error

10.3.1 General

An Abstract Syntax Error occurs when the receiving functional PCAP entity:

- 1) receives IEs or IE groups that cannot be understood (unknown IE id);
- 2) receives IEs for which the logical range is violated (e.g.: ASN.1 definition: 0 to 15, the logical range is 0 to 10 (values 11 to 15 are undefined), and 12 will be received; this case will be handled as an abstract syntax error using criticality information sent by the originator of the message);
- 3) does not receive IEs or IE groups but according to the specified presence of the concerning object, the IEs or IE groups should have been present in the received message;
- 4) receives IEs or IE groups that are defined to be part of that message in wrong order or with too many occurrences of the same IE or IE group;
- 5) receives IEs or IE groups but according to the conditional presence of the concerning object and the specified condition, the IEs or IE groups should not have been present in the received message.

Cases 1 and 2 (not comprehended IE/IE group) are handled based on received Criticality information. Case 3 (missing IE/IE group) is handled based on Criticality information and Presence information for the missing IE/IE group specified in the version of the specification used by the receiver. Case 4 (IEs or IE groups in wrong order or with too many occurrences) and Case 5 (erroneously present conditional IEs or IE groups) result in rejecting the procedure.

If an Abstract Syntax Error occurs, the receiver shall read the remaining message and shall then for each detected Abstract Syntax Error that belong to cases 1-3 act according to the Criticality Information and Presence Information for the IE/IE group due to which Abstract Syntax Error occurred in accordance with subclauses 10.3.4 and 10.3.5. The handling of cases 4 and 5 is specified in subclause 10.3.6.

10.3.2 Criticality Information

In the PCAP messages there is criticality information set for individual IEs and/or IE groups. This criticality information instructs the receiver how to act when receiving an IE or an IE group that is not comprehended, i.e. the entire item (IE or IE group) which is not (fully or partially) comprehended shall be treated in accordance with its own criticality information as specified in subclause 10.3.4.

In addition, the criticality information is used in case of the missing IE/IE group abstract syntax error (see subclause 10.3.5).

The receiving node shall take different actions depending on the value of the Criticality Information. The three possible values of the Criticality Information for an IE/IE group are:

- Reject IE.
- Ignore IE and Notify Sender.
- Ignore IE.

The following rules restrict when a receiving entity may consider an IE, an IE group, or an EP not comprehended (not implemented), and when action based on criticality information is applicable:

1. IE or IE group: When one new or modified IE or IE group is implemented for one EP from a standard version, then other new or modified IEs or IE groups specified for that EP in that standard version shall be considered comprehended by a receiving entity (some may still remain unsupported).

2. EP: The comprehension of different EPs within a standard version or between different standard versions is not mandated. Any EP that is not supported may be considered not comprehended, even if another EP from that standard version is comprehended, and action based on criticality shall be applied.

10.3.3 Presence Information

For many IEs/IE groups which are optional according to the ASN.1 transfer syntax, PCAP specifies separately if the presence of these IEs/IE groups is optional or mandatory with respect to RNS application by means of the presence field of the concerning object of class PCAP-PROTOCOL-IES, PCAP -PROTOCOL-IES-PAIR, PCAP -PROTOCOL-EXTENSION or PCAP -PRIVATE-IES.

The presence field of the indicated classes supports three values:

- 1. Optional;
- 2. Conditional;
- 3. Mandatory.

If an IE/IE group is not included in a received message and the presence of the IE/IE group is mandatory or the presence is conditional and the condition is true according to the version of the specification used by the receiver, an abstract syntax error occurs due to a missing IE/IE group.

If an IE/IE group is included in a received message and the presence of the IE/IE group is conditional and the condition is false according to the version of the specification used by the receiver, an abstract syntax error occurs due to this erroneously present conditional IE/IE group.

10.3.4 Not comprehended IE/IE group

10.3.4.1 Procedure Code

The receiving node shall treat the different types of received criticality information of the *Procedure Code* IE according to the following:

Reject IE:

- If a message is received with a *Procedure Code* IE marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall reject the procedure using the Error Indication procedure.

Ignore IE and Notify Sender:

- If a message is received with a *Procedure Code* IE marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the procedure and initiate the Error Indication procedure.

Ignore IE:

- If a message is received with a *Procedure Code* IE marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the procedure.

When using the Error Indication procedure to reject a procedure or to report an ignored procedure it shall include the *Procedure Code* IE, the *Triggering Message* IE, and the *Procedure Criticality* IE in the *Criticality Diagnostics* IE.

10.3.4.1A Type of Message

When the receiving node cannot decode the *Type of Message* IE, the Error Indication procedure shall be initiated with an appropriate cause value.

10.3.4.2 IEs other than the Procedure Code and Type of Message

The receiving node shall treat the different types of received criticality information of an IE/IE group other than the *Procedure Code* IE and *Type of Message* IE according to the following:

Reject IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the rejection of one or more IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall terminate the procedure and initiate the Error Indication procedure.
- If a response message is received containing one or more IEs/IE groups marked with "Reject IE", that the
 receiving node does not comprehend, the receiving node shall consider the procedure as unsuccessfully
 terminated and initiate local error handling.

Ignore IE and Notify Sender:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and report in the response message of the procedure that one or more IEs/IE groups have been ignored. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report the outcome of the procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and initiate the Error Indication procedure to report that one or more IEs/IE groups have been ignored.
- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups and initiate the Error Indication procedure.

Ignore IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups and continue with the procedure as if the not comprehended IEs/IE groups were not received using the understood IEs/IE groups.
- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups.

When reporting not comprehended IEs/IE groups marked with "Reject IE" or "Ignore IE and Notify Sender" using a response message defined for the procedure, the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group. The Repetition Number IE shall be included in the Information Element Criticality Diagnostics IE if the reported IE/IE group was part of a "SEQUENCE OF" definition.

When reporting not comprehended IEs/IE groups marked with "Reject IE" or "Ignore IE and Notify Sender" using the Error Indication procedure, the Procedure Code IE, the Triggering Message IE, Procedure Criticality IE, the Transaction Id IE, and the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group. The Repetition Number IE shall be included in the Information Element Criticality Diagnostics IE if the reported IE/IE group was part of a "SEQUENCE OF" definition.

10.3.5 Missing IE or IE group

The receiving node shall treat the missing IE/IE group according to the criticality information for the missing IE/IE group in the received message specified in the version of the present document used by the receiver:

Reject IE:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "Reject IE"; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the missing IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a received message *initiating* a procedure that does not have a message to report unsuccessful outcome is missing one or more IEs/IE groups with specified criticality "*Reject IE*", the receiving node shall initiate the Error Indication procedure.
- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Reject IE*, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and report in the response message of the procedure that one or more IEs/IE groups were missing. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a received message *initiating* a procedure that does not have a message to report the outcome of the procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.
- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.

Ignore IE:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message.
- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs/IE groups are missing.

When reporting missing IEs/IE groups with specified criticality "Reject IE" or "Ignore IE and Notify Sender" using a response message defined for the procedure, the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group.

When reporting missing IEs/IE groups with specified criticality "Reject IE" or "Ignore IE and Notify Sender" using the Error Indication procedure, the Procedure Code IE, the Triggering Message IE, Procedure Criticality IE, the Transaction Id IE, and the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group.

10.3.6 IEs or IE groups received in wrong order or with too many occurrences or erroneously present

If a message with IEs or IE groups in wrong order or with too many occurrences is received or if IEs or IE groups with a conditional presence are present when the condition is not met (i.e. erroneously present), the receiving node shall behave according to the following:

- If a message *initiating* a procedure is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the cause value "Abstract Syntax Error (Falsely Constructed Message)" using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication.
- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall terminate the procedure and initiate the Error Indication procedure, and use cause value "Abstract Syntax Error (Falsely Constructed Message)".
- If a *response* message is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

10.4 Logical Error

Logical error situations occur when a message is comprehended correctly, but the information contained within the message is not valid (i.e. semantic error), or describes a procedure which is not compatible with the state of the receiver. In these conditions, the following behaviour shall be performed (unless otherwise specified) as defined by the class of the elementary procedure, irrespective of the criticality of the IEs/IE groups containing the erroneous values.

Class 1:

Protocol Causes:

Where the logical error occurs in a request message of a class 1 procedure, and the procedure has a message to report this unsuccessful outcome, this message shall be sent with an appropriate cause value. Typical cause values are:

- 1. Semantic Error.
- 2. Message not compatible with receiver state.

Where the logical error is contained in a request message of a class 1 procedure, and the procedure does not have a message to report this unsuccessful outcome, the procedure shall be terminated and the Error Indication procedure shall be initiated with an appropriate cause value.

Where the logical error exists in a response message of a class 1 procedure, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.

Class 2:

Where the logical error occurs in a message of a class 2 procedure, the procedure shall be terminated and the Error Indication procedure shall be initiated with an appropriate cause value.

10.5 Exceptions

The error handling for all the cases described hereafter shall take precedence over any other error handling described in the other subclauses of clause 10.

 If any type of error (Transfer Syntax Error, Abstract Syntax Error or Logical Error) is detected in the ERROR INDICATION message, it shall not trigger the Error Indication procedure in the receiving Node but local error handling.

- In case a response message or Error Indication message needs to be returned, but the information necessary to determine the receiver of that message is missing, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.
- If an error that terminates a procedure occurs, the returned cause value shall reflect the error that caused the termination of the procedure even if one or more abstract syntax errors with criticality 'ignore and notify' have earlier occurred within the same procedure.

Annex A (informative): Guidelines for Usage of the Criticality Diagnostics IE

A.1 EXAMPLE MESSAGE Layout

Assume the following message format:

Table A.1

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M				YES	Reject
Transaction ID	M				_	
Α	M				YES	reject
В	M				YES	reject
>E		1 <maxe></maxe>			EACH	ignore
>>F		1 <maxf></maxf>			-	
>>>G		03,			EACH	ignore
>>H		1 <maxh></maxh>			EACH	ignore
>>>G		03,			EACH	ignore and notify
>>G	M				YES	reject
>>J		1 <maxj></maxj>			-	
>>>G		03,			EACH	reject
С	M				YES	reject
>K		1 <maxk></maxk>			EACH	ignore and notify
>>L		1 <maxl></maxl>			-	
>>>M	0				-	
D	М				YES	reject

NOTE: The IEs F, J, and L do not have assigned criticality. The IEs F, J, and L are consequently realised as the ASN.1 type SEQUENCE OF of "ordinary" ASN.1 type, e.g. INTEGER. On the other hand, the repeatable IEs with assigned criticality are realised as the ASN.1 type SEQUENCE OF of an IE object, e.g. ProtocolIE-Single-Container.

For the corresponding ASN.1 layout, see clause A.4.

A.2 Example on a Received EXAMPLE MESSAGE

Assume further more that a received message based on the above tabular format is according to figure A₂1.


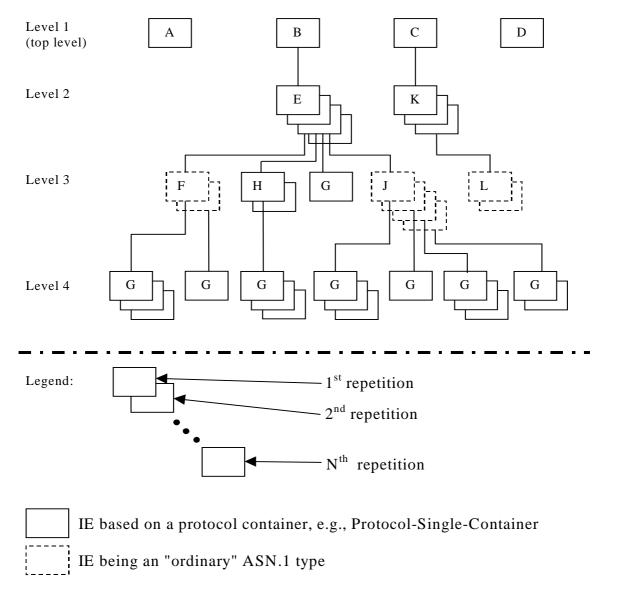


Figure A.1: Example of content of a received PCAP message based on the EXAMPLE MESSAGE

A.3 Content of Criticality Diagnostics

A.3.1 Example 1

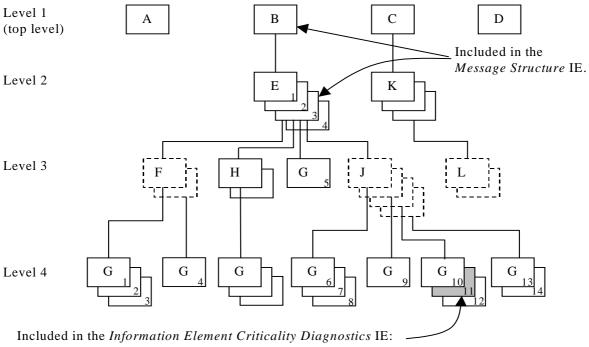

- a) IE ID IE
- b) Repetition Number IE

Figure A.2: Example of a received PCAP message containing a not comprehended IE

If there is an error within the instance marked as grey in the IE G in the IE J shown in the figure A.2, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IEas in table A.2.


Table A.2

IE name	Value	Comment	
IE Criticality	Reject	Criticality for IE on the reported level, i.e. level 4.	
IE ID	id-G	IE ID from the reported level, i.e. level 4.	
Repetition	11	Repetition number on the reported level, i.e. level 4.	
Number		(Since the IE E (level 2) is the lowest level included in the Message Structure	
		IE this is the eleventh occurrence of IE G within the IE E (level 2).	
Type of Error	not		
	underst		
	ood		
Message Structur	e, first repe	etition	
>IE ID	id-B	IE ID from level 1.	
Message Structur	Message Structure, second repetition		
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.	
>Repetition	3	Repetition number from the lowest level above the reported level, i.e. level 2.	
Number			

NOTE 1: The IE J on level 3 cannot be included in the *Message Structure* IE since they have no criticality of their own.

NOTE 2: The repetition number of the reported IE indicates the number of repetitions of IE G received up to the detected erroneous repetition, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

A.3.2 Example 2

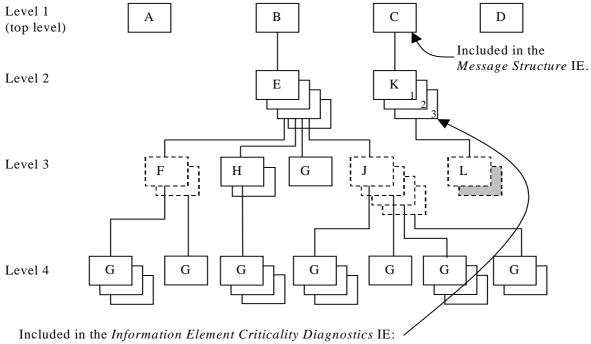

- a) IE ID IE
- b) Repetition Number IE

Figure A.3: Example of a received PCAP message containing a not comprehended IE


If there is an error within the second instance (marked as grey) in the sequence (IE L in the tabular format) on level 3 below IE K in the structure shown in the figure A.3, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IEas in table A.3.

Table A.3

IE name	Value	Comment	
IE Criticality	ignore	Criticality for IE on the reported level, i.e. level 2.	
	and		
	notify		
IE ID	id-K	IE ID from the reported level, i.e. level 2.	
Repetition	3	Repetition number on the reported level, i.e. level 2.	
Number			
Type of Error	not		
	underst		
	ood		
Message Structur	Message Structure, first repetition		
>IE ID	id-C	IE ID from the lowest level above the reported level, i.e. level 1.	

NOTE: The IE L on level 3 cannot be reported individually included in the *Message Structure* IE since it has no criticality of its own.

A.3.3 Example 3

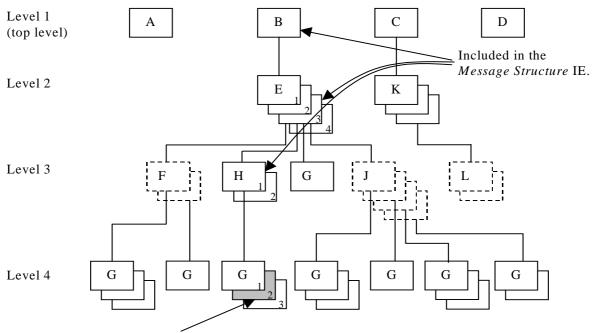

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE

Figure A.4: Example of a received PCAP message containing a not comprehended IE


If there is an error within the instance marked as grey in the IE G in the IE H shown in the figure A.4, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IEas in table A.4.

Table A.4

IE name	Value	Comment
IE Criticality	ignore and notify	Criticality for IE on the reported level, i.e. level 4.
IE ID	id-G	IE ID from the reported level, i.e. level 4.
Repetition Number	2	Repetition number on the reported level, i.e. level 4.
Type of Error	not underst ood	
Message Structur	e, first rep	etition
>IE ID	id-B	IE ID from level 1.
Message Structur	e, second	repetition
>IE ID	id-E	IE ID from level 2.
>Repetition Number	3	Repetition number from level 2.
Message Structure, third repetition		
>IE ID	id-H	IE ID from the lowest level above the reported level, i.e. level 3.
>Repetition Number	1	Repetition number from the lowest level above the reported level, i.e. level 3.

NOTE: The repetition number of level 4 indicates the number of repetitions of IE G received up to the detected erroneous repetition, counted below the same instance of the previous level with assigned criticality (instance 1 of IE H on level 3).

A.3.4 Example 4

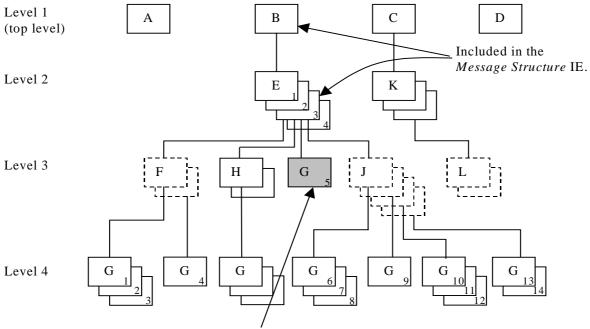

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE

Figure A.5: Example of a received PCAP message containing a not comprehended IE


If there is an error within the instance marked as grey in the IE G in the IE E shown in the figure A.5, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE, as in table A.5.

Table A.5

IE name	Value	Comment	
IE Criticality	Reject	Criticality for IE on the reported level, i.e. level 3.	
IE ID	id-G	IE ID from the reported level, i.e. level 3.	
Repetition	5	Repetition number on the reported level, i.e. level 3.	
Number		(Since the IE E (level 2) is the lowest level included in the Message Structure	
		IE this is the fifth occurrence of IE G within the IE E (level 2).	
Type of Error	not		
	underst		
	ood		
Message Structur	Message Structure, first repetition		
>IE ID	id-B	IE ID from level 1.	
Message Structur	Message Structure, second repetition		
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.	
>Repetition	3	Repetition number from the lowest level above the reported level, i.e. level 2.	
Number			

NOTE: The repetition number of the reported IE indicates the number of repetitions of IE G received up to the detected erroneous repetition, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

A.3.5 Example 5

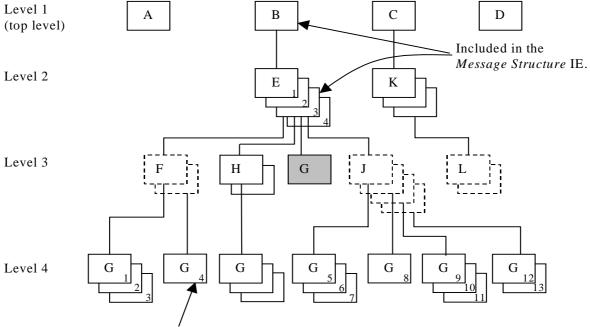

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE

Figure A.6: Example of a received PCAP message with a missing IE

If the instance marked as grey in the IE G in the IE E shown in the figure A.6, is missing this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE, as in table A.6.

Table A.6

IE name	Value	Comment	
IE Criticality	reject	Criticality for IE on the reported level, i.e. level 3.	
IE ID	id-G	IE ID from the reported level, i.e. level 3.	
Repetition Number	4	Repetition number up to the missing IE on the reported level, i.e. level 3. (Since the IE E (level 2) is the lowest level included in the <i>Message Structure</i> IE there have been four occurrences of IE G within the IE E (level 2) up to the missing occurrence.	
Type of Error	missing		
Message Structur	Message Structure, first repetition		
>IE ID	id-B	IE ID from level 1.	
Message Structur	e, second	repetition	
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.	
>Repetition Number	3	Repetition number from the lowest level above the reported level, i.e. level 2.	

NOTE: The repetition number of the reported IE indicates the number of repetitions of IE G received up to but not including the missing occurrence, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

A.4 ASN.1 of EXAMPLE MESSAGE

```
ExampleMessage ::= SEQUENCE {
                        ProtocolIE-Container
                                                     {{ExampleMessage-IEs}},
    ProtocolIEs
    ProtocolExtensions ProtocolExtensionContainer {{ExampleMessage-Extensions}}
                                                                                    OPTIONAL.
ExampleMessage-IEs PCAP-PROTOCOL-IES ::= {
    { ID id-A CRITICALITY reject TYPE A PRESENCE mandatory} { ID id-B CRITICALITY reject TYPE B PRESENCE mandatory}
    { ID id-C CRITICALITY reject TYPE C PRESENCE mandatory} | 
{ ID id-D CRITICALITY reject TYPE D PRESENCE mandatory} ,
B ::= SEQUENCE {
                   E-List,
    iE-Extensions ProtocolExtensionContainer { {B-ExtIEs} } OPTIONAL,
}
B-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
E-List ::= SEQUENCE (SIZE (1..maxE)) OF ProtocolIE-Single-Container { {E-IEs} }
E-IES PCAP-PROTOCOL-IES ::= {
    { ID id-E CRITICALITY ignore TYPE E PRESENCE mandatory }
E ::= SEQUENCE {
                    F-List,
   h
                    H-List.
                    G-List1
    g
                    J-List,
    iE-Extensions ProtocolExtensionContainer { {E-ExtIEs} } OPTIONAL,
}
E-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
F-List ::= SEQUENCE (SIZE (1..maxF)) OF F
F ::= SEQUENCE {
                    G-List2 OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { {F-ExtIEs} } OPTIONAL,
F-ExtIEs
         PCAP-PROTOCOL-EXTENSION ::= {
G-List2 ::= SEQUENCE (SIZE (1..3, ...)) OF ProtocolIE-Single-Container { {G2-IEs} }
G2-IES PCAP-PROTOCOL-IES ::= {
    H-List ::= SEQUENCE (SIZE (1..maxH)) OF ProtocolIE-Single-Container { {H-IEs} }
H-IES PCAP-PROTOCOL-IES ::= {
    { ID id-H CRITICALITY ignore TYPE H PRESENCE mandatory }
H ::= SEQUENCE {
                    G-List3 OPTIONAL,
                                    ProtocolExtensionContainer { {H-ExtIEs} } OPTIONAL,
    iE-Extensions
}
H-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
}
G-List3 ::= SEQUENCE (SIZE (1..3, ...)) OF ProtocolIE-Single-Container { {G3-IEs} }
G3-IES PCAP-PROTOCOL-IES ::= {
  { ID id-G CRITICALITY notify TYPE G PRESENCE mandatory }
G-List1 ::= ProtocolIE-Single-Container { G1-IEs} }
G1-IES PCAP-PROTOCOL-IES ::= {
   { ID id-G CRITICALITY reject TYPE G PRESENCE mandatory }
J-List ::= SEQUENCE (SIZE (1..maxJ)) OF J
J ::= SEQUENCE {
                    G-List4 OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { {J-ExtIEs} } OPTIONAL,
}
J-ExtIES PCAP-PROTOCOL-EXTENSION ::= {
 \texttt{G-List4} ::= \texttt{SEQUENCE} \ (\texttt{SIZE} \ (1...3, \ \ldots)) \ \texttt{OF} \ \texttt{ProtocolIE-Single-Container} \ \left\{ \ \texttt{G4-IEs} \ \right\} \ 
G4-IES PCAP-PROTOCOL-IES ::= {
   { ID id-G CRITICALITY reject TYPE G PRESENCE mandatory }
C ::= SEQUENCE {
                    K-List.
    iE-Extensions ProtocolExtensionContainer { {C-ExtIEs} } OPTIONAL,
}
C-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
K-List ::= SEQUENCE (SIZE (1..maxK)) OF ProtocolIE-Single-Container { {K-IEs} }
K-IES PCAP-PROTOCOL-IES ::= {
   { ID id-K CRITICALITY notify TYPE K PRESENCE mandatory }
K ::= SEQUENCE {
                    L-List,
    iE-Extensions ProtocolExtensionContainer { {K-ExtIEs} } OPTIONAL,
K-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
L-List ::= SEQUENCE (SIZE (1..maxL)) OF L
L ::= SEQUENCE {
                    M OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { {L-ExtIEs} } OPTIONAL,
L-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
ExampleMessage-Extensions PCAP-PROTOCOL-EXTENSION ::= {
```

Annex B (informative): Change history

_	1			_	Change history		1
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
06/2001	12	RP-010402			Approved at TSG RAN #12 and placed under Change Control	-	5.0.0
09/2001	13	RP-010603		1	Correction to the Error handling of the ERROR INDICATION message	5.0.0	5.1.0
09/2001	13	RP-010603			Proposed CR to 25.453 on Semantics Description of C/No		5.1.0
09/2001	13	RP-010603	004		Proposed CR to 25.453 on Clause 10		5.1.0
09/2001	13	RP-010603	005	1	Error handling of the Erroneously Present Conditional les	5.0.0	5.1.0
09/2001	13	RP-010603		1	Clarification of chapter 10	5.0.0	5.1.0
09/2001	13	RP-010603			PCAP Criticality	5.0.0	5.1.0
12/2001	14	RP-010875		1	Bitstrings ordering	5.1.0	5.2.0
12/2001	14	RP-010875		1	Reference corrections	5.1.0	5.2.0
12/2001	14	RP-010875		1	Clarification for the definition of the ASN.1 constants	5.1.0	5.2.0
12/2001	14	RP-010875		1	Procedure Code Criticality in Error Indication	5.1.0	5.2.0
12/2001	14	RP-010875		2	Addition of amendment to clarify the PER encoding of bitstrings	5.1.0	5.2.0
12/2001	14	RP-010875		1	Clarification of the Transaction ID	5.1.0	5.2.0
12/2001	14	RP-010875	015		Correction the Clause 10 Error Handling	5.1.0	5.2.0
-3/2002	15	RP-020211			Modification on the Object Identifier	5.2.0	5.3.0
06/2002	16	RP-020432	017	2	Criticality Information Decoding Failure Handling	5.3.0	5.4.0
06/2002	16	RP-020432		1	Clarification for the usage of the cause value	5.3.0	5.4.0
03/2003	19	RP-030065			CR on GPS Almanac and Satellite Health	5.4.0	5.5.0
03/2003	19	RP-030065			CR on GPS Measured Results	5.4.0	5.5.0
03/2003	19	RP-030067			Alignment of 'Uncertainty Ellipse' with RRC	5.4.0	5.5.0
03/2003	19	RP-030070			Correction for the Information Exchange Initiation procedure	5.4.0	5.5.0
03/2003	19	RP-030084	022	2	CR on revising the position calculation function and definition of SAS to support all REL-4 UE positioning methods	5.5.0	6.0.0
06/2003	20	RP-030324		1	Alignment of the Requested Data Value Information IE description	6.0.0.	6.1.0
06/2003	20	RP-030325			GPS trigger condition	6.0.0.	6.1.0
06/2003	20	RP-030341			Position Calculation Extension for TDD	6.0.0.	6.1.0
06/2003	20	RP-030322	037	1	'On Modification' and 'Periodic' reporting alignment for Information Exchange procedures	6.0.0.	6.1.0
06/2003	20	RP-030322	044		CR on Criticality Aspects	6.0.0.	6.1.0
06/2003	20	RP-030322	045		CR on Information Exchange Initiation Request for GPS Navigation Model	6.0.0.	6.1.0
06/2003	20	RP-030322	046		CR on DGPS Parameters	6.0.0.	6.1.0
06/2003	20	RP-030322	047		CR on Removal of Information Exchange Object Type	6.0.0.	6.1.0
06/2003	20	RP-030322			CR on Information Report of GPS Almanac and Satellite Health	6.0.0.	6.1.0
06/2003	20	RP-030326			Correction of Failure message used for logical errors	6.0.0.	6.1.0
09/2003	21	RP-030442	052		Correction to an incorrect implementation in the Requested Data Value Information IE	6.1.0	6.2.0
09/2003	21	RP-030445			Alignment of title and sub-clause text of chapter 10.3.4.2	6.1.0	6.2.0
09/2003	21	RP-030446			Removal of the note in chapter 10	6.1.0	6.2.0
09/2003	21	RP-030454			Improvement of position calculation with pathloss	6.1.0	6.2.0
12/2003	22	RP-030697			Improvement of position calculation through set enlargement	6.2.0	6.3.0
12/2003	22	RP-030683			Information Exchange Initiation behavior correction	6.2.0	6.3.0
03/2004	23	RP-040053			Alignment with 23.032 correction of Included Angle for Ellipsoid Arc	6.3.0	6.4.0
03/2004	23	RP-040075			Initial UE Position IE only mandatory necessary for GPS	6.3.0	6.4.0
03/2004	23	RP-040072		4	PCAP Review Correction to usage of INITIAL UE POSITION	6.3.0	6.4.0
06/2004 09/2004	25	RP-040184 RP-040306		1	Introduction of the requested accuracy and an indication of	6.4.0 6.5.0	6.5.0 6.6.0
09/2004	25	KF-040300	074	1	achieved accuracy in Position Calculation procedure over lupc interface	6.5.0	6.6.0
12/2004	26	RP-040441	076		outdated ITU-T reference	6.6.0	6.7.0
03/2005	27	RP-050055		1	Corrections to descriptions of GPS Almanac and Ephemeris fields	6.7.0	6.8.0
06/2005	28	RP-050217		2	Correction of deletion of Information Exchange Context	6.8.0	6.9.0
09/2005	29	RP-050441		1	Addition of the U-TDOA positioning method to the UTRAN	6.9.0	7.0.0
12/2005	30	RP-050705		2	Addition of TDD aspects of the U-TDOA positioning method	7.0.0	7.1.0
12/2005	30	RP-050701			PCAP Review	7.0.0	7.1.0
12/2005	30	RP-050706			Wording Alignment for Procedure Text	7.0.0	7.1.0
03/2006	31	RP-060072		10	Enabling the Providing of Velocity	7.1.0	7.2.0
03/2006	31	RP-060071	089	1	Completion of SAS-centric mode	7.1.0	7.2.0
03/2006	31	RP-060073	090	1	Introduction of 7.68Mcps TDD option	7.1.0	7.2.0
06/2006	32	RP-060290		2	Release 7 Timing Advance (3.84 Mpcs and 7.68 Mcps TDD)	7.2.0	7.3.0
06/2006	32	RP-060386	094	1	Correction of positioning confidence reporting inconsistencies	7.2.0	7.3.0

History

Document history				
V7.1.0	December 2005	Publication		
V7.2.0	March 2006	Publication		
V7.3.0	June 2006	Publication		