
ETSI TS 125 453 V6.9.0 (2005-06)

Technical Specification

Universal Mobile Telecommunications System (UMTS); UTRAN lupc interface Positioning Calculation Application Part (PCAP) signalling (3GPP TS 25.453 version 6.9.0 Release 6)

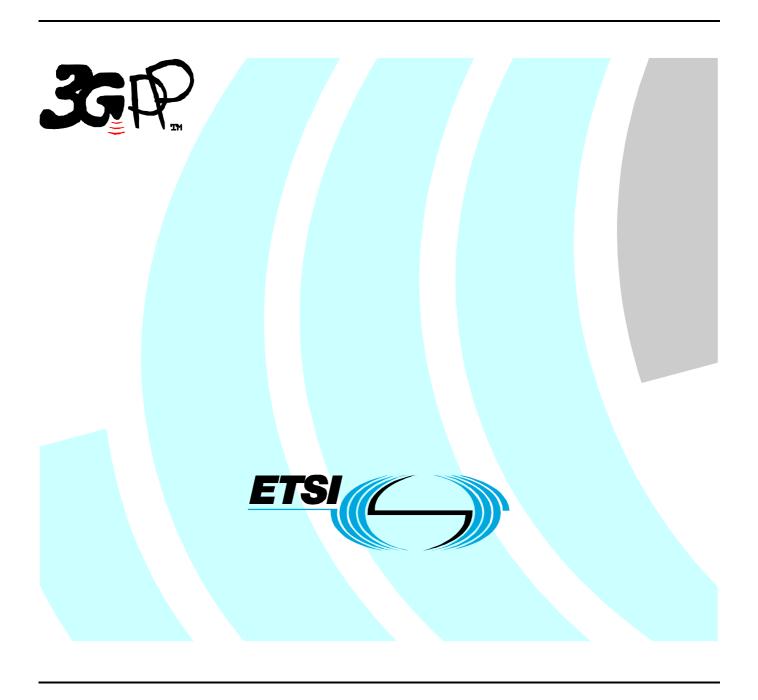

Reference
RTS/TSGR-0325453v690

Keywords

UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, please send your comment to one of the following services: http://portal.etsi.org/chaircor/ETSI_support.asp

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2005. All rights reserved.

DECTTM, **PLUGTESTS**TM and **UMTS**TM are Trade Marks of ETSI registered for the benefit of its Members. **TIPHON**TM and the **TIPHON logo** are Trade Marks currently being registered by ETSI for the benefit of its Members. **3GPP**TM is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Contents

Intelle	ectual Property Rights	2
Forew	/ord	2
Forew	/ord	6
1	Scope	7
2	References	7
3	Definitions and abbreviations	8
3.1 3.2	Definitions	
	General	
4 4.1	Procedure Specification Principles	
4.2	Forwards and Backwards Compatibility	
4.3	Specification Notations	9
5	PCAP Services	10
6	Services Expected from Signalling Transport	10
7	Functions of PCAP	10
8	PCAP Procedures	11
8.1	Elementary Procedures	
8.2	Position Calculation	
8.2.1	General	
8.2.2	Successful Operation	11
8.2.3	Unsuccessful Operation	12
8.2.4	Abnormal Conditions	12
8.3	Information Exchange Initiation	13
8.3.1	General	13
8.3.2	Successful Operation	13
8.3.3	Unsuccessful Operation	15
8.3.4	Abnormal Conditions	15
8.4	Information Reporting	
8.4.1	General	
8.4.2	Successful Operation	
8.4.3	Abnormal Conditions	
8.5	Information Exchange Termination	
8.5.1	General	
8.5.2	Successful Operation	
8.5.3	Abnormal Conditions.	
8.6	Information Exchange Failure	
8.6.1	General General	
8.6.2	Successful Operation	
8.7	Error Indication	
8.7.1	General Second 1 Octobrilla	
8.7.2	Successful Operation	
8.7.3	Abnormal Conditions	
	Elements for PCAP Communication	
9.1	Message Functional Definition and Content	
9.1.1	General	
9.1.2	Message Contents	
9.1.2.1	Presence	19
9.1.2.2	Criticality	19
9.1.2.3	Range	19
9.1.2.4		

9.1.3	POSITION CALCULATION REQUEST	
9.1.4	POSITION CALCULATION RESPONSE	21
9.1.5	POSITION CALCULATION FAILURE	
9.1.6	INFORMATION EXCHANGE INITIATION REQUEST	21
9.1.7	INFORMATION EXCHANGE INITIATION RESPONSE	
9.1.8	INFORMATION EXCHANGE INITIATION FAILURE	
9.1.9	INFORMATION REPORT	
9.1.10	INFORMATION EXCHANGE TERMINATION REQUEST	
9.1.10	INFORMATION EXCHANGE FAILURE INDICATION	
9.1.11	ERROR INDICATION	
	Information Element Functional Definitions and Contents	
9.2		
9.2.1	General	
9.2.2	Radio Network Layer Related IEs	
9.2.2.1	Almanac and Satellite Health SIB	
9.2.2.2	Altitude and direction	
9.2.2.3	Cause	
9.2.2.4	Criticality Diagnostics	
9.2.2.5	DGPS Corrections	29
9.2.2.6	Geographical Area	30
9.2.2.7	Geographical Coordinates	32
9.2.2.8	GPS Acquisition Assistance	32
9.2.2.9	GPS Almanac and Satellite Health	
9.2.2.10	GPS Clock and Ephemeris Parameters	34
9.2.2.11	GPS Ionospheric Model	
9.2.2.12	GPS Measured Results	
9.2.2.13	GPS Navigation Model	
9.2.2.14	GPS Real Time Integrity	
9.2.2.15	GPS Reference Time	
9.2.2.16	GPS Transmission TOW	
9.2.2.10	GPS UTC Model	
9.2.2.18	GPS-UTRAN Time Relationship Uncertainty	
9.2.2.19	Information Exchange ID	
9.2.2.20	Information Exchange Object Type	
9.2.2.21	Information Report Characteristics	
9.2.2.22	Information Type	
9.2.2.23	Message Structure	
9.2.2.24	Message Type	
9.2.2.25	Method Type	
9.2.2.26	Requested Data Value	
9.2.2.27	Requested Data Value Information	44
9.2.2.28	Transaction ID	44
9.2.2.29	Transmission TOW Indicator	45
9.2.2.30	Uncertainty Ellipse	45
9.2.2.31	Cell-ID Measured Results Info List	45
9.2.2.32	OTDOA Measured Results Info List	46
9.2.2.33	OTDOA Neighbour Cell Info	48
9.2.2.34	OTDOA Reference Cell Info	
9.2.2.35	UE Positioning Measurement Quality	
9.2.2.36	UTRAN Access Point Position with Altitude	
9.2.2.37	UTRAN Cell Identifier (UC-ID)	
9.2.2.38	Horizontal Accuracy Code	
9.2.2.39	Vertical Accuracy Code	
9.2.2.40	Accuracy Fulfilment Indicator	
9.2.2. 4 0 9.3	Message and Information Element Abstract Syntax (with ASN.1)	
9.3.0	General	
9.3.0 9.3.1	Usage of private message mechanism for non-standard use	
	• •	
9.3.2	Elementary Procedure Definitions	
9.3.3	PDU Definitions	
9.3.4	Information Element Definitions	
9.3.5	Common Definitions.	
9.3.6	Constant Definitions	
937	Container Definitions	80

9.4	Message Transfer Syntax	82
10	Handling of Unknown, Unforeseen and Erroneous Protocol Data	83
10.1	General	
10.2	Transfer Syntax Error	83
10.3	Abstract Syntax Error	83
10.3.1	General	83
10.3.2	Criticality Information	84
10.3.3	Presence Information	84
10.3.4	Not comprehended IE/IE group	85
10.3.4	.1 Procedure Code	85
10.3.4	.1A Type of Message	85
10.3.4	.2 IEs other than the Procedure Code and Type of Message	85
10.3.5		
10.3.6	IEs or IE groups received in wrong order or with too many occurrences or erroneously present	87
10.4	Logical Error	
10.5	Exceptions	88
Anne	x A (informative): Guidelines for Usage of the Criticality Diagnostics IE	89
A.1	EXAMPLE MESSAGE Layout	
A.2	Example on a Received EXAMPLE MESSAGE	
A.3	Content of Criticality Diagnostics	
		91
A.3.1	Example 1	
A.3.1 A.3.2	Example 1	91
	· · ·	91 92
A.3.2 A.3.3	Example 1Example 2	91 92 93
A.3.2 A.3.3	Example 1 Example 2 Example 3	91 92 93
A.3.2 A.3.3 A.3.4	Example 1 Example 2 Example 3 Example 4	91 92 93 94
A.3.2 A.3.3 A.3.4 A.3.5 A.4	Example 1 Example 2 Example 3 Example 4 Example 5	91 92 93 94 95

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the *Positioning Calculation Application Part (PCAP)* between the Radio Network Controller (RNC) and the Stand-Alone SMLC (SAS). It fulfills the RNC-SAS communication requirements specified in [6] and thus defines the Iupc interface and its associated signaling procedures.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

[1]	3GPP TS 25.450: "UTRAN Iupc interface general aspects and principles".
[2]	3GPP TS 25.451: "UTRAN Iupc interface layer 1".
[3]	3GPP TS 25.452: "UTRAN Iupc interface signalling transport".
[4]	3GPP TS 25.331: "Radio Resource Control (RRC) Protocol Specification".
[5]	3GPP TS 25.401: "UTRAN Overall Description".
[6]	3GPP TS 25.305: "Stage 2 functional specification of UE positioning in UTRAN".
[7]	$ITU-T\ Recommendation\ X.680\ (07/2002):\ "Information\ technology\ -\ Abstract\ Syntax\ Notation\ One\ (ASN.1):\ Specification\ of\ basic\ notation".$
[8]	ITU-T Recommendation X.681 07/2002): "Information technology - Abstract Syntax Notation One (ASN.1): Information object specification".
[9]	ITU-T Recommendation X.691 (07/2002): "Information technology - ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)".
[10]	ICD-GPS-200: (12 April 2000) "Navstar GPS Space Segment/Navigation User Interface".
[11]	3GPP TS 23.032: "Universal Geographical Area Description (GAD)".
[12]	3GPP TR 25.921: "Guidelines and principles for protocol description and error handling".
[13]	3GPP TS 25.133: "Requirements for support of Radio Resource management (FDD)".
[14]	3GPP TS 25.123: "Requirements for support of Radio Resource management (TDD)".

3 Definitions and abbreviations

3.1 **Definitions**

For the purposes of the present document, the following terms and definitions apply:

Stand-Alone SMLC (SAS): logical node that interconnects to the RNC over the Iupc interface via the PCAP protocol An SAS performs the following procedures:

- provide GPS related data to the RNC;
- performs the position calculation function based upon UE Positioning measurement data.

Elementary Procedure: PCAP consists of Elementary Procedures (EPs)

An Elementary Procedure is a unit of interaction between the RNC and the SAS. An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- **Class 1:** Elementary Procedures with response (success or failure).
- Class 2: Elementary Procedures without response.

For Class 1 EPs, the types of responses can be as follows:

Successful:

A signalling message explicitly indicates that the elementary procedure successfully completed with the receipt of the response.

Unsuccessful:

RRC

SAS

- A signalling message explicitly indicates that the EP failed.

Class 2 EPs are considered always successful.

Information Exchange Context: Information Exchange Context is created by the first Information Exchange Initiation Procedure initiated by the RNC and requested from the SAS

The Information Exchange Context is deleted after the Information Exchange Termination or the Information Exchange Failure procedure when there is no more Information Exchange to be provided by the RNC to the SAS. The Information Exchange Context is identified by an SCCP connection as, for Information Exchanges, only the connection oriented mode of the signalling bearer is used.

3.2 **Abbreviations**

For the purposes of the present document, the following abbreviations apply:

A-GPS Assisted GPS ASN.1 Abstract Syntax Notation One Core Network CN Controlling RNC **CRNC** Differential GPS **DGPS** EP Elementary Procedure **FDD** Frequency Division Duplex Global Positioning System **GPS** Mobile services Switching Center **MSC** Observed Time Difference Of Arrival **OTDOA PCAP** Positioning Calculation Application Part **PRC** Pseudorange Correction **RNC** Radio Network Controller Radio Network Subsystem **RNS**

Stand-Alone SMLC Signalling Connection Control Part **SCCP**

Radio Resource Control

SIB System Information Block
SMLC Serving Mobile Location Center

SRNC Serving RNC SRNS Serving RNS

TDD Time Division Duplex

TOW Time of Week UE User Equipment

UTRAN Universal Terrestrial Radio Access Network

4 General

4.1 Procedure Specification Principles

The principle for specifying the procedure logic is to specify the functional behaviour of the SAS exactly and completely. The RNC functional behaviour is left unspecified.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:
 - 1) Functionality which "shall" be executed:
 - The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.
 - 2) Functionality which "shall, if supported" be executed:
 - The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.
- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the
 procedure text does not explicitly indicate that an optional IE shall be included in a response message, the
 optional IE shall not be included.

4.2 Forwards and Backwards Compatibility

The forwards and backwards compatibility of the protocol is assured by mechanism where all current and future messages, and IEs or groups of related IEs, include Id and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification Notations

For the purposes of the present document, the following notations apply:

Procedure When referring to an elementary procedure in the specification the Procedure Name is written with

the first letters in each word in upper case characters followed by the word "procedure", e.g.

Position Calculation procedure.

Message When referring to a message in the specification the MESSAGE NAME is written with all letters

in upper case characters followed by the word "message", e.g. POSITION CALCULATION

REQUEST message.

IE When referring to an information element (IE) in the specification the *Information Element Name*

is written with the first letters in each word in upper case characters and all letters in Italic font

followed by the abbreviation "IE", e.g. Request Type IE.

Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in clause 9.2 enclosed by quotation marks, e.g. "Abstract Syntax Error (Reject)" or "Geographical Coordinates".

5 PCAP Services

PCAP provides the signalling services between RNC and SAS that are required to fulfill the PCAP functions described in clause 7. PCAP services are categorized as follows:

- 1. Position Calculation Service: They are related to a single UE and involve the transfer of UE Positioning measurement data and UE position estimate data over the Iupc interface between the SRNC and the SAS. They utilise connectionless signalling transport provided by the Iupc signalling bearer.
- 2. Information Exchange Service: They involve the transfer of GPS related data over the Iupc interface between the RNC and the SAS on demand, on modification, or at regular intervals. They utilise connection-oriented signalling transport provided by the Iupc signalling bearer.

6 Services Expected from Signalling Transport

Signalling transport [3] shall provide the following service for the PCAP.

- Connection oriented data transfer service. This service is supported by a signalling connection between the RNC and the SAS. It shall be possible to dynamically establish and release signalling connections based on the need. Each point-to-point operation shall have its own signalling connection. The signalling connection shall provide in sequence delivery of PCAP messages. PCAP shall be notified if the signalling connection breaks.
- 2. Connectionless data transfer service. PCAP shall be notified in case a PCAP message did not reach the intended peer PCAP entity.

7 Functions of PCAP

PCAP has the following functions:

- Position Calculation. This function enables the SRNC to interact with an SAS in the process of performing a position estimate of a UE.
- Information Exchange. This function enables the RNC to obtain GPS related data from an SAS.
- Reporting of General Error Situations. This function allows reporting of general error situations for which function specific error messages have not been defined.

The mapping between the above functions and PCAP elementary procedures is shown in the table 1.

Table 1: Mapping between functions and PCAP elementary procedures

Function		Elementary Procedure(s)
Position Calculation	a)	Position Calculation
Information Exchange	a)	Information Exchange Initiation
	b)	Information Reporting
	c)	Information Exchange Termination
	d)	Information Exchange Failure
Reporting of General Error Situations	a)	Error Indication

8 PCAP Procedures

8.1 Elementary Procedures

In the following tables, all EPs are divided into class 1 and class 2 EPs (see clause 3.1 for explanation of the different classes).

Elementary Initiating Successful Outcome **Unsuccessful Outcome Procedure** Message Response message Response message Position **POSITION** POSITION CALCULATION POSITION CALCULATION **CALCULATION RESPONSE FAILURE** Calculation REQUEST Information **IINFORMATION** INFORMATION INFORMATION EXCHANGE Exchange **EXCHANGE EXCHANGE INITIATION INITIATION FAILURE** Initiation INITIATION **RESPONSE** REQUEST

Table 2: Class 1

Table 3: Class 2

Elementary Procedure	Message
Information Reporting	INFORMATION REPORT
Information Exchange Termination	INFORMATION EXCHANGE
	TERMINATION REQUEST
Information Exchange Failure	INFORMATION EXCHANGE
	FAILURE INDICATION
Error Indication	ERROR INDICATION

8.2 Position Calculation

8.2.1 General

The purpose of the Position Calculation procedure is to enable an SRNC to query an SAS for a position estimate of a UE. The procedure uses connectionless signalling.

8.2.2 Successful Operation

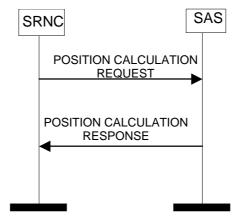


Figure 1: Position Calculation procedure, Successful Operation

The procedure is initiated with a POSITION CALCULATION REQUEST message sent from the SRNC to the SAS. When the SAS receives the POSITION CALCULATION REQUEST message, it shall calculate the UE position based on the provided measurement data.

If the *Initial UE Position Estimate* IE is included in the POSITION CALCULATION REQUEST message, the SAS shall use this value for the calculation of the UE Position Estimate in case of A-GPS positioning methods are used. The SAS may use this value for the calculation of the UE Position when any other methods are used.

If the *Horizontal Accuracy Code* IE and possibly the *Vertical Accuracy Code* IE are included in the POSITION CALCULATION REQUEST message, the SAS shall use these values in order to assess whether the resulting position estimation fulfills the requested accuracy.

Response Message:

If the SAS was able to calculate the position estimate, it shall respond with a POSITION CALCULATION RESPONSE message.

If at least the *Horizontal Accuracy Code* IE was included in the POSITION CALCULATION REQUEST message and the calculated position estimate fulfils the requested accuracy, the *Accuracy Fulfilment Indicator* IE with the value "requested accuracy fulfilled" shall be included in the POSITION CALCULATION RESPONSE message. If the calculated position estimate does not fulfil the requested accuracy, the *Accuracy Fulfilment Indicator* IE with the value "requested accuracy not fulfilled" shall be included in the POSITION CALCULATION RESPONSE message.

8.2.3 Unsuccessful Operation

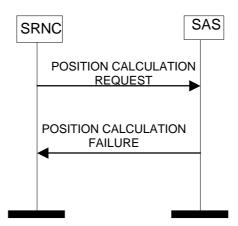


Figure 2: Position Calculation procedure, Unsuccessful Operation

If the SAS is unable to perform the position estimate for any reason, it shall return a POSITION CALCULATION FAILURE message to the SRNC.

Typical cause values are:

- Invalid reference information;
- Position calculation error: invalid GPS measured results;
- Initial UE Position Estimate missing;
- Processing Overload;
- Hardware Failure;
- O&M Intervention.

8.2.4 Abnormal Conditions

If the *Vertical Accuracy Code* IE is included and the *Horizontal Accuracy Code* IE is not included in the POSITION CALCULATION REQUEST message, the SAS shall reject the procedure.

8.3 Information Exchange Initiation

8.3.1 General

This procedure is used by a RNC to request the initiation of an information exchange with a SAS.

This procedure uses the signalling bearer connection for the Information Exchange Context.

8.3.2 Successful Operation

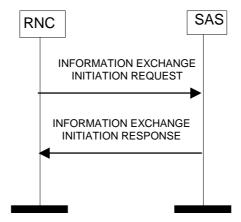


Figure 3: Information Exchange Initiation procedure, Successful Operation

The procedure is initiated with an INFORMATION EXCHANGE INITIATION REQUEST message sent from RNC to SAS.

If the Information Type IE is set to 'Implicit', the SAS is responsible for selecting the type of assistance data.

Upon reception, the SAS shall provide the requested information according to the parameters given in the request. Unless specified below, the meaning of the parameters are given in other specifications.

Information Report Characteristics:

The Information Report Characteristics IE indicates how the reporting of the information shall be performed.

If the *Information Report Characteristics* IE is set to 'On-Demand', the SAS shall report the requested information immediately.

If the *Information Report Characteristics* IE is set to "Periodic", the SAS shall report the requested information immediately and then shall periodically initiate the Information Reporting procedure for all the requested information, with the requested report frequency.

If the *Information Report Characteristics* IE is set to "On-Modification", the SAS shall report the requested information immediately if available. If the requested information is not available at the moment of receiving the INFORMATION EXCHANGE INITIATION REQUEST message, but expected to become available after some acquisition time, the SAS shall initiate the Information Reporting procedure when the requested information becomes available. The SAS shall then initiate the Information Reporting procedure in accordance to the following conditions:

- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Almanac and Satellite Health", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change in the t_{oa} or WN_a parameter has occurred in almanac/health information for at least one visible satellite.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "UTC Model", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change in the t_{ot} or WN_t parameter has occurred in the GPS UTC model.
 - If the *Transmission TOW Indicator* IE is set to "requested", then the SAS shall include the *GPS Transmission TOW* IE in the INFORMATION REPORT message.

- If the *Information Type* IE is set to 'Explicit' and the *Explicit Information Item* IE includes "Ionospheric Model", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the GPS ionospheric model.
 - If the *Transmission TOW Indicator* IE is set to "requested", then the SAS shall include the *GPS Transmission TOW* IE in the INFORMATION REPORT message.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Navigation Model", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the clock/ephemeris information for at least one visible satellite or in the list of visible satellites.
 - If the *Transmission TOW Indicator* IE is set to "requested", then the SAS shall include the *GPS Transmission TOW* IE in the INFORMATION REPORT message.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "DGPS Corrections", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the quality of the DGPS corrections information for at least one visible satellite or in the list of visible satellites.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Reference Time", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the time-of-week assistance information for at least one visible satellite or in the list of visible satellites.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Acquisition Assistance", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in acquisition assistance information for at least one visible satellite or in the list of visible satellites.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Real Time Integrity", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in the real-time integrity status of at least one visible satellite.
- If the *Information Type* IE is set to "Explicit" and the *Explicit Information Item* IE includes "Almanac and Satellite Health SIB", the SAS shall initiate the Information Reporting procedure for this specific Explicit Information Type when a change has occurred in almanac/health information for at least one visible satellite.
 - If the *Transmission TOW Indicator* IE is set to "requested", then the SAS shall include the *GPS Transmission TOW* IE in the INFORMATION REPORT message.
- If any of the above *Information Type* IEs becomes temporarily unavailable, the SAS shall initiate the Information Reporting procedure for this specific Information Item by indicating "Information Not Available" in the *Requested Data Value Information* IE. If the Information becomes available again, the SAS shall initiate the Information Reporting procedure for this specific Information.

Response message:

If the SAS is able to determine the information requested by the RNC, it shall respond with the INFORMATION EXCHANGE INITIATION RESPONSE message. The message shall include the same Information Exchange ID that was included in the INFORMATION EXCHANGE INITIATION REQUEST message. When the *Report Characteristics* IE is set to "On Modification" or "Periodic", the INFORMATION EXCHANGE INITIATION RESPONSE message shall contain the *Requested Data Value* IE if the data are available. When the *Report Characteristics* IE is set to "On Demand", the INFORMATION EXCHANGE INITIATION RESPONSE message shall contain the *Requested Data Value* IE.

When the response message includes data to be reported (see above), the SAS shall include at least one IE in the *Requested Data Value* IE.

8.3.3 Unsuccessful Operation

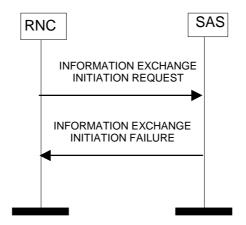


Figure 4: Information Exchange Initiation procedure, Unsuccessful Operation

If the requested Information Type received in the *Information Type* IE indicates a type of information that SAS cannot provide, the SAS shall regard the Information Exchange Initiation procedure as failed.

If the requested information provision cannot be carried out, the SAS shall send the INFORMATION EXCHANGE INITIATION FAILURE message. The message shall include the same Information Exchange ID that was used in the INFORMATION EXCHANGE INITIATION REQUEST message and the *Cause* IE set to an appropriate value.

Typical cause values are as follows:

- Information temporarily not available;
- Information Provision not supported for the object;
- Processing Overload;
- Hardware Failure;
- O&M Intervention.

8.3.4 Abnormal Conditions

_

8.4 Information Reporting

8.4.1 General

This procedure is used by a SAS to report the result of information requested by a RNC using the Information Exchange Initiation.

This procedure uses the signalling bearer connection for the Information Exchange Context.

8.4.2 Successful Operation



Figure 5: Information Reporting procedure, Successful Operation

If the requested information reporting criteria are met, the SAS shall initiate an Information Reporting procedure. Unless specified below, the meaning of the parameters are given in other specifications.

The *Information Exchange ID* IE shall be set to the Information Exchange ID provided by the RNC when initiating the information exchange with the Information Exchange Initiation procedure.

The Requested Data Value IE shall include at least one IE containing the data to be reported.

8.4.3 Abnormal Conditions

-

8.5 Information Exchange Termination

8.5.1 General

This procedure is used by a RNC to terminate the information exchange requested using the Information Exchange Initiation

This procedure uses the signalling bearer connection for the Information Exchange Context.

8.5.2 Successful Operation

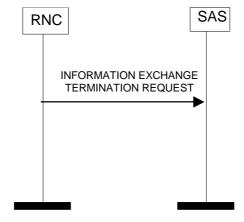


Figure 6: Information Exchange Termination procedure, Successful Operation

This procedure is initiated with an INFORMATION EXCHANGE TERMINATION REQUEST message.

Upon reception, the SAS shall terminate the information exchange corresponding to the Information Exchange ID.

8.5.3 Abnormal Conditions

-

8.6 Information Exchange Failure

8.6.1 General

This procedure is used by a SAS to notify a RNC that the information exchange it previously requested using the Information Exchange Initiation can no longer be reported.

This procedure uses the signalling bearer connection for the Information Exchange Context.

8.6.2 Successful Operation

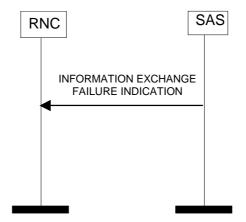


Figure 7: Information Exchange Failure procedure, Successful Operation

This procedure is initiated with a INFORMATION EXCHANGE FAILURE INDICATION message, sent from the SAS to the RNC, to inform the RNC that information previously requested by the Information Exchange Initiation procedure can no longer be reported. The message shall include the same Information Exchange ID that was used in the INFORMATION EXCHANGE INITIATION REQUEST message and the *Cause* IE set to an appropriate value.

Typical cause values are as follows:

Radio Network Layer Cause

Information temporarily not available.

8.7 Error Indication

8.7.1 General

The Error Indication procedure is used by a node to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

8.7.2 Successful Operation

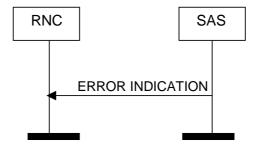


Figure 8: Error Indication procedure, SAS Originated, Successful Operation

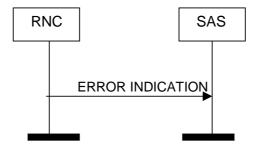


Figure 9: Error Indication procedure, RNC Originated, Successful Operation

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node. This message shall use the same mode of the signalling bearer and the same signalling bearer connection (if connection oriented) as the message that triggers the procedure.

The ERROR INDICATION message shall include either the *Cause* IE, or the *Criticality Diagnostics* IE, or both the *Cause* IE and the *Criticality Diagnostics* IE.

Typical cause values for the ERROR INDICATION message are:

- Transfer Syntax Error;
- Abstract Syntax Error (Reject);
- Abstract Syntax Error (Ignore and Notify);
- Message not Compatible with Receiver State;
- Unspecified.

8.7.3 Abnormal Conditions

_

9 Elements for PCAP Communication

9.1 Message Functional Definition and Content

9.1.1 General

Clause 9.1 presents the contents of PCAP messages in tabular format. The corresponding ASN.1 definitions are presented in clause 9.3. In case there is contradiction between the tabular format in clause 9.1 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional IEs, where the tabular format shall take precedence.

NOTE: The messages have been defined in accordance to the guidelines specified in [12].

9.1.2 Message Contents

9.1.2.1 Presence

All information elements in the message descriptions below are marked mandatory, optional or conditional according to table 4.

Table 4: Meaning of abbreviations used in PCAP messages

Abbreviation	Meaning		
M	IEs marked as Mandatory (M) shall always be included in the		
	message.		
0	IEs marked as Optional (O) may or may not be included in the		
	message.		
С	IEs marked as Conditional (C) shall be included in a message only if		
	the condition is satisfied. Otherwise the IE shall not be included.		

9.1.2.2 Criticality

Each Information Element or Group of Information Elements may have a criticality information applied to it. Following cases are possible.

Table 5: Meaning of content within "Criticality" column

Abbreviation	Meaning	
_	No criticality information is applied explicitly.	
YES	Criticality information is applied. This is usable only for non-repeatable IEs	
GLOBAL	The IE and all its repetitions together have one common criticality information. This is usable only for repeatable IEs.	
EACH	Each repetition of the IE has its own criticality information. It is not allowed to assign different criticality values to the repetitions. This is usable only for repeatable IEs.	

9.1.2.3 Range

The Range column indicates the allowed number of copies of repetitive IEs/IE groups.

9.1.2.4 Assigned Criticality

This column provides the actual criticality information as defined in clause 10.3.2, if applicable.

9.1.3 POSITION CALCULATION REQUEST

Table 6

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.2.24		YES	reject
Transaction ID	М		9.2.2.28		_	
Initial UE Position Estimate	0		Geographical Area 9.2.2.6		YES	reject
GPS Measured Results		0 <maxnoofsets></maxnoofsets>			GLOBAL	reject
>GPS Measured Results	М		9.2.2.12		_	
Cell-ID Measured Results Sets		0 <maxnoofmea surements=""></maxnoofmea>			GLOBAL	reject
>Cell-ID Measured Results Info List	М		9.2.2.31		_	
OTDOA Measurement Group		01			YES	reject
>OTDOA Reference Cell Info	М		9.2.2.34		_	
>OTDOA Neighbour Cell Info List		1< maxNoOfMeasNC ell >			_	
>>OTDOA Neighbour Cell Info	М		9.2.2.33		_	
>OTDOA Measured Results Sets		1 <maxnoofmea surements=""></maxnoofmea>			_	
>>OTDOA Measured Results Info List	М		9.2.2.32		_	
Horizontal Accuracy Code	0		9.2.2.38		YES	ignore
Vertical Accuracy Code	0		9.2.2.39		YES	ignore

Table 7

Range bound	Explanation
MaxNoOfMeasNCell	Maximum number of neighbouring cells on which information can be
	reported. The value of MaxNoOfMeasCell is 32.
MaxNoOfSets	Maximum number of sets of Measured Results included in the
	Position Calculation Request message. The value for maxNoOfSets
	is 3.
maxNoOfMeasurements	Maximum number of Measurements of Cell-ID Measured Results
	Info List and OTDOA Measured Results Info List included in the
	Position Calculation Request message. The value for
	maxNoOfMeasurements is 16.

9.1.4 POSITION CALCULATION RESPONSE

Table 8

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
UE Position Estimate	M		Geographical Area 9.2.2.6		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore
Accuracy Fulfilment Indicator	0		9.2.2.40		YES	ignore

9.1.5 POSITION CALCULATION FAILURE

Table 9

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
Cause	M		9.2.2.3		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.6 INFORMATION EXCHANGE INITIATION REQUEST

Table 10

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	М		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		-	
Information Exchange ID	M		9.2.2.19		YES	reject
CHOICE Information Exchange Object Type	M				YES	reject
>Reference Position					ı	
>>Reference Position Estimate/UE Initial Position	M		Geographi cal Area 9.2.2.6		-	
Information Type	M		9.2.2.22		YES	reject
Information Report Characteristics	M		9.2.2.21		YES	reject
GPS-UTRAN Time Relationship Uncertainty	C-GPS		9.2.2.18		YES	reject

Table 11

Condition	Explanation
GPS	The IE shall be present if the information requested in
	the Information Type IE contains GPS-related data

9.1.7 INFORMATION EXCHANGE INITIATION RESPONSE

Table 12

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	М		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	ignore
CHOICE Information Exchange Object Type	0				YES	ignore
>Reference Position					_	
>>Requested Data Value	М		9.2.2.26		_	
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.8 INFORMATION EXCHANGE INITIATION FAILURE

Table 13

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	reject
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	М		9.2.2.19		YES	ignore
Cause	M		9.2.2.3		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.1.9 INFORMATION REPORT

Table 14

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	ignore
Transaction ID	M		9.2.2.28		_	_
Information Exchange ID	M		9.2.2.19		YES	ignore
CHOICE Information Exchange Object Type	М				YES	ignore
>Reference Position					-	
>>Requested Data Value Information	M		9.2.2.27		ı	

9.1.10 INFORMATION EXCHANGE TERMINATION REQUEST

Table 15

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	ignore
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	ignore

9.1.11 INFORMATION EXCHANGE FAILURE INDICATION

Table 16

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	ignore
Transaction ID	M		9.2.2.28		_	
Information Exchange ID	M		9.2.2.19		YES	ignore
Cause	М		9.2.2.3		YES	ignore

9.1.12 ERROR INDICATION

Table 17

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.2.24		YES	ignore
Transaction ID	M		9.2.2.28		_	
Cause	0		9.2.2.3		YES	ignore
Criticality Diagnostics	0		9.2.2.4		YES	ignore

9.2 Information Element Functional Definitions and Contents

9.2.1 General

Clause 9.2 presents the PCAP IE definitions in tabular format. The corresponding ASN.1 definitions are presented in clause 9.3. In case there is contradiction between the tabular format in clause 9.2 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, where the tabular format shall take precedence.

When specifying information elements which are to be represented by bitstrings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bitstrings from other specifications, the first bit of the bitstring contains the first bit of the concerned information;

9.2.2 Radio Network Layer Related IEs

9.2.2.1 Almanac and Satellite Health SIB

Table 18

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS Almanac and Satellite Health	M		9.2.2.9	
SatMask	M		BIT STRING(132)	indicates the satellites that contain the pages being broadcast in this data set
LSB TOW	М		BIT STRING (8)	

9.2.2.2 Altitude and direction

Table 19

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Direction of Altitude	M		ENUMERATED (Height, Depth)	
Altitude	M		INTEGER (02 ¹⁵ -1)	The relation between the value (N) and the altitude (a) in meters it describes is $N \le a < N+1$, except for $N=2^{15}-1$ for which the range is extended to include all greater values of (a).

9.2.2.3 Cause

The purpose of the cause information element is to indicate the reason for a particular event for the whole protocol.

Table 20

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause Group				•
>Radio Network Layer				
>>Radio Network Layer Cause	М		ENUMERATED (invalid reference information, information temporarily not available, information provision not supported for the object, position calculation error: invalid GPS measured results,	
			position calculation error: invalid Cell-ID measured results, position calculation error: invalid OTDOA measured results, position calculation error: A-GPS positioning method not supported, position calculation error: Cell-ID positioning method not supported, position calculation error: OTDOA positioning method not supported, Initial UE Position Estimate missing)	
>Transport Layer				
>>Transport Layer Cause	M		ENUMERATED (Transport Resource Unavailable, Unspecified,)	
>Protocol				
>>Protocol Cause	М		ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Unspecified, Abstract Syntax Error (Falsely Constructed Message),)	
> Misc				
>>Misc Cause	M		ENUMERATED (Processing Overload, Hardware Failure, O&M Intervention, Unspecified,)	

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerning capability is missing. On the other hand, "not available" cause values indicate that the concerning capability is present, but insufficient resources were available to perform the requested action.

Table 21

Radio Network Layer cause	Meaning
Invalid reference information	The reference information (GPS-UTRAN Time Relationship Uncertainty and/or Initial UE Position Estimate) provided by the RNC are invalid
Information temporarily not available	The information requested by RNC is temporarily not available
Information Provision not supported for the object	The SAS does not support provision of the requested information for the concerned object types
Position calculation error: invalid GPS measured results	The SAS cannot calculate position due to invalid GPS measured results
Position calculation error: invalid Cell-ID measured results	The SAS cannot calculate position due to invalid Cell-ID measured results
Position calculation error: invalid OTDOA measured results	The SAS cannot calculate position due to invalid OTDOA measured results
Position calculation error: A-GPS positioning method not supported	The SAS cannot calculate position because it does not support the A-GPS positioning method
Position calculation error: Cell-ID positioning method not supported	The SAS cannot calculate position because it does not support the Cell-ID positioning method
Position calculation error: OTDOA positioning method not supported	The SAS cannot calculate position because it does not support the OTDOA positioning method

Table 22

Transport Network Layer cause	Meaning
Transport resource unavailable	The required transport resources are not available
Unspecified	Sent when none of the above cause values applies but still the
	cause is Transport Network Layer related

Table 23

Protocol cause	Meaning
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the
·	concerning criticality indicated "reject" (see clause 10.3)
Abstract Syntax Error (Ignore and	The received message included an abstract syntax error and the
Notify)	concerning criticality indicated "ignore and notify" (see
·	clause 10.3)
Abstract syntax error (falsely	The received message contained IEs or IE groups in wrong order
constructed message)	or with too many occurrences (see clause 10.3)
Message not Compatible with	The received message was not compatible with the receiver state
Receiver State	(see clause 10.4)
Semantic Error	The received message included a semantic error (see
	clause 10.4)
Transfer Syntax Error	The received message included a transfer syntax error (see
	clause 10.2)
Unspecified	Sent when none of the above cause values applies but still the
	cause is Protocol related

Table 24

Miscellaneous cause	Meaning		
Processing Overload	RNC/SAS processing overload		
Hardware Failure	RNC/SAS hardware failure		
O&M Intervention	Operation and Maintenance intervention related to RNC/SAS equipment		
Unspecified	Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol		

9.2.2.4 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the RNC or the SAS when parts of a received message have not been comprehended or are missing. It contains information about which IE was not comprehended or is missing.

For further details on how to use the Criticality Diagnostics IE, see annex A.

Table 25

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	0		INTEGER (0255)	
Triggering Message	0		ENUMERAT ED (initiating message, successful outcome, unsuccessful outcome, outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication.
Procedure Criticality	0		ENUMERAT ED (reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
Transaction ID Information Element	0	O manna of	9.2.2.28	
Criticality Diagnostics		0 <maxnoof errors=""></maxnoof>		
>IE Criticality	М		ENUMERAT ED (reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value 'Ignore' shall never be used.
>IE ld	M		INTEGER (065535)	The IE Id of the not understood or missing IE as defined in the ASN.1 part of the specification.
>Repetition Number	0		INTEGER (0255)	The Repetition Number IE gives - in case of a not understood IE: The number of occurrences of the reported IE up to and including the not understood occurrence - in case of a missing IE: The number of occurrences up to but not including the missing occurrence. Note: All the counted occurrences of the reported IE must have the same top-down hierarchical message structure of IEs with assigned criticality above them.
>Message Structure	0		9.2.2.23	The Message Structure IE describes the structure where the not understood or missing IE was detected. This IE is included if the not understood IE is not the top level of the message.
>Type of Error	М		ENUMERAT ED(not understood, missing,)	

Table 26

Range bound	Explanation
Maxnooferrors	Maximum number of IE errors allowed to be reported with a single
	message.

9.2.2.5 DGPS Corrections

This IE contains DGPS corrections, which may be employed to compensate for ranging errors due to atmospheric delay, orbital modelling, and satellite clock drift.

Table 27

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS TOW sec	М		INTEGER (0604799)	In seconds GPS time-of-week when the DGPS corrections were calculated
Status/Health	M		ENUMERAT ED (UDRE scale 1.0, UDRE scale 0.75, UDRE scale 0.5, UDRE scale 0.3, UDRE scale 0.2, UDRE scale 0.1, no data, invalid data)	
DPGS information	C- Status/Hea Ith	1 <maxsat ></maxsat 	,	
>SatID	M		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>IODE	М		INTEGER (0255)	
>UDRE	М		ENUMERAT ED (UDRE < 1.0 m, 1.0m < UDRE < 4.0m, 4.0m < UDRE < 8.0m, 8.0m < UDRE,)	The value in this field shall be multiplied by the UDRE Scale Factor in the IE Status/Health to determine the final UDRE estimate for the particular satellite.
>PRC	М		INTEGER (- 20472047.)	Scaling factor 0.32 Meters
>Range Rate Correction	М		INTEGER (- 127127)	Scaling factor 0.032 meters/sec

Table 28

Condition	Explanation
Status/Health	This IE shall be present if the Status/Health IE is not
	egual to "no data" or "invalid data"

Table 29

Range bound	Explanation	
MaxSat	Maximum number of satellites for which data is included in this IE.	

9.2.2.6 Geographical Area

Geographical Area IE is used to identify an area using geographical coordinates. The reference system is the same as the one used in [11].

Table 30

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Geographical Area				
>Point				Ellipsoid point
>>Geographical Coordinates	М		9.2.2.7	
>Point With Uncertainty				Ellipsoid point with uncertainty circle
>>Geographical Coordinates	М		9.2.2.7	
>>Uncertainty Code	M		INTEGER (0127)	The uncertainty "r" is derived from the "uncertainty code" k by r = 10x(1.1 ^k -1)
>Polygon				List of Ellipsoid points
>>Polygon		1 <maxnoofpoints></maxnoofpoints>		
>>>Geographical Coordinates >Ellipsoid point with	M		9.2.2.7	
uncertainty Ellipse				
>>Geographical Coordinates	М		9.2.2.7	
>>Uncertainty Ellipse	М		9.2.2.30	
>>Confidence	M		INTEGER (
			0100)	
>Ellipsoid point with altitude			,	
>>Geographical Coordinates	М		9.2.2.7	
>>Altitude and direction	М		9.2.2.2	
>Ellipsoid point with altitude and uncertainty Ellipsoid				
>>Geographical Coordinates	М		9.2.2.7	
>>Altitude and direction	M		9.2.2.2	
>>Uncertainty Ellipse	M		9.2.2.30	
>>Uncertainty Altitude	М		INTEGER (0127)	
>>Confidence	М		INTEGER (0100)	
>Ellipsoid Arc				
>>Geographical Coordinates	М		9.2.2.7	
>>Inner radius	М		INTEGER (02 ¹⁶ -1)	The relation between the value (N) and the radius (r) in meters it describes is 5N≤ r <5(N+1), except for N=2 ¹⁶ -1 for which the range is extended to include all grater values of (r).
>>Uncertainty radius	M		INTEGER (0127)	The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
>>Offset angle	M		INTEGER (0179)	The relation between the value (N) and the angle (a) in degrees it describes is 2N≤ a <2(N+1)

IE/Group Name	Presence	Range	IE type and reference	Semantics description
>>Included angle	M		INTEGER (0179)	The relation between the value (N) and the angle (a) in degrees it describes is 2N< a ≤2(N+1)
>>Confidence	М		INTEGER (0100)	

Table 31

Range bound	Explanation	
MaxnoofPoints	Maximum no. of points in polygon. Value is 15.	

9.2.2.7 Geographical Coordinates

This IE contains the geographical coordinates.

Table 32

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Latitude Sign	M		ENUMERATED (North, South)	
Degrees Of Latitude	M		INTEGER (02 ²³ -1)	The IE value (N) is derived by this formula: N≤2 ²³ X /90 < N+1 X being the latitude in degree (0° 90°)
Degrees Of Longitude	М		INTEGER (-2 ²³ 2 ²³ -1)	The IE value (N) is derived by this formula: N≤2 ²⁴ X /360 < N+1 X being the longitude in degree (-180°+180°)

9.2.2.8 GPS Acquisition Assistance

This IE contains parameters that enable fast acquisition of the GPS signals in UE-assisted GPS positioning.

Table 33

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS TOW msec	М		INTEGER (06.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).
Satellite information		1 <maxsat< td=""><td></td><td></td></maxsat<>		
>SatID	М		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>Doppler (0 th order term)	М		INTEGER (- 20482047)	Scaling factor 2.5Hz
>Extra Doppler		01		
>>Doppler (1 st order term)	М		INTEGER (- 4221)	Scaling factor 1/42
>>Doppler Uncertainty	М		ENUMERAT ED (12.5,25,50, 100,200,)	In Hz
>Code Phase	M		INTEGER (01022)	In Chips, specifies the centre of the search window
>Integer Code Phase	M		INTEGER (019)	Number of 1023 chip segments
>GPS Bit number	М		INTEGER (03)	Specifies GPS bit number (20 1023 chip segments)
>Code Phase Search Window	M		ENUMRATE D (1023,1,2,3, 4,6,8,12,16,2 4,32,48,64,9 6,128,192)	Specifies the width of the search window.
>Azimuth and Elevation		01		
>>Azimuth	М		INTEGER (031)	Scaling factor 11.25 Degrees
>>Elevation	М		INTEGER (07)	Scaling factor 11.25 Degrees

Table 34

Range bound	Explanation		
MaxSat	Maximum number of satellites for which data is included in this IE.		

9.2.2.9 GPS Almanac and Satellite Health

This IE contains a reduced-precision subset of the clock and ephemeris parameters.

Table 35

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
WNa	M		BIT STRING (8)	
Satellite information		1 <maxsat Almanac></maxsat 	(-/	
>DataID	M		BIT STRING (2)	See [10]
>SatID	М		INTEGER (063,)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>e	M		BIT STRING (16)	Eccentricity [10]
>t _{oa}	M		BIT STRING (8)	Reference Time Ephemeris [10]
>δi	M		BIT STRING (16)	Correction to Inclination (semi- circles) [10]
>OMEGADOT	M		BIT STRING (16)	Rate of Right Ascension (semi-circles/sec) [10]
>SV Health	M		BIT STRING (8)	[10]
>A ^{1/2}	M		BIT STRING (24)	Semi-Major Axis (meters) ^{1/2} [10]
>OMEGA ₀	М		BIT STRING (24)	Longitude of Ascending Node of Orbit Plane at Weekly Epoch (semi-circles) [10]
>M ₀	M		BIT STRING (24)	Mean Anomaly at Reference Time (semi-circles) [10]
>00	M		BIT STRING (24)	Argument of Perigee (semicircles) [10]
>af ₀	M		BIT STRING (11)	apparent clock correction [10]
>af ₁	M		BIT STRING (11)	apparent clock correction [10]
SV Global Health	0		BIT STRING (364)	This enables GPS time recovery and possibly extended GPS correlation intervals

Table 36

Range bound	Explanation
MaxSatAlmanac	Maximum number of satellites for which data is included in this IE.

9.2.2.10 GPS Clock and Ephemeris Parameters

The IE contains the GPS clock information and GPS Ephemeris.

Table 37

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
C/A or P on L2	М		BIT STRING (2)	Code(s) on L2 Channel [10]
URA Index	М		BIT STRING (4)	User Range Accuracy [10]
SV Health	М		BIT STRING (6)	[10]
IODC	М		BIT STRING (10)	Issue of Data, Clock [10]
L2 P Data Flag	М		BIT STRING (1)	[10]
SF 1 Reserved	М		BIT STRING (87)	[10]
T _{GD}	М		BIT STRING (8)	Estimated group delay differential [10]
toc	М		BIT STRING (16)	apparent clock correction [10]
af ₂	М		BIT STRING (8)	apparent clock correction [10]
af ₁	М		BIT STRING (16)	apparent clock correction [10]
af ₀	М		BIT STRING (22)	apparent clock correction [10]
C _{rs}	М		BIT STRING (16)	Amplitude of the Sine Harmonic Correction Term to the Orbit Radius (meters) [10]
Δη	М		BIT STRING (16)	Mean Motion Difference From Computed Value (semi- circles/sec) [10]
M ₀	М		BIT STRING (32)	Mean Anomaly at Reference Time (semi-circles) [10]
Cuc	М		BIT STRING (16)	Amplitude of the Cosine Harmonic Correction Term To The Argument Of Latitude (radians) [10]
е	М		BIT STRING (32)	Eccentricity [10]
Cus	М		BIT STRING (16)	Amplitude of the Sine Harmonic Correction Term To The Argument Of Latitude (radians) [10]
(A) ^{1/2}	М		BIT STRING (32)	Semi-Major Axis (meters) ^{1/2} [10]
t _{oe}	М		BIT STRING (16)	Reference Time Ephemeris [10]
Fit Interval Flag	М		BIT STRING (1)	[10]
AODO	М		BIT STRING (5)	Age Of Data Offset [10]
C _{ic}	М		BIT STRING (16)	Amplitude of the Cosine Harmonic Correction Term To The Angle Of Inclination (radians) [10]
OMEGA ₀	М		BIT STRING (32)	Longitude of Ascending Node of Orbit Plane at Weekly Epoch (semi-circles) [10]
C _{is}	М		BIT STRING (16)	Amplitude of the Sine Harmonic Correction Term To The Angle Of Inclination (radians) [10]
İo	М		BIT STRING (32)	Inclination Angle at Reference Time (semi-circles) [10]
C _{rc}	М		BIT STRING (16)	Amplitude of the Cosine Harmonic Correction Term to the Orbit Radius (meters) [10]

ω	M	BIT STRING (32)	Argument of Perigee (semicircles) [10]
OMEGAdot	M	BIT STRING	Rate of Right Ascension (semi-
		(24)	circles/sec) [10]
Idot	M	BIT STRING	Rate of Inclination Angle (semi-
		(14)	circles/sec) [10]

9.2.2.11 GPS Ionospheric Model

The IE contains fields needed to model the propagation delays of the GPS signals through the ionosphere.

Table 38

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
α_0	M		BIT STRING (8)	note 1
α_1	M		BIT STRING (8)	note 1
α2	M		BIT STRING (8)	note 1
α3	M		BIT STRING (8)	note 1
β_0	M		BIT STRING (8)	note 2
β ₁	M		BIT STRING (8)	note 2
β ₂	M		BIT STRING (8)	note 2
β_3	M		BIT STRING (8)	note 2

NOTE 1: The parameters α_n are the coefficients of a cubic equation representing the amplitude of the vertical delay [10].

NOTE 2: The parameters β_n are the coefficients of a cubic equation representing the period of the ionospheric model [10].

9.2.2.12 GPS Measured Results

The purpose of this information element is to provide reported GPS measurement information from the SRNC to the SAS.

Table 39

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS TOW msec	M		INTEGER (06.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit). This time is the GPS TOW measured by the UE. GPS Time of Week in microseconds = 1000 * GPS TOW msec + GPS TOW rem usec
Measurement Parameters		1 <maxsat< td=""><td></td><td></td></maxsat<>		
>Satellite ID	М		INTEGER (063)	
>C/N _o	M		INTEGER (063)	The estimate of the carrier-to- noise ratio of the received signal from the particular satellite used in the measurement. It is given in units of dB-Hz (Typical levels will be in the range of 20 – 50 dB-Hz).
>Doppler	M		INTEGER (- 32768 32768)	Hz, scale factor 0.2.
>Whole GPS Chips	М		INTEGER (01022)	Unit in GPS chips
>Fractional GPS Chips	М		INTEGER (0(2 ¹⁰ -1))	Scale factor 2 ⁻¹⁰
>Multipath Indicator	M		ENUMERAT ED (NM, low, medium, high)	See note 1
>Pseudorange RMS Error	М		INTÉGER (063)	See note 2

NOTE 1: Table 41 gives the mapping of the multipath indicator field.

NOTE 2: Table 42 gives the bitmapping of the Pseudorange RMS Error field.

Table 40

Range bound	Explanation
MaxSat	Maximum number of satellites for which data is included in this IE.

Table 41

Value	Multipath Indication
NM	Not measured
Low	MP error < 5m
Medium	5m < MP error < 43m
High	MP error > 43m

Table 42

Value	Mantissa	Exponent	Floating-Point value, x _i	Pseudorange value, P
0	000	000	0.5	P < 0.5
1	001	000	0.5625	0.5 <= P < 0.5625
i	X	Υ	0.5 * (1 + x/8) * 2y	xi-1 <= P < xi
62	110	111	112	104 <= P < 112
63	111	111		112 <= P

9.2.2.13 GPS Navigation Model

This IE contain information required to manage the transfer of precise navigation data to the GPS-capable UE.

Table 43

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Satellite information		1 <maxs at></maxs 		
>SatID	M		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>Satellite Status	М		ENUMERAT ED (NS_NN, ES_SN, ES_NN, REVD)	See note
>GPS Clock and Ephemeris parameters	C-Satellite status		9.2.2.10	

NOTE: The UE shall interpret enumerated symbols as follows.

Table 44

Value	Indication
NS_NN	New satellite, new Navigation Model
ES_SN	Existing satellite, same Navigation Model
ES_NN	Existing satellite, new Navigation Model
REVD	Reserved

Table 45

Condition	Explanation
Satellite status	The IE shall be present if the Satellite Status IE is not
	set to ES_SN

Table 46

Range bound	Explanation
MaxSat	Maximum number of satellites for which data is included in this IE.

9.2.2.14 GPS Real Time Integrity

Table 47

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Bad Satellites Presence				
>Bad Satellites				
>>Satellite information		1 <maxno Sat></maxno 		
>>>BadSatID	М		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>No Bad Satellites			NULL	

Table 48

Range bound	Explanation
MaxNoSat	Maximum number of satellites for which data is included in this IE.

9.2.2.15 GPS Reference Time

Table 49

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS Week	M		INTEGER (01023)	
GPS TOW msec	M		ITEGER (06.048*10 ⁸ -1)	GPS Time of Week in milliseconds (rounded down to the nearest millisecond unit).
GPS TOW Assist		0 <maxsat ></maxsat 		
>SatID	М		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>TLM Message	M		BIT STRING (14)	
>Anti-Spoof	M		BOOLEAN	
>Alert	M		BOOLEAN	
>TLM Reserved	M		BIT STRING (2)	

Table 50

Range bound	Explanation
MaxSat	Maximum number of satellites for which data is included in this IE.

9.2.2.16 GPS Transmission TOW

Table 51

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS Transmission TOW			INTEGER (0604799)	The GPS time-of-week in seconds

9.2.2.17 GPS UTC Model

The UTC Model field contains a set of parameters needed to relate GPS time to Universal Time Coordinate (UTC).

Table 52

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
A ₁	M		BIT STRING (24)	sec/sec [10]
A ₀	M		BIT STRING (32)	seconds [10]
t _{ot}	M		BIT STRING (8)	seconds [10]
Δt_{LS}	M		BIT STRING (8)	seconds [10]
WNt	M		BIT STRING (8)	weeks [10]
WN _{LSF}	M		BIT STRING (8)	weeks [10]
DN	M		BIT STRING (8)	days [10]
Δt_{LSF}	M		BIT STRING (8)	seconds [10]

9.2.2.18 GPS-UTRAN Time Relationship Uncertainty

This IE contains the uncertainty of the GPS and UTRAN time relationship.

Table 53

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS-UTRAN Time Relationship Uncertainty			ENUMERATED (50ns, 500ns, 1us, 10us, 1ms, 10ms, 100ms, unreliable)	RNC estimate of uncertainty in GPS- UTRAN time relationship

9.2.2.19 Information Exchange ID

The Information Exchange ID uniquely identifies any requested information per RNC-SAS pair.

Table 54

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Information Exchange ID			INTEGER (0	
			2^20-1)	

9.2.2.20 Information Exchange Object Type

Void.

9.2.2.21 Information Report Characteristics

The information report characteristics define how the reporting shall be performed.

Table 56

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Information Report Characteristics Type	М		ENUMERAT ED(On Demand, Periodic, On Modification,)	
CHOICE Information Report Periodicity	C-Periodic			Indicates the frequency with which the SAS shall send broadcast data reports.
>Min				
>>Minutes	M		INTEGER (160,)	
>Hour				
>>Hours	M		INTEGER (124,)	

Table 57

Condition	Explanation
Periodic	This IE shall be present if the Information Report
	Characteristics Type IE indicates 'periodic'

9.2.2.22 Information Type

The Information Type indicates which kind of information the SAS shall provide.

Table 58

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Information Type				
>Implicit				
>>Method Type	М		9.2.2.25	
>Explicit				
>>Explicit Information		1 <maxnoofexpinfo></maxnoofexpinfo>		
>>>CHOICE Explicit Information Item	М			
>>>>Almanac and Satellite Health			NULL	
>>>UTC Model				
>>>>Transmission TOW Indicator	М		9.2.2.29	
>>>>Ionospheric Model				
>>>>Transmission TOW Indicator	М		9.2.2.29	
>>>Navigation Model				
>>>>Transmission TOW Indicator	М		9.2.2.29	
>>>>Nav. Model Additional Data		01		
>>>>GPS Week	М		INTEGER (01023)	
>>>>GPS_Toe	M		INTEGER (0167)	GPS time of ephemeris in hours of the latest ephemeris set
>>>>T-Toe limit	М		Integer (010)	ephemeris age tolerance in hours
>>>>Satellite related data		0 <maxsat></maxsat>		
>>>>SatID	М		INTEGER (063)	Identifies the satellite and is equal to (SV ID No - 1) where SV ID No is defined in [10].
>>>>>IODE	М		INTEGER (0255)	Issue of Data Ephemeris for SatID
>>>DGPS			NULL	
Corrections				
>>>Reference Time			NULL	
>>>Acquisition Assistance			NULL	
>>>Real Time Integrity			NULL	
>>>>Almanac and Satellite Health SIB				
>>>>Transmission TOW Indicator	М		9.2.2.29	

Table 59

Range Bound	Explanation
maxnoofExpInfo	Maximum number of Explicit Information supported in one
	Information Exchange.
MaxSat	Maximum number of satellites for which data is included in this IE.

9.2.2.23 Message Structure

The *Message Structure* IE gives information for each level with assigned criticality in an hierarchical message structure from top level down to the lowest level above the reported level for the occured error (reported in the *Information Element Criticality Diagnostics* IE).

Table 60

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Message structure		1 <maxnoo flevels></maxnoo 		The first repetition of the Message Structure IE corresponds to the top level of the message. The last repetition of the Message Structure IE corresponds to the level above the reported level for the occurred error of the message.
>IE ID	M		INTEGER (065535)	The IE ID of this level's IE containing the not understood or missing IE.
>Repetition Number	0		INTEGER (1256)	The Repetition Number IE gives, if applicable, the number of occurrences of this level's reported IE up to and including the occurrence containing the not understood or missing IE. Note: All the counted occurrences of the reported IE must have the same top-down hierarchical message structure of IEs with assigned criticality above them.

Table 61

Range bound	Explanation	
maxnooflevels	Maximum no. of message levels to report. The value for	
	maxnooflevels is 256.	

9.2.2.24 Message Type

Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

Table 62

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Procedure Code	M		INTEGER(0255)	'1' = Position Calculation
				'2' = Information Exchange
				Initiation
				'3' = Information Reporting
				'4' = Information Exchange
				Termination,
				'5' = Information Exchange
				Failure
				'6' = Error Indication,
Type of Message	M		ENUMERATED	
			(Initiating Message,	
			Successful Outcome,	
			Unsuccessful Outcome, Outcome)	

9.2.2.25 Method Type

Table 63

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Method Type			ENUMERATED	
			(UE_Assisted,	
			UE_Based)	

9.2.2.26 Requested Data Value

The Requested Data Value contains the relevant data concerning the ongoing information exchange.

Table 64

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
GPS Almanac and Satellite Health	0		9.2.2.9	
GPS UTC Model	0		9.2.2.17	
GPS Ionospheric Model	0		9.2.2.11	
GPS Navigation Model	0		9.2.2.13	
DGPS Corrections	0		9.2.2.5	
GPS Reference Time	0		9.2.2.15	
GPS Acquisition Assistance	0		9.2.2.8	
GPS Real Time Integrity	0		9.2.2.14	
Almanac and Satellite Health SIB	0		9.2.2.1	
GPS Transmission TOW	0		9.2.2.16	

9.2.2.27 Requested Data Value Information

The *Requested Data Value Information* IE provides information on whether or not the Requested Data Value is available in the message and also the Requested Data Value itself if available.

In case of "Periodic" and "On Modification" reporting, "Information Not Available" shall be used when at least one part of the requested information was not available at the moment of initiating the Information Reporting procedure.

Table 65

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
CHOICE Information	М				-	
Availability Indicator						
>Information Available					-	
>>Requested Data	M		9.2.2.26		-	
Value						
>Information not			NULL		_	
Available						

9.2.2.28 Transaction ID

The Transaction ID is used to associate all the messages belonging to the same procedure. Messages belonging to the same procedure shall use the same Transaction ID.

The Transaction ID is determined by the initiating peer of a procedure.

The Transaction ID shall uniquely identify a procedure among all ongoing parallel procedures using the same procedure code, and initiated by the same protocol peer.

Table 66

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Transaction ID Length				The Transaction ID shall be interpreted for its integer value, not for the type of encoding ("short' or "long').
>Short				
>>Transaction ID Value	М		INTEGER (0127)	
>Long				
>>Transaction ID Value	M		INTEGER (032767)	

9.2.2.29 Transmission TOW Indicator

Table 67

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transmission TOW Indicator			ENUMERATE D (requested,	
			not requested)	

9.2.2.30 Uncertainty Ellipse

This IE contains the uncertainty ellipse of a geographical area.

Table 68

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Uncertainty semi-major	M		INTEGER (0127)	The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
Uncertainty semi-minor	M		INTEGER (0127)	The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^k-1)$
Orientation of major axis	M		INTEGER (089)	The relation between the IE value (N) and the angle (a) in degrees it describes is 2N≤ a <2(N+1)

9.2.2.31 Cell-ID Measured Results Info List

This IE contains the Cell-ID measurements of signals associated with one or more cells.

Table 69

46

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Cell-ID Measured Results Info		1< maxNoOfMeasNC ell >		
>UC-ID	М		9.2.2.37	The identifier of the measured cell.
>UTRAN Access Point Position with Altitude	М		9.2.2.36	Exact geographical position of the base station antenna.
>Geographical Area	0		9.2.2.6	
>Round Trip Time Info		01		FDD only
>>UE Rx-Tx Time Difference Type 2	M		INTEGER (08191)	According to mapping in [13].
>>UE Positioning Measurement Quality	М		9.2.2.35	Quality of the UE Rx-Tx time difference measurement.
>>Round Trip Time	М		INTEGER (032766)	According to mapping in [13].
>Rx Timing Deviation Info		01		3.84Mcps TDD only
>>Rx Timing Deviation	М		INTEGER (08191)	According to mapping in [14].
>>Timing Advance	М		INTEGER (063)	According to [4].
>Rx Timing Deviation LCR Info		01		1.28Mcps TDD only
>>Rx Timing Deviation LCR	М		INTEGER (0511)	According to mapping in [14].
>>Timing Advance LCR	М		INTEGER (02047)	According to mapping in [14].
>Pathloss	0		INTEGER (46158,)	Unit: dB downlink pathloss as defined in [4] subclause 10.3.7.3

Table 70

Range bound	Explanation
MaxNoOfMeasNCell	Maximum number of neighbour cells on which information can be
	reported. The value of MaxNoOfMeasNCell is 32.

9.2.2.32 OTDOA Measured Results Info List

This IE contains the OTDOA measurements of signals sent from the reference and neighbour cells.

Table 71

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
OTDOA Measured Results Info		1< MaxnoofMeasNC ell >		
>UC-ID	М		9.2.2.37	The identifier of the neighbour cell.
>UE SFN-SFN Observed Time Difference Type 2 Info		1		
>>SFN-SFN Observed Time Difference Type 2	M		INTEGER (040961,)	Gives the observed timing of the neighbour cell relative to the reference cell.
>>UE Positioning Measurement Quality	М		9.2.2.35	Quality of the observed time difference measurement.
>>Measurement Delay	M		INTEGER (065535,)	The interval of time, in units of 10ms frames, spanning the following two events:
				1) Time of applicability of the SFN-SFN Value or TUTRAN-GPS/SFN relationship provided for the corresponding neighbour cell in 9.2.2.33.
				2) The point in time when this corresponding SFN-SFN observed time difference measurement was captured by the UE.

Table 72

Range bound	Explanation
MaxNoOfMeasNCell	Maximum number of neighbouring cells on which information can be
	reported. The value of MaxNoOfMeasNCell is 32.

9.2.2.33 OTDOA Neighbour Cell Info

Table 73

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UC-ID	М		9.2.2.37	The identifier of the neighbour cell.
UTRAN Access Point Position with Altitude	М		9.2.2.36	Exact geographical position of the base station antenna.
CHOICE Relative Timing Difference Info	М			
>SFN-SFN Measurement				
Value Information				
>>SFN-SFN Value	M		INTEGER (0614399)	
>>SFN-SFN Quality	0		INTEGER (0255)	Indicates the standard deviation (std) of the SFN-SFN otd (observed time difference) measurements in 1/16 chip. SFN-SFN Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported SFN-SFN Value, where x is the reported SFN-SFN Value and μ = $E[x]$ is the expectation value of x.
>>SFN-SFN Drift Rate	М		INTEGER (-100+100)	Indicates the SFN-SFN drift rate in 1/256 chip per second. A positive value indicates that the Reference cell clock is running at a greater frequency than the measured neighbouring cell.
>>SFN-SFN Drift Rate Quality	0		INTEGER (0100)	Indicates the standard deviation (std) of the SFN-SFN drift rate measurements in 1/256 chip per second. SFN-SFN Drift Rate Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported SFN-SFN Drift Rate, where x is the reported SFN-SFN Drift Rate and $\mu = E[x]$ is the expectation value of x.
>T _{UTRAN-GPS} Measurement Value Information				
>>SFN	М		INTEGER (04095)	SFN during which the T _{UTRAN-GPS} measurement was performed
>>T _{UTRAN-GPS}		1		Indicates the UTRAN GPS Timing of Cell Frame for LCS.
>>>MS	М		INTEGER (016383)	Most significant part
>>>LS	М		INTEGER (042949672 95)	Least significant part
>>Tutran-gps Quality	0		INTEGER (0255)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ measurements in 1/16 chip. $T_{UTRAN-GPS}$ Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Value, where x is the reported $T_{UTRAN-GPS}$ Value and $\mu = E[x]$ is the expectation value of x.
>>Tutran-gps Drift Rate	М		INTEGER (-50+50)	Indicates the T _{UTRAN-GPS} drift rate in 1/256 chip per second. A positive value indicates that

			the UTRAN clock is running at a lower frequency than GPS clock.
>>Tutran-gps Drift Rate Quality	0	INTEGER (050)	Indicates the standard deviation (std) of the T _{UTRAN-GPS} drift rate measurements in 1/256 chip per second. T _{UTRAN-GPS} Drift Rate Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported T _{UTRAN-GPS} Drift Rate, where x is the reported T _{UTRAN-GPS} Drift Rate and μ = $E[x]$ is the expectation value of x.

9.2.2.34 OTDOA Reference Cell Info

Table 74

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UC-ID	М		9.2.2.37	The identifier of the reference cell.
UTRAN Access Point Position with Altitude	М		9.2.2.36	Exact geographical position of the base station antenna.
T _{UTRAN-GPS} Measurement Value Information		01		
>SFN	M		INTEGER (04095)	SFN during which the T _{UTRAN-} GPS measurement was performed
>T _{UTRAN-GPS}		1		Indicates the UTRAN GPS Timing of Cell Frame for LCS.
>>MS	М		INTEGER (016383)	Most significant part
>>LS	M		INTEGER (042949672 95)	Least significant part
>T _{utran-gps} Quality	0		INTEGER (0255)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ measurements in 1/16 chip. $T_{UTRAN-GPS}$ Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Value, where x is the reported $T_{UTRAN-GPS}$ Value and $\mu = E[x]$ is the expectation value of x.
>T _{utran-gps} Drift Rate	M		INTEGER (-50+50)	Indicates the T _{UTRAN-GPS} drift rate in 1/256 chip per second. A positive value indicates that the UTRAN clock is running at a lower frequency than GPS clock.
>T _{UTRAN-GPS} Drift Rate Quality	0		INTEGER (050)	Indicates the standard deviation (std) of the $T_{UTRAN-GPS}$ drift rate measurements in 1/256 chip per second. $T_{UTRAN-GPS}$ Drift Rate Quality = $\sqrt{E[(x-\mu)^2]}$ = std of reported $T_{UTRAN-GPS}$ Drift Rate, where x is the reported $T_{UTRAN-GPS}$ Drift Rate and $\mu = E[x]$ is the expectation value of x.

9.2.2.35 UE Positioning Measurement Quality

Table 75

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Std Resolution	M		BIT STRING (2)	Std Resolution field includes the resolution used in Std of Measurements field. Encoding on two bits as follows: '00' 10 meters '01' 20 meters '10' 30 meters '11' Reserved
Number of Measurements	M		BIT STRING (3)	The 'Number of Measurements' field indicates how many measurements have been used in the UE to determine the sample standard deviation of the measurements. Following 3 bit encoding is used: '001' 5-9 '010' 10-14 '011' 15-24 '100' 25-34 '101' 35-44 '110' 45-54 '111' 55 or more Special case: '000':In this case the field 'Std of Measurements' contains the std of the reported measurement value = $\sqrt{E[(x-\mu)^2]}$, where x is the reported value and μ = $E[x]$ is the expectation value (i.e. the true value) of x. This std can be used irrespective of the number of measurements and reporting of the number of measurements is not needed. Also other measurements such as Ec/No or Rx levels can be utilised in this case to evaluate the 'Std of Measurements' reported in this IE .
Std of Measurements	М		BIT STRING (5)	Std of Measurements field includes sample standard deviation of measurements (when number of measurements is reported in 'Number of Measurements' field) or standard deviation of the reported measurement value = $\sqrt{E[(x-\mu)^2]}$, where x is the reported value and μ = $E[x]$ is the expectation value (i.e. the true value) of x (when '000' is given in 'Number of Measurements' field). Following linear 5 bit encoding is used: '00000' 0 - (R*1-1) meters '00001' R*1 - (R*2-1) meters

	'000'	010' R*2 – (R*3-1) meters
	whe def	111' R*31 meters or more ere R is the resolution ined by Std Resolution d. E.g. R=20 m
	cor	responds to 0-19 m, 20-39 620+ m.

9.2.2.36 UTRAN Access Point Position with Altitude

The UTRAN Access Point Position with Altitude indicates the exact geographical position of the base station antenna. The altitude shall be included when available.

Table 76

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Geographical Coordinates	M		9.2.2.7	
Altitude and direction	0		9.2.2.2	

9.2.2.37 UTRAN Cell Identifier (UC-ID)

The UC-ID (UTRAN Cell identifier) is the identifier of a cell in one UTRAN.

Table 77

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RNC-ID	М		INTEGER (04095)	The identifier of one RNC in UTRAN.
C-ID	М		INTEGER (065535)	The identifier of a cell in one RNS.

9.2.2.38 Horizontal Accuracy Code

Table 78

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Horizontal Accuracy Code	M		INTEGER(0127)	The requested accuracy "r" is derived from the "Horizontal Accuracy Code" k by r = 10x(1.1 ^k -1)

9.2.2.39 Vertical Accuracy Code

Table 79

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Vertical Accuracy Code	M		INTEGER(0127)	The requested accuracy "v" is derived from the "Vertical Accuracy Code" k by v = 45x(1.025 ^k -1).

9.2.2.40 Accuracy Fulfilment Indicator

This IE indicates whether the returned position estimate satisfies the requested accuracy or not.

Table 80

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Accuracy Fulfilment Indicator	M		ENUMERATED (requested accuracy fulfilled, requested accuracy not fulfilled,)	

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.0 General

PCAP ASN.1 definition conforms with [7], [8], and [9].

The ASN.1 definition specifies the structure and content of PCAP messages. PCAP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct a PCAP message according to the PDU definitions module and with the following additional rules (Note that in the following IE means an IE in the object set with an explicit id. If one IE needed to appear more than once in one object set, then the different occurrences have different IE ids):

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list where the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

If a PCAP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.3.6.

Clause 9.3 presents the Abstract Syntax of PCAP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this clause and the tabular format in clauses 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, where the tabular format shall take precedence.

9.3.1 Usage of private message mechanism for non-standard use

The private message mechanism for non-standard use may be used:

- for special operator- (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor interoperability;
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.2 Elementary Procedure Definitions

__ *********************

```
IMPORTS
   Criticality,
    ProcedureCode,
   TransactionID
FROM PCAP-CommonDataTypes
    PositionCalculationRequest,
    PositionCalculationResponse,
    PositionCalculationFailure,
    InformationExchangeInitiationRequest,
    InformationExchangeInitiationResponse,
    InformationExchangeInitiationFailure,
    InformationReport,
    InformationExchangeTerminationRequest,
    {\tt InformationExchangeFailureIndication,}
    ErrorIndication,
   PrivateMessage
FROM PCAP-PDU-Contents
    id-PositionCalculation,
    id-InformationExchangeInitiation,
    id-InformationReporting,
    id-InformationExchangeTermination,
    id-InformationExchangeFailure,
    id-ErrorIndication,
    id-privateMessage
FROM PCAP-Constants;
__ *********************
-- Interface Elementary Procedure Class
__ *********************************
PCAP-ELEMENTARY-PROCEDURE ::= CLASS {
   &InitiatingMessage
                             OPTIONAL,
   &SuccessfulOutcome
   &UnsuccessfulOutcome OPTIONAL, &Outcome OPTIONAL,
                              ProcedureCode UNIQUE,
   &procedureCode
                               Criticality DEFAULT ignore
   &criticality
WITH SYNTAX {
   INITIATING MESSAGE &InitiatingMessage
[SUCCESSFUL OUTCOME &SuccessfulOutcome]
[UNSUCCESSFUL OUTCOME &UnsuccessfulOutcome]
[OUTCOME &Outcome]
    PROCEDURE CODE
                               &procedureCode
    [CRITICALITY
                               &criticality]
}
__ ********************
-- Interface PDU definitions
PCAP-PDU ::= CHOICE {
   P-PDU ::= CHOICE {
initiatingMessage | InitiatingMessage,
successfulOutcome | SuccessfulOutcome,
unsuccessfulOutcome | UnsuccessfulOutcome,
   out.come
                           Out.come.
    . . .
}
InitiatingMessage ::= SEQUENCE {
   procedureCode PCAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                    ({PCAP-ELEMENTARY-PROCEDURES}),
                   PCAP-ELEMENTARY-PROCEDURE.&criticality
    criticality
                                                                    ({PCAP-ELEMENTARY-
PROCEDURES \ {@procedureCode \} ) ,
   transactionID TransactionID,
    value
                   PCAP-ELEMENTARY-PROCEDURE.&InitiatingMessage
                                                                    ({PCAP-ELEMENTARY-
PROCEDURES \ {@procedureCode \} )
}
```

```
SuccessfulOutcome ::= SEQUENCE {
   procedureCode PCAP-ELEMENTARY-PROCEDURE.&procedureCode criticality PCAP-ELEMENTARY-PROCEDURE.&criticality
                                                                     ({PCAP-ELEMENTARY-PROCEDURES}),
                                                                     ( {PCAP-ELEMENTARY-
PROCEDURES \ { @procedureCode \} ) ,
    transactionID TransactionID,
                    PCAP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome
                                                                     ({PCAP-ELEMENTARY-
PROCEDURES \ {@procedureCode \} )
UnsuccessfulOutcome ::= SEQUENCE {
   procedureCode PCAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                     ({PCAP-ELEMENTARY-PROCEDURES}),
    criticality
                   PCAP-ELEMENTARY-PROCEDURE.&criticality
                                                                     ( PCAP-ELEMENTARY-
PROCEDURES \ {@procedureCode \} ) ,
    transactionID TransactionID,
    value
                    PCAP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome ({PCAP-ELEMENTARY-
PROCEDURES \ { @procedureCode \} )
Outcome ::= SEQUENCE {
   procedureCode PCAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                     ({PCAP-ELEMENTARY-PROCEDURES}),
                    PCAP-ELEMENTARY-PROCEDURE.&criticality
                                                                     ({PCAP-ELEMENTARY-
    criticality
PROCEDURES \ {@procedureCode \} ) ,
    transactionID TransactionID,
                   PCAP-ELEMENTARY-PROCEDURE.&Outcome
                                                                     ({PCAP-ELEMENTARY-
    value
PROCEDURES \ {@procedureCode \} )
__ ********************
-- Interface Elementary Procedure List
__ *******************
PCAP-ELEMENTARY-PROCEDURES PCAP-ELEMENTARY-PROCEDURE ::= {
    PCAP-ELEMENTARY-PROCEDURES-CLASS-1
    PCAP-ELEMENTARY-PROCEDURES-CLASS-2
}
PCAP-ELEMENTARY-PROCEDURES-CLASS-1 PCAP-ELEMENTARY-PROCEDURE ::= {
   positionCalculation
                                    informationExchangeInitiation,
}
PCAP-ELEMENTARY-PROCEDURES-CLASS-2 PCAP-ELEMENTARY-PROCEDURE ::= {
    informationReporting
    informationExchangeTermination
    informationExchangeFailure
    errorIndication
   privateMessage,
}
__ ********************
-- Interface Elementary Procedures
__ *****************
positionCalculation PCAP-ELEMENTARY-PROCEDURE ::= {
   INITIATING MESSAGE PositionCalculationRequest SUCCESSFUL OUTCOME PositionCalculationResponse
                            PositionCalculationResponse
    UNSUCCESSFUL OUTCOME PositionCalculationFailure
   UNSUCCESSFUL :
PROCEDURE CODE id-Pos. reject
                            id-PositionCalculation
}
informationExchangeInitiation PCAP-ELEMENTARY-PROCEDURE ::= {
   INITIATING MESSAGE InformationExchangeInitiationRequest SUCCESSFUL OUTCOME InformationExchangeInitiationResponse
                           InformationExchangeInitiationResponse
                         InformationExchangeInitiationFailure id-InformationExchangeInitiation
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
    CRITICALITY
                           reject
}
```

```
informationReporting PCAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE InformationReport
    PROCEDURE CODE
                             id-InformationReporting
                            ignore
    CRITICALITY
}
informationExchangeTermination PCAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE InformationExchangeTerminationRequest
    PROCEDURE CODE
                             id-InformationExchangeTermination
                             ignore
    CRITICALITY
}
informationExchangeFailure PCAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE InformationExchangeFailureIndication
PROCEDURE CODE id-InformationExchangeFailure
CRITICALITY ignore
    CRITICALITY
                             ignore
}
errorIndication PCAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE ErrorIndication
    PROCEDURE CODE
                             id-ErrorIndication
    CRITICALITY
                            ignore
}
\verb|privateMessage| PCAP-ELEMENTARY-PROCEDURE| ::= \{ \\
    INITIATING MESSAGE PrivateMessage PROCEDURE CODE id-privateMessage
    PROCEDURE CODE
    CRITICALITY
                            ignore
}
```

9.3.3 PDU Definitions

END

```
__ **********************************
-- PDU definitions for PCAP.
__ *****************
PCAP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-PDU-Contents (1) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ *********************
-- IE parameter types from other modules.
IMPORTS
   Cause,
   CriticalityDiagnostics,
   GPS-UTRAN-TRU,
   InformationExchangeID,
   InformationReportCharacteristics,
   InformationType,
   MeasuredResultsList,
   RequestedDataValue,
   RequestedDataValueInformation,
   UE-PositionEstimate,
   CellId-MeasuredResultsSets,
   OTDOA-MeasurementGroup,
   AccuracyFulfilmentIndicator,
   HorizontalAccuracyCode,
   VerticalAccuracyCode
FROM PCAP-IEs
```

TransactionID

```
FROM PCAP-CommonDataTypes
   ProtocolExtensionContainer{},
   ProtocolIE-ContainerList{},
   ProtocolIE-Container{},
   PrivateIE-Container{},
   PCAP-PRIVATE-IES,
   PCAP-PROTOCOL-EXTENSION,
   PCAP-PROTOCOL-IES
FROM PCAP-Containers
   id-Cause,
   id-CriticalityDiagnostics,
   id-GPS-UTRAN-TRU,
   id-InformationExchangeID,
   id-InformationExchangeObjectType-InfEx-Rprt,
   id-InformationExchangeObjectType-InfEx-Rqst,
   id-InformationExchangeObjectType-InfEx-Rsp,
   id-InformationReportCharacteristics,
   id-InformationType,
   id-GPS-MeasuredResultsList,
   id-RequestedDataValue,
   id-RequestedDataValueInformation,
   id-TransactionID,
   id-UE-PositionEstimate,
   id-CellId-MeasuredResultsSets,
   id-OTDOA-MeasurementGroup,
   id-AccuracyFulfilmentIndicator,
   id-HorizontalAccuracyCode,
   id-VerticalAccuracyCode
FROM PCAP-Constants;
__ **********************
-- POSITION CALCULATION REQUEST
__ **********************************
PositionCalculationRequest ::= SEQUENCE {
  OPTIONAL,
}
PositionCalculationRequestIEs PCAP-PROTOCOL-IES ::= {
  PRESENCE optional } |
   { ID id-GPS-MeasuredResultsList
                                   CRITICALITY reject TYPE MeasuredResultsList
        PRESENCE optional },
}
PositionCalculationRequestExtensions PCAP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional } |
   PRESENCE optional }
   { ID id-HorizontalAccuracyCode
                                CRITICALITY ignore EXTENSION HorizontalAccuracyCode
     PRESENCE optional } |
   { ID id-VerticalAccuracyCode
                                CRITICALITY ignore EXTENSION VerticalAccuracyCode
     PRESENCE optional },
}
__ *********************************
-- POSITION CALCULATION RESPONSE
__ *****************
PositionCalculationResponse ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {PositionCalculationResponseIEs} },
   protocolExtensions ProtocolExtensionContainer { {PositionCalculationResponseExtensions} }
   OPTIONAL.
```

```
}
PositionCalculationResponseIEs PCAP-PROTOCOL-IES ::= {
  PRESENCE
mandatory } |
  optional },
PositionCalculationResponseExtensions PCAP-PROTOCOL-EXTENSION ::= {
   { ID id-AccuracyFulfilmentIndicator CRITICALITY ignore EXTENSION AccuracyFulfilmentIndicator
     PRESENCE optional },
}
-- POSITION CALCULATION FAILURE
__ **********************************
PositionCalculationFailure ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {PositionCalculationFailureIEs} }, protocolExtensions ProtocolExtensionContainer { {PositionCalculationFailureExtensions} }
  OPTIONAL,
}
PositionCalculationFailureIEs PCAP-PROTOCOL-IES ::= {
                 CRITICALITY ignore TYPE Cause
  { ID id-Cause
                                                                      PRESENCE
mandatory} |
  PRESENCE
optional },
PositionCalculationFailureExtensions PCAP-PROTOCOL-EXTENSION ::= {
__ *********************
-- INFORMATION EXCHANGE INITIATION REQUEST
__ *******************
InformationExchangeInitiationRequest ::= SEQUENCE {
  protocolIEs ProtocolIE-Container {{InformationExchangeInitiationRequest-IEs}},
protocolExtensions ProtocolExtensionContainer {{InformationExchangeInitiationRequest-
Extensions}}
OPTIONAL,
}
InformationExchangeInitiationRequest-IEs PCAP-PROTOCOL-IES ::= {
  CRITICALITY reject TYPE
InformationExchangeID
  -- This IE represents both the Information Exchange Object Type IE and the choice based on the
Information Exchange Object Type
   -- as described in the tabular message format in clause 9.1.
                                          CRITICALITY reject TYPE InformationType
   { ID id-InformationType
                          PRESENCE
                                    mandatory }
  { ID id-InformationReportCharacteristics
                                          CRITICALITY reject TYPE
InformationReportCharacteristics
                                    PRESENCE mandatory }
  { ID id-GPS-UTRAN-TRU PRESENCE conditional },
                                          CRITICALITY reject TYPE GPS-UTRAN-TRU
  -- This IE shall be present if the information requested in the Information Type IE contains
GPS-related data
}
InformationExchangeInitiationRequest-Extensions PCAP-PROTOCOL-EXTENSION ::= {
```

```
InformationExchangeObjectType-InfEx-Rqst ::= CHOICE {
                                  RefPosition-InfEx-Rost,
   referencePosition
RefPosition-InfEx-Rqst ::= SEQUENCE {
   referencePositionEstimate UE-PositionEstimate, iE-Extensions ProtocolExtensionContainer { RefPositionItem-InfEx-Rqst-
   iE-Extensions
{\tt ExtIEs} \} \hspace{0.1in} {\tt OPTIONAL},
   . . .
RefPositionItem-InfEx-Rqst-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
__ *********************
-- INFORMATION EXCHANGE INITIATION RESPONSE
__ *********************
{\tt InformationExchangeInitiationResponse} \ ::= \ {\tt SEQUENCE} \ \big\{
   protocolIEs ProtocolIE-Container {{InformationExchangeInitiationResponse-IEs}} protocolExtensions ProtocolExtensionContainer {{InformationExchangeInitiationResponse-
                                                  `{{InformationExchangeInitiationResponse-IEs}},
Extensions}}
OPTIONAL,
InformationExchangeInitiationResponse-IEs PCAP-PROTOCOL-IES ::= {
                                                      CRITICALITY ignore TYPE
    { ID id-InformationExchangeID
                                                  PRESENCE mandatory } |
InformationExchangeID
    { ID id-InformationExchangeObjectType-InfEx-Rsp CRITICALITY ignore TYPE
{ ID id-CriticalityDiagnostics
CriticalityDiagnostics
                                                  PRESENCE optional
                                                                          },
  . . .
InformationExchangeInitiationResponse-Extensions PCAP-PROTOCOL-EXTENSION ::= {
{\tt InformationExchangeObjectType-InfEx-Rsp} \ ::= \ {\tt CHOICE} \ \big\{
   referencePosition
                                  RefPosition-InfEx-Rsp,
}
RefPosition-InfEx-Rsp ::= SEQUENCE {
   requestedDataValue RequestedDataValue,
                                  ProtocolExtensionContainer { { RefPositionItem-InfEx-Rsp-
    iE-Extensions
ExtIEs} } OPTIONAL,
RefPositionItem-InfEx-Rsp-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ *******************
-- INFORMATION EXCHANGE INITIATION FAILURE
__ **********************
InformationExchangeInitiationFailure ::= SEQUENCE {
   protocolIEs ProtocolIE-Container {{InformationExchangeInitiationFailure-IEs} protocolExtensions ProtocolExtensionContainer {{InformationExchangeInitiationFailure-
                                                  {{InformationExchangeInitiationFailure-IEs}},
{\tt Extensions}\}\} \hspace*{1cm} {\tt OPTIONAL},
InformationExchangeInitiationFailure-IES PCAP-PROTOCOL-IES ::= {
```

```
{ ID
        id-InformationExchangeID CRITICALITY ignore TYPE InformationExchangeID
   PRESENCE mandatory }
   { ID id-Cause
                                     CRITICALITY ignore TYPE Cause
   PRESENCE mandatory }
   { ID id-CriticalityDiagnostics
                                   CRITICALITY ignore TYPE CriticalityDiagnostics
   PRESENCE optional },
}
InformationExchangeInitiationFailure-Extensions PCAP-PROTOCOL-EXTENSION ::= {
__ **********************
-- INFORMATION REPORT
***************
InformationReport ::= SEQUENCE {
   protocolIEs ProtocolIE-Container {{InformationReport-IEs}}, protocolExtensions ProtocolExtensionContainer }
                      ProtocolExtensionContainer {{InformationReport-Extensions}}
   OPTIONAL,
}
InformationReport-IEs PCAP-PROTOCOL-IES ::= {
   { ID id-InformationExchangeID
                                                  CRITICALITY ignore TYPE
                                           PRESENCE mandatory } |
InformationExchangeID
   InformationExchangeObjectType-InfEx-Rprt PRESENCE mandatory },
}
InformationReport-Extensions PCAP-PROTOCOL-EXTENSION ::= {
InformationExchangeObjectType-InfEx-Rprt ::= CHOICE {
  referencePosition
                             RefPosition-InfEx-Rprt,
}
RefPosition-InfEx-Rprt ::= SEQUENCE {
  requestedDataValueInformation RequestedDataValueInformation,
   iE-Extensions
                              ProtocolExtensionContainer {{ RefPositionItem-InfEx-Rprt-ExtIEs
    OPTIONAL,
}}
}
{\tt RefPositionItem-InfEx-Rprt-ExtIEs} \ \ {\tt PCAP-PROTOCOL-EXTENSION} \ ::= \ \{
__ ********************
-- INFORMATION EXCHANGE TERMINATION REQUEST
__ *****************
InformationExchangeTerminationRequest ::= SEQUENCE {
                ProtocolIE-Container
                                               {{InformationExchangeTerminationRequest-
   protocolIEs
IEs}},
  protocolExtensions
                      ProtocolExtensionContainer {{InformationExchangeTerminationRequest-
Extensions}}
OPTIONAL,
InformationExchangeTerminationRequest-IEs PCAP-PROTOCOL-IES ::= {
  { ID id-InformationExchangeID CRITICALITY İgnore TYPE InformationExchangeID
          PRESENCE mandatory },
}
InformationExchangeTerminationRequest-Extensions PCAP-PROTOCOL-EXTENSION ::= {
```

```
}
__ *******************************
-- INFORMATION EXCHANGE FAILURE INDICATION
InformationExchangeFailureIndication ::= SEQUENCE {
  protocolIEs
                    ProtocolIE-Container
                                          {{InformationExchangeFailureIndication-
IEs}},
  protocolExtensions ProtocolExtensionContainer {{InformationExchangeFailureIndication-
Extensions}}
OPTIONAL,
  . . .
}
InformationExchangeFailureIndication-IES PCAP-PROTOCOL-IES ::= {
TYPE Cause
           PRESENCE mandatory },
}
InformationExchangeFailureIndication-Extensions PCAP-PROTOCOL-EXTENSION ::= {
__ *********************
-- ERROR INDICATION
__ **********************************
ErrorIndication ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {ErrorIndicationIEs} },
protocolExtensions ProtocolExtensionContainer { {ErrorIndicationExtensions} } OPTIONAL,
ErrorIndicationIEs PCAP-PROTOCOL-IES ::= {
   { ID id-Cause
                              CRITICALITY ignore TYPE Cause
                                                                       PRESENCE
optional } |
   PRESENCE
optional },
ErrorIndicationExtensions PCAP-PROTOCOL-EXTENSION ::= {
__ *******************
-- PRIVATE MESSAGE
PrivateMessage ::= SEQUENCE {
             PrivateIE-Container {{PrivateMessage-IEs}},
  privateIEs
}
PrivateMessage-IEs PCAP-PRIVATE-IES ::= {
END
```

9.3.4 Information Element Definitions

```
-- Information Element Definitions
__ **********************************
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-IEs (2) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   maxNrOfErrors,
   maxSat,
   maxSatAlmanac,
   maxNrOfLevels,
  maxNrOfMeasNCell,
   maxNrOfMeasurements,
   maxNrOfPoints,
   maxNrOfExpInfo,
   maxNrOfSets
FROM PCAP-Constants
   Criticality,
   ProcedureCode,
   ProtocolIE-ID,
   TransactionID,
   TriggeringMessage
FROM PCAP-CommonDataTypes
   ProtocolExtensionContainer{},
   PCAP-PROTOCOL-EXTENSION
FROM PCAP-Containers;
__ *******************
-- Accuracy Fulfilment Indicator
__ *******************
AccuracyFulfilmentIndicator ::= ENUMERATED{
  requested-Accuracy-Fulfilled,
   requested-Accuracy-Not-Fulfilled,
}
__ *********************
-- Almanac and Satellite Health SIB
__ ********************
{\tt AlmanacAndSatelliteHealthSIB} ::= {\tt SEQUENCE} \; \big\{
  gpsAlmanacAndSatelliteHealth GPS-AlmanacAndSatelliteHealth,
   satMask
                                BIT STRING (SIZE (1..32)),
                                BIT STRING (SIZE (8)),
   lsbTOW
   iE-Extensions
                                ProtocolExtensionContainer { { AlmanacAndSatelliteHealthSIB-
ExtIEs } } OPTIONAL,
}
AlmanacAndSatelliteHealthSIB-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
__ **********************
-- Cause IE
__ **********************
```

```
Cause ::= CHOICE {
   radioNetwork
                          CauseRadioNetwork,
   transport
                           CauseTransport,
   protocol
                            CauseProtocol,
                            CauseMisc,
   misc
CauseRadioNetwork ::= ENUMERATED {
    invalid-reference-information,
    information-temporarily-not-available,
    information-provision-not-supported-for-the-object,
   position-calculation-error-invalid-GPS-measured-results,
   position-calculation-error-invalid-CellID-measured-results,
   position-calculation-error-invalid-OTDOA-measured-results,
    \verb"position-calculation-error-AGPS-positioning-method-not-supported",
    \verb|position-calculation-error-CellID-positioning-method-not-supported|,\\
   position-calculation-error-OTDOA-positioning-method-not-supported,
    initial-UE-position-estimate-missing
}
CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
   unspecified,
}
CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
   abstract-syntax-error-ignore-and-notify,
   message-not-compatible-with-receiver-state,
   semantic-error,
    unspecified,
    abstract-syntax-error-falsely-constructed-message,
}
CauseMisc ::= ENUMERATED {
   processing-overload,
   hardware-failure,
   o-and-m-intervention,
   unspecified,
}
__ **********************
-- Cell Id Measured Results Sets
__ **********************
CellId-MeasuredResultsSets ::=
                                        SEQUENCE (SIZE (1..maxNrOfMeasurements)) OF
    CellId-MeasuredResultsInfoList
CellId-MeasuredResultsInfoList ::=
                                      SEQUENCE (SIZE (1..maxNrOfMeasNCell)) OF
    CellId-MeasuredResultsInfo
CellId-MeasuredResultsInfo ::=
                                        SEQUENCE {
   uC-ID
                                        UC-ID,
   uTRANAccessPointPositionAltitude UTRANAccessPointPositionAltitude,
                                        UE-PositionEstimate OPTIONAL,
RoundTripTimeInfo OPTIONAL, -- FDD only
   ue-PositionEstimate
                                UE-POSICIONES:

RoundTripTimeInfo
   roundTripTimeInfo
                                       RxTimingDeviationInfo OPTIONAL, -- 3.84Mcps TDD only OPTIONAL, -- 1.28Mcps TDD only OPTIONAL, -- 1.28Mcps TDD only OPTIONAL, -- 1.28Mcps TDD only OPTIONAL,
                                      RxTimingDeviationInfo
   rxTimingDeviationInfo
   rxTimingDeviationLCRInfo
                                      Rxıı...
Pathloss
   pathloss
                                        ProtocolExtensionContainer { { CellId-MeasuredResultsInfo-
    iE-Extensions
ExtIEs } } OPTIONAL,
}
Cellid-MeasuredResultsInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
RoundTripTimeInfo ::=
                                        SEQUENCE {
```

```
      ue-RxTxTimeDifferenceType2
      UE-RxTxTimeDifferenceType2,

      ue-PositioningMeasQuality
      UE-PositioningMeasQuality,

      reputational content
      PositioningMeasQuality

                                         RoundTripTime,
    roundTripTime
                                           ProtocolExtensionContainer { { RoundTripTimeInfo-ExtIEs } }
    iE-Extensions
        OPTIONAL,
}
RoundTripTimeInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
UE-RxTxTimeDifferenceType2 ::=
                                          INTEGER (0..8191)
UE-PositioningMeasQuality ::= SEQUENCE (
stdResolution BIT STRING (SIZE (2)),
BIT STRING (SIZE (3)),
    stdOfMeasurements
                                           BIT STRING (SIZE (5)),
                                          ProtocolExtensionContainer { { UE-PositioningMeasQuality-
    iE-Extensions
{\tt ExtIEs~}\}~\}~{\tt OPTIONAL},
UE-PositioningMeasQuality-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
RoundTripTime ::=
                                           INTEGER (0..32766)
-- Actual value RoundTripTime = IE value * 0.0625 + 876
UTRANAccessPointPositionAltitude ::=
                                           SEQUENCE {
   geographicalCoordinates
                                           GeographicalCoordinates,
    ga-AltitudeAndDirection
                                           GA-AltitudeAndDirection
                              OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { {
UTRANAccessPointPositionAltitude-ExtIEs } } OPTIONAL,
}
UTRANAccessPointPositionAltitude-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
RxTimingDeviationInfo ::=
                                           SEQUENCE {
   rxTimingDeviation
                                         RxTimingDeviation,
                                           TimingAdvance,
    timingAdvance
                                          ProtocolExtensionContainer { { RxTimingDeviationInfo-ExtIEs
    iE-Extensions
       OPTIONAL,
}
{\tt RxTimingDeviationInfo-ExtIEs} \ {\tt PCAP-PROTOCOL-EXTENSION} \ ::= \ \{
RxTimingDeviationLCRInfo ::=
                                           SEQUENCE {
    rxTimingDeviationLCR
                                           RxTimingDeviationLCR,
    timingAdvanceLCR
                                           TimingAdvanceLCR,
                                           ProtocolExtensionContainer { { RxTimingDeviationLCRInfo-
    iE-Extensions
ExtIEs } } OPTIONAL,
RxTimingDeviationLCRInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
RxTimingDeviation ::=
                                           INTEGER (0..8191)
RxTimingDeviationLCR ::=
                                           INTEGER (0..511)
TimingAdvance ::=
                                           INTEGER (0..63)
TimingAdvanceLCR ::=
                                           INTEGER (0..2047)
                                           INTEGER (46..158)
-- Unit: dB; as defined in [4] subclause 10.3.7.3
```

```
__ *****************
-- CriticalityDiagnostics
CriticalityDiagnostics ::= SEQUENCE {
   procedureCode
                          ProcedureCode
   OPTIONAL,
   triggeringMessage
                          TriggeringMessage
   OPTIONAL.
   procedureCriticality
                          Criticality
   OPTIONAL,
   transactionID
                           TransactionID
   OPTIONAL,
   iEsCriticalityDiagnostics CriticalityDiagnostics-IE-List OPTIONAL,
                  ProtocolExtensionContainer { {CriticalityDiagnostics-ExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
}
CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
   SEQUENCE {
      iECriticality
                           Criticality,
      iE-ID
                           ProtocolIE-ID,
      repetitionNumber
                          CriticalityDiagnosticsRepetition
      OPTIONAL,
      messageStructure
                          MessageStructure
      OPTIONAL,
      typeOfError
                           TypeOfError,
      iE-Extensions
                          ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs}
  OPTIONAL,
}
   }
CriticalityDiagnostics-IE-List-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnostics-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnosticsRepetition ::= INTEGER (0..255)
TypeOfError ::= ENUMERATED {
   not-understood,
   missing,
}
__ *********************
-- DGPSCorrections
__ **********************
DGPSCorrections ::=
                               SEQUENCE {
  gps-TOW-sec
                                  INTEGER (0..604799),
   statusHealth
                                  DiffCorrectionStatus,
  dgps-CorrectionSatInfoList
                                  DGPS-CorrectionSatInfoList
  OPTIONAL.
   -- not included if satelliteHealth is equal to noData or invalidData
                                  ProtocolExtensionContainer { { DGPSCorrections-ExtIEs } }
   iE-Extensions
   OPTIONAL,
}
DGPSCorrections-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
DiffCorrectionStatus ::=
                              ENUMERATED {
```

```
udre-1-0, udre-0-75, udre-0-5, udre-0-3,
                                udre-0-2, udre-0-1, noData, invalidData }
                             SEQUENCE (SIZE (1..maxSat)) OF
DGPS-CorrectionSatInfoList ::=
                                DGPS-CorrectionSatInfo
DGPS-CorrectionSatInfo ::=
                             SEQUENCE {
                                INTEGER (0..63),
   sat.ID
   iode
                                INTEGER (0..255),
   udre
                                UDRE,
                                PRC,
  prc
                                RRC.
   rrc
                                iE-Extensions
} } OPTIONAL,
}
DGPS-CorrectionSatInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
UDRE ::=
                             ENUMERATED {
                                lessThan1,
                                between1-and-4,
                                between4-and-8.
                                over8 }
                             INTEGER (-2047..2047)
PRC ::=
RRC ::=
                            INTEGER (-127..127)
__ ********************************
-- UE-PositionEstimate (i.e., Geographical Area)
-- UE-PositionEstimate is based on Geographical Area Description in 23.032
UE-PositionEstimate ::= CHOICE {
                         GA-Point,
  point
   pointWithUnCertainty
                         GA-PointWithUnCertainty,
   polygon
                         GA-Polygon,
   pointWithUncertaintyEllipse GA-PointWithUnCertaintyEllipse,
  pointWithAltitude GA-PointWithAltitude,
   pointWithAltitudeAndUncertaintyEllipsoid
                                         GA-PointWithAltitudeAndUncertaintyEllipsoid,
   ellipsoidArc
                         GA-EllipsoidArc,
   . . .
{\tt GeographicalCoordinates} \; ::= \; {\tt SEQUENCE} \; \left\{ \right.
   latitude
   OPTIONAL,
GeographicalCoordinates-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
GA-AltitudeAndDirection ::= SEQUENCE {
  . . .
}
GA-EllipsoidArc ::= SEQUENCE {
   geographicalCoordinates
                         GeographicalCoordinates,
   innerRadius
                         INTEGER (0..65535),
   uncertaintyRadius
                         INTEGER (0..127),
```

```
offsetAngle
                                INTEGER (0..179),
    includedAngle
                                 INTEGER (0..179),
    confidence
                                INTEGER (0..100),
                                ProtocolExtensionContainer { { GA-EllipsoidArc-ExtIEs} } OPTIONAL,
    iE-Extensions
}
GA-EllipsoidArc-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
GA-Point ::= SEQUENCE {
    geographicalCoordinates
                              GeographicalCoordinates,
    iE-Extensions
                                ProtocolExtensionContainer { {GA-Point-ExtIEs} } OPTIONAL,
}
GA-Point-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
GA-PointWithAltitude ::= SEQUENCE {
    geographicalCoordinates GeographicalCoordinates, altitudeAndDirection GA-AltitudeAndDirection,
    altitudeAndDirection
                                ProtocolExtensionContainer { GA-PointWithAltitude-ExtIEs} }
    iE-Extensions
OPTIONAL,
GA-PointWithAltitude-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
GA-PointWithAltitudeAndUncertaintyEllipsoid ::= SEQUENCE {
    {\tt geographicalCoordinates} \qquad {\tt GeographicalCoordinates},
    altitudeAndDirection
                                GA-AltitudeAndDirection,
   uncertaintyEllipse
                               GA-UncertaintyEllipse,
                               INTEGER (0..127),
   uncertaintyAltitude
                                INTEGER (0..100),
    confidence
    iE-Extensions
                                ProtocolExtensionContainer { { GA-
PointWithAltitudeAndUncertaintyEllipsoid-ExtIEs} } OPTIONAL,
}
GA-PointWithAltitudeAndUncertaintyEllipsoid-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
GA-PointWithUnCertainty ::=SEQUENCE {
   geographicalCoordinates GeographicalCoordinates,
    uncertaintyCode
                                INTEGER (0..127),
                                ProtocolExtensionContainer { GA-PointWithUnCertainty-ExtIEs} }
    iE-Extensions
OPTIONAL,
{\tt GA-PointWithUnCertainty-Extles} \ {\tt PCAP-PROTOCOL-EXTENSION} \ ::= \ \{
GA-PointWithUnCertaintyEllipse ::= SEQUENCE {
    geographicalCoordinates
uncertaintyEllipse
GeographicalCoordinates,
GA-UncertaintyEllipse,
    uncertaintyEllipse
                               INTEGER (0..100),
    confidence
                                ProtocolExtensionContainer { GA-PointWithUnCertaintyEllipse-
    iE-Extensions
ExtIEs } OPTIONAL,
GA-PointWithUnCertaintyEllipse-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
GA-Polygon ::= SEQUENCE (SIZE (1..maxNrOfPoints)) OF
    SEQUENCE {
        geographicalCoordinates
                                    GeographicalCoordinates,
                                     ProtocolExtensionContainer { {GA-Polygon-ExtIEs} } OPTIONAL,
        iE-Extensions
        . . .
    }
```

```
GA-Polygon-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
GA-UncertaintyEllipse ::= SEQUENCE {
   uncertaintySemi-major INTEGER (0..127), uncertaintySemi-minor INTEGER (0..127),
   orientationOfMajorAxis INTEGER (0..89),
}
__ *********************************
-- GPS-AcquisitionAssistance:
__ *********************
GPS-AcquisitionAssistance ::= SEQUENCE {
   gps-TOW-1msec INTEGER (0..604799999),
satelliteInformationList AcquisitionSatInfoList,
iE-Extensions ProtocolExtensionContainer { { GPS-AcquisitionAssistance-
ExtIEs } } OPTIONAL,
   . . .
}
GPS-AcquisitionAssistance-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
AcquisitionSatInfoList ::= SEQUENCE (SIZE (1..maxSat)) OF
                                         AcquisitionSatInfo
AcquisitionSatInfo ::=
                                    SEQUENCE {
                                         INTEGER (0..63),
    satID
    doppler0thOrder
                                          INTEGER (-2048..2047),
    extraDopplerInfo
                                          ExtraDopplerInfo
       OPTIONAL,
                                         INTEGER (0..1022),
INTEGER (0..19),
    codePhase
    integerCodePhase INTEGER (0..19)
gps-BitNumber INTEGER (0..3),
codePhaseSearchWindow CodePhaseSearch
azimuthAndElevation AzimuthAndEleva
                                          CodePhaseSearchWindow,
                                         AzimuthAndElevation
    azimuthAndElevation
        OPTIONAL,
                                     ProtocolExtensionContainer { { AcquisitionSatInfo-ExtIEs } }
    iE-Extensions
       OPTIONAL,
}
AcquisitionSatInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
ExtraDopplerInfo ::=
   doppler1stOrder
                                     SEQUENCE {
                                     INTEGER (-42..21),
    dopplerUncertainty
                                         DopplerUncertainty,
                                          ProtocolExtensionContainer { { ExtraDopplerInfo-ExtIEs } }
    iE-Extensions
   OPTIONAL,
}
ExtraDopplerInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
DopplerUncertainty ::=
                                      ENUMERATED {
                                         hz12-5, hz25, hz50, hz100, hz200, ...}
CodePhaseSearchWindow ::=
                                      ENUMERATED {
                                          w1023, w1, w2, w3, w4, w6, w8,
                                          w12, w16, w24, w32, w48, w64, w96, w128, w192 }
```

```
SEQUENCE {
AzimuthAndElevation ::=
                                 INTEGÈR (0..31),
  azimuth
                                   INTEGER (0..7),
   elevation
   iE-Extensions
                                   ProtocolExtensionContainer { { AzimuthAndElevation-ExtIEs }
} OPTIONAL,
}
AzimuthAndElevation-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
-- GPS Almanac and Satellite Health
__ *****************
GPS-AlmanacAndSatelliteHealth ::= SEQUENCE {
                                   BIT STRING (SIZE (8)),
   wn-a
   almanacSatInfoList
                                   AlmanacSatInfoList,
   svGlobalHealth
                                   BIT STRING (SIZE (364)) OPTIONAL,
   iE-Extensions
                                   ProtocolExtensionContainer { { GPS-
AlmanacAndSatelliteHealth-ExtIEs } }
                                      OPTIONAL,
}
GPS-AlmanacAndSatelliteHealth-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
AlmanacSatInfoList ::=
                                SEQUENCE (SIZE (1..maxSatAlmanac)) OF
                                   AlmanacSatInfo
                                SEQUENCE {
AlmanacSatInfo ::=
                                   BIT STRING (SIZE (2)),
   dataID
   satID
                                   INTEGER (0..63),
                                   BIT STRING (SIZE (16)),
   t-oa
                                   BIT STRING (SIZE (8)),
   deltaI
                                   BIT STRING (SIZE (16)),
                                   BIT STRING (SIZE (16)),
   omegaDot
   satHealth
                                   BIT STRING (SIZE (8)),
   a-Sqrt
                                   BIT STRING (SIZE (24)),
                                   BIT STRING (SIZE (24)),
   omega0
                                   BIT STRING (SIZE (24)).
   m()
   omega
                                   BIT STRING (SIZE (24)),
   af0
                                   BIT STRING (SIZE (11)),
                                   BIT STRING (SIZE (11)),
   af1
   iE-Extensions
                                   ProtocolExtensionContainer { { AlmanacSatInfo-ExtIEs } }
   OPTIONAL,
AlmanacSatInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ ********************
-- GPS Clock And Ephemeris Parameters
GPS-ClockAndEphemerisParameters ::= SEQUENCE {
                                   BIT STRING (SIZE (2)),
   code0nL2
                                   BIT STRING (SIZE (4)),
   uraIndex
   satHealth
                                    BIT STRING (SIZE (6)),
   iodc
                                   BIT STRING (SIZE (10)),
   12Pflag
                                   BIT STRING (SIZE (1)),
   sf1Revd
                                   SubFramelReserved,
```

```
t-GD
                                   BIT STRING (SIZE (8)),
   t-oc
                                   BIT STRING (SIZE (16)),
   af2
                                   BIT STRING (SIZE (8)),
   af1
                                   BIT STRING (SIZE (16)),
   af0
                                   BIT STRING (SIZE (22)),
                                   BIT STRING (SIZE (16)),
   c-rs
                                   BIT STRING (SIZE (16)),
   delta-n
                                   BIT STRING (SIZE (32)),
   m0
   c-uc
                                   BIT STRING (SIZE (16)),
                                   BIT STRING (SIZE (32)),
                                   BIT STRING (SIZE (16)),
   c-us
                                   BIT STRING (SIZE (32)),
   a-Sgrt
   t-oe
                                   BIT STRING (SIZE (16)),
   fitInterval
                                   BIT STRING (SIZE (1)),
   aodo
                                   BIT STRING (SIZE (5)),
                                   BIT STRING (SIZE (16)),
   c-ic
   omega0
                                   BIT STRING (SIZE (32)),
   c-is
                                   BIT STRING (SIZE (16)),
   i0
                                   BIT STRING (SIZE (32)),
                                   BIT STRING (SIZE (16)),
   c-rc
                                   BIT STRING (SIZE (32)),
   omega
   omegaDot
                                   BIT STRING (SIZE (24)),
                                   BIT STRING (SIZE (14)),
   iDot
   iE-Extensions
                                   ProtocolExtensionContainer { GPS-
ClockAndEphemerisParameters-ExtIEs } }
                                      OPTIONAL.
GPS-ClockAndEphemerisParameters-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SubFrame1Reserved ::=
                                SEQUENCE {
  reserved1
                                   BIT STRING (SIZE (23)),
   reserved2
                                    BIT STRING (SIZE (24)),
                                   BIT STRING (SIZE (24)),
   reserved3
                                   BIT STRING (SIZE (16))
  reserved4
}
__ *******************************
-- GPS Ionospheric Model
__ *********************
GPS-Ionospheric-Model ::=
                                SEQUENCE {
                                   BIT STRING (SIZE (8)),
  alfa0
   alfa1
                                   BIT STRING (SIZE (8)),
   alfa2
                                   BIT STRING (SIZE (8)),
   alfa3
                                   BIT STRING (SIZE (8)),
   beta0
                                   BIT STRING (SIZE (8)),
                                   BIT STRING (SIZE (8)),
   beta1
   beta2
                                   BIT STRING (SIZE (8)),
   beta3
                                   BIT STRING (SIZE (8)),
   iE-Extensions
                                   ProtocolExtensionContainer { { GPS-Ionospheric-Model-ExtIEs
} } OPTIONAL,
}
GPS-Ionospheric-Model-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
   . . .
}
__ **********************
-- GPS Measured Results
MeasuredResultsList ::=
                              SEQUENCE (SIZE (0..maxNrOfSets)) OF
   GPS-MeasuredResults
                               SEQUENCE {
GPS-MeasuredResults ::=
                                   INTEGER (0..604799999),
   qps-TOW-1msec
```

```
gps-TOW-rem-usec
                                   INTEGER (0..999)
       OPTIONAL,
   gps-MeasurementParamList GPS-MeasurementParamList,
                                   ProtocolExtensionContainer { { GPS-MeasuredResults-ExtIEs }
   iE-Extensions
   OPTIONAL,
   . . .
}
GPS-MeasuredResults-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
GPS-MeasurementParamList ::=
                              SEQUENCE (SIZE (1..maxSat)) OF
                                   GPS-MeasurementParam
                                SEQUENCE {
GPS-MeasurementParam ::=
                                   INTEGER (0..63),
   satelliteID
   c-N0
                                   INTEGER (0..63),
   doppler
                                    INTEGER (-32768..32768),
                                   INTEGER (0..1022),
   wholeGPS-Chips
   fractionalGPS-Chips
                                   INTEGER (0..1023),
   multipathIndicator
                                   MultipathIndicator,
   pseudorangeRMS-Error
                                   INTEGER (0..63),
                                   ProtocolExtensionContainer { GPS-MeasurementParam-ExtIEs }
   iE-Extensions
} OPTIONAL,
   . . .
}
                                ENUMERATED {
MultipathIndicator ::=
                                    nm,
                                    low,
                                    medium,
                                    high }
GPS-MeasurementParam-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ *********************
-- GPS Navigation Model
__ ***********************************
GPS-NavigationModel ::= SEQUENCE (SIZE (1..maxSat)) OF
                                   NavigationModelSatInfo
NavigationModelSatInfo ::=
                               SEQUENCE {
                                 INTEGER (0..63),
   satID
   satelliteStatus
                                    SatelliteStatus,
   gps-clockAndEphemerisParms GPS-ClockAndEphemerisParameters
          OPTIONAL,
   -- This IE is not present if satelliteStatus is es-SN
   iE-Extensions
                                   ProtocolExtensionContainer { { NavigationModelSatInfo-ExtIEs
} } OPTIONAL,
   . . .
}
NavigationModelSatInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
SatelliteStatus ::=
                                ENUMERATED {
                                    ns-NN,
                                    es-SN,
                                    es-NN,
                                    rev2,
                                    rev }
 _ ********************
```

```
-- GPS Real Time Integrity
__ ********************
GPS-RealTimeIntegrity ::= CHOICE {
  badSatellites BadSatList,
noBadSatellites NoBadSatellites,
}
BadSatList ::=
                               SEQUENCE (SIZE (1..maxSat)) OF
                                  INTEGER (0..63)
NoBadSatellites ::= NULL
__ *****************
-- GPS Reference Time
__ *********************************
GPS-ReferenceTime ::=
                               SEQUENCE {
                                  INTEGER (0..1023),
   gps-Week
   gps-TOW-1msec
                                   INTEGER (0..604799999),
   gps-TOW-rem-usec
                                  INTEGER (0..999)
   OPTIONAL,
                                  GPS-TOW-AssistList
   gps-TOW-AssistList
   OPTIONAL,
                                 ProtocolExtensionContainer { { GPS-ReferenceTime-ExtIEs } }
   iE-Extensions
   OPTIONAL,
   . . .
}
GPS-ReferenceTime-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
\texttt{GPS-TOW-AssistList} \; ::= \qquad \qquad \texttt{SEQUENCE} \; (\texttt{SIZE} \; (\texttt{1..maxSat})) \; \, \texttt{OF}
                                 GPS-TOW-Assist
                              SEQUENCE {
GPS-TOW-Assist ::=
                                  INTEGÈR (0..63),
   satID
   tlm-Message
                                  BIT STRING (SIZE (14)),
   antiSpoof
                                  BOOLEAN,
                                  BOOLEAN.
   alert
   tlm-Reserved
                                 BIT STRING (SIZE (2)),
                                  ProtocolExtensionContainer { { GPS-TOW-Assist-ExtIEs } }
   iE-Extensions
   OPTIONAL,
}
GPS-TOW-Assist-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
__ ********************************
-- GPS Transmission TOW
__ *****************
GPS-Transmission-TOW ::= INTEGER (0..604799)
__ ********************
-- GPS UTC Model
__ *********************************
GPS-UTC-Model ::=
                               SEQUENCE {
  a1
                                 BIT STRING (SIZE (24)),
   a0
                                   BIT STRING (SIZE (32)),
                                  BIT STRING (SIZE (8)),
   t-ot
```

```
delta-t-LS
                           BIT STRING (SIZE (8)),
  wn-t
                            BIT STRING (SIZE (8)),
  wn-lsf
                           BIT STRING (SIZE (8)),
  dn
                           BIT STRING (SIZE (8)),
  delta-t-LSF
                           BIT STRING (SIZE (8)),
  iE-Extensions
                           ProtocolExtensionContainer { GPS-UTCmodel-ExtIEs } }
  OPTIONAL,
}
GPS-UTCmodel-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ *****************
-- GPS UTRAN Time Relationship Uncertainty
-- nsec=nanosecond, usec=microsecond, msec=millisecond, sec=second
GPS-UTRAN-TRU ::= ENUMERATED {
                nsec-50.
                nsec-500,
                usec-1,
                usec-10,
                msec-1,
                msec-10.
                msec-100
                unreliable,
                ...}
__ *********************
-- Information Exchange ID
InformationExchangeID ::= INTEGER (0..1048575)
__ **********************
-- Information Report Characteristics
__ *******************
InformationReportCharacteristics ::= SEQUENCE {
  -- present if type indicates periodic
}
InformationReportCharacteristicsType ::= ENUMERATED {
  onDemand,
  periodic,
  onModification,
}
InformationReportPeriodicity ::= CHOICE {
  min INTEGER (1..60, ...),
 Unit min, Step 1min
             INTEGER (1..24, ...),
  hour
-- Unit hour, Step 1hour
}
__ *******************
-- Information Type
__ *****************
```

```
InformationType ::= CHOICE {
    implicitInformation
                                MethodType,
    explicitInformation
                                ExplicitInformationList,
}
ExplicitInformationList ::= SEQUENCE (SIZE (1..maxNrOfExpInfo)) OF ExplicitInformation
ExplicitInformation ::= CHOICE {
    almanacAndSatelliteHealth
                                    AlmanacAndSatelliteHealth,
    utcModel
                                    UtcModel,
    ionosphericModel
                                    IonosphericModel,
   navigationModel
                                    NavigationModel,
   dgpsCorrections
                                    DgpsCorrections,
   referenceTime
                                    ReferenceTime,
                              AcquisitionAssistance,
   acquisitionAssistance
                                    RealTimeIntegrity,
   realTimeIntegrity
    almanacAndSatelliteHealthSIB AlmanacAndSatelliteHealthSIB-InfoType,
}
AlmanacAndSatelliteHealth ::= NULL
UtcModel ::= SEQUENCE {
    transmissionTOWIndicator
                                TransmissionTOWIndicator,
    iE-Extensions
                                ProtocolExtensionContainer { { UtcModel-ExtIEs } } OPTIONAL,
}
UtcModel-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
IonosphericModel ::= SEQUENCE {
    transmissionTOWIndicator
                                TransmissionTOWIndicator,
                                ProtocolExtensionContainer { { IonosphericModel-ExtIEs } } OPTIONAL,
    iE-Extensions
IonosphericModel-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
NavigationModel ::= SEQUENCE {
   transmissionTOWIndicator TransmissionTOWIndicator,
   navModelAdditionalData NavModelAdditionalData OPTIONAL, iE-Extensions ProtocolExtensionContainer { { NavigationModel-ExtIEs } }
   OPTIONAL,
}
NavigationModel-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
NavModelAdditionalData ::= SEQUENCE {
    gps-Week
                             INTEGER (0..1023),
    gps-TOE
                                INTEGER (0..167),
    t-TOE-limit
                               INTEGER (0..10),
                             SatelliteRelatedDataList,
ProtocolExtensionContainer { { NavModelAdditionalData-ExtIEs } }
   satRelatedDataList
    iE-Extensions
OPTIONAL,
    . . .
}
NavModelAdditionalData-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
}
SatelliteRelatedDataList ::= SEQUENCE (SIZE (0..maxSat)) OF SatelliteRelatedData
SatelliteRelatedData ::= SEQUENCE {
                                INTEGER (0..63),
    satID
    iode
                                INTEGER (0..255),
```

```
iE-Extensions
                         ProtocolExtensionContainer { { SatelliteRelatedData-ExtIEs } }
OPTIONAL,
}
SatelliteRelatedData-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
DgpsCorrections ::= NULL
ReferenceTime ::= NULL
AcquisitionAssistance ::= NULL
RealTimeIntegrity ::= NULL
AlmanacAndSatelliteHealthSIB-InfoType ::= SEQUENCE {
   transmissionTOWIndicator TransmissionTOWIndicator,
                         ProtocolExtensionContainer { { AlmanacAndSatelliteHealthSIB-
   iE-Extensions
InfoType-ExtIEs } } OPTIONAL,
AlmanacAndSatelliteHealthSIB-InfoType-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
TransmissionTOWIndicator ::= ENUMERATED {
   requested,
   not-Requested
}
__ *********************************
-- Message Structure
MessageStructure ::= SEQUENCE (SIZE (1..maxNrOfLevels)) OF
  SEQUENCE {
      iE-ID ProtocolIE-ID, repetitionNumber MessageStructureRepetition
   OPTIONAL,
      iE-Extensions
                        ProtocolExtensionContainer { {MessageStructure-ExtIEs} }
OPTIONAL,
MessageStructureRepetition ::= INTEGER (1..256)
MessageStructure-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
__ ***********************************
-- Method Type
__ **********************
MethodType ::= ENUMERATED {
  ue-assisted,
   ue-based,
   . . .
}
***************
-- OTDOA Measurement Group
OTDOA-MeasurementGroup ::=
                            SEQUENCE {
                                OTDOA-ReferenceCellInfo,
```

```
otdoa-NeighbourCellInfoList,
    otdoa-MeasuredResultsSets
                                         OTDOA-MeasuredResultsSets,
                                         ProtocolExtensionContainer { { OTDOA-MeasurementGroup-ExtIEs
   iE-Extensions
    OPTIONAL,
} }
}
OTDOA-MeasurementGroup-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
                                          SEQUENCE {
OTDOA-ReferenceCellInfo ::=
                                          TIC-TD.
    uTRANAccessPointPositionAltitude UTRANAccessPointPositionAltitude,
    tUTRANGPSMeasurementValueInfo
                                         TUTRANGPSMeasurementValueInfo
               OPTIONAL,
                                         ProtocolExtensionContainer { { OTDOA-ReferenceCellInfo-
   iE-Extensions
ExtIEs } }
             OPTIONAL,
}
OTDOA-ReferenceCellInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
                                         SEQUENCE (SIZE (1..maxNrOfMeasNCell)) OF
OTDOA-NeighbourCellInfoList ::=
   OTDOA-NeighbourCellInfo
                                         SEQUENCE {
OTDOA-NeighbourCellInfo ::=
   uC-ID
                                         UC-ID,

    uTRANAccessPointPositionaltitude
    UTRANAccessPointPositionaltitute

    relativeTimingDifferenceInfo
    RelativeTimingDifferenceInfo,

    iE-Extensions
    ProtocolExtensionContainer {

                                         UTRANAccessPointPositionAltitude,
                                         ProtocolExtensionContainer { { OTDOA-NeighbourCellInfo-
               OPTIONAL.
ExtIEs } }
OTDOA-NeighbourCellInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
OTDOA-MeasuredResultsSets ::=
                                          SEQUENCE (SIZE (1..maxNrOfMeasurements)) OF
    OTDOA-MeasuredResultsInfoList
OTDOA-MeasuredResultsInfoList ::=
                                         SEQUENCE (SIZE (1..maxNrOfMeasNCell)) OF
   OTDOA-MeasuredResultsInfo
OTDOA-MeasuredResultsInfo ::=
                                         SEQUENCE {
                                          UC-ID,
    \verb"ue-SFNSFNTimeDifferenceType2Info" UE-SFNSFNTimeDifferenceType2Info",
                                          ProtocolExtensionContainer { { OTDOA-MeasuredResultsInfo-
    iE-Extensions
ExtIEs } } OPTIONAL,
OTDOA-MeasuredResultsInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
UE-SFNSFNTimeDifferenceType2Info ::= SEQUENCE {
   ue-SFNSFNTimeDifferenceType2 INTEGER (0..40961),
ue-PositioningMeasOuality UE-PositioningMeasO
    ue-PositioningMeasQuality
                                          UE-PositioningMeasQuality,
   measurementDelay
                                         INTEGER (0..65535),
                                         ProtocolExtensionContainer { { UE-SFNSFNTimeDifferenceInfo-
    iE-Extensions
               OPTIONAL.
ExtIEs } }
UE-SFNSFNTimeDifferenceInfo-ExtlEs PCAP-PROTOCOL-EXTENSION ::= {
UC-ID ::=
                                          SEOUENCE {
                                          INTEGER (0..4095),
   rNC-ID
    c-ID
                                          INTEGER (0..65535),
                                          ProtocolExtensionContainer { { UC-ID-ExtIEs } }
   iE-Extensions
   OPTIONAL,
```

```
}
UC-ID-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
RelativeTimingDifferenceInfo ::= CHOICE {
   sFNSFNMeasurementValueInfo SFNSFNMeasurementValueInfo, tUTRANGPSMeasurementValueInfo TUTRANGPSMeasurementValueInfo,
}
SFNSFNMeasurementValueInfo ::= SEQUENCE {
    sFNSFNValue
                                        SFNSFNValue,
   sFNSFNQuality
                                        SFNSFNQuality
               OPTIONAL,
    sFNSFNDriftRate
                                       SFNSFNDriftRate,
    sFNSFNDriftRateQuality
                                       SFNSFNDriftRateQuality
               OPTIONAL,
                                       ProtocolExtensionContainer { { SFNSFNMeasurementValueInfo-
   iE-Extensions
ExtIEs } } OPTIONAL,
SFNSFNMeasurementValueInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
SFNSFNValue ::=
                                        INTEGER (0..614399)
SFNSFNQuality ::=
                                        INTEGER (0..255)
-- Unit chip, Step 1/16 chip, Range 0.. 255/16 chip
SFNSFNDriftRate ::=
                                       INTEGER (-100..100)
-- Unit chip/s, Step 1/256 chip/s, Range -100/256..+100/256 chip/s
SFNSFNDriftRateQuality ::=
                                       INTEGER (0..100)
-- Unit chip/s, Step 1/256 chip/s, Range 0..100/256 chip/s
TUTRANGPSMeasurementValueInfo ::= SEQUENCE {
    tUTRANGPS
                                        TUTRANGPS.
    {\tt tUTRANGPSQuality}
                                       TUTRANGPSQuality
                   OPTIONAL,
                                      TUTRANGPSDriftRate,
    tUTRANGPSDriftRate
    tUTRANGPSDriftRateQuality
                                       TUTRANGPSDriftRateQuality
                   OPTIONAL,
   iE-Extensions
                                       ProtocolExtensionContainer { {
TUTRANGPSMeasurementValueInfo-ExtIEs } } OPTIONAL,
}
TUTRANGPSMeasurementValueInfo-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
}
SFN ::=
                                        INTEGER (0..4095)
TUTRANGPS ::=
                                        SEOUENCE {
                                        INTEGER (0..16383),
   ms-part
                                        INTEGER (0..4294967295)
   ls-part
TUTRANGPSOuality ::=
                                        INTEGER (0..255)
-- Unit chip, Step 1/16 chip, Range 0.. 255/16 chip
TUTRANGPSDriftRate ::=
                                       INTEGER (-50..50)
-- Unit chip/s, Step 1/256 chip/s, Range -50/256..+50/256 chip/s
TUTRANGPSDriftRateQuality ::=
                                      INTEGER (0..50)
-- Unit chip/s, Step 1/256 chip/s, Range 0..50/256 chip/s
__ ********************
-- Requested Data Value
```

END

```
RequestedDataValue ::= SEQUENCE {
   qpsAlmanacAndSatelliteHealth
                                 GPS-AlmanacAndSatelliteHealth
   OPTIONAL,
   gps-UTC-Model
                                   GPS-UTC-Model
   OPTIONAL,
   gps-Ionospheric-Model
                                   GPS-Ionospheric-Model
   OPTIONAL,
   gps-NavigationModel
                                   GPS-NavigationModel
   OPTIONAL,
   dgpsCorrections
                                   DGPSCorrections
   OPTIONAL.
   referenceTime
                                   GPS-ReferenceTime
   OPTIONAL,
   gps-AcquisitionAssistance
                                   GPS-AcquisitionAssistance
   OPTIONAL,
   gps-RealTime-Integrity
                                   GPS-RealTimeIntegrity
   OPTIONAL,
   almanacAndSatelliteHealthSIB
                                  AlmanacAndSatelliteHealthSIB
   OPTIONAL,
                                   GPS-Transmission-TOW
   gps-Transmission-TOW
   OPTIONAL,
   iE\text{-}Extensions
                                   ProtocolExtensionContainer { { RequestedDataValue-ExtIEs} }
   OPTIONAL,
}
--at least one of the above IEs shall be present in the requested data value
RequestedDataValue-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
__ *********************************
-- Requested Data Value Information
__ *****************
RequestedDataValueInformation ::= CHOICE {
   informationAvailable InformationAvailable, informationNotAvailable InformationNotAvailable
}
InformationAvailable::= SEQUENCE {
   requestedDataValue RequestedDataValue,
   iE-Extensions
                        ProtocolExtensionContainer { { InformationAvailable-ExtIEs} }
   OPTIONAL,
}
InformationAvailable-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
InformationNotAvailable ::= NULL
__ ********************************
-- Horizontal Accuracy Code
__ *******************
HorizontalAccuracyCode ::= INTEGER (0..127)
__ **********************
-- Vertical Accuracy Code
__ ***********************************
VerticalAccuracyCode ::= INTEGER (0..127)
```

9.3.5 Common Definitions

```
-- Common definitions
__ *********************
PCAP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ *********************************
-- Extension constants
__ **********************
maxPrivateIEs
                                  INTEGER ::= 65535
maxProtocolExtensions
                                  INTEGER ::= 65535
maxProtocolIEs
__ *********************************
-- Common Data Types
Criticality
          ::= ENUMERATED { reject, ignore, notify }
          ::= ENUMERATED { optional, conditional, mandatory }
Presence
PrivateIE-ID ::= CHOICE {
               INTEGER (0..65535),
                OBJECT IDENTIFIER
  global
ProcedureCode
             ::= INTEGER (0..255)
ProtocolIE-ID
             ::= INTEGER (0..maxProtocolIEs)
             ::= CHOICE {
TransactionID
  shortTID
              INTEGER (0..127),
                 INTEGER (0..32767)
   longTID
outcome }
END
```

9.3.6 Constant Definitions

```
ProcedureCode,
    ProtocolIE-ID
FROM PCAP-CommonDataTypes;
-- Elementary Procedures
__ ********************
id-PositionCalculationProcedureCode::=1id-InformationExchangeInitiationProcedureCode::=2id-InformationReportingProcedureCode::=3id-InformationExchangeTerminationProcedureCode::=4id-InformationExchangeFailureProcedureCode::=5id-ErrorIndicationProcedureCode::=6id-privateMessageProcedureCode::=7
__ *********************************
__ ***********************************
maxNrOfErrors
                                          INTEGER ::= 256
maxSat
                                         INTEGER ::= 16
                                         INTEGER ::= 32
INTEGER ::= 256
maxSatAlmanac
maxNrOfLevels
                                         INTEGER ::= 15
maxNrOfPoints
                                         INTEGER ::= 32
INTEGER ::= 32
maxNrOfExpInfo
maxNrOfMeasNCell
maxNrOfMeasurements
                                          INTEGER ::= 16
maxNrOfSets
                                           INTEGER ::= 3
__ ********************
-- IEs
__ *********************************
id-Cause
                                                         ProtocolIE-ID ::= 1
id-CriticalityDiagnostics
                                                        ProtocolIE-ID ::= 2
id-GPS-UTRAN-TRU
                                                         ProtocolIE-ID ::= 3
id-InformationExchangeID
id-InformationExchangeObjectType-InfEx-Rprt
id-InformationExchangeObjectType-InfEx-Rqst
id-InformationExchangeObjectType-InfEx-Rsp
id-InformationReportCharacteristics
id-InformationType
ProtocolIE-ID ::= 5
ProtocolIE-ID ::= 6
ProtocolIE-ID ::= 7
ProtocolIE-ID ::= 8
ProtocolIE-ID ::= 8
ProtocolIE-ID ::= 9
ProtocolIE-ID ::= 9
id-InformationExchangeID
                                                        ProtocolIE-ID ::= 4
                                                        ProtocolIE-ID ::= 10
id-GPS-MeasuredResultsList
                                                        ProtocolIE-ID ::= 11
id-MethodType
                                                       ProtocolIE-ID ::= 12
id-RefPosition-InfEx-Rqst
                                                       ProtocolIE-ID ::= 13
ProtocolIE-ID ::= 14
id-RefPosition-InfEx-Rsp
id-RefPosition-Inf-Rprt
                                                       ProtocolIE-ID ::= 15
id-RequestedDataValue
                                                       ProtocolIE-ID ::= 16
ProtocolIE-ID ::= 17
id-RequestedDataValueInformation
id-TransactionID
                                                       ProtocolIE-ID ::= 18
ProtocolIE-ID ::= 20
ProtocolIE-ID ::= 22
id-UE-PositionEstimate
id-CellId-MeasuredResultsSets
id-OTDOA-MeasurementGroup
                                                        ProtocolIE-ID ::= 23
ProtocolIE-ID ::= 24
id-AccuracyFulfilmentIndicator
id-HorizontalAccuracyCode
id-VerticalAccuracyCode
                                                         ProtocolIE-ID ::= 25
9.3.7 Container Definitions
__ ***********************************
-- Container definitions
__ **********************
```

```
PCAP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) pcap(4) version1 (1) pcap-Containers (5) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ *********************
-- IE parameter types from other modules.
__ *******************
IMPORTS
  Criticality,
  Presence.
  PrivateIE-ID,
  ProtocolIE-ID,
  maxPrivateIEs,
   maxProtocolExtensions,
   maxProtocolIEs
FROM PCAP-CommonDataTypes;
__ **********************************
-- Class Definition for Protocol IEs
__ **********************
PCAP-PROTOCOL-IES ::= CLASS {
   &id ProtocolIE-ID UNIQUE, &criticality Criticality,
  &id
   &Value,
  &presence
                  Presence
   لانا &id
CRITICALITY &criticality
TYPE &Value
PRESENCE
WITH SYNTAX {
  TD
}
__ *********************
-- Class Definition for Protocol Extensions
__ ***********************************
PCAP-PROTOCOL-EXTENSION ::= CLASS {
              ProtocolIE-ID UNIQUE,
Criticality,
  ьis
   &criticality
   &Extension,
                  Presence
  &presence
WITH SYNTAX {
  ID &id
CRITICALITY &criticality
EXTENSION &Extension
PRESENCE
__ ******************************
-- Class Definition for Private IEs
__ *******************
PCAP-PRIVATE-IES ::= CLASS {
   PrivateIE-ID, &criticality Criticality &Value
   &Value,
                  Presence
  &presence
WITH SYNTAX {
                 &id
&criticality
   ID
   CRITICALITY
```

```
TYPE
                                              &Value
       PRESENCE
                                             &presence
}
    *****************
-- Container for Protocol IEs
__ ********************************
ProtocolIE-Container {PCAP-PROTOCOL-IES : IEsSetParam} ::=
       SEQUENCE (SIZE (0..maxProtocolIEs)) OF
               ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {PCAP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
                                 PCAP-PROTOCOL-IES.&id
                                                                                                     ({IEsSetParam}),
       criticality
                                            PCAP-PROTOCOL-IES.&criticality
                                                                                                                   ({IEsSetParam}{@id}),
       value
                                             PCAP-PROTOCOL-IES.&Value
                                                                                                                   ({IEsSetParam}{@id})
}
    ******************
-- Container Lists for Protocol IE Containers
__ ********************************
ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, PCAP-PROTOCOL-IES :
IEsSetParam} ::=
       SEQUENCE (SIZE (lowerBound..upperBound)) OF
               ProtocolIE-Container {{IEsSetParam}}
__ *********************
-- Container for Protocol Extensions
__ *********************
ProtocolExtensionContainer {PCAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
       SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
               ProtocolExtensionField {{ExtensionSetParam}}
{\tt ProtocolExtensionField} \  \, \{{\tt PCAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt ExtensionSetParam} \} \  \, ::= \  \, {\tt SEQUENCE} \  \, \{ \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt ExtensionSetParam} \} \  \, ::= \  \, {\tt SEQUENCE} \  \, \{ \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt ExtensionSetParam} \} \  \, ::= \  \, {\tt SEQUENCE} \  \, \{ \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} \  \, : \  \, {\tt CAP-PROTOCOL-EXTENSION} 
       PCAP-PROTOCOL-EXTENSION.&id criticality PCAP-PROTOCOL PUTER SION.
                                                                                                         ({ExtensionSetParam}),
                                             PCAP-PROTOCOL-EXTENSION.&criticality
                                                                                                                           ({ExtensionSetParam}{@id}),
       extensionValue PCAP-PROTOCOL-EXTENSION. & Extension
                                                                                                                         ({ExtensionSetParam}{@id})
}
__ **********************************
-- Container for Private IEs
__ **********************************
PrivateIE-Container {PCAP-PRIVATE-IES : IEsSetParam } ::=
       SEQUENCE (SIZE (1.. maxPrivateIEs)) OF
               PrivateIE-Field {{IEsSetParam}}
PrivateIE-Field {PCAP-PRIVATE-IES : IEsSetParam} ::= SEQUENCE {
                              PCAP-PRIVATE-IES.&id
PCAP-PRIVATE-IES.&criticality
                                                                                                      ({IEsSetParam}),
       criticality
                                                                                                                    ({IEsSetParam}{@id}),
                                           PCAP-PRIVATE-IES.&Value
       value
                                                                                                                   ({IEsSetParam}{@id})
}
END
```

9.4 Message Transfer Syntax

PCAP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in [9].

Handling of Unknown, Unforeseen and Erroneous Protocol Data

10.1 General

Protocol Error cases can be divided into three classes:

- Transfer Syntax Error.
- Abstract Syntax Error.
- Logical Error.

Protocol errors can occur in the following functions within a receiving node.

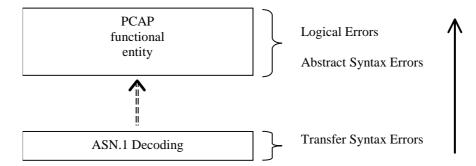


Figure 10: Protocol Errors in PCAP

The information stated in subclauses 10.2, 10.3 and 10.4, to be included in the message used when reporting an error, is what at minimum shall be included. Other optional information elements within the message may also be included, if available. This is also valid for the case when the reporting is done with a response message. The latter is an exception to what is stated in subclause 4.1.

10.2 Transfer Syntax Error

A Transfer Syntax Error occurs when the receiver is not able to decode the received physical message. Transfer syntax errors are always detected in the process of ASN.1 decoding. If a Transfer Syntax Error occurs, the receiver should initiate Error Indication procedure with appropriate cause value for the Transfer Syntax protocol error.

Examples for Transfer Syntax Errors are:

- Violation of value ranges in ASN.1 definition of messages. e.g.: If an IE has a defined value range of 0 to 10 (ASN.1: INTEGER (0..10)), and 12 will be received, then this will be treated as a transfer syntax error.
- Violation in list element constraints. e.g.: If a list is defined as containing 1 to 10 elements, and 12 elements will be received, than this case will be handled as a transfer syntax error.
- Missing mandatory elements in ASN.1 SEQUENCE definitions (as sent by the originator of the message).
- Wrong order of elements in ASN.1 SEQUENCE definitions (as sent by the originator of the message).

10.3 Abstract Syntax Error

10.3.1 General

An Abstract Syntax Error occurs when the receiving functional PCAP entity:

1) receives IEs or IE groups that cannot be understood (unknown IE id);

- 2) receives IEs for which the logical range is violated (e.g.: ASN.1 definition: 0 to 15, the logical range is 0 to 10 (values 11 to 15 are undefined), and 12 will be received; this case will be handled as an abstract syntax error using criticality information sent by the originator of the message);
- 3) does not receive IEs or IE groups but according to the specified presence of the concerning object, the IEs or IE groups should have been present in the received message;
- 4) receives IEs or IE groups that are defined to be part of that message in wrong order or with too many occurrences of the same IE or IE group;
- 5) receives IEs or IE groups but according to the conditional presence of the concerning object and the specified condition, the IEs or IE groups should not have been present in the received message.

Cases 1 and 2 (not comprehended IE/IE group) are handled based on received Criticality information. Case 3 (missing IE/IE group) is handled based on Criticality information and Presence information for the missing IE/IE group specified in the version of the specification used by the receiver. Case 4 (IEs or IE groups in wrong order or with too many occurrences) and Case 5 (erroneously present conditional IEs or IE groups) result in rejecting the procedure.

If an Abstract Syntax Error occurs, the receiver shall read the remaining message and shall then for each detected Abstract Syntax Error that belong to cases 1-3 act according to the Criticality Information and Presence Information for the IE/IE group due to which Abstract Syntax Error occurred in accordance with subclauses 10.3.4 and 10.3.5. The handling of cases 4 and 5 is specified in subclause 10.3.6.

10.3.2 Criticality Information

In the PCAP messages there is criticality information set for individual IEs and/or IE groups. This criticality information instructs the receiver how to act when receiving an IE or an IE group that is not comprehended, i.e. the entire item (IE or IE group) which is not (fully or partially) comprehended shall be treated in accordance with its own criticality information as specified in subclause 10.3.4.

In addition, the criticality information is used in case of the missing IE/IE group abstract syntax error (see subclause 10.3.5).

The receiving node shall take different actions depending on the value of the Criticality Information. The three possible values of the Criticality Information for an IE/IE group are:

- Reject IE.
- Ignore IE and Notify Sender.
- Ignore IE.

The following rules restrict when a receiving entity may consider an IE, an IE group, or an EP not comprehended (not implemented), and when action based on criticality information is applicable:

- 1. IE or IE group: When one new or modified IE or IE group is implemented for one EP from a standard version, then other new or modified IEs or IE groups specified for that EP in that standard version shall be considered comprehended by a receiving entity (some may still remain unsupported).
- 2. EP: The comprehension of different EPs within a standard version or between different standard versions is not mandated. Any EP that is not supported may be considered not comprehended, even if another EP from that standard version is comprehended, and action based on criticality shall be applied.

10.3.3 Presence Information

For many IEs/IE groups which are optional according to the ASN.1 transfer syntax, PCAP specifies separately if the presence of these IEs/IE groups is optional or mandatory with respect to RNS application by means of the presence field of the concerning object of class PCAP-PROTOCOL-IES, PCAP -PROTOCOL-IES-PAIR, PCAP -PROTOCOL-EXTENSION or PCAP -PRIVATE-IES.

The presence field of the indicated classes supports three values:

1. Optional;

- 2. Conditional;
- 3. Mandatory.

If an IE/IE group is not included in a received message and the presence of the IE/IE group is mandatory or the presence is conditional and the condition is true according to the version of the specification used by the receiver, an abstract syntax error occurs due to a missing IE/IE group.

If an IE/IE group is included in a received message and the presence of the IE/IE group is conditional and the condition is false according to the version of the specification used by the receiver, an abstract syntax error occurs due to this erroneously present conditional IE/IE group.

10.3.4 Not comprehended IE/IE group

10.3.4.1 Procedure Code

The receiving node shall treat the different types of received criticality information of the *Procedure Code* IE according to the following:

Reject IE:

- If a message is received with a *Procedure Code* IE marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall reject the procedure using the Error Indication procedure.

Ignore IE and Notify Sender:

- If a message is received with a *Procedure Code* IE marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the procedure and initiate the Error Indication procedure.

Ignore IE:

- If a message is received with a *Procedure Code* IE marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the procedure.

When using the Error Indication procedure to reject a procedure or to report an ignored procedure it shall include the *Procedure Code* IE, the *Triggering Message* IE, and the *Procedure Criticality* IE in the *Criticality Diagnostics* IE.

10.3.4.1A Type of Message

When the receiving node cannot decode the *Type of Message* IE, the Error Indication procedure shall be initiated with an appropriate cause value.

10.3.4.2 IEs other than the Procedure Code and Type of Message

The receiving node shall treat the different types of received criticality information of an IE/IE group other than the *Procedure Code* IE and *Type of Message* IE according to the following:

Reject IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the rejection of one or more IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall terminate the procedure and initiate the Error Indication procedure.

- If a *response* message is received containing one or more IEs/IE groups marked with "*Reject IE*", that the receiving node does not comprehend, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and report in the response message of the procedure that one or more IEs/IE groups have been ignored. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report the outcome of the procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and initiate the Error Indication procedure to report that one or more IEs/IE groups have been ignored.
- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups and initiate the Error Indication procedure.

Ignore IE:

- If a message initiating a procedure is received containing one or more IEs/IE groups marked with "Ignore IE" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups and continue with the procedure as if the not comprehended IEs/IE groups were not received using the understood IEs/IE groups.
- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups.

When reporting not comprehended IEs/IE groups marked with "Reject IE" or "Ignore IE and Notify Sender" using a response message defined for the procedure, the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group. The Repetition Number IE shall be included in the Information Element Criticality Diagnostics IE if the reported IE/IE group was part of a "SEQUENCE OF" definition.

When reporting not comprehended IEs/IE groups marked with "Reject IE" or "Ignore IE and Notify Sender" using the Error Indication procedure, the Procedure Code IE, the Triggering Message IE, Procedure Criticality IE, the Transaction Id IE, and the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group. The Repetition Number IE shall be included in the Information Element Criticality Diagnostics IE if the reported IE/IE group was part of a "SEQUENCE OF" definition.

10.3.5 Missing IE or IE group

The receiving node shall treat the missing IE/IE group according to the criticality information for the missing IE/IE group in the received message specified in the version of the present document used by the receiver:

Reject IE:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "Reject IE"; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the missing IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.

- If a received message *initiating* a procedure that does not have a message to report unsuccessful outcome is missing one or more IEs/IE groups with specified criticality "*Reject IE*", the receiving node shall initiate the Error Indication procedure.
- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Reject IE*, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "Ignore IE and Notify Sender", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and report in the response message of the procedure that one or more IEs/IE groups were missing. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a received message *initiating* a procedure that does not have a message to report the outcome of the procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.
- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.

Ignore IE:

- If a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message.
- If a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs/IE groups are missing.

When reporting missing IEs/IE groups with specified criticality "Reject IE" or "Ignore IE and Notify Sender" using a response message defined for the procedure, the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group.

When reporting missing IEs/IE groups with specified criticality "Reject IE" or "Ignore IE and Notify Sender" using the Error Indication procedure, the Procedure Code IE, the Triggering Message IE, Procedure Criticality IE, the Transaction Id IE, and the Information Element Criticality Diagnostics IE shall be included in the Criticality Diagnostics IE for each reported IE/IE group.

10.3.6 IEs or IE groups received in wrong order or with too many occurrences or erroneously present

If a message with IEs or IE groups in wrong order or with too many occurrences is received or if IEs or IE groups with a conditional presence are present when the condition is not met (i.e. erroneously present), the receiving node shall behave according to the following:

- If a message *initiating* a procedure is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the cause value "Abstract Syntax Error (Falsely Constructed Message)" using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication.
- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall terminate the procedure and initiate the Error Indication procedure, and use cause value "Abstract Syntax Error (Falsely Constructed Message)".

- If a *response* message is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

10.4 Logical Error

Logical error situations occur when a message is comprehended correctly, but the information contained within the message is not valid (i.e. semantic error), or describes a procedure which is not compatible with the state of the receiver. In these conditions, the following behaviour shall be performed (unless otherwise specified) as defined by the class of the elementary procedure, irrespective of the criticality of the IEs/IE groups containing the erroneous values.

Class 1:

Protocol Causes:

Where the logical error occurs in a request message of a class 1 procedure, and the procedure has a message to report this unsuccessful outcome, this message shall be sent with an appropriate cause value. Typical cause values are:

- 1. Semantic Error.
- 2. Message not compatible with receiver state.

Where the logical error is contained in a request message of a class 1 procedure, and the procedure does not have a message to report this unsuccessful outcome, the procedure shall be terminated and the Error Indication procedure shall be initiated with an appropriate cause value.

Where the logical error exists in a response message of a class 1 procedure, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.

Class 2:

Where the logical error occurs in a message of a class 2 procedure, the procedure shall be terminated and the Error Indication procedure shall be initiated with an appropriate cause value.

10.5 Exceptions

The error handling for all the cases described hereafter shall take precedence over any other error handling described in the other subclauses of clause 10.

- If any type of error (Transfer Syntax Error, Abstract Syntax Error or Logical Error) is detected in the ERROR INDICATION message, it shall not trigger the Error Indication procedure in the receiving Node but local error handling.
- In case a response message or Error Indication message needs to be returned, but the information necessary to determine the receiver of that message is missing, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.
- If an error that terminates a procedure occurs, the returned cause value shall reflect the error that caused the termination of the procedure even if one or more abstract syntax errors with criticality 'ignore and notify' have earlier occurred within the same procedure.

Annex A (informative): Guidelines for Usage of the Criticality Diagnostics IE

A.1 EXAMPLE MESSAGE Layout

Assume the following message format:

Table A.1

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M				YES	Reject
Transaction ID	M				_	
Α	M				YES	reject
В	M				YES	reject
>E		1 <maxe></maxe>			EACH	ignore
>>F		1 <maxf></maxf>			-	
>>>G		03,			EACH	ignore
>>H		1 <maxh></maxh>			EACH	ignore
>>>G		03,			EACH	ignore and notify
>>G	M				YES	reject
>>J		1 <maxj></maxj>			-	
>>>G		03,			EACH	reject
С	M				YES	reject
>K		1 <maxk></maxk>			EACH	ignore and notify
>>L		1 <maxl></maxl>			-	
>>>M	0				-	
D	М				YES	reject

NOTE: The IEs F, J, and L do not have assigned criticality. The IEs F, J, and L are consequently realised as the ASN.1 type SEQUENCE OF of "ordinary" ASN.1 type, e.g. INTEGER. On the other hand, the repeatable IEs with assigned criticality are realised as the ASN.1 type SEQUENCE OF of an IE object, e.g. ProtocolIE-Single-Container.

For the corresponding ASN.1 layout, see clause A.4.

A.2 Example on a Received EXAMPLE MESSAGE

Assume further more that a received message based on the above tabular format is according to figure A₂1.


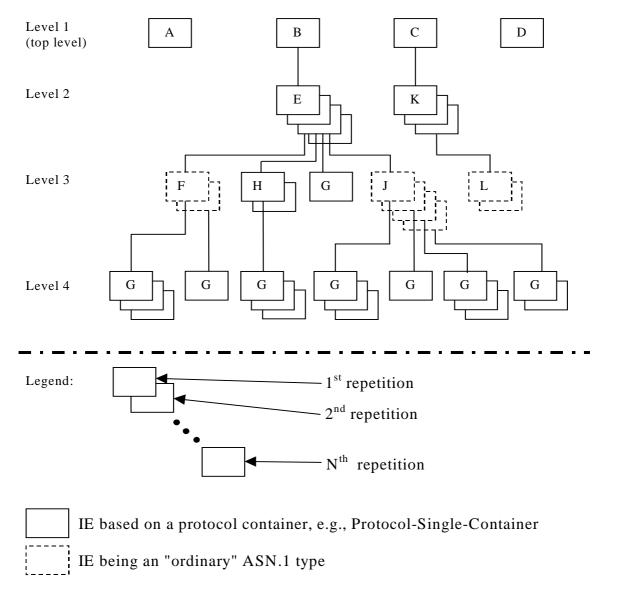


Figure A.1: Example of content of a received PCAP message based on the EXAMPLE MESSAGE

A.3 Content of Criticality Diagnostics

A.3.1 Example 1

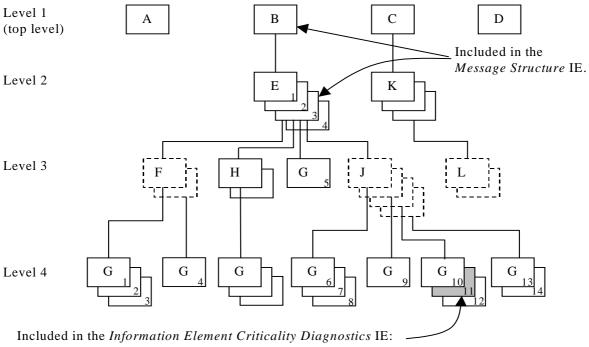

- a) IE ID IE
- b) Repetition Number IE

Figure A.2: Example of a received PCAP message containing a not comprehended IE

If there is an error within the instance marked as grey in the IE G in the IE J shown in the figure A.2, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IEas in table A.2.


Table A.2

IE name	Value	Comment	
IE Criticality	Reject	Criticality for IE on the reported level, i.e. level 4.	
IE ID	id-G	IE ID from the reported level, i.e. level 4.	
Repetition	11	Repetition number on the reported level, i.e. level 4.	
Number		(Since the IE E (level 2) is the lowest level included in the Message Structure	
		IE this is the eleventh occurrence of IE G within the IE E (level 2).	
Type of Error	not		
	underst		
	ood		
Message Structur	e, first repe	etition	
>IE ID	id-B	IE ID from level 1.	
Message Structure, second repetition			
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.	
>Repetition	3	Repetition number from the lowest level above the reported level, i.e. level 2.	
Number			

NOTE 1: The IE J on level 3 cannot be included in the *Message Structure* IE since they have no criticality of their own.

NOTE 2: The repetition number of the reported IE indicates the number of repetitions of IE G received up to the detected erroneous repetition, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

A.3.2 Example 2

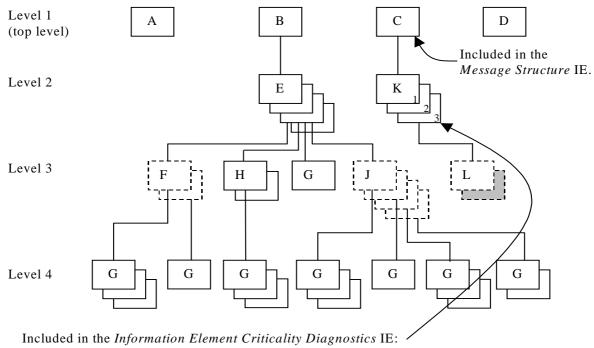

- a) IE ID IE
- b) Repetition Number IE

Figure A.3: Example of a received PCAP message containing a not comprehended IE


If there is an error within the second instance (marked as grey) in the sequence (IE L in the tabular format) on level 3 below IE K in the structure shown in the figure A.3, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IEas in table A.3.

Table A.3

IE name	Value	Comment	
IE Criticality	ignore	Criticality for IE on the reported level, i.e. level 2.	
	and		
	notify		
IE ID	id-K	IE ID from the reported level, i.e. level 2.	
Repetition	3	Repetition number on the reported level, i.e. level 2.	
Number			
Type of Error	not		
	underst		
	ood		
Message Structur	Message Structure, first repetition		
>IE ID	id-C	IE ID from the lowest level above the reported level, i.e. level 1.	

NOTE: The IE L on level 3 cannot be reported individually included in the *Message Structure* IE since it has no criticality of its own.

A.3.3 Example 3

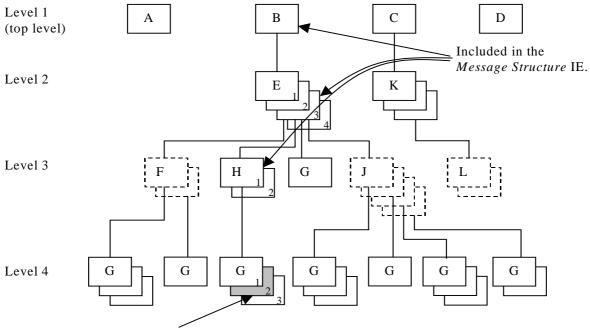

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE

Figure A.4: Example of a received PCAP message containing a not comprehended IE


If there is an error within the instance marked as grey in the IE G in the IE H shown in the figure A.4, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IEas in table A.4.

Table A.4

IE name	Value	Comment	
IE Criticality	ignore and notify	Criticality for IE on the reported level, i.e. level 4.	
IE ID	id-G	IE ID from the reported level, i.e. level 4.	
Repetition Number	2	Repetition number on the reported level, i.e. level 4.	
Type of Error	not underst ood		
Message Structur	e, first rep	etition	
>IE ID	id-B	IE ID from level 1.	
Message Structur	e, second	repetition	
>IE ID	id-E	IE ID from level 2.	
>Repetition Number	3	Repetition number from level 2.	
Message Structure, third repetition			
>IE ID	id-H	IE ID from the lowest level above the reported level, i.e. level 3.	
>Repetition Number	1	Repetition number from the lowest level above the reported level, i.e. level 3.	

NOTE: The repetition number of level 4 indicates the number of repetitions of IE G received up to the detected erroneous repetition, counted below the same instance of the previous level with assigned criticality (instance 1 of IE H on level 3).

A.3.4 Example 4

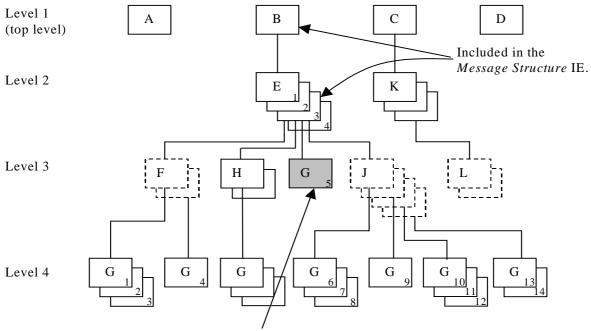

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE

Figure A.5: Example of a received PCAP message containing a not comprehended IE


If there is an error within the instance marked as grey in the IE G in the IE E shown in the figure A.5, this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE, as in table A.5.

Table A.5

IE name	Value	Comment		
IE Criticality	Reject	Criticality for IE on the reported level, i.e. level 3.		
IE ID	id-G	IE ID from the reported level, i.e. level 3.		
Repetition	5	Repetition number on the reported level, i.e. level 3.		
Number		(Since the IE E (level 2) is the lowest level included in the Message Structure		
		IE this is the fifth occurrence of IE G within the IE E (level 2).		
Type of Error	not			
	underst			
	ood			
Message Structur	Message Structure, first repetition			
>IE ID	id-B	IE ID from level 1.		
Message Structure, second repetition				
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.		
>Repetition	3	Repetition number from the lowest level above the reported level, i.e. level 2.		
Number				

NOTE: The repetition number of the reported IE indicates the number of repetitions of IE G received up to the detected erroneous repetition, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

A.3.5 Example 5

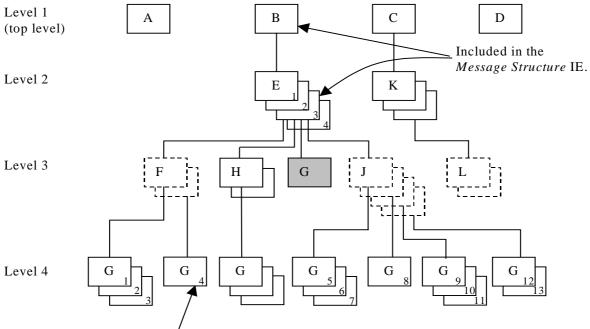

Included in the Information Element Criticality Diagnostics IE:

- a) IE ID IE
- b) Repetition Number IE

Figure A.6: Example of a received PCAP message with a missing IE

If the instance marked as grey in the IE G in the IE E shown in the figure A.6, is missing this will be reported within the *Information Element Criticality Diagnostics* IE within the *Criticality Diagnostics* IE, as in table A.6.

Table A.6

IE name	Value	Comment	
IE Criticality	reject	Criticality for IE on the reported level, i.e. level 3.	
IE ID	id-G	IE ID from the reported level, i.e. level 3.	
Repetition Number	4	Repetition number up to the missing IE on the reported level, i.e. level 3. (Since the IE E (level 2) is the lowest level included in the <i>Message Structure</i> IE there have been four occurrences of IE G within the IE E (level 2) up to the missing occurrence.	
Type of Error	missing		
Message Structur	e, first repe	etition	
>IE ID	id-B	IE ID from level 1.	
Message Structure, second repetition			
>IE ID	id-E	IE ID from the lowest level above the reported level, i.e. level 2.	
>Repetition Number	3	Repetition number from the lowest level above the reported level, i.e. level 2.	

NOTE: The repetition number of the reported IE indicates the number of repetitions of IE G received up to but not including the missing occurrence, counting all occurrences of the IE G below the same instance of the previous level with assigned criticality (instance 3 of IE E on level 2).

A.4 ASN.1 of EXAMPLE MESSAGE

```
ExampleMessage ::= SEQUENCE {
                        ProtocolIE-Container
                                                     {{ExampleMessage-IEs}},
    ProtocolIEs
    ProtocolExtensions ProtocolExtensionContainer {{ExampleMessage-Extensions}}
                                                                                    OPTIONAL.
ExampleMessage-IEs PCAP-PROTOCOL-IES ::= {
    { ID id-A CRITICALITY reject TYPE A PRESENCE mandatory} { ID id-B CRITICALITY reject TYPE B PRESENCE mandatory}
    { ID id-C CRITICALITY reject TYPE C PRESENCE mandatory} | 
{ ID id-D CRITICALITY reject TYPE D PRESENCE mandatory} ,
B ::= SEQUENCE {
                    E-List,
    iE-Extensions ProtocolExtensionContainer { {B-ExtIEs} } OPTIONAL,
}
B-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
E-List ::= SEQUENCE (SIZE (1..maxE)) OF ProtocolIE-Single-Container { {E-IEs} }
E-IES PCAP-PROTOCOL-IES ::= {
    { ID id-E CRITICALITY ignore TYPE E PRESENCE mandatory }
E ::= SEQUENCE {
                    F-List,
   h
                    H-List.
                    G-List1
    g
                    J-List,
    iE-Extensions ProtocolExtensionContainer { {E-ExtIEs} } OPTIONAL,
}
E-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
F-List ::= SEQUENCE (SIZE (1..maxF)) OF F
F ::= SEQUENCE {
                    G-List2 OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { {F-ExtIEs} } OPTIONAL,
F-ExtIEs
         PCAP-PROTOCOL-EXTENSION ::= {
G-List2 ::= SEQUENCE (SIZE (1..3, ...)) OF ProtocolIE-Single-Container { {G2-IEs} }
G2-IES PCAP-PROTOCOL-IES ::= {
    H-List ::= SEQUENCE (SIZE (1..maxH)) OF ProtocolIE-Single-Container { {H-IEs} }
H-IES PCAP-PROTOCOL-IES ::= {
    { ID id-H CRITICALITY ignore TYPE H PRESENCE mandatory }
H ::= SEQUENCE {
                    G-List3 OPTIONAL,
                                    ProtocolExtensionContainer { {H-ExtIEs} } OPTIONAL,
    iE-Extensions
}
H-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
}
G-List3 ::= SEQUENCE (SIZE (1..3, ...)) OF ProtocolIE-Single-Container { {G3-IEs} }
G3-IES PCAP-PROTOCOL-IES ::= {
  { ID id-G CRITICALITY notify TYPE G PRESENCE mandatory }
G-List1 ::= ProtocolIE-Single-Container { G1-IEs} }
G1-IES PCAP-PROTOCOL-IES ::= {
   { ID id-G CRITICALITY reject TYPE G PRESENCE mandatory }
J-List ::= SEQUENCE (SIZE (1..maxJ)) OF J
J ::= SEQUENCE {
                    G-List4 OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { {J-ExtIEs} } OPTIONAL,
}
J-ExtIES PCAP-PROTOCOL-EXTENSION ::= {
 \texttt{G-List4} ::= \texttt{SEQUENCE} \ (\texttt{SIZE} \ (1...3, \ \ldots)) \ \texttt{OF} \ \texttt{ProtocolIE-Single-Container} \ \left\{ \ \texttt{G4-IEs} \ \right\} \ 
G4-IES PCAP-PROTOCOL-IES ::= {
   { ID id-G CRITICALITY reject TYPE G PRESENCE mandatory }
C ::= SEQUENCE {
                    K-List.
    iE-Extensions ProtocolExtensionContainer { {C-ExtIEs} } OPTIONAL,
}
C-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
K-List ::= SEQUENCE (SIZE (1..maxK)) OF ProtocolIE-Single-Container { {K-IEs} }
K-IES PCAP-PROTOCOL-IES ::= {
   { ID id-K CRITICALITY notify TYPE K PRESENCE mandatory }
K ::= SEQUENCE {
                    L-List,
    iE-Extensions ProtocolExtensionContainer { {K-ExtIEs} } OPTIONAL,
K-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
L-List ::= SEQUENCE (SIZE (1..maxL)) OF L
L ::= SEQUENCE {
                    M OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { {L-ExtIEs} } OPTIONAL,
L-ExtIEs PCAP-PROTOCOL-EXTENSION ::= {
ExampleMessage-Extensions PCAP-PROTOCOL-EXTENSION ::= {
```

Annex B (informative): Change history

_		1		_	Change history		
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
06/2001	12	RP-010402			Approved at TSG RAN #12 and placed under Change Control	-	5.0.0
09/2001	13	RP-010603	002	1	Correction to the Error handling of the ERROR	5.0.0	5.1.0
					INDICATION message		
09/2001	13	RP-010603			Proposed CR to 25.453 on Semantics Description of C/No	5.0.0	5.1.0
09/2001	13	RP-010603	004		Proposed CR to 25.453 on Clause 10	5.0.0	5.1.0
09/2001	13	RP-010603	005	1	Error handling of the Erroneously Present Conditional les	5.0.0	5.1.0
09/2001	13	RP-010603		1	Clarification of chapter 10	5.0.0	5.1.0
09/2001	13	RP-010603			PCAP Criticality	5.0.0	5.1.0
12/2001	14	RP-010875		1	Bitstrings ordering	5.1.0	5.2.0
12/2001	14	RP-010875		1	Reference corrections	5.1.0	5.2.0
12/2001	14	RP-010875		1	Clarification for the definition of the ASN.1 constants	5.1.0	5.2.0
12/2001	14	RP-010875		1	Procedure Code Criticality in Error Indication	5.1.0	5.2.0
12/2001	14	RP-010875		2	Addition of amendment to clarify the PER encoding of bitstrings	5.1.0	5.2.0
12/2001	14	RP-010875		1	Clarification of the Transaction ID	5.1.0	5.2.0
12/2001	14	RP-010875			Correction the Clause 10 Error Handling	5.1.0	5.2.0
-3/2002	15	RP-020211	016		Modification on the Object Identifier	5.2.0	5.3.0
06/2002	16	RP-020432		2	Criticality Information Decoding Failure Handling	5.3.0	5.4.0
06/2002	16	RP-020432		1	Clarification for the usage of the cause value	5.3.0	5.4.0
03/2003	19	RP-030065			CR on GPS Almanac and Satellite Health	5.4.0	5.5.0
03/2003	19	RP-030065			CR on GPS Measured Results	5.4.0	5.5.0
03/2003	19	RP-030067			Alignment of 'Uncertainty Ellipse' with RRC	5.4.0	5.5.0
03/2003	19	RP-030070	027		Correction for the Information Exchange Initiation procedure	5.4.0	5.5.0
03/2003	19	RP-030084		2	CR on revising the position calculation function and definition of	5.5.0	6.0.0
00,2000		55555		_	SAS to support all REL-4 UE positioning methods	0.0.0	0.0.0
06/2003	20	RP-030324	032	1	Alignment of the Requested Data Value Information IE description	6.0.0.	6.1.0
06/2003	20	RP-030325			GPS trigger condition	6.0.0.	6.1.0
06/2003	20	RP-030341			Position Calculation Extension for TDD	6.0.0.	6.1.0
06/2003	20	RP-030322		1	'On Modification' and 'Periodic' reporting alignment for Information	6.0.0.	6.1.0
				-	Exchange procedures		
06/2003	20	RP-030322	044		CR on Criticality Aspects	6.0.0.	6.1.0
06/2003	20	RP-030322	045		CR on Information Exchange Initiation Request for GPS Navigation Model	6.0.0.	6.1.0
06/2003	20	RP-030322	046		CR on DGPS Parameters	6.0.0.	6.1.0
06/2003	20	RP-030322			CR on Removal of Information Exchange Object Type	6.0.0.	6.1.0
06/2003	20	RP-030322	048		CR on Information Report of GPS Almanac and Satellite Health	6.0.0.	6.1.0
06/2003	20				Correction of Failure message used for logical errors	6.0.0.	6.1.0
09/2003	21	RP-030442	052		Correction to an incorrect implementation in the Requested Data Value Information IE	6.1.0	6.2.0
09/2003	21	RP-030445	054		Alignment of title and sub-clause text of chapter 10.3.4.2	6.1.0	6.2.0
09/2003	21	RP-030446			Removal of the note in chapter 10	6.1.0	6.2.0
09/2003	21	RP-030454	060		Improvement of position calculation with pathloss	6.1.0	6.2.0
12/2003	22	RP-030697			Improvement of position calculation through set enlargement	6.2.0	6.3.0
12/2003	22	RP-030683			Information Exchange Initiation behavior correction	6.2.0	6.3.0
03/2004	23	RP-040053	068		Alignment with 23.032 correction of Included Angle for Ellipsoid Arc	6.3.0	6.4.0
03/2004	23	RP-040075	069		Initial UE Position IE only mandatory necessary for GPS	6.3.0	6.4.0
03/2004	23	RP-040072	071		PCAP Review	6.3.0	6.4.0
06/2004	24	RP-040184		1	Correction to usage of INITIAL UE POSITION	6.4.0	6.5.0
09/2004	25	RP-040306	074	1	Introduction of the requested accuracy and an indication of achieved accuracy in Position Calculation procedure over lupc interface	6.5.0	6.6.0
12/2004	26	RP-040441			outdated ITU-T reference	6.6.0	6.7.0
03/2005	27	RP-050055	078	1	Corrections to descriptions of GPS Almanac and Ephemeris fields	6.7.0	6.8.0
		RP-050217			Correction of deletion of Information Exchange Context		

History

Document history				
V6.3.0	December 2003	Publication		
V6.4.0	March 2004	Publication		
V6.5.0	June 2004	Publication		
V6.6.0	September 2004	Publication		
V6.7.0	December 2004	Publication		
V6.8.0	March 2005	Publication		
V6.9.0	June 2005	Publication		