ETSI TS 138 473 V15.15.0 (2021-10)



5G; NG-RAN; F1 Application Protocol (F1AP) (3GPP TS 38.473 version 15.15.0 Release 15)



Reference RTS/TSGR-0338473vff0 Keywords 5G

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: <u>http://www.etsi.org/standards-search</u>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at www.etsi.org/deliver.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommitteeSupportStaff.aspx

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2021. All rights reserved.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™** and **LTE™** are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

oneM2M™ logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners.

GSM® and the GSM logo are trademarks registered and owned by the GSM Association.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <u>ETSI Drafting Rules</u> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

| Intell | lectual Property Rights | 2 | | |
|------------------|---|----|--|--|
| Legal | l Notice | 2 | | |
| Moda | al verbs terminology | 2 | | |
| | word | | | |
| | | | | |
| 1 | Scope | | | |
| 2 | References | | | |
| 3 | Definitions and abbreviations | | | |
| 3.1 3.2 | Definitions | | | |
| _ | | | | |
| 4 4.1 | General Procedure specification principles | | | |
| 4.2 | Forwards and backwards compatibility | | | |
| 4.3 | Specification notations | | | |
| 5 | F1AP services | 13 | | |
| 6 | Services expected from signalling transport | | | |
| | | | | |
| 7 | Functions of F1AP | | | |
| 8 | F1AP procedures | | | |
| 8.1 | List of F1AP Elementary procedures | | | |
| 8.2 | Interface Management procedures | | | |
| 8.2.1 | Reset | | | |
| 8.2.1. | | | | |
| 8.2.1. | 1 | | | |
| 8.2.1. | ϵ | | | |
| 8.2.1.2 | | | | |
| 8.2.1.3 8.2.2 | | | | |
| 8.2.2. 8.2.2. | | | | |
| 8.2.2. | | | | |
| 8.2.2.3 | 1 | | | |
| 8.2.3 | F1 Setup | | | |
| 8.2.3. | 1 | | | |
| 8.2.3. | | | | |
| 8.2.3.3 | • | | | |
| 8.2.3.4 | • | | | |
| 8.2.4 | | | | |
| 8.2.4. | .1 General | 19 | | |
| 8.2.4.2 | 2 Successful Operation | 20 | | |
| 8.2.4.3 | 3 Unsuccessful Operation | 21 | | |
| 8.2.4. | | | | |
| 8.2.5 | gNB-CU Configuration Update | 21 | | |
| 8.2.5. | | | | |
| 8.2.5.2 | 1 | | | |
| 8.2.5.3 | 1 | | | |
| 8.2.5.4 | | | | |
| 8.2.6 | gNB-DU Resource Coordination | | | |
| 8.2.6. | | | | |
| 8.2.6.2 | <u>.</u> | | | |
| 8.2.7 | gNB-DU Status Indication | | | |
| 8.2.7. | | | | |
| 8.2.7.2 | 1 | | | |
| 8.2.7.3 | 3 Abnormal Conditions | | | |

| 8.2.8 | F1 Removal | 25 |
|----------|---|----|
| 8.2.8.1 | General | 25 |
| 8.2.8.2 | Successful Operation | |
| 8.2.8.3 | Unsuccessful Operation | |
| 8.2.8.4 | Abnormal Conditions | |
| 8.2.9 | Network Access Rate Reduction | |
| 8.2.9.1 | General | |
| 8.2.9.2 | Successful operation | |
| 8.2.9.3 | Abnormal Conditions | |
| 8.3 | UE Context Management procedures | |
| 8.3.1 | UE Context Setup | |
| 8.3.1.1 | General | |
| 8.3.1.2 | Successful Operation | |
| 8.3.1.3 | Unsuccessful Operation | |
| 8.3.1.4 | Abnormal Conditions | |
| 8.3.2 | UE Context Release Request (gNB-DU initiated) | |
| 8.3.2.1 | General | |
| 8.3.2.2 | Successful Operation | |
| 8.3.2.3 | Abnormal Conditions | |
| 8.3.3 | UE Context Release (gNB-CU initiated) | |
| 8.3.3.1 | General | |
| 8.3.3.2 | Successful Operation | |
| 8.3.3.4 | Abnormal Conditions | |
| 8.3.4 | UE Context Modification (gNB-CU initiated) | |
| 8.3.4.1 | General | |
| 8.3.4.2 | Successful Operation | |
| 8.3.4.3 | Unsuccessful Operation | |
| 8.3.4.4 | Abnormal Conditions | |
| 8.3.5 | UE Context Modification Required (gNB-DU initiated) | |
| 8.3.5.1 | General | |
| 8.3.5.2 | Successful Operation | |
| 8.3.5.2A | Unsuccessful Operation | |
| 8.3.5.3 | Abnormal Conditions | |
| 8.3.6 | UE Inactivity Notification | |
| 8.3.6.1 | General | 39 |
| 8.3.6.2 | Successful Operation | 39 |
| 8.3.6.3 | Abnormal Conditions | |
| 8.3.7 | Notify | |
| 8.3.7.1 | General | 40 |
| 8.3.7.2 | Successful Operation | 40 |
| 8.3.7.3 | Abnormal Conditions | 40 |
| 8.4 | RRC Message Transfer procedures | 40 |
| 8.4.1 | Initial UL RRC Message Transfer | 40 |
| 8.4.1.1 | General | 40 |
| 8.4.1.2 | Successful operation | 41 |
| 8.4.1.3 | Abnormal Conditions | 41 |
| 8.4.2 | DL RRC Message Transfer | 41 |
| 8.4.2.1 | General | 41 |
| 8.4.2.2 | Successful operation | 41 |
| 8.4.2.3 | Abnormal Conditions | |
| 8.4.3 | UL RRC Message Transfer | 42 |
| 8.4.3.1 | General | |
| 8.4.3.2 | Successful operation | |
| 8.4.3.3 | Abnormal Conditions | |
| 8.4.4 | RRC Delivery Report | 43 |
| 8.4.4.1 | General | |
| 8.4.4.2 | Successful operation | 43 |
| 8.4.4.3 | Abnormal Conditions | |
| 8.5 | Warning Message Transmission Procedures | 43 |
| 8.5.1 | Write-Replace Warning | 43 |
| 8.5.1.1 | General | 43 |
| 8.5.1.2 | Successful Operation | 44 |

| 8.5.1.3 | Unsuccessful Operation | |
|-----------|---|----|
| 8.5.1.4 | Abnormal Conditions | |
| 8.5.2 | PWS Cancel | |
| 8.5.2.1 | General | |
| 8.5.2.2 | Successful Operation | |
| 8.5.2.3 | Unsuccessful Operation | |
| 8.5.2.4 | Abnormal Conditions | 45 |
| 8.5.3 | PWS Restart Indication | 46 |
| 8.5.3.1 | General | 46 |
| 8.5.3.2 | Successful Operation | 46 |
| 8.5.3.3 | Abnormal Conditions | 46 |
| 8.5.4 | PWS Failure Indication | 46 |
| 8.5.4.1 | General | |
| 8.5.4.2 | Successful Operation | |
| 8.5.4.3 | Abnormal Conditions | 46 |
| 8.6 | System Information Procedures | 47 |
| 8.6.1 | System Information Delivery | |
| 8.6.1.1 | General | |
| 8.6.1.2 | Successful Operation | |
| 8.6.1.3 | Abnormal Conditions | |
| 8.7 | Paging procedures | |
| 8.7.1 | Paging | |
| 8.7.1.1 | General | |
| 8.7.1.2 | Successful Operation | |
| 8.7.1.3 | Abnormal Conditions | 48 |
| 9 E | lements for F1AP Communication | 48 |
| 9.1 | General | |
| 9.2 | Message Functional Definition and Content | |
| 9.2.1 | Interface Management messages | |
| 9.2.1.1 | RESET | |
| 9.2.1.2 | RESET ACKNOWLEDGE | |
| 9.2.1.3 | ERROR INDICATION | |
| 9.2.1.4 | F1 SETUP REQUEST | |
| 9.2.1.5 | F1 SETUP RESPONSE | |
| 9.2.1.6 | F1 SETUP FAILURE | |
| 9.2.1.7 | GNB-DU CONFIGURATION UPDATE | |
| 9.2.1.8 | GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE | |
| 9.2.1.9 | GNB-DU CONFIGURATION UPDATE FAILURE | |
| 9.2.1.10 | GNB-CU CONFIGURATION UPDATE | 54 |
| 9.2.1.11 | GNB-CU CONFIGURATION UPDATE ACKNOWLEDGE | 57 |
| 9.2.1.12 | GNB-CU CONFIGURATION UPDATE FAILURE | 58 |
| 9.2.1.13 | GNB-DU RESOURCE COORDINATION REQUEST | 59 |
| 9.2.1.14 | GNB-DU RESOURCE COORDINATION RESPONSE | |
| 9.2.1.15 | GNB-DU STATUS INDICATION | 60 |
| 9.2.1.16 | F1 REMOVAL REQUEST | 60 |
| 9.2.1.17 | F1 REMOVAL RESPONSE | 60 |
| 9.2.1.18 | F1 REMOVAL FAILURE | |
| 9.2.1.19 | NETWORK ACCESS RATE REDUCTION | 60 |
| 9.2.2 | UE Context Management messages | 61 |
| 9.2.2.1 | UE CONTEXT SETUP REQUEST | |
| 9.2.2.2 | UE CONTEXT SETUP RESPONSE | |
| 9.2.2.3 | UE CONTEXT SETUP FAILURE | |
| 9.2.2.4 | UE CONTEXT RELEASE REQUEST | |
| 9.2.2.5 | UE CONTEXT RELEASE COMMAND | |
| 9.2.2.6 | UE CONTEXT RELEASE COMPLETE | |
| 9.2.2.7 | UE CONTEXT MODIFICATION REQUEST | |
| 9.2.2.8 | UE CONTEXT MODIFICATION RESPONSE | |
| 9.2.2.9 | UE CONTEXT MODIFICATION FAILURE | |
| 9.2.2.10 | UE CONTEXT MODIFICATION REQUIRED | |
| 9.2.2.11 | UE CONTEXT MODIFICATION CONFIRM | |
| 9.2.2.11A | UE CONTEXT MODIFICATION REFUSE | 79 |

| 9.2.2.12 | UE INACTIVITY NOTIFICATION | 80 |
|----------------------|--|-----|
| 9.2.2.13 | NOTIFY | 80 |
| 9.2.3 | RRC Message Transfer messages | 81 |
| 9.2.3.1 | INITIAL UL RRC MESSAGE TRANSFER | 81 |
| 9.2.3.2 | DL RRC MESSAGE TRANSFER | 82 |
| 9.2.3.3 | UL RRC MESSAGE TRANSFER | 83 |
| 9.2.3.4 | RRC DELIVERY REPORT | 84 |
| 9.2.4 | Warning Message Transmission Messages | |
| 9.2.4.1 | WRITE-REPLACE WARNING REQUEST | 84 |
| 9.2.4.2 | WRITE-REPLACE WARNING RESPONSE | 84 |
| 9.2.4.3 | PWS CANCEL REQUEST | 85 |
| 9.2.4.4 | PWS CANCEL RESPONSE | |
| 9.2.4.5 | PWS RESTART INDICATION | |
| 9.2.4.6 | PWS FAILURE INDICATION | |
| 9.2.5 | System Information messages | |
| 9.2.5.1 | SYSTEM INFORMATION DELIVERY COMMAND | |
| 9.2.6 | Paging messages | |
| 9.2.6.1 | PAGING | |
| 9.3 | Information Element Definitions | |
| 9.3.1 | Radio Network Layer Related IEs | |
| 9.3.1.1 | Message Type | |
| 9.3.1.2 | Cause | |
| 9.3.1.3 | Criticality Diagnostics | |
| 9.3.1.4 | gNB-CU UE F1AP ID | |
| 9.3.1.5 | gNB-DU UE F1AP ID | |
| 9.3.1.6 | RRC-Container | |
| 9.3.1.7 | SRB ID | |
| 9.3.1.8 | DRB ID | |
| 9.3.1.9 | gNB-DU ID | |
| 9.3.1.10 | Served Cell Information | |
| 9.3.1.11 9.3.1.12 | Transmission Action Indicator | |
| 9.3.1.12 | Time To wait | |
| 9.3.1.13 | PLMN Identity | |
| 9.3.1.15 | Transmission Bandwidth | |
| 9.3.1.16 | Void | |
| 9.3.1.17 | NR Frequency Info | |
| 9.3.1.18 | gNB-DU System Information | |
| 9.3.1.19 | E-UTRAN QoS | |
| 9.3.1.20 | Allocation and Retention Priority | |
| 9.3.1.21 | GBR QoS Information | 99 |
| 9.3.1.22 | Bit Rate | 100 |
| 9.3.1.23 | Transaction ID | 100 |
| 9.3.1.24 | DRX Cycle | 100 |
| 9.3.1.25 | CU to DU RRC Information | 101 |
| 9.3.1.26 | DU to CU RRC Information | |
| 9.3.1.27 | RLC Mode | |
| 9.3.1.28 | SUL Information | |
| 9.3.1.29 | 5GS TAC | |
| 9.3.1.29a | & | |
| 9.3.1.30 | RRC Reconfiguration Complete Indicator | |
| 9.3.1.31 | UL Configuration | |
| 9.3.1.32 | C-RNTI | |
| 9.3.1.33 | Cell UL Configured | |
| 9.3.1.34 | RAT-Frequency Priority Information | |
| 9.3.1.35 | LCID | |
| 9.3.1.36 | Duplication activation | |
| 9.3.1.37 | Slice Support List | |
| 9.3.1.38 | S-NSSAI | |
| 9.3.1.39 | UE Identity Index value | |
| 9.3.1.40 | Paging DRX | |
| 9.3.1.41 | Paging Priority | 10/ |

| 9.3.1.42 | gNB-CU System Information | 107 |
|----------------------|--|-----|
| 9.3.1.43 | RAN UE Paging identity | 108 |
| 9.3.1.44 | CN UE Paging Identity | 108 |
| 9.3.1.45 | QoS Flow Level QoS Parameters | 108 |
| 9.3.1.46 | GBR QoS Flow Information | |
| 9.3.1.47 | Dynamic 5QI Descriptor | |
| 9.3.1.48 | NG-RAN Allocation and Retention Priority | |
| 9.3.1.49 | Non Dynamic 5QI Descriptor | |
| 9.3.1.50 | Maximum Packet Loss Rate | 112 |
| 9.3.1.51 | Packet Delay Budget | |
| 9.3.1.52 | Packet Error Rate | |
| 9.3.1.53 | Averaging Window | |
| 9.3.1.54 | Maximum Data Burst Volume | |
| 9.3.1.55 | Masked IMEISV | |
| 9.3.1.56 | Notification Control | |
| 9.3.1.57 | RAN Area Code | |
| 9.3.1.58 | PWS System Information | |
| 9.3.1.59 | Repetition Period. | |
| 9.3.1.60 | Number of Broadcasts Requested | |
| 9.3.1.61 | Void | |
| 9.3.1.62 | SIType List | |
| 9.3.1.63 | QoS Flow Identifier | |
| 9.3.1.64 | Served E-UTRA Cell Information | |
| 9.3.1.65 | Available PLMN List | |
| 9.3.1.66 | RLC Failure Indication | |
| 9.3.1.67 | Uplink TxDirectCurrentList Information | |
| 9.3.1.68 | Service Status | |
| 9.3.1.69 | RLC Status | |
| 9.3.1.70 | RRC Version | |
| 9.3.1.71 | RRC Delivery Status | |
| 9.3.1.72 | QoS Flow Mapping Indication | |
| 9.3.1.73 | Resource Coordination Transfer Information | |
| 9.3.1.74 | E-UTRA PRACH Configuration | |
| 9.3.1.75 | Resource Coordination E-UTRA Cell Information | |
| 9.3.1.76 | Extended Available PLMN List | |
| 9.3.1.77 | Associated SCell List | |
| 9.3.1.78 9.3.1.79 | Cell Direction Paging Origin | |
| 9.3.1.79 | E-UTRA Transmission Bandwidth | |
| 9.3.1.80 | Message Identifier | |
| 9.3.1.82 | Serial Number | |
| 9.3.1.82 | UAC Assistance Information | |
| 9.3.1.84 | UAC Action | |
| 9.3.1.85 | UAC reduction Indication | |
| 9.3.1.86 | Additional SIB Message List | |
| 9.3.1.87 | Cell Type | |
| 9.3.1.87a | Configured TAC Indication | |
| 9.3.2 | Transport Network Layer Related IEs | |
| 9.3.2.1 | UP Transport Layer Information | |
| 9.3.2.2 | GTP-TEID | |
| 9.3.2.3 | Transport Layer Address | |
| 9.3.2.4 | CP Transport Layer Information | |
| 9.4 | Message and Information Element Abstract Syntax (with ASN.1) | |
| 9.4.1 | General | |
| 9.4.2 | Usage of private message mechanism for non-standard use | |
| 9.4.3 | Elementary Procedure Definitions | |
| 9.4.4 | PDU Definitions | |
| 9.4.5 | Information Element Definitions | 168 |
| 9.4.6 | Common Definitions | |
| 9.4.7 | Constant Definitions | |
| 9.4.8 | Container Definitions | |
| 9.5 | Message Transfer Syntax | 220 |

| 9.6 | Timers | | 220 |
|-------|---|----------------|-----|
| 10 | Handling of unknown, unforeseen and erroneous protocol data | | |
| Anne | ex A (informative): | Change History | 221 |
| Histo | rv | | 225 |

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the 5G radio network layer signalling protocol for the F1 interface. The F1 interface provides means for interconnecting a gNB-CU and a gNB-DU of a gNB within an NG-RAN, or for interconnecting a gNB-CU and a gNB-DU of an en-gNB within an E-UTRAN. The F1 Application Protocol (F1AP) supports the functions of F1 interface by signalling procedures defined in the present document. F1AP is developed in accordance to the general principles stated in TS 38.401 [4] and TS 38.470 [2].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

| [1] | 3GPP TR 21.905: "Vocabulary for 3GPP Specifications". |
|------|---|
| [2] | 3GPP TS 38.470: "NG-RAN; F1 general aspects and principles". |
| [3] | 3GPP TS 38.413: "NG-RAN; NG Application Protocol (NGAP)". |
| [4] | 3GPP TS 38.401: "NG-RAN; Architecture Description". |
| [5] | ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules - Specification of Packed Encoding Rules (PER)". |
| [6] | 3GPP TS 38.300: "NR; Overall description; Stage-2". |
| [7] | 3GPP TS 37.340: "NR; Multi-connectivity; Overall description; Stage-2". |
| [8] | 3GPP TS 38.331: "NR; Radio Resource Control (RRC); Protocol specification". |
| [9] | 3GPP TS 36.423: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 Application Protocol (X2AP)". |
| [10] | 3GPP TS 23.401: "General Packet Radio Service (GPRS) enhancements for Evolved Universal Terrestrial Radio Access Network (E-UTRAN) access". |
| [11] | 3GPP TS 23.203: "Policy and charging control architecture". |
| [12] | ITU-T Recommendation X.680 (07/2002): "Information technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation". |
| [13] | ITU-T Recommendation X.681 (07/2002): "Information technology – Abstract Syntax Notation One (ASN.1): Information object specification". |
| [14] | 3GPP TR 25.921: (version.7.0.0): "Guidelines and principles for protocol description and error". |
| [15] | 3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)". |
| [16] | 3GPP TS 38.321: "NR; Medium Access Control (MAC) protocol specification". |
| [17] | 3GPP TS 38.104: "NR; Base Station (BS) radio transmission and reception". |

| [18] | 3GPP TS 29.281: "General Packet Radio System (GPRS); Tunnelling Protocol User Plane (GTPv1-U) ". |
|------|---|
| [19] | 3GPP TS 38.414: "NG-RAN; NG data transport". |
| [20] | 3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2". |
| [21] | 3GPP TS 23.501: "System Architecture for the 5G System". |
| [22] | 3GPP TS 38.472: "NG-RAN; F1 signalling transport". |
| [23] | 3GPP TS 23.003: "Numbering, addressing and identification". |
| [24] | 3GPP TS 38.304: "NR; User Equipment (UE) procedures in Idle mode and RRC Inactive state ". |
| [25] | 3GPP TS 36.104: "Base Station (BS) radio transmission and reception". |
| [26] | 3GPP TS 38.101-1: "NR; User Equipment (UE) radio transmission and reception; Part 1: Range 1 Standalone". |
| [27] | 3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical channels and modulation". |
| [28] | 3GPP TS 38.423: "NG-RAN; Xn application protocol (XnAP)". |
| | |

3 Definitions and abbreviations

3.1 Definitions

elementary procedure: F1AP consists of Elementary Procedures (EPs). An Elementary Procedure is a unit of interaction between gNB-CU and gNB-DU. These Elementary Procedures are defined separately and are intended to be used to build up complete sequences in a flexible manner. If the independence between some EPs is restricted, it is described under the relevant EP description. Unless otherwise stated by the restrictions, the EPs may be invoked independently of each other as standalone procedures, which can be active in parallel. The usage of several F1AP EPs together is specified in stage 2 specifications (e.g., TS 38.470 [2]).

An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- Class 1: Elementary Procedures with response (success and/or failure).
- Class 2: Elementary Procedures without response.

For Class 1 EPs, the types of responses can be as follows:

Successful:

- A signalling message explicitly indicates that the elementary procedure successfully completed with the receipt of the response.

Unsuccessful:

- A signalling message explicitly indicates that the EP failed.
- On time supervision expiry (i.e., absence of expected response).

Successful and Unsuccessful:

- One signalling message reports both successful and unsuccessful outcome for the different included requests. The response message used is the one defined for successful outcome.

Class 2 EPs are considered always successful.

EN-DC operation: Used in this specification when the F1AP is applied for gNB-CU and gNB-DU in E-UTRAN.

gNB: as defined in TS 38.300 [6].
gNB-CU: as defined in TS 38.401 [4].
gNB-CU UE F1AP ID: as defined in TS 38.401 [4].
gNB-DU: as defined in TS 38.401 [4].
gNB-DU UE F1AP ID: as defined in TS 38.401 [4].

en-gNB: as defined in TS 37.340 [7].

UE-associated signalling: When F1AP messages associated to one UE uses the UE-associated logical F1-connection for association of the message to the UE in gNB-DU and gNB-CU.

UE-associated logical F1-connection: The UE-associated logical F1-connection uses the identities *GNB-CU UE F1AP ID* and *GNB-DU UE F1AP ID* according to the definition in TS 38.401 [4]. For a received UE associated F1AP message the gNB-CU identifies the associated UE based on the *GNB-CU UE F1AP ID* IE and the gNB-DU identifies the associated UE based on the *GNB-DU UE F1AP ID* IE. The UE-associated logical F1-connection may exist before the F1 UE context is setup in gNB-DU.

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

5GC5G Core Network5QI5G QoS Identifier

AMF Access and Mobility Management Function

CN Core Network CG Cell Group

CGI Cell Global Identifier

CP Control Plane
DL Downlink

EN-DC E-UTRA-NR Dual Connectivity

EPC Evolved Packet Core

IMEISV International Mobile station Equipment Identity and Software Version number

NSSAI Network Slice Selection Assistance Information

RANAC RAN Area Code RRC Radio Resource Control

S-NSSAI Single Network Slice Selection Assistance Information

SUL Supplementary Uplink
TAC Tracking Area Code
TAI Tracking Area Identity

4 General

4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating node exactly and completely. Any rule that specifies the behaviour of the originating node shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:
 - 1) Functionality which "shall" be executed.

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

2) Functionality which "shall, if supported" be executed.

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see clause 10.

4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification notations

For the purposes of the present document, the following notations apply:

Procedure When referring to an elementary procedure in the specification the Procedure Name is written with

the first letters in each word in upper case characters followed by the word "procedure", e.g.

Handover Preparation procedure.

Message When referring to a message in the specification the MESSAGE NAME is written with all letters

in upper case characters followed by the word "message", e.g. HANDOVER REQUEST message.

IE When referring to an information element (IE) in the specification the *Information Element Name*

is written with the first letters in each word in upper case characters and all letters in Italic font

followed by the abbreviation "IE", e.g. E-RAB ID IE.

Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is

written as it is specified in the specification enclosed by quotation marks, e.g. "Value".

5 F1AP services

F1AP provides the signalling service between gNB-DU and the gNB-CU that is required to fulfil the F1AP functions described in clause 7. F1AP services are divided into two groups:

Non UE-associated services: They are related to the whole F1 interface instance between the gNB-DU and gNB-

CU utilising a non UE-associated signalling connection.

UE-associated services: They are related to one UE. F1AP functions that provide these services are

associated with a UE-associated signalling connection that is maintained for the UE

in question.

Unless explicitly indicated in the procedure specification, at any instance in time one protocol endpoint shall have a maximum of one ongoing F1AP procedure related to a certain UE.

6 Services expected from signalling transport

The signalling connection shall provide in sequence delivery of F1AP messages. F1AP shall be notified if the signalling connection breaks.

7 Functions of F1AP

The functions of F1AP are described in TS 38.470 [2].

8 F1AP procedures

8.1 List of F1AP Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs (see subclause 3.1 for explanation of the different classes):

Table 1: Class 1 procedures

| Elementary | Initiating Message | Successful Outcome | Unsuccessful Outcome |
|--------------------------------|--------------------|--------------------|------------------------|
| Procedure | | Response message | Response message |
| Reset | RESET | RESET ACKNOWLEDGE | |
| F1 Setup | F1 SETUP REQUEST | F1 SETUP RESPONSE | F1 SETUP FAILURE |
| gNB-DU | GNB-DU | GNB-DU | GNB-DU CONFIGURATION |
| Configuration | CONFIGURATION | CONFIGURATION | UPDATE FAILURE |
| Update | UPDATE | UPDATE | |
| | | ACKNOWLEDGE | |
| gNB-CU | GNB-CU | GNB-CU | GNB-CU CONFIGURATION |
| Configuration | CONFIGURATION | CONFIGURATION | UPDATE FAILURE |
| Update | UPDATE | UPDATE | |
| UE 0 | LIE CONTENT OF THE | ACKNOWLEDGE | LIE CONTENT OFFICE |
| UE Context | UE CONTEXT SETUP | UE CONTEXT SETUP | UE CONTEXT SETUP |
| Setup | REQUEST | RESPONSE | FAILURE |
| UE Context | UE CONTEXT | UE CONTEXT RELEASE | |
| Release (gNB- CU initiated) | RELEASE COMMAND | COMPLETE | |
| UF Context | UE CONTEXT | UE CONTEXT | UE CONTEXT |
| Modification | MODIFICATION | MODIFICATION | MODIFICATION FAILURE |
| (gNB-CU | REQUEST | RESPONSE | MODII IOATION I AILONE |
| initiated) | INE GOEOT | 11201 01102 | |
| UE Context | UE CONTEXT | UE CONTEXT | UE CONTEXT |
| Modification | MODIFICATION | MODIFICATION | MODIFICATION REFUSE |
| Required (gNB- | REQUIRED | CONFIRM | |
| DU initiated) | | | |
| Write-Replace | WRITE-REPLACE | WRITE-REPLACE | |
| Warning | WARNING REQUEST | WARNING RESPONSE | |
| PWS Cancel | PWS CANCEL | PWS CANCEL | |
| | REQUEST | RESPONSE | |
| GNB-DU | GNB-DU RESOURCE | GNB-DU RESOURCE | |
| RESOURCE | COORDINATION | COORDINATION | |
| COORDINATION | REQUEST | RESPONSE | |

| Elementary Procedure | Message | |
|----------------------------------|-----------------------------|--|
| Error Indication | ERROR INDICATION | |
| UE Context Release Request (gNB- | UE CONTEXT RELEASE REQUEST | |
| DU initiated) | | |
| Initial UL RRC Message Transfer | INITIAL UL RRC MESSAGE | |
| | TRANSFER | |
| DL RRC Message Transfer | DL RRC MESSAGE TRANSFER | |
| UL RRC Message Transfer | UL RRC MESSAGE TRANSFER | |
| UE Inactivity Notification | UE INACTIVITY NOTIFICATION | |
| System Information Delivery | SYSTEM INFORMATION DELIVERY | |
| | COMMAND | |
| Paging | PAGING | |
| Notify | NOTIFY | |
| PWS Restart Indication | PWS RESTART INDICATION | |
| PWS Failure Indication | PWS FAILURE INDICATION | |
| gNB-DU Status Indication | GNB-DU STATUS INDICATION | |
| RRC Delivery Report | RRC DELIVERY REPORT | |
| Network Access Rate Reduction | NETWORK ACCESS RATE | |
| | REDUCTION | |

Table 2: Class 2 procedures

8.2 Interface Management procedures

8.2.1 Reset

8.2.1.1 General

The purpose of the Reset procedure is to initialise or re-initialise the F1AP UE-related contexts, in the event of a failure in the gNB-CU or gNB-DU. This procedure does not affect the application level configuration data exchanged during, e.g., the F1 Setup procedure.

The procedure uses non-UE associated signalling.

8.2.1.2 Successful Operation

8.2.1.2.1 Reset Procedure Initiated from the gNB-CU

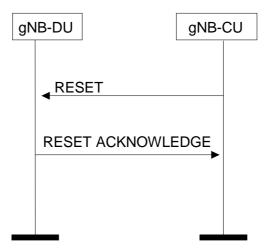


Figure 8.2.1.2.1-1: Reset procedure initiated from the gNB-CU. Successful operation

In the event of a failure at the gNB-CU, which has resulted in the loss of some or all transaction reference information, a RESET message shall be sent to the gNB-DU.

At reception of the RESET message the gNB-DU shall release all allocated resources on F1 and radio resources related to the UE association(s) indicated explicitly or implicitly in the RESET message and remove the indicated UE contexts including F1AP ID.

After the gNB-DU has released all assigned F1 resources and the UE F1AP IDs for all indicated UE associations which can be used for new UE-associated logical F1-connections over the F1 interface, the gNB-DU shall respond with the RESET ACKNOWLEDGE message. The gNB-DU does not need to wait for the release of radio resources to be completed before returning the RESET ACKNOWLEDGE message.

If the RESET message contains the *UE-associated logical F1-connection list* IE, then:

- The gNB-DU shall use the gNB-CU UE F1AP ID IE and/or the gNB-DU UE F1AP ID IE to explicitly identify the UE association(s) to be reset.
- The gNB-DU shall include in the RESET ACKNOWLEDGE message, for each UE association to be reset, the UE-associated logical F1-connection Item IE in the UE-associated logical F1-connection list IE. The UE-associated logical F1-connection Item IEs shall be in the same order as received in the RESET message and shall include also unknown UE-associated logical F1-connections. Empty UE-associated logical F1-connection Item IEs, received in the RESET message, may be omitted in the RESET ACKNOWLEDGE message.
- If the *gNB-CU UE F1AP ID* IE is included in the *UE-associated logical F1-connection Item* IE for a UE association, the gNB-DU shall include the *gNB-CU UE F1AP ID* IE in the corresponding *UE-associated logical F1-connection Item* IE in the RESET ACKNOWLEDGE message.
- If the *gNB-DU UE F1AP ID* IE is included in the *UE-associated logical F1-connection Item* IE for a UE association, the gNB-DU shall include the *gNB-DU UE F1AP ID* IE in the corresponding *UE-associated logical F1-connection Item* IE in the RESET ACKNOWLEDGE message.

Interactions with other procedures:

If the RESET message is received, any other ongoing procedure (except for another Reset procedure) on the same F1 interface related to a UE association, indicated explicitly or implicitly in the RESET message, shall be aborted.

8.2.1.2.2 Reset Procedure Initiated from the gNB-DU

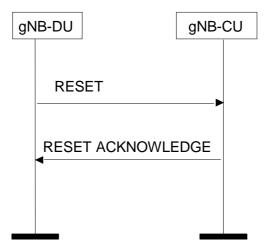


Figure 8.2.1.2.2-1: Reset procedure initiated from the gNB-DU. Successful operation

In the event of a failure at the gNB-DU, which has resulted in the loss of some or all transaction reference information, a RESET message shall be sent to the gNB-CU.

At reception of the RESET message the gNB-CU shall release all allocated resources on F1 related to the UE association(s) indicated explicitly or implicitly in the RESET message and remove the F1AP ID for the indicated UE associations.

After the gNB-CU has released all assigned F1 resources and the UE F1AP IDs for all indicated UE associations which can be used for new UE-associated logical F1-connections over the F1 interface, the gNB-CU shall respond with the RESET ACKNOWLEDGE message.

If the RESET message contains the UE-associated logical F1-connection list IE, then:

- The gNB-CU shall use the *gNB-CU UE F1AP ID* IE and/or the *gNB-DU UE F1AP ID* IE to explicitly identify the UE association(s) to be reset.
- The gNB-CU shall in the RESET ACKNOWLEDGE message include, for each UE association to be reset, the UE-associated logical F1-connection Item IE in the UE-associated logical F1-connection list IE. The UE-associated logical F1-connection Item IEs shall be in the same order as received in the RESET message and shall include also unknown UE-associated logical F1-connections. Empty UE-associated logical F1-connection Item IEs, received in the RESET message, may be omitted in the RESET ACKNOWLEDGE message.
- If the *gNB-CU UE F1AP ID* IE is included in the *UE-associated logical F1-connection Item* IE for a UE association, the gNB-CU shall include the *gNB-CU UE F1AP ID* IE in the corresponding *UE-associated logical F1-connection Item* IE in the RESET ACKNOWLEDGE message.
- If the *gNB-DU UE F1AP ID* IE is included in a *UE-associated logical F1-connection Item* IE for a UE association, the gNB-CU shall include the *gNB-DU UE F1AP ID* IE in the corresponding *UE-associated logical F1-connection Item* IE in the RESET ACKNOWLEDGE message.

Interactions with other procedures:

If the RESET message is received, any other ongoing procedure (except for another Reset procedure) on the same F1 interface related to a UE association, indicated explicitly or implicitly in the RESET message, shall be aborted.

8.2.1.3 Abnormal Conditions

Not applicable.

8.2.2 Error Indication

8.2.2.1 General

The Error Indication procedure is initiated by a node in order to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

If the error situation arises due to reception of a message utilising UE associated signalling, then the Error Indication procedure uses UE associated signalling. Otherwise the procedure uses non-UE associated signalling.

8.2.2.2 Successful Operation

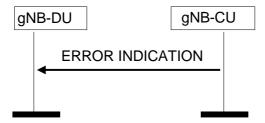


Figure 8.2.2.2-1: Error Indication procedure, gNB-CU originated. Successful operation

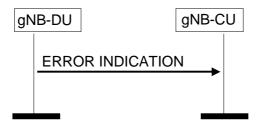


Figure 8.2.2.2-2: Error Indication procedure, gNB-DU originated. Successful operation

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node.

The ERROR INDICATION message shall contain at least either the *Cause* IE or the *Criticality Diagnostics* IE. In case the Error Indication procedure is triggered by utilising UE associated signalling the *gNB-CU UE F1AP ID* IE and *gNB-DU UE F1AP ID* IE shall be included in the ERROR INDICATION message. If one or both of the *gNB-CU UE F1AP ID* IE and the *gNB-DU UE F1AP ID* IE are not correct, the cause shall be set to appropriate value, e.g., "Unknown or already allocated gNB-DU UE F1AP ID", "Unknown or already allocated gNB-DU UE F1AP ID" or "Unknown or inconsistent pair of UE F1AP ID".

8.2.2.3 Abnormal Conditions

Not applicable.

8.2.3 F1 Setup

8.2.3.1 General

The purpose of the F1 Setup procedure is to exchange application level data needed for the gNB-DU and the gNB-CU to correctly interoperate on the F1 interface. This procedure shall be the first F1AP procedure triggered for the F1-C interface instance after a TNL association has become operational.

NOTE: If F1-C signalling transport is shared among multiple F1-C interface instances, one F1 Setup procedure is issued per F1-C interface instance to be setup, i.e. several F1 Setup procedures may be issued via the same TNL association after that TNL association has become operational.

NOTE: Exchange of application level configuration data also applies between the gNB-DU and the gNB-CU in case the DU does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [8]. How to use this information when this option is used is not explicitly specified.

The procedure uses non-UE associated signalling.

This procedure erases any existing application level configuration data in the two nodes and replaces it by the one received. This procedure also re-initialises the F1AP UE-related contexts (if any) and erases all related signalling connections in the two nodes like a Reset procedure would do.

8.2.3.2 Successful Operation

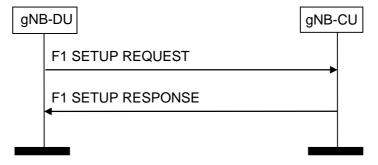


Figure 8.2.3.2-1: F1 Setup procedure: Successful Operation

The gNB-DU initiates the procedure by sending a F1 SETUP REQUEST message including the appropriate data to the gNB-CU. The gNB-CU responds with a F1 SETUP RESPONSE message including the appropriate data.

The exchanged data shall be stored in respective node and used as long as there is an operational TNL association. When this procedure is finished, the F1 interface is operational and other F1 messages may be exchanged.

If the F1 SETUP REQUEST message contains the gNB-DU Name IE, the gNB-CU may use this IE as a human readable name of the gNB-DU.

If the F1 SETUP REQUEST message contains the *gNB-DU Served Cells List* IE, the gNB-CU shall take into account as specified in TS 38.401 [4].

For NG-RAN, the gNB-DU shall include the gNB-DU System Information IE and the TAI Slice Support List IE.

The gNB-CU may include the *Cells to be Activated List* IE in the F1 SETUP RESPONSE message. The *Cells to be Activated List* IE includes a list of cells that the gNB-CU requests the gNB-DU to activate. The gNB-DU shall activate the cells included in the *Cells to be Activated List* IE and reconfigure the physical cell identity for cells for which the *NR PCI* IE is included.

For NG-RAN, the gNB-CU shall include the gNB-CU System Information IE in the F1 SETUP RESPONSE message.

For NG-RAN, the gNB-DU may include the *RAN Area Code* IE in the F1 SETUP REQUEST message. The gNB-CU may use it according to TS 38.300 [6].

For NG-RAN, the gNB-CU may include *Available PLMN List* IE, and optionally also *Extended Available PLMN List* IE, if the available PLMN(s) are different from what gNB-DU has provided in F1 SETUP REQUEST message, gNB-DU shall take this into account and only broadcast the PLMN(s) included in the received Available PLMN list(s).

The *Latest RRC Version Enhanced* IE shall be included in the F1 SETUP REQUEST message and in the F1 SETUP RESPONSE message.

If in F1 SETUP REQUEST message, the *Cell Direction* IE is present, the gNB-CU should use it to understand whether the cell is for UL or DL only. If in F1 SETUP REQUEST message, the *Cell Direction* IE is omitted in the *Served Cell Information* IE it shall be interpreted as that the Cell Direction is Bi-directional.

8.2.3.3 Unsuccessful Operation

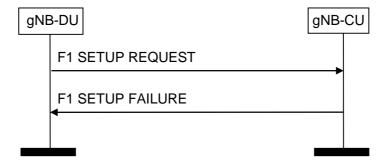


Figure 8.2.3.3-1: F1 Setup procedure: Unsuccessful Operation

If the gNB-CU cannot accept the setup, it should respond with a F1 SETUP FAILURE and appropriate cause value.

If the F1 SETUP FAILURE message includes the *Time To Wait* IE, the gNB-DU shall wait at least for the indicated time before reinitiating the F1 setup towards the same gNB-CU.

8.2.3.4 Abnormal Conditions

Not applicable.

8.2.4 gNB-DU Configuration Update

8.2.4.1 General

The purpose of the gNB-DU Configuration Update procedure is to update application level configuration data needed for the gNB-DU and the gNB-CU to interoperate correctly on the F1 interface. This procedure does not affect existing UE-related contexts, if any. The procedure uses non-UE associated signalling.

NOTE: Update of application level configuration data also applies between the gNB-DU and the gNB-CU in case the DU does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [8]. How to use this information when this option is used is not explicitly specified.

8.2.4.2 Successful Operation

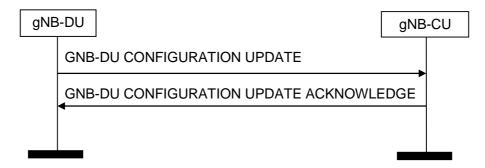


Figure 8.2.4.2-1: gNB-DU Configuration Update procedure: Successful Operation

The gNB-DU initiates the procedure by sending a GNB-DU CONFIGURATION UPDATE message to the gNB-CU including an appropriate set of updated configuration data that it has just taken into operational use. The gNB-CU responds with GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE message to acknowledge that it successfully updated the configuration data. If an information element is not included in the GNB-DU CONFIGURATION UPDATE message, the gNB-CU shall interpret that the corresponding configuration data is not changed and shall continue to operate the F1-C interface with the existing related configuration data.

The updated configuration data shall be stored in both nodes and used as long as there is an operational TNL association or until any further update is performed.

If gNB-DU ID IE is contained in the GNB-DU CONFIGURATION UPDATE message for a newly established SCTP association, the gNB-CU will associate this association with the related gNB-DU.

If *Served Cells To Add Item* IE is contained in the GNB-DU CONFIGURATION UPDATE message, the gNB-CU shall add cell information according to the information in the *Served Cell Information IE*. For NG-RAN, the gNB-DU shall include the *gNB-DU System Information* IE.

If Served Cells To Modify Item IE is contained in the GNB-DU CONFIGURATION UPDATE message, the gNB-CU shall modify information of cell indicated by Old NR CGI IE according to the information in the Served Cell Information IE and overwrite the served cell information for the affected served cell. Further, if the gNB-DU System Information IE is present the gNB-CU shall store and replace any previous information received.

If Served Cells To Delete Item IE is contained in the GNB-DU CONFIGURATION UPDATE message, the gNB-CU shall delete information of cell indicated by Old NR CGI IE.

If *Cells Status Item* IE is contained in the GNB-DU CONFIGURATION UPDATE message, the gNB-CU shall update the information about the cells, as described in TS 38.401 [4]. If if the *Switching Off Ongoing* IE is present in the *Cells Status Item* IE, contained in the GNB-DU CONFIGURATION UPDATE message, and the corresponding *Service State IE* is set to "Out-of-Service", the gNB-CU shall ignore the *Switching Off Ongoing* IE.

If *Cells to be Activated List Item* IE is contained in the GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE message, the gNB-DU shall activate the cell indicated by *NR CGI* IE and reconfigure the physical cell identity for cells for which the *NR PCI* IE is included.

If *Cells to be Activated List Item* IE is contained in the GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE message and the indicated cells are already activated, the gNB-DU shall update the cell information received in *Cells to be Activated List Item* IE.

If *Cells to be Deactivated List Item* IE is contained in the GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE message, the gNB-DU shall deactivate all the cells with NR CGI listed in the IE.

If *Dedicated SI Delivery Needed UE List* IE is contained in the GNB-DU CONFIGURATION UPDATE message, the gNB-CU should take it into account when informing the UE of the updated system information via the dedicated RRC message.

For NG-RAN, the gNB-CU shall include the *gNB-CU System Information* IE in the GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE message. The *SIB type to Be Updated List* IE shall contain the full list of SIBs to be broadcast.

For NG-RAN, the gNB-DU may include the *RAN Area Code* IE in the GNB-DU CONFIGURATION UPDATE message. The gNB-CU shall store and replace any previously provided *RAN Area Code* IE by the received *RAN Area Code* IE.

If Available PLMN List IE, and optionally also Extended Available PLMN List IE, is contained in GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE message, the gNB-DU shall overwrite the whole available PLMN list and update the corresponding system information.

If in GNB-DU CONFIGURATION UPDATE message, the *Cell Direction* IE is present, the gNB-CU should use it to understand whether the cell is for UL or DL only. If in GNB-DU CONFIGURATION UPDATE message, the *Cell Direction* IE is omitted in the *Served Cell Information* IE it shall be interpreted as that the Cell Direction is Bidirectional.

If the GNB-DU CONFIGURATION UPDATE message includes *gNB-DU TNL Association To Remove List* IE, and the *Endpoint IP address* IE and the *Port Number* IE for both TNL endpoints of the TNL association(s) are included in the *gNB-DU TNL Association To Remove List* IE, the gNB-CU shall, if supported, consider that the TNL association(s) indicated by both received TNL endpoints will be removed by the gNB-DU. If the *Endpoint IP address* IE, or the *Endpoint IP address* IE and the *Port Number* IE for one or both of the TNL endpoints is included in the *gNB-DU TNL Association To Remove List* IE in GNB-DU CONFIGURATION UPDATE message, the gNB-CU shall, if supported, consider that the TNL association(s) indicated by the received endpoint IP address(es) will be removed by the gNB-DU.

8.2.4.3 Unsuccessful Operation

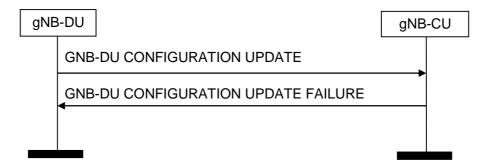


Figure 8.2.4.3-1: gNB-DU Configuration Update procedure: Unsuccessful Operation

If the gNB-CU cannot accept the update, it shall respond with a GNB-DU CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the GNB-DU CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE, the gNB-DU shall wait at least for the indicated time before reinitiating the GNB-DU CONFIGURATION UPDATE message towards the same gNB-CU.

8.2.4.4 Abnormal Conditions

Not applicable.

8.2.5 gNB-CU Configuration Update

8.2.5.1 General

The purpose of the gNB-CU Configuration Update procedure is to update application level configuration data needed for the gNB-DU and gNB-CU to interoperate correctly on the F1 interface. This procedure does not affect existing UE-related contexts, if any. The procedure uses non-UE associated signalling.

8.2.5.2 Successful Operation

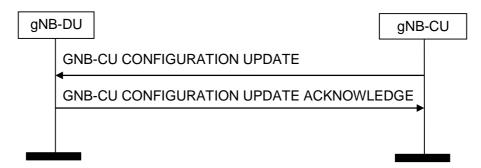


Figure 8.2.5.2-1: gNB-CU Configuration Update procedure: Successful Operation

The gNB-CU initiates the procedure by sending a GNB-CU CONFIGURATION UPDATE message including the appropriate updated configuration data to the gNB-DU. The gNB-DU responds with a GNB-CU CONFIGURATION UPDATE ACKNOWLEDGE message to acknowledge that it successfully updated the configuration data. If an information element is not included in the GNB-CU CONFIGURATION UPDATE message, the gNB-DU shall interpret that the corresponding configuration data is not changed and shall continue to operate the F1-C interface with the existing related configuration data.

The updated configuration data shall be stored in the respective node and used as long as there is an operational TNL association or until any further update is performed.

If *Cells to be Activated List Item* IE is contained in the GNB-CU CONFIGURATION UPDATE message, the gNB-DU shall activate the cell indicated by *NR CGI* IE and reconfigure the physical cell identity for which the *NR PCI* IE is included.

If *Cells to be Deactivated List Item* IE is contained in the GNB-CU CONFIGURATION UPDATE message, the gNB-DU shall deactivate the cell indicated by *NR CGI* IE.

If *Cells to be Activated List Item* IE is contained in the GNB-CU CONFIGURATION UPDATE message and the indicated cells are already activated, the gNB-DU shall update the cell information received in *Cells to be Activated List Item* IE.

If the *gNB-CU System Information* IE is contained in the gNB-CU CONFIGURATION UPDATE message, the gNB-DU shall include the *Dedicated SI Delivery Needed UE List* IE in the GNB-CU CONFIGURATION UPDATE ACKNOWLEDGE message for UEs that are unable to receive system information from broadcast.

If *Dedicated SI Delivery Needed UE List* IE is contained in the GNB-CU CONFIGURATION UPDATE ACKNOWLEDGE message, the gNB-CU should take it into account when informing the UE of the updated system information via the dedicated RRC message.

If the *gNB-CU TNL Association To Add List* IE is contained in the gNB-CU CONFIGURATION UPDATE message, the gNB-DU shall, if supported, use it to establish the TNL association(s) with the gNB-CU. The gNB-DU shall report to the gNB-CU, in the gNB-CU CONFIGURATION UPDATE ACKNOWLEDGE message, the successful establishment of the TNL association(s) with the gNB-CU as follows:

- A list of TNL address(es) with which the gNB-DU successfully established the TNL association shall be included in the gNB-CU *TNL Association Setup List* IE;
- A list of TNL address(es) with which the gNB-DU failed to establish the TNL association shall be included in the *gNB-CU TNL Association Failed To Setup List* IE.

If the GNB-CU CONFIGURATION UPDATE message includes *gNB-CU TNL Association To Remove List* IE, and the *Endpoint IP address* IE and the *Port Number* IE for both TNL endpoints of the TNL association(s) are included in the *gNB-CU TNL Association To Remove List* IE, the gNB-DU shall, if supported, initiate removal of the TNL association(s) indicated by both received TNL endpoints towards the gNB-CU. If the *Endpoint IP address* IE, or the *Endpoint IP address* IE and the *Port Number* IE for one or both of the TNL endpoints is included in the *gNB-CU TNL Association To Remove List* IE, the gNB-DU shall, if supported, initiate removal of the TNL association(s) indicated by the received endpoint IP address(es).

If the *gNB-CU TNL Association To Update List* IE is contained in the gNB-CU CONFIGURATION UPDATE message the gNB-DU shall, if supported, overwrite the previously stored information for the related TNL Association(s).

If the TNL Association usage IE is included in the gNB-CU TNL Association To Add List IE or the gNB-CU TNL Association To Update List IE, the gNB-DU node shall, if supported, use it as described in TS 38.472 [22].

For NG-RAN, the gNB-CU shall include the *gNB-CU System Information* IE in the GNB-CU CONFIGURATION UPDATE message. The *SIB type to Be Updated List* IE shall contain the full list of SIBs to be broadcast.

If *Protected E-UTRA Resources List* IE is contained in the GNB-CU CONFIGURATION UPDATE message, the gNB-DU shall protect the corresponding resource of the cells indicated by *E-UTRA Cells List* IE for spectrum sharing between E-UTRA and NR.

If the GNB-CU CONFIGURATION UPDATE message contains the *Protected E-UTRA Resource Indication* IE, the receiving gNB-DU should forward it to lower layers and use it for cell-level resource coordination. The gNB-DU shall consider the received *Protected E-UTRA Resource Indication* IE when expressing its desired resource allocation during gNB-DU Resource Coordination procedure. The gNB-DU shall consider the received *Protected E-UTRA Resource Indication* IE content valid until reception of a new update of the IE for the same gNB-DU.

If *Available PLMN List* IE, and optionally also *Extended Available PLMN List* IE, is contained in GNB-CU CONFIGURATION UPDATE message, the gNB-DU shall overwrite the whole available PLMN list and update the corresponding system information.

If *Cells Failed to be Activated Item* IE is contained in the GNB-CU CONFIGURATION UPDATE ACKNOWLEDGE message, the gNB-CU shall consider that the indicated cells are out-of-service as defined in TS 38.401 [4].

8.2.5.3 Unsuccessful Operation

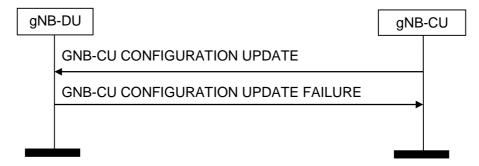


Figure 8.2.5.3-1: gNB-CU Configuration Update: Unsuccessful Operation

If the gNB-DU cannot accept the update, it shall respond with a GNB-CU CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the GNB-CU CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE, the gNB-CU shall wait at least for the indicated time before reinitiating the GNB-CU CONFIGURATION UPDATE message towards the same gNB-DU.

8.2.5.4 Abnormal Conditions

Not applicable.

8.2.6 gNB-DU Resource Coordination

8.2.6.1 General

The purpose of the gNB-DU Resource Coordination procedure is to enable coordination of radio resource allocation between a gNB-CU and a gNB-DU for the purpose of spectrum sharing between E-UTRA and NR. This procedure is to be used only for the purpose of spectrum sharing between E-UTRA and NR.

The procedure uses non-UE-associated signalling.

8.2.6.2 Successful Operation

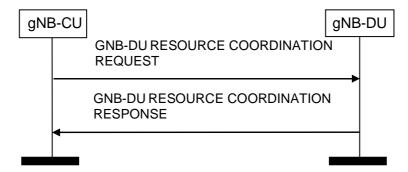


Figure 8.2.6.2-1: gNB-DU Resource Coordination, successful operation

A gNB-CU initiates the procedure by sending the GNB-DU RESOURCE COORDINATION REQUEST message to a gNB-DU over the F1 interface.

The gNB-DU extracts the *E-UTRA – NR Cell Resource Coordination Request Container* IE and it replies by sending the GNB-DU RESOURCE COORDINATION RESPONSE message.

In case of NR-initiated gNB-DU Resource Coordination procedure, the *Ignore Coordination Request Container* IE shall be present and set to "yes" and the *E-UTRA – NR Cell Resource Coordination Request Container* IE in the GNB-DU RESOURCE COORDINATION REQUEST message shall be ignored.

8.2.7 gNB-DU Status Indication

8.2.7.1 General

The purpose of the gNB-DU Status Indication procedure is informing the gNB-CU that the gNB-DU is overloaded so that overload reduction actions can be applied. The procedure uses non-UE associated signalling.

8.2.7.2 Successful Operation

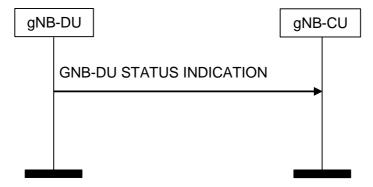


Figure 8.2.7.2-1: gNB-DU Status Indication procedure

If the *gNB-DU Overload Information* IE in the GNB-DU STATUS INDICATION message indicates that the gNB-DU is overloaded, the gNB-CU shall apply overload reduction actions until informed, with a new GNB-DU STATUS INDICATION message, that the overload situation has ceased.

The detailed overload reduction policy is up to gNB-CU implementation.

8.2.7.3 Abnormal Conditions

Void.

8.2.8 F1 Removal

8.2.8.1 General

The purpose of the F1 Removal procedure is to remove the interface instance and all related resources between the gNB-DU and the gNB-CU in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

NOTE: In case the signalling transport is shared among several F1-C interface instances, and the TNL association is still used by one or several F1-C interface instances, the initiating node should not initiate the removal of the TNL association.

The procedure uses non-UE-associated signaling.

8.2.8.2 Successful Operation

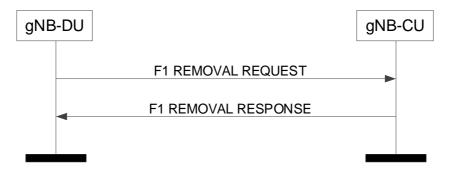


Figure 8.2.8-1: F1 Removal, gNB-DU initiated, successful operation

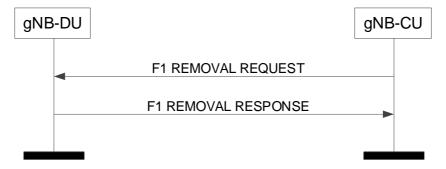


Figure 8.2.8.2-2: F1 Removal, gNB-CU initiated, successful operation

Successful F1 Removal, gNB-DU initiated

The gNB-DU initiates the procedure by sending the F1 REMOVAL REQUEST message to the gNB-CU. Upon reception of the F1 REMOVAL REQUEST message the gNB-CU shall reply with the F1 REMOVAL RESPONSE message. After receiving the F1 REMOVAL RESPONSE message, the gNB-DU may initiate removal of the TNL association towards the gNB-CU, if applicable, and may remove all resources associated with that signaling connection. The gNB-CU may then remove all resources associated with that interface instance.

Successful F1 Removal, gNB-CU initiated

The gNB-CU initiates the procedure by sending the F1 REMOVAL REQUEST message to the gNB-DU. Upon reception of the F1 REMOVAL REQUEST message the gNB-DU shall reply with the F1 REMOVAL RESPONSE message. After receiving the F1 REMOVAL RESPONSE message, the gNB-CU may initiate removal of the TNL association towards the gNB-DU, if applicable, and may remove all resources associated with that signaling connection. The gNB-DU may then remove all resources associated with that interface instance.

8.2.8.3 Unsuccessful Operation

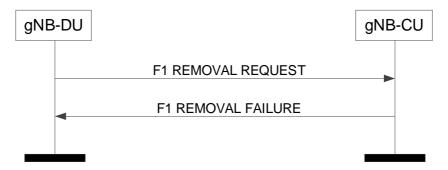


Figure 8.2.8.3-1: F1 Removal, gNB-DU initiated, unsuccessful operation

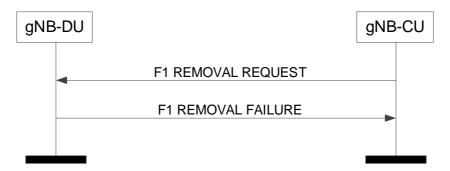


Figure 8.2.8.3-2: F1 Removal, gNB-CU initiated, unsuccessful operation

Unsuccessful F1 Removal, gNB-DU initiated

If the gNB-CU cannot accept to remove the signaling connection with the gNB-DU it shall respond with an F1 REMOVAL FAILURE message with an appropriate cause value.

Unsuccessful F1 Removal, gNB-CU initiated

If the gNB-DU cannot accept to remove the signaling connection with the gNB-CU it shall respond with an F1 REMOVAL FAILURE message with an appropriate cause value.

8.2.8.4 Abnormal Conditions

Not applicable.

8.2.9 Network Access Rate Reduction

8.2.9.1 General

The purpose of the Network Access Rate Reduction procedure is to indicate to the gNB-DU that the rate at which UEs are accessing the network need to be reduced from its current level.

The procedure uses non-UE associated signalling.

8.2.9.2 Successful operation



Figure 8.2.9.2-1: Network Access Rate Reduction, Successful operation

The gNB-CU initiates the procedure by sending a NETWORK ACCESS RATE REDUCTION message to the gNB-DU. When receiving the NETWORK ACCESS RATE REDUCTION message the gNB-DU should take into account the information contained in the *UAC assistance information* to set the parameters for Unified Access Barring.

8.2.9.3 Abnormal Conditions

Not applicable

8.3 UE Context Management procedures

8.3.1 UE Context Setup

8.3.1.1 General

The purpose of the UE Context Setup procedure is to establish the UE Context including, among others, SRB, and DRB configuration. The procedure uses UE-associated signalling.

8.3.1.2 Successful Operation

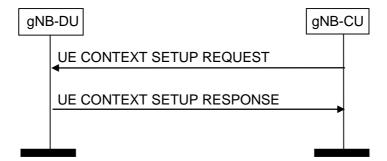


Figure 8.3.1.2-1: UE Context Setup Request procedure: Successful Operation

The gNB-CU initiates the procedure by sending UE CONTEXT SETUP REQUEST message to the gNB-DU. If the gNB-DU succeeds to establish the UE context, it replies to the gNB-CU with UE CONTEXT SETUP RESPONSE. If no UE-associated logical F1-connection exists, the UE-associated logical F1-connection shall be established as part of the procedure.

If the *UE-CapabilityRAT-ContainerList* IE is included in the UE CONTEXT SETUP REQUEST, the gNB-DU shall take this information into account for UE specific configurations.

If the *servingCellMO* IE is included in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall configure servingCellMO for the indicated SpCell accordingly.

If the *SpCell UL Configured* IE is included in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall configure UL for the indicated SpCell accordingly.

If the *SCell To Be Setup List* IE is included in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall consider it as a list of candidate SCells to be set up. If the *SCell UL Configured* IE is included in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall configure UL for the indicated SCell accordingly. If the *servingCellMO* IE is included in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall configure servingCellMO for the indicated SCell accordingly.

If the *DRX Cycle* IE is contained in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall use the provided value from the gNB-CU.

If the *UL Configuration* IE in *DRB to Be Setup Item* IE is contained in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall take it into account for UL scheduling.

If the *SRB To Be Setup List* IE is contained in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall act as specified in TS 38.401 [4]. If *Duplication Indication* IE is contained in the *SRB To Be Setup List* IE, the gNB-DU shall, if supported, setup two RLC entities for the indicated SRB.

If the *DRB To Be Setup List* IE is contained in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall act as specified in TS 38.401 [4]. If the *QoS Flow Mapping Indication* IE is included in the *DRB To Be Setup List* IE for a QoS flow, the gNB-DU may take it into account that only the uplink or downlink QoS flow is mapped to the indicated DRB.

If two *UL UP TNL Information* IEs are included in UE CONTEXT SETUP REQUEST message for a DRB, gNB-DU shall include two *DL UP TNL Information* IEs in UE CONTEXT SETUP RESPONSE message and setup two RLC entities for the indicated DRB. gNB-CU and gNB-DU use the *UL UP TNL Information* IEs and *DL UP TNL Information* IEs to support packet duplication for intra-gNB-DU CA as defined in TS 38.470 [2]. The first *UP TNL Information* IE of the two *UP TNL Information* IEs is for the primary path.

If *Duplication Activation IE* is included in the UE CONTEXT SETUP REQUEST message for a DRB, gNB-DU should take it into account when activing/deactiving CA based PDCP duplication for the DRB.

If *DC Based Duplication Configured* IE is included in the UE CONTEXT SETUP REQUEST message for a DRB, gNB-DU shall regard that DC based PDCP duplication is configured for this DRB if the value is set to be "true" and it should take the responsibility of PDCP duplication activation/deactivation. If *DC Based Duplication Activation* IE is included in the UE CONTEXT SETUP REQUEST message for a DRB, gNB-DU should take it into account when activing/deactiving DC based PDCP duplication for this DRB.

If *UL PDCP SN length* IE is included in the UE CONTEXT SETUP REQUEST message for a DRB, gNB-DU shall, if supported, store this information and use it for lower layer configuration.

For EN-DC operation, and if the *Subscriber Profile ID for RAT/Frequency priority* IE is received from an MeNB, the UE CONTEXT SETUP REQUEST message shall contain the *Subscriber Profile ID for RAT/Frequency priority* IE. The gNB-DU shall store the received Subscriber Profile ID for RAT/Frequency priority in the UE context and use it as defined in TS 36.300 [20].

If the *Index to RAT/Frequency Selection Priority* IE is available at the gNB-CU, the *Index to RAT/Frequency Selection Priority* IE shall be included in the UE CONTEXT SETUP REQUEST. The gNB-DU may use it for RRM purposes.

The gNB-DU shall report to the gNB-CU, in the UE CONTEXT SETUP RESPONSE message, the result for all the requested DRBs and SRBs in the following way:

- A list of DRBs which are successfully established shall be included in the DRB Setup List IE;
- A list of DRBs which failed to be established shall be included in the DRB Failed to Setup List IE;
- A list of SRBs which failed to be established shall be included in the SRB Failed to Setup List IE.
- A list of successfully established SRBs with logical channel identities for primary path shall be included in the *SRB Setup List* IE only if CA based PDCP duplication is initiated for the concerned SRBs.

When the gNB-DU reports the unsuccessful establishment of a DRB or SRB, the cause value should be precise enough to enable the gNB-CU to know the reason for the unsuccessful establishment.

For EN-DC operation, the gNB-CU shall include in the UE CONTEXT SETUP REQUEST the *E-UTRAN QoS* IE. The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-UTRAN QoS* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [15].

For NG-RAN operation, the gNB-CU shall include in the UE CONTEXT SETUP REQUEST the DRB Information IE.

For DC operation, the CG-ConfigInfo IE shall be included in the CU to DU RRC Information IE at the gNB acting as secondary node. If the CG-ConfigInfo IE is included in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall regard it as a reconfiguration with sync as defined in TS 38.331 [8].

If the *HandoverPreparationInformation* IE is included in the *CU to DU RRC Information* IE in the UE CONTEXT SETUP REQUEST message, the gNB-DU of the gNB acting as master node shall regard it as a reconfiguration with sync as defined in TS 38.331 [8]. The gNB-CU of the gNB acting as master node shall only initiate the UE Context Setup procedure for handover or secondary node addition when at least one DRB is setup for the UE.

If the received *CU to DU RRC Information* IE does not include source cell group configuration, the gNB-DU shall generate the cell group configuration using full configuration. Otherwise, delta configuration is allowed.

If the gNB-CU includes the SMTC information of the measured frequency(ies) in the *MeasurementTimingConfiguration* IE of the *CU to DU RRC Information* IE that is included in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall generate the measurement gaps based on the received SMTC information. Then the gNB-DU shall send the measurement gaps information to the gNB-CU in the *MeasGapConfig* IE of the *DU to CU RRC Information* IE that is included in the UE CONTEXT SETUP RESPONSE message.

If the *MeasConfig* IE is included in the *CU to DU RRC Information* IE in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall deduce that changes to the measurements configuration need to be applied. If the *measObjectToAddModList* IE is included in the *MeasConfig* IE, then the frequencies added in such IE are to be activated. Then the gNB-DU shall decide if measurement gaps are needed or not and, if needed, the gNB-DU shall send the measurement gaps information to the gNB-CU in the *MeasGapConfig* IE of the *DU to CU RRC Information* IE that is included in the UE CONTEXT SETUP RESPONSE message. If the *measObjectToRemoveList* IE is included in the *MeasConfig* IE, the gNB-DU shall ignore it.

For EN-DC operation, if the gNB-CU includes the *Resource Coordination Transfer Information* IE in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall, if supported, use it for the purpose of resource coordination. If the *Ignore PRACH Configuration* IE is present and set to "true" the *E-UTRA PRACH Configuration* IE in the UE CONTEXT SETUP REQUEST message shall be ignored. If the gNB-CU received the MeNB Resource Coordination Information as defined in TS 36.423 [9], it shall transparently transfer it to the gNB-DU via the *Resource Coordination Transfer Container* IE in the UE CONTEXT SETUP REQUEST message. The gNB-DU shall use the information received in the *Resource Coordination Transfer Container* IE for reception of MeNB Resource Coordination Information at the gNB acting as secondary node as described in TS 36.423 [9]. If the *Resource Coordination E-UTRA Cell Information* IE is included in the *Resource Coordination Information* IE, the gNB-DU shall store the information replacing previously received information for the same E-UTRA cell, and use the stored information for the purpose of resource coordination.

For NGEN-DC or NE-DC operation, if the gNB-CU includes the *Resource Coordination Transfer Information* IE in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall, if supported, use it for the purpose of resource coordination. If the gNB-CU received the MR-DC Resource Coordination Information as defined in TS 38.423 [28], it shall transparently transfer it to the gNB-DU via the *Resource Coordination Transfer Container* IE in the UE CONTEXT SETUP REQUEST message. The gNB-DU shall use the information received in the *Resource Coordination Transfer Container* IE for reception of MR-DC Resource Coordination Information at the gNB as described in TS 38.423 [28].

The *UEAssistanceInformation* IE shall be included in *CU to DU RRC Information* IE in the UE CONTEXT SETUP REQUEST message if the gNB-CU received this IE from the UE; if the *UEAssistanceInformation* IE is included in the *CU to DU RRC Information* IE in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall, if supported, take it into account when configuring resources for the UE.

If the *Resource Coordination Transfer Container* IE is included in the UE CONTEXT SETUP RESPONSE, the gNB-CU shall transparently transfer this information for the purpose of resource coordination as described in TS 36.423 [9], TS 38.423 [28].

If the *Masked IMEISV* IE is contained in the UE CONTEXT SETUP REQUEST message the gNB-DU shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

If the *SCell Failed To Setup List* IE is contained in the UE CONTEXT SETUP RESPONSE message, the gNB-CU shall regard the corresponding SCell(s) failed to be set up with an appropriate cause value for each SCell failed to setup.

If the *Inactivity Monitoring Request* IE is contained in the UE CONTEXT SETUP REQUEST message, gNB-DU may consider that the gNB-CU has requested the gNB-DU to perform UE inactivity monitoring. If the *Inactivity Monitoring*

Response IE is contained in the UE CONTEXT SETUP RESPONSE message and set to "Not-supported", the gNB-CU shall consider that the gNB-DU does not support UE inactivity monitoring for the UE.

If the *CellGroupConfig* IE is included in the *DU to CU RRC Information* IE contained in the UE CONTEXT SETUP RESPONSE message, the gNB-CU shall perform RRC Reconfiguration or RRC connection resume as described in TS 38.331 [8]. The *CellGroupConfig* IE shall transparently be signaled to the UE as specified in TS 38.331 [8].

If the *Full Configuration* IE is contained in the UE CONTEXT SETUP RESPONSE message, the gNB-CU shall consider that the gNB-DU has generated the *CellGroupConfig* IE using full configuration.

If the *C-RNTI* IE is included in the UE CONTEXT SETUP RESPONSE, the gNB-CU shall consider that the C-RNTI has been allocated by the gNB-DU for this UE context.

The UE Context Setup Procedure is not used to configure SRB0.

If the UE CONTEXT SETUP REQUEST message contains the *RRC-Container* IE, the gNB-DU shall send the corresponding RRC message to the UE via SRB1.

If the *Notification Control* IE is included in the *DRB to Be Setup List* IE and it is set to active, the gNB-DU shall, if supported, monitor the QoS of the DRB and notify the gNB-CU if the QoS cannot be fulfilled any longer or if the QoS can be fulfilled again. The *Notification Control* IE can only be applied to GBR bearers.

If the *UL PDU Session Aggregate Maximum Bit Rate* IE is included in the *QoS Flow Level QoS Parameters* IE containded in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall store the received UL PDU Session Aggregate Maximum Bit Rate and use it when enforcing uplink traffic policing for non-GBR Bearers for the concerned UE as specified in TS 23.501 [21].

The gNB-DU shall store the received gNB-DU UE Aggregate Maximum Bit Rate Uplink and use it for non-GBR Bearers for the concerned UE.

If the UE CONTEXT SETUP REQUEST message contains the *QoS Flow Mapping Indication* IE, the gNB-DU may take it into account that only the uplink or downlink QoS flow is mapped to the DRB.

If the UE CONTEXT SETUP REQUEST message contains the *New gNB-CU UE F1AP ID* IE, the gNB-DU shall, if supported, replace the value received in the *gNB-CU UE F1AP ID* IE by the value of the *New gNB-CU UE F1AP ID* and use it for further signalling.

If the *RAN UE ID* IE is contained in the UE CONTEXT SETUP REQUEST message, the gNB-DU shall store and replace any previous information received.

8.3.1.3 Unsuccessful Operation

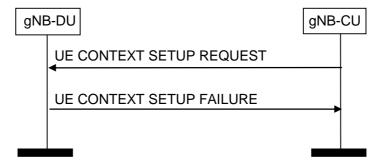


Figure 8.3.1.3-1: UE Context Setup Request procedure: unsuccessful Operation

If the gNB-DU is not able to establish an F1 UE context, or cannot even establish one bearer it shall consider the procedure as failed and reply with the UE CONTEXT SETUP FAILURE message.

If the gNB-DU is not able to accept the *SpCell ID* IE in UE CONTEXT SETUP REQUEST message, it shall reply with the UE CONTEXT SETUP FAILURE message with an appropriate cause value. Further, if the *Candidate SpCell List* IE is included in the UE CONTEXT SETUP REQUEST message and the gNB-DU is not able to accept the *SpCell ID* IE, the gNB-DU shall, if supported, include the *Potential SpCell List* IE in the UE CONTEXT SETUP FAILURE message and the gNB-CU should take this into account for selection of an opportune SpCell. The gNB-DU shall include the cells in the *Potential SpCell List* IE in a priority order, where the first cell in the list is the one most desired and the

last one is the one least desired (e.g., based on load conditions). If the *Potential SpCell List* IE is present but no *Potential SpCell Item* IE is present, the gNB-CU should assume that none of the cells in the *Candidate SpCell List* IE are acceptable for the gNB-DU.

8.3.1.4 Abnormal Conditions

If the gNB-DU receives a UE CONTEXT SETUP REQUEST message containing a *E-UTRAN QoS* IE for a GBR QoS DRB but where the *GBR QoS Information* IE is not present, the gNB-DU shall report the establishment of the corresponding DRB as failed in the *DRB Failed to Setup List* IE of the UE CONTEXT SETUP RESPONSE message with an appropriate cause value. If the gNB-DU receives a UE CONTEXT SETUP REQUEST message containing a *DRB QoS* IE for a GBR QoS DRB but where the *GBR QoS Flow Information* IE is not present, the gNB-DU shall report the establishment of the corresponding DRBs as failed in the *DRB Failed to Setup List* IE of the UE CONTEXT SETUP RESPONSE message with an appropriate cause value.

If the *Delay Critical* IE is included in the *Dynamic 5QI Descriptor* IE within the *DRB QoS* IE in the UE CONTEXT SETUP REQUEST message and is set to the value "delay critical" but the *Maximum Data Burst Volume* IE is not present, the gNB-DU shall report the establishment of the corresponding DRB as failed in the *DRB Failed to Setup List* IE of the of the UE CONTEXT SETUP RESPONSE message with an appropriate cause value.

8.3.2 UE Context Release Request (gNB-DU initiated)

8.3.2.1 General

The purpose of the UE Context Release Request procedure is to enable the gNB-DU to request the gNB-CU to release the UE-associated logical F1-connection. The procedure uses UE-associated signalling.

8.3.2.2 Successful Operation

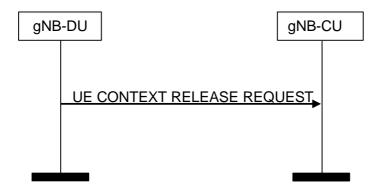


Figure 8.3.2.2-1: UE Context Release (gNB-DU initiated) procedure. Successful operation

The gNB-DU controlling a UE-associated logical F1-connection initiates the procedure by generating a UE CONTEXT RELEASE REQUEST message towards the affected gNB-CU node.

The UE CONTEXT RELEASE REQUEST message shall indicate the appropriate cause value.

Interactions with UE Context Release procedure:

The UE Context Release procedure may be initiated upon reception of a UE CONTEXT RELEASE REQUEST message.

Interactions with UE Context Setup procedure:

The UE Context Release Request procedure may be performed before the UE Context Setup procedure to request the release of an existing UE-associated logical F1-connection and related resources in the gNB-DU.

8.3.2.3 Abnormal Conditions

Not applicable.

8.3.3 UE Context Release (gNB-CU initiated)

8.3.3.1 General

The purpose of the UE Context Release procedure is to enable the gNB-CU to order the release of the UE-associated logical connection. The procedure uses UE-associated signalling.

8.3.3.2 Successful Operation

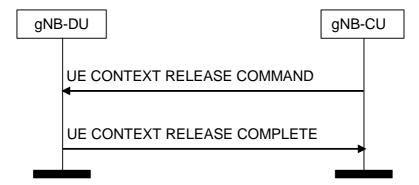


Figure 8.3.3.2-1: UE Context Release (gNB-CU initiated) procedure. Successful operation

The gNB-CU initiates the procedure by sending the UE CONTEXT RELEASE COMMAND message to the gNB-DU.

Upon reception of the UE CONTEXT RELEASE COMMAND message, the gNB-DU shall release all related signalling and user data transport resources and reply with the UE CONTEXT RELEASE COMPLETE message.

If the *old gNB-DU UE F1AP ID* IE is included in the UE CONTEXT RELEASE COMMAND message, the gNB-DU shall additionally release the UE context associated with the old gNB-DU UE F1AP ID.

If the UE CONTEXT RELEASE COMMAND message contains the *RRC-Container IE*, the gNB-DU shall send the RRC container to the UE via the SRB indicated by the *SRB ID* IE.

If the UE CONTEXT RELEASE COMMAND message includes the *Execute Duplication* IE, the gNB-DU shall perform CA based duplication, if configured, for the SRB for the included *RRC-Container* IE.

Interactions with UE Context Setup procedure:

The UE Context Release procedure may be performed before the UE Context Setup procedure to release an existing UE-associated logical F1-connection and related resources in the gNB-DU, e.g. when gNB-CU rejects UE access it shall trigger UE Context Release procedure with the cause value of UE rejection.

8.3.3.4 Abnormal Conditions

Not applicable.

8.3.4 UE Context Modification (gNB-CU initiated)

8.3.4.1 General

The purpose of the UE Context Modification procedure is to modify the established UE Context, e.g., establishing, modifying and releasing radio resources. This procedure is also used to command the gNB-DU to stop data transmission for the UE for mobility (see TS 38.401 [4]). The procedure uses UE-associated signalling.

8.3.4.2 Successful Operation

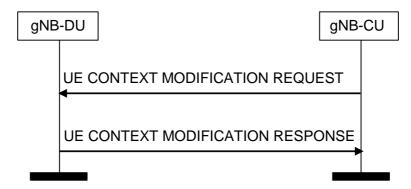


Figure 8.3.4.2-1: UE Context Modification procedure. Successful operation

The UE CONTEXT MODIFICATION REQUEST message is initiated by the gNB-CU.

Upon reception of the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall perform the modifications, and if successful reports the update in the UE CONTEXT MODIFICATION RESPONSE message.

If the *SpCell ID* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall replace any previously received value and regard it as a reconfiguration with sync as defined in TS 38.331 [8]. If the *ServCellIndex* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall take this into account for the indicated SpCell. If the *SpCell UL Configured* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall configure UL for the indicated SpCell accordingly. If the *servingCellMO* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall configure servingCellMO for the indicated SpCell accordingly.

If the *SCell To Be Setup List* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall consider it as a list of candidate SCells to be set up. If the *SCell To Be Setup List* IE is included in the UE CONTEXT MODIFICATION REQUEST message and the indicated SCell(s) are already setup, the gNB-DU shall replace any previously received value. If the *SCell UL Configured* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall configure UL for the indicated SCell accordingly. If the *servingCellMO* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall configure servingCellMO for the indicated SCell accordingly.

If the SCell To Be Removed List IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall consider it as a list of SCells to be removed.

If the *DRX Cycle* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall use the provided value from the gNB-CU. If the *DRX configuration indicator* IE is contained in the UE CONTEXT MODIFICATION REQUEST message and set to "release", the gNB-DU shall release DRX configuration.

If the *SRB To Be Setup List* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall act as specified in the TS 38.401 [4], and replace any previously received value. If *Duplication Indication* IE is contained in the *SRB To Be Setup List* IE, the gNB-DU shall, if supported, setup two RLC entities for the indicated SRB if the value is set to be "true", or delete the RLC entity of secondary path if the value is set to be "false".

If the *DRB To Be Setup List* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall act as specified in the TS 38.401 [4].

If two *UL UP TNL Information* IEs are included in UE CONTEXT MODIFICATION REQUEST message for a DRB, the gNB-DU shall include two *DL UP TNL Information* IEs in UE CONTEXT MODIFICATION RESPONSE message and setup two RLC entities for the indicated DRB. gNB-CU and gNB-DU use the *UL UP TNL Information* IEs and *DL UP TNL Information* IEs to support packet duplication for intra-gNB-DU CA as defined in TS 38.470 [2]. The first *UP TNL Information* IE of the two *UP TNL Information* IEs is for the primary path.

If *Duplication Activation* IE is included in the UE CONTEXT MODIFICATION REQUEST message for a DRB, the gNB-DU should take it into account when activing/deactiving CA based PDCP duplication for the DRB.

If *DC Based Duplication Configured* IE is included in the UE CONTEXT MODIFICATION REQUEST message for a DRB, the gNB-DU shall regard that DC based PDCP duplication is configured for this DRB if the value is set to be "true" and it should take the responsibility of PDCP duplication activation/deactivation. Otherwise, the gNB-DU shall

regard that DC based PDCP duplication is de-configured for this DRB id the value is set to be "false", and it should stop PDCP duplication activation/deactivation by MAC CE. If *DC Based Duplication Activation* IE is included in the UE CONTEXT MODIFICATION REQUEST message for a DRB, the gNB-DU should take it into account when activing/deactiving DC based PDCP duplication for this DRB.

For a certain DRB which was allocated with two GTP-U tunnels, if such DRB is modified and given one GTP-U tunnel via the UE Context Modification procedure, the gNB-DU shall consider that the CA based PDCP duplication for the concerned DRB is de-configured. If such UE Context Modification procedure occurs, the *Duplication Activation* IE shall not be included for the concerned DRB.

If the *UL Configuration* IE in *DRB to Be Setup Item* IE or *DRB to Be Modified Item* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall take it into account for UL scheduling.

If the *RRC Reconfiguration Complete Indicator* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall consider the ongoing reconfiguration procedure involving changes of the L1/L2 configuration at the gNB-DU signalled to the gNB-CU via the *CellGroupConfig* IE for MR-DC operation or standalone operation has been successfully performed when such IE is set to 'true'; otherwise (when such IE is set to 'failure'), the gNB-DU shall consider the ongoing reconfiguration procedure has been failed and it shall continue to use the old L1/L2 configuration.

If *DL PDCP SN length* IE is included in the UE CONTEXT MODIFICATION REQUEST message for a DRB, gNB-DU shall, if supported, store this information and use it for lower layer configuration.

If *UL PDCP SN length* IE is included in the UE CONTEXT MODIFICATION REQUEST message for a DRB, gNB-DU shall, if supported, store this information and use it for lower layer configuration.

If the *RLC Failure Indication* IE is included in UE CONTEXT MODIFICATION REQUEST message, the gNB-DU should consider that the RLC entity indicated by such IE needs to be re-established when the CA-based packet duplication is active, and the gNB-DU may include the *Associated SCell List* IE in UE CONTEXT MODIFICATION RESPONSE by containing a list of SCell(s) associated with the RLC entity indicated by the *RLC Failure Indication* IE.

If the UE CONTEXT MODIFICATION REQUEST message contains the *RRC-Container* IE, the gNB-DU shall send the corresponding RRC message to the UE. If the UE CONTEXT MODIFICATION REQUEST message includes the *Execute Duplication* IE, the gNB-DU shall perform CA based duplication, if configured, for the SRB for the included *RRC-Container* IE.

If the UE CONTEXT MODIFICATION REQUEST message contains the *Transmission Action Indicator* IE, the gNB-DU shall stop or restart (if already stopped) data transmission for the UE, according to the value of this IE. It is up to gNB-DU implementation when to stop or restart the UE scheduling.

For EN-DC operation, if the *DRB to Be Setup List* IE is present in the UE CONTEXT MODIFICATION REQUEST message the gNB-CU shall include the *E-UTRAN QoS* IE. The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-UTRAN QoS* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [15]. For NG-RAN operation, the gNB-CU shall include the *DRB Information* IE in the UE CONTEXT MODIFICATION REQUEST message.

If the gNB-CU includes the SMTC information of the measured frequency(ies) in the *MeasurementTimingConfiguration* IE of the *CU to DU RRC Information* IE that is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall generate the measurement gaps based on the received SMTC information. Then the gNB-DU shall send the measurement gaps information to the gNB-CU in the *MeasGapConfig* IE of the *DU to CU RRC Information* IE that is included in the UE CONTEXT MODIFICATION RESPONSE message.

If the *MeasConfig* IE is included in the *CU to DU RRC Information* IE in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall deduce that changes to the measurements' configuration need to be applied. The gNB-DU shall take the received info, e.g. the *measObjectToAddModList* IE, and/or the *measObjectToRemoveList* IE into account, when generating measurement gap and when deciding if a measurement gap is needed or not.

For DC operation, if the gNB-CU includes the *CG-Config* IE in the *CU to DU RRC Information* IE that is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU may initiate low layer parameters coordination taking this information into account.

For EN-DC operation, if the gNB-CU includes the *Resource Coordination Transfer Information* IE in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall, if supported, use it for the purpose of resource coordination. If the gNB-CU received the MeNB Resource Coordination Information as defined in TS 36.423 [9], after

completion of UE Context Setup procedures, the gNB-CU shall transparently transfer it to the gNB-DU via the *Resource Coordination Transfer Container* IE in the UE CONTEXT MODIFICATION REQUEST message. The gNB-DU shall use the information received in the *Resource Coordination Transfer Container* IE for reception of MeNB Resource Coordination Information at the gNB acting as secondary node as described in TS 36.423 [9]. If the *Resource Coordination E-UTRA Cell Information* IE is included in the *Resource Coordination Transfer Information* IE, the gNB-DU shall store the information replacing previously received information for the same E-UTRA cell, and use the stored information for the purpose of resource coordination. If the *Ignore PRACH Configuration* IE is present and set to "true" the *E-UTRA PRACH Configuration* IE in the UE CONTEXT MODIFICATION REQUEST message shall be ignored.

For NGEN-DC or NE-DC operation, if the gNB-CU includes the *Resource Coordination Transfer Information* IE in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall, if supported, use it for the purpose of resource coordination. If the gNB-CU received the MR-DC Resource Coordination Information as defined in TS 38.423 [28], after completion of UE Context Setup procedures, the gNB-CU shall transparently transfer it to the gNB-DU via the *Resource Coordination Transfer Container* IE in the UE CONTEXT MODIFICATION REQUEST message. The gNB-DU shall use the information received in the *Resource Coordination Transfer Container* IE for reception of MR-DC Resource Coordination Information at the gNB as described in TS 38.423 [28].

For EN-DC operation, and if the *Subscriber Profile ID for RAT/Frequency priority* IE is received from an MeNB, the UE CONTEXT MODIFICTION REQUEST message shall contain the *Subscriber Profile ID for RAT/Frequency priority* IE. The gNB-DU shall store the received Subscriber Profile ID for RAT/Frequency priority in the UE context and use it as defined in TS 36.300 [20].

If the *Index to RAT/Frequency Selection Priority* IE is modified at the gNB-CU, the *Index to RAT/Frequency Selection Priority* IE shall be included in the UE CONTEXT MODIFICATION REQUEST. The gNB-DU may use it for RRM purposes.

If the UE CONTEXT MODIFICATION REQUEST message contains the *Uplink TxDirectCurrentList Information* IE, the gNB-DU may take that into account when selecting L1 configuration.

The *UEAssistanceInformation* IE shall be included in *CU to DU RRC Information* IE in the UE CONTEXT MODIFICATION REQUEST message if the gNB-CU received this IE from the UE; if the *UEAssistanceInformation* IE is included in the *CU to DU RRC Information* IE in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall, if supported, take it into account when configuring resources for the UE.

The gNB-DU shall report to the gNB-CU, in the UE CONTEXT MODIFICATION RESPONSE message, the result for all the requested or modified DRBs and SRBs in the following way:

- A list of DRBs which are successfully established shall be included in the DRB Setup List IE;
- A list of DRBs which failed to be established shall be included in the DRB Failed to be Setup List IE;
- A list of DRBs which are successfully modified shall be included in the DRB Modified List IE;
- A list of DRBs which failed to be modified shall be included in the DRB Failed to be Modified List IE;
- A list of SRBs which failed to be established shall be included in the SRB Failed to be Setup List IE.
- A list of successfully established SRBs with logical channel identities for primary path shall be included in the *SRB Setup List* IE only if CA based PDCP duplication is initiated for the concerned SRBs.
- A list of successfully modified SRBs with logical channel identities for primary path shall be included in the *SRB Modified List* IE only if CA based PDCP duplication is initiated for the concerned SRBs.

When the gNB-DU reports the unsuccessful establishment of a DRB or SRB, the cause value should be precise enough to enable the gNB-CU to know the reason for the unsuccessful establishment.

If the *Resource Coordination Transfer Container* IE is included in the UE CONTEXT MODIFICATION RESPONSE, the gNB-CU shall transparently transfer this information for the purpose of resource coordination as described in TS 36.423 [9], TS 38.423 [28].

If the *CellGroupConfig* IE is included in the *DU to CU RRC Information* IE contained in the UE CONTEXT MODIFICATION RESPONSE message, the gNB-CU shall perform RRC Reconfiguration as described in TS 38.331 [8]. The *CellGroupConfig* IE shall transparently be signaled to the UE as specified in TS 38.331 [8].

If the *UE-CapabilityRAT-ContainerList* IE is included in the UE CONTEXT SETUP MODOFOCATION REQUEST, the gNB-DU shall take this information into account for UE specific configurations.

If the SCell Failed To Setup List IE is contained in the UE CONTEXT MODIFICATION RESPONSE message, the gNB-CU shall regard the corresponding SCell(s) failed to be set up with an appropriate cause value for each SCell failed to setup.

If the *C-RNTI* IE is included in the UE CONTEXT MODIFICATION RESPONSE, the gNB-CU shall consider that the C-RNTI has been allocated by the gNB-DU for this UE context.

If the *Inactivity Monitoring Request* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, gNB-DU may consider that the gNB-CU has requested the gNB-DU to perform UE inactivity monitoring. If the *Inactivity Monitoring Response* IE is contained in the UE CONTEXT MODIFICATION RESPONSE message and set to "Not-supported", the gNB-CU shall consider that the gNB-DU does not support UE inactivity monitoring for the UE.

The UE Context Modify Procedure is not used to configure SRB0.

If the *Notification Control* IE is included in the *DRB to Be Setup List* IE or the *DRB to Be Modified List* IE and it is set to active, the gNB-DU shall, if supported, monitor the QoS of the DRB and notify the gNB-CU if the QoS cannot be fulfilled any longer or if the QoS can be fulfilled again. The *Notification Control* IE can only be applied to GBR bearers.

If the *UL PDU Session Aggregate Maximum Bit Rate* IE is included in the *QoS Flow Level QoS Parameters* IE containded in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall replace the received UL PDU Session Aggregate Maximum Bit Rate and use it as specified in TS 23.501 [21].

If the *gNB-DU UE Aggregate Maximum Bit Rate Uplink* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall:

- replace the previously provided gNB-DU UE Aggregate Maximum Bit Rate Uplink with the new received gNB-DU UE Aggregate Maximum Bit Rate Uplink;
- use the received gNB-DU UE Aggregate Maximum Bit Rate Uplink for non-GBR Bearers for the concerned UE.

The gNB-DU UE Aggregate Maximum Bit Rate Uplink IE shall be sent if DRB to Be Setup List IE is included and the gNB-CU has not previously sent it. The gNB-DU shall store and use the received gNB-DU UE Aggregate Maximum Bit Rate Uplink IE.

If the *RLC Status IE* is included in the UE CONTEXT MODIFICATION RESPONSE message, the gNB-CU shall assume that RLC has been reestablished at the gNB-DU and may trigger PDCP data recovery.

If the GNB-DU Configuration Query IE is contained in the UE CONTEXT MODIFICATION REQUEST message, gNB-DU shall include the CellGroupConfig IE in the DU To CU RRC Information IE in the UE CONTEXT MODIFICATION RESPONSE message.

If the *Bearer Type Change* IE is included in *DRB to Be Modified List* IE in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall either reset the lower layers or generate a new LCID for the affected bearer as specified in TS 37.340[7].

For NE-DC operation, if *NeedforGap* IE is included in the UE CONTEXT MODIFICATION REQUEST message,the gNB-DU shall generate measurement gap for the SeNB.

If the *QoS Flow Mapping Indication* IE is included in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall, if supported, replace any previously received value and take it into account that only the uplink or downlink QoS flow is mapped to the DRB.

If the *Full Configuration* IE is contained in the UE CONTEXT MODIFICATION REQUEST message, the gNB-DU shall generate a *CellGroupConfig* IE using full configuration and include it in the UE CONTEXT MODIFICATION RESPONSE.

If the *Full Configuration* IE is contained in the UE CONTEXT MODIFICATION RESPONSE message, the gNB-CU shall consider that the gNB-DU has generated the *CellGroupConfig* IE using full configuration.

If the SCG Indicator IE is contained in the UE CONTEXT MODIFICATION REQUEST message and it is set to "released", the gNB-DU shall, if supported, deduce that an SCG is removed.

8.3.4.3 Unsuccessful Operation

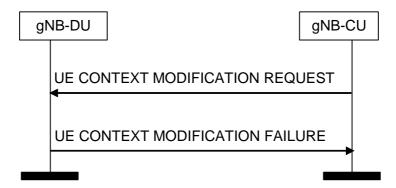


Figure 8.3.4.3-1: UE Context Modification procedure. Unsuccessful operation

In case none of the requested modifications of the UE context can be successfully performed, the gNB-DU shall respond with the UE CONTEXT MODIFICATION FAILURE message with an appropriate cause value.

If the gNB-DU is not able to accept the *SpCell ID* IE in UE CONTEXT MODIFICATION REQUEST message, it shall reply with the UE CONTEXT MODIFICATION FAILURE message.

8.3.4.4 Abnormal Conditions

If the gNB-DU receives a UE CONTEXT MODIFICATION REQUEST message containing a *E-UTRAN QoS* IE for a GBR QoS DRB but where the *GBR QoS Information* IE is not present, the gNB-DU shall report the establishment of the corresponding DRB as failed in the *DRB Failed to Setup List* IE of the UE CONTEXT MODIFICATION RESPONSE message with an appropriate cause value.

If the gNB-DU receives a UE CONTEXT MODIFICATION REQUEST message containing a *DRB QoS* IE for a GBR QoS DRB but where the *GBR QoS Flow Information* IE is not present, the gNB-DU shall report the establishment of the corresponding DRBs as failed in the *DRB Failed to Setup List* IE of the UE CONTEXT MODIFICATION RESPONSE message with an appropriate cause value.

If the *Delay Critical* IE is included in the *Dynamic 5QI Descriptor* IE within the *DRB QoS* IE in the UE CONTEXT MODIFICATION REQUESTmessage and is set to the value "delay critical" but the *Maximum Data Burst Volume* IE is not present, the gNB-DU shall report the establishment of the corresponding DRB as failed in the *DRB Failed to Setup List* IE of the of the UE CONTEXT MODIFICATION RESPONSE message with an appropriate cause value.

8.3.5 UE Context Modification Required (gNB-DU initiated)

8.3.5.1 General

The purpose of the UE Context Modification Required procedure is to modify the established UE Context, e.g., modifying and releasing radio bearer resources. The procedure uses UE-associated signalling.

8.3.5.2 Successful Operation

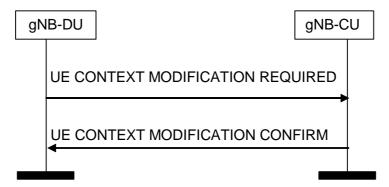


Figure 8.3.5.2-1: UE Context Modification Required procedure. Successful operation

The F1AP UE CONTEXT MODIFICATION REQUIRED message is initiated by the gNB-DU.

The gNB-CU reports the successful update of the UE context in the UE CONTEXT MODIFICATION CONFIRM message.

For a given bearer for which PDCP CA duplication was already configured, if two *DL UP TNL Information* IEs are included in UE CONTEXT MODIFICATION REQUIRED message for a DRB, the gNB-CU shall include two *UL UP TNL Information* IEs in UE CONTEXT MODIFICATION CONFIRM message. The gNB-CU and gNB-DU use the *UL UP TNL Information* IEs and *DL UP TNL Information* IEs to support packet duplication for intra-gNB-DU CA as defined in TS 38.470 [2], and the first *UP TNL Information* IE is still for the primary path.

If the *Resource Coordination Transfer Container* IE is included in the UE CONTEXT MODIFICATION REQUIRED, the gNB-CU shall transparently transfer this information for the purpose of resource coordination as described in TS 36.423 [9], TS 38.423 [28].

For EN-DC operation, if the gNB-CU includes the *Resource Coordination Transfer Information* IE in the UE CONTEXT MODIFICATION CONFIRM message, the gNB-DU shall, if supported, use it for the purpose of resource coordination. If the gNB-CU received the MeNB Resource Coordination Information as defined in TS 36.423 [9], after completion of UE Context Modification Required procedures, the gNB-CU shall transparently transfer it to the gNB-DU via the *Resource Coordination Transfer Container* IE in the UE CONTEXT MODIFICATION CONFIRM message. The gNB-DU shall use the information received in the *Resource Coordination Transfer Container* IE for reception of MeNB Resource Coordination Information at the gNB acting as secondary node as described in TS 36.423 [9]. If the *Resource Coordination E-UTRA Cell Information* IE is included in the *Resource Coordination Transfer Information* IE, the gNB-DU shall store the information replacing previously received information for the same E-UTRA cell, and use the stored information for the purpose of resource coordination. If the *Ignore PRACH Configuration* IE is present and set to "true" the *E-UTRA PRACH Configuration* IE in the UE CONTEXT MODIFICATION CONFIRM message shall be ignored.

For NGEN-DC or NE-DC operation, if the gNB-CU includes the *Resource Coordination Transfer Information* IE in the UE CONTEXT MODIFICATION CONFIRM message, the gNB-DU shall, if supported, use it for the purpose of resource coordination. If the gNB-CU received the MR-DC Resource Coordination Information as defined in TS 38.423 [28], after completion of UE Context Modification Required procedures, the gNB-CU shall transparently transfer it to the gNB-DU via the *Resource Coordination Transfer Container* IE in the UE CONTEXT MODIFICATION CONFIRM message. The gNB-DU shall use the information received in the *Resource Coordination Transfer Container* IE for reception of MR-DC Resource Coordination Information at the gNB as described in TS 38.423 [28].

If the *CellGroupConfig* IE is included in the *DU to CU RRC Information* IE contained in the UE CONTEXT MODIFICATION REQUIRED message, the gNB-CU shall perform RRC Reconfiguration as described in TS 38.331 [8]. The *CellGroupConfig* IE shall transparently be signaled to the UE as specified in TS 38.331 [8].

If the UE CONTEXT MODIFICATION CONFIRM message includes the *Execute Duplication* IE, the gNB-DU shall perform CA based duplication, if configured, for the SRB for the included *RRC-Container* IE.

If the UE CONTEXT MODIFICATION REQUIRED message contains the *RLC Status* IE, the gNB-CU shall assume that RLC has been reestablished at the gNB-DU and may trigger PDCP data recovery.

8.3.5.2A Unsuccessful Operation

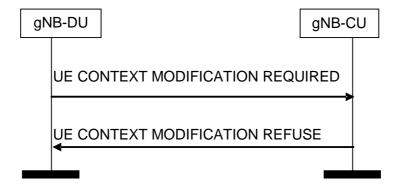


Figure 8.3.5.2A-1: UE Context Modification Required procedure. Unsuccessful operation.

In case none of the requested modifications of the UE context can be successfully performed, the gNB-CU shall respond with the UE CONTEXT MODIFICATION REFUSE message with an appropriate cause value.

8.3.5.3 Abnormal Conditions

Not applicable.

8.3.6 UE Inactivity Notification

8.3.6.1 General

This procedure is initiated by the gNB-DU to indicate the UE activity event.

The procedure uses UE-associated signalling.

8.3.6.2 Successful Operation



Figure 8.3.6.2-1: UE Inactivity Notification procedure.

The gNB-DU initiates the procedure by sending the UE INACTIVITY NOTIFICATION message to the gNB-CU.

If the *DRB ID* IE is included in the *DRB Activity Item* IE in the UE INACTIVITY NOTIFICATION message, the *DRB Activity* IE shall also be included

8.3.6.3 Abnormal Conditions

Not applicable.

8.3.7 Notify

8.3.7.1 General

The purpose of the Notify procedure is to enable the gNB-DU to inform the gNB-CU that the QoS of an already established GBR DRB cannot by fulfilled any longer or that it can be fulfilled again. The procedure uses UE-associated signalling.

8.3.7.2 Successful Operation



Figure 8.3.7.2-1: Notify procedure. Successful operation.

The gNB-DU initiates the procedure by sending a NOTIFY message.

The NOTIFY message shall contain the list of the GBR DRBs associated with notification control for which the QoS is not fulfilled anymore or for which the QoS is fulfilled again by the gNB-DU.

Upon reception of the NOTIFY message, the gNB-CU may identify which are the affected PDU sessions and QoS flows. The gNB-CU may inform the 5GC that the QoS for these PDU sessions or QoS flows is not fulfilled any longer or it is fulfilled again.

8.3.7.3 Abnormal Conditions

Not applicable.

8.4 RRC Message Transfer procedures

8.4.1 Initial UL RRC Message Transfer

8.4.1.1 General

The purpose of the Initial UL RRC Message Transfer procedure is to transfer the initial RRC message to the gNB-CU. The procedure uses non-UE-associated signaling.

8.4.1.2 Successful operation



Figure 8.4.1.2-1: Initial UL RRC Message Transfer procedure.

The establishment of the UE-associated logical F1-connection shall be initiated as part of the procedure.

If the *DU to CU RRC Container* IE is not included in the INITIAL UL RRC MESSAGE TRANSFER, the gNB-CU should reject the UE under the assumption that the gNB-DU is not able to serve such UE. If the gNB-DU is able to serve the UE, the gNB-DU shall include the *DU to CU RRC Container* IE and the gNB-CU shall configure the UE as specified in TS 38.331 [8]. The gNB-DU shall not include the *ReconfigurationWithSync* field in the *CellGroupConfig* IE as defined in TS 38.331 [8] of the *DU to CU RRC Container* IE.

If the *SUL Access Indication* IE is included in the INITIAL UL RRC MESSAGE TRANSFER, the gNB-CU shall consider that the UE has performed access on SUL carrier.

If the *RRC-Container-RRCSetupComplete* IE is included in the INITIAL UL RRC MESSAGE TRANSFER, the gNB-CU shall take it into account as specified in TS 38.401 [4].

8.4.1.3 Abnormal Conditions

Not applicable.

8.4.2 DL RRC Message Transfer

8.4.2.1 General

The purpose of the DL RRC Message Transfer procedure is to transfer an RRC message The procedure uses UE-associated signalling.

8.4.2.2 Successful operation



Figure 8.4.2.2-1: DL RRC Message Transfer procedure

If a UE-associated logical F1-connection exists, the DL RRC MESSAGE TRANSFER message shall contain the *gNB-DU UE F1AP ID* IE, which should be used by gNB-DU to lookup the stored UE context. If no UE-associated logical F1-connection exists, the UE-associated logical F1-connection shall be established at reception of the DL RRC MESSAGE TRANSFER message.

If the *Index to RAT/Frequency Selection Priority* IE is included in the DL RRC MESSAGE TRANSFER, the gNB-DU may use it for RRM purposes.

The DL RRC MESSAGE TRANSFER message shall include, if available, the *old gNB-DU UE F1AP ID* IE so that the gNB-DU can retrieve the existing UE context in RRC connection reestablishment procedure, as defined in TS 38.401 [4].

The DL RRC MESSAGE TRANSFER message shall include, if SRB duplication is activated, the *Execute Duplication* IE, so that the gNB-DU can perform CA based duplication for the SRB.

If the gNB-DU identifies the UE-associated logical F1-connection by the *gNB-DU UE F1AP ID* IE in the DL RRC MESSAGE TRANSFER message and the *old gNB-DU UE F1AP ID* IE is included, it shall release the old gNB-DU UE F1AP ID and the related configurations associated with the old gNB-DU UE F1AP ID.

If the *UE Context not retrievable* IE set to "true" is included in the DL RRC MESSAGE TRANSFER, the DL RRC MESSAGE TRANSFER may contain the *Redirected RRC message* IE and use it as specified in TS 38.401 [4].

If the *UE Context not retrievable* IE set to "true" is included in the DL RRC MESSAGE TRANSFER, the DL RRC MESSAGE TRANSFER may contain the *PLMN Assistance Info for Network Sharing* IE, if available at the gNB-CU and may use it as specified in TS 38.401 [4].

If the DL RRC MESSAGE TRANSFER message contains the *New gNB-CU UE F1AP ID* IE, the gNB-DU shall, if supported, replace the value received in the *gNB-CU UE F1AP ID* IE by the value of the *New gNB-CU UE F1AP ID* and use it for further signalling.

Interactions with UE Context Release Request procedure:

If the *UE Context not retrievable* IE set to "true" is included in the DL RRC MESSAGE TRANSFER, the gNB-DU may trigger the UE Context Release Request procedure, as specified in TS 38.401 [4].

8.4.2.3 Abnormal Conditions

Not applicable.

8.4.3 UL RRC Message Transfer

8.4.3.1 General

The purpose of the UL RRC Message Transfer procedure is to transfer an RRC message as an UL PDCP-PDU to the gNB-CU. The procedure uses UE-associated signalling.

8.4.3.2 Successful operation



Figure 8.4.3.2-1: UL RRC Message Transfer procedure

When the gNB-DU has received from the radio interface an RRC message to which a UE-associated logical F1-connection for the UE exists, the gNB-DU shall send the UPLINK RRC TRANSFER message to the gNB-CU including the RRC message as a *RRC-Container* IE.

If the Selected PLMN ID IE is contained in the UL RRC MESSAGE TRANSFER message, the gNB-CU may use it as specified in TS 38.401 [4].

If the UL RRC MESSAGE TRANSFER message contains the *New gNB-DU UE F1AP ID* IE, the gNB-CU shall, if supported, replace the value received in the *gNB-DU UE F1AP ID* IE by the value of the *New gNB-DU UE F1AP ID* and use it for further signalling.

8.4.3.3 Abnormal Conditions

Not applicable.

8.4.4 RRC Delivery Report

8.4.4.1 General

The purpose of the RRC Delivery Report procedure is to transfer to the gNB-CU information about successful delivery of DL PDCP-PDUs including RRC messages. The procedure uses UE-associated signalling.

8.4.4.2 Successful operation



Figure 8.4.4.2-1: RRC Delivery Report procedure.

When the gNB-DU has successfully delivered an RRC message to the UE for which the gNB-CU has requested a delivery report, the gNB-DU shall send the RRC DELIVERY REPORT message to the gNB-CU containing the *RRC Delivery Status* IE and the *SRB ID* IE.

8.4.4.3 Abnormal Conditions

Not applicable.

8.5 Warning Message Transmission Procedures

8.5.1 Write-Replace Warning

8.5.1.1 General

The purpose of Write-Replace Warning procedure is to start or overwrite the broadcasting of warning messages. The procedure uses non UE-associated signalling.

8.5.1.2 Successful Operation



Figure 8.5.1.2-1: Write-Replace Warning procedure: successful operation

The gNB-CU initiates the procedure by sending a WRITE-REPLACE WARNING REQUEST message to the gNB-DU.

Upon receipt of the WRITE-REPLACE WARNING REQUEST message, the gNB-DU shall prioritise its resources to process the warning message.

The gNB-DU acknowledges the WRITE-REPLACE WARNING REQUEST message by sending a WRITE-REPLACE WARNING RESPONSE message to the gNB-CU.

Upon receipt of the WRITE-REPLACE WARNING REQUEST message, the gNB-DU shall include the *Dedicated SI Delivery Needed UE List* IE in the WRITE-REPLACE WARNING RESPONSE message for UEs that are unable to receive system information from broadcast.

If *Dedicated SI Delivery Needed UE List* IE is contained in the WRITE-REPLACE WARNING RESPONSE message, the gNB-CU should take it into account when informing the UE of the updated system information via the dedicated RRC message.

If the *Notification Information* IE is included in the *PWS System Information* IE in the WRITE-REPLACE WARNING REQUEST message, the gNB-DU shall use this information to avoid that duplications trigger new broadcast or replace existing broadcast.

If the gNB-DU receives a WRITE-REPLACE WARNING REQUEST message with the *Notification Information* IE in the *PWS System Information* IE which are different from those of ongoing broadcast warning messages, and if the *SIB Type* IE is set to "8", the gNB-DU shall broadcast the received warning message concurrently with other ongoing messages.

If the gNB-DU receives a WRITE-REPLACE WARNING REQUEST message with the *Notification Information* IE in the *PWS System Information* IE which are different from those of ongoing broadcast warning messages, and if the *SIB Type* IE is set to the value other than '8', the gNB-DU shall use the newly received one to replace the ongoing broadcast warning message with the same value of *SIB Type* IE.

If the *SIB Type* IE in the *PWS System Information* IE in the WRITE-REPLACE WARNING REQUEST message is set to "8" and if a value "0" is received in the *Number of Broadcast Requested* IE and if the *Repetition Period* IE is different from "0", the gNB-DU shall broadcast the received warning message indefinitely.

If Additional SIB Message List IE is included in PWS System Information IE, the gNB-DU shall store all SIB message(s) in PWS System Information IE, and consider that the first segment of public warning message is included in SIB message IE, and the remaining segments are listed in Additional SIB Message List IE in segmentation sequence order.

8.5.1.3 Unsuccessful Operation

Not applicable.

8.5.1.4 Abnormal Conditions

Not applicable.

8.5.2 PWS Cancel

8.5.2.1 General

The purpose of the PWS Cancel procedure is to cancel an already ongoing broadcast of a warning message. The procedure uses non UE-associated signalling.

8.5.2.2 Successful Operation

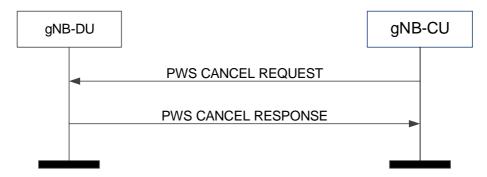


Figure 8.5.2.2-1: PWS Cancel procedure: successful operation

The gNB-CU initiates the procedure by sending a PWS CANCEL REQUEST message to the gNB-DU.

The gNB-DU shall acknowledge the PWS CANCEL REQUEST message by sending the PWS CANCEL RESPONSE message.

If the Cancel-All Warning Messages Indicator IE is present in the PWS CANCEL REQUEST message, then the gNB-DU shall stop broadcasting and discard all warning messages for the area as indicated in the Cell Broadcast To Be Cancelled List IE or in all the cells of the gNB-DU if the Cell Broadcast To Be Cancelled List IE is not included. The gNB-DU shall acknowledge the PWS CANCEL REQUEST message by sending the PWS CANCEL RESPONSE message, and shall, if there is area to report where an ongoing broadcast was stopped successfully, include the Cell Broadcast Cancelled List IE with the Number of Broadcasts IE set to 0.

If the *Cell Broadcast To Be Cancelled List* IE is not included in the PWS CANCEL REQUEST message, the gNB-DU shall stop broadcasting and discard the warning message identified by the *Message Identifier* IE and the *Serial Number* IE in the *Notification Information* IE in all of the cells in the gNB-DU.

If the *Notification Information* IE is included in the PWS CANCEL REQUEST, the gNB-DU shall cancel broadcast of the public warning message identified by the *Notification Information* IE.

If an area included in the *Cell Broadcast To Be Cancelled List* IE in the PWS CANCEL REQUEST message does not appear in the *Cell Broadcast Cancelled List* IE in the PWS CANCEL RESPONSE, the gNB-CU shall consider that the gNB-DU had no ongoing broadcast to stop for the public warning message identified, if present, by the *Notification Information* IE in that area.

If the *Cell Broadcast Cancelled List* IE is not included in the PWS CANCEL RESPONSE message, the gNB-CU shall consider that the gNB-DU had no ongoing broadcast to stop for the public warning message identified, if present, by the *Notification Information* IE.

8.5.2.3 Unsuccessful Operation

Not applicable.

8.5.2.4 Abnormal Conditions

If the gNB-DU receives a PWS CANCEL REQUEST message which contains neither the *Cancel-all Warning Messages Indicator* IE nor the *Notification Information* IE, the gNB-DU shall consider it as a logical error.

8.5.3 PWS Restart Indication

8.5.3.1 General

The purpose of PWS Restart Indication procedure is to inform the gNB-CU that PWS information for some or all cells of the gNB-DU are available for reloading from the CBC if needed. The procedure uses non UE-associated signalling.

8.5.3.2 Successful Operation



Figure 8.5.3.2-1: PWS restart indication

The gNB-DU initiates the procedure by sending a PWS RESTART INDICATION message to the gNB-CU.

8.5.3.3 Abnormal Conditions

Not applicable.

8.5.4 PWS Failure Indication

8.5.4.1 General

The purpose of the PWS Failure Indication procedure is to inform the gNB-CU that ongoing PWS operation for one or more cells of the gNB-DU has failed. The procedure uses non UE-associated signalling.

8.5.4.2 Successful Operation

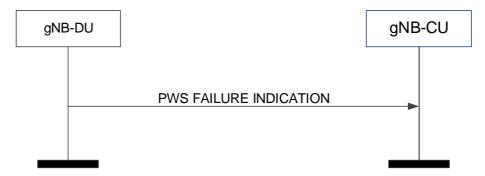


Figure 8.5.4.2-1: PWS failure indication

The gNB-DU initiates the procedure by sending a PWS FAILURE INDICATION message to the gNB-CU.

8.5.4.3 Abnormal Conditions

Not applicable.

8.6 System Information Procedures

8.6.1 System Information Delivery

8.6.1.1 General

The purpose of the System Information Delivery procedure is to command the gNB-DU to broadcast the requested Other SI. The procedure uses non-UE associated signalling.

8.6.1.2 Successful Operation



Figure 8.6.1.2-1: System Information Delivery procedure. Successful operation.

The gNB-CU initiates the procedure by sending a SYSTEM INFORMATION DELIVERY COMMAND message to the gNB-DU.

Upon reception of the SYSTEM INFORMATION DELIVERY COMMAND message, the gNB-DU shall broadcast the requested Other SI, and delete the UE context corresponding to the *Confirmed UE ID* IE, if any.

Interactions with gNB-DU Configuration Update procedure:

Upon reception of SYSTEM INFORMATION DELIVERY COMMAND message, the gNB-DU Configuration Update procedure may be performed, and as part of such procedure the gNB-DU shall include the *Dedicated SI Delivery Needed UE List* IE in GNB-DU CONFIGURATION UPDATE message for UEs that are unable to receive system information from broadcast.

8.6.1.3 Abnormal Conditions

Not applicable.

8.7 Paging procedures

8.7.1 Paging

8.7.1.1 General

The purpose of the Paging procedure is used to provide the paging information to enable the gNB-DU to page a UE. The procedure uses non-UE associated signalling.

8.7.1.2 Successful Operation

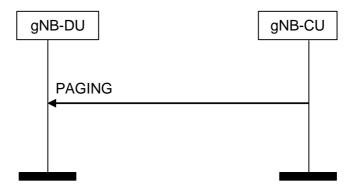


Figure 8.7.1.2-1: Paging procedure. Successful operation.

The gNB-CU initiates the procedure by sending a PAGING message.

The *Paging DRX* IE may be included in the PAGING message, and if present the gNB-DU may use it to determine the final paging cycle for the UE.

The *Paging Priority* IE may be included in the PAGING message, and if present the gNB-DU may use it according to TS 23.501 [21].

At the reception of the PAGING message, the gNB-DU shall perform paging of the UE in cells which belong to cells as indicated in the *Paging Cell List* IE.

The Paging Origin IE may be included in the PAGING message, and if present the gNB-DU shall transfer it to the UE.

8.7.1.3 Abnormal Conditions

Not applicable.

9 Elements for F1AP Communication

9.1 General

Subclauses 9.2 and 9.3 present the F1AP message and IE definitions in tabular format. The corresponding ASN.1 definition is presented in subclause 9.4. In case there is contradiction between the tabular format and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional IEs, where the tabular format shall take precedence.

The messages have been defined in accordance to the guidelines specified in TR 25.921 [14].

When specifying IEs which are to be represented by bitstrings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bitstrings from other specifications, the first bit of the bitstring contains the first bit of the concerned information;

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 38.413 [3].

9.2 Message Functional Definition and Content

9.2.1 Interface Management messages

9.2.1.1 RESET

This message is sent by both the gNB-CU and the gNB-DU and is used to request that the F1 interface, or parts of the F1 interface, to be reset.

Direction: gNB-CU \rightarrow gNB-DU and gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|---|--------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| CHOICE Reset Type | M | | | | YES | reject |
| >F1 interface | | | | | | |
| >>Reset All | М | | ENUMERAT ED (Reset all,) | | 1 | |
| >Part of F1 interface | | | | | | |
| >>UE-associated logical F1-connection list | | 1 | | | - | |
| >>>UE-associated logical F1- connection Item | | 1 <maxnoofindividu aIF1ConnectionsT oReset></maxnoofindividu | | | EACH | reject |
| >>>> gNB-CU UE F1AP ID | 0 | | 9.3.1.4 | | - | |
| >>> gNB-DU UE F1AP ID | 0 | | 9.3.1.5 | | - | |

| Range bound | Explanation | | | | |
|---------------------------------------|--|--|--|--|--|
| maxnoofIndividualF1ConnectionsToReset | Maximum no. of UE-associated logical F1-connections allowed to | | | | |
| | reset in one message. Value is 65536. | | | | |

9.2.1.2 RESET ACKNOWLEDGE

This message is sent by both the gNB-CU and the gNB-DU as a response to a RESET message.

Direction: gNB-DU \rightarrow gNB-CU and gNB-CU \rightarrow gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| UE-associated logical F1-connection list | | 01 | | | YES | ignore |
| >UE-associated logical F1-connection Item | | 1 <maxnoofindividu aIF1ConnectionsT oReset></maxnoofindividu | | | EACH | ignore |
| >>gNB-CU UE F1AP ID | 0 | | 9.3.1.4 | | - | |
| >>gNB-DU UE F1AP ID | 0 | | 9.3.1.5 | | - | |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

| Range bound | Explanation | | | | |
|---------------------------------------|--|--|--|--|--|
| maxnoofIndividualF1ConnectionsToReset | Maximum no. of UE-associated logical F1-connections allowed to | | | | |
| | reset in one message. Value is 65536. | | | | |

9.2.1.3 ERROR INDICATION

This message is sent by both the gNB-CU and the gNB-DU and is used to indicate that some error has been detected in the node.

Direction: gNB-CU \rightarrow gNB-DU and gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|---|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| Transaction ID | M | | 9.3.1.23 | This IE is ignored if received in UE associated signalling message. | YES | reject |
| gNB-CU UE F1AP ID | 0 | | 9.3.1.4 | | YES | ignore |
| gNB-DU UE F1AP ID | 0 | | 9.3.1.5 | | YES | ignore |
| Cause | 0 | • | 9.3.1.2 | | YES | ignore |
| Criticality Diagnostics | 0 | • | 9.3.1.3 | | YES | ignore |

9.2.1.4 F1 SETUP REQUEST

This message is sent by the gNB-DU to transfer information associated to an F1-C interface instance.

NOTE: If a TNL association is shared among several F1-C interface instances, several F1 Setup procedures are issued via the same TNL association after that TNL association has become operational.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|----------|---|--------------------------------------|--|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | • | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| gNB-DU ID | M | | 9.3.1.9 | | YES | reject |
| gNB-DU Name | 0 | | PrintableStri ng(SIZE(11 50,)) | | YES | ignore |
| gNB-DU Served Cells List | | 0 1 | | List of cells configured in the gNB-DU | YES | reject |
| >gNB-DU Served Cells Item | | 1 <maxcellingnbd U></maxcellingnbd | | | EACH | reject |
| >>Served Cell Information | М | | 9.3.1.10 | Information about the cells configured in the gNB-DU | - | |
| >>gNB-DU System Information | 0 | | 9.3.1.18 | RRC container with system information owned by gNB-DU | - | |
| gNB-DU RRC version | М | | RRC version 9.3.1.70 | | YES | reject |

| Range bound | Explanation | | | | |
|----------------|---|--|--|--|--|
| maxCellingNBDU | Maximum no. cells that can be served by a gNB-DU. Value is 512. | | | | |

9.2.1.5 F1 SETUP RESPONSE

This message is sent by the gNB-CU to transfer information associated to an F1-C interface instance.

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------------|----------|--|-----------------------------|---|-------------|----------------------|
| Message Type | М | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| gNB-CU Name | 0 | | PrintableString (SIZE(1150, | Human readable name of the gNB-CU. | YES | ignore |
| Cells to be Activated List | | 0 1 | | | YES | reject |
| >Cells to be Activated List Item | | 1 <maxcellingnbdu></maxcellingnbdu> | | List of cells to be activated | EACH | reject |
| >> NR CGI | M | | 9.3.1.12 | | - | |
| >> NR PCI | 0 | | INTEGER (01007) | Physical Cell ID | - | |
| >>gNB-CU System Information | 0 | | 9.3.1.42 | RRC container with system information owned by gNB- CU | YES | reject |
| >>Available PLMN List | 0 | | 9.3.1.65 | | YES | ignore |
| >>Extended Available PLMN List | 0 | | 9.3.1.76 | This is included if Available PLMN List IE is included and if more than 6 Available PLMNs is to be signalled. | YES | ignore |
| gNB-CU RRC version | М | | RRC version 9.3.1.70 | | YES | reject |

| Range bound | Explanation | | | | |
|----------------|---|--|--|--|--|
| maxCellingNBDU | Maximum no. cells that can be served by a gNB-DU. Value is 512. | | | | |

9.2.1.6 F1 SETUP FAILURE

This message is sent by the gNB-CU to indicate F1 Setup failure.

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| Time to wait | 0 | | 9.3.1.13 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

9.2.1.7 GNB-DU CONFIGURATION UPDATE

This message is sent by the gNB-DU to transfer updated information associated to an F1-C interface instance.

NOTE: If F1-C signalling transport is shared among several F1-C interface instance, this message may transfer updated information associated to several F1-C interface instances.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------------|----------|---|-----------------------|--|-------------|-------------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Served Cells To Add List | | 01 | | Complete list of added cells served by the gNB- DU | YES | reject |
| >Served Cells To Add Item | | 1 <maxcellingnbd U></maxcellingnbd | | | EACH | reject |
| >>Served Cell Information | М | | 9.3.1.10 | Information about the cells configured in the gNB-DU | - | |
| >>gNB-DU System Information | 0 | | 9.3.1.18 | RRC container with system information owned by gNB-DU | - | |
| Served Cells To Modify List | | 01 | | Complete list of modified cells served by the gNB- DU | YES | reject |
| >Served Cells To Modify Item | | 1 <maxcellingnbd U></maxcellingnbd | | | EACH | reject |
| >>Old NR CGI | М | | NR CGI 9.3.1.12 | | - | |
| >>Served Cell Information | М | | 9.3.1.10 | Information about the cells configured in the gNB-DU | - | |
| >>gNB-DU System Information | 0 | | 9.3.1.18 | RRC container with system information owned by gNB-DU | - | |
| Served Cells To Delete List | | 01 | | Complete list of deleted cells served by the gNB- DU | YES | reject |
| >Served Cells To Delete Item | | 1 <maxcellingnbd U></maxcellingnbd | | | EACH | reject |
| >>Old NR CGI | М | | NR CGI 9.3.1.12 | | - | |
| Cells Status List | | 01 | | Complete list of active cells | YES | reject |
| > Cells Status Item | | 0 <maxcellingnbd U></maxcellingnbd | | | EACH | reject |
| >> NR CGI | М | | 9.3.1.12 | | - | |

| >>Service Status | М | | 9.3.1.68 | | - | |
|--|---|---|--|---|------|--------|
| Dedicated SI Delivery Needed UE List | | 01 | | List of UEs unable to receive system information from broadcast | YES | ignore |
| > Dedicated SI Delivery Needed UE Item | | 1 <maxnoofueids></maxnoofueids> | | | EACH | ignore |
| >>gNB-CU UE F1AP ID | M | | 9.3.1.4 | | - | |
| >>NR CGI | М | | 9.3.1.12 | | - | |
| gNB-DU ID | 0 | | 9.3.1.9 | | YES | reject |
| gNB-DU TNL Association To Remove List | | 01 | | | YES | reject |
| >gNB-DU TNL Association To Remove Item IEs | | 1 <maxnooftnla ssociation=""></maxnooftnla> | | | EACH | reject |
| >>TNL Association Transport Layer Address | М | | CP Transport Layer Address 9.3.2.4 | Transport Layer Address of the gNB-DU. | - | - |
| >>TNL Association Transport Layer Address gNB-CU | 0 | | CP Transport Layer Address 9.3.2.4 | Transport Layer Address of the gNB-CU | - | - |

| Range bound | Explanation |
|------------------------|---|
| maxCellingNBDU | Maximum no. cells that can be served by a gNB-DU. Value is 512. |
| maxnoofUEIDs | Maximum no. of UEs that can be served by a gNB-DU. Value is 65536. |
| maxnoofTNLAssociations | Maximum numbers of TNL Associations between the gNB-CU and the gNB-DU. Value is 32. |

9.2.1.8 GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by a gNB-CU to a gNB-DU to acknowledge update of information associated to an F1-C interface instance.

NOTE: If F1-C signalling transport is shared among several F1-C interface instances, this message may transfer updated information associated to several F1-C interface instances.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------------------|----------|--|-----------------------|-------------------------------|-------------|----------------------|
| Message Type | М | | 9.3.1.1 | | YES | reject |
| Transaction ID | М | | 9.3.1.23 | | YES | reject |
| Cells to be Activated List | | 0 1 | | List of cells to be activated | YES | reject |
| >Cells to be Activated List Item | | 1 <maxcellingnbdu></maxcellingnbdu> | | | EACH | reject |
| >> NR CGI | М | | 9.3.1.12 | | - | |

| >> NR PCI | 0 | | INTEGER (01007) | Physical Cell ID | - | |
|--|---|--|--------------------|---|------|--------|
| >> gNB-CU System Information | 0 | | 9.3.1.42 | RRC container with system information owned by gNB- CU | YES | reject |
| >>Available PLMN List | 0 | | 9.3.1.65 | | YES | ignore |
| >>Extended Available PLMN List | 0 | | 9.3.1.76 | This is included if Available PLMN List IE is included and if more than 6 Available PLMNs is to be signalled. | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |
| Cells to be Deactivated List | | 0 1 | | List of cells to be deactivated | YES | reject |
| >Cells to be Deactivated List Item | | 1 <maxcellingnbdu></maxcellingnbdu> | | | EACH | reject |
| >> NR CGI | М | | 9.3.1.12 | | - | - |

| Range bound | Explanation | | | | |
|----------------|---|--|--|--|--|
| maxCellingNBDU | Maximum no. cells that can be served by a gNB-DU. Value is 512. | | | | |

9.2.1.9 GNB-DU CONFIGURATION UPDATE FAILURE

This message is sent by the gNB-CU to indicate gNB-DU Configuration Update failure.

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | М | | 9.3.1.1 | | YES | reject |
| Transaction ID | М | | 9.3.1.23 | | YES | reject |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| Time to wait | 0 | | 9.3.1.13 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

9.2.1.10 GNB-CU CONFIGURATION UPDATE

This message is sent by the gNB-CU to transfer updated information associated to an F1-C interface instance.

NOTE: If F1-C signalling transport is shared among several F1-C interface instances, this message may transfer updated information associated to several F1-C interface instances.

55

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|--|--|---|-------------|-------------------------|
| Message Type | М | | 9.3.1.1 | • | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Cells to be Activated List | | 01 | | List of cells to be activated or modified | YES | reject |
| >Cells to be Activated List Item | | 1 <maxcellingnbd U></maxcellingnbd | | | EACH | reject |
| >> NR CGI | М | | 9.3.1.12 | | - | |
| >> NR PCI | 0 | | INTEGER (01007) | Physical Cell ID | - | |
| >> gNB-CU System Information | 0 | | 9.3.1.42 | RRC container with system information owned by gNB-CU | YES | reject |
| >>Available PLMN List | 0 | | 9.3.1.65 | | YES | ignore |
| >>Extended Available PLMN List | 0 | | 9.3.1.76 | This is included if Available PLMN List IE is included and if more than 6 Available PLMNs is to be signalled. | YES | ignore |
| Cells to be Deactivated List | | 01 | | List of cells to be deactivated | YES | reject |
| >Cells to be Deactivated List Item | | 1 <maxcellingnbd U></maxcellingnbd | | | EACH | reject |
| >> NR CGI | М | | 9.3.1.12 | | - | |
| gNB-CU TNL Association To Add List | | 01 | | | YES | ignore |
| >gNB-CU TNL Association To Add Item IEs | | 1 <maxnooftnla ssociations></maxnooftnla | | | EACH | ignore |
| >>TNL Association Transport Layer Information | М | | CP Transport Layer Address 9.3.2.4 | Transport Layer Address of the gNB-CU. | - | |

| _ | 1 | 1 | 1 | , | , | |
|--|---|---|--|---|------|--------|
| >>TNL Association Usage | M | | ENUMERAT ED (ue, non- ue, both,) | Indicates whether the TNL association is only used for UE- associated signalling, or non-UE- associated signalling, or both. For usage of this IE, refer to TS 38.472 | - | |
| gNB-CU TNL Association | | 01 | | [22]. | YES | ignore |
| To Remove List >gNB-CU TNL | | 1 <maxnooftnla< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnooftnla<> | | | EACH | ignore |
| Association To Remove Item IEs | | ssociation> | | | | ŭ |
| >>TNL Association Transport Layer Address | М | | CP Transport Layer Address 9.3.2.4 | Transport Layer Address of the gNB-CU. | - | |
| >>TNL Association Transport Layer Address gNB-DU | 0 | | CP Transport Layer Address 9.3.2.4 | Transport Layer Address of the gNB-DU. | YES | reject |
| gNB-CU TNL Association To Update List | | 01 | | | YES | ignore |
| >gNB-CU TNL Association To Update Item IEs | | 1 <maxnooftnla ssociations></maxnooftnla | | | EACH | ignore |
| >>TNL Association Transport Layer Address | M | | CP Transport Layer Address 9.3.2.4 | Transport Layer Address of the gNB-CU. | - | |
| >>TNL Association Usage | 0 | | ENUMERAT ED (ue, non- ue, both,) | Indicates whether the TNL association is only used for UE- associated signalling, or non-UE- associated signalling, or both. For usage of this IE, refer to TS 38.472 [22]. | - | |
| Cells to be barred List | | 01 | | List of cells to be barred. | YES | ignore |
| >Cells to be barred List Item | | 1 <maxcellingnbd U></maxcellingnbd | | | EACH | ignore |
| >>NR CGI | М | | 9.3.1.12 | | - | |

| >> Cell Barred | М | | ENUMERAT | | - | |
|--|---|------------------------------------|------------------------------------|--|------|--------|
| | | | ED (barred, not- barred,) | | | |
| Protected E-UTRA Resources List | | 01 | barred, | List of Protected E- UTRA Resources. | YES | reject |
| >Protected E-UTRA Resources List Item | | 1 <maxcellinenb></maxcellinenb> | | | EACH | reject |
| >>Spectrum Sharing Group ID | M | | INTEGER (1 maxCellineN B) | Indicates the E-UTRA cells involved in resource coordination with the NR cells affiliated with the same Spectrum Sharing Group ID. | - | |
| >> E-UTRA Cells List | | 1 | | List of applicable E-UTRA cells. | - | |
| >>> E-UTRA Cells List Item | | 1 <maxcellinenb></maxcellinenb> | | | - | |
| >>>EUTRA Cell ID | M | | BIT STRING (SIZE(28)) | Indicates the E-UTRAN Cell Identifier IE contained in the ECGI as defined in subclause 9.2.14 in TS 36.423 [9]. | - | |
| >>>Served E- UTRA Cell Information | M | | 9.3.1.64 | | 1 | |

| Range bound | Explanation |
|------------------------|---|
| maxCellingNBDU | Maximum nunmerbs of cells that can be served by a gNB-DU. Value |
| | is 512. |
| maxnoofTNLAssociations | Maximum numbers of TNL Associations between the gNB-CU and the gNB-DU. Value is 32. |
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. |

9.2.1.11 GNB-CU CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by a gNB-DU to a gNB-CU to acknowledge update of information associated to an F1-C interface instance.

NOTE: If F1-C signalling transport is shared among several F1-C interface instance, this message may transfer updated information associated to several F1-C interface instances.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|--|---|-------------|----------------------|
| Message Type | М | | 9.3.1.1 | • | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Cells Failed to be Activated List | | 01 | | List of cells which are failed to be activated | YES | reject |
| >Cells Failed to be Activated Item | | 1 <maxcellingnbdu></maxcellingnbdu> | | | EACH | reject |
| >> NR CGI | М | | 9.3.1.12 | | - | |
| >>Cause | М | | 9.3.1.2 | | - | |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |
| gNB-CU TNL Association Setup List | | 01 | | | YES | ignore |
| >gNB-CU TNL Association Setup Item IEs | | 1 <maxnooftnlasso ciations=""></maxnooftnlasso> | | | EACH | ignore |
| >>TNL Association Transport Layer Address | М | | CP Transport Layer Address 9.3.2.4 | Transport Layer Address of the gNB-CU | - | |
| gNB-CU TNL Association Failed to Setup List | | 01 | | | YES | ignore |
| >gNB-CU TNL Association Failed To Setup Item IEs | | 1 <maxnooftnlasso ciations=""></maxnooftnlasso> | | | EACH | ignore |
| >>TNL Association Transport Layer Address | М | | CP Transport Layer Address 9.3.2.4 | Transport Layer Address of the gNB-CU | - | |
| >>Cause | М | | 9.3.1.2 | | - | |
| Dedicated SI Delivery Needed UE List | | 01 | | List of UEs unable to receive system information from broadcast | YES | ignore |
| >Dedicated SI Delivery Needed UE List | | 1 <maxnoofueids></maxnoofueids> | | | EACH | ignore |
| >>gNB-CU UE F1AP ID | М | | 9.3.1.4 | | - | - |
| >>NR CGI | М | | 9.3.1.12 | | - | - |

| Range bound Explanation | | | | | |
|-------------------------|---|--|--|--|--|
| maxCellingNBDU | Maximum no. cells that can be served by a gNB-DU. Value is 512. | | | | |
| maxnoofTNLAssociations | Maximum no. of TNL Associations between the gNB-CU and the gNB-DU. Value is 32. | | | | |
| maxnoofUEIDs | Maximum no. of UEs that can be served by a gNB-DU. Value is 65536. | | | | |

9.2.1.12 GNB-CU CONFIGURATION UPDATE FAILURE

This message is sent by the gNB-DU to indicate gNB-CU Configuration Update failure.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|-------------------------|----------|-------|-------------|-------------|-------------|-------------|
| | | | reference | description | | Criticality |
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| Time to wait | 0 | | 9.3.1.13 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

9.2.1.13 GNB-DU RESOURCE COORDINATION REQUEST

This message is sent by a gNB-CU to a gNB-DU, to express the desired resource allocation for data traffic, for the sake of resource coordination. The message triggers gNB-DU resource coordination (for NR-initiated resource coordination), to indicate an initial resource offer by the E-UTRA node (for E-UTRA-initiated gNB-DU Resource Coordination), or to indicate the agreed resource allocation that is to be executed.

Direction: $gNB-CU \rightarrow gNB-DU$

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-------|--------------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Request type | M | | ENUMERAT ED (offer, execution, | | YES | reject |
| E-UTRA – NR Cell Resource Coordination Request Container | М | | OCTET STRING | Includes the X2AP E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message as defined in subclause 9.1.4.24 in TS 36.423 [9]. | YES | reject |
| Ignore Coordination Request | 0 | | ENUMERAT | | YES | reject |
| Container | | | ED (yes,) | | | |

9.2.1.14 GNB-DU RESOURCE COORDINATION RESPONSE

This message is sent by a gNB-DU to a gNB-CU, to express the desired resource allocation for data traffic, as a response to the GNB-DU RESOURCE COORDINATION REQUEST.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|-----------------------|--|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| E-UTRA – NR Cell Resource Coordination Response Container | M | | OCTET STRING | Includes the X2AP E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message as defined in subclause 9.1.4.25 in TS 36.423 [9]. | YES | reject |

9.2.1.15 GNB-DU STATUS INDICATION

This message is sent by the gNB-DU to indicate to the gNB-CU its status of overload.

Direction: gNB-DU → gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| gNB-DU Overload | M | | ENUMERAT | | YES | reject |
| Information | | | ED | | | |
| | | | (overloaded, | | | |
| | | | not- | | | |
| | | | overloaded) | | | |

9.2.1.16 F1 REMOVAL REQUEST

This message is sent by either the gNB-DU or the gNB-CU to intiate the removal of the interface instance and the related resources.

Direction: gNB-DU \rightarrow gNB-CU, gNB-CU \rightarrow gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |

9.2.1.17 F1 REMOVAL RESPONSE

This message is sent by either the gNB-DU or the gNB-CU to acknowledge the initiation of removal of the interface instance and the related resources.

Direction: gNB-CU \rightarrow gNB-DU, gNB-DU \rightarrow gNB-CU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

9.2.1.18 F1 REMOVAL FAILURE

This message is sent by either the gNB-DU or the gNB-CU to indicate that removing the interface instance and the related resources cannot be accepted.

Direction: gNB-CU \rightarrow gNB-DU, gNB-DU \rightarrow gNB-CU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type | M | | 9.2.3.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

9.2.1.19 NETWORK ACCESS RATE REDUCTION

This message is sent by the gNB-CU to indicate to the gNB-DU a need to reduce the rate at which UEs access the network.

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| UAC Assistance Information | M | | 9.3.1.83 | | YES | reject |

9.2.2 UE Context Management messages

9.2.2.1 UE CONTEXT SETUP REQUEST

This message is sent by the gNB-CU to request the setup of a UE context.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|-----------------------------------|--|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| gNB-CU UE F1AP ID | М | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | 0 | | 9.3.1.5 | | YES | ignore |
| SpCell ID | M | | NR CGI 9.3.1.12 | Special Cell as defined in TS 38.321 [16]. For handover case, this IE is considered as target cell. | YES | reject |
| ServCellIndex | М | | INTEGER (031,) | | YES | reject |
| SpCell UL Configured | 0 | | Cell UL Configured 9.3.1.33 | | YES | ignore |
| CU to DU RRC Information | М | | 9.3.1.25 | | YES | reject |
| Candidate SpCell List | | 01 | | | YES | ignore |
| >Candidate SpCell Item IEs | | 1 <maxnoofca ndidateSpC ells></maxnoofca | | | EACH | ignore |
| >>Candidate SpCell ID | M | | NR CGI 9.3.1.12 | Special Cell as defined in TS 38.321 [16] | - | |
| DRX Cycle | 0 | | DRX Cycle 9.3.1.24 | | YES | ignore |
| Resource Coordination Transfer Container | 0 | | OCTET STRING | Includes the MeNB Resource Coordination Information IE as defined in subclause 9.2.116 of TS 36.423 [9] for EN-DC case or MR-DC Resource Coordination Information IE as defined in TS 38.423 [28] for NGEN-DC and NE-DC cases. | YES | ignore |
| SCell To Be Setup List | | 01 | | | YES | ignore |
| >SCell to Be Setup Item IEs | | 1 <maxnoofs Cells></maxnoofs | | | EACH | ignore |
| >>SCell ID | М | | NR CGI 9.3.1.12 | SCell Identifier in gNB | - | |
| >>SCellIndex | М | | INTEGER (131) | | - | |
| >>SCell UL Configured | 0 | | Cell UL Configured 9.3.1.33 | | - | |
| >>servingCellMO | 0 | | INTEGER (164) | | YES | ignore |
| SRB to Be Setup List | | 01 | | | YES | reject |
| >SRB to Be Setup Item IEs | | 1 <maxnoofs RBs></maxnoofs | | | EACH | reject |
| >>SRB ID | М | | 9.3.1.7 | | - | |
| >>Duplication Indication | O | | ENUMERAT ED (true,, false) | If included, it should be set to true. | - | |
| DRB to Be Setup List | | 01 | , | | YES | reject |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|--|--|-------------|-------------------------|
| >DRB to Be Setup Item | | 1 | | | EACH | reject |
| IEs | | <maxnoofd RBs></maxnoofd | | | | |
| >>DRB ID | М | N.Box | 9.3.1.8 | | - | |
| >>CHOICE QoS | М | | | | - | |
| Information >>>E-UTRAN QoS | M | | 9.3.1.19 | Shall be used for | - | |
| >>>E-UTRAN QUS | IVI | | 9.3.1.19 | EN-DC case to convey E-RAB Level QoS Parameters | - | |
| >>>DRB Information | | 1 | | Shall be used for NG-RAN cases | YES | ignore |
| >>>>DRB QoS | М | | 9.3.1.45 | | 1 | |
| >>>S-NSSAI | M | | 9.3.1.38 | | - | |
| >>>Notification Control | 0 | | 9.3.1.56 | | - | |
| >>>Flows Mapped to DRB Item | | 1 <maxnoofq oSFlows></maxnoofq | | | - | |
| >>>>QoS Flow Identifier | М | | 9.3.1.63 | | - | |
| >>>>QoS Flow Level QoS Parameters | М | | 9.3.1.45 | | - | |
| >>>>QoS Flow Mapping Indication | 0 | | 9.3.1.72 | | YES | ignore |
| >>UL UP TNL Information to be setup List | | 1 | | | - | |
| >>> UL UP TNL Information to Be Setup Item IEs | | 1 <maxnooful UPTNLInfor mation></maxnooful | | | - | |
| >>>>UL UP TNL Information | M | mauon> | UP Transport Layer Information 9.3.2.1 | gNB-CU endpoint of the F1 transport bearer. For delivery of UL PDUs. | - | |
| >> RLC Mode | М | | 9.3.1.27 | | - | |
| >> UL Configuration | 0 | | UL Configuraito n 9.3.1.31 | Information about UL usage in gNB-DU. | - | |
| >>Duplication Activation | 0 | | 9.3.1.36 | Information on the initial state of CA based UL PDCP duplication | - | |
| >> DC Based Duplication Configured | 0 | | ENUMERAT ED (true,, false) | Indication on whether DC based PDCP duplication is configured or not. If included, it should be set to true. | YES | reject |
| >>DC Based Duplication Activation | 0 | | Duplication Activation 9.3.1.36 | Information on the initial state of DC basedUL PDCP duplication | YES | reject |
| >>DL PDCP SN length | М | | ENUMERAT ED (12bits, 18bits,) | | YES | ignore |
| >>UL PDCP SN length | 0 | | ENUMERAT ED (12bits, 18bits,) | | YES | ignore |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|------------------|-------|---------------------------------|--|-------------|----------------------|
| Inactivity Monitoring Request | 0 | | ENUMERAT ED (true,) | | YES | reject |
| RAT-Frequency Priority Information | 0 | | 9.3.1.34 | | YES | reject |
| RRC-Container | 0 | | 9.3.1.6 | Includes the <i>DL-DCCH-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8], encapsulated in a PDCP PDU. | YES | ignore |
| Masked IMEISV | 0 | | 9.3.1.55 | | YES | ignore |
| Serving PLMN | 0 | | PLMN ID 9.3.1.14 | Indicates the PLMN serving the UE. | YES | ignore |
| gNB-DU UE Aggregate Maximum Bit Rate Uplink | C- ifDRBSetup | | Bit Rate 9.3.1.22 | The gNB-DU UE Aggregate Maximum Bit Rate Uplink is to be enforced by the gNB-DU. | YES | ignore |
| RRC Delivery Status Request | 0 | | ENUMERAT ED (true,) | Indicates whether RRC DELIVERY REPORT procedure is requested for the RRC message. | YES | ignore |
| Resource Coordination Transfer Information | 0 | | 9.3.1.73 | | YES | ignore |
| servingCellMO | 0 | | INTEGER (164,) | | YES | ignore |
| New gNB-CU UE F1AP ID | 0 | | gNB-CU UE F1AP ID 9.3.1.4 | | YES | reject |
| RAN UE ID | 0 | | OCTET STRING (SIZE (8)) | | YES | ignore |

| Range bound | Explanation |
|---------------------------|--|
| maxnoofSCells | Maximum no. of SCells allowed towards one UE, the maximum value is 32. |
| maxnoofSRBs | Maximum no. of SRB allowed towards one UE, the maximum value is 8. |
| maxnoofDRBs | Maximum no. of DRB allowed towards one UE, the maximum value is 64. |
| maxnoofULUPTNLInformation | Maximum no. of ULUP TNL Information allowed towards one DRB, the maximum value is 2. |
| maxnoofCandidateSpCells | Maximum no. of SpCells allowed towards one UE, the maximum value is 64. |
| maxnoofQoSFlows | Maximum no. of flows allowed to be mapped to one DRB, the maximum value is 64. |

| Condition | Explanation |
|------------|--|
| ifDRBSetup | This IE shall be present only if the DRB to Be Setup List IE is present. |

9.2.2.2 UE CONTEXT SETUP RESPONSE

This message is sent by the gNB-DU to confirm the setup of a UE context.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|--|--|-------------|-------------------------|
| Message Type | M | | 9.3.1.1 | • | YES | reject |
| gNB-CU UÉ F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| DU To CU RRC Information | M | | 9.3.1.26 | | YES | reject |
| C-RNTI | 0 | | 9.3.1.32 | C-RNTI allocated at the gNB-DU | YES | ignore |
| Resource Coordination Transfer Container | 0 | | OCTET STRING | Includes the SgNB Resource Coordination Information IE as defined in subclause 9.2.117 of TS 36.423 [9] for EN-DC case or MR-DC Resource Coordination Information IE as defined in TS 38.423 [28] for NGEN-DC and NE-DC cases. | YES | ignore |
| Full Configuration | 0 | | ENUMERAT ED (full,) | 00000. | YES | reject |
| DRB Setup List | | 01 | | The List of DRBs which are successfully established. | YES | ignore |
| >DRB Setup Item list | | 1 <maxnoofdrbs></maxnoofdrbs> | | | EACH | ignore |
| >>DRB ID | М | | 9.3.1.8 | | - | |
| >>LCID | 0 | | 9.3.1.35 | LCID for the primary path if PDCP duplication is applied | - | |
| >>DL UP TNL Information to be setup List | | 1 | | | - | |
| >>> DL UP TNL Information to Be Setup Item IEs | | 1 <maxnoofdlupt NLInformation></maxnoofdlupt | | | - | |
| >>>>DL UP TNL Information | М | | UP Transport Layer Information 9.3.2.1 | gNB-DU endpoint of the F1 transport bearer. For delivery of DL PDUs. | - | |
| SRB Failed to Setup List | | 01 | | | YES | ignore |
| >SRB Failed to Setup Item | | 1 <maxnoofsrbs></maxnoofsrbs> | | | EACH | ignore |
| >>SRB ID | М | | 9.3.1.7 | | - | |
| >>Cause | 0 | | 9.3.1.2 | | | |
| DRB Failed to Setup List | | 01 | 0.0.1.2 | | YES | ignore |
| >DRB Failed to Setup List | | | | | | ignore |
| PAGE Failed to Setup item | | 1 <maxnoofdrbs></maxnoofdrbs> | | | EACH | ignore |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------------|----------|--|---|--|-------------|----------------------|
| >>DRB ID | M | | 9.3.1.8 | | - | |
| >>Cause | 0 | | 9.3.1.2 | | - | |
| SCell Failed To Setup List | | 01 | | | YES | ignore |
| >SCell Failed to Setup Item | | 1 <maxnoofscells< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoofscells<> | | | EACH | ignore |
| >>SCell ID | М | | NR CGI 9.3.1.12 | SCell Identifier in gNB | - | |
| >>Cause | 0 | | 9.3.1.2 | | - | |
| Inactivity Monitoring Response | 0 | | ENUMERAT ED (not- supported,) | | YES | reject |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |
| SRB Setup List | | 01 | | | YES | ignore |
| >SRB Setup Item | | 1 <maxnoofsrbs></maxnoofsrbs> | | | EACH | ignore |
| >>SRB ID | M | | 9.3.1.7 | | - | |
| >>LCID | M | | 9.3.1.35 | LCID for the primary path if PDCP duplication is applied | - | |

| Range bound | Explanation |
|---------------------------|---|
| maxnoofSCells | Maximum no. of SCells allowed towards one UE, the maximum value |
| | is 32. |
| maxnoofSRBs | Maximum no. of SRB allowed towards one UE, the maximum value |
| | is 8. |
| maxnoofDRBs | Maximum no. of DRB allowed towards one UE, the maximum value |
| | is 64. |
| maxnoofDLUPTNLInformation | Maximum no. of DL UP TNL Information allowed towards one DRB, |
| | the maximum value is 2. |

9.2.2.3 UE CONTEXT SETUP FAILURE

This message is sent by the gNB-DU to indicate that the setup of the UE context was unsuccessful.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|-------------------------|----------|---|-------------|----------------|-------------|-------------|
| | | | reference | description | | Criticality |
| Message Type | M | | 9.3.1.1 | | YES | reject |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | 0 | | 9.3.1.5 | | YES | ignore |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |
| Potential SpCell List | | 01 | | | YES | ignore |
| >Potential SpCell Item | | 0 | | | EACH | ignore |
| IEs | | <maxnoofpotenti< td=""><td></td><td></td><td></td><td></td></maxnoofpotenti<> | | | | |
| | | alSpCells> | | | | |
| >>Potential SpCell | М | | NR CGI | Special Cell | - | |
| ID | | | 9.3.1.12 | as defined in | | |
| | | | | TS 38.321 [16] | | |

| Range bound | Explanation |
|-------------------------|---|
| maxnoofPotentialSpCells | Maximum no. of SpCells allowed towards one UE, the maximum value is 64. |

9.2.2.4 UE CONTEXT RELEASE REQUEST

This message is sent by the gNB-DU to request the gNB-CU to release the UE-associated logical F1.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | М | | 9.3.1.1 | | YES | ignore |
| gNB-CU UE F1AP ID | М | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | М | | 9.3.1.5 | | YES | reject |
| Cause | М | | 9.3.1.2 | | YES | ignore |

9.2.2.5 UE CONTEXT RELEASE COMMAND

This message is sent by the gNB-CU to request the gNB-DU to release the UE-associated logical F1 connection.

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|--------------------------|-------|------------------------|--|-------------|----------------------|
| Message Type | М | | 9.3.1.1 | | YES | reject |
| gNB-CU UE F1AP ID | М | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| RRC-Container | 0 | | 9.3.1.6 | Includes the <i>DL-DCCH-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8] encapsulated in a PDCP PDU, or the <i>DL-CCCH-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8]. | YES | ignore |
| SRB ID | C- ifRRCContai ner | | 9.3.1.7 | The gNB-DU sends the RRC message on the indicated SRB. | YES | ignore |
| old gNB-DU UE F1AP ID | 0 | | 9.3.1.5 | Include it if RRCReestablishm entRequest is not accepted | YES | ignore |
| Execute Duplication | 0 | | ENUMERAT ED (true,) | This IE may be sent only if duplication has been configured for the UE. | YES | ignore |
| RRC Delivery Status Request | 0 | | ENUMERAT ED (true,) | Indicates whether RRC DELIVERY REPORT procedure is requested for the RRC message. | YES | ignore |

| Condition | Explanation |
|----------------|--|
| ifRRCContainer | This IE shall be present if the RRC container IE is present. |

9.2.2.6 UE CONTEXT RELEASE COMPLETE

This message is sent by the gNB-DU to confirm the release of the UE-associated logical F1 connection.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

9.2.2.7 UE CONTEXT MODIFICATION REQUEST

This message is sent by the gNB-CU to provide UE Context information changes to the gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|---|-----------------------------------|--|-------------|-------------------------|
| Message Type | М | | 9.3.1.1 | • | YES | reject |
| gNB-CU UE F1AP ID | М | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | М | | 9.3.1.5 | | YES | reject |
| SpCell ID | 0 | | NR CGI 9.3.1.12 | Special Cell as defined in TS 38.321 [16]. For handover case, this IE is considered as target cell. | YES | ignore |
| ServCellIndex | 0 | | INTEGER (031,) | | YES | reject |
| SpCell UL Configured | 0 | | Cell UL Configured 9.3.1.33 | | YES | ignore |
| DRX Cycle | 0 | | DRX Cycle 9.3.1.24 | | YES | ignore |
| CU to DU RRC Information | 0 | | 9.3.1.25 | | YES | reject |
| Transmission Action Indicator | 0 | | 9.3.1.11 | | YES | ignore |
| Resource Coordination Transfer Container | 0 | | OCTET STRING | Includes the MeNB Resource Coordination Information IE as defined in subclause 9.2.116 of TS 36.423 [9] for EN-DC case or MR-DC Resource Coordination Information IE as defined in TS 38.423 [28] for NGEN-DC and NE-DC cases. | YES | ignore |
| RRC Reconfiguration Complete Indicator | 0 | | 9.3.1.30 | | YES | ignore |
| RRC-Container | 0 | | 9.3.1.6 | Includes the <i>DL-DCCH-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8], encapsulated in a PDCP PDU. | YES | reject |
| SCell To Be Setup List | | 01 | | | YES | ignore |
| >SCell to Be Setup Item IEs | | 1 <maxnoofs Cells></maxnoofs | | | EACH | ignore |
| >>SCell ID | М | | NR CGI 9.3.1.12 | SCell Identifier in gNB | - | _ |
| >>SCellIndex | М | | INTEGER (131) | | - | |
| >>SCell UL Configured | 0 | | Cell UL Configured 9.3.1.33 | | - | |
| >>servingCellMO | 0 | | INTEGER (164) | | YES | ignore |
| SCell To Be Removed List | | 01 | | | YES | ignore |
| >SCell to Be Removed Item IEs | | 1 <maxnoofs Cells></maxnoofs | | | EACH | ignore |
| >>SCell ID | М | | NR CGI 9.3.1.12 | SCell Identifier in gNB | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|---|--|--|-------------|-------------------------|
| SRB to Be Setup List | | 01 | | • | YES | reject |
| >SRB to Be Setup Item IEs | | 1 <maxnoof SRBs></maxnoof | | | EACH | reject |
| >>SRB ID | М | | 9.3.1.7 | | - | |
| >>Duplication Indication | 0 | | ENUMERAT ED (true,, false) | | - | |
| DRB to Be Setup List | | 01 | | | YES | reject |
| >DRB to Be Setup Item IEs | | 1 <maxnoofd RBs></maxnoofd | | | EACH | reject |
| >>DRB ID | М | ND32 | 9.3.1.8 | | - | |
| >>CHOICE QoS Information | M | | 0.0.1.0 | | - | |
| >>>E-UTRAN QoS | М | | 9.3.1.19 | Shall be used for EN-DC case to convey E-RAB Level QoS Parameters | | |
| >>>DRB Information | | 1 | | Shall be used for NG-RAN cases | YES | ignore |
| >>>>DRB QoS | М | | 9.3.1.45 | | - | |
| >>>S-NSSAI | M | | 9.3.1.38 | | - | |
| >>>>Notification Control | 0 | | 9.3.1.56 | | - | |
| >>>>Flows Mapped to DRB Item | | 1 <maxnoofq oSFlows></maxnoofq | | | - | |
| >>>>QoS Flow Identifier | М | | 9.3.1.63 | | - | |
| >>>>QoS Flow Level QoS Parameters | M | | 9.3.1.45 | | - | |
| >>>>QoS Flow Mapping Indication | 0 | | 9.3.1.72 | | YES | ignore |
| >>UL UP TNL Information to be setup List | | 1 | | | - | |
| >>>UL UP TNL Information to Be Setup Item IEs | | 1 <maxnooful UPTNLInfor mation></maxnooful | | | - | |
| >>>>UL UP TNL Information | М | | UP Transport Layer Information 9.3.2.1 | gNB-CU endpoint of the F1 transport bearer. For delivery of UL PDUs. | - | |
| >> RLC Mode | M | | 9.3.1.27 | | - | |
| >>UL Configuration | 0 | | UL Configuratio n 9.3.1.31 | Information about UL usage in gNB-DU. | - | |
| >>Duplication Activation | 0 | | 9.3.1.36 | Information on the initial state of CA based UL PDCP duplication | - | |
| >> DC Based Duplication Configured | 0 | | ENUMERAT ED (true,, false) | Indication on whether DC based PDCP duplication is configured or not. If included, it should be set to true. | YES | reject |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|--|--|-------------|----------------------|
| >>DC Based Duplication Activation | 0 | | Duplication Activation 9.3.1.36 | Information on the initial state of DC based UL PDCP duplication | YES | reject |
| >>DL PDCP SN length | 0 | | ENUMERAT ED (12bits, 18bits,) | | YES | ignore |
| >>UL PDCP SN length | 0 | | ENUMERAT ED (12bits, 18bits,) | | YES | ignore |
| DRB to Be Modified List | | 01 | | | YES | reject |
| >DRB to Be Modified Item IEs | | 1 <maxnoofd RBs></maxnoofd | | | EACH | reject |
| >>DRB ID | М | | 9.3.1.8 | | - | |
| >>CHOICE QoS Information | 0 | | | | - | |
| >>>E-UTRAN QoS | M | | 9.3.1.19 | Used for EN-DC case to convey E- RAB Level QoS Parameters | - | |
| >>>DRB Information | | 1 | | Used for NG-RAN cases | YES | ignore |
| >>>>DRB QoS | М | | 9.3.1.45 | | - | |
| >>>S-NSSAI | М | | 9.3.1.38 | | - | |
| >>>Notification Control | 0 | | 9.3.1.56 | | - | |
| >>>>Flows Mapped to DRB Item | | 1 <maxnoofq oSFlows></maxnoofq | | | - | |
| >>>>QoS Flow Identifier | М | | 9.3.1.63 | | - | |
| >>>>QoS Flow Level QoS Parameters | М | | 9.3.1.45 | | - | |
| >>>>QoS Flow Mapping Indication | 0 | | 9.3.1.72 | | YES | ignore |
| >> UL UP TNL Information to be setup List | | 1 | | | - | |
| >>> UL UP TNL Information to Be Setup Item IEs | | 1 <maxnooful UPTNLInfor mation></maxnooful | | | - | |
| >>>>UL UP TNL Information | M | | UP Transport Layer Information 9.3.2.1 | gNB-CU endpoint of the F1 transport bearer. For delivery of UL PDUs. | - | |
| >>UL Configuration | 0 | | UL Configuratio n 9.3.1.31 | Information about UL usage in gNB-DU. | - | |
| >>DL PDCP SN length | 0 | | ENUMERAT ED(12bits,18 bits ,) | | YES | ignore |
| >>UL PDCP SN length | 0 | | ENUMERAT ED (12bits, 18bits,) | | YES | ignore |
| >>Bearer Type Change | 0 | | ENUMERAT ED (true,) | | YES | ignore |
| >> RLC Mode | 0 | | 9.3.1.27 | | YES | ignore |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|----------------------------------|---|-------------|-------------------------|
| >>Duplication Activation | 0 | | 9.3.1.36 | Information on the initial state of CA based UL PDCP duplication | YES | reject |
| >> DC Based Duplication Configured | 0 | | ENUMERAT ED (true,, false) | Indication on whether DC based PDCP duplication is configured or not. | YES | reject |
| >>DC Based Duplication Activation | 0 | | 9.3.1.36 | Information on the initial state of DC based UL PDCP duplication | YES | reject |
| SRB To Be Released List | | 01 | | | YES | reject |
| >SRB To Be Released Item IEs | | 1 <maxnoofs RBs></maxnoofs | 0.047 | | EACH | reject |
| >>SRB ID DRB to Be Released List | M | 01 | 9.3.1.7 | | YES | reject |
| >DRB to Be Released Item IEs | | 1 <maxnoofd RBs></maxnoofd | | | EACH | reject |
| >>DRB ID | M | | 9.3.1.8 | | - | |
| Inactivity Monitoring Request | 0 | | ENUMERAT ED (true,) | | YES | reject |
| RAT-Frequency Priority Information | 0 | | 9.3.1.34 | | YES | reject |
| DRX configuration indicator | 0 | | ENUMERAT ED(release,. | | YES | ignore |
| RLC Failure Indication | 0 | | 9.3.1.66 | | YES | ignore |
| Uplink TxDirectCurrentList Information | 0 | | 9.3.1.67 | | YES | ignore |
| GNB-DU Configuration Query | 0 | | ENUMERAT ED (true,) | Used to request the gNB-DU to provide its configuration. | YES | reject |
| gNB-DU UE Aggregate Maximum Bit Rate Uplink | 0 | | Bit Rate 9.3.1.22 | The gNB-DU UE Aggregate Maximum Bit Rate Uplink is to be enforced by the gNB-DU. | YES | ignore |
| Execute Duplication | 0 | | ENUMERAT ED (true,) | This IE may be sent only if duplication has been configured for the UE. | YES | ignore |
| RRC Delivery Status Request | 0 | | ENUMERAT ED (true,) | Indicates whether RRC DELIVERY REPORT procedure is requested for the RRC message. | YES | ignore |
| Resource Coordination Transfer Information | 0 | | 9.3.1.73 | | YES | ignore |
| servingCellMO | 0 | | INTEGER (164,) | | YES | ignore |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------|----------|-------|-------------------------------|---|-------------|----------------------|
| Need for Gap | O | | ENUMERAT ED (true,) | Indicate gap for SeNB configured measurement is requested.It only applied to NE DC scenario. | Yes | ignore |
| Full Configuration | 0 | | ENUMERAT ED (full,) | | YES | reject |
| SCG Indicator | 0 | | ENUMERAT ED (released,) | This IE is used at the MN in NR-DC and NE-DC and it indicates the release of an SCG | YES | ignore |

| Range bound | Explanation |
|---------------------------|---|
| maxnoofSCells | Maximum no. of SCells allowed towards one UE, the maximum value is 32. |
| maxnoofSRBs | Maximum no. of SRB allowed towards one UE, the maximum value is 8. |
| maxnoofDRBs | Maximum no. of DRB allowed towards one UE, the maximum value is 64. |
| maxnoofULUPTNLInformation | Maximum no. of UL UP TNL Information allowed towards one DRB, the maximum value is 2. |
| maxnoofQoSFlows | Maximum no. of flows allowed to be mapped to one DRB, the maximum value is 64. |

9.2.2.8 UE CONTEXT MODIFICATION RESPONSE

This message is sent by the gNB-DU to confirm the modification of a UE context.

Direction: $gNB-DU \rightarrow gNB-CU$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|--|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| Resource Coordination Transfer Container | 0 | | OCTET STRING | Includes the SgNB Resource Coordination Information IE as defined in subclause 9.2.117 of TS 36.423 [9] for EN-DC case or MR-DC Resource Coordination Information IE as defined in TS 38.423 [28] for NGEN-DC and NE-DC cases. | YES | ignore |
| DU To CU RRC Information | 0 | | 9.3.1.26 | cases. | YES | reject |
| DRB Setup List | | 01 | | The List of DRBs which are successfully established. | YES | ignore |
| >DRB Setup Item IEs | | 1 <maxnoofdrb s></maxnoofdrb | | | EACH | ignore |
| >>DRB ID | М | | 9.3.1.8 | | - | |
| >>LCID | 0 | | 9.3.1.35 | LCID for primary path if PDCP duplication is applied | - | |
| >>DL UP TNL Information to be setup List | | 1 | | | - | |
| >>>DL UP TNL Information to Be Setup Item IEs | | 1 <maxnoofdlu PTNLInformati on></maxnoofdlu | | | - | |
| >>>DL UP TNL Information | М | | UP Transport Layer Information 9.3.2.1 | gNB-DU endpoint of the F1 transport bearer. For delivery of DL PDUs. | - | |
| DRB Modified List | | 01 | | The List of DRBs which are successfully modified. | YES | ignore |
| >DRB Modified Item IEs | | 1 <maxnoofdrb s></maxnoofdrb | | | EACH | ignore |
| >>DRB ID | М | 3- | 9.3.1.8 | | - | |
| >>LCID | O | | 9.3.1.35 | LCID for primary path if PDCP duplication is applied | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|---|-------------|----------------------|
| >>DL UP TNL Information to be setup List | | 1 | | ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, | - | |
| >>>DL UP TNL Information to Be Setup Item IEs | | 1 <maxnoofdlu PTNLInformati on></maxnoofdlu | | | - | |
| >>>>DL UP TNL Information | М | | UP Transport Layer Information 9.3.2.1 | gNB-DU endpoint of the F1 transport bearer. For delivery of DL PDUs. | - | |
| >>RLC Status | 0 | | 9.3.1.69 | Indicates the RLC has been re-established at the gNB- DU. | YES | ignore |
| SRB Failed to be Setup List | | 01 | | The List of SRBs which are failed to be established. | YES | ignore |
| >SRB Failed to be Setup Item IEs | | 1 <maxnoofsrb s></maxnoofsrb | | | EACH | ignore |
| >>SRB ID | M | | 9.3.1.7 | | - | |
| >>Cause DRB Failed to be Setup List | 0 | 01 | 9.3.1.2 | The List of DRBs which are failed to be setup. | YES | ignore |
| >DRB Failed to be Setup Item IEs | | 1 <maxnoofdrb s></maxnoofdrb | | | EACH | ignore |
| >>DRB ID | М | | 9.3.1.8 | | - | |
| >>Cause | 0 | | 9.3.1.2 | | - | |
| SCell Failed To Setup List | | 01 | | | YES | ignore |
| >SCell Failed to Setup Item | | 1 <maxnoofscel ls></maxnoofscel | | | EACH | ignore |
| >>SCell ID | М | | NR CGI 9.3.1.12 | SCell Identifier in gNB | - | |
| >>Cause DRB Failed to be Modified List | 0 | 01 | 9.3.1.2 | The List of DRBs which are failed to be modified. | YES | ignore |
| >DRB Failed to be Modified Item IEs | | 1 <maxnoofdrb s></maxnoofdrb | | | EACH | ignore |
| >>DRB ID | М | | 9.3.1.8 | | - | |
| >>Cause | 0 | | 9.3.1.2 | | - | |
| Inactivity Monitoring Response | 0 | | ENUMERATE D (Not- supported,) | | YES | reject |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |
| C-RNTI | 0 | | 9.3.1.32 | C-RNTI allocated at the gNB-DU | YES | ignore |
| Associated SCell List | 0 | 0.1 | 9.3.1.77 | | YES | ignore |
| SRB Setup List >SRB Setup Item | | 01 1 <maxnoofsrb s></maxnoofsrb | | | YES EACH | ignore ignore |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------|----------|---|------------------------|--|-------------|----------------------|
| >>SRB ID | M | | 9.3.1.7 | | - | |
| >>LCID | M | | 9.3.1.35 | LCID for the primary path if PDCP duplication is applied | - | |
| SRB Modified List | | 01 | | | YES | ignore |
| >SRB Modified Item | | 1 <maxnoofsrb s></maxnoofsrb | | | EACH | ignore |
| >>SRB ID | M | | 9.3.1.7 | | - | |
| >>LCID | M | | 9.3.1.35 | LCID for the primary path if PDCP duplication is applied | - | |
| Full Configuration | 0 | | ENUMERATE D (full,) | | YES | reject |

| Range bound | Explanation |
|---------------------------|---|
| maxnoofSRBs | Maximum no. of SRB allowed towards one UE, the maximum value is 8. |
| maxnoofDRBs | Maximum no. of DRB allowed towards one UE, the maximum value is 64. |
| maxnoofDLUPTNLInformation | Maximum no. of DL UP TNL Information allowed towards one DRB, the maximum value is 2. |
| maxnoofSCells | Maximum no. of SCells allowed towards one UE, the maximum value is 32. |

9.2.2.9 UE CONTEXT MODIFICATION FAILURE

This message is sent by the gNB-DU to indicate a context modification failure.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

9.2.2.10 UE CONTEXT MODIFICATION REQUIRED

This message is sent by the gNB-DU to request the modification of a UE context.

Direction: $gNB-DU \rightarrow gNB-CU$.

| Message Type gNB-CU UE F14P ID gNB-DU Gase or MR-DC Resource Coordination Information IE as defined in TS 38.423 [28] for NSEN-DC and NF-DC cases. YES gngnore reject DU To CU RC Information 0 9.3.1.26 YES reject DVB Required to Be Modified List →DRB Required to Be Modified List →SDRB ID →SDL UP TNL Information to be setup List →SDL UP TNL Information to Be Setup Item IEs 0.1 fl. maxnoofDL UPTMLInfor mation> 0.1 fl. maxnoofDL UPTMLInfor mation> - - >>DR B Required to be Released List Item IEs 0.1 fl. maxnoofD RBs- >SRB Required to be Released List Item IEs 0.1 fl. maxnoofD RBs- ysprided to be Released List Item IEs - - >>DR B ID SPB ID SPB Required to be Released List Item IEs 0.1 fl. maxnoofD sp3.1.8 - - >>DR B ID SPB Required to be Released List Item IEs - - - >>DR B ID SPB Required to be Released List Item IEs - - - >>DR B ID SPB Required to be Released List Item IEs - - - >>DR B Required to be Released List Item IEs - - - | IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|-------------------------------------|----------|---|-----------------------------------|---|-------------|-------------------------|
| SMB-DU UE F1AP ID M | Message Type | М | | 9.3.1.1 | • | YES | |
| Resource Coordination Transfer Container O | | M | | 9.3.1.4 | | YES | reject |
| Resource Coordination Transfer Container O | | М | | 9.3.1.5 | | YES | |
| DU To CU RRC Information PES Reject | | 0 | | | Resource Coordination Information IE as defined in subclause 9.2.117 of TS 36.423 [9] for EN-DC case or MR-DC Resource Coordination Information IE as defined in TS 38.423 [28] for NGEN-DC and | YES | |
| Modified List SPAR Required to Be Modified Item IEs Modified Item Item Item Item Item Item Item Item | | 0 | | 9.3.1.26 | | YES | reject |
| DRB Required to Be Modified Item IEs | <u> </u> | | 01 | | | YES | reject |
| SPECTION SPECTION | | | <maxnoofd< td=""><td></td><td></td><td>EACH</td><td>reject</td></maxnoofd<> | | | EACH | reject |
| Information to be setup List | | M | | 9.3.1.8 | | - | |
| Information to Be Setup Item IEs | Information to be setup List | | | | | - | |
| Information | Information to Be Setup Item IEs | | <maxnoofdl UPTNLInfor</maxnoofdl | | | - | |
| >>RLC Status 0 9.3.1.69 Indicates the RLC has been reestablished at the gNB-DU. YES ignore SRB Required to be Released List 01 YES reject >SRB Required to be Released List Item IEs 1 | _ | M | | Transport Layer Information | of the F1 transport bearer. For delivery of DL | - | |
| Released List 1 EACH reject SRB Required to be Released List Item IEs 4 9.3.1.7 - | >>RLC Status | 0 | | | Indicates the RLC has been re-established at the | YES | ignore |
| Released List Item IEs <maxnoofs rbs=""> // AmaxnoofS RBs> // AmaxnoofD RBs> // AmaxnoofD RBs> // AmaxnoofD RBs> / AmaxnoofD RBs><!--</td--><td>Released List</td><td></td><td>01</td><td></td><td></td><td></td><td>reject</td></maxnoofs> | Released List | | 01 | | | | reject |
| DRB Required to be Released List 01 YES reject >DRB Required to be Released List Item IEs 1 EACH reject <maxnoofd rbs=""> 9.3.1.8 -</maxnoofd> | Released List Item IEs | | <maxnoofs< td=""><td></td><td></td><td>EACH</td><td>reject</td></maxnoofs<> | | | EACH | reject |
| Released List 1 EACH reject Polar Required to be Released List Item IEs 1 EACH reject <max noofd<="" td=""> RBs> - -</max> | | M | | 9.3.1.7 | | - | |
| Released List Item IEs <maxxnoofd rbs=""> / >>DRB ID M 9.3.1.8 -</maxxnoofd> | Released List | | | | | | , |
| | Released List Item IEs | | <maxnoofd< td=""><td></td><td></td><td>EACH</td><td>reject</td></maxnoofd<> | | | EACH | reject |
| Cause M 9.3.1.2 YES ignore | >>DRB ID | M | | 9.3.1.8 | | | |
| | Cause | M | | 9.3.1.2 | | YES | ignore |

| Range bound | Explanation |
|---------------------------|---|
| maxnoofSRBs | Maximum no. of SRB allowed towards one UE, the maximum value |
| | is 8. |
| maxnoofDRBs | Maximum no. of DRB allowed towards one UE, the maximum value |
| | is 64. |
| maxnoofDLUPTNLInformation | Maximum no. of DL UP TNL Information allowed towards one DRB, |
| | the maximum value is 2. |

9.2.2.11 UE CONTEXT MODIFICATION CONFIRM

This message is sent by the gNB-CU to inform the gNB-DU the successful modification.

Direction: gNB-CU \rightarrow gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|---|--|--|-------------|-------------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| Resource Coordination Transfer Container | 0 | | OCTET STRING | Includes the MeNB Resource Coordination Information IE as defined in subclause 9.2.116 of TS 36.423 [9] for EN-DC case or MR-DC Resource Coordination Information IE as defined in TS 38.423 [28] for NGEN-DC and NE-DC cases. | YES | ignore |
| DRB Modified List | | 01 | | The List of DRBs which are successfully modified. | YES | ignore |
| >DRB Modified Item IEs | | 1 <maxnoofdr Bs></maxnoofdr | | | EACH | ignore |
| >>DRB ID | M | | 9.3.1.8 | | - | |
| >>UL UP TNL Information to be setup List | | 1 | | | - | |
| >>>UL UP TNL Information to Be Setup Item IEs | | 1 <maxnooful UPTNLInfor mation></maxnooful | | | - | |
| >>>>UL UP TNL Information | М | | UP Transport Layer Information 9.3.2.1 | gNB-CU endpoint of the F1 transport bearer. For delivery of UL PDUs. | - | |
| RRC-Container | 0 | | 9.3.1.6 | Includes the DL-DCCH-Message IE as defined in subclause 6.2 of TS 38.331 [8], encapsulated in a PDCP PDU. | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |
| Execute Duplication | 0 | | ENUMERAT ED (true,) | This IE may be sent only if duplication has been configured for the UE. | YES | Ignore |
| Resource Coordination Transfer Information | 0 | | 9.3.1.73 | | YES | ignore |

| Range bound | Explanation |
|---------------------------|---|
| maxnoofDRBs | Maximum no. of DRB allowed towards one UE, the maximum value |
| | is 64. |
| maxnoofULUPTNLInformation | Maximum no. of UL UP TNL Information allowed towards one DRB, |
| | the maximum value is 2. |

9.2.2.11A UE CONTEXT MODIFICATION REFUSE

This message is sent by the gNB-CU to indicate the UE context modification was unsuccessful.

Direction: gNB-CU \rightarrow gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| | | | | description | | _ |
| Message Type | M | | 9.3.1.1 | | YES | reject |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| Cause | M | | 9.3.1.2 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

9.2.2.12 UE INACTIVITY NOTIFICATION

This message is sent by the gNB-DU to provide information about the UE activity to the gNB-CU.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticalit y | Assigned Criticality |
|--------------------|----------|--|---------------------------------|-----------------------|-----------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| DRB Activity List | | 1 | | | YES | reject |
| >DRB Activity Item | | 1 <maxnoof DRBs></maxnoof | | | EACH | reject |
| >>DRB ID | M | | 9.3.1.8 | | - | |
| >>DRB Activity | 0 | | ENUMERATED (Active, Not active) | | - | |

| Range bound | Explanation | | | | | |
|-------------|---|--|--|--|--|--|
| maxnoofDRBs | Maximum no. of DRB allowed towards one UE, the maximum value is 64. | | | | | |

9.2.2.13 NOTIFY

This message is sent by the gNB-DU to notify the gNB-CU that the QoS for already established DRBs associated with notification control is not fulfilled any longer or it is fulfilled again.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------|----------|------------------------|---|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| DRB Notify List | | 1 | | | YES | reject |
| >DRB Notify Item IEs | | <1 maxnoofD RBs> | | | EACH | reject |
| >>DRB ID | M | | 9.3.1.8 | | - | |
| >>Notification Cause | M | | ENUMERATED (Fulfilled, Not- Fulfilled,) | | - | |

| Range bound | Explanation | | | | |
|-------------|--|--|--|--|--|
| maxnoofDRBs | Maximum no. of DRB allowed towards one UE, the maximum value | | | | |
| | is 64. | | | | |

9.2.3 RRC Message Transfer messages

9.2.3.1 INITIAL UL RRC MESSAGE TRANSFER

This message is sent by the gNB-DU to transfer the initial layer 3 message to the gNB-CU over the F1 interface.

Direction: gNB-DU →gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------------|----------|-------|-------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| NR CGI | M | | 9.3.1.12 | NG-RAN Cell Global Identifier (NR CGI) | YES | reject |
| C-RNTI | M | | 9.3.1.32 | C-RNTI allocated at the gNB-DU | YES | reject |
| RRC-Container | M | | 9.3.1.6 | Includes the <i>UL-CCCH-Message</i> IE or <i>UL-CCCH1-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8]. | YES | reject |
| DU to CU RRC Container | 0 | | OCTET STRING | CellGroupConfig IE as defined in subclause 6.3.2 in TS 38.331 [8]. Required at least to carry SRB1 configuration. The ReconfigurationWithSyn c field is not included in the CellGroupConfig IE. | YES | reject |
| SUL Access Indication | 0 | | ENUMERATE D (true,) | | YES | ignore |
| Transaction ID | M | | 9.3.1.23 | | YES | Ignore |
| RAN UE ID | 0 | | OCTET STRING (SIZE (8)) | | YES | ignore |
| RRC-Container- RRCSetupComplete | 0 | | 9.3.1.6 | Includes the <i>UL-DCCH-Message</i> IE including the RRCSetupComplete message, as defined in subclause 6.2 of TS 38.331 [8]. | YES | ignore |

9.2.3.2 DL RRC MESSAGE TRANSFER

This message is sent by the gNB-CU to transfer the layer 3 message to the gNB-DU over the F1 interface.

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|---------------------------------|--|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| old gNB-DU UE F1AP ID | 0 | | 9.3.1.5 | Include it if RRCConnectionReesta blishment is included in RRC-Container | YES | reject |
| SRB ID | M | | 9.3.1.7 | | YES | reject |
| Execute Duplication | 0 | | ENUMERATE D (true,) | | YES | ignore |
| RRC-Container | М | | 9.3.1.6 | Includes the <i>DL-DCCH-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8] encapsulated in a PDCP PDU, or the <i>DL-CCCH-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8]. | YES | reject |
| RAT-Frequency Priority Information | 0 | | 9.3.1.34 | | YES | reject |
| RRC Delivery Status Request | 0 | | ENUMERATE D (true,) | Indicates whether RRC DELIVERY REPORT procedure is requested for the RRC message. | YES | ignore |
| UE Context not retrievable | 0 | | ENUMERATE D (true,) | <u> </u> | YES | reject |
| Redirected RRC message | 0 | | RRC Container 9.3.1.6 | Includes the <i>UL-CCCH-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8]. | YES | reject |
| PLMN Assistance Info for Network Sharing | 0 | | PLMN Identity 9.3.1.14 | | YES | ignore |
| New gNB-CU UE F1AP ID | 0 | | gNB-CU UE F1AP ID 9.3.1.4 | | YES | reject |

9.2.3.3 UL RRC MESSAGE TRANSFER

This message is sent by the gNB-DU to transfer the layer 3 message to the gNB-CU over the F1 interface.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------|----------|-------|---------------------------------|--|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| SRB ID | M | | 9.3.1.7 | | YES | reject |
| RRC-Container | M | | 9.3.1.6 | Includes the <i>UL-DCCH-Message</i> IE as defined in subclause 6.2 of TS 38.331 [8], encapsulated in a PDCP PDU. | YES | reject |
| Selected PLMN ID | 0 | | PLMN Identity 9.3.1.14 | | YES | reject |
| New gNB-DU UE F1AP ID | 0 | | gNB-DU UE F1AP ID 9.3.1.5 | | YES | reject |

9.2.3.4 RRC DELIVERY REPORT

This message is sent by the gNB-DU to inform the gNB-CU about the delivery status of DL RRC messages.

Direction: $gNB-DU \rightarrow gNB-CU$

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| gNB-CU UE F1AP ID | M | | 9.3.1.4 | | YES | reject |
| gNB-DU UE F1AP ID | M | | 9.3.1.5 | | YES | reject |
| RRC Delivery Status | M | | 9.3.1.71 | | YES | ignore |
| SRB ID | M | | 9.3.1.7 | | YES | ignore |

9.2.4 Warning Message Transmission Messages

9.2.4.1 WRITE-REPLACE WARNING REQUEST

This message is sent by the gNB-CU to request the start or overwrite of the broadcast of a warning message.

Direction: $gNB-CU \rightarrow gNB-DU$

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------------|----------|--|-----------------------|--|-------------|-------------------------|
| Message Type | M | | 9.3.1.1 | | YES | reject |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| PWS System Information | M | | 9.3.1.58 | This IE includes the system information for public warning, as defined in TS 38.331 [8]. | YES | reject |
| Repetition Period | М | | 9.3.1.59 | | YES | reject |
| Number of Broadcasts Requested | М | | 9.3.1.60 | | YES | reject |
| Cell To Be Broadcast List | | 01 | | | YES | reject |
| >Cell to Be Broadcast Item IEs | | 1 <maxcelli ngNBDU></maxcelli | | | EACH | reject |
| >>NR CGI | M | | 9.3.1.12 | | - | |

| Range bound | Explanation | | | | |
|----------------|---|--|--|--|--|
| maxCellingNBDU | Maximum no. cells that can be served by a gNB-DU. Value is 512. | | | | |

9.2.4.2 WRITE-REPLACE WARNING RESPONSE

This message is sent by the gNB-DU to acknowledge the gNB-CU on the start or overwrite request of a warning message.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|-----------------------|---|-------------|----------------------|
| Message Type | М | | 9.3.1.1 | | YES | reject |
| Transaction ID | М | | 9.3.1.23 | | YES | reject |
| Cell Broadcast Completed List | | 01 | | | YES | reject |
| >Cell Broadcast Completed Item IEs | | 1 <maxcel lingNBD U></maxcel | | | EACH | reject |
| >>NR CGI | M | | 9.3.1.12 | | - | |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |
| Dedicated SI Delivery Needed UE List | | 01 | | List of UEs unable to receive system information from broadcast | YES | ignore |
| >Dedicated SI Delivery Needed UE Item | | 1 <maxno ofUEIDs ></maxno | | | EACH | ignore |
| >>gNB-CU UE F1AP ID | М | | 9.3.1.4 | | - | |
| >>NR CGI | М | | 9.3.1.12 | | - | |

| Range bound | Explanation |
|----------------|---|
| maxCellingNBDU | Maximum no. cells that can be served by a gNB-DU. Value is 512. |
| maxnoofUEIDs | Maximum no. of UEs that can be served by a gNB-DU. Value is |
| | 65536. |

9.2.4.3 PWS CANCEL REQUEST

This message is forwarded by the gNB-CU to gNB-DU to cancel an already ongoing broadcast of a warning message

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|---|-----------------------|--|-------------|-------------------------|
| Message Type | М | | 9.3.1.1 | | YES | reject |
| Transaction ID | М | | 9.3.1.23 | | YES | reject |
| Number of Broadcasts Requested | М | | 9.3.1.60 | This IE is not used in this version of the specification | YES | reject |
| Cell Broadcast To Be Cancelled List | | 01 | | | YES | reject |
| >Cell Broadcast to Be Cancelled Item IEs | | 1 <maxcel lingNBD U></maxcel | | | EACH | reject |
| >>NR CGI | М | | 9.3.1.12 | | - | |
| Cancel-all Warning Messages Indicator | 0 | | | ENUMERA TED (true,) | YES | reject |
| Notification Information | 0 | | | This IE is ignored If the Cancelall Warning Messages Indicator IE is included. | YES | reject |
| >Message Identifier | М | | 9.3.1.81 | | | |
| >Serial Number | М | | 9.3.1.82 | | | |

| Range bound | Explanation |
|----------------|---|
| maxCellingNBDU | Maximum no. cells that can be served by a gNB-DU. Value is 512. |

9.2.4.4 PWS CANCEL RESPONSE

This message is sent by the gNB-DU to indicate the list of warning areas where cancellation of the broadcast of the identified message was successful and unsuccessful.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------------------|----------|---|-----------------------|---|-------------|----------------------|
| Message Type | М | | 9.3.1.1 | | YES | reject |
| Transaction ID | М | | 9.3.1.23 | | YES | reject |
| Cell Broadcast Cancelled List | | 01 | | | YES | reject |
| >Cell Broadcast Cancelled Item IEs | | 1 <maxcel lingNBD U></maxcel | | | EACH | reject |
| >>NR CGI | M | | 9.3.1.12 | | - | |
| >>Number of Broadcasts | M | | INTEGER (065535) | This IE is set to '0' if valid results are not known or not available. It is set to 65535 if the counter results have overflowed. | - | |
| Criticality Diagnostics | 0 | | 9.3.1.3 | | YES | ignore |

| Range bound | Explanation |
|----------------|---|
| maxCellingNBDU | Maximum no. of cells that can be served by a gNB-DU. Value is |
| | 512. |

9.2.4.5 PWS RESTART INDICATION

This message is sent by the gNB-DU to inform the gNB-CU that PWS information for some or all cells of the gNB-DU are available if needed.

Direction: gNB-DU →gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------------|----------|---|-----------------------|-----------------------|-------------|-------------------------|
| Message Type | М | | 9.3.1.1 | | YES | ignore |
| Transaction ID | М | | 9.3.1.23 | | YES | reject |
| NR CGI List for Restart List | | 1 | | | YES | reject |
| >NR CGI List for Restart Item IEs | | 1 <maxcellingnb DU></maxcellingnb | | | EACH | reject |
| >>NR CGI | М | | 9.3.1.12 | | - | |

| Range bound | Explanation |
|----------------|---|
| maxCellingNBDU | Maximum no. of cells that can be served by a gNB-DU. Value is |
| | 512. |

9.2.4.6 PWS FAILURE INDICATION

This message is sent by the gNB-DU to inform the gNB-CU that ongoing PWS operation for one or more cells of the gNB-DU has failed.

Direction: gNB-DU \rightarrow gNB-CU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|----------|--|-----------------------|--|-------------|-------------------------|
| Message Type | М | | 9.3.1.1 | | YES | ignore |
| Transaction ID | М | | 9.3.1.23 | | YES | reject |
| PWS failed NR CGI List | | 01 | | | YES | reject |
| >PWS failed NR CGI Item IEs | | 1 <maxcellingn BDU></maxcellingn | | | EACH | reject |
| >>NR CGI | М | | 9.3.1.12 | | - | |
| >>Number of Broadcasts | М | | INTEGER (065535) | This IE is not used in the specification and is ignored. | - | |

| Range bound | Explanation |
|----------------|---|
| maxCellingNBDU | Maximum no. of cells that can be served by a gNB-DU. Value is |
| | 512. |

9.2.5 System Information messages

9.2.5.1 SYSTEM INFORMATION DELIVERY COMMAND

This message is sent by the gNB-CU and is used to enable the gNB-DU to broadcast the requested other SI.

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------|----------|-------|---------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| Transaction ID | M | | 9.3.1.23 | | YES | reject |
| NR CGI | M | | 9.3.1.12 | NR cell identifier | YES | reject |
| SIType List | M | | 9.3.1.62 | | YES | reject |
| Confirmed UE ID | M | | gNB-DU UE F1AP ID 9.3.1.5 | | YES | reject |

9.2.6 Paging messages

9.2.6.1 PAGING

This message is sent by the gNB-CU and is used to request the gNB-DU to page UEs.

Direction: gNB-CU \rightarrow gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics | Criticality | Assigned |
|-------------------------|----------|--|-----------------------|---|-------------|-------------|
| Managara Tura | NA. | | | description | VEC | Criticality |
| Message Type | M | | 9.3.1.1 | | YES | ignore |
| UE Identity Index value | M | | 9.3.1.39 | | YES | reject |
| CHOICE Paging Identity | M | | | | YES | reject |
| >RAN UE Paging identity | M | | 9.3.1.43 | | - | |
| >CN UE paging identity | M | | 9.3.1.44 | | - | |
| Paging DRX | 0 | | 9.3.1.40 | It is defined as the minimum between the RAN UE Paging DRX and CN UE Paging DRX | YES | ignore |
| Paging Priority | 0 | | 9.3.1.41 | | YES | ignore |
| Paging Cell List | | 1 | | | YES | ignore |
| >Paging Cell Item IEs | | 1 <maxnoofp agingCells</maxnoofp | | | EACH | ignore |
| >>NR CGI | М | | 9.3.1.12 | | - | |
| Paging Origin | 0 | | 9.3.1.79 | | YES | ignore |

| Range bound | Explanation |
|--------------------|--|
| maxnoofPagingCells | Maximum no. of paging cells, the maximum value is 512. |

9.3 Information Element Definitions

9.3.1 Radio Network Layer Related IEs

9.3.1.1 Message Type

The Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|--|-----------------------|
| Message Type | | | | |
| >Procedure Code | М | | INTEGER (0255) | |
| >Type of Message | М | | CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome,) | |

9.3.1.2 Cause

The purpose of the Cause IE is to indicate the reason for a particular event for the F1AP protocol.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------------------|----------|-------|---|--------------------------|
| CHOICE Cause Group | М | | | |
| >Radio Network Layer | | | | |
| >>Radio Network Layer Cause | M | | ENUMERATED (Unspecified, RL failure-RLC, Unknown or already allocated gNB-CU UE F1AP ID, Unknown or already allocated gNB-DU UE F1AP ID, Unknown or inconsistent pair of UE F1AP ID, Interaction with other procedure, Not supported QCI Value, Action Desirable for Radio Reasons, No Radio Resources Available, Procedure cancelled, Normal Release,, Cell not available, RL failure-others, UE rejection, Resources not available for the slice, AMF initiated abnormal release, Release due to Pre-Emption, PLMN not served by the gNB-CU, Multiple DRB ID Instances, Unknown DRB ID) | |
| >Transport Layer | | | | |
| >>Transport Layer Cause | M | | ENUMERATED (Unspecified, Transport Resource Unavailable,) | |
| >Protocol >>Protocol Cause | M | | ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Abstract Syntax Error (Falsely Constructed Message), Unspecified,) | |
| >Misc | M | | ENUMERATED | |
| eous Cause | IVI | | (Control Processing Overload, Not enough User Plane Processing Resources, Hardware Failure, O&M Intervention, Unspecified,) | |

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the related capability is missing. On the other hand, "not available" cause values indicate that the related capability is present, but insufficient resources were available to perform the requested action.

| Radio Network Layer cause | Meaning | | |
|---------------------------------------|---|--|--|
| Unspecified | Sent for radio network layer cause when none of the specified | | |
| | cause values applies. | | |
| RL Failure-RLC | The action is due to an RL failure caused by exceeding the | | |
| | maximum number of ARQ retransmissions. | | |
| Unknown or already allocated gNB- | The action failed because the gNB-CU UE F1AP ID is either | | |
| CU UE F1AP ID | unknown, or (for a first message received at the gNB-CU) is | | |
| | known and already allocated to an existing context. | | |
| Unknown or already allocated gNB- | The action failed because the gNB-DU UE F1AP ID is either | | |
| DU UE F1AP ID | unknown, or (for a first message received at the gNB-DU) is | | |
| | known and already allocated to an existing context. | | |
| Unknown or inconsistent pair of UE | The action failed because both UE F1AP IDs are unknown, or | | |
| F1AP ID | are known but do not define a single UE context. | | |
| Interaction with other procedure | The action is due to an ongoing interaction with another | | |
| | procedure. | | |
| Not supported QCI Value | The action failed because the requested QCI is not supported. | | |
| Action Desirable for Radio Reasons | The reason for requesting the action is radio related. | | |
| No Radio Resources Available | The cell(s) in the requested node don't have sufficient radio | | |
| | resources available. | | |
| Procedure cancelled | The sending node cancelled the procedure due to other | | |
| | urgent actions to be performed. | | |
| Normal Release | The action is due to a normal release of the UE (e.g. because | | |
| | of mobility) and does not indicate an error. | | |
| Cell Not Available | The action failed due to no cell available in the requested | | |
| | node. | | |
| RL Failure-others | The action is due to an RL failure caused by other radio link | | |
| | failures than exceeding the maximum number of ARQ | | |
| | retransmissions. | | |
| UE rejection | The action is due to gNB-CU's rejection of a UE access | | |
| | request. | | |
| Resources not available for the slice | The requested resources are not available for the slice. | | |
| AMF initiated abnormal release | The release is triggered by an error in the AMF or in the NAS | | |
| | layer. | | |
| Release due to Pre-Emption | Release is initiated due to pre-emption. | | |
| PLMN not served by the gNB-CU | The PLMN indicated by the UE is not served by the gNB-CU. | | |
| Multiple DRB ID Instances | The action failed because multiple instances of the same DRB | | |
| | had been provided. | | |
| Unknown DRB ID | The action failed because the DRB ID is unknow. | | |

| Transport Layer cause | Meaning | | |
|--------------------------------|--|--|--|
| Unspecified | Sent when none of the above cause values applies but still | | |
| | the cause is Transport Network Layer related. | | |
| Transport Resource Unavailable | The required transport resources are not available. | | |

| Protocol cause | Meaning | | |
|---|--|--|--|
| Transfer Syntax Error | The received message included a transfer syntax error. | | |
| Abstract Syntax Error (Reject) | The received message included an abstract syntax error and the concerning criticality indicated "reject". | | |
| Abstract Syntax Error (Ignore And Notify) | The received message included an abstract syntax error and the concerning criticality indicated "ignore and notify". | | |
| Message Not Compatible With | The received message was not compatible with the receiver | | |
| Receiver State | state. | | |
| Semantic Error | The received message included a semantic error. | | |
| Abstract Syntax Error (Falsely | The received message contained IEs or IE groups in wrong | | |
| Constructed Message) | order or with too many occurrences. | | |
| Unspecified | Sent when none of the above cause values applies but still the | | |
| | cause is Protocol related. | | |

| Miscellaneous cause | Meaning | | |
|----------------------------------|---|--|--|
| Control Processing Overload | Control processing overload. | | |
| Not Enough User Plane Processing | No enough resources are available related to user plane | | |
| Resources Available | processing. | | |
| Hardware Failure | Action related to hardware failure. | | |
| O&M Intervention | The action is due to O&M intervention. | | |

| Miscellaneous cause | Meaning | | |
|---------------------|---|--|--|
| Unspecified Failure | Sent when none of the above cause values applies and the | | |
| | cause is not related to any of the categories Radio Network | | |
| | Layer, Transport Network Layer or Protocol. | | |

9.3.1.3 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the gNB-DU or the gNB-CU when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

For further details on how to use the *Criticality Diagnostics* IE, (see clause 10). The conditions for inclusion of the *Transaction ID* IE are described in clause 10.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---|----------|---------------------------------------|---|---|
| Procedure Code | 0 | | INTEGER (0255) | Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error. |
| Triggering Message | 0 | | ENUMERATED(initi ating message, successful outcome, unsuccessful outcome) | The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure. |
| Procedure Criticality | 0 | | ENUMERATED(reje ct, ignore, notify) | This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure). |
| Transaction ID | 0 | | 9.3.1.23 | |
| Information Element Criticality Diagnostics | | 0 <maxnoof Errors></maxnoof | | |
| >IE Criticality | M | | ENUMERATED(reje ct, ignore, notify) | The IE Criticality is used for reporting the criticality of the triggering IE. The value 'ignore' is not applicable. |
| >IE ID | M | | INTEGER (065535) | The IE ID of the not understood or missing IE. |
| >Type of Error | М | | ENUMERATED(not understood, missing,) | |

| Range bound | Explanation | | |
|---------------|---|--|--|
| maxnoofErrors | Maximum no. of IE errors allowed to be reported with a single | | |
| | message. The value for maxnoofErrors is 256. | | |

9.3.1.4 gNB-CU UE F1AP ID

The gNB-CU UE F1AP ID uniquely identifies the UE association over the F1 interface within the gNB-CU.

NOTE: If F1-C signalling transport is shared among multiple interface instances, the value of the gNB-CU UE F1AP ID is allocated so that it can be associated with the corresponding F1-C interface instance.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------|----------|-------|-----------------------------------|-----------------------|
| gNB-CU UE F1AP ID | М | | INTEGER (0 2 ³² -1) | |

9.3.1.5 gNB-DU UE F1AP ID

The gNB-DU UE F1AP ID uniquely identifies the UE association over the F1 interface within the gNB-DU.

NOTE: If F1-C signalling transport is shared among multiple interface instances, the value of the gNB-CU UE F1AP ID is allocated so that it can be associated with the corresponding F1-C interface instance.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------|----------|-------|-----------------------------------|-----------------------|
| gNB-DU UE F1AP ID | М | | INTEGER (0 2 ³² -1) | |

9.3.1.6 RRC-Container

This information element contains a gNB-CU \rightarrow UE or a UE \rightarrow gNB-CU message that is transferred without interpretation in the gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| RRC-Container | М | | OCTET STRING | |

9.3.1.7 SRB ID

This IE uniquely identifies a SRB for a UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|--|
| SRB ID | M | | INTEGER (03,) | Corresponds to the identities of SRB as defined in TS 38.331 [8]. Value 0 indicates SRB0, value 1 indicates SRB1, etc. |

9.3.1.8 DRB ID

This IE uniquely identifies a DRB for a UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-------------------------|
| DRB ID | М | | INTEGER (1 | Corresponds to the DRB- |
| | | | 32,) | Identity defined in TS |
| | | | | 38.331 [8]. |

9.3.1.9 gNB-DU ID

The gNB-DU ID uniquely identifies the gNB-DU at least within a gNB-CU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------------------|---|
| gNB-DU ID | М | | INTEGER (0 2 ³⁶ -1) | The gNB-DU ID is independently configured from cell identifiers, i.e. no connection between gNB-DU ID and cell identifiers. |

9.3.1.10 Served Cell Information

This IE contains cell configuration information of a cell in the gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticali ty | Assigned Criticality |
|-------------------------------------|----------|---|---------------------------------------|---|-----------------|-------------------------|
| NR CGI | М | | 9.3.1.12 | • | - | • |
| NR PCI | М | | INTEGER (01007) | Physical Cell ID | - | |
| 5GS TAC | 0 | | 9.3.1.29 | 5GS Tracking Area Code | - | |
| Configured EPS TAC | 0 | | 9.3.1.29a | | - | |
| Served PLMNs | | 1 <maxnoofb PLMNs></maxnoofb | | Broadcast PLMNs in SIB1 associated to the NR Cell Identity in the NR CGI IE. | - | |
| >PLMN Identity | M | | 9.3.1.14 | | - | |
| >TAI Slice Support List | 0 | | Slice Support List 9.3.1.37 | Supported S- NSSAIs per TA. | YES | ignore |
| CHOICE NR-Mode-Info | M | | | | - | |
| >FDD | | | | | - | |
| >>FDD Info | | 1 | | | - | |
| >>>UL FreqInfo | М | | NR Frequency Info 9.3.1.17 | | - | |
| >>>DL FreqInfo | M | | NR Frequency Info 9.3.1.17 | | - | |
| >>>UL Transmission Bandwidth | M | | Transmission Bandwidth 9.3.1.15 | | - | |
| >>>DL Transmission Bandwidth | M | | Transmission Bandwidth 9.3.1.15 | | - | |
| >TDD | | | | | - | |
| >>TDD Info | | 1 | | | - | |
| >>> NR FreqInfo | M | | NR Frequency Info 9.3.1.17 | | - | |
| >>> Transmission Bandwidth | M | | Transmission Bandwidth 9.3.1.15 | | - | |
| Measurement Timing Configuration | М | | OCTET STRING | Contains the MeasurementTimin gConfiguration inter-node message defined in TS 38.331 [8]. | - | |
| RANAC | 0 | | RAN Area Code 9.3.1.57 | | YES | ignore |
| Extended Served PLMNs List | | 01 | | This is included if more than 6 Served PLMNs is to be signalled. | YES | ignore |
| >Extended Served PLMNs Item | | 1 <maxnoofe xtendedBPLM Ns></maxnoofe | | | - | |
| >>PLMN Identity | M | | 9.3.1.14 | | - | |
| >>TAI Slice Support List | 0 | | Slice Support List 9.3.1.37 | Supported S- NSSAIs per TA. | - | |
| Cell Direction | 0 | | 9.3.1.78 | | YES | ignore |
| Cell Type | 0 | | 9.3.1.87 | | YES | ignore |

| Broadcast PLMN Identity Info List | | 0 <maxnoofb PLMNsNR></maxnoofb | | This IE corresponds to the <i>PLMN-IdentityInfoList</i> IE in <i>SIB1</i> as specified in TS 38.331 [8]. All PLMN Identities and associated information contained in the <i>PLMN-IdentityInfoList</i> IE are included and provided in the same order as broadcast in SIB1. | YES | ignore |
|--------------------------------------|---|--|--|--|-----|--------|
| >PLMN Identity List | М | | Available PLMN List 9.3.1.65 | Broadcast PLMN IDs in SIB1 associated to the NR Cell Identity IE | - | |
| >Extended PLMN Identity List | 0 | | Extended Available PLMN List 9.3.1.76 | | - | |
| >5GS-TAC | 0 | | OCTET STRING (3) | | - | |
| >NR Cell Identity | M | | BIT STRING (36) | | - | |
| >RANAC | 0 | | RAN Area Code 9.3.1.57 | | 1 | |
| >Configured TAC Indication | 0 | | 9.3.1.87a | NOTE: This IE is associated with the 5GS TAC in the Broadcast PLMN Identity Info List IE | YES | ignore |
| Configured TAC Indication | 0 | | 9.3.1.87a | NOTE: This IE is associated with the 5GS TAC on top- level of the Served Cell Information IE | YES | ignore |

| Range bound | Explanation |
|-----------------------|---|
| maxnoofBPLMNs | Maximum no. of Broadcast PLMN Ids. Value is 6. |
| maxnoofExtendedBPLMNs | Maximum no. of Extended Broadcast PLMN lds. Value is 6. |
| maxnoofBPLMNsNR | Maximum no. of PLMN lds.broadcast in an NR cell. Value is 12. |

9.3.1.11 Transmission Action Indicator

This IE indicates actions for the gNB-DU for the data transmission to the UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|-----------------------|-----------------------|
| Transmission Action | M | | ENUMERATED | |
| Indicator | | | (stop restart) | |

9.3.1.12 NR CGI

The NR Cell Global Identifier (NR CGI) is used to globally identify a cell.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------|----------|-------|-----------------------|-----------------------|
| PLMN Identity | M | | 9.3.1.14 | |
| NR Cell Identity | M | | BIT STRING | |
| | | | (SIZE(36)) | |

9.3.1.13 Time To wait

This IE defines the minimum allowed waiting times.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|---------------------------------------|-----------------------|
| Time to wait | М | | ENUMERATED(1s, 2s, 5s, 10s, 20s, 60s) | |

9.3.1.14 PLMN Identity

This information element indicates the PLMN Identity.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|---------------------------|--|
| PLMN Identity | M | | OCTET STRING (SIZE(3)) | - digits 0 to 9, encoded 0000 to 1001, - 1111 used as filler digit, two digits per octet, - bits 4 to 1 of octet n encoding digit 2n- 1 - bits 8 to 5 of octet n encoding digit 2n -The PLMN identity consists of 3 digits from MCC followed by either -a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or -3 digits from MNC (in case of a 3 digit MNC). |

9.3.1.15 Transmission Bandwidth

The Transmission Bandwidth IE is used to indicate the UL or DL transmission bandwidth.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|--|--|
| NR SCS | M | | ENUMERATED (scs15, scs30, scs60, scs120,) | The values scs15, scs30, scs60 and scs120 corresponds to the sub carrier spacing in TS 38.104 [17]. |
| NRB | M | | ENUMERATED (nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121, nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273,) | This IE is used to indicate the UL or DL transmission bandwidth expressed in units of resource blocks "N _{RB} " (TS 38.104 [17]). The values nrb11, nrb18, etc. correspond to the number of resource blocks "N _{RB} " 11, 18, etc. |

9.3.1.16 Void

Reserved for future use.

9.3.1.17 NR Frequency Info

The NR Frequency Info defines the carrier frequency used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD or for an SUL carrier.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------------|----------|---|---------------------------|---|
| NR ARFCN | M | | INTEGER (0 maxNRARFCN) | RF Reference Frequency as defined in TS 38.104 [17] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the carrier. Its lowest subcarrier is also known as Point A. |
| SUL Information | 0 | | 9.3.1.28 | |
| Frequency Band List | | 1 | | |
| >Frequency Band Item | | 1 <ma xnoofNr CellBan ds></ma | | |
| >>NR Frequency Band | М | | INTEGER (1 1024,) | Operating Band as defined in TS 38.104 [17] section 5.4.2.3. The value 1 corresponds to NR operating band n1, value 2 corresponds to NR operating band n2, etc. |
| >>Supported SUL band List | | 0 <ma xnoofNr CellBan ds></ma | | |
| >>>Supported SUL band Item | M | | INTEGER (1 1024,) | Supplementary NR Operating Band as defined in TS 38.104 [17] section 5.4.2.3 that can be used for SUL duplex mode as per TS 38.101-1 [26] table 5.21. The value 80 corresponds to NR operating band n80, value 81 corresponds to NR operating band n81, etc. |

| Range bound | Explanation |
|--------------------|--|
| maxNRARFCN | Maximum value of NR ARFCNs. Value is 3279165. |
| maxnoofNrCellBands | Maximum no. of frequency bands supported for a NR cell. Value is 32. |

9.3.1.18 gNB-DU System Information

This IE contains the system information generated by the gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|--|
| MIB message | M | | OCTET STRING | MIB message, as defined in TS 38.331 [8]. |
| SIB1 message | M | | OCTET STRING | SIB1 message, as defined in TS 38.331 [8]. |

9.3.1.19 E-UTRAN QoS

This IE defines the QoS to be applied to a DRB for EN-DC case.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------------------|----------|-------|-----------------------|---|
| QCI | M | | INTEGER (0255) | QoS Class Identifier defined in TS 23.401 [10]. Logical range and coding specified in TS 23.203 [11]. |
| Allocation and Retention Priority | M | | 9.3.1.20 | |
| GBR QoS Information | 0 | | 9.3.1.21 | This IE shall be present for GBR bearers only and is ignored otherwise. |

9.3.1.20 Allocation and Retention Priority

This IE specifies the relative importance compared to other E-RABs for allocation and retention of the E-UTRAN Radio Access Bearer.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------------|----------|-------|---|--|
| Priority Level | М | | INTEGER (015) | Desc.: This IE should be understood as "priority of allocation and retention" (see TS 23.401 [10]). Usage: Value 15 means "no priority". Values between 1 and 14 are ordered in decreasing order of priority, i.e. 1 is the highest and 14 the lowest. Value 0 shall be treated as a logical error if received. |
| Pre-emption Capability | M | | ENUMERATED(sh all not trigger pre- emption, may trigger pre-emption) | Desc.: This IE indicates the preemption capability of the request on other E-RABs (see TS 23.401 [10]). Usage: The E-RAB shall not pre-empt other E-RABs or, the E-RAB may pre-empt other E-RABs The Pre-emption Capability indicator applies to the allocation of resources for an E-RAB and as such it provides the trigger to the pre-emption procedures/processes of the eNB. |
| Pre-emption Vulnerability | M | | ENUMERATED(not pre-emptable, pre-emptable) | Desc.: This IE indicates the vulnerability of the E-RAB to preemption of other E-RABs (see TS 23.401 [10]). Usage: The E-RAB shall not be pre-empted by other E-RABs or the E-RAB may be pre-empted by other RABs. Pre-emption Vulnerability indicator applies for the entire duration of the E-RAB, unless modified, and as such indicates whether the E-RAB is a target of the pre-emption procedures/processes of the eNB. |

9.3.1.21 GBR QoS Information

This IE indicates the maximum and guaranteed bit rates of a GBR E-RAB for downlink and uplink.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------------|----------|-------|-----------------------|--|
| E-RAB Maximum Bit Rate Downlink | М | | Bit Rate 9.3.1.22 | Maximum Bit Rate in DL (i.e. from |
| DOWNINK | | | 9.3.1.22 | EPC to E-UTRAN) for the bearer. Details in TS 23.401 [10]. |
| E-RAB Maximum Bit Rate | M | | Bit Rate | Maximum Bit Rate in UL (i.e. from E- |
| Uplink | | | 9.3.1.22 | UTRAN to EPC) for the bearer. |
| | | | | Details in TS 23.401 [10]. |
| E-RAB Guaranteed Bit | M | | Bit Rate | Guaranteed Bit Rate (provided that |
| Rate Downlink | | | 9.3.1.22 | there is data to deliver) in DL (i.e. |
| | | | | from EPC to E-UTRAN) for the |
| | | | | bearer. |
| | | | | Details in TS 23.401 [10]. |
| E-RAB Guaranteed Bit | M | | Bit Rate | Guaranteed Bit Rate (provided that |
| Rate Uplink | | | 9.3.1.22 | there is data to deliver) in UL (i.e. |
| | | | | from E-UTRAN to EPC) for the |
| | | | | bearer. |
| | | | | Details in TS 23.401 [10]. |

9.3.1.22 Bit Rate

This IE indicates the number of bits delivered by NG-RAN in UL or to NG-RAN in DL within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR QoS flow, or an aggregated maximum bit rate.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| Bit Rate | M | | INTEGER (0 | The unit is: bit/s |
| | | | 4,000,000,000,000,) | |

9.3.1.23 Transaction ID

The *Transaction ID* IE uniquely identifies a procedure among all ongoing parallel procedures of the same type initiated by the same protocol peer. Messages belonging to the same procedure use the same Transaction ID. The Transaction ID is determined by the initiating peer of a procedure.

NOTE: If F1-C signalling transport is shared among multiple interface instances, the Transaction ID is allocated so that it can be associated with an F1-C interface instance. The Transaction ID may identify more than one interface instance.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------|----------|-------|-----------------------|-----------------------|
| Transaction ID | M | | INTEGER (0255,) | |

9.3.1.24 DRX Cycle

The DRX Cycle IE is to indicate the desired DRX cycle.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------------|----------|-------|---|-------------------------------------|
| Long DRX Cycle Length | M | | ENUMERATED (ms10, ms20, ms32, ms40, ms60, ms64, ms70, ms80, ms128, ms160, ms256, ms320, ms512, ms640, ms1024, ms1280, ms2048, ms2560, ms5120, ms10240,) | This IE is defined in TS 38.331 [8] |
| Short DRX Cycle Length | 0 | | ENUMERATED (ms2, ms3, ms4, ms5, ms6, ms7, ms8, ms10, ms14, ms16, ms20, ms30, ms32, ms35, ms40, ms64, ms80, ms128, ms160, ms256, ms320, ms512, ms640,) | This IE is defined in TS 38.331 [8] |
| Short DRX Cycle Timer | 0 | | INTEGER (116) | This IE is defined in TS 38.331 [8] |

9.3.1.25 CU to DU RRC Information

This IE contains the RRC Information that are sent from gNB-CU to gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-------|-----------------------|--|-------------|----------------------|
| CG-ConfigInfo | 0 | | OCTET STRING | CG-ConfigInfo, as defined in TS 38.331 [8]. | - | _ |
| UE-CapabilityRAT- ContainerList | 0 | | OCTET STRING | This IE is used in the NG-RAN and it consists of the UE-CapabilityRAT-ContainerList, as defined in TS 38.331 [8]. | - | |
| MeasConfig | 0 | | OCTET STRING | MeasConfig, as defined in TS 38.331 [8] (without MeasGapConfig). For EN-DC/NGEN-DC operation, includes the list of FR2 frequencies for which the gNB-CU requests the gNB-DU to generate gaps. For NG-RAN,NE-DC and MN for NR-NR DC, includes the list of FR1 and/or FR2 frequencies for which the gNB-CU requests the gNB-DU to generate gaps and the gap type (per-UE or per-FR). | - | |
| Handover Preparation Information | 0 | | OCTET STRING | HandoverPreparationInforma tion, as defined in TS 38.331 [8]. | YES | ignore |
| CellGroupConfig | 0 | | OCTET STRING | CellGroupConfig, as defined in TS 38.331 [8]. | YES | ignore |
| Measurement Timing Configuration | 0 | | OCTET STRING | Contains the MeasurementTimingConfigur ation inter-node message defined in TS 38.331 [8]. In EN-DC/NGEN-DC, it is included when the gaps for FR2 are requested to be configured by the MeNB. For MN in NR-NR DC, it is included when the gaps for FR2 and/or FR1 are requested by the SgNB | YES | ignore |
| UEAssistanceInfor mation | 0 | | OCTET STRING | UEAssistanceInformation, as defined in TS 38.331 [8]. | YES | ignore |
| CG-Config | 0 | | OCTET STRING | CG-Config, as defined in TS 38.331 [8]. | YES | ignore |

9.3.1.26 DU to CU RRC Information

This IE contains the RRC Information that are sent from the gNB-DU to the gNB-CU.

| IE/Group Name | Presenc e | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------------|--------------|-------|-----------------------|---|-------------|----------------------|
| CellGroupConfig | M | | OCTET STRING | CellGroupConfig, as defined in TS 38.331 [8]. | | |
| MeasGapConfig | 0 | | OCTET STRING | MeasGapConfig as defined in TS 38.331 [8]. For EN-DC/NGEN-DC operation, includes the gap for FR2, as requested by the gNB-CU via MeasConfig IE. | | |
| | | | | For NG-RAN,NE-DC and MN for NR-NR DC, includes the gap(s) for FR1 and/or FR2, as requested by the gNB-CU via MeasConfig IE and according to the requested gap type (per-UE or per-FR). | | |
| Requested P-MaxFR1 | 0 | | OCTET STRING | requestedP-MaxFR1, as defined in TS 38.331 [8]. For EN-DC operation, this IE should be included. | | |
| DRX Long Cycle Start Offset | 0 | | INTEGER (010239) | Identical to the value of the drx-LongCycleStartOffset IE within the DRX-Config as defined in TS 38.331. This field is not used in NR-DC. | | |
| Selected BandCombinationIndex | 0 | | OCTET STRING | BandCombinationIndex, as defined in TS 38.331 [8]. For (NG)EN-DC and NR DC operation, this IE should be included so that gNB-CU is informed of the selected Band Combination; if this IE is included, the gNB-CU uses this information to deduce the selected band. | YES | ignore |
| Selected FeatureSetEntryIndex | 0 | | OCTET STRING | FeatureSetEntryIndex, as defined in TS 38.331 [8]. For (NG)EN-DC and NR DC operation, this IE should be included so that gNB-CU is informed of the selected FeatureSet. | YES | ignore |
| Ph-InfoSCG | 0 | | OCTET STRING | PH-TypeListSCG, as defined in TS 38.331[8].For MR-DC, this IE should be included so that gNB-CU is informed of the Power Headroom type for each serving cell in SN. | Yes | ignore |
| Requested BandCombinationIndex | 0 | | OCTET STRING | BandCombinationIndex, as defined in TS 38.331 [8]. This IE is used for the gNB-DU to request a new Band Combination. | YES | ignore |
| Requested FeatureSetEntryIndex | 0 | | OCTET STRING | FeatureSetEntryIndex, as defined in TS 38.331 [8]. This IE is used for the gNB-DU to request a new Feature Set. | YES | ignore |
| Requested P-MaxFR2 | 0 | | OCTET STRING | This IE is not used in this version of the specification. | YES | ignore |
| DRX Config | 0 | | OCTET STRING | DRX-Config, as defined in TS 38.331 [8]. This field is only used in NR-DC. | YES | ignore |

| PDCCH BlindDetectionSCG | 0 | OCTET STRING | pdcch-BlindDetectionSCG, as defined in TS 38.331[8]. This IE is used between the MgNB-DU and the MgNB-CU. | YES | ignore |
|--------------------------------------|---|-----------------|---|-----|--------|
| Requested PDCCH BlindDetectionSCG | 0 | OCTET STRING | requestedPDCCH- BlindDetectionSCG, as defined in TS 38.331[8]. This IE is used between the SgNB- DU and the SgNB-CU. | YES | ignore |
| Ph-InfoMCG | 0 | OCTET STRING | PH-TypeListMCG, as defined in TS 38.331[8]. For MR-DC, this IE should be included so that gNB-CU is informed of the Power Headroom type for each serving cell in MCG. | YES | ignore |
| MeasGapSharingConfig | 0 | OCTET STRING | MeasGapSharingConfig as defined in TS 38.331 [8]. | YES | ignore |

9.3.1.27 RLC Mode

The RLC Mode IE indicates the RLC Mode used for a DRB.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|--|-----------------------|
| RLC Mode | | | ENUMERATED (RLC-AM, RLC-UM- Bidirectional, RLC- UM-Unidirectional- UL, RLC-UM- Unidirectional-DL,) | |

9.3.1.28 SUL Information

This IE provides information about the SUL carrier.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------------|----------|-------|---------------------------------------|---|
| SUL ARFCN | М | | INTEGER (0 maxNRARFCN) | RF Reference Frequency as defined in TS 38.104 [17] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the SUL carrier. Its lowest subcarrier is also known as Point A. |
| SUL Transmission Bandwidth | М | | Transmission Bandwidth 9.3.1.15 | |

| Range bound | Explanation | | |
|-------------|---|--|--|
| maxNRARFCN | Maximum value of NR ARFCNs. Value is 3279165. | | |

9.3.1.29 5GS TAC

This information element is used to identify Tracking Area Code.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|----------------------------|-----------------------|
| 5GS TAC | M | | OCTET STRING (SIZE (3)) | |

9.3.1.29a Configured EPS TAC

This information element is used to identify a configured EPS Tracking Area Code in order to enable application of Roaming and Access Restrictions for EN-DC as specified in TS 37.340 [7]. This IE is configured for the cell, but not broadcast.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|----------------------------|-----------------------|
| Configured EPS TAC | M | | OCTET STRING (SIZE (2)) | |

9.3.1.30 RRC Reconfiguration Complete Indicator

This IE indicates the result of the reconfiguration performed towards the UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|-----------------------|-----------------------|
| RRC Reconfiguration | М | | ENUMERATED | |
| Complete Indicator | | | (true, , failure) | |

9.3.1.31 UL Configuration

This IE indicates how the UL scheduling is configured at gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|-------------------------------------|---|
| UL UE Configuration | M | | ENUMERATED (no-data, shared, only,) | Indicates how the UE uses the UL at gNB-DU, for which "no-data" indicates that the UL scheduling is not performed at gNB-DU, "shared" indicates that the UL scheduling is performed at both gNB-DU and another node, and "only" indicates that the UL scheduling is only performed at the gNB-DU. |

9.3.1.32 C-RNTI

This IE contains the C-RNTI information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-------------------------------------|
| C-RNTI | М | | INTEGER (065535,) | C-RNTI as defined in TS 38.331 [8]. |

9.3.1.33 Cell UL Configured

This IE indicates whether the gNB-CU requests the gNB-DU to configure the uplink as no UL, UL, SUL or UL+SUL for the indicated cell for the UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|---|--|
| Cell UL Configured | M | | ENUMERATED (none, UL, SUL, UL and SUL,) | Further details are defined in TS 38.331 [8] |

9.3.1.34 RAT-Frequency Priority Information

The RAT-Frequency Priority Information contains either the *Subscriber Profile ID for RAT/Frequency priority* IE or the *Index to RAT/Frequency Selection Priority* IE. These parameters are used to define local configuration for RRM strategies.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|-------|-----------------------|-----------------------|
| CHOICE RAT-Frequency Priority Information | М | | | |
| >EN-DC | | | | |
| >>Subscriber Profile ID for RAT/Frequency priority | M | | INTEGER (1 256,) | |
| >NG-RAN | | | | |
| >> Index to RAT/Frequency Selection Priority | M | | INTEGER (1 256,) | |

9.3.1.35 LCID

This IE uniquely identifies a LCID for the associated SRB or DRB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|---------------------------|
| LCID | M | | INTEGER | Corresponds to the |
| | | | (132,) | LogicalChannelIdentity |
| | | | | defined in TS 38.331 [8]. |

9.3.1.36 Duplication activation

The Duplication Activation IE indicates whether UL PDCP Duplication is activated or not.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|------------------------|----------|-------|---------------------------------|-----------------------|
| Duplication Activation | M | | ENUMERATED (Active, Inactive,) | |

9.3.1.37 Slice Support List

This IE indicates the list of supported slices.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------|----------|--|-----------------------|-----------------------|
| Slice Support Item IEs | | 1 <maxno ofSliceIte ms></maxno | | |
| >S-NSSAI | М | | 9.3.1.38 | |

| Range bound | Explanation | |
|-------------------|--|--|
| maxnoofSliceItems | Maximum no. of signalled slice support items. Value is 1024. | |

9.3.1.38 S-NSSAI

This IE indicates the S-NSSAI as defined in TS 23.003 [23].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|------------------------|-----------------------|
| SST | M | | OCTET STRING (SIZE(1)) | |
| SD | 0 | | OCTET STRING (SIZE(3)) | |

9.3.1.39 UE Identity Index value

This IE is used by the gNB-DU to calculate the Paging Frame.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------------|----------|-------|--------------------------|---------------------------------------|
| CHOICE UE Identity Index Value | М | | | |
| >Length-10 | | | | |
| >>Index Length 10 | М | | BIT STRING (SIZE(10)) | Coded as specified in TS 38.304 [24]. |

9.3.1.40 Paging DRX

This IE indicates the Paging DRX as defined in TS 38.304 [24].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-------------------------|-----------------------|
| Paging DRX | M | | ENUMERATED(32, 64, 128, | Unit in radio frame. |
| | | | 256,) | |

9.3.1.41 Paging Priority

This IE indicates the paging priority for paging a UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------|----------|-------|---|--|
| Paging Priority | М | | ENUMERATED (PrioLevel1, PrioLevel2, PrioLevel3, PrioLevel4, PrioLevel5, PrioLevel6, PrioLevel7, PrioLevel8,) | Lower value codepoint indicates higher priority. |

9.3.1.42 gNB-CU System Information

This IE contains the system information encoded by the gNB-CU.

| IE/Group Name | Presenc e | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------------------|--------------|---|------------------------------|--|-------------|-------------------------|
| SIB type to Be Updated List | | 1 | 10.0.0.00 | | | |
| >SIB type to Be Updated Item IEs | | 1 <maxnoofs IBTypes></maxnoofs | | | | |
| >>SIB type | M | | INTEGER (232,) | Indicates a certain SIB block, e.g. 2 means sibType2, 3 for sibType3, etc. Values 6, 7, 8 and values 10 and higher are not applicable in this version of the specifications. | | |
| >>SIB message | М | | OCTET STRING | SIB as defined in subclause 6.3.1 TS 38.331 [8]. | | |
| >>Value Tag | М | | INTEGER (031,) | | | |
| >>areaScope | 0 | | ENUMERA TED (true,) | Indicates that a SIB is area specific. If the field is not present, the SIB is cell specific. | YES | ignore |
| SystemInformationAreal D | 0 | | BIT STRING (SIZE (24)) | Indicates the system information area that the cell belongs to, if any. | YES | ignore |

| Range bound | Explanation |
|-----------------|--|
| maxnoofSIBTypes | Maximum no. of SIB types, the maximum value is 32. |

9.3.1.43 RAN UE Paging identity

This IE indicates the RAN UE Paging identity.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| I-RNTI | М | | BIT STRING (SIZE(40)) | |

9.3.1.44 CN UE Paging Identity

The 5G-S-TMSI is used as UE identifier for CN paging.

| IE/Group Name | Presence | Range | IE type and reference | | Semantics description |
|------------------------------|----------|-------|-----------------------|--------|---|
| CHOICE CN UE paging identity | М | | | | |
| >5G-S-TMSI | | | | | |
| >>5G-S-TMSI | M | | BIT (SIZE(48)) | STRING | Details defined in TS 38.413 [3] |

9.3.1.45 QoS Flow Level QoS Parameters

This IE defines the QoS to be applied to a QoS flow or to a DRB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|--------------------------|--|-------------|----------------------|
| CHOICE QoS Characteristics | М | | | | - | |
| >Non-dynamic 5QI | | | | | - | |
| >>Non Dynamic 5QI Descriptor | М | | 9.3.1.49 | | - | |
| >Dynamic 5QI | | | | | - | |
| >>Dynamic 5QI Descriptor | М | | 9.3.1.47 | | - | |
| NG-RAN Allocation and Retention Priority | М | | 9.3.1.48 | | - | |
| GBR QoS Flow Information | 0 | | 9.3.1.46 | This IE shall be present for GBR QoS Flows only and is ignored otherwise. | - | |
| Reflective QoS Attribute | 0 | | ENUMERATED (subject to,) | Details in TS 23.501 [21]. This IE applies to non- GBR flows only and is ignored otherwise. | - | |
| PDU Session ID | 0 | | INTEGER (0255) | As specified in TS 23.501 [21]. | YES | ignore |
| UL PDU Session Aggregate Maximum Bit Rate | 0 | | Bit Rate 9.3.1.22 | The PDU session Aggregate Maximum Bit Rate Uplink which is associated with the involved PDU session. | YES | ignore |

9.3.1.46 GBR QoS Flow Information

This IE indicates QoS parameters for a GBR QoS flow or GBR bearer for downlink and uplink.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------------|----------|-------|--------------------------|--------------------------------|
| Maximum Flow Bit Rate | M | | Bit Rate | Maximum Bit Rate in DL. |
| Downlink | | | 9.3.1.22 | Details in TS 23.501 [21]. |
| Maximum Flow Bit Rate | M | | Bit Rate | Maximum Bit Rate in UL. |
| Uplink | | | 9.3.1.22 | Details in TS 23.501 [21]. |
| Guaranteed Flow Bit | M | | Bit Rate | Guaranteed Bit Rate |
| Rate Downlink | | | 9.3.1.22 | (provided there is data to |
| | | | | deliver) in DL. Details in TS |
| | | | | 23.501 [21]. |
| Guaranteed Flow Bit | M | | Bit Rate | Guaranteed Bit Rate |
| Rate Uplink | | | 9.3.1.22 | (provided there is data to |
| | | | | deliver). Details in TS 23.501 |
| | | | | [21]. |
| Maximum Packet Loss | 0 | | Maximum Packet Loss Rate | Indicates the maximum rate |
| Rate Downlink | | | 9.3.1.50 | for lost packets that can be |
| | | | | tolerated in the downlink |
| | | | | direction. Details in TS |
| | | | | 23.501 [21]. |
| Maximum Packet Loss | 0 | | Maximum Packet Loss Rate | Indicates the maximum rate |
| Rate Uplink | | | 9.3.1.50 | for lost packets that can be |
| | | | | tolerated in the uplink |
| | | | | direction. Details in TS |
| | | | | 23.501 [21]. |

9.3.1.47 Dynamic 5QI Descriptor

This IE indicates the QoS Characteristics for a Non-standardised or not pre-configured 5QI for downlink and uplink.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------|-----------------|-------|---|--|
| QoS Priority Level | М | | INTEGER (1127) | For details see TS 23.501 [21]. |
| Packet Delay Budget | М | | 9.3.1.51 | For details see TS 23.501 [21]. |
| Packet Error Rate | М | | 9.3.1.52 | For details see TS 23.501 [21]. |
| 5QI | 0 | | INTEGER (0255,) | This IE contains the dynamically assigned 5QI as specified in TS 23.501 [21]. |
| Delay Critical | C- ifGBRflow | | ENUMERATED (delay critical, non-delay critical) | For details see TS 23.501 [21]. |
| Averaging Window | C- ifGBRflow | | 9.3.1.53 | For details see TS 23.501 [21]. |
| Maximum Data Burst Volume | 0 | | 9.3.1.54 | For details see TS 23.501 [21]. This IE shall be included if the <i>Delay Critical</i> IE is set to "delay critical" and is ignored otherwise. |

| Condition | Explanation |
|-----------|---|
| ifGBRflow | This IE shall be present if the GBR QoS Flow Information IE is present in |
| | the QoS Flow Level QoS Parameters IE. |

9.3.1.48 NG-RAN Allocation and Retention Priority

This IE specifies the relative importance of a QoS flow or a DRB compared to other QoS flows or DRBs for allocation and retention of NG-RAN resources.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------------|----------|-------|---|---|
| Priority Level | M | - | INTEGER (015) | Desc.: This IE defines the relative importance of a resource request (see TS 23.501 [21]). Usage: Values are ordered in decreasing order of priority, i.e., with 1 as the highest priority and 15 as the lowest priority. Further usage is defined in TS 23.501 [21]. |
| Pre-emption Capability | M | | ENUMERATED (shall not trigger pre-emption, may trigger pre-emption) | Desc.: This IE indicates the pre-emption capability of the request on other QoS flows (see TS 23.501 [21]). Usage: The QoS flow shall not pre-empt other QoS flows or, the QoS flow may pre-empt other QoS flows. Note: The Pre-emption Capability indicator applies to the allocation of resources for a QoS flow and as such it provides the trigger to the pre-emption procedures/processes of the NG-RAN node. |
| Pre-emption Vulnerability | M | | ENUMERATED (not pre- emptable, pre-emptable) | Desc.: This IE indicates the vulnerability of the QoS flow to pre-emption of other QoS flows (see TS 23.501 [21]). Usage: The QoS flow shall not be pre-empted by other QoS flows or the QoS flow may be pre-empted by other QoS flows. Note: The Pre-emption Vulnerability indicator applies for the entire duration of the QoS flow, unless modified and as such indicates whether the QoS flow is a target of the pre-emption procedures/processes of the NG-RAN node. |

9.3.1.49 Non Dynamic 5QI Descriptor

This IE indicates the QoS Characteristics for a standardized or pre-configured 5QI for downlink and uplink.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|-----------------------|-----------------------------|
| 5QI | M | | INTEGER (0255,) | This IE contains the |
| | | | | standardized or pre- |
| | | | | configured 5QI as specified |
| | | | | in TS 23.501 [21] |
| Priority Level | 0 | | INTEGER (1127) | For details see TS 23.501 |
| | | | | [21]. When included |
| | | | | overrides standardized or |
| | | | | pre-configured value. |
| Averaging Window | 0 | | 9.3.1.53 | For details see TS 23.501 |
| | | | | [21]. When included |
| | | | | overrides standardized or |
| | | | | pre-configured value. |
| Maximum Data Burst | 0 | | 9.3.1.54 | For details see TS 23.501 |
| Volume | | | | [21]. When included |
| | | | | overrides standardized or |
| | | | | pre-configured value. |

9.3.1.50 Maximum Packet Loss Rate

This IE indicates the Maximum Packet Loss Rate.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|-----------------------|---------------------------|
| Maximum Packet Loss | M | | INTEGER(01000) | Ratio of lost packets per |
| Rate | | | | number of packets sent, |
| | | | | expressed in tenth of |
| | | | | percent. |

9.3.1.51 Packet Delay Budget

This IE indicates the Packet Delay Budget for a QoS flow.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|-----------------------|------------------------------|
| Packet Delay Budget | M | | INTEGER (01023,) | Upper bound value for the |
| | | | | delay that a packet may |
| | | | | experience expressed in unit |
| | | | | of 0.5ms. |

9.3.1.52 Packet Error Rate

This IE indicates the Packet Error Rate for a QoS flow.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|--|
| Scalar | M | | INTEGER (09,) | The packet error rate is expressed as Scalar x 10-k where k is the Exponent. |
| Exponent | M | | INTEGER (09,) | |

9.3.1.53 Averaging Window

This IE indicates the Averaging Window for a QoS flow, and applies to GBR QoS Flows only.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------|----------|-------|-----------------------|--|
| Averaging Window | M | | INTEGER (04095,) | Unit: ms. The default value is 2000ms. |
| | | | | |

9.3.1.54 Maximum Data Burst Volume

This IE indicates the Maximum Data Burst Volume for a QoS flow, and applies to delay critical GBR QoS flows only.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|-----------------------|-----------------------|
| Maximum Data Burst | M | | INTEGER (04095,) | Unit: byte. |
| Volume | | | | |

9.3.1.55 Masked IMEISV

This information element contains the IMEISV value with a mask, to identify a terminal model without identifying an individual Mobile Equipment.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|---------------------------|--|
| Masked IMEISV | М | | BIT STRING (SIZE (64)) | Coded as the International Mobile station Equipment Identity and Software Version Number (IMEISV) defined in TS 23.003 [23] with the last 4 digits of the SNR masked by setting the corresponding bits to 1. The first to fourth bits correspond to the first digit of the IMEISV, the fifth to eighth bits correspond to the second digit of the IMEISV, and so on. |

9.3.1.56 Notification Control

The Notification Control IE indicates whether the notification control for a given DRB is active or not-active.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------|----------|-------|----------------------------------|-----------------------|
| Notification Control | M | | ENUMERATED(Act ive, Not-Active,) | |

9.3.1.57 RAN Area Code

This information element is used to uniquely identify a RAN Area Code.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| RANAC | M | | INTEGER (0255) | RAN Area Code |

9.3.1.58 PWS System Information

This IE contains the system information used for public warning.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|----------|-------|-----------------------|---|-------------|----------------------|
| SIB type | M | | INTEGER (68,) | Indicates a certain SIB block for public warning message, e.g. 6 means sibType6, 7 for sibType7, etc. | 1 | |
| SIB message | М | | OCTET STRING | SIB message for public warning, as defined in TS 38.331 [8]. | | |
| Notification Information | 0 | | | | YES | ignore |
| >Message Identifier | M | | 9.3.1.81 | | - | |
| >Serial Number | М | | 9.3.1.82 | | - | |
| Additional SIB Message List | 0 | | 9.3.1.86 | Additional SIB messages containing different segments of a public warning message if segmentation is applied, as defined in TS38.331 [8]. | Yes | reject |

9.3.1.59 Repetition Period

This IE indicates the periodicity of the warning message to be broadcast.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------|----------|-------|-------------------------------|--|
| Repetition Period | M | | INTEGER (02 ¹⁷ -1) | The unit of value 1 to 2 ¹⁷ -1 is [second]. |

9.3.1.60 Number of Broadcasts Requested

This IE indicates the number of times a message is to be broadcast.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------|----------|-------|-----------------------|-----------------------|
| Number of Broadcasts | М | | INTEGER | |
| Requested | | | (065535) | |

9.3.1.61 Void

9.3.1.62 SIType List

This IE is used by gNB-CU to provide SI list of other SI for gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------|----------|---|-----------------------|---|
| SI type item IEs | | 1 <maxnoofsi Types></maxnoofsi | | |
| >SI Type | M | | INTEGER (132,) | Indicates a certain SI type required to be broadcasted by the gNB-DU. |

| Range bound | Explanation |
|----------------|---|
| maxnoofSITypes | Maximum no. of SI types, the maximum value is 32. |

9.3.1.63 QoS Flow Identifier

This IE identifies a QoS Flow within a PDU Session. The definition and use of the QoS Flow Identifier specified in TS 23.501 [21].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|-----------------------|-----------------------|
| QoS Flow Identifier | M | | INTEGER (063) | |

9.3.1.64 Served E-UTRA Cell Information

This IE contains served cell information of an E-UTRA cell for spectrum sharing between E-UTRA and NR.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------------------|----------|-------|-----------------------|---|
| CHOICE EUTRA-Mode-Info | М | | | |
| >FDD | | | | |
| >>FDD Info | | 1 | | |
| >>>UL Offset to Point A | M | | INTEGER (02199,) | Indicates the offset to the center of the NR carrier for UL. |
| >>>DL Offset to Point A | М | | INTEGER (02199,) | Indicates the offset to the center of the NR carrier for DL. |
| >TDD | | | | |
| >>TDD Info | | 1 | | |
| >>>Offset to Point A | М | | INTEGER (02199,) | Indicates the offset to the center of the NR carrier. |
| Protected E-UTRA Resource Indication | 0 | | OCTET STRING | Indicates the Protected E-UTRA Resource Indication as defined in subclause 9.2.125 of TS 36.423 [9]. |

9.3.1.65 Available PLMN List

This IE indicates the list of available PLMN.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------|----------|---------------------------|-----------------------|-----------------------|
| Available PLMN Item IEs | | 1< maxnoofBPLM Ns > | | |
| >PLMN Identity | M | | 9.3.1.14 | |

| Range bound | Explanation |
|---------------|--|
| maxnoofBPLMNs | Maximum no. of Broadcast PLMN lds. Value is 6. |

9.3.1.66 RLC Failure Indication

This IE indicates the LCID associated with the RLC entity needing re-establishment.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------|----------|-------|-----------------------|-----------------------|
| Associated LCID | М | | LCID 9.3.1.35 | |

9.3.1.67 Uplink TxDirectCurrentList Information

This IE contains the Uplink TxDirectCurrentList information that is configured by the UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|-------|-----------------------|--|
| Uplink TxDirectCurrentList Information | M | | OCTET STRING | UplinkTxDirectCurrentList as defined in TS 38.331 [8]. |

9.3.1.68 Service Status

This IE is used to indicate the service status of a cell by the gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------------|----------|-------|--|---|
| Service State | М | | ENUMERATED (In- Service, Out-Of- Service,) | Indicates the Service State of the cell. In-Service and Out-of-Service Service States are defined in TS 38.401 [4]. |
| Switching Off Ongoing | 0 | | ENUMERATED (True,) | This IE indicates that the gNB-DU will delete the cell after some time using a new gNB-DU Configuration Update procedure. |

9.3.1.69 RLC Status

This IE indicates about the RLC configuration change included in the container towards the UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------------|----------|-------|-----------------------------|--|
| Reestablishment Indication | 0 | | ENUMERATED (reestablished,) | Indicates that following a change in the radio status, the RLC has been reestablished. |

9.3.1.70 RRC Version

This information element is used to identify RRC version corresponding to TS 38.331 [8].

| IE/Group Name | Presenc e | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|--------------|-------|----------------------------|---|-------------|----------------------|
| Latest RRC Version | М | | BIT STRING (SIZE (3)) | This IE is not used in this release. | - | |
| Latest RRC Version Enhanced | 0 | | OCTET STRING (SIZE (3)) | Latest supported RRC version in the release corresponding to TS 38.331 [8]. For a 3GPP specification version x.y.z, x is encoded by the leftmost byte, y by the middle byte, and z by the rightmost byte. | YES | ignore |

9.3.1.71 RRC Delivery Status

This IE provides information about the delivery status of RRC messages to the UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|-------------------------------|--|
| Delivery Status | М | | INTEGER (02 ¹² -1) | Highest NR PDCP SN successfully delivered in sequence to the UE. |
| Triggering Message | M | | INTEGER (02 ¹² -1) | NR PDCP SN for the RRC message that triggered the report. |

9.3.1.72 QoS Flow Mapping Indication

This IE is used to indicate only the uplink or downlink QoS flow is mapped to the DRB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------------------|----------|-------|-----------------------|--|
| QoS Flow Mapping Indication | 0 | | ENUMERATED(ul, dl,) | Indicates that only the uplink or downlink QoS flow is mapped to the DRB |

9.3.1.73 Resource Coordination Transfer Information

This IE contains information for UE-associated E-UTRA – NR resource coordination.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---|----------|-------|--------------------------|---|
| MeNB Cell ID | M | | BIT STRING (SIZE(28)) | E-UTRAN Cell Identifier IE contained in the ECGI as defined in TS 36.423 [9] clause 9.2.14 |
| Resource Coordination E- UTRA Cell Information | 0 | | 9.3.1.75 | |

9.3.1.74 E-UTRA PRACH Configuration

This IE indicates the PRACH resources used in E-UTRA cell.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------------------------|----------|-------|-----------------------|---|
| RootSequenceIndex | М | | INTEGER (0837) | See section 5.7.2. in TS 36.211 [27] |
| ZeroCorrelationZoneConfigur ation | М | | INTEGER (015) | See section 5.7.2. in TS 36.211 [27] |
| HighSpeedFlag | M | | BOOLEAN | TRUE corresponds to Restricted set and FALSE to Unrestricted set. See section 5.7.2 in TS 36.211 [27] |
| PRACH-FrequencyOffset | М | | INTEGER (094) | See section 5.7.1 of TS 36.211 [27] |
| PRACH-ConfigurationIndex | C-ifTDD | | INTEGER (063) | See section 5.7.1. in TS 36.211 [27] |

| Condition | Explanation | | |
|-----------|--|--|--|
| ifTDD | This IE shall be present if the EUTRA-Mode-Info IE in the Resource | | |
| | Coordination E-UTRA Cell Information IE is set to the value "TDD". | | |

9.3.1.75 Resource Coordination E-UTRA Cell Information

This IE contains E-UTRA cell information for UE-associated E-UTRA – NR resource coordination.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------------|----------|-------|---|--|-------------|----------------------|
| CHOICE EUTRA-Mode-Info | М | | | | - | , |
| >FDD | | | | | - | |
| >>FDD Info | | 1 | | | - | |
| >>>UL EARFCN | 0 | | INTEGER (0 maxExtendedEARF CN,) | The relation between EARFCN and carrier frequency (in MHz) is defined in TS 36.104 [25]. | - | |
| >>>DL EARFCN | M | | INTEGER (0 maxExtendedEARF CN,) | The relation between EARFCN and carrier frequency (in MHz) is defined in TS 36.104 [25]. | - | |
| >>>UL Transmission Bandwidth | 0 | | E-UTRA Transmission Bandwidth 9.3.1.80 | Present if <i>UL</i> EARFCN IE is present. | - | |
| >>>DL Transmission Bandwidth | M | | E-UTRA Transmission Bandwidth 9.3.1.80 | | - | |
| >TDD | | | | | - | |
| >>TDD Info | | 1 | | | - | |
| >>>EARFCN | M | | INTEGER (0 maxExtendedEARF CN,) | The relation between EARFCN and carrier frequency (in MHz) is defined in TS 36.104 [25]. | - | |
| >>>Transmission Bandwidth | М | | E-UTRA Transmission Bandwidth 9.3.1.80 | | - | |
| >>>Subframe Assignment | М | | ENUMERATED(sa0 , sa1, sa2, sa3, sa4, sa5, sa6,) | Uplink-downlink subframe configuration information defined in TS 36.211 [27]. In NB-IOT, sa0 and sa6 are not applicable. | - | |
| >>>Special Subframe Info | | 1 | | Special subframe configuration information defined in TS 36.211 [27] | - | |
| >>>Special Subframe Patterns | M | | ENUMERATED(ssp 0, ssp1, ssp2, ssp3, ssp4, ssp5, ssp6, ssp7, ssp8, ssp9, ssp10,) | | - | |
| >>>Cyclic Prefix DL | М | | ssp10,) ENUMERATED(Nor mal, Extended,) | | - | |
| >>>Cyclic Prefix UL | М | | ENUMERATED(Nor mal, Extended,) | | - | |
| E-UTRA PRACH Configuration | М | | 9.3.1.74 | | - | |
| Ignore PRACH Configuration | 0 | | ENUMERATED (true,) | | YES | reject |

|--|

| maxExtendedEARFCN | Maximum value of extended EARFCN, Value is 262143. |
|-----------------------|---|
| maxexichacae/iiti Oil | I Maximum value of extended Exitt Oit. Value is 202170. |

9.3.1.76 Extended Available PLMN List

This IE indicates the list of available PLMN.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------------------|----------|---------------------------------------|-----------------------|-----------------------|
| Extended Available PLMN Item IEs | | 1< maxnoofE xtendedB PLMNs > | | |
| >PLMN Identity | M | | 9.3.1.14 | |

| Range bound | Explanation |
|-----------------------|---|
| maxnoofExtendedBPLMNs | Maximum no. of Extended Broadcast PLMN lds. Value is 6. |

9.3.1.77 Associated SCell List

This IE indicates the list of SCells associated with the RLC entity indicated by the RLC Failure Indication IE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|---------------------------|-----------------------|-----------------------|-------------|----------------------|
| Associated SCell Item IEs | | 1< maxnoofS Cells > | | | - | - |
| >SCell ID | М | | NR CGI 9.3.1.12 | | - | |

| Range bound | Explanation | |
|---------------|--|--|
| maxnoofSCells | Maximum no. of SCells allowed towards one UE, the maximum value is 32. | |

9.3.1.78 Cell Direction

This IE indicates if the cell is either bidirectional or only DL or only UL.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------|----------|-------|-----------------------|-----------------------|
| Cell Direction | M | | ENUMERATED | |
| | | | (dl-only, ul-only) | |

9.3.1.79 Paging Origin

This IE indicates whether Paging is originated due to the PDU sessions from the non-3GPP access.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| Paging Origin | M | | ENUMERATED | |
| | | | (non-3GPP,) | |

9.3.1.80 E-UTRA Transmission Bandwidth

This IE is used to indicate the E-UTRA UL or DL transmission bandwidth expressed in units of resource blocks " N_{RB} " (TS 36.104 [25]). The values bw1, bw6, bw15, bw25, bw50, bw75, bw100 correspond to the number of resource blocks " N_{RB} " 6, 15, 25, 50, 75, 100.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------|----------|-------|--------------------------|-----------------------|
| E-UTRA Transmission | М | | ENUMERATED (bw6, | |
| Bandwidth | | | bw15, bw25, bw50, | |
| | | | bw75, bw100,) | |

9.3.1.81 Message Identifier

This IE identifies the warning message.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|--------------------------|---|
| Message Identifier | М | | BIT STRING (SIZE(16)) | This IE is set by the 5GC, transferred to the UE by the NG- |
| | | | | RAN node. |

9.3.1.82 Serial Number

This IE identifies a particular message from the source and type indicated by the Message Identifier and is altered every time the message with a given Message Identifier is changed.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|--------------------------|-----------------------|
| Serial Number | М | | BIT STRING (SIZE(16)) | |

9.3.1.83 UAC Assistance Information

This information element contains assistance information helping the gNB-DU to set parameters for Unified Access Class barring.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------|----------|---|-------------------------|--|
| UAC PLMN List | | 1 | | |
| >UAC PLMN Item | | 1 <maxnoofuac PLMNs></maxnoofuac | | |
| >>PLMN Identity | M | | 9.3.1.14 | |
| >>UAC Type List | | 1 | | |
| >>>UAC Type Item | | 1 <maxnoofuacp erPLMN></maxnoofuacp | | |
| >>>>UAC Reduction Indication | М | | 9.3.1.85 | |
| >>>>CHOICE UAC Category Type | М | | | |
| >>>>UAC Standardized | | | | |
| >>>>> UAC Action | M | | 9.3.1.84 | |
| >>>>UAC Operator Defined | | | | |
| >>>>Access Category | M | | INTEGER (3263,) | Indicates the operator defined Access Category as defined in subclause 6.3.2 in TS 38.331 [8]. |
| >>>>Access Identity | М | | BIT STRING (SIZE(7)) | Indicates whether access attempt is allowed for each Access Identity as defined in subclause 6.3.2 in TS 38.331 [8]. |

| Range bound | Explanation | | |
|-------------------|--|--|--|
| maxnoofUACPLMNs | Maximum no. of UAC PLMN lds. Value is 12. | | |
| maxnoofUACperPLMN | Maximum no. of signalled categories per PLMN. Value is 64. | | |

9.3.1.84 UAC Action

This IE indicates which signalling traffic is expected to be reduced by the gNB-CU, as defined in clause 8.7.7 of TS 38.413 [3]

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|---|-----------------------|
| UAC Action | M | | ENUMERATED (Reject RRC connection establishments for non-emergency MO DT, Reject RRC connection establishments for Signalling, Permit Emergency Sessions and mobile terminated services only, Permit High Priority Sessions and mobile terminated services only,) | |

9.3.1.85 UAC reduction Indication

This IE indicates the percentage of signalling traffic expected to be reduced by the gNB-CU, relative to the instantaneous incoming rate from the gNB-DU

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------|----------|-------|-----------------------|--|
| UAC reduction Indication | М | | INTEGER (0100) | Value 0 indicates that no access rate reduction is desired. In this version of specification, value 99 indicates the highest desired rate reduction. |

9.3.1.86 Additional SIB Message List

This IE indicates the list of additional SIB messages containing all the remaining segments of a public warning message if segmentation is applied to such message.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---|----------|---|-----------------------|--|
| Additional SIB Message List Item IEs | | 1 <maxnoofadditi onalsibs=""></maxnoofadditi> | | |
| >Additional SIB | М | | OCTET STRING | SIB message containing one segment of a public warning message, as defined in TS 38.331 [8]. |

| Range bound | Explanation |
|-----------------------|--|
| maxnoofAdditionalSIBs | Maximum no. of additional segments of a public warning message. Value is 63. |

9.3.1.87 Cell Type

This IE provides the cell coverage area.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|---|-----------------------|
| Cell Size | M | | ENUMERATED (verysmall, small, medium, large,) | |

9.3.1.87a Configured TAC Indication

This IE indicates that the TAC with which this IE is associated, is only configured for the cell, but not broadcast.

NOTE: This IE is defined in accordance to the possibility foreseen in TS 38.331 [8] to not broadcast the TAC if the NR cell only supports PSCell/SCell functionality.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------------|----------|-------|-----------------------|-----------------------|
| Configured TAC Indication | М | | ENUMERATED | |
| | | | (true,) | |

9.3.2 Transport Network Layer Related IEs

9.3.2.1 UP Transport Layer Information

The *UP Transport Layer Information* IE identifies an F1 transport bearer associated to a DRB. It contains a Transport Layer Address and a GTP Tunnel Endpoint Identifier. The Transport Layer Address is an IP address to be used for the F1 user plane transport. The GTP Tunnel Endpoint Identifier is to be used for the user plane transport between gNB-CU and gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------------|----------|-------|-----------------------|-----------------------|
| CHOICE Transport Layer Information | M | | | |
| >GTP Tunnel | | | | |
| >>Transport Layer Address | M | | 9.3.2.3 | |
| >>GTP-TEID | M | | 9.3.2.2 | |

9.3.2.2 GTP-TEID

The *GTP-TEID* IE is the GTP Tunnel Endpoint Identifier to be used for the user plane transport between the gNB-CU and gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|---------------------------|--|
| GTP-TEID | М | | OCTET STRING (SIZE(4)) | For details and range, see TS 29.281 [18]. |

9.3.2.3 Transport Layer Address

This Transport Layer Address IE is an IP address.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------|----------|-------|-----------------------------|---|
| Transport Layer Address | М | | BIT STRING (SIZE(1160,)) | The Radio Network Layer is not supposed to interpret the address information. It should pass it to the Transport Layer for interpretation. For details, see TS 38.414 [19]. |

9.3.2.4 CP Transport Layer Information

This IE is used to provide the F1 control plane transport layer information associated with a gNB-CU-gNB-DU.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| CHOICE CP Transport | | | | | - | |
| Layer Information | | | | | | |
| >Endpoint-IP-address | | | | | - | |
| >> Endpoint IP | M | | Transport Layer | | - | |
| address | | | Address 9.3.2.3 | | | |
| >Endpoint-IP- | | | | | - | |
| address-and-port | | | | | | |
| >> Endpoint IP | M | | Transport Layer | | - | |
| address | | | Address 9.3.2.3 | | | |
| >> Port Number | M | | BIT STRING | | Yes | reject |
| | | | (SIZE(16)) | | | |

9.4 Message and Information Element Abstract Syntax (with ASN.1)

9.4.1 General

F1AP ASN.1 definition conforms to ITU-T Recommendation X.691 [5], ITU-T Recommendation X.680 [12] and ITU-T Recommendation X.681 [13].

The ASN.1 definition specifies the structure and content of F1AP messages. F1AP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an F1AP message according to the PDU definitions module and with the following additional rules:

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e., an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list where the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

NOTE: In the above "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once in one object set, then the different occurrences will have different IE IDs.

If an F1AP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

9.4.2 Usage of private message mechanism for non-standard use

The private message mechanism for non-standard use may be used:

- for special operator- (and/or vendor) specific features considered not to be part of the basic functionality, i.e., the functionality required for a complete and high-quality specification in order to guarantee multivendor interoperability;
- by vendors for research purposes, e.g., to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.4.3 Elementary Procedure Definitions

```
-- ASN1START
__ *********************
-- Elementary Procedure definitions
__ *****************
F1AP-PDU-Descriptions {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) flap (3) version1 (1) flap-PDU-Descriptions (0)}
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
    ************
-- IE parameter types from other modules.
__ ***********************
IMPORTS
   Criticality,
   ProcedureCode
FROM F1AP-CommonDataTypes
   Reset,
   ResetAcknowledge,
   F1SetupRequest,
   F1SetupResponse,
   F1SetupFailure,
   GNBDUConfigurationUpdate,
   GNBDUConfigurationUpdateAcknowledge,
   GNBDUConfigurationUpdateFailure,
   GNBCUConfigurationUpdate,
   GNBCUConfigurationUpdateAcknowledge,
   GNBCUConfigurationUpdateFailure,
   UEContextSetupRequest,
   UEContextSetupResponse,
   UEContextSetupFailure,
   UEContextReleaseCommand,
   UEContextReleaseComplete,
   UEContextModificationRequest,
   UEContextModificationResponse,
   UEContextModificationFailure,
   UEContextModificationRequired,
   UEContextModificationConfirm,
   ErrorIndication,
   UEContextReleaseRequest,
   DLRRCMessageTransfer,
   ULRRCMessageTransfer,
```

GNBDUResourceCoordinationRequest,

```
GNBDUResourceCoordinationResponse,
    PrivateMessage,
    UEInactivityNotification,
    InitialULRRCMessageTransfer,
    SystemInformationDeliveryCommand,
    Paging,
    Notify,
    WriteReplaceWarningRequest,
    WriteReplaceWarningResponse,
    PWSCancelRequest,
    PWSCancelResponse,
    PWSRestartIndication.
    PWSFailureIndication.
    GNBDUStatusIndication,
    RRCDeliveryReport,
    UEContextModificationRefuse,
    F1RemovalRequest,
    F1RemovalResponse,
    F1RemovalFailure,
    NetworkAccessRateReduction
FROM F1AP-PDU-Contents
    id-Reset,
    id-F1Setup,
    id-qNBDUConfigurationUpdate,
    id-qNBCUConfigurationUpdate,
    id-UEContextSetup,
    id-UEContextRelease,
    id-UEContextModification,
    id-UEContextModificationRequired,
    id-ErrorIndication,
    id-UEContextReleaseRequest,
    id-DLRRCMessageTransfer,
    id-ULRRCMessageTransfer,
    id-GNBDUResourceCoordination,
    id-privateMessage,
    id-UEInactivityNotification,
    id-InitialULRRCMessageTransfer,
    id-SystemInformationDeliveryCommand,
   id-Paging,
    id-Notify,
    id-WriteReplaceWarning,
    id-PWSCancel,
    id-PWSRestartIndication,
   id-PWSFailureIndication,
    id-GNBDUStatusIndication,
    id-RRCDeliveryReport,
    id-F1Removal,
    id-NetworkAccessRateReduction
```

ETSI TS 138 473 V15.15.0 (2021-10)

```
FROM F1AP-Constants
    ProtocolIE-SingleContainer{},
    F1AP-PROTOCOL-IES
FROM F1AP-Containers;
-- Interface Elementary Procedure Class
F1AP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage
    &SuccessfulOutcome
                                                OPTIONAL,
    &UnsuccessfulOutcome
                                                OPTIONAL,
    &procedureCode
                                ProcedureCode
                                                UNIQUE,
    &criticality
                                Criticality
                                                DEFAULT ignore
WITH SYNTAX {
                                &InitiatingMessage
    INITIATING MESSAGE
    [SUCCESSFUL OUTCOME
                                &SuccessfulOutcomel
                                &UnsuccessfulOutcome]
    [UNSUCCESSFUL OUTCOME
                                &procedureCode
    PROCEDURE CODE
                                &criticality]
    [CRITICALITY
-- Interface PDU Definition
F1AP-PDU ::= CHOICE {
    initiatingMessage
                       InitiatingMessage,
    successfulOutcome
                        SuccessfulOutcome,
    unsuccessfulOutcome UnsuccessfulOutcome,
    choice-extension
                        ProtocolIE-SingleContainer { { F1AP-PDU-ExtIEs} }
FlaP-PDU-ExtIEs FlaP-PROTOCOL-IES ::= { -- this extension is not used
InitiatingMessage ::= SEQUENCE
    procedureCode F1AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                     ({F1AP-ELEMENTARY-PROCEDURES}),
    criticality
                    F1AP-ELEMENTARY-PROCEDURE.&criticality
                                                                     ({F1AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
                                                                    ({F1AP-ELEMENTARY-PROCEDURES}{@procedureCode})
    value
                    F1AP-ELEMENTARY-PROCEDURE.&InitiatingMessage
SuccessfulOutcome ::= SEQUENCE {
                                                                     ({F1AP-ELEMENTARY-PROCEDURES}),
    procedureCode F1AP-ELEMENTARY-PROCEDURE.&procedureCode
```

```
({F1AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
   criticality
                  F1AP-ELEMENTARY-PROCEDURE.&criticality
   value
                  F1AP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome
                                                               ({F1AP-ELEMENTARY-PROCEDURES}{@procedureCode})
UnsuccessfulOutcome ::= SEOUENCE {
   procedureCode F1AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                               ({F1AP-ELEMENTARY-PROCEDURES}),
   criticality
                  F1AP-ELEMENTARY-PROCEDURE.&criticality
                                                               ({F1AP-ELEMENTARY-PROCEDURES} {@procedureCode}),
                                                               ({F1AP-ELEMENTARY-PROCEDURES}{@procedureCode})
   value
                  F1AP-ELEMENTARY-PROCEDURE. & UnsuccessfulOutcome
       -- Interface Elementary Procedure List
  F1AP-ELEMENTARY-PROCEDURES F1AP-ELEMENTARY-PROCEDURE ::= {
   F1AP-ELEMENTARY-PROCEDURES-CLASS-1
   F1AP-ELEMENTARY-PROCEDURES-CLASS-2,
   . . .
F1AP-ELEMENTARY-PROCEDURES-CLASS-1 F1AP-ELEMENTARY-PROCEDURE ::= {
   reset
   f1Setup
   qNBDUConfigurationUpdate
   qNBCUConfigurationUpdate
   uEContextSetup
   uEContextRelease
   uEContextModification
   uEContextModificationRequired
   writeReplaceWarning
   pWSCancel
   gNBDUResourceCoordination
   f1Removal
F1AP-ELEMENTARY-PROCEDURES-CLASS-2 F1AP-ELEMENTARY-PROCEDURE ::=
   errorIndication
   uEContextReleaseRequest
   dLRRCMessageTransfer
   uLRRCMessageTransfer
   uEInactivityNotification
   privateMessage
   initialULRRCMessageTransfer
   systemInformationDelivery
   paging
   notify
   pWSRestartIndication
   pWSFailureIndication
   gNBDUStatusIndication
   rRCDeliveryReport
```

```
networkAccessRateReduction
-- Interface Elementary Procedures
  *****************
reset F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                           ResetAcknowledge
                           id-Reset
    PROCEDURE CODE
    CRITICALITY
                           reject
f1Setup F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           F1SetupRequest
                           F1SetupResponse
    SUCCESSFUL OUTCOME
                           F1SetupFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                           id-F1Setup
                           reject
    CRITICALITY
gNBDUConfigurationUpdate F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           GNBDUConfigurationUpdate
                           GNBDUConfigurationUpdateAcknowledge
    SUCCESSFUL OUTCOME
                           GNBDUConfigurationUpdateFailure
    UNSUCCESSFUL OUTCOME
                           id-qNBDUConfigurationUpdate
    PROCEDURE CODE
                           reject
    CRITICALITY
gNBCUConfigurationUpdate F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           GNBCUConfigurationUpdate
                           GNBCUConfigurationUpdateAcknowledge
    SUCCESSFUL OUTCOME
                           GNBCUConfigurationUpdateFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                           id-gNBCUConfigurationUpdate
                           reject
    CRITICALITY
uEContextSetup F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           UEContextSetupRequest
                           UEContextSetupResponse
    SUCCESSFUL OUTCOME
                           UEContextSetupFailure
    UNSUCCESSFUL OUTCOME
                           id-UEContextSetup
    PROCEDURE CODE
    CRITICALITY
                           reject
uEContextRelease F1AP-ELEMENTARY-PROCEDURE ::= {
                           UEContextReleaseCommand
    INITIATING MESSAGE
                           UEContextReleaseComplete
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                           id-UEContextRelease
    CRITICALITY
                           reject
```

```
uEContextModification F1AP-ELEMENTARY-PROCEDURE ::= {
                            UEContextModificationRequest
    INITIATING MESSAGE
                            UEContextModificationResponse
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            UEContextModificationFailure
                            id-UEContextModification
    PROCEDURE CODE
    CRITICALITY
                            reject
uEContextModificationRequired F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            UEContextModificationRequired
                            UEContextModificationConfirm
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            UEContextModificationRefuse
    PROCEDURE CODE
                            id-UEContextModificationRequired
    CRITICALITY
                            reject
writeReplaceWarning F1AP-ELEMENTARY-PROCEDURE ::= {
                            WriteReplaceWarningRequest
    INITIATING MESSAGE
                            WriteReplaceWarningResponse
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-WriteReplaceWarning
                            reject
    CRITICALITY
pwsCancel F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            PWSCancelRequest
                            PWSCancelResponse
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-PWSCancel
                            reject
    CRITICALITY
errorIndication F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ErrorIndication
    PROCEDURE CODE
                            id-ErrorIndication
    CRITICALITY
                            ignore
uEContextReleaseRequest F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            UEContextReleaseRequest
    PROCEDURE CODE
                            id-UEContextReleaseRequest
    CRITICALITY
                            ignore
initialULRRCMessageTransfer F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            InitialULRRCMessageTransfer
    PROCEDURE CODE
                            id-InitialULRRCMessageTransfer
    CRITICALITY
                            ignore
dLRRCMessageTransfer F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            DLRRCMessageTransfer
    PROCEDURE CODE
                            id-DLRRCMessageTransfer
    CRITICALITY
                            ignore
```

```
uLRRCMessageTransfer F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ULRRCMessageTransfer
    PROCEDURE CODE
                            id-ULRRCMessageTransfer
    CRITICALITY
                            ignore
uEInactivityNotification F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            UEInactivityNotification
    PROCEDURE CODE
                            id-UEInactivityNotification
    CRITICALITY
                            ignore
qNBDUResourceCoordination F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            GNBDUResourceCoordinationRequest
                            GNBDUResourceCoordinationResponse
    SUCCESSFUL OUTCOME
                            id-GNBDUResourceCoordination
    PROCEDURE CODE
    CRITICALITY
                            reject
privateMessage F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            PrivateMessage
    PROCEDURE CODE
                            id-privateMessage
    CRITICALITY
                            ignore
systemInformationDelivery F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SystemInformationDeliveryCommand
    PROCEDURE CODE
                            id-SystemInformationDeliveryCommand
    CRITICALITY
                            ignore
paging F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            Paging
                            id-Paging
    PROCEDURE CODE
    CRITICALITY
                            ignore
notify F1AP-ELEMENTARY-PROCEDURE ::= {
                            Notify
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-Notify
    CRITICALITY
                            ignore
networkAccessRateReduction F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            NetworkAccessRateReduction
                            id-NetworkAccessRateReduction
    PROCEDURE CODE
    CRITICALITY
                            ignore
```

```
pWSRestartIndication F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            PWSRestartIndication
    PROCEDURE CODE
                            id-PWSRestartIndication
    CRITICALITY
                            ignore
pWSFailureIndication F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            PWSFailureIndication
    PROCEDURE CODE
                            id-PWSFailureIndication
    CRITICALITY
                            ignore
gNBDUStatusIndication F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            GNBDUStatusIndication
    PROCEDURE CODE
                            id-GNBDUStatusIndication
    CRITICALITY
                            ignore
rRCDeliveryReport F1AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RRCDeliveryReport
                            id-RRCDeliveryReport
    PROCEDURE CODE
    CRITICALITY
                            ignore
f1Removal F1AP-ELEMENTARY-PROCEDURE ::= {
                            F1RemovalRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            F1RemovalResponse
                            F1RemovalFailure
   UNSUCCESSFUL OUTCOME
                            id-F1Removal
    PROCEDURE CODE
    CRITICALITY
                            reject
END
-- ASN1STOP
```

9.4.4 PDU Definitions

```
*******************
-- IE parameter types from other modules.
__ *******************
IMPORTS
   Candidate-SpCell-Item,
   Cause,
   Cells-Failed-to-be-Activated-List-Item,
   Cells-Status-Item,
   Cells-to-be-Activated-List-Item,
   Cells-to-be-Deactivated-List-Item.
   CellULConfigured,
   CriticalityDiagnostics,
   C-RNTI,
   CUtoDURRCInformation,
   DRB-Activity-Item,
   DRBID,
   DRBs-FailedToBeModified-Item,
   DRBs-FailedToBeSetup-Item,
   DRBs-FailedToBeSetupMod-Item,
   DRB-Notify-Item,
   DRBs-ModifiedConf-Item,
   DRBs-Modified-Item.
   DRBs-Required-ToBeModified-Item,
   DRBs-Required-ToBeReleased-Item,
   DRBs-Setup-Item,
   DRBs-SetupMod-Item,
   DRBs-ToBeModified-Item,
   DRBs-ToBeReleased-Item,
   DRBs-ToBeSetup-Item,
   DRBs-ToBeSetupMod-Item,
   DRXCycle,
   DRXConfigurationIndicator,
   DUtoCURRCInformation,
   EUTRANOOS,
   ExecuteDuplication,
   FullConfiguration,
   GNB-CU-UE-F1AP-ID,
   GNB-DU-UE-F1AP-ID,
   GNB-DU-ID,
   GNB-DU-Served-Cells-Item,
   GNB-DU-System-Information,
   GNB-CU-Name,
   GNB-DU-Name,
   InactivityMonitoringRequest,
   InactivityMonitoringResponse,
   NotificationControl,
   NRCGI,
   NRPCI,
   UEContextNotRetrievable,
   Potential-SpCell-Item,
```

```
RAT-FrequencyPriorityInformation,
ResourceCoordinationTransferContainer,
RRCContainer.
RRCContainer-RRCSetupComplete,
RRCReconfigurationCompleteIndicator,
SCellIndex,
SCell-ToBeRemoved-Item.
SCell-ToBeSetup-Item,
SCell-ToBeSetupMod-Item,
SCell-FailedtoSetup-Item,
SCell-FailedtoSetupMod-Item,
ServCellIndex,
Served-Cell-Information,
Served-Cells-To-Add-Item.
Served-Cells-To-Delete-Item,
Served-Cells-To-Modify-Item,
ServingCellMO,
SRBID,
SRBs-FailedToBeSetup-Item,
SRBs-FailedToBeSetupMod-Item,
SRBs-Required-ToBeReleased-Item,
SRBs-ToBeReleased-Item,
SRBs-ToBeSetup-Item,
SRBs-ToBeSetupMod-Item,
SRBs-Modified-Item,
SRBs-Setup-Item,
SRBs-SetupMod-Item,
TimeToWait,
TransactionID,
TransmissionActionIndicator,
UE-associatedLogicalF1-ConnectionItem,
DUtoCURRCContainer,
PagingCell-Item,
SItype-List,
UEIdentityIndexValue,
GNB-CU-TNL-Association-Setup-Item,
GNB-CU-TNL-Association-Failed-To-Setup-Item,
GNB-CU-TNL-Association-To-Add-Item,
GNB-CU-TNL-Association-To-Remove-Item,
GNB-CU-TNL-Association-To-Update-Item,
MaskedIMEISV,
PagingDRX,
PagingPriority,
PagingIdentity,
Cells-to-be-Barred-Item,
PWSSvstemInformation,
Broadcast-To-Be-Cancelled-Item,
Cells-Broadcast-Cancelled-Item,
NR-CGI-List-For-Restart-Item,
PWS-Failed-NR-CGI-Item,
RepetitionPeriod,
NumberofBroadcastRequest,
Cells-To-Be-Broadcast-Item,
Cells-Broadcast-Completed-Item,
```

```
Cancel-all-Warning-Messages-Indicator,
    EUTRA-NR-CellResourceCoordinationReg-Container,
    EUTRA-NR-CellResourceCoordinationRegAck-Container,
    RequestType,
    PLMN-Identity,
    RLCFailureIndication,
    UplinkTxDirectCurrentListInformation,
    SULAccessIndication,
    Protected-EUTRA-Resources-Item.
    GNB-DUConfigurationOuery,
    BitRate.
    RRC-Version,
    GNBDUOverloadInformation,
    RRCDeliveryStatusRequest,
    NeedforGap,
    RRCDeliveryStatus,
    ResourceCoordinationTransferInformation,
    Dedicated-SIDelivery-NeededUE-Item,
    Associated-SCell-Item,
    IgnoreResourceCoordinationContainer,
    PagingOrigin,
    UAC-Assistance-Info,
    RANUEID,
    GNB-DU-TNL-Association-To-Remove-Item,
   NotificationInformation,
    SCGIndicator
FROM F1AP-TES
    PrivateIE-Container{},
    ProtocolExtensionContainer{},
    ProtocolIE-Container{},
    ProtocolIE-ContainerPair{},
    ProtocolIE-SingleContainer{},
    F1AP-PRIVATE-IES,
    F1AP-PROTOCOL-EXTENSION,
    F1AP-PROTOCOL-IES,
    F1AP-PROTOCOL-IES-PAIR
FROM F1AP-Containers
    id-Candidate-SpCell-Item,
    id-Candidate-SpCell-List,
    id-Cause,
    id-Cancel-all-Warning-Messages-Indicator,
    id-Cells-Failed-to-be-Activated-List,
    id-Cells-Failed-to-be-Activated-List-Item,
    id-Cells-Status-Item,
    id-Cells-Status-List,
    id-Cells-to-be-Activated-List,
    id-Cells-to-be-Activated-List-Item,
    id-Cells-to-be-Deactivated-List,
    id-Cells-to-be-Deactivated-List-Item,
```

```
id-ConfirmedUEID,
id-CriticalityDiagnostics,
id-C-RNTI.
id-CUtoDURRCInformation,
id-DRB-Activity-Item,
id-DRB-Activity-List,
id-DRBs-FailedToBeModified-Item.
id-DRBs-FailedToBeModified-List,
id-DRBs-FailedToBeSetup-Item,
id-DRBs-FailedToBeSetup-List,
id-DRBs-FailedToBeSetupMod-Item,
id-DRBs-FailedToBeSetupMod-List,
id-DRBs-ModifiedConf-Item,
id-DRBs-ModifiedConf-List.
id-DRBs-Modified-Item,
id-DRBs-Modified-List,
id-DRB-Notify-Item,
id-DRB-Notify-List,
id-DRBs-Required-ToBeModified-Item,
id-DRBs-Required-ToBeModified-List,
id-DRBs-Required-ToBeReleased-Item,
id-DRBs-Required-ToBeReleased-List,
id-DRBs-Setup-Item,
id-DRBs-Setup-List,
id-DRBs-SetupMod-Item,
id-DRBs-SetupMod-List,
id-DRBs-ToBeModified-Item,
id-DRBs-ToBeModified-List,
id-DRBs-ToBeReleased-Item,
id-DRBs-ToBeReleased-List,
id-DRBs-ToBeSetup-Item,
id-DRBs-ToBeSetup-List,
id-DRBs-ToBeSetupMod-Item,
id-DRBs-ToBeSetupMod-List,
id-DRXCvcle,
id-DUtoCURRCInformation,
id-ExecuteDuplication,
id-FullConfiguration,
id-qNB-CU-UE-F1AP-ID,
id-qNB-DU-UE-F1AP-ID,
id-qNB-DU-ID,
id-GNB-DU-Served-Cells-Item,
id-qNB-DU-Served-Cells-List,
id-qNB-CU-Name,
id-qNB-DU-Name,
id-InactivityMonitoringRequest,
id-InactivityMonitoringResponse,
id-new-gNB-CU-UE-F1AP-ID,
id-new-gNB-DU-UE-F1AP-ID,
id-oldqNB-DU-UE-F1AP-ID,
id-PLMNAssistanceInfoForNetShar,
id-Potential-SpCell-Item,
id-Potential-SpCell-List,
id-RAT-FrequencyPriorityInformation,
```

```
id-RedirectedRRCmessage,
id-ResetType,
id-ResourceCoordinationTransferContainer.
id-RRCContainer.
id-RRCContainer-RRCSetupComplete,
id-RRCReconfigurationCompleteIndicator,
id-SCell-FailedtoSetup-List,
id-SCell-FailedtoSetup-Item,
id-SCell-FailedtoSetupMod-List,
id-SCell-FailedtoSetupMod-Item,
id-SCell-ToBeRemoved-Item,
id-SCell-ToBeRemoved-List,
id-SCell-ToBeSetup-Item,
id-SCell-ToBeSetup-List,
id-SCell-ToBeSetupMod-Item,
id-SCell-ToBeSetupMod-List,
id-SelectedPLMNID,
id-Served-Cells-To-Add-Item,
id-Served-Cells-To-Add-List,
id-Served-Cells-To-Delete-Item,
id-Served-Cells-To-Delete-List,
id-Served-Cells-To-Modify-Item,
id-Served-Cells-To-Modify-List,
id-ServCellIndex,
id-ServingCellMO,
id-SpCell-ID,
id-SpCellULConfigured,
id-SRBID,
id-SRBs-FailedToBeSetup-Item,
id-SRBs-FailedToBeSetup-List,
id-SRBs-FailedToBeSetupMod-Item,
id-SRBs-FailedToBeSetupMod-List,
id-SRBs-Required-ToBeReleased-Item,
id-SRBs-Required-ToBeReleased-List,
id-SRBs-ToBeReleased-Item,
id-SRBs-ToBeReleased-List,
id-SRBs-ToBeSetup-Item,
id-SRBs-ToBeSetup-List,
id-SRBs-ToBeSetupMod-Item,
id-SRBs-ToBeSetupMod-List,
id-SRBs-Modified-Item,
id-SRBs-Modified-List,
id-SRBs-Setup-Item,
id-SRBs-Setup-List,
id-SRBs-SetupMod-Item,
id-SRBs-SetupMod-List,
id-TimeToWait,
id-TransactionID,
id-TransmissionActionIndicator,
id-UEContextNotRetrievable,
id-UE-associatedLogicalF1-ConnectionItem,
id-UE-associatedLogicalF1-ConnectionListResAck,
id-DUtoCURRCContainer,
id-NRCGI,
```

```
id-PagingCell-Item,
id-PagingCell-List,
id-PagingDRX.
id-PagingPriority,
id-SItype-List,
id-UEIdentityIndexValue,
id-GNB-CU-TNL-Association-Setup-List,
id-GNB-CU-TNL-Association-Setup-Item,
id-GNB-CU-TNL-Association-Failed-To-Setup-List,
id-GNB-CU-TNL-Association-Failed-To-Setup-Item,
id-GNB-CU-TNL-Association-To-Add-Item,
id-GNB-CU-TNL-Association-To-Add-List,
id-GNB-CU-TNL-Association-To-Remove-Item,
id-GNB-CU-TNL-Association-To-Remove-List.
id-GNB-CU-TNL-Association-To-Update-Item,
id-GNB-CU-TNL-Association-To-Update-List,
id-MaskedIMEISV,
id-PagingIdentity,
id-Cells-to-be-Barred-List,
id-Cells-to-be-Barred-Item,
id-PWSSystemInformation,
id-RepetitionPeriod,
id-NumberofBroadcastRequest,
id-Cells-To-Be-Broadcast-List,
id-Cells-To-Be-Broadcast-Item,
id-Cells-Broadcast-Completed-List,
id-Cells-Broadcast-Completed-Item,
id-Broadcast-To-Be-Cancelled-List,
id-Broadcast-To-Be-Cancelled-Item,
id-Cells-Broadcast-Cancelled-List,
id-Cells-Broadcast-Cancelled-Item,
id-NR-CGI-List-For-Restart-List,
id-NR-CGI-List-For-Restart-Item,
id-PWS-Failed-NR-CGI-List,
id-PWS-Failed-NR-CGI-Item,
id-EUTRA-NR-CellResourceCoordinationReg-Container,
id-EUTRA-NR-CellResourceCoordinationReqAck-Container,
id-Protected-EUTRA-Resources-List,
id-RequestType,
id-ServingPLMN,
id-DRXConfigurationIndicator,
id-RLCFailureIndication,
id-UplinkTxDirectCurrentListInformation,
id-SULAccessIndication,
id-Protected-EUTRA-Resources-Item,
id-GNB-DUConfigurationQuery,
id-GNB-DU-UE-AMBR-UL,
id-GNB-CU-RRC-Version,
id-GNB-DU-RRC-Version,
id-GNBDUOverloadInformation,
id-NeedforGap,
id-RRCDeliveryStatusRequest,
id-RRCDeliveryStatus,
id-Dedicated-SIDelivery-NeededUE-List,
```

```
id-Dedicated-SIDelivery-NeededUE-Item,
   id-ResourceCoordinationTransferInformation,
   id-Associated-SCell-List.
   id-Associated-SCell-Item,
   id-IgnoreResourceCoordinationContainer,
   id-UAC-Assistance-Info,
   id-RANUEID,
   id-PagingOrigin,
   id-GNB-DU-TNL-Association-To-Remove-Item,
   id-GNB-DU-TNL-Association-To-Remove-List,
   id-NotificationInformation,
   id-SCGIndicator,
   maxCellingNBDU,
   maxnoofCandidateSpCells,
   maxnoofDRBs,
   maxnoofErrors,
   maxnoofIndividualF1ConnectionsToReset,
   maxnoofPotentialSpCells,
   maxnoofSCells,
   maxnoofSRBs,
   maxnoofPagingCells,
   maxnoofTNLAssociations,
   maxCellineNB,
   maxnoofUEIDs
FROM F1AP-Constants;
  ******************
-- RESET ELEMENTARY PROCEDURE
  ****************
-- Reset
__ ********************
Reset ::= SEQUENCE {
                                              { {ResetIEs} },
   protocolIEs
                     ProtocolIE-Container
   . . .
ResetIEs F1AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                    CRITICALITY reject TYPE TransactionID
                                                                                   PRESENCE mandatory
     ID id-Cause
                                    CRITICALITY ignore TYPE Cause
                                                                                   PRESENCE mandatory
    { ID id-ResetType
                                    CRITICALITY reject TYPE ResetType
                                                                                   PRESENCE mandatory
```

```
ResetType ::= CHOICE {
   f1-Interface
                             ResetAll.
   partOfF1-Interface
                             UE-associatedLogicalF1-ConnectionListRes,
   choice-extension
                             ProtocolIE-SingleContainer { { ResetType-ExtIEs} }
ResetType-ExtIEs F1AP-PROTOCOL-IES ::= {
ResetAll ::= ENUMERATED {
   reset-all,
UE-associatedLogicalF1-ConnectionListRes ::= SEOUENCE (SIZE(1.. maxnoofIndividualF1ConnectionsToReset)) OF ProtocolIE-SingleContainer { { UE-
associatedLogicalF1-ConnectionItemRes } }
UE-associatedLogicalF1-ConnectionItemRes F1AP-PROTOCOL-IES ::= {
   . . .
  ****************
-- Reset Acknowledge
  ****************
ResetAcknowledge ::= SEQUENCE {
                   ProtocolIE-Container
                                         { {ResetAcknowledgeIEs} },
   protocolIEs
   . . .
ResetAcknowledgeIEs F1AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                                CRITICALITY reject TYPE TransactionID
                                                                                                              PRESENCE
mandatory }|
   { ID id-UE-associatedLogicalF1-ConnectionListResAck
                                                CRITICALITY ignore TYPE UE-associatedLogicalF1-ConnectionListResAck
                                                                                                              PRESENCE
optional }
   { ID id-CriticalityDiagnostics
                                CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                             PRESENCE optional },
   . . .
UE-associatedLogicalF1-ConnectionListResAck ::= SEQUENCE (SIZE(1.. maxnoofIndividualF1ConnectionsToReset)) OF ProtocolIE-SingleContainer { { UE-
associatedLogicalF1-ConnectionItemResAck } }
UE-associatedLogicalF1-ConnectionItemResAck
                                      F1AP-PROTOCOL-IES ::= {
   TYPE UE-associatedLogicalF1-ConnectionItem PRESENCE mandatory },
__ **********************
```

140

```
-- ERROR INDICATION ELEMENTARY PROCEDURE
__ *********************
  *******************
-- Error Indication
****************
ErrorIndication ::= SEQUENCE {
                                        {{ErrorIndicationIEs}},
   protocolIEs ProtocolIE-Container
ErrorIndicationIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                               CRITICALITY reject TYPE TransactionID
                                                                         PRESENCE mandatory }
    ID id-gNB-CU-UE-F1AP-ID
                                CRITICALITY ignore TYPE GNB-CU-UE-F1AP-ID
                                                                         PRESENCE optional }
                                                                         PRESENCE optional }
    ID id-gNB-DU-UE-F1AP-ID
                               CRITICALITY ignore TYPE GNB-DU-UE-F1AP-ID
    ID id-Cause
                                CRITICALITY ignore TYPE Cause
                                                                         PRESENCE optional }
   { ID id-CriticalityDiagnostics
                                CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                         PRESENCE optional },
  *****************
-- F1 SETUP ELEMENTARY PROCEDURE
     *************
    -- F1 Setup Request
__ *********************
F1SetupRequest ::= SEOUENCE {
                                        { {F1SetupRequestIEs} },
                  ProtocolIE-Container
   protocolIEs
   . . .
F1SetupRequestIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                                   CRITICALITY reject TYPE TransactionID
                                                                            PRESENCE mandatory }
    ID id-qNB-DU-ID
                                   CRITICALITY reject TYPE GNB-DU-ID
                                                                             PRESENCE mandatory
                                                                            PRESENCE optional
    ID id-gNB-DU-Name
                                   CRITICALITY ignore TYPE GNB-DU-Name
    ID id-gNB-DU-Served-Cells-List
                                   CRITICALITY reject TYPE GNB-DU-Served-Cells-List PRESENCE optional
   { ID id-GNB-DU-RRC-Version
                                   CRITICALITY reject TYPE RRC-Version
                                                                             PRESENCE mandatory },
GNB-DU-Served-Cells-List
                     ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { GNB-DU-Served-Cells-ItemIEs } }
```

```
GNB-DU-Served-Cells-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-GNB-DU-Served-Cells-Item
                                         CRITICALITY reject TYPE
                                                                       GNB-DU-Served-Cells-Item PRESENCE mandatory },
-- F1 Setup Response
__ ********************
F1SetupResponse ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                                { {F1SetupResponseIEs} },
F1SetupResponseIEs F1AP-PROTOCOL-IES ::= {
     ID id-TransactionID
                                     CRITICALITY reject TYPE TransactionID
                                                                                          PRESENCE mandatory }
     ID id-gNB-CU-Name
                                     CRITICALITY ignore TYPE GNB-CU-Name
                                                                                          PRESENCE optional
     ID id-Cells-to-be-Activated-List CRITICALITY reject TYPE Cells-to-be-Activated-List
                                                                                          PRESENCE optional
    { ID id-GNB-CU-RRC-Version
                                     CRITICALITY reject TYPE RRC-Version
                                                                                          PRESENCE mandatory },
Cells-to-be-Activated-List ::= SEOUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Cells-to-be-Activated-List-ItemIEs } }
Cells-to-be-Activated-List-ItemIEs F1AP-PROTOCOL-IES::= {
   { ID id-Cells-to-be-Activated-List-Item
                                                    CRITICALITY reject TYPE Cells-to-be-Activated-List-Item
                                                                                                                        PRESENCE mandatory },
-- F1 Setup Failure
__ *******************************
F1SetupFailure ::= SEQUENCE {
                      ProtocolIE-Container
                                                { {F1SetupFailureIEs} },
   protocolIEs
   . . .
F1SetupFailureIEs F1AP-PROTOCOL-IES ::= {
    { ID id-TransactionID
                                     CRITICALITY reject TYPE TransactionID
                                                                                      PRESENCE mandatory
     ID id-Cause
                                                                                      PRESENCE mandatory
                                     CRITICALITY ignore TYPE Cause
     ID id-TimeToWait
                                                                                      PRESENCE optional } |
                                     CRITICALITY ignore TYPE TimeToWait
   { ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                      PRESENCE optional },
```

```
-- GNB-DU CONFIGURATION UPDATE ELEMENTARY PROCEDURE
-- GNB-DU CONFIGURATION UPDATE
GNBDUConfigurationUpdate::= SEQUENCE {
                      ProtocolIE-Container
   protocolIEs
                                                 { GNBDUConfigurationUpdateIEs} },
    . . .
GNBDUConfigurationUpdateIEs F1AP-PROTOCOL-IES ::= {
     ID id-TransactionID
                                                  CRITICALITY reject TYPE TransactionID
                                                                                                                        PRESENCE mandatory } |
     ID id-Served-Cells-To-Add-List
                                                  CRITICALITY reject TYPE Served-Cells-To-Add-List
                                                                                                                       PRESENCE optional
     ID id-Served-Cells-To-Modify-List
                                                  CRITICALITY reject TYPE Served-Cells-To-Modify-List
                                                                                                                       PRESENCE optional
     ID id-Served-Cells-To-Delete-List
                                                                                                                       PRESENCE optional
                                                  CRITICALITY reject TYPE Served-Cells-To-Delete-List
     ID id-Cells-Status-List
                                                  CRITICALITY reject TYPE Cells-Status-List
                                                                                                                       PRESENCE optional
     ID id-Dedicated-SIDelivery-NeededUE-List
                                                  CRITICALITY ignore TYPE Dedicated-SIDelivery-NeededUE-List
                                                                                                                       PRESENCE optional
                                                                                                                       PRESENCE optional }
     ID id-qNB-DU-ID
                                                  CRITICALITY reject TYPE GNB-DU-ID
     ID id-GNB-DU-TNL-Association-To-Remove-List CRITICALITY reject TYPE
                                                                             GNB-DU-TNL-Association-To-Remove-List
                                                                                                                       PRESENCE optional },
Served-Cells-To-Add-List
                              ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Served-Cells-To-Add-ItemIEs } }
Served-Cells-To-Modify-List ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Served-Cells-To-Modify-ItemIEs } }
Served-Cells-To-Delete-List ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { Served-Cells-To-Delete-ItemIEs }
Cells-Status-List ::= SEOUENCE (SIZE(0.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Cells-Status-ItemIEs } }
Dedicated-SIDelivery-NeededUE-List::= SEQUENCE (SIZE(1.. maxnoofUEIDs)) OF ProtocolIE-SingleContainer { { Dedicated-SIDelivery-NeededUE-ItemIEs } }
GNB-DU-TNL-Association-To-Remove-List ::= SEQUENCE (SIZE(1.. maxnoofTNLAssociations)) OF ProtocolIE-SingleContainer { GNB-DU-TNL-Association-
To-Remove-ItemIEs } }
Served-Cells-To-Add-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-Served-Cells-To-Add-Item
                                          CRITICALITY reject TYPE Served-Cells-To-Add-Item
                                                                                                      PRESENCE mandatory
    . . .
Served-Cells-To-Modify-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-Served-Cells-To-Modify-Item
                                              CRITICALITY reject TYPE
                                                                            Served-Cells-To-Modify-Item
                                                                                                                          PRESENCE mandatory
Served-Cells-To-Delete-ItemIEs F1AP-PROTOCOL-IES
```

```
{ ID id-Served-Cells-To-Delete-Item
                                               CRITICALITY reject TYPE
                                                                             Served-Cells-To-Delete-Item
                                                                                                                  PRESENCE mandatory },
Cells-Status-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-Cells-Status-Item
                                        CRITICALITY reject TYPE
                                                                     Cells-Status-Item
                                                                                                  PRESENCE mandatory },
   . . .
Dedicated-SIDelivery-NeededUE-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-Dedicated-SIDelivery-NeededUE-Item
                                            CRITICALITY ignore TYPE Dedicated-SIDelivery-NeededUE-Item
                                                                                                                  PRESENCE mandatory },
   . . .
GNB-DU-TNL-Association-To-Remove-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-GNB-DU-TNL-Association-To-Remove-Item
                                                   CRITICALITY reject TYPE
                                                                              GNB-DU-TNL-Association-To-Remove-Item
                                                                                                                       PRESENCE
mandatory },
__ *********************
-- GNB-DU CONFIGURATION UPDATE ACKNOWLEDGE
  *******************
GNBDUConfigurationUpdateAcknowledge ::= SEQUENCE {
                                               { GNBDUConfigurationUpdateAcknowledgeIEs} },
   protocolIEs
                     ProtocolIE-Container
GNBDUConfigurationUpdateAcknowledgeIEs F1AP-PROTOCOL-IES ::= {
                                           CRITICALITY reject TYPE TransactionID
     ID id-TransactionID
                                                                                                    PRESENCE mandatory } |
     ID id-Cells-to-be-Activated-List
                                         CRITICALITY reject TYPE Cells-to-be-Activated-List
                                                                                                    PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                                                                    PRESENCE optional }
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                    PRESENCE optional },
     ID id-Cells-to-be-Deactivated-List
                                            CRITICALITY reject TYPE Cells-to-be-Deactivated-List
-- GNB-DU CONFIGURATION UPDATE FAILURE
__ ********************
GNBDUConfigurationUpdateFailure ::= SEQUENCE {
   protocolIEs
                     ProtocolIE-Container
                                               { GNBDUConfigurationUpdateFailureIEs} },
   . . .
GNBDUConfigurationUpdateFailureIEs F1AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                    CRITICALITY reject TYPE TransactionID
                                                                                    PRESENCE mandatory } |
```

```
ID id-Cause
                                      CRITICALITY ignore TYPE Cause
                                                                                       PRESENCE mandatory }
     ID id-TimeToWait
                                      CRITICALITY ignore TYPE TimeToWait
                                                                                       PRESENCE optional } |
                                      CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-CriticalityDiagnostics
                                                                                       PRESENCE optional },
-- GNB-CU CONFIGURATION UPDATE ELEMENTARY PROCEDURE
  *******************
      ******************
-- GNB-CU CONFIGURATION UPDATE
GNBCUConfigurationUpdate ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                                . . .
GNBCUConfigurationUpdateIEs F1AP-PROTOCOL-IES ::= {
     ID id-TransactionID
                                                                                                                      PRESENCE mandatory
                                                 CRITICALITY reject TYPE TransactionID
     ID id-Cells-to-be-Activated-List
                                                                             Cells-to-be-Activated-List
                                                                                                                      PRESENCE optional
                                                 CRITICALITY reject TYPE
     ID id-Cells-to-be-Deactivated-List
                                                                                                                      PRESENCE optional
                                                 CRITICALITY reject TYPE
                                                                             Cells-to-be-Deactivated-List
     ID id-GNB-CU-TNL-Association-To-Add-List
                                                 CRITICALITY ignore TYPE
                                                                             GNB-CU-TNL-Association-To-Add-List
                                                                                                                      PRESENCE optional
     ID id-GNB-CU-TNL-Association-To-Remove-List
                                                 CRITICALITY ignore TYPE
                                                                             GNB-CU-TNL-Association-To-Remove-List
                                                                                                                      PRESENCE optional
     ID id-GNB-CU-TNL-Association-To-Update-List
                                                 CRITICALITY ignore TYPE
                                                                             GNB-CU-TNL-Association-To-Update-List
                                                                                                                      PRESENCE optional
     ID id-Cells-to-be-Barred-List
                                                 CRITICALITY ignore TYPE
                                                                             Cells-to-be-Barred-List
                                                                                                                      PRESENCE optional }
     ID id-Protected-EUTRA-Resources-List
                                                                             Protected-EUTRA-Resources-List
                                                                                                                      PRESENCE optional },
                                                 CRITICALITY reject TYPE
   . . .
Cells-to-be-Deactivated-List ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Cells-to-be-Deactivated-List-ItemIEs } }
GNB-CU-TNL-Association-To-Add-List
                                      ::= SEQUENCE (SIZE(1.. maxnoofTNLAssociations)) OF ProtocolIE-SingleContainer { { GNB-CU-TNL-Association-
To-Add-ItemIEs } }
                                     ::= SEQUENCE (SIZE(1.. maxnoofTNLAssociations)) OF ProtocolIE-SingleContainer { { GNB-CU-TNL-Association-
GNB-CU-TNL-Association-To-Remove-List
To-Remove-ItemIEs } }
GNB-CU-TNL-Association-To-Update-List ::= SEQUENCE (SIZE(1.. maxnoofTNLAssociations)) OF ProtocolIE-SingleContainer { GNB-CU-TNL-Association-
To-Update-ItemIEs } }
Cells-to-be-Barred-List
                              ::= SEQUENCE(SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Cells-to-be-Barred-ItemIEs } }
Cells-to-be-Deactivated-List-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-Cells-to-be-Deactivated-List-Item
                                                                 CRITICALITY reject TYPE
                                                                                           Cells-to-be-Deactivated-List-Item
   PRESENCE mandatory },
    . . .
GNB-CU-TNL-Association-To-Add-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-GNB-CU-TNL-Association-To-Add-Item
                                                 CRITICALITY ignore TYPE
                                                                             GNB-CU-TNL-Association-To-Add-Item
                                                                                                                   PRESENCE mandatory },
```

```
GNB-CU-TNL-Association-To-Remove-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-GNB-CU-TNL-Association-To-Remove-Item
                                          CRITICALITY ignore TYPE
                                                                      GNB-CU-TNL-Association-To-Remove-Item
                                                                                                            PRESENCE
mandatory },
GNB-CU-TNL-Association-To-Update-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-GNB-CU-TNL-Association-To-Update-Item
                                          CRITICALITY ignore TYPE
                                                                   GNB-CU-TNL-Association-To-Update-Item
                                                                                                            PRESENCE
mandatory },
   . . .
Cells-to-be-Barred-ItemIEs F1AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
Protected-EUTRA-Resources-List ::= SEQUENCE (SIZE(1.. maxCellineNB)) OF ProtocolIE-SingleContainer { { Protected-EUTRA-Resources-ItemIEs } }
Protected-EUTRA-Resources-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-Protected-EUTRA-Resources-Item
                                                  CRITICALITY reject TYPE Protected-EUTRA-Resources-Item
                                                                                                               PRESENCE
mandatory \ .
-- GNB-CU CONFIGURATION UPDATE ACKNOWLEDGE
__ ******************
GNBCUConfigurationUpdateAcknowledge ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          { GNBCUConfigurationUpdateAcknowledgeIEs} },
   . . .
GNBCUConfigurationUpdateAcknowledgeIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                                       CRITICALITY reject TYPE TransactionID
                                                                                             PRESENCE mandatory }
    ID id-Cells-Failed-to-be-Activated-List CRITICALITY reject TYPE Cells-Failed-to-be-Activated-List
                                                                                             PRESENCE optional |
    ID id-CriticalityDiagnostics
                                                                                             PRESENCE optional }
                                       CRITICALITY ignore TYPE CriticalityDiagnostics
   GNB-CU-TNL-Association-Setup-List
                                                                                                       PRESENCE optional } |
    ID id-GNB-CU-TNL-Association-Failed-To-Setup-List CRITICALITY ignore TYPE GNB-CU-TNL-Association-Failed-To-Setup-List
   PRESENCE optional }
   PRESENCE optional },
   . . .
Cells-Failed-to-be-Activated-List ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Cells-Failed-to-be-Activated-List-
GNB-CU-TNL-Association-Setup-List ::= SEQUENCE (SIZE(1.. maxnoofTNLAssociations)) OF ProtocolIE-SingleContainer { GNB-CU-TNL-Association-Setup-
ItemIEs } }
```

```
GNB-CU-TNL-Association-Failed-To-Setup-List ::= SEOUENCE (SIZE(1.. maxnoofTNLAssociations)) OF ProtocolIE-SingleContainer { { GNB-CU-TNL-
Association-Failed-To-Setup-ItemIEs } }
Cells-Failed-to-be-Activated-List-ItemIEs F1AP-PROTOCOL-IES
   PRESENCE mandatory },
GNB-CU-TNL-Association-Setup-ItemIEs F1AP-PROTOCOL-IES ::= {
   GNB-CU-TNL-Association-Setup-Item
                                                                                                PRESENCE mandatory },
GNB-CU-TNL-Association-Failed-To-Setup-ItemIEs F1AP-PROTOCOL-IES
   { ID id-GNB-CU-TNL-Association-Failed-To-Setup-Item
                                               CRITICALITY ignore TYPE
                                                                      GNB-CU-TNL-Association-Failed-To-Setup-Item
                                                                                                               PRESENCE
mandatory },
  *****************
-- GNB-CU CONFIGURATION UPDATE FAILURE
  ******************
GNBCUConfigurationUpdateFailure ::= SEQUENCE {
                                        protocolIEs
                  ProtocolIE-Container
GNBCUConfigurationUpdateFailureIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                               CRITICALITY reject TYPE TransactionID
                                                                         PRESENCE mandatory
    ID id-Cause
                               CRITICALITY ignore TYPE Cause
                                                                         PRESENCE mandatory
    ID id-TimeToWait
                               CRITICALITY ignore TYPE TimeToWait
                                                                         PRESENCE optional } |
   ID id-CriticalityDiagnostics
                               CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                         PRESENCE optional },
-- GNB-DU RESOURCE COORDINATION REQUEST
__ ********************
GNBDUResourceCoordinationRequest ::= SEQUENCE {
   protocolIEs
               ProtocolIE-Container
                                      {{GNBDUResourceCoordinationRequest-IEs}},
   . . .
GNBDUResourceCoordinationRequest-IEs F1AP-PROTOCOL-IES ::=
   { ID id-TransactionID
                                                CRITICALITY reject TYPE TransactionID
                                                                                                   PRESENCE mandatory
```

```
ID id-RequestType
                                                CRITICALITY reject TYPE RequestType
                                                                                                   PRESENCE mandatory } |
    ID id-EUTRA-NR-CellResourceCoordinationReq-Container CRITICALITY reject TYPE EUTRA-NR-CellResourceCoordinationReq-Container
                                                                                                            PRESENCE
mandat.orv} |
   { ID id-IgnoreResourceCoordinationContainer
                                               CRITICALITY reject TYPE IgnoreResourceCoordinationContainer
                                                                                                   PRESENCE optional },
-- GNB-DU RESOURCE COORDINATION RESPONSE
__ *********************
GNBDUResourceCoordinationResponse ::= SEQUENCE {
   protocolIEs
               ProtocolIE-Container
                                      {{GNBDUResourceCoordinationResponse-IEs}},
   . . .
GNBDUResourceCoordinationResponse-IEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                                                  CRITICALITY reject TYPE TransactionID
                                                                                              PRESENCE mandatory } |
   PRESENCE mandatory },
   . . .
-- UE Context Setup ELEMENTARY PROCEDURE
  -- UE CONTEXT SETUP REQUEST
       ******************
UEContextSetupRequest ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                        { { UEContextSetupRequestIEs} },
UEContextSetupRequestIEs F1AP-PROTOCOL-IES ::= {
    ID id-aNB-CU-UE-F1AP-ID
                                         CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                              PRESENCE mandatory
    ID id-gNB-DU-UE-F1AP-ID
                                         CRITICALITY ignore TYPE GNB-DU-UE-F1AP-ID
                                                                                              PRESENCE optional
    ID id-SpCell-ID
                                         CRITICALITY reject TYPE NRCGI
                                                                                              PRESENCE mandatory
    ID id-ServCellIndex
                                         CRITICALITY reject TYPE ServCellIndex
                                                                                              PRESENCE mandatory
    ID id-SpCellULConfigured
                                         CRITICALITY ignore TYPE CellULConfigured
                                                                                              PRESENCE optional }
    ID id-CUtoDURRCInformation
                                         CRITICALITY reject TYPE CUtoDURRCInformation
                                                                                              PRESENCE mandatory}
    ID id-Candidate-SpCell-List
                                         CRITICALITY ignore TYPE Candidate-SpCell-List
                                                                                              PRESENCE optional }
    ID id-DRXCycle
                                         CRITICALITY ignore TYPE DRXCycle
                                                                                              PRESENCE optional }
    PRESENCE optional }
    ID id-SCell-ToBeSetup-List
                                                                                              PRESENCE optional }
                                         CRITICALITY ignore TYPE SCell-ToBeSetup-List
```

```
ID id-SRBs-ToBeSetup-List
                                                  CRITICALITY reject TYPE SRBs-ToBeSetup-List
                                                                                                                 PRESENCE optional } |
     ID id-DRBs-ToBeSetup-List
                                                  CRITICALITY reject TYPE DRBs-ToBeSetup-List
                                                                                                                 PRESENCE optional }
                                                  CRITICALITY reject TYPE InactivityMonitoringRequest
     ID id-InactivityMonitoringRequest
                                                                                                                 PRESENCE optional
     ID id-RAT-FrequencyPriorityInformation
                                                  CRITICALITY reject TYPE RAT-FrequencyPriorityInformation
                                                                                                                 PRESENCE optional }
     ID id-RRCContainer
                                                  CRITICALITY ignore TYPE RRCContainer
                                                                                                                 PRESENCE optional }
     ID id-MaskedIMEISV
                                                                                                                 PRESENCE optional }
                                                  CRITICALITY ignore TYPE MaskedIMEISV
     ID id-ServingPLMN
                                                  CRITICALITY ignore TYPE PLMN-Identity
                                                                                                                 PRESENCE optional }
     ID id-GNB-DU-UE-AMBR-UL
                                                  CRITICALITY ignore TYPE BitRate
                                                                                                                 PRESENCE conditional } |
     ID id-RRCDeliveryStatusRequest
                                                  CRITICALITY ignore TYPE RRCDeliveryStatusRequest
                                                                                                               PRESENCE optional }
     ID id-ResourceCoordinationTransferInformation CRITICALITY ignore TYPE ResourceCoordinationTransferInformation PRESENCE optional }
     ID id-ServingCellMO
                                                  CRITICALITY ignore TYPE ServingCellMO
                                                                                                                 PRESENCE optional }
                                                                                                                 PRESENCE optional }
     ID id-new-gNB-CU-UE-F1AP-ID
                                                  CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
    ID id-RANUEID
                                                  CRITICALITY ignore TYPE RANUEID
                                                                                                                 PRESENCE optional },
Candidate-SpCell-List::= SEOUENCE (SIZE(1..maxnoofCandidateSpCells)) OF ProtocolIE-SingleContainer { { Candidate-SpCell-ItemIEs} }
SCell-ToBeSetup-List::= SEOUENCE (SIZE(1..maxnoofSCells)) OF ProtocolIE-SingleContainer { { SCell-ToBeSetup-ItemIEs} }
SRBs-ToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer { { SRBs-ToBeSetup-ItemIEs} }
DRBs-ToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-ToBeSetup-ItemIEs} }
Candidate-SpCell-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-Candidate-SpCell-Item
                                                  CRITICALITY ignore TYPE Candidate-SpCell-Item
                                                                                                              PRESENCE mandatory },
SCell-ToBeSetup-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-SCell-ToBeSetup-Item
                                                     CRITICALITY ignore TYPE SCell-ToBeSetup-Item
                                                                                                              PRESENCE mandatory },
SRBs-ToBeSetup-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-SRBs-ToBeSetup-Item
                                  CRITICALITY reject
                                                       TYPE SRBs-ToBeSetup-Item
                                                                                        PRESENCE mandatory },
   . . .
DRBs-ToBeSetup-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-DRBs-ToBeSetup-Item
                                              CRITICALITY reject TYPE DRBs-ToBeSetup-Item
                                                                                                      PRESENCE mandatory },
    . . .
     ****************
-- UE CONTEXT SETUP RESPONSE
  *****************
UEContextSetupResponse ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                                 { { UEContextSetupResponseIEs} },
    . . .
```

```
UEContextSetupResponseIEs F1AP-PROTOCOL-IES ::= {
     ID id-qNB-CU-UE-F1AP-ID
                                                 CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                                             PRESENCE mandatory
     ID id-qNB-DU-UE-F1AP-ID
                                                                                                             PRESENCE mandatory
                                                 CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
     ID id-DUtoCURRCInformation
                                                 CRITICALITY reject TYPE DUtoCURRCInformation
                                                                                                             PRESENCE mandatory } |
     ID id-C-RNTI
                                                 CRITICALITY ignore TYPE C-RNTI
                                                                                                             PRESENCE optional }
     ID id-FullConfiguration
                                                 CRITICALITY reject TYPE FullConfiguration
                                                                                                             PRESENCE optional
     ID id-DRBs-Setup-List
                                                 CRITICALITY ignore TYPE DRBs-Setup-List
                                                                                                             PRESENCE optional }
                                                 CRITICALITY ignore TYPE SRBs-FailedToBeSetup-List
                                                                                                             PRESENCE optional
     ID id-SRBs-FailedToBeSetup-List
                                                 CRITICALITY ignore TYPE DRBs-FailedToBeSetup-List
                                                                                                             PRESENCE optional }
     ID id-DRBs-FailedToBeSetup-List
     ID id-SCell-FailedtoSetup-List
                                                 CRITICALITY ignore TYPE SCell-FailedtoSetup-List
                                                                                                             PRESENCE optional }
     ID id-InactivityMonitoringResponse
                                                 CRITICALITY reject TYPE InactivityMonitoringResponse
                                                                                                             PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                             PRESENCE optional }
     ID id-SRBs-Setup-List
                                                 CRITICALITY ignore TYPE SRBs-Setup-List
                                                                                                             PRESENCE optional },
DRBs-Setup-List ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-Setup-ItemIEs} }
SRBs-FailedToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer { { SRBs-FailedToBeSetup-ItemIEs}
DRBs-FailedToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-FailedToBeSetup-ItemIEs}
SCell-FailedtoSetup-List ::= SEQUENCE (SIZE(1..maxnoofSCells)) OF ProtocolIE-SingleContainer { { SCell-FailedtoSetup-ItemIEs}
SRBs-Setup-List ::= SEOUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer { SRBs-Setup-ItemIEs} }
DRBs-Setup-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-DRBs-Setup-Item
                                                                                                    PRESENCE mandatory },
                                             CRITICALITY ignore TYPE DRBs-Setup-Item
SRBs-Setup-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-SRBs-Setup-Item
                                             CRITICALITY ignore TYPE SRBs-Setup-Item
                                                                                                    PRESENCE mandatory },
   . . .
SRBs-FailedToBeSetup-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-SRBs-FailedToBeSetup-Item
                                     CRITICALITY ignore
                                                                TYPE SRBs-FailedToBeSetup-Item
                                                                                                 PRESENCE mandatory },
DRBs-FailedToBeSetup-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-DRBs-FailedToBeSetup-Item
                                     CRITICALITY ignore TYPE DRBs-FailedToBeSetup-Item
                                                                                              PRESENCE mandatory },
   . . .
SCell-FailedtoSetup-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-SCell-FailedtoSetup-Item
                                             CRITICALITY ignore TYPE SCell-FailedtoSetup-Item
                                                                                                 PRESENCE mandatory },
   . . .
```

```
__ **********************
-- UE CONTEXT SETUP FAILURE
__ **********************
UEContextSetupFailure ::= SEOUENCE {
   protocolIEs
              ProtocolIE-Container
                                          { { UEContextSetupFailureIEs} },
UEContextSetupFailureIEs F1AP-PROTOCOL-IES ::= {
    ID id-gNB-CU-UE-F1AP-ID
                                 CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                             PRESENCE mandatory } |
     ID id-gNB-DU-UE-F1AP-ID
                                 CRITICALITY ignore TYPE GNB-DU-UE-F1AP-ID
                                                                             PRESENCE optional } |
    ID id-Cause
                                 CRITICALITY ignore TYPE Cause
                                                                             PRESENCE mandatory } |
    ID id-CriticalityDiagnostics
                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                             PRESENCE optional } |
                                                                             PRESENCE optional },
   { ID id-Potential-SpCell-List
                                 CRITICALITY ignore TYPE Potential-SpCell-List
Potential-SpCell-List::= SEQUENCE (SIZE(0..maxnoofPotentialSpCells)) OF ProtocolIE-SingleContainer { { Potential-SpCell-ItemIEs} }
Potential-SpCell-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-Potential-SpCell-Item
                                        CRITICALITY ignore TYPE Potential-SpCell-Item
                                                                                         PRESENCE mandatory },
-- UE Context Release Request ELEMENTARY PROCEDURE
__ *********************
  *****************
-- UE Context Release Request
__ **********************
UEContextReleaseRequest ::= SEQUENCE {
                                          {{ UEContextReleaseRequestIEs}},
   protocolIEs
              ProtocolIE-Container
   . . .
UEContextReleaseRequestIEs F1AP-PROTOCOL-IES ::= {
    ID id-gNB-CU-UE-F1AP-ID
                          CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                  PRESENCE mandatory
    ID id-gNB-DU-UE-F1AP-ID
                                 CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                  PRESENCE mandatory
   { ID id-Cause
                                    CRITICALITY ignore TYPE Cause
                                                                                  PRESENCE mandatory
  *****************
```

```
-- UE Context Release (qNB-CU initiated) ELEMENTARY PROCEDURE
  *****************
-- UE CONTEXT RELEASE COMMAND
         UEContextReleaseCommand ::= SEQUENCE {
   protocolIEs
                    ProtocolIE-Container
                                             { { UEContextReleaseCommandIEs} },
UEContextReleaseCommandIEs F1AP-PROTOCOL-IES ::= {
     ID id-gNB-CU-UE-F1AP-ID
                                      CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                      PRESENCE mandatory
     ID id-qNB-DU-UE-F1AP-ID
                                       CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                      PRESENCE mandatory
     ID id-Cause
                                       CRITICALITY ignore TYPE Cause
                                                                                      PRESENCE mandatory
     ID id-RRCContainer
                                       CRITICALITY ignore TYPE RRCContainer
                                                                                      PRESENCE optional }
     ID id-SRBID
                                      CRITICALITY ignore TYPE SRBID
                                                                                      PRESENCE conditional }
                                                                                      PRESENCE optional } |
     ID id-oldgNB-DU-UE-F1AP-ID
                                      CRITICALITY ignore TYPE GNB-DU-UE-F1AP-ID
                                                                                      PRESENCE optional }
     ID id-ExecuteDuplication
                                      CRITICALITY ignore TYPE ExecuteDuplication
                                                                                      PRESENCE optional }.
    ID id-RRCDeliveryStatusRequest
                                      CRITICALITY ignore TYPE RRCDeliveryStatusRequest
-- UE CONTEXT RELEASE COMPLETE
__ *********************
UEContextReleaseComplete ::= SEQUENCE {
   protocolIEs
                     ProtocolIE-Container
                                             { { UEContextReleaseCompleteIEs} },
UEContextReleaseCompleteIEs F1AP-PROTOCOL-IES ::= {
                                                                                 PRESENCE mandatory
     ID id-gNB-CU-UE-F1AP-ID
                                   CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
     ID id-gNB-DU-UE-F1AP-ID
                                   CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                 PRESENCE mandatory
   { ID id-CriticalityDiagnostics
                                                                                 PRESENCE optional },
                                   CRITICALITY ignore TYPE CriticalityDiagnostics
  *****************
-- UE Context Modification ELEMENTARY PROCEDURE
```

```
-- UE CONTEXT MODIFICATION REQUEST
UEContextModificationRequest ::= SEQUENCE {
                       ProtocolIE-Container
                                                   { { UEContextModificationRequestIEs} },
    protocolIEs
    . . .
UEContextModificationRequestIEs F1AP-PROTOCOL-IES ::= +
     ID id-qNB-CU-UE-F1AP-ID
                                                    CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                                                      PRESENCE mandatory
     ID id-qNB-DU-UE-F1AP-ID
                                                                                                                      PRESENCE mandatory
                                                    CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
     ID id-SpCell-ID
                                                                                                                      PRESENCE optional }
                                                    CRITICALITY ignore TYPE NRCGI
     ID id-ServCellIndex
                                                    CRITICALITY reject TYPE ServCellIndex
                                                                                                                      PRESENCE optional
     ID id-SpCellULConfigured
                                                    CRITICALITY ignore TYPE CellULConfigured
                                                                                                                      PRESENCE optional
     ID id-DRXCycle
                                                    CRITICALITY ignore TYPE DRXCycle
                                                                                                                      PRESENCE optional }
     ID id-CUtoDURRCInformation
                                                    CRITICALITY reject TYPE CUtoDURRCInformation
                                                                                                                      PRESENCE optional
     ID id-TransmissionActionIndicator
                                                    CRITICALITY ignore TYPE TransmissionActionIndicator
                                                                                                                      PRESENCE optional }
     ID id-ResourceCoordinationTransferContainer
                                                    CRITICALITY ignore TYPE ResourceCoordinationTransferContainer
                                                                                                                      PRESENCE optional }
                                                                                                                      PRESENCE optional }
     ID id-RRCReconfigurationCompleteIndicator
                                                    CRITICALITY ignore TYPE RRCReconfigurationCompleteIndicator
     ID id-RRCContainer
                                                    CRITICALITY reject TYPE RRCContainer
                                                                                                                      PRESENCE optional }
     ID id-SCell-ToBeSetupMod-List
                                                    CRITICALITY ignore TYPE SCell-ToBeSetupMod-List
                                                                                                                      PRESENCE optional }
     ID id-SCell-ToBeRemoved-List
                                                    CRITICALITY ignore TYPE SCell-ToBeRemoved-List
                                                                                                                      PRESENCE optional }
     ID id-SRBs-ToBeSetupMod-List
                                                    CRITICALITY reject TYPE SRBs-ToBeSetupMod-List
                                                                                                                      PRESENCE optional }
     ID id-DRBs-ToBeSetupMod-List
                                                    CRITICALITY reject TYPE DRBs-ToBeSetupMod-List
                                                                                                                      PRESENCE optional }
     ID id-DRBs-ToBeModified-List
                                                    CRITICALITY reject TYPE DRBs-ToBeModified-List
                                                                                                                      PRESENCE optional }
     ID id-SRBs-ToBeReleased-List
                                                    CRITICALITY reject TYPE SRBs-ToBeReleased-List
                                                                                                                      PRESENCE optional
     ID id-DRBs-ToBeReleased-List
                                                    CRITICALITY reject TYPE DRBs-ToBeReleased-List
                                                                                                                      PRESENCE optional
     ID id-InactivityMonitoringRequest
                                                    CRITICALITY reject TYPE InactivityMonitoringRequest
                                                                                                                      PRESENCE optional }
     ID id-RAT-FrequencyPriorityInformation
                                                    CRITICALITY reject TYPE RAT-FrequencyPriorityInformation
                                                                                                                      PRESENCE optional }
     ID id-DRXConfigurationIndicator
                                                    CRITICALITY ignore TYPE DRXConfigurationIndicator
                                                                                                                      PRESENCE optional }
     ID id-RLCFailureIndication
                                                    CRITICALITY ignore TYPE RLCFailureIndication
                                                                                                                      PRESENCE optional }
     ID id-UplinkTxDirectCurrentListInformation
                                                    CRITICALITY ignore TYPE UplinkTxDirectCurrentListInformation
                                                                                                                      PRESENCE optional }
     ID id-GNB-DUConfigurationQuery
                                                    CRITICALITY reject TYPE GNB-DUConfigurationQuery
                                                                                                                      PRESENCE optional }
     ID id-GNB-DU-UE-AMBR-UL
                                                    CRITICALITY ignore TYPE BitRate
                                                                                                                      PRESENCE optional }
     ID id-ExecuteDuplication
                                                    CRITICALITY ignore TYPE ExecuteDuplication
                                                                                                                      PRESENCE optional }
                                                    CRITICALITY ignore TYPE RRCDeliveryStatusRequest
     ID id-RRCDeliveryStatusRequest
                                                                                                                      PRESENCE optional }
     ID id-ResourceCoordinationTransferInformation CRITICALITY ignore TYPE ResourceCoordinationTransferInformation
                                                                                                                      PRESENCE optional
     ID id-ServingCellMO
                                                    CRITICALITY ignore TYPE ServingCellMO
                                                                                                                      PRESENCE optional }
     ID id-NeedforGap
                                                    CRITICALITY ignore TYPE NeedforGap
                                                                                                                      PRESENCE optional }
     ID id-FullConfiguration
                                                    CRITICALITY reject TYPE FullConfiguration
                                                                                                                      PRESENCE optional }
     ID id-SCGIndicator
                                                    CRITICALITY ignore TYPE SCGIndicator
                                                                                                                      PRESENCE optional },
SCell-ToBeSetupMod-List::= SEQUENCE (SIZE(1..maxnoofSCells)) OF ProtocolIE-SingleContainer { { SCell-ToBeSetupMod-ItemIEs} }
SCell-ToBeRemoved-List: = SEOUENCE (SIZE(1..maxnoofSCells)) OF ProtocolIE-SingleContainer { { SCell-ToBeRemoved-ItemIEs} }
SRBs-ToBeSetupMod-List ::= SEQUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer {
                                                                                             SRBs-ToBeSetupMod-ItemIEs}
DRBs-ToBeSetupMod-List ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer {
                                                                                            DRBs-ToBeSetupMod-ItemIEs}
DRBs-ToBeModified-List ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer
                                                                                             DRBs-ToBeModified-ItemIEs}
SRBs-ToBeReleased-List ::= SEQUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer
                                                                                             SRBs-ToBeReleased-ItemIEs
DRBs-ToBeReleased-List ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-ToBeReleased-ItemIEs}
```

```
SCell-ToBeSetupMod-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-SCell-ToBeSetupMod-Item
                             CRITICALITY ignore TYPE SCell-ToBeSetupMod-Item
                                                                             PRESENCE mandatory },
SCell-ToBeRemoved-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-SCell-ToBeRemoved-Item
                                 CRITICALITY ignore TYPE SCell-ToBeRemoved-Item
                                                                           PRESENCE mandatory },
SRBs-ToBeSetupMod-ItemIEs F1AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
DRBs-ToBeSetupMod-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-DRBs-ToBeSetupMod-Item
                              CRITICALITY reject TYPE DRBs-ToBeSetupMod-Item
                                                                     PRESENCE mandatory },
   . . .
DRBs-ToBeModified-ItemIEs F1AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
SRBs-ToBeReleased-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-SRBs-ToBeReleased-Item CRITICALITY reject TYPE SRBs-ToBeReleased-Item
                                                                   PRESENCE mandatory },
   . . .
DRBs-ToBeReleased-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-DRBs-ToBeReleased-Item
                              CRITICALITY reject TYPE DRBs-ToBeReleased-Item
                                                                     PRESENCE mandatory },
   . . .
  ****************
-- UE CONTEXT MODIFICATION RESPONSE
__ **********************
UEContextModificationResponse ::= SEQUENCE {
   protocolIEs
             ProtocolIE-Container
                                       { { UEContextModificationResponseIEs} },
   . . .
UEContextModificationResponseIEs F1AP-PROTOCOL-IES ::= {
    ID id-gNB-CU-UE-F1AP-ID
                                       CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                         PRESENCE mandatory
    ID id-gNB-DU-UE-F1AP-ID
                                       CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                         PRESENCE mandatory
```

```
ID id-DUtoCURRCInformation
                                                  CRITICALITY reject TYPE DUtoCURRCInformation
                                                                                                              PRESENCE optional }
     ID id-DRBs-SetupMod-List
                                                  CRITICALITY ignore TYPE DRBs-SetupMod-List
                                                                                                              PRESENCE optional }
     ID id-DRBs-Modified-List
                                                  CRITICALITY ignore TYPE DRBs-Modified-List
                                                                                                              PRESENCE optional}
     ID id-SRBs-FailedToBeSetupMod-List
                                                  CRITICALITY ignore TYPE SRBs-FailedToBeSetupMod-List
                                                                                                              PRESENCE optional
     ID id-DRBs-FailedToBeSetupMod-List
                                                  CRITICALITY ignore TYPE DRBs-FailedToBeSetupMod-List
                                                                                                              PRESENCE optional
                                                  CRITICALITY ignore TYPE SCell-FailedtoSetupMod-List
                                                                                                              PRESENCE optional
     ID id-SCell-FailedtoSetupMod-List
     ID id-DRBs-FailedToBeModified-List
                                                  CRITICALITY ignore TYPE DRBs-FailedToBeModified-List
                                                                                                              PRESENCE optional
     ID id-InactivityMonitoringResponse
                                                  CRITICALITY reject TYPE InactivityMonitoringResponse
                                                                                                              PRESENCE optional
     ID id-CriticalityDiagnostics
                                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                              PRESENCE optional
     TD id-C-RNTT
                                                  CRITICALITY ignore TYPE C-RNTI
                                                                                                              PRESENCE optional
     ID id-Associated-SCell-List
                                                 CRITICALITY ignore TYPE Associated-SCell-List
                                                                                                              PRESENCE optional }
                                                                                                              PRESENCE optional }
     ID id-SRBs-SetupMod-List
                                                  CRITICALITY ignore TYPE SRBs-SetupMod-List
                                                                                                              PRESENCE optional }
     ID id-SRBs-Modified-List
                                                 CRITICALITY ignore TYPE SRBs-Modified-List
     ID id-FullConfiguration
                                                 CRITICALITY reject TYPE FullConfiguration
                                                                                                              PRESENCE optional },
DRBs-SetupMod-List ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-SetupMod-ItemIEs}
DRBs-Modified-List::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-Modified-ItemIEs }
SRBs-SetupMod-List ::= SEQUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer { { SRBs-SetupMod-ItemIEs} }
SRBs-Modified-List ::= SEQUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer { { SRBs-Modified-ItemIEs } }
DRBs-FailedToBeModified-List ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-FailedToBeModified-ItemIEs}
SRBs-FailedToBeSetupMod-List ::= SEQUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer {
                                                                                              SRBs-FailedToBeSetupMod-ItemIEs}
DRBs-FailedToBeSetupMod-List ::= SEOUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-FailedToBeSetupMod-ItemIEs}
Associated-SCell-List ::= SEQUENCE (SIZE(1.. maxnoofSCells)) OF ProtocolIE-SingleContainer { { Associated-SCell-ItemIEs} }
DRBs-SetupMod-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-DRBs-SetupMod-Item
                                  CRITICALITY ignore
                                                         TYPE DRBs-SetupMod-Item
                                                                                    PRESENCE mandatory },
DRBs-Modified-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-DRBs-Modified-Item
                                      CRITICALITY ignore TYPE DRBs-Modified-Item
                                                                                    PRESENCE mandatory },
    . . .
SRBs-SetupMod-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-SRBs-SetupMod-Item
                                  CRITICALITY ignore
                                                         TYPE SRBs-SetupMod-Item
                                                                                    PRESENCE mandatory },
SRBs-Modified-ItemIEs F1AP-PROTOCOL-IES ::=
    { ID id-SRBs-Modified-Item
                                      CRITICALITY ignore TYPE SRBs-Modified-Item
                                                                                    PRESENCE mandatory },
SRBs-FailedToBeSetupMod-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-SRBs-FailedToBeSetupMod-Item
                                             CRITICALITY ignore TYPE SRBs-FailedToBeSetupMod-Item
                                                                                                      PRESENCE mandatory },
    . . .
```

```
DRBs-FailedToBeSetupMod-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-DRBs-FailedToBeSetupMod-Item
                                 CRITICALITY ignore TYPE DRBs-FailedToBeSetupMod-Item
                                                                                   PRESENCE mandatory },
DRBs-FailedToBeModified-ItemIEs F1AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
  . . .
SCell-FailedtoSetupMod-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-SCell-FailedtoSetupMod-Item
                                CRITICALITY ignore TYPE SCell-FailedtoSetupMod-Item
                                                                                   PRESENCE mandatory },
   . . .
Associated-SCell-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-Associated-SCell-Item
                                  CRITICALITY ignore TYPE Associated-SCell-Item
                                                                            PRESENCE mandatory },
   . . .
  *****************
-- UE CONTEXT MODIFICATION FAILURE
       *****************
UEContextModificationFailure ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        { { UEContextModificationFailureIEs} },
UEContextModificationFailureIEs F1AP-PROTOCOL-IES ::= {
    ID id-gNB-CU-UE-F1AP-ID
                         CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                            PRESENCE mandatory
    ID id-gNB-DU-UE-F1AP-ID
                                  CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                             PRESENCE mandatory
    ID id-Cause
                                  CRITICALITY ignore TYPE Cause
                                                                             PRESENCE mandatory
   { ID id-CriticalityDiagnostics
                                                                             PRESENCE optional },
                                  CRITICALITY ignore TYPE CriticalityDiagnostics
   -- UE Context Modification Required (gNB-DU initiated) ELEMENTARY PROCEDURE
  __ ********************************
-- UE CONTEXT MODIFICATION REQUIRED
```

```
UEContextModificationRequired ::= SEQUENCE {
                      ProtocolIE-Container
                                                 { { UEContextModificationRequiredIEs} },
   protocolIEs
UEContextModificationRequiredIEs F1AP-PROTOCOL-IES ::= {
     ID id-gNB-CU-UE-F1AP-ID
                                                      CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                                                     PRESENCE mandatory
     ID id-gNB-DU-UE-F1AP-ID
                                                      CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                                                    PRESENCE mandatory
     ID id-ResourceCoordinationTransferContainer
                                                      CRITICALITY ignore TYPE ResourceCoordinationTransferContainer
                                                                                                                    PRESENCE optional }
     ID id-DUtoCURRCInformation
                                                      CRITICALITY reject TYPE DUtoCURRCInformation
                                                                                                                    PRESENCE optional |
     ID id-DRBs-Required-ToBeModified-List
                                                     CRITICALITY reject TYPE DRBs-Required-ToBeModified-List
                                                                                                                    PRESENCE optional |
                                                                                                                    PRESENCE optional}
     ID id-SRBs-Required-ToBeReleased-List
                                                      CRITICALITY reject TYPE SRBs-Required-ToBeReleased-List
     ID id-DRBs-Required-ToBeReleased-List
                                                      CRITICALITY reject TYPE DRBs-Required-ToBeReleased-List
                                                                                                                     PRESENCE optional |
                                                                                                                     PRESENCE mandatory
     ID id-Cause
                                                      CRITICALITY ignore TYPE Cause
DRBs-Required-ToBeModified-List::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer {
                                                                                                 DRBs-Required-ToBeModified-ItemIEs }
DRBs-Required-ToBeReleased-List::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-Required-ToBeReleased-ItemIEs } }
SRBs-Required-ToBeReleased-List::= SEOUENCE (SIZE(1..maxnoofSRBs)) OF ProtocolIE-SingleContainer { SRBs-Required-ToBeReleased-ItemIEs } }
DRBs-Required-ToBeModified-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-DRBs-Required-ToBeModified-Item
                                                 CRITICALITY reject TYPE DRBs-Required-ToBeModified-Item
                                                                                                            PRESENCE mandatory },
DRBs-Required-ToBeReleased-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-DRBs-Required-ToBeReleased-Item
                                                 CRITICALITY reject TYPE DRBs-Required-ToBeReleased-Item
                                                                                                            PRESENCE mandatory },
   . . .
SRBs-Required-ToBeReleased-ItemIEs F1AP-PROTOCOL-IES ::= {
    { ID id-SRBs-Required-ToBeReleased-Item
                                                 CRITICALITY reject TYPE SRBs-Required-ToBeReleased-Item
                                                                                                               PRESENCE mandatory },
    . . .
  ****************
-- UE CONTEXT MODIFICATION CONFIRM
__ **********************
UEContextModificationConfirm::= SEOUENCE {
                      ProtocolIE-Container
                                                 { { UEContextModificationConfirmIEs} },
   protocolIEs
    . . .
UEContextModificationConfirmIEs F1AP-PROTOCOL-IES ::= {
    { ID id-gNB-CU-UE-F1AP-ID
                                                      CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                                                     PRESENCE mandatory
```

PRESENCE mandatory } |

PRESENCE optional } |

PRESENCE optional |

PRESENCE optional }

PRESENCE optional }

PRESENCE optional |

```
ID id-qNB-DU-UE-F1AP-ID
                                                   CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
     ID id-ResourceCoordinationTransferContainer
                                                   CRITICALITY ignore TYPE ResourceCoordinationTransferContainer
     ID id-DRBs-ModifiedConf-List
                                                   CRITICALITY ignore TYPE DRBs-ModifiedConf-List
     ID id-RRCContainer
                                                   CRITICALITY ignore TYPE RRCContainer
     ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-ExecuteDuplication
                                                   CRITICALITY ignore TYPE ExecuteDuplication
     ID id-ResourceCoordinationTransferInformation
                                                   CRITICALITY ignore TYPE ResourceCoordinationTransferInformation PRESENCE optional },
   . . .
DRBs-ModifiedConf-List::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRBs-ModifiedConf-ItemIEs } }
DRBs-ModifiedConf-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-DRBs-ModifiedConf-Item
                                    CRITICALITY ignore TYPE DRBs-ModifiedConf-Item
                                                                                        PRESENCE mandatory },
    -- UE CONTEXT MODIFICATION REFUSE
__ ********************
UEContextModificationRefuse::= SEOUENCE {
   protocolIEs
                     ProtocolIE-Container
                                              { { UEContextModificationRefuseIEs} },
   . . .
UEContextModificationRefuseIEs F1AP-PROTOCOL-IES ::= {
     ID id-gNB-CU-UE-F1AP-ID
                                        CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                         PRESENCE mandatory
     ID id-gNB-DU-UE-F1AP-ID
                                        CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                         PRESENCE mandatory
     ID id-Cause
                                        CRITICALITY ignore TYPE Cause
                                                                                         PRESENCE mandatory
    ID id-CriticalityDiagnostics
                                                                                         PRESENCE optional },
                                        CRITICALITY ignore TYPE CriticalityDiagnostics
-- WRITE-REPLACE WARNING ELEMENTARY PROCEDURE
-- Write-Replace Warning Request
  *****************
WriteReplaceWarningRequest ::= SEQUENCE {
   protocolIEs ProtocolIE-Container { {WriteReplaceWarningRequestIEs} } },
```

```
WriteReplaceWarningRequestIEs F1AP-PROTOCOL-IES ::= {
     ID id-TransactionID
                                           CRITICALITY reject TYPE TransactionID
                                                                                                    PRESENCE mandatory
     ID id-PWSSystemInformation
                                           CRITICALITY reject TYPE PWSSystemInformation
                                                                                                    PRESENCE mandatory } |
     ID id-RepetitionPeriod
                                           CRITICALITY reject TYPE RepetitionPeriod
                                                                                                    PRESENCE mandatory }
                                                                                                       PRESENCE mandatory } |
     ID id-NumberofBroadcastRequest
                                           CRITICALITY reject TYPE NumberofBroadcastRequest
     ID id-Cells-To-Be-Broadcast-List
                                           CRITICALITY reject TYPE Cells-To-Be-Broadcast-List
                                                                                                       PRESENCE optional },
Cells-To-Be-Broadcast-List
                             ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Cells-To-Be-Broadcast-List-ItemIEs } }
Cells-To-Be-Broadcast-List-ItemIEs F1AP-PROTOCOL-IES
                                                 ::= {
   { ID id-Cells-To-Be-Broadcast-Item
                                        CRITICALITY reject TYPE
                                                                 Cells-To-Be-Broadcast-Item
                                                                                              PRESENCE mandatory },
    -- Write-Replace Warning Response
  *****************
WriteReplaceWarningResponse ::= SEOUENCE {
   protocolIEs ProtocolIE-Container { {WriteReplaceWarningResponseIEs} },
   . . .
WriteReplaceWarningResponseIEs F1AP-PROTOCOL-IES ::= {
     ID id-TransactionID
                                               CRITICALITY reject TYPE TransactionID
                                                                                                            PRESENCE mandatory
     ID id-Cells-Broadcast-Completed-List
                                               CRITICALITY reject TYPE Cells-Broadcast-Completed-List
                                                                                                            PRESENCE optional } |
     ID id-CriticalityDiagnostics
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                            PRESENCE optional }
    ID id-Dedicated-SIDelivery-NeededUE-List
                                               CRITICALITY ignore TYPE Dedicated-SIDelivery-NeededUE-List
                                                                                                            PRESENCE optional },
Cells-Broadcast-Completed-List
                                ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Cells-Broadcast-Completed-List-
ItemIEs } }
Cells-Broadcast-Completed-List-ItemIEs F1AP-PROTOCOL-IES
   { ID id-Cells-Broadcast-Completed-Item
                                           CRITICALITY reject TYPE
                                                                   Cells-Broadcast-Completed-Item
                                                                                                    PRESENCE mandatory },
   . . .
    -- PWS CANCEL ELEMENTARY PROCEDURE
-- PWS Cancel Request
```

```
PWSCancelRequest ::= SEOUENCE {
   protocolIEs ProtocolIE-Container { {PWSCancelRequestIEs} },
PWSCancelRequestIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                                        CRITICALITY reject TYPE TransactionID
                                                                                          PRESENCE mandatory } |
    ID id-NumberofBroadcastRequest
                                        CRITICALITY reject TYPE NumberofBroadcastRequest
                                                                                          PRESENCE mandatory } |
                                                                                          PRESENCE optional }
    ID id-Broadcast-To-Be-Cancelled-List
                                        CRITICALITY reject TYPE Broadcast-To-Be-Cancelled-List
    ID id-Cancel-all-Warning-Messages-Indicator CRITICALITY reject TYPE Cancel-all-Warning-Messages-Indicator PRESENCE optional
   { ID id-NotificationInformation
                                        CRITICALITY reject TYPE NotificationInformation
                                                                                          PRESENCE optional },
Broadcast-To-Be-Cancelled-List
                         ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Broadcast-To-Be-Cancelled-List-
ItemIEs } }
Broadcast-To-Be-Cancelled-List-ItemIEs F1AP-PROTOCOL-IES ::= {
   ****************
-- PWS Cancel Response
  ******************
PWSCancelResponse ::= SEQUENCE {
   protocolIEs ProtocolIE-Container { {PWSCancelResponseIEs} },
PWSCancelResponseIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                                  CRITICALITY reject TYPE TransactionID
                                                                              PRESENCE mandatory } |
    ID id-Cells-Broadcast-Cancelled-List CRITICALITY reject TYPE Cells-Broadcast-Cancelled-List PRESENCE optional }
   ID id-CriticalityDiagnostics
                           CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                              PRESENCE optional },
Cells-Broadcast-Cancelled-List ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { Cells-Broadcast-Cancelled-List
ItemIEs } }
Cells-Broadcast-Cancelled-List-ItemIEs F1AP-PROTOCOL-IES
   -- UE Inactivity Notification ELEMENTARY PROCEDURE
```

```
-- UE Inactivity Notification
__ *********************
UEInactivityNotification ::= SEQUENCE {
              ProtocolIE-Container
                                           {{ UEInactivityNotificationIEs}},
   protocolIEs
   . . .
UEInactivityNotificationIEs F1AP-PROTOCOL-IES ::= {
    ID id-qNB-CU-UE-F1AP-ID
                                               CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                                   PRESENCE mandatory
     ID id-qNB-DU-UE-F1AP-ID
                                               CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                                   PRESENCE mandatory
    ID id-DRB-Activity-List
                                               CRITICALITY reject TYPE DRB-Activity-List
                                                                                                   PRESENCE mandatory
   . . .
DRB-Activity-List: = SEQUENCE (SIZE(1..maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRB-Activity-ItemIEs } }
DRB-Activity-ItemIEs F1AP-PROTOCOL-IES ::= {
   { ID id-DRB-Activity-Item
                                 CRITICALITY reject TYPE DRB-Activity-Item
                                                                          PRESENCE mandatory },
   . . .
  -- Initial UL RRC Message Transfer ELEMENTARY PROCEDURE
  ****************
  -- INITIAL UL RRC Message Transfer
__ ********************
InitialULRRCMessageTransfer ::= SEQUENCE {
                                          {{ InitialULRRCMessageTransferIEs}},
   protocolIEs
                    ProtocolIE-Container
   . . .
InitialULRRCMessageTransferIEs F1AP-PROTOCOL-IES ::= {
     ID id-gNB-DU-UE-F1AP-ID
                                        CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                         PRESENCE mandatory
    ID id-NRCGI
                                        CRITICALITY reject TYPE NRCGI
                                                                                         PRESENCE mandatory
     ID id-C-RNTI
                                                                                         PRESENCE mandatory
                                        CRITICALITY reject TYPE C-RNTI
     ID id-RRCContainer
                                        CRITICALITY reject TYPE RRCContainer
                                                                                         PRESENCE mandatory
    ID id-DUtoCURRCContainer
                                        CRITICALITY reject TYPE DUtoCURRCContainer
                                                                                         PRESENCE optional }
     ID id-SULAccessIndication
                                        CRITICALITY ignore TYPE SULAccessIndication
                                                                                         PRESENCE optional }
     ID id-TransactionID
                                                                                         PRESENCE mandatory } |
                                        CRITICALITY ignore TYPE TransactionID
                                                                                         PRESENCE optional }
    ID id-RANUEID
                                        CRITICALITY ignore TYPE RANUEID
```

```
CRITICALITY ignore TYPE RRCContainer-RRCSetupComplete
                                                                                       PRESENCE optional },
   { ID id-RRCContainer-RRCSetupComplete
  -- DL RRC Message Transfer ELEMENTARY PROCEDURE
  *****************
  *****************
-- DL RRC Message Transfer
  ****************
DLRRCMessageTransfer ::= SEQUENCE {
                                         {{ DLRRCMessageTransferIEs}},
   protocolIEs
                   ProtocolIE-Container
DLRRCMessageTransferIEs F1AP-PROTOCOL-IES ::= {
    ID id-aNB-CU-UE-F1AP-ID
                                              CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                                 PRESENCE mandatory
    ID id-qNB-DU-UE-F1AP-ID
                                                                                                 PRESENCE mandatory
                                             CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
    ID id-oldgNB-DU-UE-F1AP-ID
                                                                                                 PRESENCE optional }
                                             CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
    ID id-SRBID
                                                                                                 PRESENCE mandatory
                                             CRITICALITY reject TYPE SRBID
    ID id-ExecuteDuplication
                                              CRITICALITY ignore TYPE ExecuteDuplication
                                                                                                 PRESENCE optional }
                                                                                                 PRESENCE mandatory
    ID id-RRCContainer
                                              CRITICALITY reject TYPE RRCContainer
    ID id-RAT-FrequencyPriorityInformation
                                                                                                 PRESENCE optional }
                                              CRITICALITY reject TYPE RAT-FrequencyPriorityInformation
    ID id-RRCDeliveryStatusRequest
                                              CRITICALITY ignore TYPE RRCDeliveryStatusRequest
                                                                                                 PRESENCE optional
    ID id-UEContextNotRetrievable
                                             CRITICALITY reject TYPE UEContextNotRetrievable
                                                                                                 PRESENCE optional
    ID id-RedirectedRRCmessage
                                             CRITICALITY reject TYPE OCTET STRING
                                                                                                 PRESENCE optional
                                                                                                 PRESENCE optional }
    ID id-PLMNAssistanceInfoForNetShar
                                             CRITICALITY ignore TYPE PLMN-Identity
    ID id-new-qNB-CU-UE-F1AP-ID
                                             CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                                 PRESENCE optional },
    -- UL RRC Message Transfer ELEMENTARY PROCEDURE
    -- UL RRC Message Transfer
__ *******************
ULRRCMessageTransfer ::= SEQUENCE {
                                         {{ ULRRCMessageTransferIEs}},
   protocolIEs
                   ProtocolIE-Container
   . . .
```

```
ULRRCMessageTransferIEs F1AP-PROTOCOL-IES ::= {
    ID id-qNB-CU-UE-F1AP-ID
                                 CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                         PRESENCE mandatory
    ID id-gNB-DU-UE-F1AP-ID
                                CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                         PRESENCE mandatory
    ID id-SRBID
                                 CRITICALITY reject TYPE SRBID
                                                                         PRESENCE mandatory
    ID id-RRCContainer
                                 CRITICALITY reject TYPE RRCContainer
                                                                         PRESENCE mandatory
    ID id-SelectedPLMNID
                                 CRITICALITY reject TYPE PLMN-Identity
                                                                         PRESENCE optional
    ID id-new-qNB-DU-UE-F1AP-ID
                                 CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                         PRESENCE optional
   -- PRIVATE MESSAGE
__ *********************
PrivateMessage ::= SEQUENCE {
  privateIEs
              PrivateIE-Container {{PrivateMessage-IEs}},
   . . .
PrivateMessage-IEs F1AP-PRIVATE-IES ::= {
-- System Information ELEMENTARY PROCEDURE
  *****************
  *****************
-- System information Delivery Command
   SystemInformationDeliveryCommand ::= SEQUENCE {
  protocolIEs
                 ProtocolIE-Container
                                      {{ SystemInformationDeliveryCommandIEs}},
SystemInformationDeliveryCommandIEs F1AP-PROTOCOL-IES ::= {
    PRESENCE mandatory
    ID id-NRCGI
                          CRITICALITY reject TYPE NRCGI
                                                                    PRESENCE mandatory
    ID id-SItype-List
                        CRITICALITY reject TYPE SItype-List
                                                                     PRESENCE mandatory
   { ID id-ConfirmedUEID
                          CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                     PRESENCE mandatory
```

```
-- Paging PROCEDURE
-- Paging
Paging ::= SEQUENCE {
                                               {{ PagingIEs}},
   protocolIEs
                      ProtocolIE-Container
PagingIEs F1AP-PROTOCOL-IES ::= {
     ID id-UEIdentityIndexValue
                                                                                  PRESENCE mandatory
                                 CRITICALITY reject TYPE UEIdentityIndexValue
     ID id-PagingIdentity
                                 CRITICALITY reject TYPE PagingIdentity
                                                                                  PRESENCE mandatory
     ID id-PagingDRX
                                 CRITICALITY ignore TYPE PagingDRX
                                                                                  PRESENCE optional
     ID id-PagingPriority
                                 CRITICALITY ignore TYPE PagingPriority
                                                                                  PRESENCE optional
     ID id-PagingCell-List
                                 CRITICALITY ignore TYPE PagingCell-list
                                                                                  PRESENCE mandatory }
    { ID id-PagingOrigin
                                 CRITICALITY ignore TYPE PagingOrigin
                                                                                  PRESENCE optional },
PagingCell-list::= SEQUENCE (SIZE(1.. maxnoofPagingCells)) OF ProtocolIE-SingleContainer { { PagingCell-ItemIEs } }
PagingCell-ItemIEs F1AP-PROTOCOL-IES ::= {
                                                                              PRESENCE mandatory } ,
   { ID id-PagingCell-Item
                           CRITICALITY ignore TYPE PagingCell-Item
   -- Notify
__ ********************************
Notify ::= SEQUENCE {
                                               {{ NotifyIEs}},
   protocolIEs
                      ProtocolIE-Container
    . . .
NotifyIEs F1AP-PROTOCOL-IES ::= {
     ID id-gNB-CU-UE-F1AP-ID
                                            CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID
                                                                                                   PRESENCE mandatory
     ID id-gNB-DU-UE-F1AP-ID
                                            CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID
                                                                                                   PRESENCE mandatory
    { ID id-DRB-Notify-List
                                            CRITICALITY reject TYPE DRB-Notify-List
                                                                                                   PRESENCE mandatory
    . . .
DRB-Notify-List::= SEQUENCE (SIZE(1.. maxnoofDRBs)) OF ProtocolIE-SingleContainer { { DRB-Notify-ItemIEs } }
```

```
DRB-Notify-ItemIEs F1AP-PROTOCOL-IES ::= {
  { ID id-DRB-Notify-Item
                    CRITICALITY reject TYPE DRB-Notify-Item
                                                          PRESENCE mandatory },
  *******************
-- NETWORK ACCESS RATE REDUCTION ELEMENTARY PROCEDURE
__ ********************
__ ********************
-- Network Access Rate Reduction
__ *********************
NetworkAccessRateReduction ::= SEQUENCE {
  protocolIEs
            ProtocolIE-Container
                                   {{ NetworkAccessRateReductionIEs }},
NetworkAccessRateReductionIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                   CRITICALITY reject TYPE TransactionID
                                                                   PRESENCE mandatory
   { ID id-UAC-Assistance-Info CRITICALITY reject TYPE UAC-Assistance-Info
                                                                   PRESENCE mandatory },
  -- PWS RESTART INDICATION ELEMENTARY PROCEDURE
  *****************
__ ********************
-- PWS Restart Indication
__ **********************
PWSRestartIndication ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { { PWSRestartIndicationIEs} } },
PWSRestartIndicationIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID
                              CRITICALITY reject TYPE TransactionID
                                                                   PRESENCE mandatory
   . . .
NR-CGI-List-For-Restart-List
                       ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { NR-CGI-List-For-Restart-List-ItemIEs
} }
```

```
NR-CGI-List-For-Restart-List-ItemIEs F1AP-PROTOCOL-IES ::= {
  PRESENCE mandatory },
 *****************
-- PWS FAILURE INDICATION ELEMENTARY PROCEDURE
__ ********************
__ ********************
-- PWS Failure Indication
__ ********************
PWSFailureIndication ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { { PWSFailureIndicationIEs} } },
PWSFailureIndicationIEs F1AP-PROTOCOL-IES ::= {
  PRESENCE mandatory } |
  { ID id-PWS-Failed-NR-CGI-List CRITICALITY reject TYPE PWS-Failed-NR-CGI-List
                                                     PRESENCE optional },
               ::= SEQUENCE (SIZE(1.. maxCellingNBDU)) OF ProtocolIE-SingleContainer { { PWS-Failed-NR-CGI-List-ItemIEs } }
PWS-Failed-NR-CGI-List
PWS-Failed-NR-CGI-List-ItemIEs F1AP-PROTOCOL-IES ::= {
  PRESENCE mandatory },
  . . .
*******************
-- qNB-DU STATUS INDICATION ELEMENTARY PROCEDURE
 **************************
__ *********************
-- gNB-DU Status Indication
__ *******************
GNBDUStatusIndication ::= SEQUENCE {
                              { {GNBDUStatusIndicationIEs} },
  protocolIEs
           ProtocolIE-Container
  . . .
```

```
GNBDUStatusIndicationIEs F1AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                       CRITICALITY reject TYPE TransactionID
                                                                        PRESENCE mandatory
    ID id-GNBDUOverloadInformation
                                CRITICALITY reject TYPE GNBDUOverloadInformation
                                                                        PRESENCE mandatory
      -- RRC Delivery Report ELEMENTARY PROCEDURE
   -- RRC Delivery Report
__ *********************
RRCDeliveryReport ::= SEQUENCE {
                                     {{ RRCDeliveryReportIEs}},
  protocolIEs
               ProtocolIE-Container
RRCDeliveryReportIEs F1AP-PROTOCOL-IES ::= {
    ID id-qNB-CU-UE-F1AP-ID CRITICALITY reject TYPE GNB-CU-UE-F1AP-ID PRESENCE mandatory
    ID id-gNB-DU-UE-F1AP-ID CRITICALITY reject TYPE GNB-DU-UE-F1AP-ID PRESENCE mandatory
    ID id-RRCDeliveryStatus CRITICALITY ignore TYPE RRCDeliveryStatus PRESENCE mandatory
                       CRITICALITY ignore TYPE SRBID
   { ID id-SRBID
                                                        PRESENCE mandatory
   . . .
   *****************
-- F1 Removal ELEMENTARY PROCEDURE
   ******************
-- F1 Removal Request
__ *********************
F1RemovalRequest ::= SEQUENCE {
  protocolIEs
                 ProtocolIE-Container
                                      {{ F1RemovalRequestIEs }},
F1RemovalRequestIEs F1AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                    CRITICALITY reject TYPE TransactionID
                                                                    PRESENCE mandatory },
```

```
-- F1 Removal Response
__ *********************
F1RemovalResponse ::= SEOUENCE {
   protocolIEs
             ProtocolIE-Container
                                      {{ F1RemovalResponseIEs }},
F1RemovalResponseIEs F1AP-PROTOCOL-IES ::= {
    ID id-TransactionID CRITICALITY reject TYPE TransactionID
                                                                           PRESENCE mandatory } |
   { ID id-CriticalityDiagnostics
                              CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                           PRESENCE optional },
  *****************
-- F1 Removal Failure
F1RemovalFailure ::= SEQUENCE {
                                       {{ F1RemovalFailureIEs }},
   protocolIEs ProtocolIE-Container
F1RemovalFailureIEs F1AP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
    ID id-Cause
                              CRITICALITY ignore TYPE Cause
                                                                           PRESENCE mandatory }
   { ID id-CriticalityDiagnostics
                              CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                           PRESENCE optional },
-- ASN1STOP
```

9.4.5 Information Element Definitions

```
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) flap (3) version1 (1) flap-IEs (2) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
    id-gNB-CUSystemInformation,
    id-HandoverPreparationInformation,
    id-TAISliceSupportList,
    id-RANAC,
    id-BearerTypeChange,
    id-Cell-Direction,
    id-Cell-Type,
    id-CellGroupConfig,
    id-AvailablePLMNList,
    id-PDUSessionID,
    id-ULPDUSessionAggregateMaximumBitRate,
    id-DC-Based-Duplication-Configured,
    id-DC-Based-Duplication-Activation,
    id-Duplication-Activation,
    id-DLPDCPSNLength,
    id-ULPDCPSNLength,
    id-RLC-Status,
    id-MeasurementTimingConfiguration,
    id-DRB-Information,
    id-QoSFlowMappingIndication,
    id-ServingCellMO,
    id-RLCMode,
    id-ExtendedServedPLMNs-List,
    id-ExtendedAvailablePLMN-List,
    id-DRX-LongCycleStartOffset,
    id-SelectedBandCombinationIndex,
    id-SelectedFeatureSetEntryIndex.
    id-Ph-InfoSCG,
    id-latest-RRC-Version-Enhanced,
    id-RequestedBandCombinationIndex,
    id-RequestedFeatureSetEntryIndex,
    id-RequestedP-MaxFR2,
    id-DRX-Config,
    id-UEAssistanceInformation,
    id-PDCCH-BlindDetectionSCG,
    id-Requested-PDCCH-BlindDetectionSCG,
    id-BPLMN-ID-Info-List,
    id-NotificationInformation,
    id-TNLAssociationTransportLayerAddressgNBDU,
    id-portNumber,
    id-AdditionalSIBMessageList,
    id-IgnorePRACHConfiguration,
    id-CG-Config,
    id-Ph-InfoMCG,
    id-MeasGapSharingConfig,
    id-systemInformationAreaID,
```

```
id-areaScope,
    id-ConfiguredTACIndication,
    maxNRARFCN.
    maxnoofErrors,
    maxnoofBPLMNs.
    maxnoofBPLMNsNR,
    maxnoofDLUPTNLInformation,
    maxnoofNrCellBands,
    maxnoofULUPTNLInformation,
    maxnoofQoSFlows,
    maxnoofSliceItems,
    maxnoofSIBTypes,
    maxnoofSITypes,
    maxCellineNB,
    maxnoofExtendedBPLMNs,
    maxnoofAdditionalSIBs,
    maxnoofUACPLMNs,
    maxnoofUACperPLMN
FROM F1AP-Constants
    Criticality,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM F1AP-CommonDataTypes
    ProtocolExtensionContainer{},
    F1AP-PROTOCOL-EXTENSION,
    ProtocolIE-SingleContainer{},
    F1AP-PROTOCOL-IES
FROM F1AP-Containers;
-- A
AdditionalSIBMessageList ::= SEOUENCE (SIZE(1..maxnoofAdditionalSIBs)) OF AdditionalSIBMessageList-Item
AdditionalSIBMessageList-Item ::= SEQUENCE {
    additionalSIB
                            OCTET STRING,
    iE-Extensions
                        ProtocolExtensionContainer { { AdditionalSIBMessageList-Item-ExtIEs} } OPTIONAL
AdditionalSIBMessageList-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
AllocationAndRetentionPriority ::= SEQUENCE
    priorityLevel
                                PriorityLevel,
    pre-emptionCapability
                                Pre-emptionCapability,
    pre-emptionVulnerability
                                Pre-emptionVulnerability,
    iE-Extensions
                                ProtocolExtensionContainer { {AllocationAndRetentionPriority-ExtIEs} } OPTIONAL,
```

171

```
AllocationAndRetentionPriority-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
Associated-SCell-Item ::= SEOUENCE {
    sCell-ID
                   NRCGI,
    iE-Extensions ProtocolExtensionContainer { { Associated-SCell-ItemExtIEs } } OPTIONAL
Associated-SCell-ItemExtIEs
                               F1AP-PROTOCOL-EXTENSION ::= {
AvailablePLMNList ::= SEOUENCE (SIZE(1..maxnoofBPLMNs)) OF AvailablePLMNList-Item
AvailablePLMNList-Item ::= SEQUENCE {
    pLMNIdentity
                           PLMN-Identity,
    iE-Extensions
                       ProtocolExtensionContainer { { AvailablePLMNList-Item-ExtIEs} } OPTIONAL
AvailablePLMNList-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
AveragingWindow ::= INTEGER (0..4095, ...)
AreaScope ::= ENUMERATED {true, ...}
-- B
BitRate ::= INTEGER (0..400000000000,...)
BearerTypeChange ::= ENUMERATED {true, ...}
BPLMN-ID-Info-List ::= SEQUENCE (SIZE(1..maxnoofBPLMNsNR)) OF BPLMN-ID-Info-Item
BPLMN-ID-Info-Item ::= SEQUENCE {
    pLMN-Identity-List
                               AvailablePLMNList,
    extended-PLMN-Identity-List ExtendedAvailablePLMN-List OPTIONAL,
    fiveGS-TAC
                        FiveGS-TAC
                                                           OPTIONAL,
    nr-cell-ID
                               NRCellIdentity,
                               RANAC
    ranac
                                                           OPTIONAL,
                               ProtocolExtensionContainer { { BPLMN-ID-Info-ItemExtIEs} } OPTIONAL,
    iE-Extensions
BPLMN-ID-Info-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
    { ID id-ConfiguredTACIndication
                                       CRITICALITY ignore EXTENSION ConfiguredTACIndication
                                                                                                PRESENCE optional },
    . . .
```

```
ServedPLMNs-List ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF ServedPLMNs-Item
ServedPLMNs-Item ::= SEOUENCE {
    pLMN-Identity
                                PLMN-Identity,
   iE-Extensions
                                ProtocolExtensionContainer { { ServedPLMNs-ItemExtIEs} } OPTIONAL,
ServedPLMNs-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
{ ID id-TAISliceSupportList CRITICALITY ignore EXTENSION SliceSupportList
                                                                                PRESENCE optional },
-- C
Cancel-all-Warning-Messages-Indicator ::= ENUMERATED {true, ...}
Candidate-SpCell-Item ::= SEOUENCE {
    candidate-SpCell-ID
                                NRCGI
   iE-Extensions ProtocolExtensionContainer { { Candidate-SpCell-ItemExtIEs } } OPTIONAL,
Candidate-SpCell-ItemExtIEs
                                F1AP-PROTOCOL-EXTENSION ::= {
Cause ::= CHOICE {
   radioNetwork
                        CauseRadioNetwork,
    transport
                        CauseTransport,
   protocol
                        CauseProtocol,
   misc
                        CauseMisc,
                        ProtocolIE-SingleContainer { { Cause-ExtIEs} }
    choice-extension
Cause-ExtIEs F1AP-PROTOCOL-IES ::= {
CauseMisc ::= ENUMERATED {
    control-processing-overload,
    not-enough-user-plane-processing-resources,
    hardware-failure,
    om-intervention,
    unspecified,
    . . .
CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
```

```
semantic-error,
    abstract-syntax-error-falsely-constructed-message,
    unspecified,
CauseRadioNetwork ::= ENUMERATED {
    unspecified.
    rl-failure-rlc,
    unknown-or-already-allocated-gnb-cu-ue-flap-id,
    unknown-or-already-allocated-gnb-du-ue-flap-id,
    unknown-or-inconsistent-pair-of-ue-flap-id,
    interaction-with-other-procedure,
    not-supported-qci-Value,
    action-desirable-for-radio-reasons,
    no-radio-resources-available,
    procedure-cancelled,
    normal-release,
    . . . ,
    cell-not-available,
    rl-failure-others,
    ue-rejection,
    resources-not-available-for-the-slice,
    amf-initiated-abnormal-release,
    release-due-to-pre-emption,
    plmn-not-served-by-the-gNB-CU,
    multiple-drb-id-instances,
    unknown-drb-id
CauseTransport ::= ENUMERATED {
    unspecified,
    transport-resource-unavailable,
CellGroupConfig ::= OCTET STRING
Cell-Direction ::= ENUMERATED {dl-only, ul-only}
Cells-Failed-to-be-Activated-List-Item ::= SEQUENCE {
    nRCGI
                        NRCGI,
    cause
    iE-Extensions
                        ProtocolExtensionContainer { { Cells-Failed-to-be-Activated-List-ItemExtIEs } } OPTIONAL,
    . . .
Cells-Failed-to-be-Activated-List-ItemExtIEs
                                               F1AP-PROTOCOL-EXTENSION ::= {
Cells-Status-Item ::= SEQUENCE
    nRCGI
                    NRCGI,
    service-status
                        Service-Status,
```

```
ProtocolExtensionContainer { { Cells-Status-ItemExtIEs } } OPTIONAL,
    iE-Extensions
Cells-Status-ItemExtIEs
                         F1AP-PROTOCOL-EXTENSION ::= {
Cells-To-Be-Broadcast-Item ::= SEQUENCE {
                       NRCGI,
                       ProtocolExtensionContainer { { Cells-To-Be-Broadcast-ItemExtIEs } } OPTIONAL,
    iE-Extensions
                                 F1AP-PROTOCOL-EXTENSION ::= {
Cells-To-Be-Broadcast-ItemExtIEs
Cells-Broadcast-Completed-Item ::= SEQUENCE {
   iE-Extensions
                       ProtocolExtensionContainer { { Cells-Broadcast-Completed-ItemExtIEs } } OPTIONAL,
Cells-Broadcast-Completed-ItemExtIEs
                                     F1AP-PROTOCOL-EXTENSION ::= {
Broadcast-To-Be-Cancelled-Item ::= SEOUENCE {
                       NRCGI,
    iE-Extensions
                       ProtocolExtensionContainer { { Broadcast-To-Be-Cancelled-ItemExtIEs } } OPTIONAL,
Broadcast-To-Be-Cancelled-ItemExtIES F1AP-PROTOCOL-EXTENSION ::= {
Cells-Broadcast-Cancelled-Item ::= SEQUENCE
                       NRCGI,
    numberOfBroadcasts NumberOfBroadcasts,
                      ProtocolExtensionContainer { { Cells-Broadcast-Cancelled-ItemExtIEs } } OPTIONAL,
    iE-Extensions
Cells-Broadcast-Cancelled-ItemExtIEs
                                    F1AP-PROTOCOL-EXTENSION ::= {
Cells-to-be-Activated-List-Item ::= SEQUENCE {
    nRCGI
               NRCGI,
    nRPCI
               NRPCI
                           OPTIONAL,
                               ProtocolExtensionContainer { { Cells-to-be-Activated-List-ItemExtIEs} } OPTIONAL,
    iE-Extensions
```

```
Cells-to-be-Activated-List-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
     ID id-qNB-CUSystemInformation
                                         CRITICALITY reject EXTENSION GNB-CUSystemInformation
                                                                                                 PRESENCE optional }
     ID id-AvailablePLMNList
                                         CRITICALITY ignore EXTENSION AvailablePLMNList
                                                                                                 PRESENCE optional }
    { ID id-ExtendedAvailablePLMN-List
                                        CRITICALITY ignore EXTENSION ExtendedAvailablePLMN-List PRESENCE optional },
Cells-to-be-Deactivated-List-Item ::= SEQUENCE {
   nRCGI NRCGI ,
                             ProtocolExtensionContainer { { Cells-to-be-Deactivated-List-ItemExtIEs } } OPTIONAL,
   iE-Extensions
Cells-to-be-Deactivated-List-ItemExtIEs
                                      F1AP-PROTOCOL-EXTENSION ::= {
Cells-to-be-Barred-Item::= SEQUENCE {
   nRCGI
                  NRCGI ,
   cellBarred
                  CellBarred,
                             ProtocolExtensionContainer { { Cells-to-be-Barred-Item-ExtIEs } } OPTIONAL
   iE-Extensions
Cells-to-be-Barred-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
CellBarred ::= ENUMERATED {barred, not-barred, ...}
CellSize ::= ENUMERATED {verysmall, small, medium, large, ...}
CellType ::= SEOUENCE {
   cellSize
                  CellSize,
                      iE-Extensions
   . . .
CellType-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
CellULConfigured ::= ENUMERATED {none, ul, sul, ul-and-sul, ...}
CNUEPagingIdentity ::= CHOICE {
   fiveG-S-TMSI
                         BIT STRING (SIZE(48)),
   choice-extension
                             ProtocolIE-SingleContainer { { CNUEPagingIdentity-ExtIEs } }
CNUEPagingIdentity-ExtIEs F1AP-PROTOCOL-IES ::= {
```

```
ConfiguredTACIndication ::= ENUMERATED {
    true,
    . . .
CP-TransportLayerAddress ::= CHOICE {
    endpoint-IP-address
                                    TransportLayerAddress,
    endpoint-IP-address-and-port
                                    Endpoint-IP-address-and-port,
    choice-extension
                                ProtocolIE-SingleContainer { { CP-TransportLayerAddress-ExtIEs } }
CP-TransportLayerAddress-ExtIEs F1AP-PROTOCOL-IES ::= {
CriticalityDiagnostics ::= SEQUENCE {
    procedureCode
                                     ProcedureCode
                                                                                                      OPTIONAL,
    triggeringMessage
                                    TriggeringMessage
                                                                                                      OPTIONAL,
    procedureCriticality
                                    Criticality
                                                                                                      OPTIONAL,
                                    TransactionID
    transactionID
                                                                                                      OPTIONAL,
    iEsCriticalityDiagnostics
                                    CriticalityDiagnostics-IE-List
                                                                                                       OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer {{CriticalityDiagnostics-ExtIEs}}
                                                                                                      OPTIONAL,
    . . .
CriticalityDiagnostics-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1.. maxnoofErrors)) OF CriticalityDiagnostics-IE-Item
CriticalityDiagnostics-IE-Item ::= SEQUENCE {
    iECriticality
                            Criticality,
    iE-ID
                            ProtocolIE-ID,
                            TypeOfError,
    typeOfError
                            ProtocolExtensionContainer {{CriticalityDiagnostics-IE-Item-ExtIEs}} OPTIONAL,
    iE-Extensions
    . . .
CriticalityDiagnostics-IE-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
C-RNTI ::= INTEGER (0..65535, ...)
CUtoDURRCInformation ::= SEQUENCE {
    cG-ConfigInfo
                                        CG-ConfigInfo
                                                                             OPTIONAL,
    uE-CapabilityRAT-ContainerList
                                        UE-CapabilityRAT-ContainerList
                                                                             OPTIONAL,
    measConfig
                                        MeasConfig
                                                                             OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { { CUtoDURRCInformation-ExtIEs} } OPTIONAL,
    . . .
```

```
CUtoDURRCInformation-ExtlEs F1AP-PROTOCOL-EXTENSION ::=
    PRESENCE optional }
    ID id-CellGroupConfig
                       CRITICALITY ignore EXTENSION CellGroupConfig
                                                                                        PRESENCE optional
    PRESENCE optional }
    PRESENCE optional }
   { ID id-CG-Config
                                   CRITICALITY ignore EXTENSION CG-Config
                                                                                        PRESENCE optional },
DCBasedDuplicationConfigured::= ENUMERATED{true,..., false}
Dedicated-SIDelivery-NeededUE-Item ::= SEQUENCE {
                                   GNB-CU-UE-F1AP-ID,
   qNB-CU-UE-F1AP-ID
   nRCGI
                                   NRCGI,
                                   ProtocolExtensionContainer { { DedicatedSIDeliveryNeededUE-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
DedicatedSIDeliveryNeededUE-Item-ExtIEs F1AP-PROTOCOL-EXTENSION::={
   . . .
DLUPTNLInformation-ToBeSetup-List ::= SEOUENCE (SIZE(1..maxnoofDLUPTNLInformation)) OF DLUPTNLInformation-ToBeSetup-Item
DLUPTNLInformation-ToBeSetup-Item ::= SEQUENCE {
   dLUPTNLInformation UPTransportLayerInformation,
   iE-Extensions ProtocolExtensionContainer { { DLUPTNLInformation-ToBeSetup-ItemExtIEs } } OPTIONAL,
DLUPTNLInformation-ToBeSetup-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
DRB-Activity-Item ::= SEQUENCE {
   drbid
                DRBID,
   dRB-Activity DRB-Activity
                                OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { { DRB-Activity-ItemExtIEs } } OPTIONAL,
DRB-Activity-ItemExtIEs
                    F1AP-PROTOCOL-EXTENSION ::= {
DRB-Activity ::= ENUMERATED {active, not-active}
DRBID ::= INTEGER (1...32, ...)
DRBs-FailedToBeModified-Item ::= SEQUENCE {
```

```
drbid
               DRBID
               Cause
                           OPTIONAL,
   cause
   iE-Extensions ProtocolExtensionContainer { | DRBs-FailedToBeModified-ItemExtIEs } } OPTIONAL,
DRBs-FailedToBeModified-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
DRBs-FailedToBeSetup-Item ::= SEQUENCE {
   dRBID DRBID,
   cause Cause
                   OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { { DRBs-FailedToBeSetup-ItemExtIEs } } OPTIONAL,
DRBs-FailedToBeSetup-ItemExtIEs
                                  F1AP-PROTOCOL-EXTENSION ::= {
DRBs-FailedToBeSetupMod-Item ::= SEQUENCE {
   drbid
               DRBID ,
   cause
               Cause
                               OPTIONAL ,
   iE-Extensions ProtocolExtensionContainer { { DRBs-FailedToBeSetupMod-ItemExtIEs } } OPTIONAL,
DRBs-FailedToBeSetupMod-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
DRB-Information ::= SEQUENCE {
   dRB-0oS
             QoSFlowLevelQoSParameters,
   sNSSAI
               SNSSAI,
   notificationControl
                          NotificationControl
                                                  OPTIONAL,
   flows-Mapped-To-DRB-List Flows-Mapped-To-DRB-List,
   iE-Extensions ProtocolExtensionContainer { { DRB-Information-ItemExtIEs } } OPTIONAL
DRB-Information-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
DRBs-Modified-Item ::= SEQUENCE {
   dRBID
                                   DRBID,
                                      LCID
                                                  OPTIONAL,
                                          DLUPTNLInformation-ToBeSetup-List,
   dLUPTNLInformation-ToBeSetup-List
   iE-Extensions ProtocolExtensionContainer { { DRBs-Modified-ItemExtIEs } } OPTIONAL,
                        F1AP-PROTOCOL-EXTENSION ::= {
DRBs-Modified-ItemExtIEs
```

```
CRITICALITY ignore
                                                                                   PRESENCE optional },
   { ID id-RLC-Status
                                                    EXTENSION RLC-Status
DRBs-ModifiedConf-Item ::= SEQUENCE
                               DRBID,
   uLUPTNLInformation-ToBeSetup-List
                                      ULUPTNLInformation-ToBeSetup-List ,
   iE-Extensions ProtocolExtensionContainer { { DRBs-ModifiedConf-ItemExtIEs } } OPTIONAL,
DRBs-ModifiedConf-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
DRB-Notify-Item ::= SEQUENCE {
                DRBID,
   notification-Cause Notification-Cause,
   iE-Extensions ProtocolExtensionContainer { { DRB-Notify-ItemExtIEs } } OPTIONAL,
DRB-Notify-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
   . . .
DRBs-Required-ToBeModified-Item ::= SEQUENCE {
                               DRBID.
                                      DLUPTNLInformation-ToBeSetup-List
   dLUPTNLInformation-ToBeSetup-List
   iE-Extensions ProtocolExtensionContainer { { DRBs-Required-ToBeModified-ItemExtIEs } } OPTIONAL,
   . . .
DRBs-Required-ToBeModified-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
   { ID id-RLC-Status
                           CRITICALITY ignore
                                                    EXTENSION RLC-Status
                                                                                   PRESENCE optional },
   . . .
DRBs-Required-ToBeReleased-Item ::= SEQUENCE {
   DRBs-Required-ToBeReleased-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
DRBs-Setup-Item ::= SEQUENCE {
   drbid
                               DRBID,
   lCID
                                  LCID
                                             OPTIONAL,
   dLUPTNLInformation-ToBeSetup-List
                                     DLUPTNLInformation-ToBeSetup-List
   OPTIONAL,
   . . .
```

```
DRBs-Setup-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
DRBs-SetupMod-Item ::= SEQUENCE {
   dRBID
                                   DRBID,
   1CTD
                                      LCTD
                                                   OPTIONAL,
   dLUPTNLInformation-ToBeSetup-List
                                         DLUPTNLInformation-ToBeSetup-List
   iE-Extensions ProtocolExtensionContainer { { DRBs-SetupMod-ItemExtIEs } } OPTIONAL,
DRBs-SetupMod-ItemExtIEs
                         F1AP-PROTOCOL-EXTENSION ::= {
DRBs-ToBeModified-Item ::= SEQUENCE {
   draid
   goSInformation
                               QoSInformation OPTIONAL,
   uLUPTNLInformation-ToBeSetup-List ULUPTNLInformation-ToBeSetup-List ,
                               ULConfiguration OPTIONAL,
   uLConfiguration
   iE-Extensions ProtocolExtensionContainer { { DRBs-ToBeModified-ItemExtIEs } } OPTIONAL,
DRBs-ToBeModified-ItemExtIEs
                              F1AP-PROTOCOL-EXTENSION ::= {
     ID id-DLPDCPSNLength
                                              CRITICALITY ignore EXTENSION PDCPSNLength
                                                                                                           PRESENCE optional }
                                                                                                           PRESENCE optional }
     ID id-ULPDCPSNLength
                                              CRITICALITY ignore EXTENSION PDCPSNLength
    ID id-BearerTypeChange
                                              CRITICALITY ignore EXTENSION BearerTypeChange
                                                                                                           PRESENCE optional }
     ID id-RLCMode
                                              CRITICALITY ignore EXTENSION RLCMode
                                                                                                           PRESENCE optional
     ID id-Duplication-Activation
                                              CRITICALITY reject EXTENSION DuplicationActivation
                                                                                                           PRESENCE optional
     ID id-DC-Based-Duplication-Configured
                                              CRITICALITY reject EXTENSION DCBasedDuplicationConfigured
                                                                                                           PRESENCE optional }
    ID id-DC-Based-Duplication-Activation
                                              CRITICALITY reject EXTENSION DuplicationActivation
                                                                                                           PRESENCE optional },
DRBs-ToBeReleased-Item ::= SEQUENCE {
   dRBID DRBID,
   iE-Extensions ProtocolExtensionContainer { | DRBs-ToBeReleased-ItemExtIEs } } OPTIONAL,
                              F1AP-PROTOCOL-EXTENSION ::= {
DRBs-ToBeReleased-ItemExtIEs
DRBs-ToBeSetup-Item ::= SEQUENCE
                               DRBID,
   goSInformation
                               QoSInformation,
   uLUPTNLInformation-ToBeSetup-List ULUPTNLInformation-ToBeSetup-List ,
   rLCMode
                               RLCMode,
```

```
uLConfiguration
                              ULConfiguration OPTIONAL,
   duplicationActivation
                              DuplicationActivation OPTIONAL,
   OPTIONAL.
DRBs-ToBeSetup-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
     ID id-DC-Based-Duplication-Configured
                                             CRITICALITY reject EXTENSION DCBasedDuplicationConfigured
                                                                                                           PRESENCE optional }
     ID id-DC-Based-Duplication-Activation
                                             CRITICALITY reject EXTENSION DuplicationActivation
                                                                                                           PRESENCE optional }
     ID id-DLPDCPSNLength
                                             CRITICALITY ignore EXTENSION PDCPSNLength
                                                                                                           PRESENCE mandatory } |
    ID id-ULPDCPSNLength
                                             CRITICALITY ignore EXTENSION PDCPSNLength
                                                                                                           PRESENCE optional },
    . . .
DRBs-ToBeSetupMod-Item ::= SEQUENCE {
   drbid
   goSInformation
                              OoSInformation,
   uLUPTNLInformation-ToBeSetup-List
                                         ULUPTNLInformation-ToBeSetup-List,
   rLCMode
                              RLCMode,
   uLConfiguration
                              ULConfiguration OPTIONAL,
                              DuplicationActivation OPTIONAL,
   duplicationActivation
   iE-Extensions ProtocolExtensionContainer { { DRBs-ToBeSetupMod-ItemExtIEs } } OPTIONAL,
    . . .
DRBs-ToBeSetupMod-ItemExtIEs
                              F1AP-PROTOCOL-EXTENSION ::= {
     ID id-DC-Based-Duplication-Configured
                                             CRITICALITY reject EXTENSION DCBasedDuplicationConfigured
                                                                                                           PRESENCE optional }
     ID id-DC-Based-Duplication-Activation
                                             CRITICALITY reject EXTENSION DuplicationActivation
                                                                                                           PRESENCE optional
     ID id-DLPDCPSNLength
                                             CRITICALITY ignore EXTENSION PDCPSNLength
                                                                                                           PRESENCE optional }
     ID id-ULPDCPSNLength
                                             CRITICALITY ignore EXTENSION PDCPSNLength
                                                                                                           PRESENCE optional },
DRXCvcle
          ::= SEOUENCE {
   longDRXCycleLength LongDRXCycleLength,
    shortDRXCycleLength
                          ShortDRXCycleLength OPTIONAL,
    shortDRXCycleTimer ShortDRXCycleTimer OPTIONAL,
    iE-Extensions
                      ProtocolExtensionContainer { { DRXCycle-ExtIEs} } OPTIONAL,
    . . .
DRXCycle-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
DRX-Config ::= OCTET STRING
DRXConfigurationIndicator ::= ENUMERATED{ release, ...}
DRX-LongCycleStartOffset ::= INTEGER (0..10239)
DUtoCURRCContainer ::= OCTET STRING
```

```
DUtoCURRCInformation ::= SEQUENCE {
    cellGroupConfig
                        CellGroupConfig,
    measGapConfig
                           MeasGapConfig
                                           OPTIONAL,
    requestedP-MaxFR1
                                    OCTET STRING
                                                                OPTIONAL.
    iE-Extensions
                                ProtocolExtensionContainer { { DUtoCURRCInformation-ExtIEs} } OPTIONAL,
DUtoCURRCInformation-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
     ID id-DRX-LongCycleStartOffset
                                                CRITICALITY ignore EXTENSION DRX-LongCycleStartOffset
                                                                                                                 PRESENCE optional
     ID id-SelectedBandCombinationIndex
                                                CRITICALITY ignore EXTENSION SelectedBandCombinationIndex
                                                                                                                 PRESENCE optional
     ID id-SelectedFeatureSetEntryIndex
                                                CRITICALITY ignore EXTENSION SelectedFeatureSetEntryIndex
                                                                                                                 PRESENCE optional
                                                                                                                 PRESENCE optional
     ID id-Ph-InfoSCG
                                                CRITICALITY ignore EXTENSION Ph-InfoSCG
     ID id-RequestedBandCombinationIndex
                                                CRITICALITY ignore EXTENSION RequestedBandCombinationIndex
                                                                                                                 PRESENCE optional
     ID id-RequestedFeatureSetEntryIndex
                                                CRITICALITY ignore EXTENSION RequestedFeatureSetEntryIndex
                                                                                                                 PRESENCE optional
     ID id-RequestedP-MaxFR2
                                                CRITICALITY ignore EXTENSION RequestedP-MaxFR2
                                                                                                                 PRESENCE optional
     ID id-DRX-Config
                                                CRITICALITY ignore EXTENSION DRX-Config
                                                                                                                 PRESENCE optional
     ID id-PDCCH-BlindDetectionSCG
                                                CRITICALITY ignore EXTENSION PDCCH-BlindDetectionSCG
                                                                                                                 PRESENCE optional
     ID id-Requested-PDCCH-BlindDetectionSCG
                                                CRITICALITY ignore EXTENSION Requested-PDCCH-BlindDetectionSCG PRESENCE optional
     ID id-Ph-InfoMCG
                                                CRITICALITY ignore EXTENSION Ph-InfoMCG
                                                                                                                 PRESENCE optional }
     ID id-MeasGapSharingConfig
                                                CRITICALITY ignore EXTENSION MeasGapSharingConfig
                                                                                                                 PRESENCE optional },
DuplicationActivation ::= ENUMERATED{active,inactive,... }
DuplicationIndication ::= ENUMERATED {true, ..., false }
Dynamic50IDescriptor
                        ::= SEOUENCE {
    goSPriorityLevel
                                        INTEGER (1..127),
    packetDelavBudget
                                        PacketDelavBudget,
    packetErrorRate
                                        PacketErrorRate,
    fiveOI
                                        INTEGER (0..255, ...)
                                                                                            OPTIONAL,
                                        ENUMERATED {delay-critical, non-delay-critical}
    delayCritical
                                                                                            OPTIONAL,
    -- C-ifGBRflow: This IE shall be present if the GBR QoS Flow Information IE is present in the QoS Flow Level QoS Parameters IE.
    averagingWindow
                                        AveragingWindow
                                                                                            OPTIONAL,
    -- C-ifGBRflow: This IE shall be present if the GBR QoS Flow Information IE is present in the QoS Flow Level QoS Parameters IE.
                                        MaxDataBurstVolume
    maxDataBurstVolume
                                                                                            OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { { Dynamic50IDescriptor-ExtIEs } } OPTIONAL
Dynamic50IDescriptor-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
-- E
Endpoint-IP-address-and-port ::=SEQUENCE {
    endpointIPAddress TransportLayerAddress
                                    ProtocolExtensionContainer { { Endpoint-IP-address-and-port-ExtIEs} } OPTIONAL
    iE-Extensions
Endpoint-IP-address-and-port-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
    { ID id-portNumber CRITICALITY reject EXTENSION PortNumber
                                                                        PRESENCE optional },
```

```
ExtendedAvailablePLMN-List ::= SEOUENCE (SIZE(1..maxnoofExtendedBPLMNs)) OF ExtendedAvailablePLMN-Item
ExtendedAvailablePLMN-Item ::= SEOUENCE {
   pLMNIdentity
                           PLMN-Identity,
    iE-Extensions
                       ProtocolExtensionContainer { { ExtendedAvailablePLMN-Item-ExtIEs} } OPTIONAL
ExtendedAvailablePLMN-Item-ExtIEs FlAP-PROTOCOL-EXTENSION ::= {
ExtendedServedPLMNs-List ::= SEOUENCE (SIZE(1.. maxnoofExtendedBPLMNs)) OF ExtendedServedPLMNs-Item
ExtendedServedPLMNs-Item ::= SEQUENCE {
    pLMN-Identity
                               PLMN-Identity,
    tAISliceSupportList
                               SliceSupportList
                                                    OPTIONAL,
                               ProtocolExtensionContainer { { ExtendedServedPLMNs-ItemExtIEs} } OPTIONAL,
    iE-Extensions
ExtendedServedPLMNs-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
EUTRACells-List ::= SEOUENCE (SIZE (1.. maxCellineNB)) OF EUTRACells-List-item
EUTRACells-List-item ::= SEQUENCE {
    eUTRA-Cell-ID
                                    EUTRA-Cell-ID,
    served-EUTRA-Cells-Information Served-EUTRA-Cells-Information,
    iE-Extensions ProtocolExtensionContainer { { EUTRACells-List-itemExtIEs } }
                                                                                   OPTIONAL
EUTRACells-List-itemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
EUTRA-Cell-ID ::= BIT STRING (SIZE(28))
EUTRA-Coex-FDD-Info ::= SEQUENCE {
   uL-EARFCN
                                    ExtendedEARFCN
                                                                    OPTIONAL,
    dL-EARFCN
                                    ExtendedEARFCN,
   uL-Transmission-Bandwidth
                                    EUTRA-Transmission-Bandwidth
                                                                    OPTIONAL,
    dL-Transmission-Bandwidth
                                    EUTRA-Transmission-Bandwidth,
    iE-Extensions
                                    ProtocolExtensionContainer { {EUTRA-Coex-FDD-Info-ExtIEs} } OPTIONAL,
    . . .
EUTRA-Coex-FDD-Info-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
```

```
EUTRA-Coex-Mode-Info ::= CHOICE {
    fDD
           EUTRA-Coex-FDD-Info.
    t.DD
           EUTRA-Coex-TDD-Info,
    . . .
EUTRA-Coex-TDD-Info ::= SEOUENCE {
    EARFCN
                                    ExtendedEARFCN,
    transmission-Bandwidth
                                    EUTRA-Transmission-Bandwidth,
    subframeAssignment
                                    EUTRA-SubframeAssignment,
    specialSubframe-Info
                                    EUTRA-SpecialSubframe-Info,
   iE-Extensions
                                    ProtocolExtensionContainer { {EUTRA-Coex-TDD-Info-ExtIEs} } OPTIONAL,
EUTRA-Coex-TDD-Info-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
EUTRA-CyclicPrefixDL ::= ENUMERATED {
    normal,
   extended.
    . . .
EUTRA-CyclicPrefixUL ::= ENUMERATED {
    normal,
    extended,
    . . .
EUTRA-PRACH-Configuration ::= SEQUENCE {
   rootSequenceIndex
                                            INTEGER (0..837),
    zeroCorrelationIndex
                                            INTEGER (0..15),
   highSpeedFlag
                                            BOOLEAN,
   prach-FreqOffset
                                            INTEGER (0..94),
   prach-ConfigIndex
                                            INTEGER (0..63)
                                                                 OPTIONAL,
    -- C-ifTDD: This IE shall be present if the EUTRA-Mode-Info IE in the Resource Coordination E-UTRA Cell Information IE is set to the value
"TDD"
                                            ProtocolExtensionContainer { {EUTRA-PRACH-Configuration-ExtIEs} } OPTIONAL,
    iE-Extensions
EUTRA-PRACH-Configuration-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
EUTRA-SpecialSubframe-Info ::= SEQUENCE {
    specialSubframePatterns
                                EUTRA-SpecialSubframePatterns,
    cyclicPrefixDL
                                EUTRA-CyclicPrefixDL,
    cyclicPrefixUL
                                EUTRA-CyclicPrefixUL,
    iE-Extensions
                                ProtocolExtensionContainer { { EUTRA-SpecialSubframe-Info-ExtIEs} } OPTIONAL,
```

```
EUTRA-SpecialSubframe-Info-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
EUTRA-SpecialSubframePatterns ::= ENUMERATED {
    ssp0,
    ssp1,
    ssp2,
    ssp3,
    ssp4,
    ssp5,
    ssp6,
    ssp7,
    ssp8,
    ssp9,
    ssp10,
EUTRA-SubframeAssignment ::= ENUMERATED {
    sa0,
    sal,
    sa2,
    sa3,
    sa4,
    sa5,
    sa6,
    . . .
EUTRA-Transmission-Bandwidth ::= ENUMERATED {
   bw6,
    bw15,
    bw25,
    bw50,
    bw75,
    bw100,
EUTRANQOS ::= SEQUENCE {
                                     QCI,
    allocationAndRetentionPriority AllocationAndRetentionPriority,
    gbrQosInformation
                                    GBR-QosInformation
                                                                                          OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { { EUTRANQOS-ExtIEs} } OPTIONAL,
EUTRANQOS-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
ExecuteDuplication ::= ENUMERATED{true,...}
```

```
ExtendedEARFCN ::= INTEGER (0..262143)
EUTRA-Mode-Info ::= CHOICE {
    eUTRAFDD
               EUTRA-FDD-Info,
                   EUTRA-TDD-Info,
    eUTRATDD
    choice-extension ProtocolIE-SingleContainer { { EUTRA-Mode-Info-ExtIEs} }
EUTRA-Mode-Info-ExtIEs F1AP-PROTOCOL-IES ::= {
EUTRA-NR-CellResourceCoordinationReq-Container ::= OCTET STRING
EUTRA-NR-CellResourceCoordinationRegAck-Container ::= OCTET STRING
EUTRA-FDD-Info ::= SEQUENCE {
    uL-offsetToPointA
                                   OffsetToPointA,
    dL-offsetToPointA
                                   OffsetToPointA,
   iE-Extensions
                                   ProtocolExtensionContainer { {EUTRA-FDD-Info-ExtIEs} } OPTIONAL,
EUTRA-FDD-Info-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
EUTRA-TDD-Info ::= SEQUENCE {
    offsetToPointA
                                   OffsetToPointA,
   iE-Extensions
                                   ProtocolExtensionContainer { {EUTRA-TDD-Info-ExtIEs} } OPTIONAL,
EUTRA-TDD-Info-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
-- F
FDD-Info ::= SEQUENCE {
    uL-NRFreqInfo
                                       NRFreqInfo,
    dL-NRFreqInfo
                                       NRFreqInfo,
    uL-Transmission-Bandwidth
                                   Transmission-Bandwidth,
    dL-Transmission-Bandwidth
                                   Transmission-Bandwidth,
                                    ProtocolExtensionContainer { {FDD-Info-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
FDD-Info-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
```

```
::= SEOUENCE (SIZE(1.. maxnoofOoSFlows)) OF Flows-Mapped-To-DRB-Item
Flows-Mapped-To-DRB-List
Flows-Mapped-To-DRB-Item
                            ::= SEQUENCE {
    goSFlowIdentifier
                                                OoSFlowIdentifier,
    goSFlowLevelOoSParameters
                                            OoSFlowLevelOoSParameters,
                                            ProtocolExtensionContainer { { Flows-Mapped-To-DRB-ItemExtIEs} } OPTIONAL
    iE-Extensions
Flows-Mapped-To-DRB-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
                                        CRITICALITY ignore EXTENSION QoSFlowMappingIndication
                                                                                                 PRESENCE optional },
    {ID id-QoSFlowMappingIndication
FreqBandNrItem ::= SEQUENCE {
    fregBandIndicatorNr
                                    INTEGER (1..1024,...),
    supportedSULBandList
                                SEQUENCE (SIZE(0..maxnoofNrCellBands)) OF SupportedSULFreqBandItem,
                                ProtocolExtensionContainer { {FreqBandNrItem-ExtIEs} } OPTIONAL,
    iE-Extensions
FreqBandNrItem-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
FullConfiguration ::= ENUMERATED {full, ...}
-- G
GBR-QosInformation ::= SEQUENCE {
    e-RAB-MaximumBitrateDL
                                    BitRate,
    e-RAB-MaximumBitrateUL
                                    BitRate,
    e-RAB-GuaranteedBitrateDL
                                    BitRate,
    e-RAB-GuaranteedBitrateUL
                                    BitRate,
                                    ProtocolExtensionContainer { GBR-QosInformation-ExtIEs} } OPTIONAL,
    iE-Extensions
GBR-QosInformation-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
GBR-OoSFlowInformation::= SEOUENCE {
                                    BitRate,
    maxFlowBitRateDownlink
    maxFlowBitRateUplink
                                    BitRate,
    guaranteedFlowBitRateDownlink
                                   BitRate,
    guaranteedFlowBitRateUplink
                                    BitRate,
    maxPacketLossRateDownlink
                                    MaxPacketLossRate
                                                            OPTIONAL,
    maxPacketLossRateUplink
                                    MaxPacketLossRate
                                                            OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { { GBR-QosFlowInformation-ExtIEs} } OPTIONAL,
GBR-QosFlowInformation-ExtIEs F1AP-PROTOCOL-EXTENSION ::=
```

```
CG-Config ::= OCTET STRING
GNB-CUSystemInformation::= SEQUENCE {
    sibtypetobeupdatedlist SEQUENCE (SIZE(1.. maxnoofSIBTypes)) OF SibtypetobeupdatedListItem,
                                    ProtocolExtensionContainer { { GNB-CUSystemInformation-ExtIEs} } OPTIONAL,
    iE-Extensions
GNB-CUSystemInformation-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
    {ID id-systemInformationAreaID CRITICALITY ignore EXTENSION SystemInformationAreaID PRESENCE optional},
GNB-CU-TNL-Association-Setup-Item::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                           CP-TransportLayerAddress
    iE-Extensions
                                   ProtocolExtensionContainer { GNB-CU-TNL-Association-Setup-Item-ExtIEs} } OPTIONAL
GNB-CU-TNL-Association-Setup-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
GNB-CU-TNL-Association-Failed-To-Setup-Item ::= SEQUENCE {
                                           CP-TransportLayerAddress
    tNLAssociationTransportLayerAddress
    cause
                                           Cause,
                                   ProtocolExtensionContainer { { GNB-CU-TNL-Association-Failed-To-Setup-Item-ExtIEs} } OPTIONAL
    iE-Extensions
GNB-CU-TNL-Association-Failed-To-Setup-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
GNB-CU-TNL-Association-To-Add-Item ::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                           CP-TransportLayerAddress
    tNLAssociationUsage
                                               TNLAssociationUsage,
    iE-Extensions
                                   ProtocolExtensionContainer { { GNB-CU-TNL-Association-To-Add-Item-ExtIEs} } OPTIONAL
GNB-CU-TNL-Association-To-Add-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
GNB-CU-TNL-Association-To-Remove-Item::= SEOUENCE
    tNLAssociationTransportLayerAddress
                                           CP-TransportLayerAddress
    iE-Extensions
                                   ProtocolExtensionContainer { GNB-CU-TNL-Association-To-Remove-Item-ExtIEs} } OPTIONAL
GNB-CU-TNL-Association-To-Remove-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
    {ID id-TNLAssociationTransportLayerAddressgNBDU CRITICALITY reject EXTENSION CP-TransportLayerAddress PRESENCE optional},
    . . .
```

```
GNB-CU-TNL-Association-To-Update-Item::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                           CP-TransportLayerAddress
    tNLAssociationUsage
                                               TNLAssociationUsage OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { GNB-CU-TNL-Association-To-Update-Item-ExtIEs} } OPTIONAL
GNB-CU-TNL-Association-To-Update-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
GNB-CU-UE-F1AP-ID
                      ::= INTEGER (0..4294967295)
GNB-DU-UE-F1AP-ID
                      ::= INTEGER (0..4294967295)
GNB-DU-ID
                   ::= INTEGER (0..68719476735)
GNB-CU-Name ::= PrintableString(SIZE(1..150,...))
GNB-DU-Name ::= PrintableString(SIZE(1..150,...))
GNB-DU-Served-Cells-Item ::= SEOUENCE {
                               Served-Cell-Information,
    served-Cell-Information
    gNB-DU-System-Information GNB-DU-System-Information OPTIONAL,
    iE-Extensions
                               ProtocolExtensionContainer { GNB-DU-Served-Cells-ItemExtIEs} } OPTIONAL,
GNB-DU-Served-Cells-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
GNB-DU-System-Information ::= SEQUENCE {
   mIB-message
                   MIB-message,
    sIB1-message
                       SIB1-message,
                                   ProtocolExtensionContainer { GNB-DU-System-Information-ExtIEs } } OPTIONAL,
   iE-Extensions
GNB-DU-System-Information-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
GNB-DUConfigurationQuery ::= ENUMERATED {true, ...}
GNBDUOverloadInformation ::= ENUMERATED {overloaded, not-overloaded}
GNB-DU-TNL-Association-To-Remove-Item::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                           CP-TransportLayerAddress
    tNLAssociationTransportLayerAddressgNBCU
                                                   CP-TransportLayerAddress
                                                                                   OPTIONAL,
                                   ProtocolExtensionContainer { { GNB-DU-TNL-Association-To-Remove-Item-ExtIEs} } OPTIONAL
    iE-Extensions
```

```
GNB-DU-TNL-Association-To-Remove-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
GTP-TEID
                      ::= OCTET STRING (SIZE (4))
GTPTunnel
                       ::= SEOUENCE {
    transportLayerAddress
                               TransportLayerAddress,
    gTP-TEID
                   GTP-TEID,
    iE-Extensions
                                   ProtocolExtensionContainer { GTPTunnel-ExtIEs } } OPTIONAL,
GTPTunnel-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
-- H
HandoverPreparationInformation ::= OCTET STRING
-- I
IgnorePRACHConfiguration::= ENUMERATED { true,...}
IgnoreResourceCoordinationContainer ::= ENUMERATED { yes,...}
InactivityMonitoringRequest ::= ENUMERATED { true,...}
InactivityMonitoringResponse ::= ENUMERATED { not-supported,...}
-- J
-- K
-- L
LCID ::= INTEGER (1..32, ...)
LongDRXCycleLength ::= ENUMERATED
{ms10, ms20, ms32, ms40, ms60, ms64, ms70, ms80, ms128, ms160, ms256, ms320, ms512, ms640, ms1024, ms1280, ms2048, ms2560, ms5120, ms10240, ...}
-- M
MaskedIMEISV ::= BIT STRING (SIZE (64))
MaxDataBurstVolume ::= INTEGER (0..4095, ...)
MaxPacketLossRate ::= INTEGER (0..1000)
MIB-message ::= OCTET STRING
MeasConfig ::= OCTET STRING
MeasGapConfig ::= OCTET STRING
```

```
MeasGapSharingConfig ::= OCTET STRING
MeasurementTimingConfiguration ::= OCTET STRING
MessageIdentifier ::= BIT STRING (SIZE (16))
-- N
NeedforGap::= ENUMERATED {true, ...}
NGRANAllocationAndRetentionPriority ::= SEQUENCE {
                              PriorityLevel,
    priorityLevel
   pre-emptionCapability
                              Pre-emptionCapability,
   pre-emptionVulnerability
                              Pre-emptionVulnerability,
    iE-Extensions
                              ProtocolExtensionContainer { {NGRANAllocationAndRetentionPriority-ExtIEs} } OPTIONAL
NGRANAllocationAndRetentionPriority-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
NR-CGI-List-For-Restart-Item ::= SEQUENCE {
    nRCGI
                      NRCGI,
    iE-Extensions
                      OPTIONAL,
NR-CGI-List-For-Restart-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
NonDynamic5QIDescriptor ::= SEQUENCE {
    fiveQI
                              INTEGER (0..255, ...),
    goSPriorityLevel
                              INTEGER (1..127)
                                                            OPTIONAL.
    averagingWindow
                              AveragingWindow
                                                            OPTIONAL,
    maxDataBurstVolume
                              MaxDataBurstVolume
                                                            OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { NonDynamic50IDescriptor-ExtIEs } } OPTIONAL
NonDynamic5QIDescriptor-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
Notification-Cause ::= ENUMERATED {fulfilled, not-fulfilled, ...}
NotificationControl ::= ENUMERATED {active, not-active, ...}
NotificationInformation ::= SEQUENCE {
    message-Identifier MessageIdentifier,
    serialNumber
                      SerialNumber,
   iE-Extensions ProtocolExtensionContainer { { NotificationInformationExtIEs} } OPTIONAL,
```

```
NotificationInformationExtIEs
                                 F1AP-PROTOCOL-EXTENSION ::= {
NRFregInfo ::= SEQUENCE {
    nRARFCN
                   INTEGER (0..maxNRARFCN),
    sul-Information SUL-Information
    freqBandListNr SEQUENCE (SIZE(1..maxnoofNrCellBands)) OF FreqBandNrItem,
   iE-Extensions ProtocolExtensionContainer { { NRFreqInfoExtIEs} } OPTIONAL,
NRFreqInfoExtIEs F1AP-PROTOCOL-EXTENSION ::= {
NRCGI ::= SEQUENCE {
   pLMN-Identity
                           PLMN-Identity,
   nRCellIdentity
                           NRCellIdentity,
   iE-Extensions
                           ProtocolExtensionContainer { {NRCGI-ExtIEs} } OPTIONAL,
NRCGI-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
NR-Mode-Info ::= CHOICE {
    fDD
         FDD-Info,
    tDD
           TDD-Info,
                               ProtocolIE-SingleContainer { { NR-Mode-Info-ExtIEs} }
    choice-extension
NR-Mode-Info-ExtIEs F1AP-PROTOCOL-IES ::= {
NRCellIdentity ::= BIT STRING (SIZE(36))
NRNRB ::= ENUMERATED { nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121,
nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273, ...}
NRPCI ::= INTEGER(0..1007)
NRSCS ::= ENUMERATED { scs15, scs30, scs60, scs120, ...}
NumberOfBroadcasts ::= INTEGER (0..65535)
NumberofBroadcastRequest ::= INTEGER (0..65535)
-- O
```

```
OffsetToPointA ::= INTEGER (0..2199,...)
-- P
PacketDelayBudget ::= INTEGER (0..1023, ...)
PacketErrorRate ::= SEOUENCE {
   pER-Scalar
                       PER-Scalar,
   pER-Exponent
                       PER-Exponent,
   iE-Extensions
                       ProtocolExtensionContainer { {PacketErrorRate-ExtIEs} } OPTIONAL,
    . . .
PacketErrorRate-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
PER-Scalar ::= INTEGER (0..9, ...)
PER-Exponent ::= INTEGER (0..9, ...)
PagingCell-Item ::= SEQUENCE {
   nRCGI
               NRCGI ,
   iE-Extensions ProtocolExtensionContainer { { PagingCell-ItemExtIEs } }
PagingCell-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
PagingDRX ::= ENUMERATED {
   v32,
    v64,
    v128,
   v256,
    . . .
PagingIdentity ::= CHOICE {
    rANUEPagingIdentity RANUEPagingIdentity,
    cNUEPagingIdentity CNUEPagingIdentity,
                               ProtocolIE-SingleContainer { { PagingIdentity-ExtIEs } }
    choice-extension
PagingIdentity-ExtIEs F1AP-PROTOCOL-IES::= {
PagingOrigin ::= ENUMERATED { non-3gpp, ...}
PagingPriority ::= ENUMERATED { priolevel1, priolevel2, priolevel4, priolevel5, priolevel6, priolevel7, priolevel8,...}
PDCCH-BlindDetectionSCG ::= OCTET STRING
```

```
PDCP-SN ::= INTEGER (0..4095)
PDCPSNLength
              ::= ENUMERATED { twelve-bits, eighteen-bits,...}
PDUSessionID ::= INTEGER (0..255)
Ph-InfoMCG ::= OCTET STRING
Ph-InfoSCG ::= OCTET STRING
PLMN-Identity ::= OCTET STRING (SIZE(3))
PortNumber ::= BIT STRING (SIZE (16))
Pre-emptionCapability ::= ENUMERATED {
    shall-not-trigger-pre-emption,
    may-trigger-pre-emption
Pre-emptionVulnerability ::= ENUMERATED {
    not-pre-emptable,
    pre-emptable
PriorityLevel ::= INTEGER { spare (0), highest (1), lowest (14), no-priority (15) } (0..15)
ProtectedEUTRAResourceIndication
                                       ::= OCTET STRING
Protected-EUTRA-Resources-Item ::= SEQUENCE {
                                           SpectrumSharingGroupID,
    spectrumSharingGroupID
    eUTRACells-List
                       EUTRACells-List,
    iE-Extensions ProtocolExtensionContainer { { Protected-EUTRA-Resources-ItemExtIEs } } OPTIONAL
Protected-EUTRA-Resources-ItemExtIES F1AP-PROTOCOL-EXTENSION ::= {
Potential-SpCell-Item ::= SEQUENCE {
    potential-SpCell-ID
                               NRCGI
    iE-Extensions ProtocolExtensionContainer { { Potential-SpCell-ItemExtIEs } } OPTIONAL,
Potential-SpCell-ItemExtIEs
                               F1AP-PROTOCOL-EXTENSION ::= {
PWS-Failed-NR-CGI-Item ::= SEQUENCE {
                       NRCGI,
    numberOfBroadcasts NumberOfBroadcasts,
    iE-Extensions
                       ProtocolExtensionContainer { { PWS-Failed-NR-CGI-ItemExtIEs } } OPTIONAL,
```

```
PWS-Failed-NR-CGI-ItemExtIEs
                               F1AP-PROTOCOL-EXTENSION ::= {
PWSSystemInformation ::= SEQUENCE {
    sIBtype
                           SIBType-PWS,
    sIBmessage
                        OCTET STRING,
   iE-Extensions
                        ProtocolExtensionContainer { { PWSSystemInformationExtIEs } } OPTIONAL,
PWSSystemInformationExtIEs F1AP-PROTOCOL-EXTENSION ::= {
    {ID id-NotificationInformation
                                        CRITICALITY ignore EXTENSION NotificationInformation
                                                                                                  PRESENCE optional } |
    { ID id-AdditionalSIBMessageList
                                        CRITICALITY reject EXTENSION AdditionalSIBMessageList
                                                                                                  PRESENCE optional },
-- 0
QCI ::= INTEGER (0..255)
OoS-Characteristics ::= CHOICE {
    non-Dynamic-5QI
                                NonDynamic5QIDescriptor,
    dynamic-5QI
                                Dynamic5QIDescriptor,
    choice-extension
                                ProtocolIE-SingleContainer { { OoS-Characteristics-ExtIEs } }
QoS-Characteristics-ExtIEs F1AP-PROTOCOL-IES ::= {
    . . .
QoSFlowIdentifier ::= INTEGER (0..63)
QoSFlowLevelQoSParameters ::= SEQUENCE {
    qoS-Characteristics
                                        QoS-Characteristics,
    nGRANallocationRetentionPriority
                                            NGRANAllocationAndRetentionPriority,
                                            GBR-QoSFlowInformation
                                                                                OPTIONAL,
    gBR-QoS-Flow-Information
    reflective-OoS-Attribute
                                            ENUMERATED {subject-to, ...}
                                                                                        OPTIONAL,
                                ProtocolExtensionContainer { { QoSFlowLevelQoSParameters-ExtIEs } } OPTIONAL
    iE-Extensions
QoSFlowLevelQoSParameters-ExtIEs
                                    F1AP-PROTOCOL-EXTENSION ::= {
     ID id-PDUSessionID
                                                        CRITICALITY ignore EXTENSION PDUSessionID
                                                                                                        PRESENCE optional } |
     ID id-ULPDUSessionAggregateMaximumBitRate
                                                        CRITICALITY ignore EXTENSION BitRate
                                                                                                        PRESENCE optional },
    . . .
QoSFlowMappingIndication ::= ENUMERATED {ul,dl,...}
OoSInformation ::= CHOICE {
    eUTRANOoS
                                EUTRANQoS,
                                ProtocolIE-SingleContainer { { QoSInformation-ExtIEs} }
    choice-extension
```

```
OoSInformation-ExtIEs F1AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
-- R
RANAC ::= INTEGER (0..255)
RANUEID ::= OCTET STRING (SIZE (8))
RANUEPagingIdentity ::= SEQUENCE {
   iE-Extensions
                             ProtocolExtensionContainer { { RANUEPagingIdentity-ExtIEs } } OPTIONAL}
RANUEPagingIdentity-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
RAT-FrequencyPriorityInformation::= CHOICE {
              SubscriberProfileIDforRFP,
   nGRAN
              RAT-FrequencySelectionPriority,
   choice-extension
                             ProtocolIE-SingleContainer { { RAT-FrequencyPriorityInformation-ExtIEs} }
RAT-FrequencyPriorityInformation-ExtIEs F1AP-PROTOCOL-IES ::= {
RAT-FrequencySelectionPriority::= INTEGER (1.. 256, ...)
Reestablishment-Indication ::= ENUMERATED {
   reestablished.
RequestedBandCombinationIndex ::= OCTET STRING
RequestedFeatureSetEntryIndex ::= OCTET STRING
Requested-PDCCH-BlindDetectionSCG ::= OCTET STRING
RequestedP-MaxFR2 ::= OCTET STRING
RequestType ::= ENUMERATED {offer, execution, ...}
ResourceCoordinationEUTRACellInfo ::= SEQUENCE {
   eUTRA-Mode-Info
                                         EUTRA-Coex-Mode-Info,
                                         EUTRA-PRACH-Configuration,
   eUTRA-PRACH-Configuration
   iE-Extensions ProtocolExtensionContainer { { ResourceCoordinationEUTRACellInfo-ExtIEs } } OPTIONAL,
```

```
ResourceCoordinationEUTRACellInfo-ExtIEs FlAP-PROTOCOL-EXTENSION ::= {
    PRESENCE optional },
ResourceCoordinationTransferInformation ::= SEQUENCE {
   meNB-Cell-ID
                                            EUTRA-Cell-ID,
   resourceCoordinationEUTRACellInfo
                                        ResourceCoordinationEUTRACellInfo OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { { ResourceCoordinationTransferInformation-ExtIEs } } OPTIONAL,
ResourceCoordinationTransferInformation-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
ResourceCoordinationTransferContainer ::= OCTET STRING
RepetitionPeriod ::= INTEGER (0..131071, ...)
RLCFailureIndication ::= SEQUENCE {
   assocatedLCID
                             ProtocolExtensionContainer { {RLCFailureIndication-ExtIEs} } OPTIONAL
   iE-Extensions
RLCFailureIndication-ExtlEs F1AP-PROTOCOL-EXTENSION ::= {
RLCMode ::= ENUMERATED {
   rlc-am,
   rlc-um-bidirectional,
   rlc-um-unidirectional-ul,
   rlc-um-unidirectional-dl,
RLC-Status ::= SEOUENCE {
   reestablishment-Indication Reestablishment-Indication,
                             ProtocolExtensionContainer { { RLC-Status-ExtIEs } } OPTIONAL,
   iE-Extensions
RLC-Status-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
RRCContainer ::= OCTET STRING
RRCContainer-RRCSetupComplete ::= OCTET STRING
RRCDeliveryStatus ::= SEQUENCE
   delivery-status
                             PDCP-SN,
```

```
triggering-message
    iE-Extensions
                               ProtocolExtensionContainer { { RRCDeliveryStatus-ExtIEs } } OPTIONAL}
RRCDeliveryStatus-ExtIEs
                          F1AP-PROTOCOL-EXTENSION ::= {
RRCDeliveryStatusRequest ::= ENUMERATED {true, ...}
RRCReconfigurationCompleteIndicator ::= ENUMERATED {
    true,
    . . . ,
    failure
RRC-Version ::= SEQUENCE
    latest-RRC-Version
                               BIT STRING (SIZE(3)),
    iE-Extensions
                               ProtocolExtensionContainer { { RRC-Version-ExtIEs } } OPTIONAL}
RRC-Version-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
    {ID id-latest-RRC-Version-Enhanced
                                        CRITICALITY ignore EXTENSION OCTET STRING (SIZE(3)) PRESENCE optional },
-- S
SCell-FailedtoSetup-Item ::= SEQUENCE {
    sCell-ID
                       NRCGI
    cause
               Cause
                               OPTIONAL ,
    iE-Extensions ProtocolExtensionContainer { { SCell-FailedtoSetup-ItemExtIEs } } OPTIONAL,
SCell-FailedtoSetup-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SCell-FailedtoSetupMod-Item ::= SEQUENCE {
    sCell-ID
                       NRCGI
                               OPTIONAL ,
               Cause
    iE-Extensions ProtocolExtensionContainer { { SCell-FailedtoSetupMod-ItemExtIEs } }
                                                                                          OPTIONAL,
SCell-FailedtoSetupMod-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SCell-ToBeRemoved-Item ::= SEQUENCE {
                       NRCGI ,
    sCell-ID
    iE-Extensions ProtocolExtensionContainer { { SCell-ToBeRemoved-ItemExtIEs } } OPTIONAL,
```

```
SCell-ToBeRemoved-ItemExtIES F1AP-PROTOCOL-EXTENSION ::= {
SCell-ToBeSetup-Item ::= SEQUENCE {
   sCell-ID
                   NRCGI ,
   sCellIndex
                    SCellIndex.
   sCellULConfigured CellULConfigured OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { { SCell-ToBeSetup-ItemExtIEs } } OPTIONAL,
SCell-ToBeSetup-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
   { ID id-ServingCellMO
                                                                             PRESENCE optional },
                              CRITICALITY ignore EXTENSION ServingCellMO
SCell-ToBeSetupMod-Item ::= SEQUENCE {
   sCell-ID
                   NRCGI ,
   sCellIndex
                       SCellIndex,
   sCellULConfigured
                          CellULConfigured
   iE-Extensions ProtocolExtensionContainer { { SCell-ToBeSetupMod-ItemExtIEs } } OPTIONAL,
SCell-TobeSetupMod-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
   { ID id-ServingCellMO
                              CRITICALITY ignore EXTENSION ServingCellMO
                                                                             PRESENCE optional },
   . . .
SCellIndex ::=INTEGER (1..31, ...)
SCGIndicator ::= ENUMERATED{released, ...}
SerialNumber ::= BIT STRING (SIZE (16))
SIBType-PWS ::=INTEGER (6..8, ...)
SelectedBandCombinationIndex ::= OCTET STRING
SelectedFeatureSetEntryIndex ::= OCTET STRING
CG-ConfigInfo ::= OCTET STRING
ServCellIndex ::= INTEGER (0..31, ...)
ServingCellMO ::= INTEGER (1..64, ...)
Served-Cell-Information ::= SEQUENCE {
   nRCGI
                                  NRCGI,
   nRPCI
                                  NRPCI,
   fiveGS-TAC
                                      FiveGS-TAC
                                                         OPTIONAL,
                                  Configured-EPS-TAC
   configured-EPS-TAC
                                                          OPTIONAL,
```

```
servedPLMNs
                               ServedPLMNs-List,
   nR-Mode-Info
                                   NR-Mode-Info,
    measurementTimingConfiguration OCTET STRING,
    iE-Extensions
                       ProtocolExtensionContainer { {Served-Cell-Information-ExtIEs} } OPTIONAL,
Served-Cell-Information-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
       TD id-RANAC
                                           CRITICALITY ignore EXTENSION RANAC
                                                                                                   PRESENCE optional }
       ID id-ExtendedServedPLMNs-List
                                           CRITICALITY ignore EXTENSION ExtendedServedPLMNs-List
                                                                                                   PRESENCE optional
       ID id-Cell-Direction
                                           CRITICALITY ignore EXTENSION Cell-Direction
                                                                                                   PRESENCE optional
       ID id-BPLMN-ID-Info-List
                                           CRITICALITY ignore EXTENSION BPLMN-ID-Info-List
                                                                                                   PRESENCE optional }
                                                                                                   PRESENCE optional}
       ID id-Cell-Type
                                           CRITICALITY ignore EXTENSION CellType
       ID id-ConfiguredTACIndication
                                           CRITICALITY ignore EXTENSION ConfiguredTACIndication
                                                                                                   PRESENCE optional },
Served-Cells-To-Add-Item ::= SEQUENCE {
    served-Cell-Information
                               Served-Cell-Information,
    gNB-DU-System-Information GNB-DU-System-Information
                                                            OPTIONAL,
   iE-Extensions
                               ProtocolExtensionContainer { { Served-Cells-To-Add-ItemExtIEs} } OPTIONAL,
Served-Cells-To-Add-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
Served-Cells-To-Delete-Item ::= SEQUENCE {
    oldNRCGI
   iE-Extensions
                               ProtocolExtensionContainer { Served-Cells-To-Delete-ItemExtIEs } } OPTIONAL,
Served-Cells-To-Delete-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
Served-Cells-To-Modify-Item ::= SEQUENCE {
    oldNRCGI
    served-Cell-Information
                               Served-Cell-Information
    gNB-DU-System-Information GNB-DU-System-Information OPTIONAL
    iE-Extensions
                               ProtocolExtensionContainer { { Served-Cells-To-Modify-ItemExtIEs } } OPTIONAL,
Served-Cells-To-Modify-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
Served-EUTRA-Cells-Information::= SEQUENCE {
    eUTRA-Mode-Info
                                       EUTRA-Mode-Info,
    protectedEUTRAResourceIndication
                                       ProtectedEUTRAResourceIndication,
                                       ProtocolExtensionContainer { {Served-EUTRA-Cell-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
```

```
Served-EUTRA-Cell-Information-ExtIEs
                                   F1AP-PROTOCOL-EXTENSION ::= {
Service-State ::= ENUMERATED {
   in-service,
   out-of-service,
Service-Status ::= SEQUENCE {
   service-state
                              Service-State,
                             ENUMERATED {true, ...} OPTIONAL,
   switchingOffOngoing
                             ProtocolExtensionContainer { { Service-Status-ExtIEs } }
   iE-Extensions
                                                                                      OPTIONAL,
Service-Status-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
ShortDRXCycleLength ::= ENUMERATED {ms2, ms3, ms4, ms5, ms6, ms7, ms8, ms10, ms14, ms16, ms20, ms30, ms32, ms35, ms40, ms64, ms80, ms128, ms160,
ms256, ms320, ms512, ms640, ...}
ShortDRXCycleTimer ::= INTEGER (1..16)
SIB1-message ::= OCTET STRING
Sitype ::= INTEGER (1...32, ...)
SItype-List ::= SEQUENCE (SIZE(1.. maxnoofSITypes)) OF SItype-Item
SItype-Item ::= SEQUENCE {
   sItype
               SItype ,
   iE-Extensions ProtocolExtensionContainer { { SItype-ItemExtIEs } } OPTIONAL
SItype-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SibtypetobeupdatedListItem ::= SEQUENCE {
   sIBtype
                    INTEGER (2..32,...),
   sIBmessage
                     OCTET STRING,
                     INTEGER (0..31,...),
   iE-Extensions ProtocolExtensionContainer { { SibtypetobeupdatedListItem-ExtIEs } }
                                                                                      OPTIONAL,
SibtypetobeupdatedListItem-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional },
```

```
SliceSupportList ::= SEQUENCE (SIZE(1.. maxnoofSliceItems)) OF SliceSupportItem
SliceSupportItem ::= SEOUENCE {
   sNSSAI SNSSAI,
                               ProtocolExtensionContainer { { SliceSupportItem-ExtIEs } } OPTIONAL
   iE-Extensions
SliceSupportItem-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SNSSAI ::= SEOUENCE {
   sST OCTET STRING (SIZE(1)),
        OCTET STRING (SIZE(3)) OPTIONAL
   iE-Extensions
                              ProtocolExtensionContainer { { SNSSAI-ExtIEs } }
                                                                                 OPTIONAL
SNSSAI-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SpectrumSharingGroupID ::= INTEGER (1..maxCellineNB)
SRBID ::= INTEGER (0..3, ...)
SRBs-FailedToBeSetup-Item ::= SEQUENCE {
   sRBID
               SRBID
   cause
               Cause OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { { SRBs-FailedToBeSetup-ItemExtIEs } } OPTIONAL,
SRBs-FailedToBeSetup-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SRBs-FailedToBeSetupMod-Item
                             ::= SEOUENCE {
   sRBID
               SRBID
   cause
               Cause
                          OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { { SRBs-FailedToBeSetupMod-ItemExtIEs } } OPTIONAL,
SRBs-FailedToBeSetupMod-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SRBs-Modified-Item ::= SEQUENCE {
   sRBID
                                   SRBID,
   1CID
                                  LCID,
   iE-Extensions ProtocolExtensionContainer { { SRBs-Modified-ItemExtIEs } } OPTIONAL,
```

```
SRBs-Modified-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SRBs-Required-ToBeReleased-Item ::= SEQUENCE {
    sRBID SRBID,
   iE-Extensions ProtocolExtensionContainer { { SRBs-Required-ToBeReleased-ItemExtIEs } } OPTIONAL,
SRBs-Required-ToBeReleased-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SRBs-Setup-Item ::= SEQUENCE {
    sRBID
   lCID
                                      LCID,
   iE-Extensions ProtocolExtensionContainer { { SRBs-Setup-ItemExtIEs } } OPTIONAL,
SRBs-Setup-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SRBs-SetupMod-Item ::= SEQUENCE {
   iE-Extensions ProtocolExtensionContainer { { SRBs-SetupMod-ItemExtIEs } } OPTIONAL,
SRBs-SetupMod-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SRBs-ToBeReleased-Item ::= SEQUENCE {
   iE-Extensions ProtocolExtensionContainer { { SRBs-ToBeReleased-ItemExtIEs } } OPTIONAL,
SRBs-ToBeReleased-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SRBs-ToBeSetup-Item ::= SEQUENCE {
    sRBID SRBID ,
    duplicationIndication DuplicationIndication OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { SRBs-ToBeSetup-ItemExtIEs } }
                                                                                 OPTIONAL,
```

```
SRBs-ToBeSetup-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SRBs-ToBeSetupMod-Item ::= SEQUENCE {
    sRBID SRBID,
   duplicationIndication DuplicationIndication OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { { SRBs-ToBeSetupMod-ItemExtIEs } } OPTIONAL,
SRBs-ToBeSetupMod-ItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SUL-Information ::= SEQUENCE {
                                      INTEGER (0..maxNRARFCN),
    sUL-NRARFCN
    sUL-transmission-Bandwidth
                                      Transmission-Bandwidth,
   iE-Extensions
                  ProtocolExtensionContainer { { SUL-InformationExtIEs} } OPTIONAL,
SUL-InformationExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SubscriberProfileIDforRFP ::= INTEGER (1..256, ...)
SULAccessIndication ::= ENUMERATED {true,...}
SupportedSULFreqBandItem ::= SEQUENCE {
    fregBandIndicatorNr
                        INTEGER (1..1024,...),
   iE-Extensions
                              ProtocolExtensionContainer { { SupportedSULFreqBandItem-ExtIEs} } OPTIONAL,
SupportedSULFreqBandItem-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
SystemInformationAreaID ::=BIT STRING (SIZE (24))
-- T
FiveGS-TAC ::= OCTET STRING (SIZE(3))
Configured-EPS-TAC ::= OCTET STRING (SIZE(2))
TDD-Info ::= SEQUENCE {
   nRFreqInfo
                                      NRFreqInfo,
    transmission-Bandwidth
                                  Transmission-Bandwidth,
```

```
ProtocolExtensionContainer { {TDD-Info-ExtIEs} } OPTIONAL,
    iE-Extensions
TDD-Info-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
TimeToWait ::= ENUMERATED {vls, v2s, v5s, v10s, v20s, v60s, ...}
TNLAssociationUsage ::= ENUMERATED {
    ue,
   non-ue,
   both,
    . . .
TransportLayerAddress
                          ::= BIT STRING (SIZE(1..160, ...))
TransactionID
                           ::= INTEGER (0..255, ...)
Transmission-Bandwidth ::= SEQUENCE {
   nRSCS NRSCS,
   nRNRB NRNRB,
    iE-Extensions
                                ProtocolExtensionContainer { { Transmission-Bandwidth-ExtIEs} } OPTIONAL,
Transmission-Bandwidth-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
TransmissionActionIndicator ::= ENUMERATED {stop, ..., restart }
TypeOfError ::= ENUMERATED {
   not-understood,
   missing,
UAC-Assistance-Info ::= SEQUENCE {
    uACPLMN-List
    iE-Extensions
                        ProtocolExtensionContainer { { UAC-Assistance-InfoExtIEs} } OPTIONAL
UAC-Assistance-InfoExtIEs F1AP-PROTOCOL-EXTENSION ::= {
UACPLMN-List ::= SEQUENCE (SIZE(1..maxnoofUACPLMNs)) OF UACPLMN-Item
UACPLMN-Item::= SEQUENCE {
    pLMNIdentity
                                PLMN-Identity,
```

```
ProtocolExtensionContainer { { UACPLMN-Item-ExtIEs} } OPTIONAL
    uACType-List
                                UACType-List, iE-Extensions
UACPLMN-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
UACType-List ::= SEQUENCE (SIZE(1..maxnoofUACperPLMN)) OF UACType-Item
UACType-Item::= SEQUENCE {
    uACReductionIndication
                                UACReductionIndication,
    uACCategoryType
                                UACCategoryType,
                        ProtocolExtensionContainer { { UACType-Item-ExtIEs } } OPTIONAL
    iE-Extensions
UACType-Item-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
UACCategoryType ::= CHOICE {
    uACstandardized
                                UACAction,
    uACOperatorDefined
                                UACOperatorDefined,
                                ProtocolIE-SingleContainer { { UACCategoryType-ExtIEs } }
    choice-extension
UACCategoryType-ExtIEs F1AP-PROTOCOL-IES ::= {
UACOperatorDefined ::= SEQUENCE {
    accessCategory
                                    INTEGER (32..63,...),
    accessIdentity
                                    BIT STRING (SIZE(7)),
    iE-Extensions
                      ProtocolExtensionContainer { { UACOperatorDefined-ExtIEs} } OPTIONAL
UACOperatorDefined-ExtIEs F1AP-PROTOCOL-EXTENSION ::= {
UACAction ::= ENUMERATED {
    reject-non-emergency-mo-dt,
    reject-rrc-cr-signalling,
   permit-emergency-sessions-and-mobile-terminated-services-only,
   permit-high-priority-sessions-and-mobile-terminated-services-only,
UACReductionIndication ::= INTEGER (0..100)
UE-associatedLogicalF1-ConnectionItem ::= SEQUENCE {
    gNB-CU-UE-F1AP-ID
                           GNB-CU-UE-F1AP-ID
                                                 OPTIONAL,
    gNB-DU-UE-F1AP-ID
                            GNB-DU-UE-F1AP-ID
                                                 OPTIONAL,
```

ETSI TS 138 473 V15.15.0 (2021-10)

```
ProtocolExtensionContainer { { UE-associatedLogicalF1-ConnectionItemExtIEs} } OPTIONAL,
    iE-Extensions
UEAssistanceInformation ::= OCTET STRING
UE-associatedLogicalF1-ConnectionItemExtIEs F1AP-PROTOCOL-EXTENSION ::= {
UE-CapabilityRAT-ContainerList::= OCTET STRING
UEContextNotRetrievable ::= ENUMERATED {true, ...}
UEIdentityIndexValue ::= CHOICE {
    indexLength10
                           BIT STRING (SIZE (10)),
                           ProtocolIE-SingleContainer { {UEIdentityIndexValueChoice-ExtIEs} }
    choice-extension
UEIdentityIndexValueChoice-ExtIEs F1AP-PROTOCOL-IES ::= {
ULConfiguration ::= SEQUENCE
    uLUEConfiguration
                           ULUEConfiguration,
    iE-Extensions ProtocolExtensionContainer { { ULConfigurationExtIEs } }
                                                                               OPTIONAL,
ULConfigurationExtIEs F1AP-PROTOCOL-EXTENSION ::= {
ULUEConfiguration ::= ENUMERATED {no-data, shared, only, ...}
ULUPTNLInformation-ToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofULUPTNLInformation)) OF ULUPTNLInformation-ToBeSetup-Item
ULUPTNLInformation-ToBeSetup-Item ::=SEQUENCE {
                           UPTransportLayerInformation,
    uLUPTNLInformation
    iE-Extensions ProtocolExtensionContainer { { ULUPTNLInformation-ToBeSetup-ItemExtlEs } } OPTIONAL,
    . . .
ULUPTNLInformation-ToBeSetup-ItemExtIEs
                                            F1AP-PROTOCOL-EXTENSION ::= {
UplinkTxDirectCurrentListInformation ::= OCTET STRING
UPTransportLayerInformation
                                ::= CHOICE {
    gTPTunnel
                    GTPTunnel,
    choice-extension
                               ProtocolIE-SingleContainer { { UPTransportLayerInformation-ExtIEs} }
```

```
UPTransportLayerInformation-ExtIES F1AP-PROTOCOL-IES ::= {
    ...
}
-- V
-- W
-- X
-- Y
-- Z
END
-- ASN1STOP
```

9.4.6 Common Definitions

```
-- ASN1START
__ *********************
-- Common definitions
__ ********************
F1AP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) flap (3) version1 (1) flap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
Criticality
              ::= ENUMERATED { reject, ignore, notify }
              ::= ENUMERATED { optional, conditional, mandatory }
Presence
PrivateIE-ID ::= CHOICE {
   local
                     INTEGER (0..65535),
                     OBJECT IDENTIFIER
   global
ProcedureCode
               ::= INTEGER (0..255)
ProtocolExtensionID ::= INTEGER (0..65535)
ProtocolIE-ID
               ::= INTEGER (0..65535)
TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome }
END
-- ASN1STOP
```

9.4.7 Constant Definitions

```
-- ASN1START
__ *********************
-- Constant definitions
__ ********************
F1AP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) flap (3) version1 (1) flap-Constants (4) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
  *****************
-- IE parameter types from other modules.
IMPORTS
   ProcedureCode,
   ProtocolIE-ID
FROM F1AP-CommonDataTypes;
    *****************
-- Elementary Procedures
__ ********************
                                     ProcedureCode ::= 0
id-Reset
id-F1Setup
                                     ProcedureCode ::= 1
id-ErrorIndication
                                     ProcedureCode ::= 2
id-gNBDUConfigurationUpdate
                                     ProcedureCode ::= 3
id-gNBCUConfigurationUpdate
                                     ProcedureCode ::= 4
id-UEContextSetup
                                     ProcedureCode ::= 5
id-UEContextRelease
                                     ProcedureCode ::= 6
id-UEContextModification
                                     ProcedureCode ::= 7
                                     ProcedureCode ::= 8
id-UEContextModificationRequired
                                     ProcedureCode ::= 9
id-UEMobilityCommand
                                     ProcedureCode ::= 10
id-UEContextReleaseRequest
id-InitialULRRCMessageTransfer
                                     ProcedureCode ::= 11
id-DLRRCMessageTransfer
                                     ProcedureCode ::= 12
id-ULRRCMessageTransfer
                                     ProcedureCode ::= 13
                                     ProcedureCode ::= 14
id-privateMessage
id-UEInactivityNotification
                                     ProcedureCode ::= 15
id-GNBDUResourceCoordination
                                     ProcedureCode ::= 16
```

```
id-SystemInformationDeliveryCommand
                                           ProcedureCode ::= 17
id-Paging
                                           ProcedureCode ::= 18
id-Notify
                                           ProcedureCode ::= 19
id-WriteReplaceWarning
                                           ProcedureCode ::= 20
id-PWSCancel
                                           ProcedureCode ::= 21
id-PWSRestartIndication
                                           ProcedureCode ::= 22
id-PWSFailureIndication
                                           ProcedureCode ::= 23
                                           ProcedureCode ::= 24
id-GNBDUStatusIndication
                                           ProcedureCode ::= 25
id-RRCDeliveryReport
id-F1Removal
                                           ProcedureCode ::= 26
id-NetworkAccessRateReduction
                                           ProcedureCode ::= 27
-- Extension constants
  ****************
maxPrivateIEs
                                       INTEGER ::= 65535
maxProtocolExtensions
                                       INTEGER ::= 65535
                                       INTEGER ::= 65535
maxProtocolIEs
-- Lists
                                       INTEGER ::= 3279165
maxNRARFCN
maxnoofErrors
                                       INTEGER ::= 256
maxnoofIndividualF1ConnectionsToReset
                                       INTEGER ::= 65536
maxCellingNBDU
                                       INTEGER ::= 512
maxnoofSCells
                                       INTEGER ::= 32
maxnoofSRBs
                                       INTEGER ::= 8
maxnoofDRBs
                                       INTEGER ::= 64
maxnoofULUPTNLInformation
                                       INTEGER ::= 2
maxnoofDLUPTNLInformation
                                       INTEGER ::= 2
maxnoofBPLMNs
                                       INTEGER ::= 6
                                       INTEGER ::= 64
maxnoofCandidateSpCells
maxnoofPotentialSpCells
                                       INTEGER ::= 64
maxnoofNrCellBands
                                       INTEGER ::= 32
maxnoofSIBTypes
                                       INTEGER ::= 32
maxnoofSITypes
                                       INTEGER ::= 32
maxnoofPagingCells
                                       INTEGER ::= 512
maxnoofTNLAssociations
                                       INTEGER ::= 32
maxnoofOoSFlows
                                       INTEGER ::= 64
maxnoofSliceItems
                                       INTEGER ::= 1024
maxCellineNB
                                       INTEGER ::= 256
maxnoofExtendedBPLMNs
                                       INTEGER ::= 6
maxnoofUEIDs
                                       INTEGER ::= 65536
maxnoofBPLMNsNR
                               INTEGER ::= 12
maxnoofUACPLMNs
                                       INTEGER ::= 12
maxnoofUACperPLMN
                                       INTEGER ::= 64
maxnoofAdditionalSIBs
                                       INTEGER ::= 63
```

```
-- IEs
id-Cause
                                                     ProtocolIE-ID ::= 0
id-Cells-Failed-to-be-Activated-List
                                                     ProtocolTE-TD ::= 1
id-Cells-Failed-to-be-Activated-List-Item
                                                     ProtocolIE-ID ::= 2
id-Cells-to-be-Activated-List
                                                     ProtocolIE-ID ::= 3
id-Cells-to-be-Activated-List-Item
                                                     ProtocolIE-ID ::= 4
id-Cells-to-be-Deactivated-List
                                                     ProtocolIE-ID ::= 5
id-Cells-to-be-Deactivated-List-Item
                                                     ProtocolIE-ID ::= 6
id-CriticalityDiagnostics
                                                     ProtocolIE-ID ::= 7
id-CUtoDURRCInformation
                                                     ProtocolIE-ID ::= 9
id-DRBs-FailedToBeModified-Item
                                                     ProtocolIE-ID ::= 12
id-DRBs-FailedToBeModified-List
                                                     ProtocolIE-ID ::= 13
id-DRBs-FailedToBeSetup-Item
                                                     ProtocolIE-ID ::= 14
id-DRBs-FailedToBeSetup-List
                                                     ProtocolIE-ID ::= 15
id-DRBs-FailedToBeSetupMod-Item
                                                     ProtocolIE-ID ::= 16
id-DRBs-FailedToBeSetupMod-List
                                                     ProtocolIE-ID ::= 17
id-DRBs-ModifiedConf-Item
                                                     ProtocolIE-ID ::= 18
id-DRBs-ModifiedConf-List
                                                     ProtocolIE-ID ::= 19
id-DRBs-Modified-Item
                                                     ProtocolIE-ID ::= 20
id-DRBs-Modified-List
                                                     ProtocolIE-ID ::= 21
id-DRBs-Required-ToBeModified-Item
                                                     ProtocolIE-ID ::= 22
id-DRBs-Required-ToBeModified-List
                                                     ProtocolIE-ID ::= 23
id-DRBs-Required-ToBeReleased-Item
                                                     ProtocolIE-ID ::= 24
id-DRBs-Required-ToBeReleased-List
                                                     ProtocolIE-ID ::= 25
id-DRBs-Setup-Item
                                                     ProtocolIE-ID ::= 26
id-DRBs-Setup-List
                                                     ProtocolIE-ID ::= 27
id-DRBs-SetupMod-Item
                                                     ProtocolIE-ID ::= 28
id-DRBs-SetupMod-List
                                                     ProtocolIE-ID ::= 29
id-DRBs-ToBeModified-Item
                                                     ProtocolIE-ID ::= 30
id-DRBs-ToBeModified-List
                                                     ProtocolIE-ID ::= 31
id-DRBs-ToBeReleased-Item
                                                     ProtocolIE-ID ::= 32
id-DRBs-ToBeReleased-List
                                                     ProtocolIE-ID ::= 33
id-DRBs-ToBeSetup-Item
                                                     ProtocolIE-ID ::= 34
id-DRBs-ToBeSetup-List
                                                     ProtocolIE-ID ::= 35
id-DRBs-ToBeSetupMod-Item
                                                     ProtocolIE-ID ::= 36
id-DRBs-ToBeSetupMod-List
                                                     ProtocolIE-ID ::= 37
id-DRXCycle
                                                     ProtocolIE-ID ::= 38
id-DUtoCURRCInformation
                                                     ProtocolIE-ID ::= 39
id-qNB-CU-UE-F1AP-ID
                                                     ProtocolIE-ID ::= 40
id-qNB-DU-UE-F1AP-ID
                                                     ProtocolIE-ID ::= 41
id-aNB-DU-ID
                                                     ProtocolIE-ID ::= 42
id-GNB-DU-Served-Cells-Item
                                                     ProtocolIE-ID ::= 43
id-qNB-DU-Served-Cells-List
                                                     ProtocolIE-ID ::= 44
id-qNB-DU-Name
                                                     ProtocolIE-ID ::= 45
id-NRCellID
                                                     ProtocolIE-ID ::= 46
id-oldqNB-DU-UE-F1AP-ID
                                                     ProtocolIE-ID ::= 47
id-ResetType
                                                     ProtocolIE-ID ::= 48
id-ResourceCoordinationTransferContainer
                                                     ProtocolIE-ID ::= 49
```

| id-RRCContainer | ProtocolIE-ID ::= 50 |
|---|---|
| id-SCell-ToBeRemoved-Item | ProtocolIE-ID ::= 51 |
| id-SCell-ToBeRemoved-List | ProtocolIE-ID ::= 52 |
| id-SCell-ToBeSetup-Item | ProtocolIE-ID ::= 53 |
| id-SCell-ToBeSetup-List | ProtocolIE-ID ::= 54 |
| id-SCell-ToBeSetupMod-Item | ProtocolIE-ID ::= 55 |
| id-SCell-ToBeSetupMod-List | ProtocolIE-ID ::= 56 |
| id-Served-Cells-To-Add-Item | ProtocolIE-ID ::= 57 |
| id-Served-Cells-To-Add-List | ProtocolIE-ID ::= 58 |
| id-Served-Cells-To-Delete-Item | ProtocolIE-ID ::= 59 |
| id-Served-Cells-To-Delete-List | ProtocolIE-ID ::= 60 |
| id-Served-Cells-To-Modify-Item | ProtocolIE-ID ::= 61 |
| id-Served-Cells-To-Modify-List | ProtocolIE-ID ::= 62 |
| id-SpCell-ID | ProtocolIE-ID ::= 63 |
| id-SRBID | ProtocolIE-ID ::= 64 |
| id-SRBs-FailedToBeSetup-Item | ProtocolIE-ID ::= 65 |
| id-SRBs-FailedToBeSetup-List | ProtocolIE-ID ::= 66 |
| id-SRBs-FailedToBeSetupMod-Item | ProtocolIE-ID ::= 67 |
| id-SRBs-FailedToBeSetupMod-List | ProtocolIE-ID ::= 68 |
| id-SRBs-Required-ToBeReleased-Item | ProtocolIE-ID ::= 69 |
| id-SRBs-Required-ToBeReleased-List | ProtocolIE-ID ::= 70 |
| id-SRBs-ToBeReleased-Item | ProtocolIE-ID ::= 71 |
| id-SRBs-ToBeReleased-List | ProtocolIE-ID ::= 72 |
| id-SRBs-ToBeSetup-Item | ProtocolIE-ID ::= 73 |
| id-SRBs-ToBeSetup-List | ProtocoliE-ID ::= 74 |
| id-SRBs-ToBeSetupMod-Item | ProtocolIE-ID ::= 75 |
| id-SRBs-ToBeSetupMod-List | ProtocoliE-ID ::= 76 |
| id-TimeToWait | ProtocolIE-ID ::= 77 |
| id-TransactionID | ProtocolIE-ID ::= 78 |
| id-TransmissionActionIndicator | ProtocoliE-ID ::= 79 |
| id-UE-associatedLogicalF1-ConnectionItem | ProtocolIE-ID ::= 80 |
| id-UE-associatedLogicalF1-ConnectionListResAck | ProtocoliE-ID ::= 81 |
| id-qNB-CU-Name | ProtocoliE-ID ::= 82 |
| id-SCell-FailedtoSetup-List | ProtocoliE-ID ::= 83 |
| id-SCell-FailedtoSetup-Item | ProtocoliE-ID ::= 84 |
| id-SCell-FailedtoSetupMod-List | ProtocoliE-ID ::= 85 |
| id-SCell-FailedtoSetupMod-Item | ProtocoliE-ID ::= 86 |
| id-RRCReconfigurationCompleteIndicator | ProtocoliE-ID ::= 87 |
| id-Cells-Status-Item | ProtocoliE-ID ::= 87 ProtocoliE-ID ::= 88 |
| id-Cells-Status-List | ProtocoliE-ID ::= 89 |
| | ProtocoliE-ID ::= 89 ProtocoliE-ID ::= 90 |
| id-Candidate-SpCell-List | |
| id-Candidate-SpCell-Item | ProtocolIE-ID ::= 91 |
| id-Potential-SpCell-List | ProtocolIE-ID ::= 92 |
| id-Potential-SpCell-Item | ProtocolIE-ID ::= 93 |
| id-FullConfiguration | ProtocolIE-ID ::= 94 |
| id-C-RNTI | ProtocolIE-ID ::= 95 |
| id-SpCellULConfigured | ProtocolIE-ID ::= 96 |
| id-InactivityMonitoringRequest | ProtocolIE-ID ::= 97 |
| id-InactivityMonitoringResponse | ProtocolIE-ID ::= 98 |
| id-DRB-Activity-Item | ProtocolIE-ID ::= 99 |
| id-DRB-Activity-List | ProtocolIE-ID ::= 100 |
| id-EUTRA-NR-CellResourceCoordinationReq-Container | ProtocolIE-ID ::= 101 |
| id-EUTRA-NR-CellResourceCoordinationReqAck-Containe | |
| id-Protected-EUTRA-Resources-List | ProtocolIE-ID ::= 105 |

| id-RequestType | ProtocolIE-ID ::= 106 |
|--|-----------------------|
| id-ServCellIndex | ProtocolIE-ID ::= 107 |
| id-RAT-FrequencyPriorityInformation | ProtocolIE-ID ::= 108 |
| id-ExecuteDuplication | ProtocolIE-ID ::= 109 |
| id-NRCGI | ProtocolIE-ID ::= 111 |
| id-PagingCell-Item | ProtocolIE-ID ::= 112 |
| id-PagingCell-List | ProtocolIE-ID ::= 113 |
| id-PagingDRX | ProtocolIE-ID ::= 114 |
| id-PagingPriority | ProtocolIE-ID ::= 115 |
| id-SItype-List | ProtocolIE-ID ::= 116 |
| id-UEIdentityIndexValue | ProtocolIE-ID ::= 117 |
| id-gNB-CUSystemInformation | ProtocolIE-ID ::= 118 |
| id-HandoverPreparationInformation | ProtocolIE-ID ::= 119 |
| id-GNB-CU-TNL-Association-To-Add-Item | ProtocolIE-ID ::= 120 |
| id-GNB-CU-TNL-Association-To-Add-List | ProtocolIE-ID ::= 121 |
| id-GNB-CU-TNL-Association-To-Remove-Item | ProtocolIE-ID ::= 122 |
| id-GNB-CU-TNL-Association-To-Remove-List | ProtocolIE-ID ::= 123 |
| id-GNB-CU-TNL-Association-To-Update-Item | ProtocolIE-ID ::= 124 |
| id-GNB-CU-TNL-Association-To-Update-List | ProtocolIE-ID ::= 125 |
| id-MaskedIMEISV | ProtocolIE-ID ::= 126 |
| id-PagingIdentity | ProtocolIE-ID ::= 127 |
| id-DUtoCURRCContainer | ProtocolIE-ID ::= 128 |
| id-Cells-to-be-Barred-List | ProtocolIE-ID ::= 129 |
| id-Cells-to-be-Barred-Item | ProtocolIE-ID ::= 130 |
| id-TAISliceSupportList | ProtocolIE-ID ::= 131 |
| id-GNB-CU-TNL-Association-Setup-List | ProtocolIE-ID ::= 132 |
| id-GNB-CU-TNL-Association-Setup-Item | ProtocolIE-ID ::= 133 |
| id-GNB-CU-TNL-Association-Failed-To-Setup-List | ProtocolIE-ID ::= 134 |
| id-GNB-CU-TNL-Association-Failed-To-Setup-Hist | ProtocolIE-ID ::= 135 |
| id-DRB-Notify-Item | ProtocoliE-ID ::= 136 |
| id-DRB-Notify-List | ProtocoliE-ID ::= 137 |
| id-NotficationControl | |
| id-RANAC | ProtocolIE-ID ::= 138 |
| | ProtocolIE-ID ::= 139 |
| id-PWSSystemInformation | ProtocolIE-ID ::= 140 |
| id-RepetitionPeriod | ProtocolIE-ID ::= 141 |
| id-NumberofBroadcastRequest | ProtocolIE-ID ::= 142 |
| id-Cells-To-Be-Broadcast-List | ProtocolIE-ID ::= 144 |
| id-Cells-To-Be-Broadcast-Item | ProtocolIE-ID ::= 145 |
| id-Cells-Broadcast-Completed-List | ProtocolIE-ID ::= 146 |
| id-Cells-Broadcast-Completed-Item | ProtocolIE-ID ::= 147 |
| id-Broadcast-To-Be-Cancelled-List | ProtocolIE-ID ::= 148 |
| id-Broadcast-To-Be-Cancelled-Item | ProtocolIE-ID ::= 149 |
| id-Cells-Broadcast-Cancelled-List | ProtocolIE-ID ::= 150 |
| id-Cells-Broadcast-Cancelled-Item | ProtocolIE-ID ::= 151 |
| id-NR-CGI-List-For-Restart-List | ProtocolIE-ID ::= 152 |
| id-NR-CGI-List-For-Restart-Item | ProtocolIE-ID ::= 153 |
| id-PWS-Failed-NR-CGI-List | ProtocolIE-ID ::= 154 |
| id-PWS-Failed-NR-CGI-Item | ProtocolIE-ID ::= 155 |
| id-ConfirmedUEID | ProtocolIE-ID ::= 156 |
| id-Cancel-all-Warning-Messages-Indicator | ProtocolIE-ID ::= 157 |
| id-GNB-DU-UE-AMBR-UL | ProtocolIE-ID ::= 158 |
| id-DRXConfigurationIndicator | ProtocolIE-ID ::= 159 |
| id-RLC-Status | ProtocolIE-ID ::= 160 |
| id-DLPDCPSNLength | ProtocolIE-ID ::= 161 |
| | |

| 11 gyp pyg Cl 11 o | D . 177 75 160 |
|--|---|
| id-GNB-DUConfigurationQuery | ProtocolIE-ID ::= 162 |
| id-MeasurementTimingConfiguration | ProtocolIE-ID ::= 163 |
| id-DRB-Information | ProtocolIE-ID ::= 164 |
| id-ServingPLMN | ProtocolIE-ID ::= 165 |
| id-Protected-EUTRA-Resources-Item id-GNB-CU-RRC-Version | ProtocolIE-ID ::= 168 |
| id-GNB-DU-RRC-Version | ProtocolIE-ID ::= 170 ProtocolIE-ID ::= 171 |
| | |
| id-GNBDUOverloadInformation | ProtocolIE-ID ::= 172 |
| <pre>id-CellGroupConfig id-RLCFailureIndication</pre> | ProtocolIE-ID ::= 173 ProtocolIE-ID ::= 174 |
| id-UplinkTxDirectCurrentListInformation | ProtocoliE-ID ::= 174 ProtocoliE-ID ::= 175 |
| id-DC-Based-Duplication-Configured | ProtocoliE-ID ::= 175 |
| id-DC-Based-Duplication-Activation | ProtocolIE-ID ::= 177 |
| id-SULAccessIndication | ProtocoliE-ID ::= 178 |
| id-AvailablePLMNList | ProtocoliE-ID ::= 178 |
| id-PDUSessionID | ProtocoliE-ID ::= 180 |
| id-ULPDUSessionAggregateMaximumBitRate | ProtocolIE-ID ::= 181 |
| id-ServingCellMO | ProtocolIE-ID ::= 182 |
| id-QoSFlowMappingIndication | ProtocolIE-ID ::= 183 |
| id-RRCDeliveryStatusRequest | ProtocolIE-ID ::= 184 |
| id-RRCDeliveryStatus | ProtocolIE-ID ::= 185 |
| id-BearerTypeChange | ProtocolIE-ID ::= 186 |
| id-RLCMode | ProtocolIE-ID ::= 187 |
| id-Duplication-Activation | ProtocolIE-ID ::= 188 |
| id-Dedicated-SIDelivery-NeededUE-List | ProtocolIE-ID ::= 189 |
| id-Dedicated-SIDelivery-NeededUE-Item | ProtocolIE-ID ::= 190 |
| id-DRX-LongCycleStartOffset | ProtocolIE-ID ::= 191 |
| id-ULPDCPSNLength | ProtocolIE-ID ::= 192 |
| id-SelectedBandCombinationIndex | ProtocolIE-ID ::= 193 |
| id-SelectedFeatureSetEntryIndex | ProtocolIE-ID ::= 194 |
| id-ResourceCoordinationTransferInformation | ProtocolIE-ID ::= 195 |
| id-ExtendedServedPLMNs-List | ProtocolIE-ID ::= 196 |
| id-ExtendedAvailablePLMN-List | ProtocolIE-ID ::= 197 |
| id-Associated-SCell-List | ProtocolIE-ID ::= 198 |
| id-latest-RRC-Version-Enhanced | ProtocolIE-ID ::= 199 |
| id-Associated-SCell-Item | ProtocolIE-ID ::= 200 |
| id-Cell-Direction | ProtocolIE-ID ::= 201 |
| id-SRBs-Setup-List | ProtocolIE-ID ::= 202 |
| id-SRBs-Setup-Item | ProtocolIE-ID ::= 203 |
| id-SRBs-SetupMod-List | ProtocolIE-ID ::= 204 |
| id-SRBs-SetupMod-Item | ProtocolIE-ID ::= 205 |
| id-SRBs-Modified-List | ProtocolIE-ID ::= 206 |
| id-SRBs-Modified-Item | ProtocolIE-ID ::= 207 |
| id-Ph-InfoSCG | ProtocolIE-ID ::= 208 |
| id-RequestedBandCombinationIndex | ProtocolIE-ID ::= 209 |
| id-RequestedFeatureSetEntryIndex | ProtocolIE-ID ::= 210 |
| id-RequestedP-MaxFR2 | ProtocolIE-ID ::= 211 |
| id-DRX-Config | ProtocolIE-ID ::= 212 |
| id-IgnoreResourceCoordinationContainer | ProtocolIE-ID ::= 213 |
| id-UEAssistanceInformation | ProtocolIE-ID ::= 214 |
| id-NeedforGap | ProtocolIE-ID ::= 215 |
| id-PagingOrigin | ProtocolIE-ID ::= 216 |
| id-new-gNB-CU-UE-F1AP-ID | ProtocolIE-ID ::= 217 |
| id-RedirectedRRCmessage | ProtocolIE-ID ::= 218 |
| | |

```
id-new-qNB-DU-UE-F1AP-ID
                                                    ProtocolIE-ID ::= 219
id-NotificationInformation
                                                    ProtocolIE-ID ::= 220
id-PLMNAssistanceInfoForNetShar
                                                    ProtocolIE-ID ::= 221
id-UEContextNotRetrievable
                                                    ProtocolIE-ID ::= 222
id-BPLMN-ID-Info-List
                                                    ProtocolIE-ID ::= 223
id-SelectedPLMNID
                                                    ProtocolIE-ID ::= 224
id-UAC-Assistance-Info
                                                    ProtocolIE-ID ::= 225
id-RANUEID
                                                    ProtocolIE-ID ::= 226
id-GNB-DU-TNL-Association-To-Remove-Item
                                                    ProtocolIE-ID ::= 227
id-GNB-DU-TNL-Association-To-Remove-List
                                                    ProtocolIE-ID ::= 228
id-TNLAssociationTransportLayerAddressgNBDU
                                                    ProtocolIE-ID ::= 229
id-portNumber
                                                    ProtocolIE-ID ::= 230
id-AdditionalSIBMessageList
                                                    ProtocolIE-ID ::= 231
id-Cell-Type
                                                    ProtocolIE-ID ::= 232
id-IgnorePRACHConfiguration
                                                    ProtocolIE-ID ::= 233
id-CG-Config
                                                    ProtocolIE-ID ::= 234
id-PDCCH-BlindDetectionSCG
                                                    ProtocolIE-ID ::= 235
id-Requested-PDCCH-BlindDetectionSCG
                                                    ProtocolIE-ID ::= 236
id-Ph-InfoMCG
                                                    ProtocolIE-ID ::= 237
id-MeasGapSharingConfig
                                                    ProtocolIE-ID ::= 238
id-systemInformationAreaID
                                                    ProtocolIE-ID ::= 239
id-areaScope
                                                    ProtocolIE-ID ::= 240
id-RRCContainer-RRCSetupComplete
                                                    ProtocolIE-ID ::= 241
id-ConfiguredTACIndication
                                                    ProtocolIE-ID ::= 425
id-SCGIndicator
                                                    ProtocolIE-ID ::= 432
```

END

-- ASN1STOP

9.4.8 Container Definitions

```
IMPORTS
   Criticality,
   Presence,
   PrivateIE-ID,
   ProtocolExtensionID,
   ProtocolIE-ID
FROM F1AP-CommonDataTypes
   maxPrivateIEs,
   maxProtocolExtensions,
   maxProtocolIEs
FROM F1AP-Constants;
__ *********************
-- Class Definition for Protocol IEs
__ ********************
F1AP-PROTOCOL-IES ::= CLASS {
                                             UNIQUE,
   &id
                 ProtocolIE-ID
   &criticality
                 Criticality,
   &Value,
   &presence
                 Presence
WITH SYNTAX {
   ID
                 &id
                 &criticality
   CRITICALITY
   TYPE
                 &Value
   PRESENCE
                 &presence
  ******************
-- Class Definition for Protocol IEs
F1AP-PROTOCOL-IES-PAIR ::= CLASS {
                     ProtocolIE-ID
                                             UNIQUE,
   &firstCriticality Criticality,
   &FirstValue,
   &secondCriticality Criticality,
   &SecondValue,
   &presence
                     Presence
WITH SYNTAX {
                 &id
                        &firstCriticality
   FIRST CRITICALITY
                        &FirstValue
   FIRST TYPE
   SECOND CRITICALITY
                        &secondCriticality
   SECOND TYPE
                        &SecondValue
                        &presence
   PRESENCE
```

```
-- Class Definition for Protocol Extensions
F1AP-PROTOCOL-EXTENSION ::= CLASS {
                 ProtocolExtensionID
                                         UNIQUE,
   &criticality Criticality,
   &Extension,
   &presence
                 Presence
WITH SYNTAX {
   ID
                 &id
                 &criticality
   CRITICALITY
                 &Extension
   EXTENSION
   PRESENCE
                 &presence
  ******************
-- Class Definition for Private IEs
  *****************
F1AP-PRIVATE-IES ::= CLASS {
   &id
                 PrivateIE-ID,
   &criticality Criticality,
   &Value,
   &presence
                 Presence
WITH SYNTAX {
                 &id
   CRITICALITY
                 &criticality
   TYPE
                 &Value
   PRESENCE
                 &presence
-- Container for Protocol IEs
__ ********************
ProtocolIE-Container {F1AP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-SingleContainer {F1AP-PROTOCOL-IES : IEsSetParam} ::=
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {F1AP-PROTOCOL-IES : IESSetParam} ::= SEQUENCE {
```

```
({IEsSetParam}),
                   F1AP-PROTOCOL-IES.&id
   criticality
                  F1AP-PROTOCOL-IES.&criticality
                                                      ({IEsSetParam}{@id}),
                                                      ({IEsSetParam}{@id})
   value
                   F1AP-PROTOCOL-IES.&Value
     *****************
  Container for Protocol IE Pairs
ProtocolIE-ContainerPair {F1AP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-FieldPair {{IEsSetParam}}
ProtocolIE-FieldPair {F1AP-PROTOCOL-IES-PAIR : IESSetParam} ::= SEOUENCE {
                      F1AP-PROTOCOL-IES-PAIR.&id
                                                                  ({IEsSetParam}),
                                                                  ({IEsSetParam}{@id}),
   firstCriticality F1AP-PROTOCOL-IES-PAIR.&firstCriticality
    firstValue
                                                                  ({IEsSetParam}{@id}),
                   F1AP-PROTOCOL-IES-PAIR.&FirstValue
    secondCriticality F1AP-PROTOCOL-IES-PAIR.&secondCriticality
                                                                 ({IEsSetParam}{@id}),
    secondValue
                       F1AP-PROTOCOL-IES-PAIR.&SecondValue
                                                                  ({IEsSetParam}{@id})
  Container for Protocol Extensions
ProtocolExtensionContainer {FlAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
   SEOUENCE (SIZE (1..maxProtocolExtensions)) OF
   ProtocolExtensionField {{ExtensionSetParam}}
ProtocolExtensionField {F1AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE
                                                              ({ExtensionSetParam}),
   id
                      F1AP-PROTOCOL-EXTENSION.&id
                      F1AP-PROTOCOL-EXTENSION.&criticality
                                                              ({ExtensionSetParam}{@id}),
   criticality
    extensionValue
                      F1AP-PROTOCOL-EXTENSION.&Extension
                                                              ({ExtensionSetParam}{@id})
-- Container for Private IEs
PrivateIE-Container {F1AP-PRIVATE-IES : IEsSetParam } ::=
   SEQUENCE (SIZE (1.. maxPrivateIEs)) OF
   PrivateIE-Field {{IEsSetParam}}
PrivateIE-Field {F1AP-PRIVATE-IES : IEsSetParam} ::= SEQUENCE {
                                                          ({IEsSetParam}),
                      F1AP-PRIVATE-IES.&id
   criticality
                       F1AP-PRIVATE-IES.&criticality
                                                          ({IEsSetParam}{@id}),
   value
                      F1AP-PRIVATE-IES.&Value
                                                          ({IEsSetParam}{@id})
```

END

-- ASN1STOP

9.5 Message Transfer Syntax

F1AP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ITU-T Recommendation X.691 [5].

9.6 Timers

Handling of unknown, unforeseen and erroneous protocol data

Clause 10 of TS 38.413 [3] is applicable for the purposes of the present document, with the following additions for non-UE-associated procedures:

- In case of Abstract Syntax Error, when reporting the *Criticality Diagnostics* IE for not comprehended IE/IEgroups or missing IE/IE groups, the *Transaction ID* IE shall also be included;
- In case of Logical Error, when reporting the *Criticality Diagnostics* IE, the *Transaction ID* IE shall also be included;
- In case of Logical Error in a response message of a Class 1 procedure, or failure to comprehend *Transaction ID* IE from a received message, the procedure shall be considered as unsuccessfully terminated or not terminated (e.g., transaction ID unknown in response message), and local error handling shall be initiated.

Annex A (informative): Change History

| | I | I | 1 | | | Change history | I |
|--------------------|----------------|------------------------|---------------|---------------|-----|--|------------------|
| Date | Meeting | TDoc | CR | Rev | Cat | Subject/Comment | New version |
| 2017-06 | R3 NR#2 | R3-172493 | _ | _ | _ | First version | 0.1.0 |
| 2017-00 | R3 NR#2 | R3-172493 | - | | - | Incorporated agreed TPs from R3 NR#2 Adhoc | 0.1.0 |
| 2017-08 | R3#97 | R3-173451 | - | - | - | Incorporated agreed TPs from R3#97 | 0.3.0 |
| 2017-10 | R3#97b | R3-174247 | - | - | - | Incorporated agreed TPs from R3#97b | 0.4.0 |
| 2017-12 | R3#98 | R3-175062 | - | - | - | Incorporated agreed TPs from R3#98 | 0.5.0 |
| 2017-12 | RAN#78 | RP-172287 | | | | Submitted for approval to RAN | 1.0.0 |
| 2017-12 | RAN#78 | | | | | TR approved by RAN plenary | 15.0.0 |
| 2018-03 | RP-79 | RP-180468 | 0001 | 2 | В | Baseline CR for March version of TS 38.473 covering agreements of RAN3#99 | 15.1.0 |
| 2018-04 | | | | | | Editorial correction to ASN.1 (correction to id-TimeToWait ProtocollE-ID) | 15.1.1 |
| 2018-06 | RP-80 | RP-181237 | 0011 | 6 | В | Introduction of SA NR (38.473 Baseline CR covering RAN3 agreements) | 15.2.0 |
| 2018-06 | RP-80 | RP-181239 | 0043 | 3 | F | Essential corrections of EN-DC for NSA NR (38.473 Baseline CR covering RAN3 agreements) | 15.2.0 |
| 2018-06 | RP-80 | RP-181237 | 0045 | _ | В | F1 support for LTE - NR coexistence | 15.2.0 |
| 2018-06 | RP-80 | 101201 | 00-10 | | | Correction to ASN.1 and to Change History table | 15.2.1 |
| 2018-09 | RP-81 | RP-181920 | 0055 | 2 | F | Introduction of DU Configuration Query | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0056 | 4 | | CR to 38.473 on further clarifications on System information transfer over F1 | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0058 | 4 | F | CR to 38.473 on corrections to System information delivery | 15.3.0 |
| 2018-09 | RP-81 | RP-181920 | 0059 | 1 | | CR to 38.473 on corrections to PWS transfer over F1 | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0063 | 3 | F | CR to 38.473 on PDCP SN over F1 interface | 15.3.0 |
| 2018-09 | RP-81 | RP-181922 | 0064 | 3 | F | NR Corrections (38.473 Baseline CR covering RAN3-101 agreements) | 15.3.0 |
| 2018-09 | RP-81 | RP-181997 | 0068 | - | F | Introduction of UL AMBR on F1 | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0072 | 3 | | Correction on cell management | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0073 | 2 | | RLC Mode Indication over F1 | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0076 | 3 | | CR to 38.473 on UE Identity Index value | 15.3.0 |
| 2018-09 | RP-81 | RP-181920 | 0077 | 1 | F | Correction for UE Context Modification on presence of ServCellIndex IE | 15.3.0 |
| 2018-09 | RP-81 | RP-181920 | 0078 | - | F | Executing duplication for RRC-container | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0079 | 1 | F | Indication of RLC re-establishment at the gNB-DU | 15.3.0 |
| 2018-09 | RP-81 | RP-181920 | 0800 | - | F | Exchange of SMTC over F1 | 15.3.0 |
| 2018-09 | RP-81 | RP-181920 | 0081 | - | F | Solving remaining issues with QoS parameters – TS 38.473 | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0090 | 4 | F | Correction of 5GS TAC | 15.3.0 |
| 2018-09 2018-09 | RP-81 RP-81 | RP-181921 RP-181921 | 0095 0097 | 1 | F | Extend the RANAC size to 8bits Corrections of Choice | 15.3.0 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0098 | 1 | | Correction of TNL criticality | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0099 | 1 | | Corrections of usage of single container | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0105 | 2 | В | RRC version handling | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0106 | 1 | В | Introduction of Overload Handling in F1-C | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0113 | - | F | CR to 38.473 on presence of QoS information | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0114 | 1 | F | Correction C-RNTI format | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0115 | - | F | Correction of QoS Parameters | 15.3.0 |
| 2018-09 | RP-81 | RP-181921 | 0116 | 1 | F | Correction on F1 Setup Request | 15.3.0 |
| 2018-12 2018-12 | RP-82 RP-82 | RP-182446 | 0070 0117 | 3 | | RRC Delivery Indication | 15.4.0 15.4.0 |
| 2018-12 | RP-82 | RP-182446 RP-182446 | 0138 | - | F | Correction of AMBR Enforcement CR for correction on Initial UL RRC message transfer | 15.4.0 |
| 2018-12 | RP-82 | RP-182446 | 0140 | 1 | F | CR to 38.473 on bearer type change indication | 15.4.0 |
| 2018-12 | RP-82 | RP-182446 | 0142 | 1 | | CR to 38.473 on correction to PWS System Information | 15.4.0 |
| 2018-12 | RP-82 | RP-182446 | 0144 | 2 | | CR to 38.473 on asymmetric mapping for UL and DL QoS flow | 15.4.0 |
| 2018-12 | RP-82 | RP-182447 | 0145 | 4 | F | Corrections on UE-associated LTE/NR resource coordination | 15.4.0 |
| 2018-12 | RP-82 | RP-182446 | 0147 | 2 | F | CR for F1 Cell Management | 15.4.0 |
| 2018-12 | RP-82 | RP-182447 | 0150 | 1 | | Missing Transaction ID in non-UE-associated procedures | 15.4.0 |
| 2018-12 | RP-82 | RP-182446 | 0157 | 1 | | CR to 38.473 on mapping of servingCellMO and Serving Cell | 15.4.0 |
| 2018-12 | RP-82 | RP-182446 | 0160 | 1 | | CR to 38.473 on UE context modification required procedure | 15.4.0 |
| 2018-12 2018-12 | RP-82 RP-82 | RP-182447 RP-182448 | 0165 0167 | 2 | | Addition of the RLC Mode information for bearer modification Rapporteur CR to align tabular | 15.4.0 15.4.0 |
| 2018-12 | RP-82 | RP-182448 | 0168 | 2 | | Rapporteur CR to align ASN.1 | 15.4.0 |
| 2018-12 | RP-82 | RP-182447 | 0169 | 2 | F | Correction of MaxnoofBPLMNs | 15.4.0 |
| 2018-12 | RP-82 | RP-182351 | 0174 | 2 | F | Correction on PDCP SN length on F1 | 15.4.0 |
| 2018-12 | RP-82 | RP-182447 | 0178 | 2 | F | CR for TS 38.473 for MR-DC coordination | 15.4.0 |
| 2018-12 | RP-82 | RP-182447 | 0179 | 2 | F | Support of system information update for active UE without CSS | 15.4.0 |
| 2018-12 | RP-82 | RP-182447 | 0187 | 1 | | CR to 38.473 on clarification to the presence of UE AMBR | 15.4.0 |
| | DD 00 | RP-182506 | 0195 | 2 | F | CR on Scell release for RLC failure | 15.4.0 |
| 2018-12 2018-12 | RP-82 RP-82 | RP-182447 | 0205 | 1 | | About bandcombinationindex and featureSetEntryIndex | 15.4.0 |

| 2018-12 | RP-82 | RP-182447 | 0216 | 1 | F | CD to 29 472 on planifications on system information undets over E1 | 15.4.0 |
|--------------------|----------------|------------------------|--------------|-----|----------|---|------------------|
| 2018-12 | RP-82 | RP-182448 | 0216 0219 | - 1 | F | CR to 38.473 on clarifications on system information update over F1 Correction of RRC version handling and UE inactivity notification | 15.4.0 |
| 2019-01 | RP-82 | 111 - 102440 | 0213 | | | - correction to ASN.1: | 15.4.1 |
| 2019-01 | 111 -02 | | | | | addiming a missing change to "WriteReplaceWarningResponselEs | 13.4.1 |
| | | | | | | F1AP-PROTOCOL-IES ::= {" | |
| 2019-03 | RP-83 | RP-190555 | 0202 | 2 | F | Indication that cells are only UL or DL on F1 | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0204 | 1 | F | AMF intitiated UE Context Release failure cause | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0220 | 1 | F | Correction to reconfiguration with sync for gNB-DU | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0225 | 1 | F | Introduction of PH-InforSCG in DU to CU RRC Information | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0226 | 1 | F | CR to 38.473 on Measurement gap coordination | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0228 | 1 | F | CR for TS 38.473 for MR-DC coordination | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0229 | 2 | F | Condition for inclusion of the Dedicated SI Delivery Needed UE List | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0230 | 1 | F | IE Correction of the Transmission stop/restart indication | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0230 | - 1 | F | Correction of the Transmission stopprestart indication Corrections on gNB-CU/gNB-DU Configuration Update | 15.5.0 |
| 2019-03 | RP-83 | RP-190556 | 0236 | 2 | F | Correction of QoS Flow Mapping Indication | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0244 | - | F | Release due to pre-emption | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0245 | 2 | F | CR on RRC container in UE context modification request message | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0246 | 2 | F | CR on UE context modification refuse | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0247 | - | F | Transaction ID in Error Indication procedure | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0249 | 2 | F | Cells to be deactivated over F1 | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0251 | 1 | F | CR to 38.473 on SRB duplication and LCID | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0258 | - | F | CR to 38.473 on corrections for removal of PDCP duplication for | 15.5.0 |
| | | | | | | SRB | |
| 2019-03 | RP-83 | RP-190554 | 0263 | 1 | F | CR to 38.473 on transfering UEAssistanceInformation over F1 | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0265 | - | F | Rapporteur updates | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0266 | 1 | F | Correction on gNB-DU Resource Coordination | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0267 | 1 | F | Endpoint IP address and port | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0268 | 1 | F F | Correction to add paging origin IE | 15.5.0 |
| 2019-03 2019-03 | RP-83 RP-83 | RP-190555 RP-190554 | 0269 0272 | 2 | F | Multiple SCTP associations over F1AP About Cells Failed to be Activated IE in gNB-CU Configuration | 15.5.0 15.5.0 |
| 2019-03 | KF-03 | KF-190554 | 0272 | 1 | Г | Update Ack | 15.5.0 |
| 2019-03 | RP-83 | RP-190556 | 0273 | 1 | F | gNB-DU UE Aggregate Maximum Bit Rate Uplink correction | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0276 | 1 | F | RRC Reconfiguration failure | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0278 | 1 | F | Node behaviour at reception of DU to CU RRC Information | 15.5.0 |
| 2019-03 | RP-83 | RP-190554 | 0281 | - | F | Addition of Transaction ID to Initial UL RRC Message Transfer | 15.5.0 |
| 2019-07 | RP-84 | RP-191397 | 0200 | 5 | F | RAN sharing with multiple Cell ID broadcast | 15.6.0 |
| 2019-07 | RP-84 | RP-191397 | 0270 | 5 | F | Addition of Network Access Rate Reduction message | 15.6.0 |
| 2019-07 | RP-84 | RP-191397 | 0271 | 3 | F | RAN UE ID for F1 | 15.6.0 |
| 2019-07 | RP-84 | RP-191396 | 0283 | 2 | F | MR-DC resource coordination in F1 | 15.6.0 |
| 2019-07 | RP-84 | RP-191396 | 0316 | 2 | F | Full configuration indication from gNB-CU to gNB-DU. | 15.6.0 |
| 2019-07 | RP-84 | RP-191396 | 0322 | 2 | F | CR to 38.473 on clarification to RRC reconfigure complete indicator | 15.6.0 |
| 2019-07 | RP-84 | RP-191394 | 0326 | 2 | F | CR to 38.473 on deconfiguring CA based PDCP duplication for DRB | 15.6.0 |
| 2019-07 | RP-84 | RP-191395 | 0330 | 3 | F | CR to 38.473 on Removal of Multiple TNLAs | 15.6.0 |
| 2019-07 | RP-84 | RP-191396 | 0348 | - | | Full configuration in UE Context Setup | 15.6.0 |
| 2019-07 | RP-84 | RP-191396 | 0351 | 2 | <u> </u> | CR on PWS segmentation over F1 | 15.6.0 |
| 2019-07 | RP-84 RP-84 | RP-191396 | 0352 | 1 | F F | CR on cell type over F1 | 15.6.0 |
| 2019-07 2019-07 | RP-84 | RP-191396 RP-191396 | 0357 | - | F | Rapporteur updates: Alignment and editorials Rapporteur update: Correction of Presence for DRB information | 15.5.0 |
| 2019-07 | RP-84 | RP-191396 RP-191396 | 0358 0359 | - | F | Rapporteur updates: Correction of Presence for E-UTRA PRACH | 15.6.0 15.6.0 |
| 2010-01 | 111 04 | 11 101090 | 0000 | | • | Configuration | 10.0.0 |
| 2019-07 | RP-84 | RP-191396 | 0370 | - | F | Full configuration IE included in the UE Context Modification | 15.6.0 |
| | | | | | | Response. | |
| 2019-07 | RP-84 | RP-191396 | 0376 | | F | CR to 38.473 on clarification for UP TNL Information IE over F1 | 15.6.0 |
| | | | | | | | |
| 2019-07 | RP-84 | RP-191396 | 0377 | 2 | F | Procedure description on optional IEs in CU to DU RRC information | 15.6.0 |
| 0010 | DD 0= | DD (22: | 00.15 | | | IE. | 4 |
| 2019-09 | RP-85 | RP-192166 | 0343 | 3 | F | CR on MR-DC low layer coordination with an MgNB-DU | 15.7.0 |
| 2019-09 | RP-85 | RP-192166 | 0344 | 2 | <u></u> | CR on MCG PHR format in MgNB-DU | 15.7.0 |
| 2019-09 | RP-85 | RP-192166 | 0388 | | F | CR on DC Coordination for PDCCH Blind Detection | 15.7.0 |
| 2019-09 | RP-85 | RP-192167 | 0393 | 1 | F | Rapporteur update - clarification of semantics | 15.7.0 |
| 2019-09 | RP-85 | RP-192166 | 0399 | 1 | F | Clarification for TNLA removal | 15.7.0 |
| 2019-03 | RP-86 | RP-192915 | 0318 | 5 | F | Correction about gNB-CU System Information IE | 15.7.0 |
| 2019-12 | RP-86 | RP-192915 | 0447 | 1 | F | On CellGroupConfig handling | 15.8.0 |
| 2019-12 | RP-86 | RP-192915 | 0458 | 1 | F | Correction of S-NSSAI coding | 15.8.0 |
| 2019-12 | RP-86 | RP-192915 | 0459 | 1 | F | Removal of Requested P-MaxFR2 | 15.8.0 |
| 2019-12 | RP-86 | RP-192915 | 0479 | 2 | F | Addition of Message Identifier and Serial Number to PWS Cancel | 15.8.0 |
| 2013 12 | | | | | | | Î. |
| | | | | | | Request | |
| 2019-12 2019-12 | RP-86 RP-86 | RP-192916 RP-192916 | 0482 0494 | 2 | F F | Clarifications on SCell lists RRC Container in Modification Procedure | 15.8.0 15.8.0 |

| | DD 00 | DD 100010 | 0500 | | | 10D : 00 470 | 45.0.0 |
|--------------------|---------|-----------|--------------|--------|------------|--|---------|
| 2019-12 | RP-86 | RP-192916 | 0508 | 0 | F | CR to 38.473 on applicability of the IE Selected | 15.8.0 |
| 2019-12 | RP-86 | RP-192916 | 0509 | 1 | F | BandCombinationIndex and Selected FeatureSetEntryIndex | 15.8.0 |
| 2019-12 | KP-86 | RP-192916 | 0509 | 1 | г | CR to 38.473 on MeasGapSharingConfig and gNB-CU System Information | 15.8.0 |
| 2040.40 | RP-86 | DD 400040 | 0540 | 4 | _ | | 45.0.0 |
| 2019-12 | | RP-192916 | 0510 | 1 | F F | CR to 38.473 on cause values over F1 | 15.8.0 |
| 2019-12 | RP-86 | RP-192916 | 0515 | 2 | F | Clarification on Initial UL RRC Message Transfer procedure | 15.8.0 |
| 2020-03 | RP-87-e | RP-200428 | 0521 | 1 | - | Correction of PWS Failure Indication | 15.9.0 |
| 2020-03 | RP-87-e | RP-200428 | 0524 | - | F | Correction of the presence of UL UP TNL Information to be setup | 15.9.0 |
| 0000.00 | DD 07 - | DD 000400 | 0500 | - | _ | List IE in tabular | 45.0.0 |
| 2020-03 | RP-87-e | RP-200428 | 0532 | 1 | F | Correction relating to Initial UL RRC Message Transfer procedure | 15.9.0 |
| 0000.07 | DD 00 - | DD 004000 | 05.40 | 0 | _ | CR 38.473 | 45.40.0 |
| 2020-07 2020-07 | RP-88-e | RP-201090 | 0542 0544 | 2 1 | F F | Encoding PLMNs in served cell information NR | 15.10.0 |
| | RP-88-e | RP-201091 | | 1 | | Correction for usage of Cell Broadcast Cancelled List | 15.10.0 |
| 2020-07 | RP-88-e | RP-201091 | 0546 | - | F | Correction on UE CONTEXT MODIFICATION REQUIRED message | 15.10.0 |
| 2020-07 | RP-88-e | RP-201090 | 0566 | - | F | Encoding PLMNs in served cell information IEs - semantics | 15.10.0 |
| 2000 07 | DD 00 | DD 004000 | 0500 | _ | | corrections | 45.40.0 |
| 2020-07 | RP-88-e | RP-201092 | 0569 | 1 | F | Correction for UL UP TNL Information | 15.10.0 |
| 2020-07 | RP-88-e | RP-201092 | 0571 | - | F | Correction on RRC Container in Initial UL RRC Messag Transfer | 15.10.0 |
| 2020-07 | RP-88-e | RP-201092 | 0575 | 1 | F | Correction on RRC Connection Reconfiguration Complete Indicator | 15.10.0 |
| 2020-07 | RP-88-e | RP-201092 | 0602 | 1 | <u>F</u> | Correction for Handover Preparation Information | 15.10.0 |
| 2020-07 | RP-88-e | RP-201092 | 0606 | 1 | <u>_F_</u> | CR on Concurrent Warning Message Indicator over F1 (Rel-15) | 15.10.0 |
| 2020-07 | RP-88-e | RP-201092 | 0612 | - | F | Correction on DL RRC MESSAGE TRANSFER | 15.10.0 |
| 2020-07 | RP-88-e | RP-201092 | 0614 | - | F | Section renumbering for PWS cancel | 15.10.0 |
| 2020-07 | RP-88-e | RP-201092 | 0617 | - | F | Addition of abnormal conditions in PWS Cancel procedure | 15.10.0 |
| 2020-09 | RP-89-e | RP-201956 | 0556 | 2 | F | Support of PSCell/SCell-only operation mode | 15.11.0 |
| 2020-09 | RP-89-e | RP-201956 | 0586 | 5 | F | Measurement gap deactivation over F1AP CR 38.473 | 15.11.0 |
| 2020-09 | RP-89-e | RP-201956 | 0627 | 2 | F | Correction of PSCell/SCell-only mode | 15.11.0 |
| 2020-09 | RP-89-e | RP-201956 | 0633 | 1 | F | Correction on UE Context Modification Procedure | 15.11.0 |
| 2020-09 | RP-89-e | RP-201956 | 0641 | - | F | Correction of PWS cancel | 15.11.0 |
| 2020-10 | RP-89-e | | | - | | Correct wrong numbering of protocollE-ID | 15.11.1 |
| | | | | | | - id-ConfiguredTACIndication | |
| 2020-12 | RP-90-e | RP-202287 | 0694 | 3 | F | Correction on value range of UAC reduction Indication | 15.12.0 |
| 2021-03 | RP-91-e | RP-210240 | 0631 | 5 | F | Correction on Overlapping Band Handling over F1 | 15.13.0 |
| 2021-06 | RP-92-e | RP-211334 | 0703 | 5 | F | How to release SCG configuration between MN-CU and MN-DU CR | 15.14.0 |
| | | | | | | 38.473 | |
| 2021-06 | RP-92-e | RP-211333 | 0752 | | F | Stage-3 CR on system information message over F1 (Rel-15) | 15.14.0 |
| 2021-06 | RP-92-e | RP-211333 | 0759 | - | F | Correction on SRB ID | 15.14.0 |
| 2021-06 | RP-92-e | RP-211334 | 0761 | 2 | F | gNB-DU UE Aggregate Maximum Bit Rate Uplink correction | 15.14.0 |
| 2021-09 | RP-93-e | RP-211881 | 0799 | - | F | Correction of the IE related to E-UTRA resource coordination in | 15.15.0 |
| | | | | | | F1AP | |

History

| | Document history | | | | | | |
|----------|------------------|-------------|--|--|--|--|--|
| V15.2.1 | July 2018 | Publication | | | | | |
| V15.3.0 | October 2018 | Publication | | | | | |
| V15.4.1 | April 2019 | Publication | | | | | |
| V15.5.0 | May 2019 | Publication | | | | | |
| V15.6.0 | July 2019 | Publication | | | | | |
| V15.7.0 | October 2019 | Publication | | | | | |
| V15.8.0 | January 2020 | Publication | | | | | |
| V15.9.0 | April 2020 | Publication | | | | | |
| V15.10.0 | July 2020 | Publication | | | | | |
| V15.11.1 | November 2020 | Publication | | | | | |
| V15.12.0 | January 2021 | Publication | | | | | |
| V15.13.0 | April 2021 | Publication | | | | | |
| V15.14.0 | August 2021 | Publication | | | | | |
| V15.15.0 | October 2021 | Publication | | | | | |