

Vinyl cutter guide



Figure 1: Our vinyl cutter

Theory





Figure 2: Uppsala Makerspace

Contents


Foreword	2
0. Check if Inkcut is already installed	3
1. Install Inkcut	4
2. Setup Inkcut	5
3. Get T-shirts	6
4. Get vinyl	7
5. Connect the vinyl cutter	8
6. Setup the vinyl cutter	9
7. Place foil on the vinyl cutter	10
8. Set up Inkcut connection	11
9. Use Inkcut	13
10. Set up heat press	15
11. Peel vinyl	16
12. Transfer vinyl to T-shirt	17
Troubleshooting	18

Example Correct

Incorrect

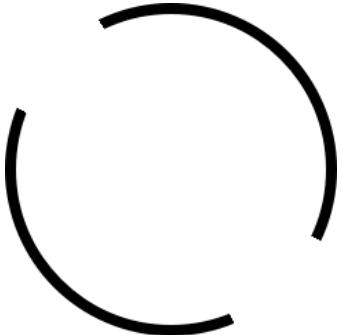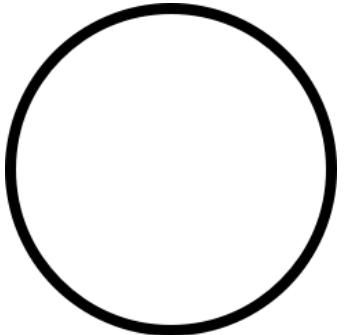

Circle

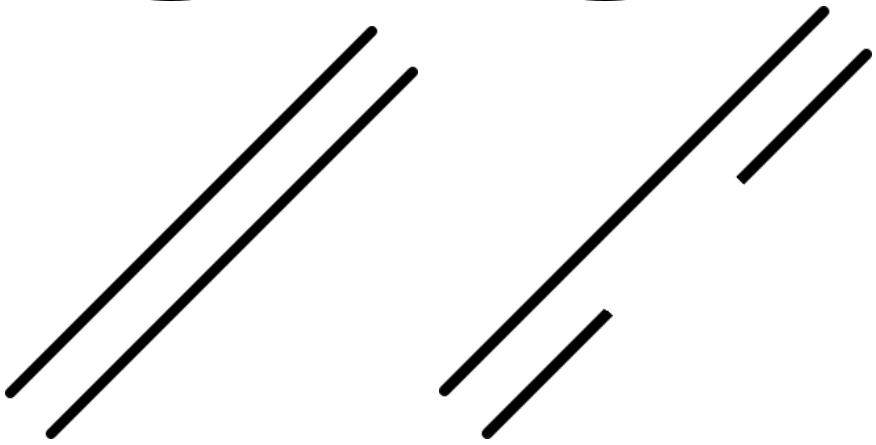

Lines

This happens when the force of the knife is too low.. In step 6: setup the vinyl cutter, increase the force.

Foreword

This is a book about using the Vevor cutter at the Uppsala Makerspace.

Some pieces of advice:

Have your material (T-shirt) ready. Make sure the right color of vinyl is loaded. Have your USB with your .svg file ready.

About this book

This book has a CC-BY-NC-SA licence.



Figure 1: Licence for this book

(C) Richèl Bilderbeek and all contributors

You can do whatever you like with this book, as long as you give proper credit to us and/or mention the website https://uppsala-makerspace.github.io/vevor_vinyl_cutter_to_t_shirt_manual/.

This guide will always be free (as in beer) and free (as in freedom).



Figure 2: QR Code of this guide

0. Check if Inkcutter is already installed


On a Linux computer, open a terminal window.

Type

```
~/inkcut_venv/bin/inkcut
```

If Inkcutter starts then it is installed.

Go to step 3.

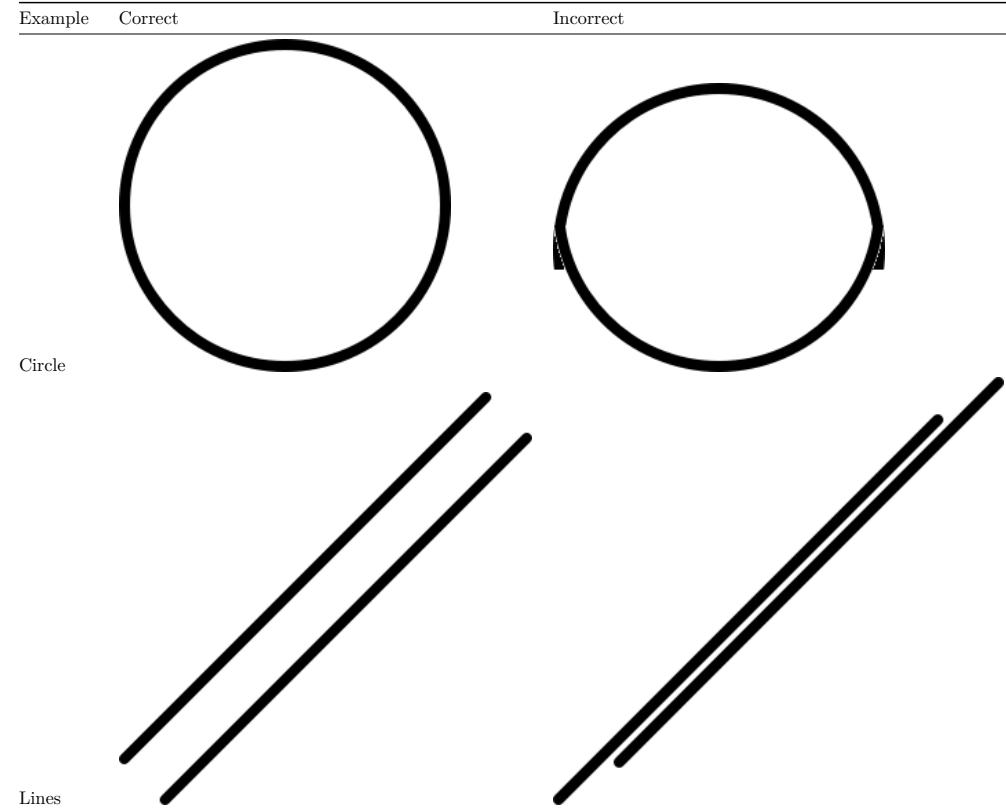

This happens when you have three roller wheels connected to the vinyl, instead of just two.
Disconnect the middle weel from the vinyl.

The cut does not cut



Figure 14: The right wheel is not on the roller



Figure 15: The vinyl cutter is confused

1. Install Inkcutter

Inkcutter is a program to send things to cut to the vinyl cutter. It works under Linux, Mac and Windows. This guide shows how to do this for Linux.

If you could provide these instructions for Mac or Windows, please contribute!

1.1 Start a terminal

On a Linux computer, start a terminal:

- Press the Meta/Windows key (between Ctrl and Alt at the bottom left of the keyboard)
- Type `terminal`

Now you have started a terminal

1.2 Install the Debian packages

Copy-paste the following command to the terminal:

```
sudo apt-get install python3-pip python3-pyqt5 python3-setuptools
```

Probably you will need to type a password and press enter.

You will probably be asked if you want to install these programs. Type 'Y' and press enter.

You will see a lot of programs being installed.

Well done!

Now repeat with this command:

```
sudo apt-get install libcups2-dev python3-pyqt5.qtsvg
```

1.3 Create a virtual environment for Inkcutter

Create a (mandatory!) virtual environment for Inkcutter:

```
python3 -m venv ~/inkcutter_venv
```

If you get the error 'The virtual environment was not created successfully', try:

```
sudo apt install python3.12-venv
```

1.4 Install Python packages in the virtual environment

Install the Inkcutter and PyQt5 Python packages in the virtual environment"

```
~/inkcutter_venv/bin/pip install inkcutter PyQt5
```

1.5 Start Inkcutter

Now you can start `inkcutter` with:

```
~/inkcutter_venv/bin/inkcutter
```

Inkcutter is now started. Well done!

2. Setup Inkcutter

2.1 Start a terminal

On a Linux computer, start a terminal.

2.2 Add yourself to the dialout group

Add yourself to the dialout group:

```
sudo usermod -a -G dialout "$USER"
```

2.3 Reboot the computer

Reboot the computer.

Troubleshooting

The vinyl cutter is wrinkling the paper

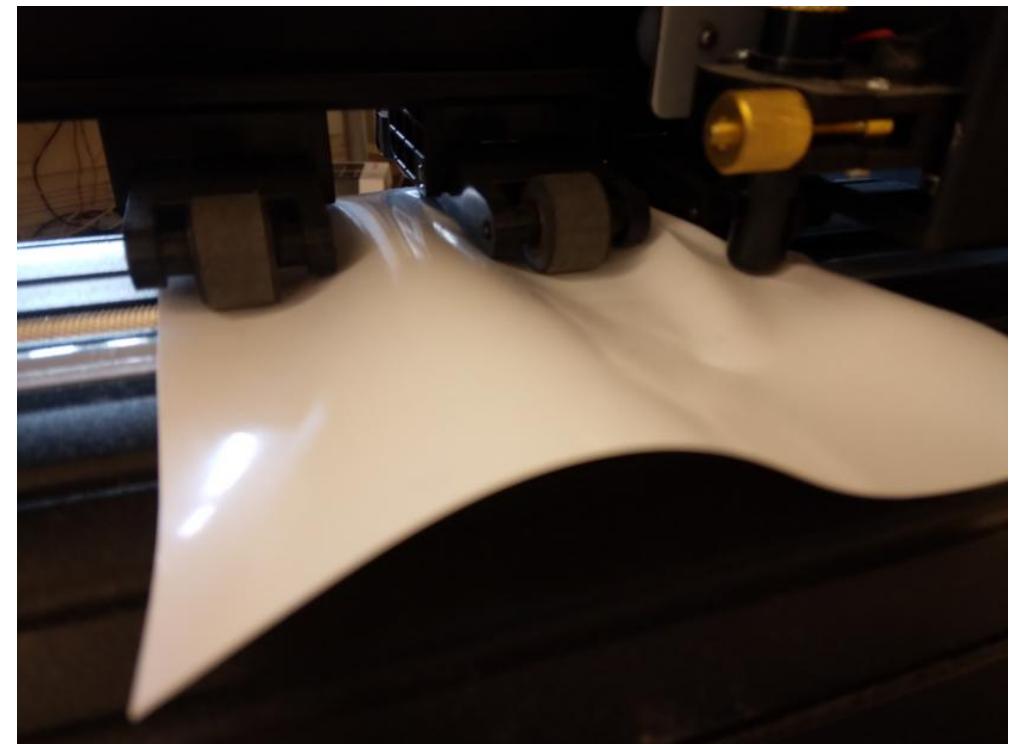


Figure 13: The vinyl cutter is wrinkling the paper

The vinyl cutter is wrinkling the paper.

This happens when at least one wheel of the two movable heads is not on a roller at the bottom:

The right wheel (right rectangle) is not on the roller (partially shown and indicated by the left rectangle)

The vinyl cutter is confused

This may happen when you send multiple prints at the same time. Press reset, close Inkcutter, press reset, start Inkcutter and try again

The cut does not follow the image

12. Transfer vinyl to T-shirt

Put the remainder of the foil on the T-shirt, with the colorful side up:



Figure 11: Vinyl to be transferred to T-shirt

Confirm the heat press is warmed up: its temperature should match the desired temperature.

Place the T-shirt under the press, with the foil still at the desired location on the t-shirt.

When the heat press is warmed up, lower the press. After the time you've set up in an earlier step, the press will start to beep. Raise the press again.

Wait for the print to cool off.

Peel off the transparent layer from the shirt:



Figure 12: Vinyl transferred to T-shirt

3. Get T-shirts

Get one or more T-shirts.

Company	Address	Price	Description
Lager 157	Kungsgatan 95	30	Has S, M, L and XL
New Yorker	Marknadsgatan 1	79	?All sizes

- Price is in kroner per (cheapest) T-shirt

Done!

4. Get vinyl

Get suitable vinyl

Suitable foil looks like this:

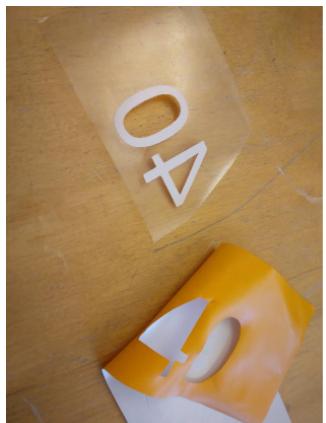


Figure 3: Transfer foil ready for transfer

- The foil feels smoother than a sticker ('klistermärke')
- The foil is shinier than a sticker

Places to buy vinyl:

Place	Features
https://folier.se/	Recommended by a member
https://www.scandraft.se/	Sells our favorite Siser P.S. Film Easyweed in 25 meter rolls for 2500 kr

11. Peel vinyl

You now have vinyl with your pattern cut out.



Figure 9: Vinyl with a pattern cut out

Remove all the vinyl that should **not** be on the T-shirt. Use your favorite tools for this.

In the end, this is how your vinyl looks like after peeling:



Figure 10: Vinyl after peeling

10. Set up heat press

Set up the heat press to have the correct temperature and time.

Vinyl	Temperature (C)	Time (s)	Recommendation source
Siser P.S. Film	150	15	manual

5. Connect the vinyl cutter


There are two ways to connect the vinyl cutter to a computer.

8.1 Use the USB port

Plug in the USB cable from the vinyl cutter's USB port to your computer. This is a regular/simple USB cable.

8.2 Use the COM port

Plug in the correct USB cable from the vinyl cutter's COM port to your computer:

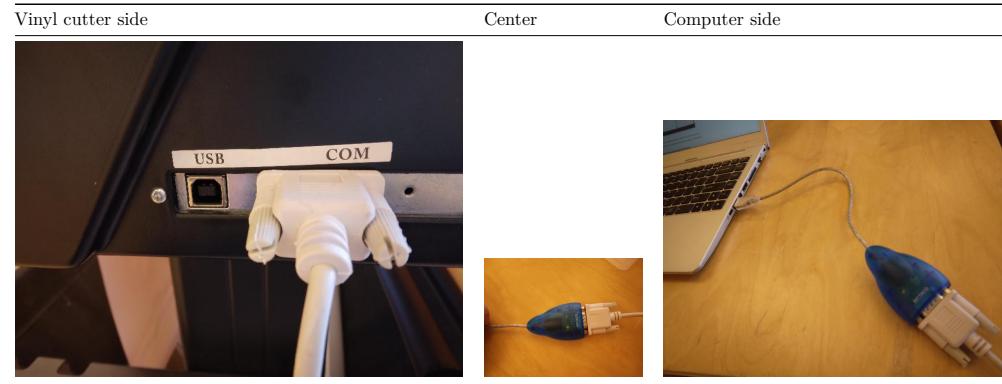

6. Setup the vinyl cutter

The vinyl cutter has three parameters:

- Origin: the bottom-left of the cut, move the red dot to the bottom-left of the vinyl
- Speed: the speed of the blade
 - If the speed is too high, no idea what happens. Please contribute if you know!
 - If the speed is too low, the process takes needlessly longer
- Force: how much force the blade applies to the vinyl
 - If the force is too high, the cutter will go through the vinyl
 - If the force is too low, the vinyl cannot be removed easily

Vinyl	Speed (mm/s)	Force(g)	Recommendation source
Siser P.S. Film	300	60	manual
Siser P.S. Film	300	120	Richel, to prevent weak cuts

9.4 Start the cut

Click on ‘Device | Send to device’ to start the vinyl cutter.

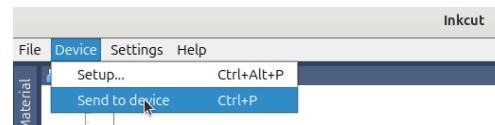


Figure 8: Click on ‘Device | Send to device’ to start the vinyl cutter

Click on ‘Device | Send to device’ to start the vinyl cutter

9. Use Inkcutter

9.1 Load an SVG

In Inkcut, load an SVG.

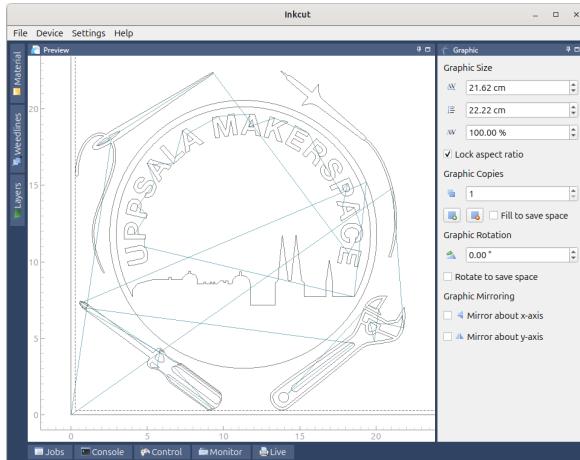


Figure 6: Inkcut in action

9.2 Mirror the image

Click on 'Mirror y-axis' (at the bottom-right of the screen) to mirror the image horizontally. This is especially important for letters.

9.3 (optional) Set up multiple images correctly

For many copies, do as shown here:


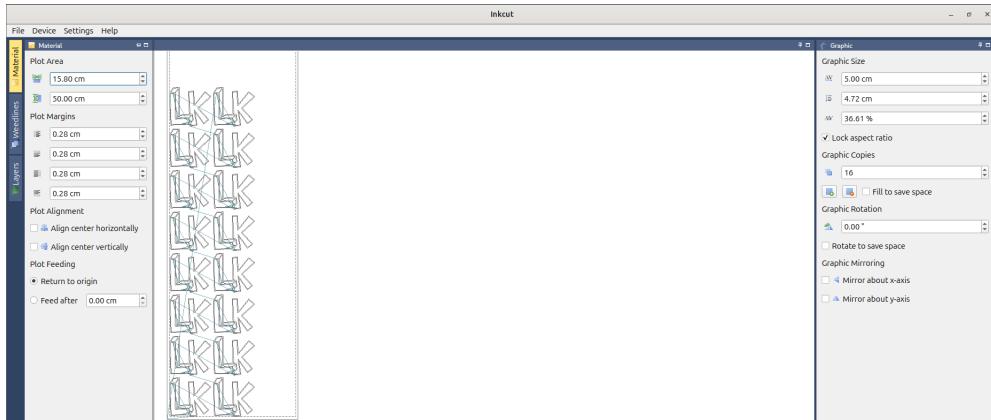


Figure 7: Do many copies like this

7. Place foil on the vinyl cutter

Place the foil on the vinyl cutter, with the white side up, i.e. with the thick and transparent plastic at the bottom.

Only use two of the three rollers. If you use three rollers, you will get distorted images.

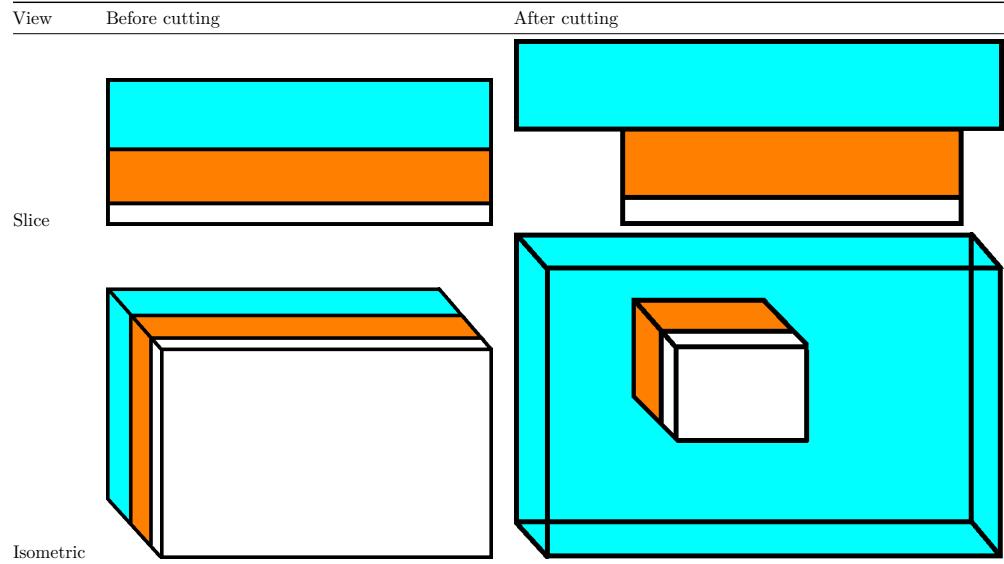

Structure of the foil and what will be cut away. Light-blue: thick, transparent layer, do not cut, can be separated from orange layer by hand. Orange: the color of the print. White: the glue connecting the print to the T-shirt

The knife cuts the white and colored layer only. The thick and transparent layer needs to remain intact.

8. Set up Inkcutter connection

Depending on how you've connected the vinyl cutter, here is how to connect Inkcutter to the vinyl cutter.

8.1 Use the USB port

In Inkcutter, go to the 'Configure device | Connection':

- Type: Parallel port
- Port: printer manufacturer descriptor printer product descriptor (/dev/usb/lp0)

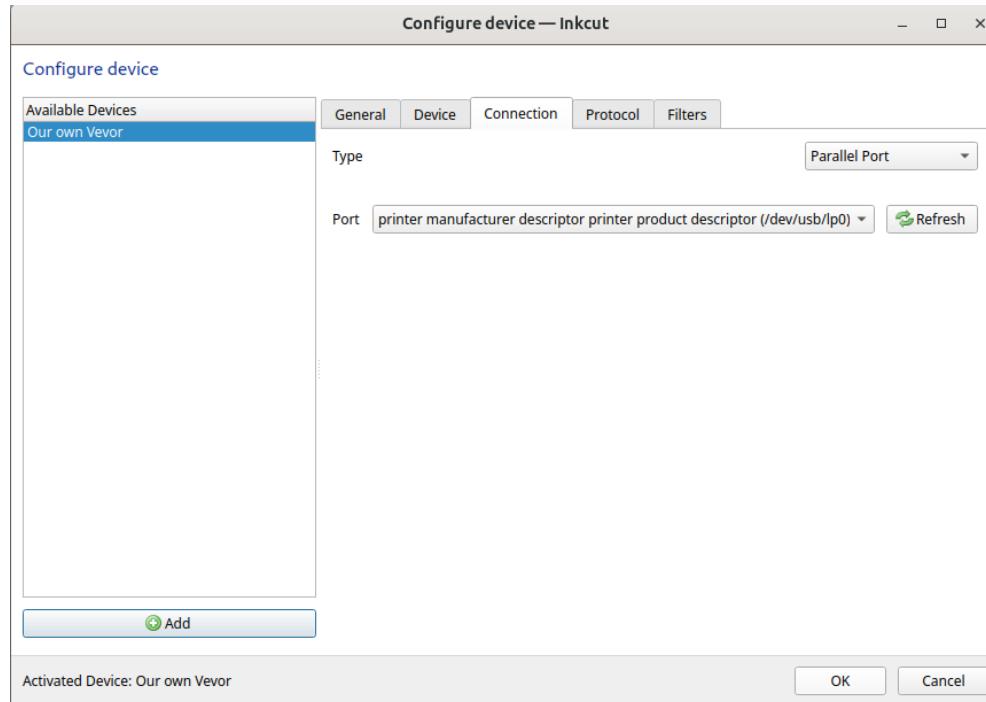


Figure 4: Connect to the vinyl cutter via USB

8.2 Use the COM port

In Inkcutter, go to the 'Configure device | Connection':

- Type: Serial port
- Port: `ttyUSB0`. If you cannot select `ttyUSB0`, you've used the wrong USB cable coming out of the vinyl cutter :-)
- Baudrate: 38400

Use the serial port with a baudrate of 38400. If you cannot select `ttyUSB0`, you've used the wrong USB cable coming out of the vinyl cutter

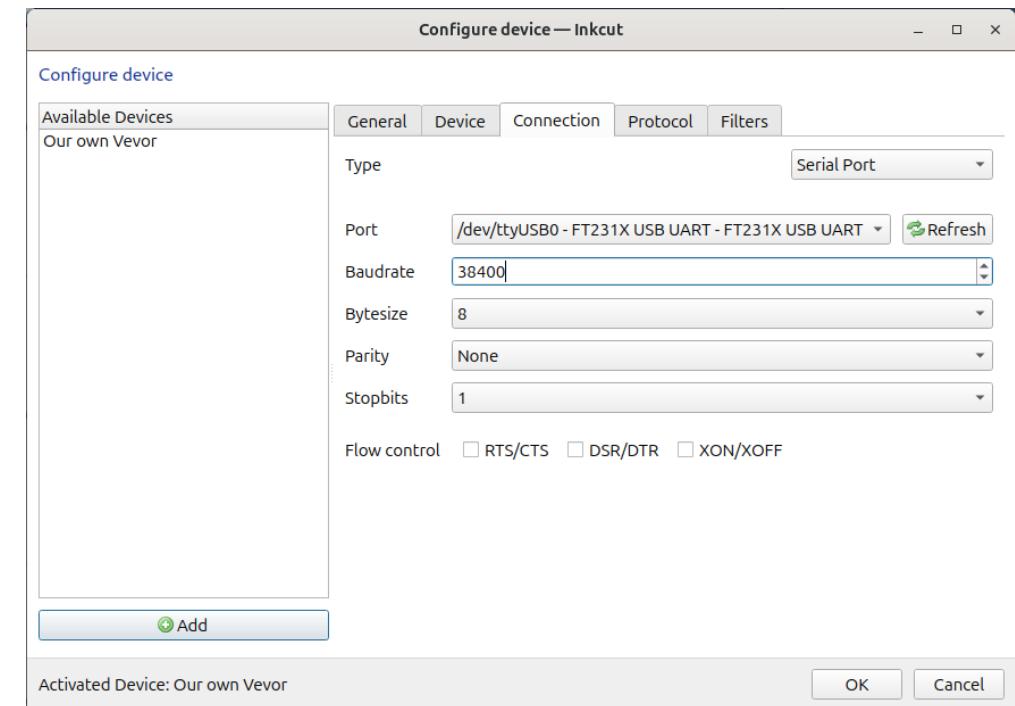


Figure 5: Use the serial port with a baudrate of 38400