Fundamental Waveguide Theory




Types of Waveguides


- 1. TEM and quasi-TEM waveguides
- 2. Metallic waveguides (TE and TM modes)
- Dielectric waveguides (TE, TM, TEM or hybrid modes)



TEM and Quasi-TEM Waveguides

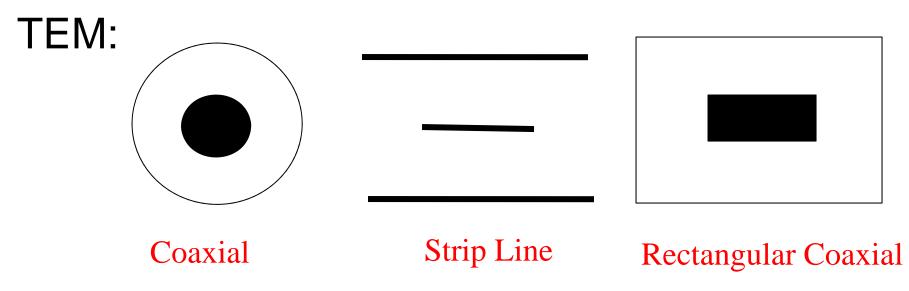


Quasi TEM:

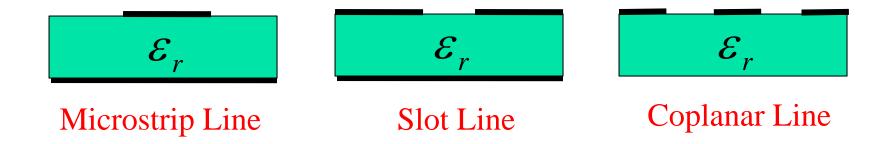




Metallic Waveguides

Rectangular waveguide

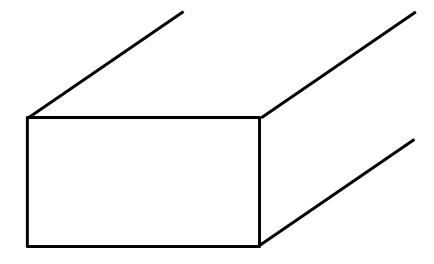


Circular waveguide

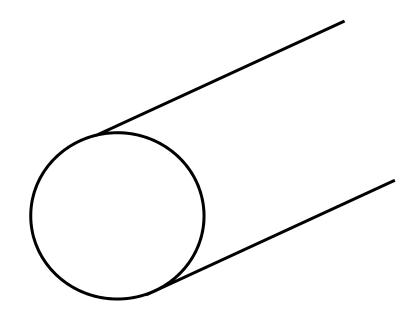



Dielectric Waveguides

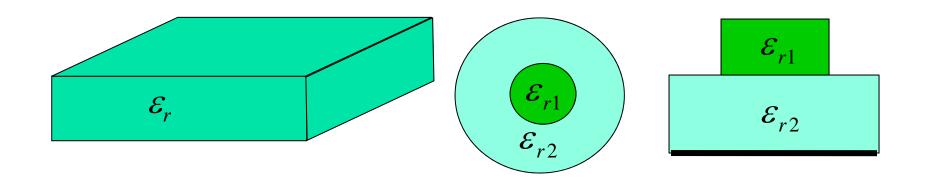

Planar dielectric waveguide

Fiber

Ridge waveguide



Modes in Waveguides (1)

Modes: certain field patterns that can propagate independently

TEM mode: Transverse Electromagnetic mode. All the fields are in the cross section or there are no E_z and H_z components



Modes in Waveguides (2)

TE modes: transverse electric modes

Electric fields are in the cross section (or no E_z component).

Only H_z component in the longitudinal direction. Also called H modes

TM modes: transverse magnetic modes


Magnetic fields are in the cross section (or no H_z component).


Only E_z component in the longitudinal direction. Also called E modes



Conditions for the Existence of TEM Modes

- At least two perfect electric conductors
- Dielectric distribution in the cross section is homogeneous

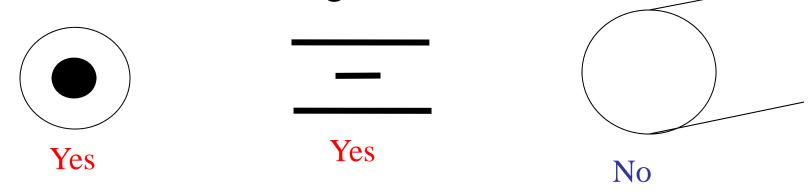




Note: TEM line can have higher order TE and TM modes

Quasi-TEM Line


 Some planar waveguide structure with inhomogeneous dielectric distribution.


$$E_z \neq 0$$
 , $H_z \neq 0$ But $|E_z| \ll |\mathbf{E}_t|$, $|H_z| \ll |\mathbf{H}_t|$

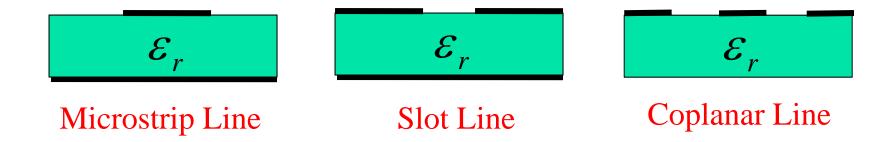



Basic Waveguide Theory (1)

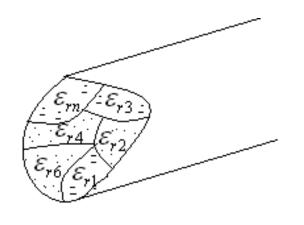



Z_{01}, K_{z1}
Z_{02}, k_{z2}
202,722
<u> </u>
Z_{0m}, k_{zm}
:

$$\mathbf{E} = \mathbf{E}_t + \mathbf{a}_z E_z$$
$$\mathbf{H} = \mathbf{H}_t + \mathbf{a}_z H_z$$

with
$$\mathbf{E}_{t} = \sum_{m} \mathbf{e}_{tm}(x, y) V_{m}(z)$$

 $\mathbf{H}_{t} = \sum_{m} \mathbf{h}_{tm}(x, y) I_{m}(z)$

Generalized Fourier Transform

Basic Waveguide Theory (2)

$$\frac{dV_m(z)}{dz} = -jk_{zm}Z_{0m}I_m(z)$$

$$\frac{dI_m(z)}{dz} = -jk_{zm}Y_{0m}V_m(z)$$

$$Z_{0m} = \frac{1}{Y_{0m}}$$
 is the characteristic impedance of the mth mode

 k_{zm} is the propagation constant of the mth mode

Basic Waveguide Theory (3)

$$V_m(z) = A_m e^{-jk_{zm}z} + B_m e^{jk_{zm}z}$$

$$\uparrow \qquad \uparrow \qquad \uparrow$$
Forward Backward Wave Wave

Effective Relative Dielectric Constant of the mth mode

$$\varepsilon_{eff} = \left(\frac{k_{zm}}{k_0}\right)^2 \rightarrow k_{zm}^2 = k_0^2 \varepsilon_{eff}$$

The mode with the largest $\mathcal{E}_{\mathit{eff}}$ is called the dominant mode.

TEM Mode (1)

Maxwell's Equations

$$\begin{cases} \nabla \times \mathbf{E} = -j\omega\mu\mathbf{H} & \text{TEM mode} \\ \nabla \times \mathbf{H} = j\omega\varepsilon\mathbf{E} & H_z = 0 \\ \nabla \cdot \mathbf{E} = 0 & \nabla \cdot \mathbf{E}_t = 0 \\ \nabla \cdot \mathbf{H} = 0 & \nabla \cdot \mathbf{H}_t = 0 \end{cases}$$

Let
$$\nabla = \mathbf{a}_{x} \frac{\partial}{\partial x} + \mathbf{a}_{y} \frac{\partial}{\partial y} + \mathbf{a}_{z} \frac{\partial}{\partial z}$$

$$= \nabla_{t} + \nabla_{z} \implies$$



TEM Mode (2)

$$\Rightarrow (\nabla_{t} + \nabla_{z}) \times \mathbf{E}_{t} = -j\omega\mu\mathbf{H}_{t} \rightarrow \nabla_{t} \times \mathbf{E}_{t} = 0$$

$$(\mathbf{a}_{z} \frac{\partial}{\partial z}) \times \mathbf{E}_{t} = -j\omega\mu\mathbf{H}_{t} \rightarrow \mathbf{a}_{z} \times (\frac{\partial \mathbf{E}_{t}}{\partial z}) = -j\omega\mu\mathbf{H}_{t}$$

$$(\nabla_{t} + \nabla_{z}) \times \mathbf{H}_{t} = -j\omega\varepsilon\mathbf{E}_{t} \rightarrow \nabla_{t} \times \mathbf{H}_{t} = 0$$

$$(\mathbf{a}_{z} \frac{\partial}{\partial z}) \times \mathbf{H}_{t} = j\omega\varepsilon\mathbf{E}_{t} \rightarrow \mathbf{a}_{z} \times (\frac{\partial \mathbf{H}_{t}}{\partial z}) = j\omega\varepsilon\mathbf{E}_{t}$$

$$\nabla_{t} \cdot \mathbf{E}_{t} = 0$$

$$\nabla_{t} \cdot \mathbf{H}_{t} = 0$$



TEM Mode (3)

From

$$\nabla_t \times \mathbf{E}_t = 0$$

$$\nabla_t \cdot \mathbf{E}_t = 0$$

$$\nabla_t \times \mathbf{H}_t = 0$$

$$\nabla_t \cdot \mathbf{H}_t = 0$$




The fields in the cross-section are similar to 2-D electrostatic & 2-D magnetostatic fields for TEM mode even if actual operating frequency can be very high.


TEM Mode (4)

Let
$$\mathbf{E}_t = -\nabla_t \Phi$$

$$\Rightarrow \nabla_t^2 \Phi = 0$$

Laplace Equation

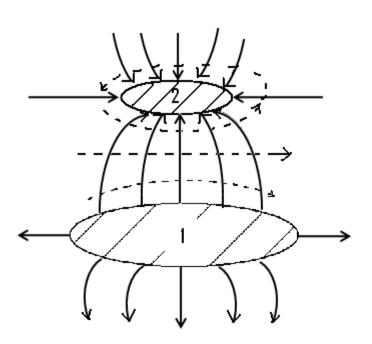



$$V_{12} = \int_{1}^{2} \mathbf{E} \cdot d\mathbf{l}$$
 For voltage

$$I = \oint \mathbf{H} \cdot d\mathbf{l}$$
 For current

TEM Mode (5)

$$\mathbf{a}_{z} \times (\frac{\partial \mathbf{E}_{t}}{\partial z}) = -j\omega\mu\mathbf{H}_{t} \quad \Rightarrow \quad \mathbf{H}_{t} = -\frac{1}{j\omega\mu}\mathbf{a}_{z} \times (\frac{\partial \mathbf{E}_{t}}{\partial z})$$

$$\mathbf{a}_{z} \times (\frac{\partial \mathbf{H}_{t}}{\partial z}) = j\omega\varepsilon\mathbf{E}_{t} \quad \Rightarrow \quad \mathbf{a}_{z} \times \left[-\frac{1}{j\omega\mu}\frac{\partial}{\partial z}(\mathbf{a}_{z} \times \frac{\partial \mathbf{E}_{t}}{\partial z})\right] = j\omega\varepsilon\mathbf{E}_{t}$$

$$\mathbf{a}_{z} \times (\mathbf{a}_{z} \times \frac{\partial^{2}\mathbf{E}_{t}}{\partial z^{2}}) = \omega^{2}\mu\varepsilon\mathbf{E}_{t}$$

$$\mathbf{a}_{z} (\mathbf{a}_{z} \cdot \frac{\partial^{2}\mathbf{E}_{t}}{\partial z^{2}}) - \frac{\partial^{2}\mathbf{E}_{t}}{\partial z^{2}}(\mathbf{a}_{z} \cdot \mathbf{a}_{z}) = \omega^{2}\mu\varepsilon\mathbf{E}_{t} \quad \text{where} \quad \mathbf{a}_{z} (\mathbf{a}_{z} \cdot \frac{\partial^{2}\mathbf{E}_{t}}{\partial z^{2}}) = 0$$

$$\Rightarrow \frac{\partial^{2}\mathbf{E}_{t}}{\partial z^{2}} + k^{2}\mathbf{E}_{t} = 0 \quad \text{where} \quad k^{2} = \omega^{2}\mu\varepsilon$$

Likewise
$$\frac{\partial^2 \mathbf{H}_t}{\partial z^2} + k^2 \mathbf{H}_t = 0$$

TEM Mode (6)

For +z direction propagation mode, we have

$$\mathbf{E}_{t} = \mathbf{e}_{t}(x, y)e^{-jk_{z}z}$$

$$\mathbf{H}_{t} = \mathbf{h}_{t}(x, y)e^{-jk_{z}z}$$

$$\rightarrow \frac{\partial}{\partial z} = -jk_{z}$$

From
$$\frac{\partial^2 \mathbf{E}_t}{\partial z^2} + k^2 \mathbf{E}_t = 0$$
 $\Rightarrow (k^2 - k_z^2) \mathbf{e}_t = 0$

Since
$$\mathbf{e}_t \neq 0$$
 \Rightarrow $k^2 = k_z^2$ For TEM mode

Or:
$$k_c^2 = k^2 - k_z^2 = 0$$

where
$$k_c^2 = k_x^2 + k_y^2$$

TEM Mode (7)

For +z direction propagating TEM mode:

$$\mathbf{E} = \mathbf{e}(x, y)e^{-jkz}$$

$$\mathbf{H} = \mathbf{h}(x, y)e^{-jkz}$$

$$\nabla_t^2 V = 0$$

$$\mathbf{e} = -\nabla_t V$$

From:
$$\mathbf{H}_{t} = -\frac{1}{j\omega\mu} \mathbf{a}_{z} \times (\frac{\partial \mathbf{E}_{t}}{\partial z}) \qquad \frac{\partial}{\partial z} = -jk$$

$$\Rightarrow \mathbf{H} = \frac{jk}{j\omega\mu} \mathbf{a}_z \times \mathbf{E} \qquad \Rightarrow \mathbf{h} = \frac{\mathbf{a}_z \times \mathbf{e}}{\eta}$$

$$\eta = \frac{\omega \mu}{k} = \sqrt{\frac{\mu}{\varepsilon}}$$
 wave impedance of the media inside the TEM waveguide

TE, TM and Hybrid Modes (1)

From

$$\begin{cases} \nabla \times \mathbf{E} = -j\omega\mu\mathbf{H} \\ \nabla \times \mathbf{H} = j\omega\varepsilon\mathbf{E} \\ \nabla \cdot \mathbf{E} = 0 \end{cases} \qquad \begin{cases} \nabla^{2}\mathbf{E} + k^{2}\mathbf{E} = 0 \\ \nabla^{2}\mathbf{H} + k^{2}\mathbf{H} = 0 \end{cases}$$
or z component:
$$\begin{cases} \nabla^{2}E_{z} + k^{2}E_{z} = 0 \end{cases}$$

For z component:
$$\begin{cases} \nabla^{2}E_{z} + k^{2}E_{z} = 0 \\ \nabla^{2}H_{z} + k^{2}H_{z} = 0 \end{cases}$$
or
$$\begin{cases} \nabla^{2}E_{z} + k_{c}^{2}E_{z} = 0 \\ \nabla^{2}H_{z} + k_{c}^{2}H_{z} = 0 \end{cases}$$
since
$$\frac{\partial^{2}}{\partial z^{2}} = -k_{z}^{2}, \quad k_{c}^{2} = k^{2} - k_{z}^{2}$$

TE, TM and Hybrid Modes (2)

For a mode propagating in +z direction: $\frac{\partial}{\partial z} = -jk_z$

From $\nabla \times \mathbf{E} = -j\omega\mu\mathbf{H}$

$$\nabla \times \mathbf{H} = j\omega \varepsilon \mathbf{E}$$

$$\Rightarrow \begin{cases} \frac{\partial E_{z}}{\partial y} + jk_{z}E_{y} = j\omega\mu H_{x} \\ -jk_{z}E_{x} - \frac{\partial E_{z}}{\partial x} = -j\omega\mu H_{y} \end{cases} \begin{cases} \frac{\partial H_{z}}{\partial y} + jk_{z}H_{y} = -j\omega\varepsilon E_{x} \\ -jk_{z}H_{x} - \frac{\partial H_{z}}{\partial x} = j\omega\varepsilon E_{y} \end{cases}$$
$$\frac{\partial E_{y}}{\partial x} - \frac{\partial E_{x}}{\partial y} = -j\omega\mu H_{z} \end{cases} \begin{cases} \frac{\partial H_{z}}{\partial y} + jk_{z}H_{y} = -j\omega\varepsilon E_{x} \\ -jk_{z}H_{x} - \frac{\partial H_{z}}{\partial x} = j\omega\varepsilon E_{y} \end{cases}$$

$$\begin{cases} \frac{\partial H_{z}}{\partial y} + jk_{z}H_{y} = -j\omega\varepsilon E_{x} \\ -jk_{z}H_{x} - \frac{\partial H_{z}}{\partial x} = j\omega\varepsilon E_{y} \\ \frac{\partial H_{y}}{\partial x} - \frac{\partial H_{x}}{\partial y} = j\omega\varepsilon E_{z} \end{cases}$$



TE, TM and Hybrid Modes (3)

$$E_{x} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial E_{z}}{\partial x} + \frac{-j\omega\mu}{k_{c}^{2}} \frac{\partial H_{z}}{\partial y}$$

$$E_{y} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial E_{z}}{\partial y} + \frac{j\omega\mu}{k_{c}^{2}} \frac{\partial H_{z}}{\partial x}$$

$$H_{x} = \frac{j\omega\varepsilon}{k_{c}^{2}} \frac{\partial E_{z}}{\partial y} + \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial H_{z}}{\partial x}$$

$$H_{y} = \frac{-j\omega\varepsilon}{k_{c}^{2}} \frac{\partial E_{z}}{\partial x} + \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial H_{z}}{\partial y}$$

$$\mathbf{E}_{t} = \frac{-jk_{z}}{k_{c}^{2}} \nabla_{t} E_{z} + \frac{j\omega\mu}{k_{c}^{2}} \mathbf{a}_{z} \times \nabla_{t} H_{z}$$

$$\mathbf{H}_{t} = \frac{-j\omega\varepsilon}{k_{c}^{2}} \mathbf{a}_{z} \times \nabla_{t} E_{z} + \frac{-jk_{z}}{k_{c}^{2}} \nabla_{t} H_{z}$$



Auxiliary Potential Approach

In Balanis's book:
$$E_{x} = -\frac{k_{z}}{\omega\mu\varepsilon} \frac{\partial A_{z}}{\partial x} - \frac{1}{\varepsilon} \frac{\partial F_{z}}{\partial y}$$

$$E_{y} = -\frac{k_{z}}{\omega\mu\varepsilon} \frac{\partial A_{z}}{\partial y} + \frac{1}{\varepsilon} \frac{\partial F_{z}}{\partial x}$$

$$H_{x} = \frac{1}{\mu} \frac{\partial A_{z}}{\partial y} - \frac{k_{z}}{\omega\mu\varepsilon} \frac{\partial F_{z}}{\partial x}$$

$$H_{y} = -\frac{1}{\mu} \frac{\partial A_{z}}{\partial x} - \frac{k_{z}}{\omega\mu\varepsilon} \frac{\partial F_{z}}{\partial y}$$

Actually:
$$E_z = -j \frac{k_c^2}{\omega \mu \varepsilon} A_z$$
, $H_z = -j \frac{k_c^2}{\omega \mu \varepsilon} F_z$

$$\nabla_t^2 A_z + k_c^2 A_z = 0$$
,
$$\nabla_t^2 F_z + k_c^2 F_z = 0$$

Balanis's β is my k.



TE Modes (1)

$$E_{x} = \frac{-j\omega\mu}{k_{c}^{2}} \frac{\partial H_{z}}{\partial y}$$

$$E_{y} = \frac{j\omega\mu}{k_{c}^{2}} \frac{\partial H_{z}}{\partial x}$$

$$H_{x} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial H_{z}}{\partial x}$$

$$H_{y} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial H_{z}}{\partial y}$$

$$E_{z} = 0$$

$$\nabla_{t}^{2} H_{z} + k_{c}^{2} H_{z} = 0$$

$$\mathbf{E}_{t} = \frac{j\omega\mu}{k_{c}^{2}} \mathbf{a}_{z} \times \nabla_{t} H_{z}$$

$$= -\frac{\omega\mu}{k_{z}} \mathbf{a}_{z} \times \mathbf{H}_{t}$$

$$\mathbf{H}_{t} = \frac{-jk_{z}}{k_{c}^{2}} \nabla_{t} H_{z}$$

$$E_{x} = -\frac{1}{\varepsilon} \frac{\partial F_{z}}{\partial y}$$

$$E_{y} = \frac{1}{\varepsilon} \frac{\partial F_{z}}{\partial x}$$

$$H_{x} = -\frac{k_{z}}{\omega \mu \varepsilon} \frac{\partial F_{z}}{\partial x}$$

$$H_{y} = -\frac{k_{z}}{\omega \mu \varepsilon} \frac{\partial F_{z}}{\partial y}$$

$$E_{z} = 0$$

$$H_{z} = -j \frac{k_{c}^{2}}{\omega \mu \varepsilon} A_{z}$$

$$\nabla_{t}^{2} F_{z} + k_{c}^{2} F_{z} = 0$$



TE Modes (2)

For a mode propagating in +z direction:

$$\mathbf{E} = \mathbf{e}(x, y)e^{-jk_z z}$$

$$\mathbf{H} = \mathbf{h}(x, y)e^{-jk_z z}$$

$$\nabla _{t}^{2} h_{z} + k_{c}^{2} h_{z} = 0 + \text{Boundary Conditions}$$

$$e_{x} = \frac{-j\omega\mu}{k_{c}^{2}} \frac{\partial h_{z}}{\partial y}$$

$$e_{y} = \frac{j\omega\mu}{k_{c}^{2}} \frac{\partial h_{z}}{\partial x}$$

$$h_{x} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial h_{z}}{\partial x}$$

$$h_{y} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial h_{z}}{\partial y}$$

$$\mathbf{h}_{t} = \frac{-jk_{z}}{k_{c}^{2}} \nabla_{t} h_{z}$$

$$\mathbf{e}_{t} = -\frac{\omega\mu}{k_{z}} \mathbf{a}_{z} \times \mathbf{h}_{t} = -Z_{TE} \mathbf{a}_{z} \times \mathbf{h}_{t}$$

$$Z_{TE} = \frac{\omega\mu}{k_{z}} \text{ characteristic impedance of TE modes}$$



TM Modes (1)

$$E_{x} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial E_{z}}{\partial x}$$

$$E_{y} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial E_{z}}{\partial y}$$

$$H_{x} = \frac{j\omega\varepsilon}{k_{c}^{2}} \frac{\partial E_{z}}{\partial y}$$

$$H_{y} = \frac{-j\omega\varepsilon}{k_{c}^{2}} \frac{\partial E_{z}}{\partial x}$$

$$H_{z} = 0$$

$$\nabla_{t}^{2} E_{z} + k_{c}^{2} E_{z} = 0$$

$$\mathbf{E}_{t} = \frac{-jk_{z}}{k_{c}^{2}} \nabla_{t} E_{z}$$

$$\mathbf{H}_{t} = \frac{-j\omega\varepsilon}{k_{c}^{2}} \mathbf{a}_{z} \times \nabla_{t} E_{z}$$

$$= \frac{\omega\varepsilon}{k_{z}} \mathbf{a}_{z} \times \mathbf{E}_{t}$$

$$E_{x} = -\frac{k_{z}}{\omega\mu\varepsilon} \frac{\partial A_{z}}{\partial x}$$

$$E_{y} = -\frac{k_{z}}{\omega\mu\varepsilon} \frac{\partial A_{z}}{\partial y}$$

$$H_{x} = \frac{1}{\mu} \frac{\partial A_{z}}{\partial y}$$

$$H_{y} = -\frac{1}{\mu} \frac{\partial A_{z}}{\partial x}$$

$$H_{z} = 0$$

$$E_{z} = -j \frac{k_{z}^{2}}{\omega\mu\varepsilon} A_{z} = 0$$

$$\nabla_{t}^{2} A_{z} + k_{z}^{2} A_{z} = 0$$



TM Modes (2)

For a mode propagating in +z direction:

$$\mathbf{E} = \mathbf{e}(x, y)e^{-jk_z z}$$

$$\mathbf{H} = \mathbf{h}(x, y)e^{-jk_z z}$$

$$\nabla \frac{2}{t} e_{z} + k_{c}^{2} e_{z} = 0 + \text{Boundary Conditions}$$

$$e_{x} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial e_{z}}{\partial x}$$

$$e_{y} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial e_{z}}{\partial y}$$

$$h_{x} = \frac{j\omega\varepsilon}{k_{c}^{2}} \frac{\partial e_{z}}{\partial y}$$

$$h_{y} = \frac{-j\omega\varepsilon}{k_{c}^{2}} \frac{\partial e_{z}}{\partial x}$$

$$e_{t} = \frac{-jk_{z}}{k_{c}^{2}} \nabla_{t} e_{z}$$

$$h_{t} = \frac{\omega\varepsilon}{k_{z}} \mathbf{a}_{z} \times \mathbf{E}_{t} = \frac{1}{Z_{TM}} \mathbf{a}_{z} \times \mathbf{E}_{t}$$

$$Z_{TM} = \frac{k_{z}}{\omega\varepsilon} \quad \text{characteristic impedance of TM modes}$$



Hybrid Modes

in +z direction:

$$\mathbf{E} = \mathbf{e}(x, y)e^{-jk_z z}$$

$$\mathbf{H} = \mathbf{h}(x, y)e^{-jk_z z}$$

For a mode propagating
$$\begin{cases} \nabla_{t}^{2} e_{z} + k_{c}^{2} e_{z} = 0 \\ \nabla_{t}^{2} h_{z} + k_{c}^{2} h_{z} = 0 \end{cases}$$
 + Boundary Conditions

$$e_{x} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial e_{z}}{\partial x} + \frac{-j\omega\mu}{k_{c}^{2}} \frac{\partial h_{z}}{\partial y}$$

$$e_{y} = \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial e_{z}}{\partial y} + \frac{j\omega\mu}{k_{c}^{2}} \frac{\partial h_{z}}{\partial x}$$

$$h_{x} = \frac{j\omega\varepsilon}{k_{c}^{2}} \frac{\partial e_{z}}{\partial y} + \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial h_{z}}{\partial x}$$

$$h_{y} = \frac{-j\omega\varepsilon}{k_{c}^{2}} \frac{\partial e_{z}}{\partial x} + \frac{-jk_{z}}{k_{c}^{2}} \frac{\partial h_{z}}{\partial y}$$

$$\mathbf{e}_{t} = \frac{-jk_{z}}{k_{c}^{2}} \nabla_{t} e_{z} + \frac{j\omega\mu}{k_{c}^{2}} \mathbf{a}_{z} \times \nabla_{t} h_{z}$$

$$\mathbf{h}_{t} = \frac{-j\omega\varepsilon}{k^{2}} \mathbf{a}_{z} \times \nabla_{t} e_{z} + \frac{-jk_{z}}{k^{2}} \nabla_{t} h_{z}$$

Phase Velocity and Group Velocity (1)


For a single frequency:
$$e^{-jk_z z}$$

$$\cos(\omega t - k_z z)$$


Phase velocity: the velocity of constant phase plane ($\omega t - k_z z = \text{const}$)

$$v_p = \frac{\omega}{k_z}$$

Phase Velocity and Group Velocity (2)

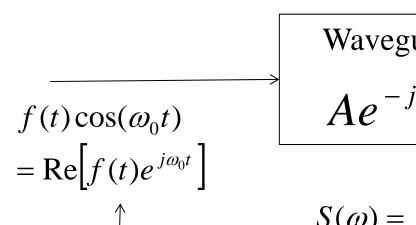

$$\begin{array}{c}
\downarrow \\
F(\omega - \omega_0) \\
\mathbb{F}[f(t)] = F(\omega)
\end{array} =$$

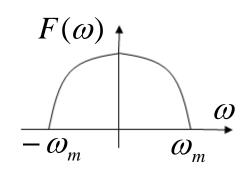

Waveguide
$$Ae^{-jk_z z}$$

$$s(t)$$

$$S(\omega) = F(\omega - \omega_0) A e^{-jk_z z}$$

$$\Rightarrow s(t) = \frac{1}{2\pi} \operatorname{Re} \left[\int_{-\infty}^{+\infty} S(\omega) e^{j\omega t} d\omega \right]$$

$$= \frac{1}{2\pi} \operatorname{Re} \left[\int_{\omega_0 - \omega_m}^{\omega_0 + \omega_m} S(\omega) e^{j\omega t} d\omega \right]$$

$$= \frac{1}{2\pi} \operatorname{Re} \left[\int_{\omega_0 - \omega_m}^{\omega_0 + \omega_m} A F(\omega - \omega_0) e^{j(\omega t - k_z z)} d\omega \right]$$

Phase Velocity and Group Velocity (3)

$$s(t) = \frac{1}{2\pi} \operatorname{Re}\left[\int_{\omega_0 - \omega_m}^{\omega_0 + \omega_m} AF(\omega - \omega_0) e^{j(\omega t - k_z z)} d\omega\right]$$

Expand
$$k_z(\omega) = k_z(\omega_0) + \frac{dk_z}{d\omega}\Big|_{\omega = \omega_0} (\omega - \omega_0) + \dots$$

$$\approx k_z(\omega_0) + \frac{dk_z}{d\omega}\Big|_{\omega=\omega_0} (\omega - \omega_0)$$

Let
$$k_{z0} = k_z(\omega_0)$$

$$k'_{z0} = \frac{dk_z}{d\omega}\Big|_{\omega = \omega_0}$$

$$\Rightarrow k_z(\omega) = k_{z0} + k_{z0}(\omega - \omega_0)$$

Phase Velocity and Group Velocity (4)

$$s(t) = \frac{1}{2\pi} \operatorname{Re} \left[\int_{\omega_{0} - \omega_{m}}^{\omega_{0} + \omega_{m}} AF(\omega - \omega_{0}) e^{j\omega t} e^{-j\left[k_{z0} + k_{z0}'(\omega - \omega_{0})\right]z} d\omega \right]$$

$$p = \omega - \omega_{0}$$

$$= \frac{A}{2\pi} \operatorname{Re} \left[e^{j(\omega_{0}t - k_{z0}z)} \int_{-\omega_{m}}^{\omega_{m}} F(p) e^{j\left[t - k_{z0}'z\right]p} dp \right]$$

$$= A \operatorname{Re} \left[f(t - k_{z0}'z) e^{j(\omega_{0}t - k_{z0}z)} \right]$$

$$= Af(t - k_{z0}'z) \cos(\omega_{0}t - k_{z0}z)$$

Information with group velocity

$$k_{z0} = k_{z}(\omega_{0})$$


$$v_{g} = \frac{1}{k'_{z0}} = \frac{1}{\frac{dk_{z}}{d\omega}|_{\omega=\omega_{0}}}$$

Carrier with phase velocity

$$v_p = \frac{\omega_0}{k_{z0}}$$



Phase Velocity and Group Velocity (5)

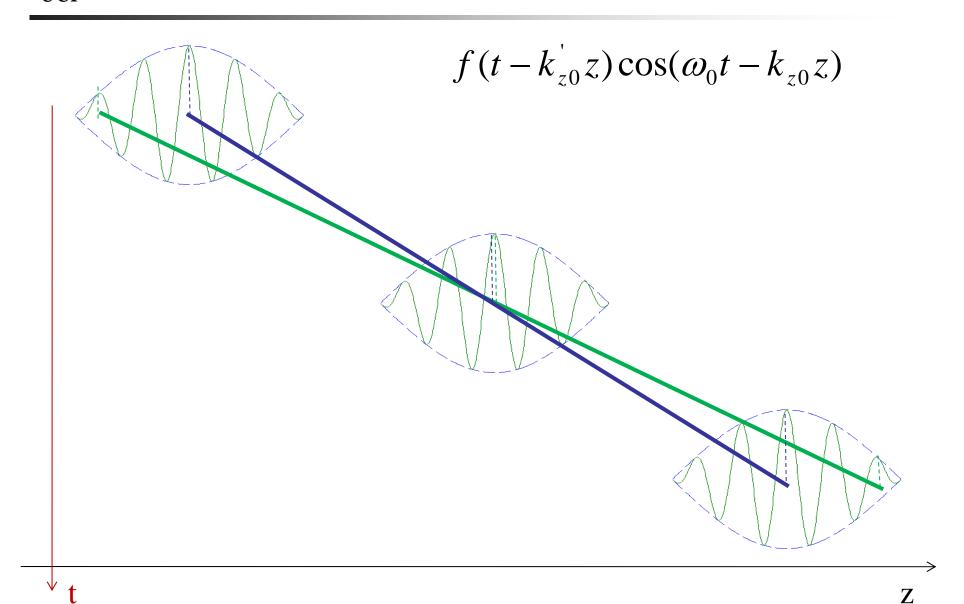



Cutoff Frequency in Metallic Waveguide

For $e^{-jk_z z}$

When $k_{\tau}^2 < 0$, the mode is an evanescent mode.

Find cutoff frequency


$$k_z^2 = k^2 - k_c^2 = 0$$

 k_c is cutoff wavenumber.

From
$$k_c = 2\pi f_c \sqrt{\mu \varepsilon}$$



cutoff frequency
$$f_c = \frac{k_c}{2\pi\sqrt{\mu\varepsilon}}$$

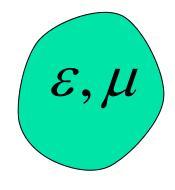



Degenerate Modes

If two or more modes have the same eigenvalue (propagation constant kz) but different eigenvectors (field patterns), they are called degenerate modes.