# CHEME 3130: Macroscopic energy balances and the First Law of Thermodynamics

Jeffrey D. Varner\*

\*Robert Frederick Smith School of Chemical and Biomolecular Engineering Cornell University, Ithaca NY 14853

Copyright © Jeffrey Varner 2017. All Rights Reserved.

### Introduction

Thermodynamics is the study of the physical and energetic properties of pure materials and mixtures of materials, and how we can exploit these properties for technological or societal benefit. Thermodynamics is at the heart of chemical engineering applications ranging from traditional process engineering to biology and medicine. In this class, we will learn the theoretical basis of thermodynamics, and will apply this understanding to practical problems in chemical and biomolecular engineering.

## Student outcomes

At the end of this lecture module, students will be able to:


- O<sub>1</sub> Describe the total energy balance equation and first law of thermodynamics for an open and closed system
- O<sub>2</sub> Describe the constant pressure and constant volume heat capacity
- $O_3$  Describe the thermodynamic state function called enthalpy H:

$$H \equiv U + PV \tag{1}$$

where U denotes the internal energy, P denotes the pressure and V denotes the volume.

## Introduction

Energy is neither created or destroyed. Instead, it is converted from one form to another. The first law of thermodynamics governs the pathways by which these energy conversions can occur. Suppose we have a general thermodynamic system separated from its surroundings by a permeable boundary (Fig. 1). Energy and mass can be transferred into and from the system by passing across this boundary. Energy and mass transfer into or from the system leads to changes in the *total* system energy. For most systems in chemical engineering, the total energy is the sum of the kinetic, potential and internal energy of system. Putting these ideas together we can write the

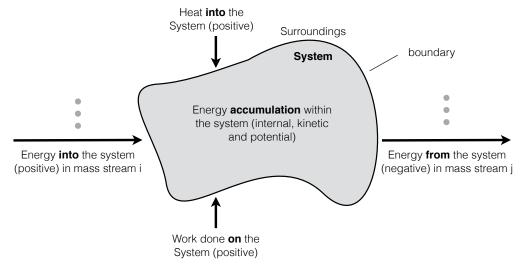

**Fig. 1:** Schematic of a general system and its surroundings.  $\mathcal{S}$  streams enter or exit from the system which can transfer both heat and work with the surroundings.  $\mathcal{R}$  chemical reactions can act a source or sink of heat for the system.

differential energy and mass balance equations of the form:

$$d(me)\Big|_{sys} = \delta Q + \delta W + \sum_{s=1}^{S} \nu_s e_s \delta m_s + \sum_{r=1}^{R} \delta E_r$$
 (2)

$$dm = \sum_{s=1}^{S} \nu_s \delta m_s \tag{3}$$

where e denotes the total energy in the system per unit mass (or mol),  $e_s$  denotes the total energy of stream s per unit mass (or mol), m and  $m_s$  denote the system mass, and the mass of stream s respectively, while  $\delta E_r$  denotes the heat liberated or consumed by chemical reaction r. Lastly, the quantity  $\nu_s$  denotes a direction parameter for stream s;  $\nu_s$  = 1 if stream s enters the system, while  $\nu_s$  = -1 if stream s exits the system.

The differential energy and mass balance equations given by Eqn. (2) and (3) can be converted to the more familiar rate based balances by dividing both sides by a time window  $\Delta t$  and allowing

the window to shrink to zero ( $\Delta t \rightarrow 0$ ):

$$\frac{d}{dt}(me)\Big|_{sys} = \dot{Q} + \dot{W} + \sum_{s=1}^{\mathcal{S}} \nu_s e_s \dot{m}_s + \sum_{r=1}^{\mathcal{R}} \dot{E}_r \tag{4}$$

where  $\dot{Q}, \dot{W}, \dot{m}_s$  denote the rate of heat, work and mass input/output from the system in stream s. Thus, the right-hand side describes the rate of accumulation of total energy in the system, while the left-hand side describes the various sources and sinks of total energy. For most chemical engineering systems, we'll formulate total energy as the sum of the internal U, kinetic  $E_K$  and potential energies  $E_P$ :

$$E = U + \frac{1}{2}ms_j^2 + mgz \tag{5}$$

or on a per mass (mol) basis:

$$e = u + \frac{1}{2}s_j^2 + gz {6}$$

The total energy of any stream can also be represented as the sum of the internal, kinetic and potential energies of the molecules in that stream. Putting these ideas together, we can write the general macroscopic energy and mass balances as:

$$\frac{d}{dt} \left[ m \left( u + e_K + e_P \right) \right] \Big|_{sys} = \dot{Q} + \dot{W} + \sum_{s=1}^{\mathcal{S}} \nu_s \left( u_s + g z_s + \frac{1}{2} s_s^2 \right) \dot{m}_s + \sum_{r=1}^{\mathcal{R}} \dot{E}_r$$
 (7)

$$\frac{dm}{dt} = \sum_{s=1}^{\mathcal{S}} \nu_s \dot{m}_s \tag{8}$$

# What is work in a thermodynamic system?

Let's begin by discussing expansion work in a *closed* system (no exchange of material between the system and the surroundings). In physics, a force does work if, when acting on a body, there is a displacement of the point of application in the direction of the force. Work can be expressed by the relationship:

$$\delta W = \mathbf{F} \cdot d\mathbf{s} \tag{9}$$

where  $\mathbf{F}$  denotes a force vector, and  $d\mathbf{s}$  denotes a displacement vector. To calculate work using Eqn (9), we must take the scalar (dot or inner) product between the force vector and the displacement vector. We can rewrite the force vector (and similarly the displacement vector) in terms of unit vectors  $\mathbf{e}_i$  or:

$$\mathbf{F} = \sum_{i} F_{i} \mathbf{e}_{i} \tag{10}$$

where our unit vectors are orthonormal to each other:

$$\mathbf{e}_i \cdot \mathbf{e}_j = (\mathbf{e}_i, \mathbf{e}_j) = \begin{cases} 1 & : i = j \\ 0 & : i \neq j \end{cases}$$
(11)


If we substitute the force and displacement vectors into Eqn (9) (our definition of work) we arrive at:

$$\delta W = \sum_{i} \sum_{j} F_{i} ds_{j} \left( \mathbf{e}_{i}, \mathbf{e}_{j} \right) \tag{12}$$

which simplifies to:

$$\delta W = \sum_{i} F_{i} ds_{i} \tag{13}$$

because we know that  $(e_i, e_i) = 1$ , and all other cases equal zero.

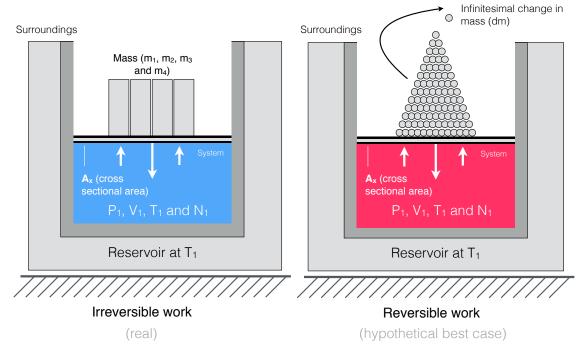

**Fig. 2:** Schematic of isothermal expansion work for a closed system for finite (irreversible) and hypothetically infinitesimal (reversible) changes in the external pressure.

We'll typically focus on *reversible* pressure-volume expansion work (Fig. 2). Imagine we have an isothermal chamber filled with an ideal gas at temperature  $T_1$  that is being compressed by a weightless, frictionless piston loaded with total mass M. At equilibrium, the gravitational external force pushing down on the piston  $F_e$  will be counterbalanced by the force of the gas molecules hitting the piston,  $F_{sys}$ . Force is related to pressure through an area, in this case the cross sectional area of the piston  $A_\perp$ :

$$F_{sys}/A_{\perp} - F_e/A_{\perp} = 0 \tag{14}$$

or  $P_{sys} = P_e$  at equilibrium. Substituting the pressure into the differential work expression Eqn (13) gives:

$$\delta W = -P_e A_{\perp} ds_2 \tag{15}$$


where we have no displacement in the x  $(s_1)$  or z  $(s_3)$  directions. However, the product  $A_{\perp}ds_2$ 

describes the displacement of an area, which is volume, thus Eqn. (15) becomes:

$$\delta W = -P_e dV \tag{16}$$

or after integration of the inexact differential:

$$W = -\int P_e dV \tag{17}$$

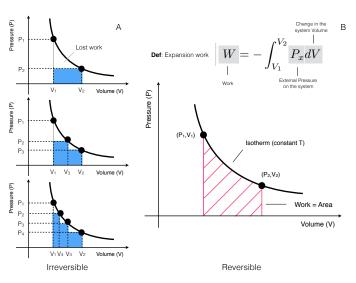

**Fig. 3:** Schematic of the work generated by irreversible (left) and reversible (right) isothermal expansion of an ideal gas. Reversible work generates the maximum possible work, but is a hypothetical upper bound.

Suppose we remove one of the finite weights on top of the piston (Fig. 2A). Initially, the system is at rest and the internal and external pressures are equal. However, when we remove a finite weight, there will be a mismatch between the system and surrounding pressure ( $P_{sys} > P_e$ ) causing the piston to accelerate upwards. Eventually the pressures will equilibrate, and the piston will come to rest. This type of expansion work is called irreversible (perhaps a better term would be nonstatic or non-equilibrium work). When we were at equilibrium we knew  $P_{sus}$ , however, in between the equilibrium states for an irreversible expansion we do not know the system pressure. Imagine instead that

we do a hypothetical expansion in which we break the same weight M into tiny particles of size dM, and remove a single particle at a time. This type of expansion is called *reversible* (perhaps a better name would equilibrium or static work). In this case, the equilibrium assumption remains approximately true, and at each hypothetical stage of the expansion  $P_{sys} \simeq P_e$ . If the working fluid in the system were an ideal gas (a simple equation of state) valid for only low pressures, the work expression becomes:

$$W = -\int_{1}^{2} \frac{nRT}{V} dV = -nRT_{1} \ln \frac{V_{2}}{V_{1}}$$
 (18)

where we used the the ideal gas law  $P_eV - nRT = 0$  Expansion work is also the area under the curve in the P-V plane (Fig 3). Thus, finite changes in the opposing pressure (no longer in equilibrium with the surroundings) leads to jumps in the P-V plane (and lost work). On the other hand, infinitesimally small changes in the surrounding pressure leads to a smooth expansion and the maximum possible work. Reversible expansions are not real, yet we'll often assume reversible behavior the upper bound of system performance.

The rate of total work in an open system is the sum of two types of work, shaft and flow work:

$$\dot{W} = \dot{W}_{sh} + \dot{W}_f \tag{19}$$

Shaft work  $\dot{W}_{sh}$  is the rate of generation of mechanically useful work (shaft work), while flow work  $\dot{W}_f$  is the energy required to push fluid into or from the system. Thus, for an open system the total rate of work is given by:

$$\dot{W} = \dot{W}_{sh} + \sum_{s=1}^{S} \nu_s (Pv)_s \, \dot{m}_s \tag{20}$$

where  $P_s$  denotes the pressure of stream s, and  $v_s$  denotes specific volume (e.g., L/kg or L/mol) of stream s. Substituting Eqn. (20) into the energy balance Eqn. (7) gives:

$$\frac{d}{dt} \left[ m \left( u + e_K + e_P \right) \right] \Big|_{sys} = \dot{Q} + \dot{W}_{sh} + \sum_{s=1}^{\mathcal{S}} \nu_s \left\{ (Pv)_s + e_s \right\} \dot{m}_s + \sum_{r=1}^{\mathcal{R}} \dot{E}_r$$
 (21)

If we collect terms and define a new thermodynamic quantity called the specific enthalpy h ([J/mol] or [J/mass]) for stream j:

$$h_j \equiv u_j + (Pv)_j \tag{22}$$

we arrive at the total macroscopic energy balance for an open system:

$$\frac{d}{dt} \left[ m \left( u + e_K + e_P \right) \right] \Big|_{sys} = \dot{Q} + \dot{W}_{sh} + \sum_{s=1}^{\mathcal{S}} \nu_s \left( h + e_K + e_P \right)_s \dot{m}_s + \sum_{r=1}^{\mathcal{R}} \dot{E}_r$$
 (23)

$$\frac{dm}{dt} = \sum_{s=1}^{\mathcal{S}} \nu_s \dot{m}_s \tag{24}$$

Aside: What is  $d(\cdot)$  versus  $\delta(\cdot)$ ? A curious feature of Eqn (2) and (3) is the  $d(\cdot)$  versus the  $\delta(\cdot)$  operators; the  $d(\cdot)$  operator denotes an *exact* differential, while  $\delta(\cdot)$  denotes an *inexact* differential. We'll talk more about this later, but an easy way to think about the difference between these operators is that exact differentials describe changes in system quantities, while inexact differentials describes actions taken on the system (adding mass, adding heat etc). Mathematically, integrals of exact differentials take the form:

$$\Delta x = \int_{x_1}^{x_2} dx \tag{25}$$

while integrals of inexact differentials are given by:

$$x = \int \delta x \tag{26}$$

## The first law of thermodynamics for a closed system.

Let's begin by simplifying the differential energy and mass balances; consider a *closed* system, with no chemical reactions consisting of a pure working fluid that obeys the general equation of state:

$$\mathcal{F}(P, V, T, n) = 0 \tag{27}$$

Lets also assume we can ignore changes in the potential and kinetic energy. In a closed system,  $\delta m_s = 0$  for all streams  $(\forall s)$ , and no chemical reactions says that  $\sum_{r=1}^{\mathcal{R}} \delta E_r = 0$ . Thus, our energy and material balances reduce to:

$$d(mu)\Big|_{sys} = \delta Q + \delta W$$

$$dm = 0$$
(28)

$$dm = 0 (29)$$

Expanding the differential on the left hand side of the energy balance leads to:

$$md(u)\Big|_{sys} + ud(m)\Big|_{sys} = \delta Q + \delta W$$
 (30)

However, we know that dm = 0 (closed system), so the energy balance further reduces to:

$$dU = \delta Q + \delta W \tag{31}$$

where we have dropped the explicit system reference and absorbed the mass. Solving for  $\delta Q$  and substituting our definition of PV-work

$$\delta W = -PdV \tag{32}$$

yields:

$$\delta Q = dU + PdV \tag{33}$$

where P denotes the system pressure (assumed to be equilibrium with the surroundings) and V denotes the volume of the system. Eqn (33) is the differential form of the first law of thermodynamics for a closed system.

#### The first law of thermodynamics for an open system.

Let's begin by simplifying the open time-dependent mass and energy balance equations; assume no chemical reactions, and the change in kinetic and potential energy in the system and all streams is negligible. These assumptions applied to the mass and energy balances give:

$$\frac{d}{dt} \left[ mu \right] \Big|_{sys} = \dot{Q} + \dot{W}_s + \sum_{s=1}^{\mathcal{S}} \nu_s h_s \dot{m}_s \tag{34}$$

$$\frac{dm}{dt} = \sum_{s=1}^{S} \nu_s \dot{m}_s \tag{35}$$

This system of equations is the time dependent first law of thermodynamics (in the absence of chemical reactions). However, often we are concerned with processes at steady state; if the system is at steady state, the time derivatives vanish leaving the steady state open first law of thermodynamics:

$$\dot{Q} + \dot{W}_{sh} + \sum_{s=1}^{S} \nu_s h_s \dot{m}_s = 0 \tag{36}$$

$$\sum_{s=1}^{\mathcal{S}} \nu_s \dot{m}_s = 0 \tag{37}$$

**Example**: Consider a steady-state two stage flow calorimeter with a resistance heating element stage 1 (inlet) connected with a measurement unit in stage 2 (outlet). Liquid water enters the heater stage at  $T_1 = 0$ °C and exists the measurement unit (as a vapor) at  $T_2 = 300$ °C. The following data were taken from the inlet and outlet of the calorimeter:  $\dot{m}_1 = 4.15$  g s<sup>-1</sup>,  $P_2 = 3$  bar and  $\dot{Q} = 12,740$  W. The liquid water is completely vaporized in this process. Calculate the specific enthalpy of steam at the outlet of the measurement unit  $h_2$ . Assume no shaft work, insulated pipes and process units, and negligible changes in the kinetic and potential energy.

Solution: Starting from the steady-state open first law equation:

$$\dot{Q} + \dot{W}_{sh} + \sum_{s=1}^{S} \nu_s h_s \dot{m}_s = 0 \tag{38}$$

we can begin throwing out terms. First,  $\dot{W}_{sh}$  = 0 (from the problem statement). Next, we have two streams, so  $\mathcal{S}$  = 2 with  $\nu_1$  = 1 and  $\nu_2$  = -1 from the process diagram. Thus, the open first law equation for this problem is given by:

$$\dot{Q} + h_1 \dot{m}_1 - h_2 \dot{m}_2 = 0 \tag{39}$$

However, we know the calorimeter unit is at steady-state, which implies  $\dot{m}_1=\dot{m}_2\equiv\dot{m}$ , thus:

$$\dot{Q} = \dot{m} \left( h_2 - h_1 \right) \tag{40}$$

Solving for the enthalpy at the outlet gives:

$$h_2 = h_1 + \frac{\dot{Q}}{\dot{m}} \tag{41}$$

From the steam tables,  $h_1 = 0$ , which leaves:

$$h_2 = (12,740 \text{ J s}^{-1}) / (4.15 \text{ g s}^{-1}) = 3,070 \text{ J g}^{-1}$$
 (42)

## Derivation of general heat capacity relationships.

Imagine that we have a function that describes how the internal energy of a system  $U(\cdot)$  varies with other thermodynamic states  $x_1, x_2, \ldots, x_N$ :

$$U(x_1, x_2, \dots, x_N) = 0 (43)$$

We can take the total differential of the internal energy equation:

$$dU = \sum_{j=1}^{N} \left(\frac{\partial U}{\partial x_j}\right)_{x_1, x_2, \dots, x_N, j} dx_j \tag{44}$$

and substitute this into Eqn. (33) to arrive at:

$$\delta Q = \sum_{j=1}^{N} \left( \frac{\partial U}{\partial x_j} \right) \Big|_{x_1, x_2, \dots, x_N, j} dx_j + PdV$$
(45)

Equation (45) is a completely general equation that relates the change in heat  $\delta Q$  to the internal energy of the system. For single component systems, the states  $x_1, x_2, \ldots, x_N$  are combinations of four variables, temperature, pressure, volume and abundance (the number of particles in the system). However, since we have a closed system with no chemical reactions, our state variables are simply the temperature, pressure and volume. If we specify two of these variables we can calculate the third from the state equation. This leads to three possible system configurations (for a constant abundance system):

• (T,V) systems: If the independent state variables are temperature T and volume V, we can the write dU as:

$$dU = \left(\frac{\partial U}{\partial T}\right)_{V} dT + \left(\frac{\partial U}{\partial V}\right)_{T} dV \tag{46}$$

which yields a differential energy balance of the form:


$$\delta Q = \left(\frac{\partial U}{\partial T}\right)_{V} dT + \left[\left(\frac{\partial U}{\partial V}\right)_{T} + P\right] dV \tag{47}$$

• (T,P) systems: If the independent state variables are pressure P and temperature T, we can write dU as:

$$dU = \left(\frac{\partial U}{\partial T}\right)_P dT + \left(\frac{\partial U}{\partial P}\right)_T dP \tag{48}$$

which yields a differential energy balance of the form:

$$\delta Q = \left[ \left( \frac{\partial U}{\partial T} \right)_P + P \left( \frac{\partial V}{\partial T} \right)_P \right] dT + \left[ \left( \frac{\partial U}{\partial P} \right)_T + P \left( \frac{\partial V}{\partial P} \right)_T \right] dP \tag{49}$$

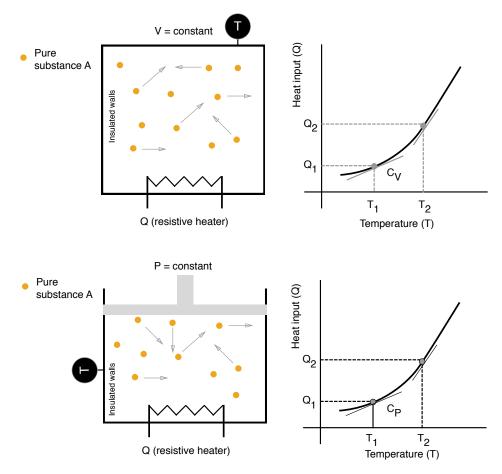

**Fig. 4:** Schematic of the experimental setup for a constant volume (top) and a constant pressure (bottom) heat capacity experiment for a pure substance A.

where V(T, P) gives:

$$dV = \left(\frac{\partial V}{\partial T}\right)_{P} dT + \left(\frac{\partial V}{\partial P}\right)_{T} dP \tag{50}$$

ullet (P,V) systems: If the independent state variables are pressure P and volume V, we can write dU as:

$$dU = \left(\frac{\partial U}{\partial P}\right)_{V} dP + \left(\frac{\partial U}{\partial V}\right)_{P} dV \tag{51}$$

which yields a differential energy balance of the form:

$$\delta Q = \left(\frac{\partial U}{\partial P}\right)_{V} dP + \left[\left(\frac{\partial U}{\partial V}\right)_{P} + P\right] dV \tag{52}$$

Changes in internal energy at constant volume. Definition of  $C_V$ . Let's suppose we have a (T, V) system with a pure substance. When we supply heat at a constant volume (Fig. 4, top), Eqn (47)

reduces to:

$$\delta Q_V = \left(\frac{\partial U}{\partial T}\right)_V dT \tag{53}$$

where dV = 0. If we divide both sides by dT, we arrive at an expression which describes how the internal energy changes with temperature:

$$C_V \equiv \frac{\delta Q_V}{dT} = \left(\frac{\partial U}{\partial T}\right)_V \tag{54}$$

where the subscript V denotes the derivatives are calculated at constant volume. The quantity  $C_V$  is called the constant volume heat capacity. The term  $\delta Q/dT$  (and hence the heat capacity) can easily be measured experimentally (Fig 4). If we integrate both sides of Eqn. (54) with respect to temperature, we arrive at:

$$\Delta U = \int_{T_1}^{T_2} C_V dT \tag{55}$$

Note that  $C_V$  is typically a strong function of temperature, so if  $T_1$  and  $T_2$  span a large temperature range, we *cannot* pull  $C_V$  out the integral. Instead, we have to estimate how  $C_V$  varies with temperature, for example estimating  $C_V$  at many different temperatures and then fitting the results to function of temperature.

Changes in internal energy at constant pressure. Definition of  $C_P$ . For a constant pressure system, let's start with Eqn. (49). When we supply heat at a constant pressure (Fig. 4, bottom) dP = 0, which reduces Eqn. (49) to:

$$\delta Q_P = \left[ \left( \frac{\partial U}{\partial T} \right)_P + P \left( \frac{\partial V}{\partial T} \right)_P \right] dT \tag{56}$$

If we divide both sides of the constant pressure  $\delta Q_P$  expression by dT we arrive at:

$$\frac{\delta Q_P}{dT} = \left(\frac{\partial U}{\partial T}\right)_P + P\left(\frac{\partial V}{\partial T}\right)_P \tag{57}$$

The right-hand side of Eqn. (57) is the sum of an internal energy term and a constant pressure expansion term, which is similar to the definition of enthalpy from the open energy balance:

$$H \equiv U + PV \tag{58}$$

Computing the total differential of *H* gives:

$$dH = dU + PdV + VdP (59)$$

However, we are at constant pressure (dP = 0), which reduces the enthalpy differential to:

$$dH = dU + PdV (60)$$

Differentiating both sides of Eqn. (60) with respect to temperature (at constant pressure) gives the expression:

$$\left(\frac{\partial H}{\partial T}\right)_{P} = \left(\frac{\partial U}{\partial T}\right)_{P} + P\left(\frac{\partial V}{\partial T}\right)_{P} \tag{61}$$

Thus, the change in the internal energy of a material as a function of temperature, when measured at constant pressure, is equal to the change in enthalpy:

$$C_P \equiv \frac{\delta Q_P}{dT} = \left(\frac{\partial H}{\partial T}\right)_P \tag{62}$$

Similar to the constant volume heat capacity, we can decompose Eqn. (62) to solve for the change in enthalpy resulting from a change in temperature (at a constant pressure):

$$\Delta H = \int_{T_1}^{T_2} C_P dT \tag{63}$$

Also like the constant volume heat capacity,  $C_P$  can be a strong function of T, thus, we typically cannot pull it out the temperature integral for large changes in temperature.

Is there a relationship between  $C_V$  and  $C_P$ ? Intuitively, given the same pure substance and the same heat input, you would expect that there is a relationship between  $C_V$  and  $C_P$ . To explore this question, let's consider the first-law written for a (T,V) system held at a constant pressure P:

$$\delta Q_P = \left(\frac{\partial U}{\partial T}\right)_V dT + \left[\left(\frac{\partial U}{\partial V}\right)_T + P\right] dV \tag{64}$$

Using our definition of the constant volume heat capacity, we can rewrite Eqn. (64) as:

$$\delta Q_P = C_V dT + \left[ \left( \frac{\partial U}{\partial V} \right)_T + P \right] dV \tag{65}$$

which, after differentiating with respect to temperature at a constant pressure becomes:

$$\frac{\delta Q_P}{dT} = C_V + \left[ \left( \frac{\partial U}{\partial V} \right)_T + P \right] \frac{\partial V}{\partial T_P} \tag{66}$$

Again, using our definition of constant pressure heat capacity this time, Eqn. (66) reduces to:

$$C_P - C_V = \left[ \left( \frac{\partial U}{\partial V} \right)_T + P \right] \left( \frac{\partial V}{\partial T} \right)_P \tag{67}$$

Equation (67) governs the general relationship between  $C_P$  and  $C_P$  for an arbitrary pure material. Although we have not (yet) explicitly shown it, the quantity of the right-hand side of Eqn. (67) is always greater than zero, thus  $C_P > C_V$ . To work out the exact difference between the heat capacities, we need an *equation of state* for the material we are exploring.

The only equation of state that we have talked about so far is the ideal gas equation state. Thus, lets work out the difference in heat capacities if out working fluid behaved like an ideal gas.

The internal energy of an ideal gas can be calculated from statistical mechanics and is given by:

$$U = \frac{3}{2}nk_BT\tag{68}$$

Thus, the first term on the right side of Eqn. (67) vanishes i.e.,  $(\partial U/\partial V)_T=0$  because U is only a function of T for an ideal gas. This leaves us with the volume expansion term:

$$C_P - C_V = P \left(\frac{\partial V}{\partial T}\right)_P \tag{69}$$


Rearranging the ideal gas law for V, and differentiating with respect to temperature T yields:

$$\left(\frac{\partial V}{\partial T}\right)_{P} = \frac{nR}{P} \tag{70}$$

which, when substituted into Eqn. (69), yields:

$$C_P - C_V = nR (71)$$

where n denotes the number of mols of ideal gas, and R denotes the ideal gas constant.

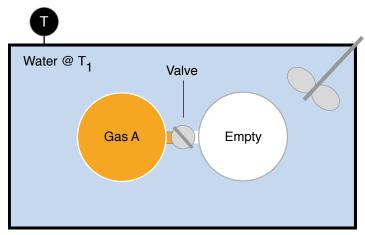

Insulated water tank

**Fig. 5:** Schematic of the experimental apparatus used in a Joule free expansion experiment. Two identical containers, separated by a valve, are in thermodynamic equilibrium with an insulated water bath initially at temperature  $T_1$ . Container A is filled with a gas, while container B is initially empty. At time = 0, the valve is opened an the gas from container A expands into container B.

## Does the internal energy of a material change with the volume of the container?

Theoretically, the internal energy of a material may also be a function of the volume of the system. This is governed by the partial derivative  $(\partial U/\partial V)_T$  in our internal energy expansion. However, unlike heat capacity,  $(\partial U/\partial V)_T$  is not as easy to measure experimentally. The classic experimental technique to measure this quantity is called a *Joule free expansion* (Fig. 5). In this experiment, two identical containers, separated by a valve, are immersed in a constant temperature water bath. Container A is filled with a gas, while container B is initially empty. At time = 0, the valve is opened an the gas from container A expands into container B. Joule measured the temperature of the water bath *before* he opened the valve, and again after the system was allowed to come to thermal equilibrium. There was *no* change in the temperature of the water bath. Let's try and interpret this result using our understanding of energy transfer and the macroscopic total energy balance. Starting from the macroscopic energy balance for a closed system in differential form, we have:

$$dU = \delta Q + \delta W \tag{72}$$

While the gas expands from container A into container B,  $\delta W=0$  as the gas particles are expanding against zero opposing pressure. Additionally, since the temperature of the *finite* water bath was unchanged it follows that  $\delta Q=0$ , thus dU=0. We also know that:

$$dU = \left(\frac{\partial U}{\partial T}\right)_{V} dT + \left(\frac{\partial U}{\partial V}\right)_{T} dV = 0 \tag{73}$$

However, dT = 0 which implies:

$$dU = \left(\frac{\partial U}{\partial V}\right)_T dV = 0 \tag{74}$$

Since  $dV \neq 0$  (the volume of our system approximately doubled), this means:

$$\left(\frac{\partial U}{\partial V}\right)_T = 0 \tag{75}$$

Equation (75) says that the internal energy of a material is *not* a function of volume. This finding is exactly true for an ideal gas (since we derived the functional form for the internal energy), however, it is not true for a real gas (it usually a small positive value for real gases).