

UNIVERZITET U SARAJEVU ELEKTROTEHNIČKI FAKULTET ODSJEK ZA AUTOMATIKU I ELEKTRONIKU

Upravljanje električnim vozilom

Projektni zadatak - Drugi ciklus studija -

Student: Vedad Halimić

Mentor: V. prof. dr Senad Huseinbegović.

Sadržaj

1	Uvo		1	
	1.1	Motor		
		Pretvarač		
		1.2.1 Pinovi energetskog pretvarača	1	
	1.3	Upravljanje motorom	3	
	1.4	1.2.1 Pinovi energetskog pretvarača	3	
Pr	ilozi		Ć	
A	A 8000W DC Brushless Car Motor Datasheet			
В	B Kelly KLS-H Brushless Motor Controller User's Manual			
C	C JKH Foot Throttle			

Poglavlje 1

Uvod

U ovom radu je predstavljeno upravljanje električnim vozilom (slika 1.1) sa pogonom na sva četiri točka. Proizvođač motora je kompanija *QSMOTOR*. Snaga motora je 8000W, a standardni napon napajanja iznosi 72V. Svaki od motora je spojen na odgovarajući pretvarač/invertor. Motori su trofazni i sadrže dva seta Hallovih senzora za određivanje brzine i pozicije. Datasheet motora je dat u prilogu A, a dio dokumentacije pretvarača *KLS7275H* u prilogu B. Razvoj upravljačkog prototipa će biti realiziran pomoću dSpace sistema.

1.1 Motor

Motor je trofazni sa 16 pari polova, nominalne snage 8000W. Za mjerenje brzine i pozicije motora, dostupna su dva seta Hallovih senzora. Moguće je mjeriti i temperaturu motora pomoću temperaturnog senzora *KTY*83/122. Motor sadrži dva konektora, čiji pinovi odgovaraju pinovima na *DJ7061Y-2.3-21* konektoru energetskog pretvarača. Svaki od konektora daje informacije sa Hallovog i temperaturnog senzora.

1.2 Pretvarač

Energetski pretvarač *KLS7275H* proizvođača *Kelly* sadrži 5 digitalnih ulaza: prekidače za gas i kočnicu, prekidače za kretanje naprijed i nazad, te prekidač za *boost* način rada. Dostupna su 3 analogna ulaza: gas, kočnica i temperatura motora. Opseg ulaznog napona može varirati od 0 do 5*V*. Za upravljanje je moguće koristiti i palicu (*engl. joystick*), pri čemu pozicija palice određuje zadanu brzinu i smjer kretanja. *Cruise* režim rada, koji je također dostupan, podrazumijeva zadržavanje zadane brzine vrtnje motora sve dok se ne zada nova brzina ili aktivira kočnica. Pretvarač podržava povezivanje putem *CAN* mreže.

1.2.1 Pinovi energetskog pretvarača

KLS7275H kontroler posjeduje tri konektora prikazana na slici (1.2 i 22 pina. Pored standardnih pinova za napajanje, pretvarač posjeduje pinove za prikupljanje informacija sa motora (Hallov senzor i temperaturni senzor), kao i pinove za definiranje smjera i brzine vrtnje motora. Žica spojena na odgovarajući pin je označena jedinstvenom bojom i brojem. Funkcije pinova su date u nastavku.

Konektor DJ7091Y-2.3-11



Slika 1.1: Električno 4*x*4 vozilo


- REV-SW (14) prekidač za kretanje nazad
- GND (6) minus napona napajanja, povratni signal
- FWD (12) prekidač za kretanje naprijed
- 12V (11) naponski izvor od 12V
- 12V Brake (25) ručna kočnica
- ECO (22) prekidač za štedljivi način rada
- CAN-H (33) high pin za CAN komunikaciju
- PWR (7) plus napona napajanja pretvarača
- CAN-L (34) low pin za CAN komunikaciju
- Konektor *DJ7091Y-2.3-21*
 - FOOT-SW (15) prekidač za gas
 - Throttle (3) analogni ulaz za gas (0-5V)
 - GND (20) minus napon napajanja, povratni signal
 - Meter (8) kopija signala sa Hallovog senzora
 - 5V (4) naponski izvor od 5V
 - Brake-AN (2) boost funkcija ili analogni ulaz za regenerativni tip kočenja
 - 12V (11) naponski izvor od 12V
- Konektor *DJ7061Y-2.3-21*
 - GND (21) minus napon napajanja, povratni signal
 - Temp (1) temperatura motora
 - 5V (5) naponski izvor od 5V
 - Hall A (18) signal Hallovog senzora za fazu A
 - Hall B (17) signal Hallovog senzora za fazu B
 - Hall C (16) signal Hallovog senzora za fazu C

1.3 Upravljanje motorom


Energetski pretvarač/kontroler koristi vektorsku modulaciju (*engl. space-vector modulation*) za upravljanje trofaznim motorom. Za upravljanje cjelokupnim sistemom vozila, potrebno je uključiti dodatni sloj upravljanja, koji će upravljati paralelno sa sva četiri motora.

1.4 Papučica gasa

Brzinu motora je moguće zadavati pomoću papučice gasa. Model koji je odabran ima serijski broj *JKH-005-A-65*. Prema specifikaciji proizvođača *SAYOO*, datoj u prilogu C, dužina kabla spojenog na kočnicu iznosi 65*cm*. U kablu se nalazi 5 žica raspoređenih na dva konektora - jedan sa tri, drugi sa četiri žice. Raspon ulaznog i izlaznog napona papučice gasa iznosi od 0 do 5*V*. Ovaj element se konceptualno ponaša kao otpornik sa klizačem koji je spojen na napon napajanja. Izlazni napon otpornika ovisi o položaju klizača, odnosno u ovom slučaju - položaja papučice gasa. Pinovi, prikazani na slici (1.3), imaju funkcije date u nastavku.

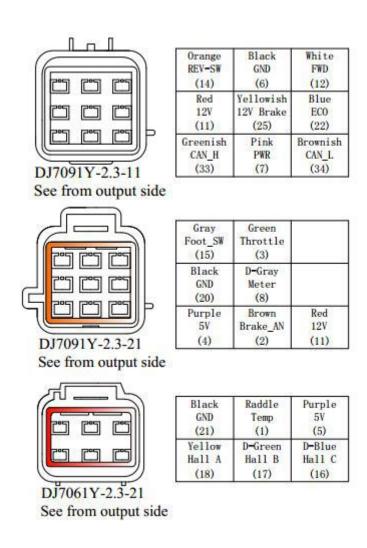

Slika 1.2: Pinovi Kelly KLS7275H pretvarača

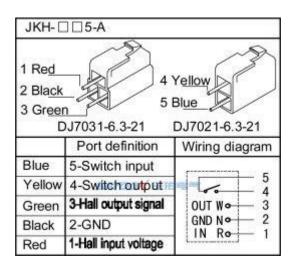

Slika 1.3: Pinovi papučice gasa

- (1) plus napon napajanja (5*V*)
- (2) minus napon napajanja (0V, masa)
- (3) izlazni napon
- (4) izlaz prekidača
- (5) ulaz prekidača

Prilozi

Prilog A 8000W DC Brushless Car Motor Datasheet



QS MOTOR LTD


Phone: +86-188-0166-2699 Email: sales@qsmotor.com Website: www.qsmotor.com

Contact: Harry Zhou

8000W DC Brushless Car Motor (50H 273 V3)

	Motor Diameter	303mm
	Recommendation Hub	14 inch or more than 14 inch rim
Motor Size	Axle	Single Shaft
	PCD	5x117mm (Customizable 100-117mm)
	СВ	71mm (or Customizable 60-80mm)
Motor Phase	Number of Motor Phase	3
Motor Priase	Cross Section of Cable	16 Square Millimeter
	Rated Power	8000W
	Max. Power	12800W (peak 16000W)
	Rated Voltage	72V (option 84V, 96V, 108V, 120V)
	Continuous Current	127A
	Peak Current	190A (peak 300A less than 5 seconds)
Motor Power	Magnet Height	50mm
	Number of Pole Pairs	16 Pairs
	Max. Torque	90 - 302N.m
	Max. Efficiency	91%
	Rotating Speed	550 - 1200rmp
	Max. Speed of Scooter	30 - 110km/h
Motor Hall Sensor	Hall Sensor	2 sets (1 for use and 1 for backup)
Motor Hall Sellsor	Hall Working Votalge	5V (option 12V)
Motor Brake System	Brake Type	Disc Brake
Motor Brake System	Disc Size	220mm
	Waterproof Grade	IP54
	Max. Working Temperature	70 $^{\circ}$ (peak 120 $^{\circ}$ in 5 - 10 second)
Remark	Temperature Sensor	KTY83-122
INCINAL K	Color	Black
	Weight	26kgs
	Unit Packing	43x43x41cm/carton
Option	Temperature Sensor	KTY83-122

Drawing of Car Motor 273

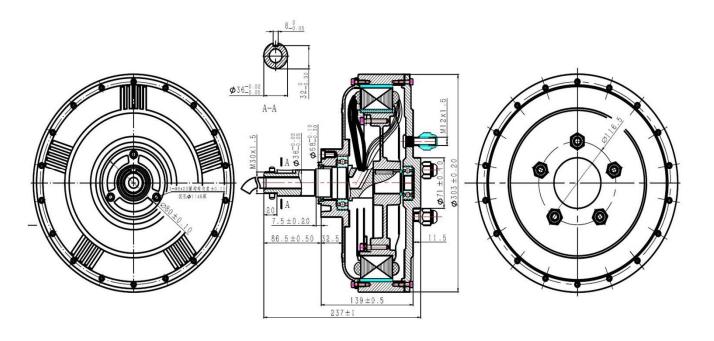

QS MOTOR LTD

is Shugang Ave, Luqiao, Taizhou 318057, Zhejiang, China QSMOTOR.com/hone: +86-188-0166-2699 Email: sales@qsmotor.com

Motor has 3 Phase Cables and 2 sets Hall Sensor Plugs

3 Phase Cables



2 Sets Hall Sensor Plugs



Motor Phase Cable

Motor's YELLOW Cable (big cable), A, U phase.

Motor's GREEN Cable (big cable), B, V phase.

Motor's BLUE Cable (big cable), C, W phase.

The Hall Sensor Plug Set 1.

The Hall Sensor's YELLOW Cable (small cable, hall A).

The Hall Sensor's GREEN Cable (small cable, hall B).

The Hall Sensor's BLUE Cable (small cable, hall C).

The Hall Sensor's RED Cable (small cable, +5V DC).

The Hall Sensor's BLACK Cable (small cable, GND).

The Hall Sensor's Transparent/Crystal Cable (Temperature Sensor).

The Hall Sensor Plug Set 2.

The Hall Sensor's GRAY Cable (small cable, hall A).

The Hall Sensor's PURPLE Cable (small cable, hall B).

The Hall Sensor's WHITE Cable (small cable, hall C).

The Hall Sensor's ORANGE Cable (small cable, +5V DC).

The Hall Sensor's BROWN Cable (small cable, GND).

The Hall Sensor's Transparent/Crystal Cable (Temperature Sensor).

Important Notice.

- 1. The function of 2 sets hall sensors are same. We use 1 set Hall Sensor Plug and the other 1 set for backup. Please note never try to connect 2 set hall sensor plugs to controller at same time.
- 2. Please change the hall plug of controller if the hall plugs do not match with motor. The static electricity may damage the hall sensor of motor if you change the plug of motor.

Prilog B

Kelly KLS-H Brushless Motor Controller User's Manual

Kelly KLS-H Brushless Motor Controller User's Manual

Devices Supported:

KLS2422H	KLS2430H	KLS2445H
KLS2475H		KLS6022H
KLS6030H	KLS7218H	KLS7230H
KLS7245H	KLS7275H	KLS8422H
KLS8430H	KLS72501-8080H	KLS72601-8080H
KLS72701-8080H	KLS84701-8080H	KLS96301-8080H
KLS96401-8080H	KLS96501-8080H	KLS96601-8080H







Chapter 2 Features and Specifications

2.1 General functions

- (1) Extended fault detection and protection. Customers can read the error message in PC software or Android APP also.
- (2) Monitoring battery voltage. It will stop driving if the battery voltage is too high and it will progressively cut back motor drive power as battery voltage drops until it cuts out altogether at the preset "Low Battery Voltage" setting.
- (3) Built-in current loop and over current protection.
- (4) Configurable motor temperature protection range.
- (5) Current cutback at low temperature and high temperature to protect battery and controller. The current begins to ramp down at 90℃ case temperature, shutting down at 100℃.
- (6) The controller keeps monitoring battery recharging voltage during regen braking.
- (7) Maximum reverse speed and forward speed can be configured between 20% and 100% respectively and separately.
- (8) A 4pin connector to RS232 port and a Z-TEK USB to RS232 cable allows for configuration, programming and software upgrades using the tablet which must be based on Android OS now.People can do the same things on PC software by using a standard USB to RS232 cable instead.
- (9) Provision of a +5 volt and +12 volt output to supply various kinds of hall sensors.
- (10) 5 switch inputs which are activated by connection to 12V. Default to throttle switch, brake switch, reversing switch, forward switch and Boost switch.
- (11) 3 analog 0-5V inputs that default to throttle input, Brake analog input and motor temperature input
- (12) Copy signal of one of hall sensors.
- (13) Configurable boost switch. Enables the maximum output power achievable if the switch is turned on. The effect is the same as full throttle position even if you don't turn throttle at all.
- (14) 12V brake switch input used different port from motor temperature sensor. You can use both brake switch and motor temperature sensor functions at the same time on the latest version. Pin 25 is 12V brake switch input port. Pin 1 is motor temperature sensor input port.
- (15) Optional joystick throttle. A bi-symmetrical 0-5V signal for both forward and reversing.
- (16) Configurable motor over-temperature detection and protection with the recommended thermistor KTY84-130/150 or KTY83-122.
- (17) 3 hall position sensor inputs. Open collector, pull up provided.
- (18) Brake analog regen mode. This regen mode doesn't need brake switch to support any more. Only available from software version 0106 or advanced version.
- (19) Enhanced regen brake function. A novel ABS technique provides powerful and smooth regen. The regen can happen at any speeds until zero speed.
- (20) KLS-H controller included the fuse on the case. Not shunt is attached.
- (21) Cruise control. Only can be activated in forward direction.
- (22) KLS-H can support Broadcast type CAN Bus function. It is 250Kbps. CAN bus is not included in KLS-H controller by default. CAN bus is only an optional function for KLS-H.

CAN ID can be changed in the latest user program also.

(23)Bluetooth function. Required a small Bluetooth converter which needs to be purchased in addition from our website. This small converter is only useful for KLS controller.

(24) Can support three speed function on the latest version.

Caution! The regen is not a safe function. Usually you may use the mechanical brake.

2.2 Features

- 1) Intelligence with powerful microprocessor.
- 2) Synchronous rectification, ultra low drop, fast SVPWM and FOC to achieve very high efficiency.
- 3) Electronic reversing.
- 4) Voltage monitoring on 3 motor phases, bus, and power supply.
- 5) Voltage monitoring on voltage source 12V and 5V.
- 6) Current sense on all 3 motor phases.
- 7) Current control loop.
- 8) Hardware over current protection.
- 9) Hardware over voltage protection.
- 10) Configurable limit for motor current and battery current.
- 11) Low EMC.
- 12) Battery protection: current cutback, warning and shutdown at configurable high and low battery voltage.
- 13) Rugged aluminum housing for maximum heat dissipation and harsh environment.
- 14) Rugged high current terminals, and rugged aviation connectors for small signal.
- 15) Thermal protection: current cut back, warning and shutdown on high temperature.
- 16) Controller can do auto Identification angle for different degrees of hall sensors.
- 17) Configurable high pedal protection: the controller will not work if high throttle is detected at power on.
- 18) Current multiplication: Take less current from battery, output more current to motor.
- 19) Easy installation: 3-wire potentiometer will work.
- 20) Standard PC/Laptop computer to do programming. There is one more choice for customers to program KLS controller. Standard Tablet with Android OS to do programming. Need a Z-TEK USB TO RS232 cable for connecting the controller to App program in Tablet.
- 21) User program provided. Easy to use. No cost to customers.
- 22) Support motors with any number of poles.
- 23) Up to 70,000 electric RPM standard. (Electric RPM = mechanical RPM * motor pole pairs; Motor pole pairs=Motor poles/2).
- 24) KLS-H:Dust and water protected under sealed condition, IP66
- 25) KLS-8080H. The protection rating is IP54.

2.3 Specifications

- Frequency of Operation: 10KHz or 20KHz.
- Standby Battery Current: < 0.5mA.
- •5V or 12V Sensor Supply Current: 40mA.
- •Controller supply voltage range: PWR, 40V to 90V for controllers rated equal or lower than 72V.KLS24V model:PWR,20V to 30V

The PWR can be 96V batteries for KLS96xxx-8080H model.So All KLS-H and KLS-8080H model are non isolated type controllers.

- ·Supply Current, PWR, 30mA Typical.
- •Configurable battery voltage range, B+. Max operating range: 40V to 1.25*Nominal Voltage. KLS24V model:B+.Max operating range:20V to 30V.
- Standard Throttle Input: 0-5 Volts(3-wire resistive pot), 1-4 Volts(hall active throttle).
- •Throttle Input: 0-5 Volts. Can use 3-wire pot to produce 0-5V signal.
- •Full Power Operating Temperature Range: 0°C to 70°C (MOSFET temperature).
- •Operating Temperature Range: -40 °C to 100 °C (MOSFET temperature).
- ·Max Battery Current : Configurable.

2.4 Name Regulation

The name regulation of Kelly BLDC motor controllers:

KLS 72 30H

KLS:Kelly BLDC motor controller based on sinusoidal waveform which is supposed to work with BLDC motor with three hall sensors.All KLS controllers can do regen brake function by default.

72:72V batteries.

H:The motor controller included a plastic cover with a fuse.And KLS-H is IP66 rating without filling the silica gel by default.But KLS-8080H is IP54 rating.

C:BroadCast type CAN bus protocol.

Kelly KLSH Brushless Motor Controller			
Model	30 seconds	Continuous	Voltage(Volt)
	Current(Amp)	Current(Amp)	
KLS2422H	220	88	20 <volt<30< td=""></volt<30<>
KLS2430H	350	120	20 <volt<30< td=""></volt<30<>
KLS2445H	350	140	20 <volt<30< td=""></volt<30<>
KLS2475H	500	200	20 <volt<30< td=""></volt<30<>
KLS6022H	220	88	40 <volt<80< td=""></volt<80<>
KLS6030H	350	120	40 <volt<80< td=""></volt<80<>
KLS7218H	200	80	40 <volt<90< td=""></volt<90<>
KLS7230H	300	100	40 <volt<90< td=""></volt<90<>
KLS7245H	350	140	40 <volt<90< td=""></volt<90<>
KLS7275H	500	200	40 <volt<90< td=""></volt<90<>

KLS8422H	220	80	40 <volt<105< td=""></volt<105<>
KLS8430H	300	100	40 <volt<105< td=""></volt<105<>
KLS72501-8080H	500	200	20 <volt<90< td=""></volt<90<>
KLS72601-8080H	600	240	20 <volt<90< td=""></volt<90<>
KLS72701-8080H	700	280	20 <volt<90< td=""></volt<90<>
KLS84701-8080H	700	280	20 <volt<105< td=""></volt<105<>
KLS96301-8080H	300	120	20 <volt<120< td=""></volt<120<>
KLS96401-8080H	400	160	20 <volt<120< td=""></volt<120<>
KLS96501-8080H	500	200	20 <volt<120< td=""></volt<120<>
KLS96601-8080H	600	240	20 <volt<120< td=""></volt<120<>

Chapter 3 Wiring and Installation

3.1 Mounting the Controller

The controller can be oriented in any position which should be as clean and dry as possible, and if necessary, shielded with a cover to protect it from water and contaminants.

To ensure full rated output power, the controller should be fastened to a clean, flat metal surface with four screws. Applying silicon grease or some other thermal conductive material to contact surface will enhance thermal performance.

Proper heat sinking and airflow are vital to achieve the full power capability of the controller.

The case outline and mounting holes' dimensions are shown in Figure 1,2,3,4.


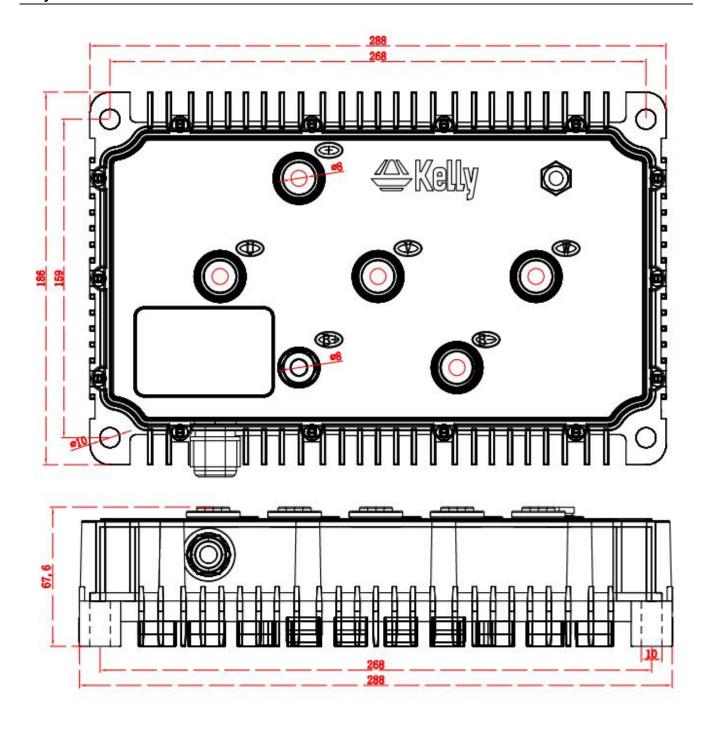


Figure 3: KLS2475H KLS7275H mounting holes' dimensions (dimensions in millimeters)

3.2 Connections

3.2.1 Pin definition of KLS-H Controller

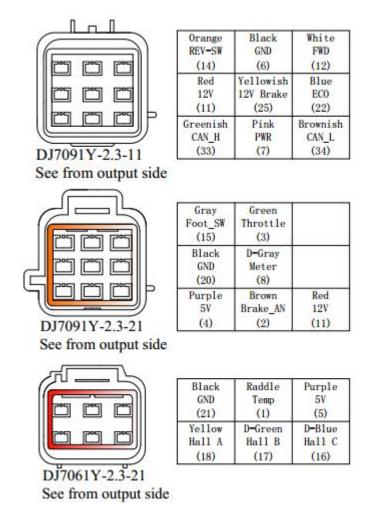

- 1,The switch signal is valid to 12V on pin11
- 2,12V capacity is low. This 12V only can be used for LED or switch signals.
- 3,Boost and Brake analog regeneration mode used the same pin as pin2.

When Boost is disabled in the user program, the pin2 can be used as brake variable regen mode. When Boost is enabled, the brake analog regen mode is inactivated automatically. Both Boost and Brake variable regen mode can not be used at the same time.

Figure 5: waterproof connector

DJ7091Y-2.3-11 Pin Definition

(14) REV_SW: Reverse switch input. Orange

(6) RTN: Signal return or power supply return. Black

(12) FWD: Forward switch White

(11) 12V:12V Source Red

(25) 12V brake switch. Yellowish

- (22) ECO: Low speed input switch function. Blue
- (33)CAN-H:Green(Optional function)
- (7) PWR: Controller power supply (input). Pink
- (34)CAN-L:Dark Gray(Optional function)

DJ7091Y-2.3-21 Pin Definition

- (15) Micro_SW: Throttle switch input. Gray
- (3) Throttle: Throttle analog input, 0-5V. Dark Green
- (20) RTN: Signal return. Black
- (8) Meter: Copy signal of hall sensors. Dark Blue
- (4) 5V: 5V supply output, <40mA. Purple
- (2) Brake_AN: Brake variable regen or Boost function. Brown
- (11) 12V:12V Source Red

DJ7061Y-2.3-21 Pin Definition


- (21) RTN:Signal return. Black
- (1) Temp: Motor temperature sensor input. Raddle
- (5) 5V: 5V supply output,<40mA.Purple
- (18) Hall A: Hall phase A. Yellow
- (17) Hall B: Hall phase B. Dark Green
- (16) Hall C: Hall phase C. Dark Blue

Notes:

- 1. All RTN pins are internally connected.
- 2. Meter function is to copy either of hall sensors.
- 3. Switch to 12V is active. Open switch is inactive.

Caution:

- Do not apply power until you are certain the controller wiring is correct and has been double checked. Wiring faults will damage the controller.
- Ensure that the B- wiring is securely and properly connected before applying power.
- The preferred connection of the system contactor or circuit breaker is in series with the B+ line.
- All contactors or circuit breakers in the B+ line must have precharge resistors across their contacts. Lack of even one of these precharge resistors may severely damage the controller at switch-on.

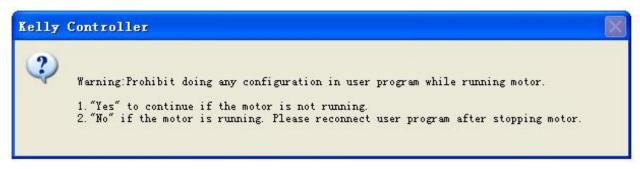

3.2.2 Standard Wiring of KLS-H Controller

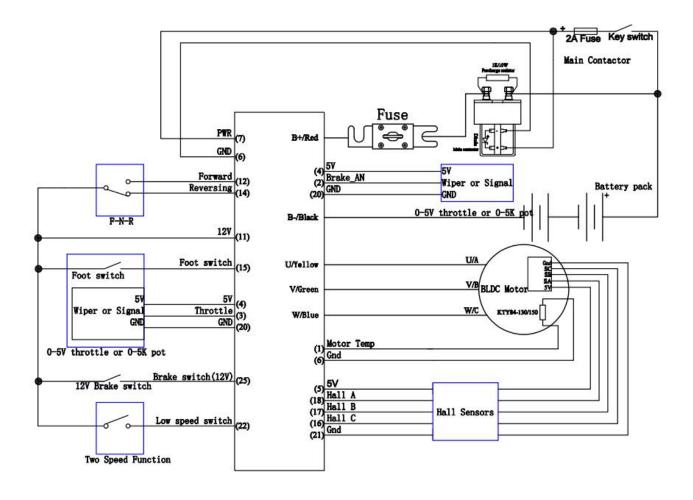


Figure 6: KLS-H controller standard wiring (Battery voltage can be used for controller supply)


Prilog C JKH Foot Throttle




Switches and Accessories



Foot speed control for electric vehicles, electric tricycles, trucks, recreational vehicles, classic cars, brick cars, solar boats

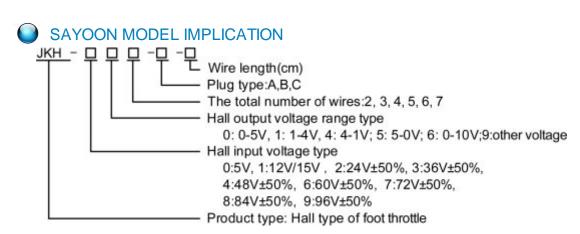

USE	OF	THE	FN\/I	R∩
USE	OF			RU

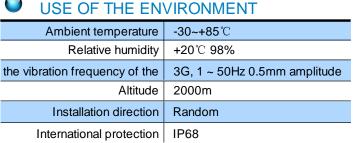


ORDER INSTRUCTION

U.N.W.	1000g
Package QTY.	40 PCS





INSTALLATION DIAGRAM

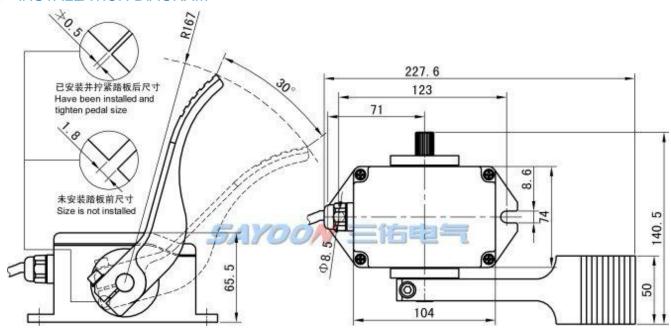

TECHNICAL PARAMETERS

120111107121711111111111111111111111111		
5V,10V,12V,24V,36V-84V,96V, Any voltage		
0.8-4.2v;0-5V;5-0V;4.2V-0.8V;0-10V;10-0V		
10mA		
Voltage		
650 mm		
30 degrees		
2A		
1A		
0-96V		
Vertical or suspension		
Vertical or suspension		
CE		





FEATURES

Pedal accelerator pedal device is through one of the most important components of motor controller management operation, its quality determines the user driving reliability and comfort. The company accelerator has the following characteristics:1 Mechanical and electronic signal, logic signal, to prevent runaway.2 double torsion spring design, reasonable structure, prevent speed, high safety.3 waterproof and anti vibration, suitable for a variety of vehicle environment.4 imported sensitive components, the temperature drift is small, the work is stable.5 non contact type induction work, no wear, long life.6 the output curve is reasonable, the vehicle control freely.



WIRING DIAGRAM

