SoC Design

Lab 4-1 (Team project)

Student ID: 110590022 Name(Chinese/English): 陳冠晰 Vic Student ID: 110000107 Name(Chinese/English): 陳柏翰 Lukas Student ID: 110061217 Name(Chinese/English): 王彥智 Kenny

• Firmware code

■ How does it execute a multiplication in assembly code.

Let's look at the __mulsi3 function:

```
38000000 < mulsi3>:
38000000: 00050613
                             mv a2,a0
38000004: 00000513
                             li a0,0
                             andi a3,a1,1
38000008: 0015f693
3800000c: 00068463
                             beqz a3,38000014 <__mulsi3+0x14>
38000010: 00c50533
                             add a0,a0,a2
38000014: 0015d593
                             srli a1,a1,0x1
38000018: 00161613
                             slli a2,a2,0x1
3800001c: fe0596e3
                                   a1,38000008 < mulsi3+0x8>
                             bnez
38000020: 00008067
```


- **mv a2, a0**: This instruction moves the value from register a0 to register a2. In other words, it makes a copy of the value in a0 and stores it in a2.
- **li a0, 0**: This instruction loads an immediate value into register a0, setting it to 0. It essentially clears the content of a0.
- andi a3, a1, 1: This instruction performs a bitwise AND operation between the value in register a1 and the immediate value 1. The result is stored in a3. It checks the least significant bit of a1 and stores it in a3.
- beqz a3, 38000014 < __mulsi3+0x14>: This is a conditional branch instruction. It checks if the value in a3 (which represents the least significant bit of a1) is zero (beqz = branch if equal to zero). If it is zero, the program jumps to the address 38000014, which skips the next instruction.
- add a0, a0, a2: This instruction adds the value in a2 to the value in a0

and stores the result in a0. It effectively accumulates the value in a2 into a0.

- **srli a1, a1, 0x1**: This instruction performs a right shift logical operation on the value in a1, shifting it right by 1 bit position. This is effectively dividing a1 by 2.
- **slli a2, a2, 0x1**: This instruction performs a left shift logical operation on the value in a2, shifting it left by 1 bit position. This is effectively multiplying a2 by 2.
- bnez a1, 38000008 < __mulsi3+0x8>: This is a conditional branch instruction. It checks if the value in a1 is non-zero (bnez = branch if not equal to zero). If a1 is non-zero, the program jumps back to address 38000008(andi a3, a1, 1), effectively creating a loop that repeats until a1 becomes zero.
- ret: This instruction is a return instruction. It indicates the end of the
 mulsi3> function and returns control to the calling function.

That's look at the following example:

```
7*6 = 42
\rightarrow 000111_2*000110_2
= 000111*000100 + 000111*000010
= 011100*1 + 001110*1(a2 shift right, a1 shift left)
= 011100 + 001110(accumulate the value)
= 101010_2
```

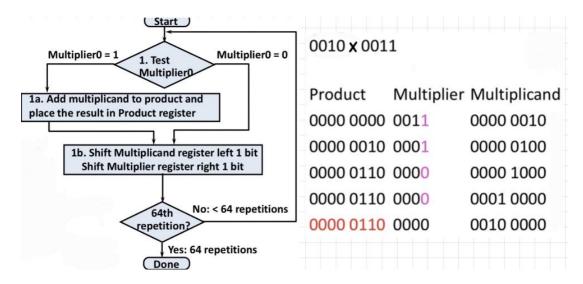

Flow of doing multiplication

■ The way assembly code run our firmware code.

637	3800008c <fir>:</fir>			
638	3800008c:	fd010113	addi	sp,sp,-48
639	38000090:	02112623	SW	ra,44(sp)
640	38000094:	02812423	SW	s0,40(sp)

638: This instruction subtracts 48 from the stack pointer, effectively allocating space on the stack for local variables and saving space for return address (ra) and s0 register.

639-640: These instructions store the values of the ra (return address) and s0 registers onto the stack.

641 38000098:	03010413	addi	s0,sp,48
642 3800009c:	f89ff0ef	jal	ra,38000024 <initfir></initfir>
643 38000020	fe042623	SW	ZECO -20(SO)

641: This instruction sets s0 to point to the start of the allocated stack space, effectively creating a frame pointer for local variable access.

642: This is a jump-and-link instruction, which calls a function at the address 0x38000024 (<initfir>), and stores the return address in ra.

643: These instructions initialize a value in memory at address s0-20 and then jump to label 0x380001a0.

644 380000a4:	0fc0006f	j	380001a0 <fir+0x114></fir+0x114>					
644: jump to 3800	544: jump to 380001a0							
707 380001a0:	fec42703	lw	a4,-20(s0)					
708 380001a4:	00a00793	li	a5,10					
709 380001a8:	f0e7d0e3	bge	a5,a4,380000a8 <fir+0x1c></fir+0x1c>					

Probably for loop operation:

707: now a4 is zero

708: a5 = 10

```
709: since 10 > 0, branch to 380000a8
645 380000a8:
                    02c00713
                                              li
                                                      a4,44
                                                      a5,-20(s0)
646 380000ac:
                    fec42783
                                              lw
647 380000b0:
                    00279793
                                              slli
                                                      a5,a5,0x2
648 380000b4:
                    00f707b3
                                              add
                                                      a5,a4,a5
649 380000b8:
                                                      a4,0(a5)
                    0007a703
                                              lw
650 380000bc:
                                              li
                    05c00693
                                                      a3,92
                                                      a5,-20(s0)
651 380000c0:
                    fec42783
                                              lw
                                             slli
652 380000c4:
                    00279793
                                                      a5,a5,0x2
653 380000c8:
                    00f687b3
                                              add
                                                      a5,a3,a5
654 380000cc:
                    00e7a023
                                              SW
                                                      a4,0(a5)
                                                      zero,-24(s0)
zero,-28(s0)
655 380000d0:
                    fe042423
                                              SW
656 380000d4:
                    fe042223
                                              SW
645: a4 = 44
646: now -20(s0) = a5 = 10
647: a5 = 4 * 10
648: a5 = a4 + a5 = 84
649: a4 = 0(a5)
650: a3 = 92
651: a5 = 10
652: a5 = 40
653: a5 = a5 + a3 = 132
654: now 0(a5) = a4
655: -24(s0) = 0
656: -28(s0) = 0
657 380000d8:
                      0980006f
                                                         38000170 <fir+0xe4>
657: jump to 38000170
j loop
695: a4 = 0 (j)
696: a5 = 10 (N)
697: a5 \ge 0 so jump to 380000dc (into the j loop)
                    00000713
658 380000dc:
                                             li
                                                     a4,0
659 380000e0:
                    fe442783
                                                     a5,-28(s0)
                                             lw
                                             slli
660 380000e4:
                    00279793
                                                     a5,a5,0x2
661 380000e8:
                    00f707b3
                                             add
                                                     a5,a4,a5
662 380000ec:
                    0007a783
                                                     a5,0(a5)
                                             lw
663 380000f0:
                    fef42023
                                                     a5,-32(s0)
                                             SW
664 380000f4:
                    fe442703
                                                     a4,-28(s0)
                                             lw
665 380000f8:
                    fec42783
                                             lw
                                                     a5,-20(s0)
666 380000fc:
                    02e7c263
                                             blt
                                                     a5,a4,38000120 <fir+0x94>
658: a4 = 0
659: a5 = 0
660: a5 = 0
661: a5 = 0 + 0 = 0
662: a5 = 0(a5)
663: -32(s0) = a5
664: a4 = 0
```

675 38000120: fec42783 1 w a5, -20(s0)676 38000124: 00b78713 addi a4,a5,11 a5,-28(s0) 677 38000128: fe442783 1 w 678 3800012c: 40f707b3 sub a5,a4,a5 679 38000130: 05c00713 li a4,92 680 38000134: 00279793 slli a5,a5,0x2 681 38000138: 00f707b3 add a5,a4,a5 682 3800013c: 0007a783 lw a5,0(a5) a5,-36(s0) 683 38000140: fcf42e23 SW 684 38000144: fe042583 lw a1,-32(s0) 685 38000148: fdc42503 lw a0,-36(s0) **686** 3800014c: jal ra,38000000 mulsi3> eb5ff0ef

Jump to 38000120 to do the multiplication:

```
598 38000000 <__mulsi3>:
599 38000000:
                   00050613
                                                    a2,a0
600 38000004:
                   00000513
                                                    a0,0
                                            li
601 38000008:
                   0015f693
                                            andi
                                                    a3,a1,1
                                                   a3,38000014 <__mulsi3+0x14>
602 3800000c:
                   00068463
                                            beqz
603 38000010:
                   00c50533
                                           add
                                                    a0,a0,a2
604 38000014:
                   0015d593
                                           srli
                                                   a1,a1,0x1
605 38000018:
                  00161613
                                           slli
                                                   a2,a2,0x1
606 3800001c:
                   fe0596e3
                                                   a1,38000008 <__mulsi3+0x8>
                                           bnez
607 38000020:
                   00008067
                                           ret
return the multiplication result
```

```
687 38000150:
                    00050793
                                                      a5,a0
                                             ΜV
688 38000154:
                    00078713
                                             ΜV
                                                      a4,a5
689 38000158:
                    fe842783
                                                      a5,-24(s0)
                                              lw
                                             \mathsf{add}
690 3800015c:
                    00e787b3
                                                      a5,a5,a4
                                                      a5,-24(s0)
a5,-28(s0)
691 38000160:
                    fef42423
                                             SW
692 38000164:
                    fe442783
                                             1 w
                                             addi
693 38000168:
                    00178793
                                                      a5,a5,1
694 3800016c:
                    fef42223
                                             SW
                                                      a5,-28(s0)
695 38000170:
                    fe442703
                                                      a4,-28(s0)
696 38000174:
                    00a00793
                                              li
                                                      a5,10
                                                      a5,a4,380000dc <fir+0x50>
697 38000178:
                    f6e7d2e3
                                             bae
```

Store the maltiplication result to stack.


..... the assembly code just implement the code just like in C. However, the register, address, and stack pointer all jump instructions make it very difficult for people to understand its implementation flow (unlike high level language), but after going through the risc-v code, we still can see the implementation pattern.

■ What address allocate for user project and how many space is required to allocate to firmware code.

In this Lab, spec said that it provides 4K bytes memory for our mprjram Our firmware code uses 0x38000000 to 0x380001c0.


Interface between BRAM and wishbone

■ Datapath

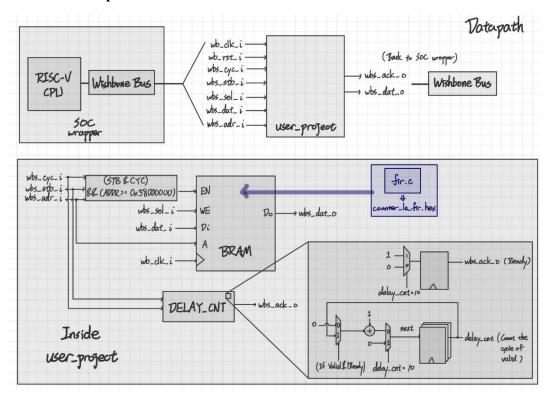


Our firmware code fir.c will be compiled as counter_la_fir.hex, and loaded into block RAM inside our user project by testbench.

■ Wishbone protocol

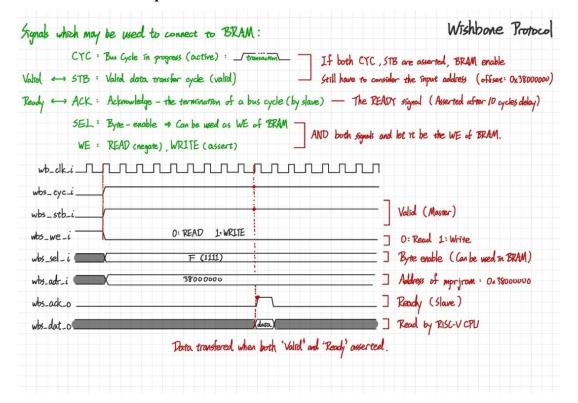

■ Waveform from xsim

0x3800008c - 0x380001c0:

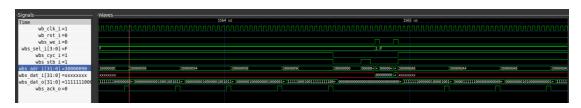

The waveform above is executing our firmware code (fir.c)

```
3800008c <fir>:
3800008c: fe010113
38000090: 00112e23
                             sw ra,28(sp)
38000094: 00812c23
                             sw s0,24(sp)
                             addi s0,sp,32
38000098: 02010413
                             jal ra,38000024 <initfir>
3800009c: f89ff0ef
                             sw zero,-20(s0)
j 380001a0 <fir+0x114>
380000a0: fe042623
380000a4: 0fc0006f
380000a8: 00a00793
                             li a5,10
380000ac: fef42423
                             sw a5,-24(s0)
380000b0: 03c0006f
                             j 380000ec <fir+0x60>
380000b4: fe842783
                            lw a5,-24(s0)
380000b8: fff78793
                             addi a5,a5,-1
380000bc: 05c00713
                            li a4,92
380000c0: 00279793
                            slli a5,a5,0x2
                             add a5,a4,a5
380000c4: 00f707b3
                             lw a4,0(a5)
li a3,92
380000c8: 0007a703
380000cc: 05c00693
380000d0: fe842783
                            lw a5,-24(s0)
380000d4: 00279793
                             slli a5,a5,0x2
380000d8: 00f687b3
                             add a5,a3,a5
380000dc: 00e7a023
                             sw a4,0(a5)
380000e0: fe842783
                            lw a5,-24(s0)
380000e4: fff78793
                             addi a5,a5,-1
380000e8: fef42423
                             sw a5,-24(s0)
380000ec: fe842783
                             lw a5,-24(s0)
380000f0: fcf042e3
                             bgtz a5,380000b4 <fir+0x28>
380000f4: 02c00713
                             li a4,44
380000f8: fec42783
                             lw a5,-20(s0)
380000fc: 00279793
                             slli a5,a5,0x2
38000100: 00f707b3
                             add a5,a4,a5
38000104: 0007a703
                             lw a4,0(a5)
38000108: 05c00793
                            li a5,92
3800010c: 00e7a023
                             sw a4,0(a5)
                            sw zero,-28(s0)
38000110: fe042223
                             sw zero,-32(s0)
j 38000170 <fir+0xe4>
38000114: fe042023
38000118: 0580006f
3800011c: 00000713
                             li a4,0
                             lw a5,-32(s0)
slli a5,a5,0x2
38000120: fe042783
38000124: 00279793
38000128: 00f707b3
                             add a5,a4,a5
3800012c: 0007a683
                             lw a3,0(a5)
38000130: 05c00713
                              li a4,92
38000134: fe042783
                                 a5,-32(s0)
```


0x38000024 - 0x38000088:

```
38000024 <initfir>:
38000024: fe010113
                             addi sp,sp,-32
38000028: 00812e23
                             sw s0,28(sp)
3800002c: 02010413
                             addi s0,sp,32
38000030: fe042623
                             sw zero, -20(s0)
38000034: 0380006f
                             j 3800006c <initfir+0x48>
38000038: 05c00713
                             li a4,92
3800003c: fec42783
                             lw a5,-20(s0)
38000040: 00279793
                             slli a5,a5,0x2
38000044: 00f707b3
                             add a5,a4,a5
38000048: 0007a023
                             sw zero,0(a5)
3800004c: 08800713
                             li a4,136
                             lw a5,-20(s0)
38000050: fec42783
                             slli a5,a5,0x2
38000054: 00279793
38000058: 00f707b3
                             add a5,a4,a5
3800005c: 0007a023
                             sw zero,0(a5)
                             lw a5,-20(s0)
38000060: fec42783
38000064: 00178793
                             addi a5,a5,1
38000068: fef42623
                             sw a5,-20(s0)
3800006c: fec42703
                             lw a4,-20(s0)
                             li a5,10
38000070: 00a00793
38000074: fce7d2e3
                             bge a5,a4,38000038 <initfir+0x14>
38000078: 00000013
                             nop
3800007c: 00000013
                             nop
38000080: 01c12403
                             lw s0,28(sp)
38000084: 02010113
                             addi sp,sp,32
38000088: 00008067
```



Due to the assembly code, we can see the waveform above is executing the function initfir(), which be used in our firmware code to initialize the input buffer and output buffer.

Zoom in and we can see that ACK signal will have a delay of 10 clock cycles.

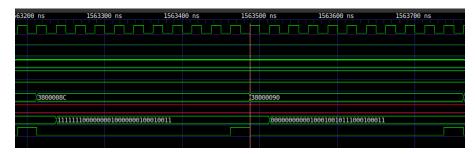

Synthesis report

1. Utilization

1. Slice Logic					
Site Type	Used	Fixed	Prohibited	+ Available	++ Util%
Slice LUTs*	15	0	0	53200	0.03
LUT as Logic	15	0	0	53200	0.03
LUT as Memory	0	0	0	17400	0.00
Slice Registers	5	0	0	106400	<0.01
Register as Flip Flop	5	0	0	106400	<0.01
Register as Latch	0	0	0	106400	0.00
F7 Muxes	0	0	0	26600	0.00
F8 Muxes	0	0	0	13300	0.00
+	+		+	+	++

- Our user project design contains 15 LUTs and 5 registers.

2. Memory

2. Memory							
71	Used	Fixed	Prohibited	Available	Util%		
Block RAM Tile RAMB36/FIFO*	2	0			1.43		
RAMB36E1 only					ļ		
* Note: Each Block RAM Tile only has one FIFO logic available and therefore can accommodate only one FIFO36E1 or one FIFO18E1. However, if a FIFO18E1 occupies a Block RAM Tile, that tile can still accommodate a RAMB18E1							

Since we use block RAM as 'memory' in our user project design.

Comment

Vic: 這次要使用 wishbone 的 protocol,我認為在這個 Lab 中做起來比 AXI-lite 還簡單跟直接,訊號本身的特性就和 block RAM 需要的相關,像是 CYC 跟 STB 和 AXI 的 VALID 非常類似,老師上課有講到其實用 STB 當作 VALID, ACK 當作 READY 就可以了,但我在 user project 中還是有把 CYC 加進去,代表 processor 正在運作中。再來就是 WE 跟 SEL,分別代表 READ/WRITE 和 Byte enable,只要把 WE 延伸成四個 bit 再和 SEL 做 AND,就能當作 block RAM 的 WE 來使用了,接下來的判斷都蠻直觀的。當我完成 run_sim 階段後,

我寫了一個 Makefile (附在我的 github /SOC/Lab4-1-counter_la_fir/build&xsim中),目的是在做 xsim,但我發現本來的 include.rtl.list 有問題,因為每一行前面的-v,導致在嘗試做 xsim 的時候會跳出 error,於是我創了一個新檔案叫做include.rtl.list.xsim,並把-v都拿掉,在 Makefile 裡面也寫了以下這段指令:

xvlog -f ./include.rtl.list.xsim counter_la_fir_tb.v

代表 include 這 include.rtl.list.xsim 裡面的.v 檔, 然後給 counter_la_fir_tb 做 simulation。

雖然成功讓檔案跑起來,但 simulator 回報錯誤: "port redeclaring",於是我進去 caravel-soc 的各個.v 檔,去看裡面的 code,發現 code 都是先宣告 input/output,然後在其他地方才宣告 reg/wire,這導致 simulator 認為我們重新定義同個 port,所以產生 error。我後來將各個 module 裡面需要定義 net type 的 port 設定好,再重新跑一次 make,並成功通過 simulation。

Kenny: 在寫.c 檔時,原本想把 Lab3 的 verilog code 轉換成 c code 來寫,但其實這樣會多用到許多變數,其實直接用 software 的寫法就好。後續轉換成 assembly code c 後,我負責的是說明乘法是如何運行的部分,這部分其實我在計算機結構的課程中有學過,但看到實際運行的結果還是花了一些時間才搞懂他運行的原理。這次的 Lab 雖然 coding 的部分不多,但透過了解老師提供的 code 及檔案,我更了解整個 caravel soc 的架構及運作方式。

Lukas: 這次 lab 仍以 FIR 為主題,但有別於 lab2 的 High level synthesis 和 lab3 的 verilog implementation,這次要從 C code 開始實作 FIR,原本想說要和 lab3 verilog implementation 一樣用 pipeline 的方式來做,結果在上次問教授的時候 才恍然大悟 C code 沒有 pipeline task 的問題,因此在實作上用兩個迴圈就能達成。另外就是 wishbone interface 的實作,相對於 AXI interface,wishbone interface 可以說是直覺許多,要判斷的訊號也比較少,尤其是和 DRAM 的

interconnect. 最後,因為我的組員把 simulation 的步驟做得很完整了,在這邊就 蠻順利的,最後是 RISC-V code interpretation,我負責的是 FIR fuction 的部分,不像 high level language,risc-v code 在閱讀上非常不直覺,還有 stack, adress 和 jump instructions,而變數也沒有名稱。經過這個 lab,對於 caravel SOC 有更多的理解。