


Trainings ▾


General Information

Aftercooled Engines


The cooling system **must** be designed to allow the air to escape while filling the radiator.

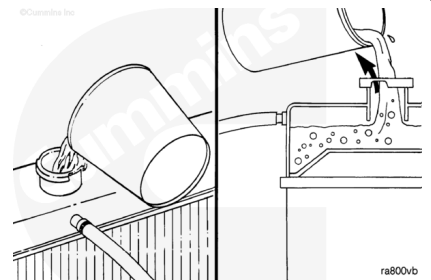

The aftercooler vent line (number 4 hose) is routed from the top of the aftercooler to the top of the thermostat housing.

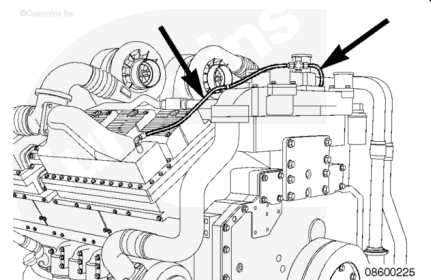

The number 6 hose engine vent line (7) is routed from the top of the thermostat housing to the radiator top tank expansion space above the water level.

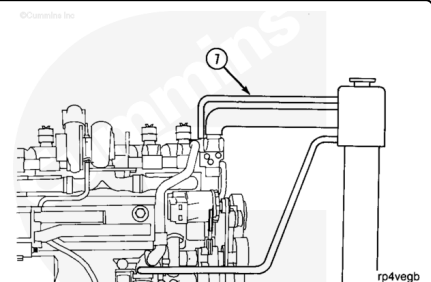


⚠ CAUTION ⚠

Do not route the fill or vent line in a manner that will allow air to be trapped in the system. Air trapped in the system can cause water pump cavitation and inadequate coolant level.


Route the vent line away from the makeup or fill line.

The vent line **must** have a continuous rise to prevent air lock and inadequate venting.

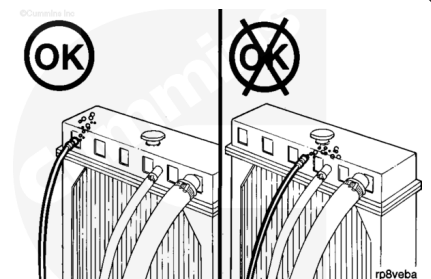


LTA

The cooling system **must** be designed to allow the air to escape while filling the radiator.

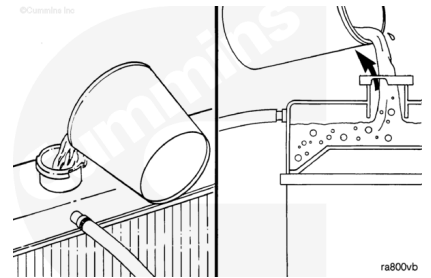


The engine vent line and the aftercooler vent line are routed from the top of the thermostat housing to the radiator top tank expansion space above the water level.

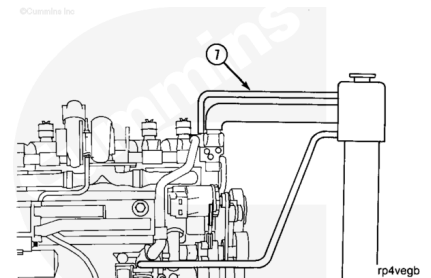

⚠ CAUTION ⚠

Do not route the fill or vent line in a manner that will allow air to be trapped in the system. Air trapped in the coolant system can cause water pump cavitation and inadequate coolant level.

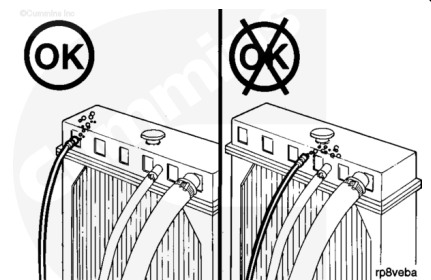


Route the vent line away from the makeup or fill line.


The vent line **must** have a continuous rise to prevent air lock and inadequate venting.

QSK60 Marine Applications

The cooling system **must** be designed to allow the air to escape while filling the radiator.

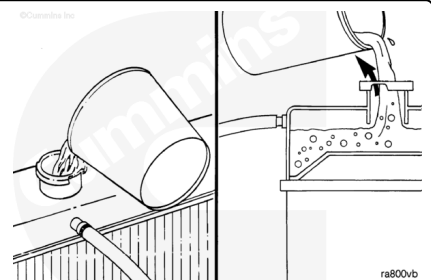


The engine vent line and the aftercooler vent line are routed from the top of the thermostat housing to the radiator top tank expansion space above the water level.

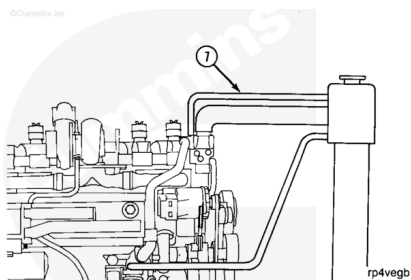

⚠ CAUTION ⚠

Do not route the fill or vent line in a manner that will allow air to be trapped in the system. Air trapped in the coolant system can cause water pump cavitation and inadequate coolant level.

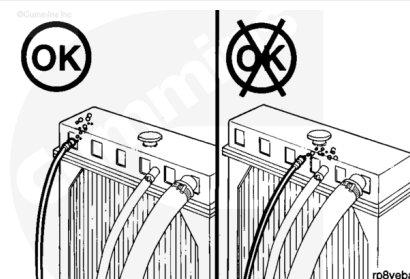

Route the vent line away from the makeup or fill line.

The vent line **must** have a continuous rise to prevent air lock and inadequate venting.

Route the exhaust manifold heat shield vent line away from the makeup or fill line.

The exhaust manifold heat shield vent line **must** have a continuous rise to prevent air lock and inadequate venting.