


Document Title	Specification of CAN Transport
	Layer
Document Owner	AUTOSAR GbR
Document Responsibility	AUTOSAR GbR
Document Identification No	014
Document Classification	Standard

Document Version	2.2.2
Document Status	Final
Part of Release	3.1
Revision	0001

	Document Change History		
Date	Version	Changed by	Change Description
15.08.2008	2.2.2	AUTOSAR Administration	Layout adaptations
23.06.2008	2.2.1	AUTOSAR Administration	Legal disclaimer revised
03.12.2007	2.2.0	AUTOSAR Administration	 Addition of transmit cancellation feature DataLength check only for too small DLC (CanTp220) Restriction on mapping of N-Pdu (CanTp248) Document meta information extended Small layout adaptations made
24.01.2007	2.1.1	AUTOSAR Administration	 "Advice for users" revised "Revision Information" added
04.12.2006	2.1.0	AUTOSAR Administration	 Clarification and correction of error management: list of production/development error and behavior in case of error Addition of CanTp166 and CanTp167 to avoid blocking situation in case of no buffer provided by upper layer Remove of CanTpRxWftMax of container CanTpTxNSdu 1 parameter added for the call of Det_ReportError Add header files inclusions Addition of CanTpNSa container in configuration chapter Legal disclaimer revised
27.04.2006	2.0.0	AUTOSAR Administration	Document structure adapted to common Release 2.0 SWS Template.



Document Change History			
Date	Version	Changed by	Change Description
21.06.2005	1.0.0	AUTOSAR Administration	Initial Release





Page left intentionally blank



Disclaimer

This document of a specification as released by the AUTOSAR Development Partnership is intended **for the purpose of information only**. The commercial exploitation of material contained in this specification requires membership of the AUTOSAR Development Partnership or an agreement with the AUTOSAR Development Partnership. The AUTOSAR Development Partnership will not be liable for any use of this specification. Following the completion of the development of the AUTOSAR specifications commercial exploitation licenses will be made available to end users by way of written License Agreement only.

No part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from the publisher." The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Copyright © 2004-2008 AUTOSAR Development Partnership. All rights reserved.

Advice to users of AUTOSAR Specification Documents:


AUTOSAR Specification Documents may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the Specification Documents for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such Specification Documents, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.



Table of Contents

Р	зg	e left inte	entionally blank	3
D	sc	claimer .		4
Α	dv	ice to u	sers of AUTOSAR Specification Documents:	4
Ta	зb	le of Co	ntents	5
1		Introduc	tion and functional overview	8
2			ns and abbreviations	
3			documentation	
	3.		ut documents	
	3.	2 Rel	ated standards and norms	. 15
4		Constra	ints and assumptions	. 16
	4. 4.		itationsblicability in automotive domain	
5		Depend	encies on other modules	. 17
	5.	•	TOSAR architecture basic concepts CAN Transport Layer connection(s)	. 17
		5.1.2	CAN Transport Layer interactions	
		5.1.3	Processing mode	
		5.1.4 5.1.5	Data consistencyStatic configuration	
		5.1.6	PDU Router services	
		5.1.7	CAN Interface services	
	5.	2 File	structure	. 19
		5.2.1	Code file structure	. 19
		5.2.2	Header file structure	
		5.2.3	Design Rules	
6		Require	ments traceability	. 22
7		Function	nal specification	. 28
	7.		vices provided to upper layer	
		7.1.1	Initialization and shutdown	
		7.1.2	Transmit request	
	7	7.1.3 2 Ser	Transmit cancellationvices provided to the lower layer	
	١.	7.2.1	Transmit confirmation	
		7.2.1	Reception indication	
	7		ernal behavior	
	٠.	7.3.1	N-SDU Reception	
		7.3.2	N-SDU Transmission	
		7.3.3	Buffer strategy	
		7.3.4	No Protocol parameter setting services	
		7.3.5	Tx and Rx data flow	
		7.3.6	Relationship between CAN NSduld and CAN LSduld	. 41





	7.3.7	Concurrent connection	
	7.3.8	N-PDU padding	43
	7.3.9	Handling of unexpected N-PDU arrival	44
	7.4 Erro	or classification	
		or detection	
		or notification	
8	API spec	cification	50
	8.1 Imp	orted types	50
	, ,	e definitions	
	8.2.1	CanTp_CancelReasonType	
		ction definitions	
	8.3.1	CanTp_Init	
	8.3.2	CanTp_ GetVersionInfo	51
	8.3.3	CanTp_Shutdown	52
	8.3.4	CanTp_Transmit	53
	8.3.5	Main Function	55
	8.4 Call	-back notifications	55
	8.4.1	CanTp_RxIndication	
	8.4.2	CanTp_TxConfirmation	
		ected Interfaces	
	8.5.1		
		Mandatory Interfaces	
	8.5.2	Optional Interfaces	57
9	Sequenc	ce diagrams	58
	-	_	
	9.1 SF	N-SDU received and no buffer provided	58
	9.1.1	Assumptions	
	9.1.2	Sequence diagram	
	9.1.3	Transition description	
	9.2 Suc	cessful SF N-PDU reception	60
	9.2.1	Assumptions	60
	9.2.2	Sequence diagram	60
	9.2.3	Transition description	61
	9.3 Trai	nsmit request of SF N-SDU	
	9.3.1	Assumptions	
	9.3.2	Sequence diagram	
	9.3.3	Transition description	
		nsmit request of larger N-SDU	
	9.4.1	Assumptions	
	_		
	9.4.2	Sequence diagram	
	9.4.3	Transition description	
	,	ge N-SDU Reception	
	9.5.1	Assumptions	
	9.5.2	Sequence diagram	68
	9.5.3	Transition description	69
1() Confid	guration specification	70
		v to read this chapter	
		·	
	10.1.1	Configuration and configuration parameters	
	10.1.2	Variants	
	10.1.3	Containers	71

AUTOSAR



Specification of CAN Transport Layer V2.2.2

R3.1 Rev 0001

10.1.4	Specification template for configuration parameters	71
10.2 Coi	ntainers and configuration parameters	73
10.2.1	Variants	73
10.2.2	CanTp	73
10.2.3	CanTpGeneral	73
10.2.4	CanTpRxNSdu	74
10.2.5	CanTpRxNPdu	77
10.2.6	CanTpTxFcNPdu	78
10.2.7	CanTpTxNSdu	78
10.2.8	CanTpTxNPdu	81
10.2.9	CanTpRxFcNPdu	81
10.2.10	CanTpNTa	82
10.2.11	CanTpNSa	82
10.3 Pul	olished Information	83
I1 Chan	ges to Release 1	84
11.1 Del	eted SWS Items	84
	placed SWS Items	
	anged SWS Items	
	ded SWS Items	
I2 Chan	ges during SWS Improvements by Technical Office	86
12.1 Del	eted SWS Items	86
	placed SWS Items	
	anged SWS Items	
	ded SWS Items	



1 Introduction and functional overview

This specification defines the functionality, API and the configuration of the AUTOSAR Basic Software module CAN Transport Layer (CanTp).

CanTp is the module between the PDU Router and the CAN Interface module (see Figure 1). The main purpose of the CAN TP module is to segment and reassemble CAN I-PDUs longer than 8 bytes.

The PDU Router deploys AUTOSAR COM and DCM I-PDUs onto different communication protocols. The routing through a network system type (e.g. CAN, LIN and FlexRay) depends on the I-PDU identifier. The PDU Router also determines if a transport protocol has to be used or not. Lastly, this module carries out gateway functionality, when there is no rate conversion.

CAN Interface (CanIf) provides equal mechanisms to access a CAN bus channel regardless of its location (μ C internal/external). From the location of CAN controllers (on chip / onboard), it extracts the ECU hardware layout and the number of CAN drivers. Because CanTp only handles transport protocol frames (i.e. SF, FF, CF and FC PDUs), depending on the N-PDU ID, the CAN Interface has to forward an I-PDU to CanTp or PduR.




Communi cation Signals Manager NM Data Generic **DCM AUTOSAR** NM Diagnostic COM Communication Manager 1-PDU 1 I-PDU PDU I-PDU **PDU Router** multiplexer NM Module I-PDU I-PDU **Í-PDU** I-PDU I-PDU FlexRay TP CAN TP N-PDU N-PDU Communication HW Abstraction FlexRay Interface **CAN Interface** LIN Interface (incl. LIN TP) L-PDU L-PDU L-PDU Communication Drivers LIN Low Level Driver FlexRay Driver **CAN Driver**

Figure 1: AUTOSAR Communication Stack

According to AUTOSAR basic software architecture, CanTp provides services for:

- Segmentation of data in transmit direction;
- Reassembling of data in receive direction;
- Control of data flow;
- Detection of errors in segmentation sessions.
- Transmit cancellation

It is an AUTOSAR decision to base basic software module specifications on existing standards, thus this AUTOSAR CAN Transport Layer specification is based on the international standard ISO 15765, which is the most used standard in the automotive domain.





ISO 15765 (containing four sections) describes two applicable CAN Transport Layer specifications: ISO 15765-2 for OEM enhanced diagnostics [13] and ISO 15765-4 for OBD diagnostics [15]. Concerning the transport layer, ISO 15765-4 (the section of ISO 15765 which also covers the data link layer and physical layer) is in accordance with ISO 15765-2 with some restrictions/additions. In order that there is no incompatibility problem between ISO 15765-2 and ISO 15765-4, differences will be solved by the CAN Transport Layer configuration.

Although CAN transport protocol is mainly used for vehicle diagnostic systems, it has also been developed to deal with requirements from other CAN based systems requiring a transport layer protocol.



2 Acronyms and abbreviations

The prefix notation used in this document, is as follows:

Prefix:	Description:
-	Relative to AUTOSAR COM Interaction Layer
L-	Relative to the CAN Interface module which is equivalent to the Logical Link Control (the upper part of the Data Link Layer – the lower part is called Media Access Control)
N-	Relative to the CAN Transport Layer which is equivalent to the OSI N etwork Layer.

All acronyms and abbreviations, which are specific to the CAN Transport Layer and are therefore not contained in the AUTOSAR glossary, are described in the following:

Acronym:	Description:
CAN L-SDU	This is the SDU of the CAN Interface module. It is similar to CAN N-PDU but from the CAN Interface module point of view.
CAN LSduld	This is the unique identifier of a SDU within the CAN Interface. It is used for referencing L-SDU's routing properties.
	Consequently, in order to interact with the CAN Interface through its API, an upper layer uses CAN LSduld to refer to a CAN L-SDU Info Structure.
CAN N-PDU	This is the PDU of the CAN Transport Layer. It contains a unique identifier, data length and data (protocol control information plus the whole N-SDU or a part of it).
CAN N-SDU	This is the SDU of the CAN Transport Layer. In the AUTOSAR architecture, it is a set of data coming from the PDU Router.
CAN N-SDU Info	This is a CAN Transport Layer internal constant structure that contains specific
Structure	CAN Transport Layer information to process transmission, reception,
	segmentation and reassembly of the related CAN N-SDU.
CAN NSduld	Unique SDU identifier within the CAN Transport Layer. It is used to reference N-SDU's routing properties.
	Consequently, to interact with the CAN Transport Layer via its API, an upper layer uses CAN NSduld to refer to a CAN N-SDU Info Structure.
I-PDU	This is the PDU of the AUTOSAR COM module.
PDU	In layered systems, it refers to a data unit that is specified in the protocol of a given layer. This contains user data of that layer (SDU) plus possible protocol control information.
	Furthermore, the PDU of layer X is the SDU of its lower layer X-1 (i.e. (X) -PDU = $(X-1)$ -SDU).
PduInfoType	This type refers to a structure used to store basic information to process the transmission\reception of a PDU (or a SDU), namely an pointer to its payload in RAM and the corresponding length (in bytes).
SDU	In layered systems, this refers to a set of data that is sent by a user of the services of a given layer, and is transmitted to a peer service user, whilst remaining semantically unchanged.

Abbreviation:	Description:
BS	Block Size
Can	CAN Driver module
CAN CF	CAN Consecutive Frame N-PDU
CAN FC	CAN Flow Control N-PDU
CAN FF	CAN First Frame N-PDU
CAN SF	CAN Single Frame N-PDU



Abbreviation:	Description:
CanIf	CAN Interface
CanTp	CAN Transport Layer
CanTrcv	CAN Transceiver module
CF	See "CAN CF"
Com	AUTOSAR COM module
Dcm	Diagnostic Communication Manager module
DEM	Diagnostic Event Manager
DET	Development Error Tracer
DLC	Data Length Code (part of CAN PDU that describes the SDU length)
FC	See "CAN FC"
FF	See "CAN FF"
FIM	Function Inhibition Manager
Mtype	Message Type (possible value: diagnostics, remote diagnostics)
N_AI	Network Address Information (see ISO 15765-2).
N_Ar	Time for transmission of the CAN frame (any N-PDU) on the receiver side (see ISO 15765-2).
N_As	Time for transmission of the CAN frame (any N-PDU) on the sender side (see ISO 15765-2).
N_Br	Time until transmission of the next flow control N-PDU (see ISO 15765-2).
N_Bs	Time until reception of the next flow control N-PDU (see ISO 15765-2).
N_Cr	Time until reception of the next consecutive frame N-PDU (see ISO 15765-2).
N_Cs	Time until transmission of the next consecutive frame N-PDU (see ISO 15765-2).
N_Data	Data information of the transport layer
N_PCI	Protocol Control Information of the transport layer
N_SA	Network Source Address (see ISO 15765-2).
N_TA	Network Target Address (see ISO 15765-2).
N_TAtype	Network Target Address type (see ISO 15765-2).
000	

The following table contains some of the concepts, which are useful in this work:

On-Board Diagnostic

Protocol Data Unit

Service Data Unit

PDU Router

Definitions:	Description:
Development Error Tracer	The Development Error Tracer is merely a support to SW development and integration and is <u>not</u> contained in the production code. The API is defined, but the functionality can be chosen and implemented by the developer according to his specific needs.
Diagnostic Event Manager	The Diagnostic Event Manager is a standard AUTOSAR module which is available in the production code and whose functionality is specified in the AUTOSAR project.
Extended addressing format	A unique CAN identifier is assigned to each combination of N_SA, N_TAtype and Mtype. N_TA is filed in the first data byte of the CAN frame data field. N_PCI and N_Data are filed in the remaining bytes of the CAN frame data field.
Full-duplex	Point-to-point communication between two nodes is possible in both directions at any one time.
Function Inhibition Manager	The Function Inhibition Manager (FIM) stands for the evaluation and assignment of events to the required actions for Software Components (e.g. inhibition of specific "monitoring functions"). The DEM informs and updates the Function Inhibition Manager (FIM) upon changes of the event status in order to stop or release functional entities according to assigned dependencies. An interface to the functional entities is defined and supported by the Mode Manager. The FIM is not part of the DEM.

OBD

PDU

PduR

SDU



Definitions:	Description:
Functional addressing	In the transport layer, functional addressing refers to N-SDU, of which parameter N_TAtype (which is an extension to the N_TA parameter [13] used to encode the communication model) has the value <i>functional</i> . This means the N-SDU is used in 1 to n communications. Thus with the CAN protocol, functional addressing will only be supported for Single Frame communication. In terms of application, functional addressing is used by the external (or internal) tester if it does not know the physical address of an ECU that should respond to a service request or if the functionality of the ECU is implemented as a distributed server over several ECUs. When functional addressing is used, the communication is a communication broadcast from the external tester to one or more ECUs (1 to n communication). Use cases are (for example) broadcasting messages, such as "ECUReset" or "CommunicationControl"
	OBD communication will always be performed as part of functional addressing.
Half-duplex	Point-to-point communication between two nodes is only possible in one direction at a time.
Multiple connection	The CAN Transport Layer should manage several transport protocol communication sessions at a time.
Normal addressing format	A unique CAN identifier is assigned to each combination of N_SA, N_TA, N_TAtype and Mtype. N_PCI and N_Data are filed in the CAN frame data field.
Physical addressing	In the transport layer, physical addressing refers to N-SDU, of which parameter N_TAtype (which is an extension of the N_TA parameter [13] used to encode the communication model) has the value <i>physical</i> . This means the N-SDU is used in 1 to 1 communication, thus physical addressing will be supported for all types of network layer messages. In terms of application, physical addressing is used by the external (or internal)
	tester if it knows the physical address of an ECU that should respond to a service request. When physical addressing is used, a point to point communication takes place (1 to 1 communication). Use cases are (for example) messages, such as "ReadDataByldentifier" or "InputOutputControlByldentifier"
Single	The CAN Transport Layer will only manage one transport protocol communication
connection	session at a time.



3 Related documentation

3.1 Input documents

- [1] List of Basic Software Modules, AUTOSAR_BasicSoftwareModules.pdf
- [2] Layered Software Architecture, AUTOSAR_LayeredSoftwareArchitecture.pdf
- [3] General Requirements on Basic Software Modules, AUTOSAR_SRS_General.pdf
- [4] Specification of ECU Configuration, AUTOSAR_ECU_Configuration.pdf
- [5] Glossary AUTOSAR_Glossary.pdf
- [6] Requirements on CAN AUTOSAR_SRS_CAN.pdf
- [7] Specification of CAN Interface AUTOSAR_SWS_CAN_Interface.pdf
- [8] API Specification of Development Error Tracer AUTOSAR_SWS_DET.pdf
- [9] Specification of Function Inhibition Manager AUTOSAR_SWS_FIM.pdf
- [10] Specification of PDU Router AUTOSAR_SWS_PDU_Router.pdf



[11] Specification of Diagnostic Event Manager (DEM) AUTOSAR_SWS_DEM.pdf

[12] AUTOSAR Basic Software Module Description Template, AUTOSAR_BSW_Module_Description.pdf

3.2 Related standards and norms

- [13] ISO 15765-2 (2004-10-12), Road vehicles Diagnostics on Controller Area Networks (CAN) Part2: Network layer services
- [14] ISO 15765-3 (2004-10-06), Road vehicles Diagnostics on Controller Area Networks (CAN) Part3: Implementation of diagnostic services
- [15] ISO 15765-4 (2005-01-04), Road vehicles Diagnostics on Controller Area Networks (CAN) Part4: Requirements for emissions-related systems



4 Constraints and assumptions

4.1 Limitations

The AUTOSAR architecture defines communication system specific transport layers (CanTp, LinTp including LinIf, FlexRayTp). Thus the CAN Transport Layer only covers CAN transport protocol specifics.

The CAN Transport Layer has an interface to a single underlying CAN Interface Layer and a single upper PDU Router module.

According to the AUTOSAR release plan, this CAN Transport Layer specification has the following restriction:

- CAN Transport Layer runs only in an event triggered mode,
- No reception cancellation.

Furthermore, to significantly reduce resources and runtime this CAN Transport Layer implementation does not support full-duplex communication.

4.2 Applicability in automotive domain

The CAN Transport Layer can be used for all domains whenever the CAN communication system is connected to the appropriate ECU.



Dependencies on other modules 5

This section sets out relations between the CanTp and other AUTOSAR basic software modules. It contains short descriptions of some AUTOSAR basic concepts. configuration information and services, which are required by the CanTp from other modules.

5.1 AUTOSAR architecture basic concepts

5.1.1 CAN Transport Layer connection(s)

In the AUTOSAR architecture final release, transport protocol facilities will be used to transport both diagnostic (e.g. OBD and UDS protocols) and AUTOSAR COM I-PDUs¹. Therefore, the CanTp module is able to deal with multiple connections simultaneously (i.e. multiple segmentation sessions in parallel).

The maximum number of simultaneous connections is statically configured. This configuration has an important impact on complexity and resource consumption (CPU, ROM and RAM) of the code generated, because resources (e.g. Rx and Tx state machines, variables used to work on N-PCI data and so on) have to be reserved for each simultaneous access.

To allow the user to choose which I-PDUs could be received (or sent) simultaneously, each N-SDU identifier will be internally routed through a configured CanTp "connection channel". Since a "connection channel" is not accessible externally, all necessary information (see chapter 10.2) to transfer an N-SDU will be linked to the N-SDU identifier (e.g. "connection channel" number, timeouts. addressing format, and so on).

5.1.2 CAN Transport Layer interactions

The figure below shows the interactions between CanTp, PduR and CanIf modules.

The CanTp's upper interface offers the PduR module global access, to transmit and receive data. This access is achieved by CAN N-SDU identifier (CAN NSduId). CAN NSduld refers to a constant data structure which consists of attributes describing CAN N-SDU. Each CAN N-SDU specific data structure may contain attributes such as: type of N-SDU (Tx or Rx), its addressing format, L-SDU identifier of this message or other attributes that are useful for implementation.



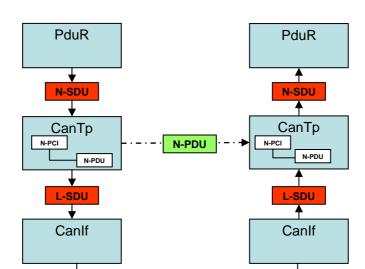


Figure 2: CAN Transport Layer interactions

5.1.3 Processing mode

ΔUT 🟉 SAR

The AUTOSAR communication stack supports both polling and event triggering mode. Therefore, each communication layer can receive information from its lower layer and propagate information to its upper layer by different mechanisms. In the case of the CAN Transport Layer, only the event triggering mode is supported.

5.1.4 Data consistency

To optimize the communication stack, AUTOSAR limits the CAN Transport Layer buffering capacity. Therefore, the CanTp copies N-SDU payload directly from the upper layer (e.g. DCM or PDU Router - in the case of 1:1 TP routing) to the CAN driver and vice-versa. Thus to guarantee data consistency, the upper layer will observe the following rules:

- At transmission time, the N-SDU data payload will remain unchanged, from transmit request until transmit confirmation has been received
- At reception time, the N-SDU data access will be locked, from buffer allocation request until the reception indication or the next buffer allocation request has been received

5.1.5 Static configuration

At runtime the CAN Transport module must have all information required to manage transport connection. Therefore, the following properties should be statically configured:

- Number of CAN N-SDU
- Unique identifier of each CAN N-SDU
- Communication direction of each CAN N-SDU (Tx or Rx)
- Addressing type of each CAN N-SDU (physical or functional)



- Addressing format of each connection (standard or extended) and, in the case of extended addressing format, the N_TA value
- Associated CAN L-SDU identifier of each CAN N-SDU identifier and if necessary (multiple frame segmentation session) the CAN L-SDU identifier used to transmit the CAN FC N-PDU
- Minimum length of the N-SDU

The configuration of the CAN Transport Layer can be performed during compilation or post-build (See chapter 10).

5.1.6 PDU Router services

The CAN Transport Layer declares and requests certain callback functions to confirm transmission, confirm transmission cancellation and notify reception of a message from/to the PDU-Router, and request a buffer, to reassemble segmented frames:

- PduR CanTpRxIndication
- PduR CanTpProvideRxBuffer
- PduR_CanTpProvideTxBuffer
- PduR_CanTpTxConfirmation

For more information about these functions, refer to the PDU Router module specification [10].

5.1.7 CAN Interface services

The CAN Transport Layer uses the following services of the CAN Interface to transmit CAN N-PDUs:

CanIf_Transmit

For more information about this function, refer to the CAN Interface module specification [7].

5.2 File structure

5.2.1 Code file structure

CanTp159: The code file structure will not be completely defined within this specification. At this point it should be noted, that the code-file structure should include the following files:

- CanTp_Lcfg.c for parameters configurable at link time
- CanTp_PBcfg.c for parameters, which are configurable post-build.

These files will contain all link time and post-build configurable parameters.

5.2.2 Header file structure



AUTOSAR specifies that an ECU can be created from modules provided as object code, source code (generated or not) and even mixed.

The decision to provide a module as object code or source code is based on a compromise between IP protection, test coverage, code efficiency and configurability at system generation time. Thus depending on the configurability requirements of the OEM, suppliers may deliver the CanTp module as object code, generated code or source code.

The header file structure defined in this section allows the separation of platform, compiler and implementation specific definitions and declarations from general definitions, as well as the separation of source code and configuration.

CanTp156: The CanTp module shall construct its include file structure as shown in Figure 3.

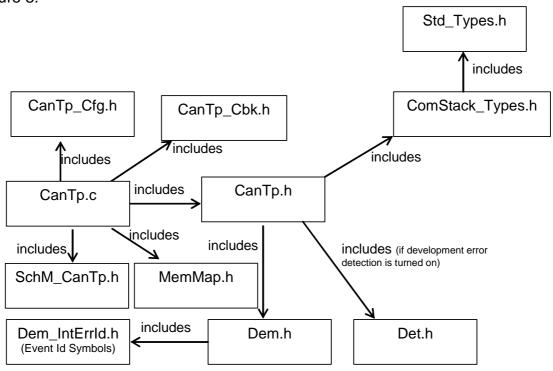


Figure 3: File Structure

Global data types and functions that are only used internally by the CAN Transport Protocol, are given in CanTp.c

CanTp219: CanTp.c shall include CanTp.h

CanTp157: The file CanTp.h shall only contain 'external' declarations of constants, global data, type definitions and services that are specified in the CAN Transport Protocol SWS.

CanTp001: CanTp_Cfg.h shall define constant and customizable data for module configuration at pre-compile time.



CanTp221: CanTp.h shall include CanTp_Cfg.h

CanTp165: BSW scheduler information is included via SchM_CanTp.h.

CanTp160: References to c-configuration parameters (link time and post-build time) will be placed in a separate h-file. The h-file should be the same as pre-compilation parameters.

CanTp024: Each header and C file of the CanTp module shall provide the possibility of version identification of the CAN Transport module by CANTP_MAJOR_VERSION, CANTP_MINOR_VERSION and CANTP_PATCH_VERSION.

Version number macros can then be used for checking and reading out the software version of a software module, during compile-time and run-time.

CanTp130: The module shall include the Dem.h file. By this inclusion the APIs to report errors as well as the required Event Id symbols are included. This specification defines the name of the Event Id symbols which are provided by XML to the DEM configuration tool. The DEM configuration tool assigns ECU dependent values to the Event Id symbols and publishes the symbols in Dem_IntErrId.h.

5.2.3 Design Rules

CanTp150: The CanTp module's source (as long as it is written in C) shall conform to the HIS subset of the MISRA C Standard.

CanTp151: The CanTp module's source shall not use compiler and platform specific keywords

CanTp152: The CanTp module's source shall indicate all global data with read-only properties by explicitly assigning the keyword const.

CanTp153: The CanTp module may use macros (instead of functions) where source code is used and runtime is critical.

CanTp155: The CanTp module shall not define global data in header files (If global variables have to be used, the definition should take place in the C file)


CanTp158: The CanTp module's source shall not be processor and compiler dependent.



6 Requirements traceability

Document: General Requirements on Basic Software Modules [3]

Functional general requirements		
Requirement	Satisfied by	
[BSW00344] Reference to link-time configuration	Not applicable (This module does not use Link Time configuration parameters)	
[BSW00404] Reference to post build time configuration	Not applicable (requirement on implementation, not on specification)	
[BSW00405] Reference to multiple configuration sets	Not applicable (This module does not use multiple configuration sets)	
[BSW00345] Pre-Build Configuration	CanTp001 chapter 10	
[BSW159] Tool-based configuration	CanTp146	
[BSW167] Static configuration checking	<u>CanTp147</u>	
[BSW171] Configurability of optional functionality	chapter 10	
[BSW170] Data for reconfiguration of SW-	Not applicable.	
components	(Requirement on SWC module)	
[BSW380] Separate C-File For configuration parameters	CanTp159	
[BSW00419] Separate C-Files for pre-compile	Not applicable	
time configuration parameters	(No "const" pre-compile time parameter)	
[BSW381] Separate configuration header file for pre-compile time parameters	CanTp001	
[BSW412] Separate H-File for configuration parameters	CanTp156	
[BSW382] Not-used configuration elements need to be listed	Not applicable (there are no not-used configuration elements for this module)	
[BSW383] List dependencies of configuration files	Not applicable (this module does not use configuration files from other modules)	
[BSW384] List dependencies to other modules	Fulfilled by chapter 5	
[BSW385] List possible error notifications	CanTp101	
[BSW386] Configuration for detecting an error	CanTp101	
[BSW387] Specify the configuration class of callback function	Fulfilled by chapter 8.4	
[BSW388] Introduce containers	Fulfilled by configuration chapter 10	
[BSW389] Containers shall have names	Fulfilled by configuration chapter 10	
[BSW390] Parameter content shall be unique within the module	Fulfilled by configuration chapter 10	
[BSW391] Parameter shall have unique names	Fulfilled by configuration chapter 10	
[BSW392] Parameters shall have a type	Fulfilled by configuration chapter 10	
[BSW393] Parameters shall have a range	Fulfilled by configuration chapter 10	
[BSW394] Specify the scope of the parameters	Fulfilled by configuration chapter 10	
[BSW395] List the required parameters (per parameter)	Fulfilled by configuration chapter 10	
[BSW396] Configuration classes	Fulfilled by configuration chapter 10	
[BSW397] Pre-compile-time parameters	Not applicable (definition)	
[BSW398] Link-time parameters	Not applicable (definition)	







[BSW399] Loadable Post-build time parameters	Not applicable
[DSW399] Loadable Post-build time parameters	(definition)
[BSW400] Selectable Post-build time parameters	Not applicable
	(definition)
[BSW402] Published information	CanTp140
[BSW00375] Notification of wake-up reason	Not applicable
	(this module does not provide any reason for
	wake-up)
[BSW101] Initialization interface	CanTp208
[BSW00416] Sequence of Initialization	Not applicable
	(requirement on system design, not on a single
	module)
[BSW406] Check module initialization	CanTp161
[BSW168] Diagnostic Interface of SW	Not applicable
components	(this module does not support a special diagnostic
	interface)
[BSW407] Function to read out published	CanTp162 CanTp163
parameters	N. C. P. III
[BSW00423] Usage of SW-C template to describe	Not applicable.
BSW modules with AUTOSAR Interfaces	(This module has no interface with RTE)
[BSW00424] BSW main processing function task	CanTp164
allocation	Not covered New templets readed
[BSW00425] Trigger conditions for schedulable	Not covered. New template needed
objects	Not severed New templete peeded
[BSW00426] Exclusive areas in BSW modules	Not covered. New template needed
[BSW00427] ISR description for BSW modules	Not applicable.
[PSW00429] Evacution order dependencies of	(this module does not provide any ISRs) Not applicable.
[BSW00428] Execution order dependencies of main processing functions	(This module has only 1 MainFunction)
[BSW00429] Restricted BSW OS functionality	Not applicable
access	(this module doesn't use any OS objects or
400633	services)
[BSW00431] The BSW Scheduler module	Not applicable
implements task bodies	(requirement on the BSW scheduler module)
[BSW00432] Modules should have separate main	Not applicable.
processing functions for read/receive and	(Mainfunction is used to manage time)
write/transmit data path	(
[BSW00433] Calling of main processing functions	Not applicable
	(requirement on the BSW scheduler module)
[BSW00434] The Schedule Module shall provide	Not applicable
an API for exclusive areas	(requirement on the BSW scheduler module)
[BSW00336] Shutdown interface	<u>CanTp010</u>
[BSW00337] Classification of errors	CanTp101
[BSW00338] Detection and Reporting of	
development errors	
[BSW00369] Do not return development error	CanTp021
codes via API	
[BSW00339] Reporting of production relevant	CanTp008 CanTp100
errors and exceptions	
[BSW00421] Reporting of production relevant	CanTp100
error events	
[BSW00422] Debouncing of production relevant	Not applicable.
error status	(DEM requirement)
[BSW00420] Production relevant error event rate	Not applicable.
detection	
	(DEM requirement)
[BSW00417] Reporting of Error Events by Non-	Not applicable
[BSW00417] Reporting of Error Events by Non-Basic Software	Not applicable (This module is a BSW module)
[BSW00417] Reporting of Error Events by Non-	Not applicable



Specification of CAN Transport Layer V2.2.2

R3.1 Rev 0001

[BSW00435] Header File Structure for the Basic	CanTp156
Software Scheduler	
[BSW00436] Module Header File Structure for the	CanTp156
Basic Software Memory Mapping	

Non-functional general requirements		
Software Architecture Requirements	eneral requirements	
	Catiofied by	
Requirement	Satisfied by	
[BSW161] Microcontroller abstraction	Not applicable (requirement on AUTOSAR architecture, not a	
	single module)	
[BSW162] ECU layout abstraction	Not applicable	
	(requirement on AUTOSAR architecture, not a	
	single module)	
[BSW00324] Do not use HIS Library	Not applicable	
[DOWOO524] Do not use this Library	(requirement on AUTOSAR architecture, not a	
	single module)	
[BSW005] No hard coded horizontal interfaces	See paragraph 5.1.6 & 5.1.7	
within MCAL	Occ paragraph o. 1.0 a o. 1.7	
[BSW00415] User dependent include files	Not applicable	
[201100110] Cool depondent metade mee	(no interface for specifics)	
[BSW166] BSW Module interfaces	See paragraph 5.2	
Software Integration Requirements	Too benegative and	
Requirement	Satisfied by	
[BSW164] Implementation of interrupt service	Fulfilled by API definitions in chapter 8	
routines	T diffica by At 1 definitions in chapter o	
[BSW00325] Runtime of interrupt service	Not applicable	
routines	(this module does not provide any ISRs)	
[BSW00326] Transition from ISRs to OS tasks	Not applicable	
	(this module does not provide any ISRs)	
[BSW00342] Usage of source code and object	Not applicable	
code	(requirement on implementation, not on	
	specification)	
[BSW00343] Specification and configuration of	Fulfilled by configuration chapter 10	
time	a confidence of the confidence	
[BSW160] Human-readable configuration data	Fulfilled by configuration chapter 10	
Software Module Design Requirements	,	
Software quality		
Requirement	Satisfied by	
[BSW007] HIS MISRA C	CanTp150	
Naming conventions	<u> </u>	
Requirement	Satisfied by	
[BSW00300] Module naming convention	Fulfilled by API definitions in chapter 8	
[BSW00413] Accessing instances of BSW	Not applicable.	
modules	(Only 1 instance of CanTp allowed)	
[BSW00347] Naming separation of different	Not applicable.	
instances of BSW drivers	(For driver only.)	
[BSW00347] Naming separation of drivers	Not applicable	
	(For driver only.)	
[BSW00305] Self-defined data types naming	Fulfilled by type definitions in chapter 8	
convention	., ,,,	
[BSW00307] Global variables naming convention	Not applicable	
	(no global variables are specified for this module)	
[BSW00310] API naming convention	CanTp003	
[BSW00373] Main processing function naming	CanTp164	
convention		
[BSW00327] Error values naming convention	CanTp101	
-		

[BSW00335] Status values naming convention	Fulfilled by API definitions in chapter 8
[BSW00350] Development error detection	CanTp006
keyword	
[BSW00408] Configuration parameter naming	Fulfilled by configuration chapter 10
convention	
[BSW00410] Compiler switches shall have	Fulfilled by configuration chapter 10
defined values	
[BSW00411] Get version info keyword	Fulfilled by configuration chapter 10

Module file structure

Requirement	Satisfied by
[BSW00346] Basic set of module files	CanTp156
[BSW158] Separation of configuration from	CanTp156 CanTp001
implementation	
[BSW00314] Separation of interrupt frames and	Not applicable
service routines	(this module does not provide any ISRs)
[BSW00370] Separation of callback interface	CanTp156
from API	

Standard header files

Requirement	Satisfied by
[BSW00348] Standard type header	See Section 8.1
[BSW00353] Platform specific type header	CanTp002
[BSW00361] Compiler specific language	Not applicable
extension header	(requirement on implementation, not on
	specification)

Module Design

Requirement	Satisfied by
[BSW00301] Limit imported information	CanTp156
[BSW00302] Limit exported information	CanTp157
[BSW00328] Avoid duplication of code	Not applicable
	(requirement on implementation, not on
	specification)
[BSW00312] Shared code shall be reentrant	Fulfilled by API definitions in chapter 8
[BSW006] Platform independency	CanTp158

Types and keywords

Requirement	Satisfied by
[BSW00357] Standard API return type	Fulfilled by API definitions in chapter 8
[BSW00377] Module Specific API return type	Fulfilled by API definitions in chapter 8
[BSW00304] AUTOSAR integer data types	Fulfilled by API definitions in chapter 8
[BSW00355] Do not redefine AUTOSAR integer	Fulfilled by API definitions in chapter 8
data types	
[BSW00378] AUTOSAR Boolean type	Not applicable (Not used)
[BSW00306] Avoid direct use of compiler and	CanTp151
platform specific keywords	



Global data

Requirement	Satisfied by
[BSW00308] Definition of global data	CanTp155
[BSW00309] Global data with read-only	CanTp152
constraint	

Interface and API

Requirement	Satisfied by
[BSW00371] Do not pass function pointers via	Fulfilled by API definitions in chapter 8
API	
[BSW00358] Return type of init() functions	CanTp208
[BSW00414] Parameter of init function	CanTp208
[BSW00376] Return type and parameters of	CanTp164
main processing functions	
[BSW00359] Return type of callback functions	Fulfilled by API definitions in chapter 8
[BSW00360] Parameters of callback functions	Fulfilled by API definitions in chapter 8
[BSW00329] Avoidance of generic interfaces	Fulfilled by API definitions in chapter 8
[BSW00330] Usage of macros instead of	CanTp153
functions	
[BSW00331] Separation of error and status	Chapter 7.1.1 and CanTp101
values	

Software Documentation Requirements

Requirement	Satisfied by
[BSW009] Module User Documentation	Fulfilled by the whole document
[BSW00401] Documentation of multiple	Fulfilled by configuration chapter 10
instances of configuration parameters	
[BSW172] Compatibility and documentation of	Not applicable.
scheduling strategy	(There is no scheduler in the CAN TP)
BSW010] Memory resource documentation	Not applicable.
	(requirement on implementation, not on
	specification)
[BSW00333] Documentation of callback function	Fulfilled by API definitions in chapter 8
context	
[BSW00374] Module vendor identification	CanTp140
[BSW00379] Module identification	CanTp140
[BSW003] Version identification	CanTp024 CanTp140
[BSW00318] Format of module version	
[BSW00321] Enumeration of module version	Not applicable.
numbers	(requirement on implementation, not on
	specification)
[BSW00341] Microcontroller compatibility	Not applicable.
documentation	(requirement on implementation, not on
	specification)
[BSW00334] Provision of XML file	Not applicable.
	(requirement on implementation, not on
	specification)



Document: AUTOSAR requirements on Basic Software, cluster CAN

Requirement	Satisfied by
[BSW01065]	CanTp033
Usage of ISO 15765-2 specifications	
[BSW01065]	See Section 7
Usage of ISO 15765-4 specifications	
[BSW01066]	CanTp096 CanTp120 CanTp121 CanTp122
Concurrent connection configuration	CanTp123 CanTp124
[BSW01068]	CanTp035
Unique identifier of N-SDU	
[BSW01069]	CanTp035
CAN address information and N-SDU identifier	
mapping	
[BSW01071]	CanTp035
Unique identifier of N-PDU	
[BSW01073]	CanTp040 CanTp098 CanTp116
Fixed N-PDU data length	
[BSW01074]	CanTp137 CanTp138
Transport connection properties	
[BSW01075]	<u>CanTp170</u> , <u>CanTp030</u>
CAN Transport Layer Initialization	
[BSW01076]	<u>CanTp031</u>
CAN Transport Layer Availability	
[BSW01078]	CanTp035 CanTp137 CanTp138
Support a subset of ISO 15765-2 addressing	
modes formats	
[BSW01079]	CanTp019 CanTp020
Compliance with CAN Interface notifications	
[BSW01081]	CanTp137 CanTp138
Connection specific timeout values	
[BSW01082]	CanTp057
Error handling	
[BSW01086]	CanTp059
Data padding value of unused bytes	
[BSW01111]	This requirement is a specification recommendation
CAN Transport Layer Interfaces	fulfilled by chapter 8
[BSW01112]	This requirement is a specification recommendation
Independent interface	fulfilled by chapter 8
[BSW01116]	CanTp137 CanTp138 CanTp139
Usage of different addressing modes formats in	
parallel	
[BSW01117]	CanTp057
Only half-duplex communication is supported	
[BSW01120]	Multiple connections supported and therefore only
Multiple CAN Transport Layer instances	one instance required.



7 Functional specification

This section provides a description of the CAN Transport Layer functionality. It explains the services provided to the upper and lower layers and the internal behavior of the CAN Transport Layer.

The CanTp module offers services for segmentation, transmission with flow control, and reassembly of messages. Its main purpose is to transmit and receive messages that may or may not fit into a single CAN frame. Messages that do not fit into a single CAN frame are segmented into multiple parts, such that each can be transmitted in a single CAN frame.

While reading this document, it is necessary to bear in mind, that this module will follow the recommendations ISO 15765-2 (OEM enhanced diagnostics [13]) and should be able to fulfill ISO 15765-4 (Requirements for emissions-related systems [15]).

CanTp033: If a recommendation of ISO 15765-2 is not explicitly excluded in the SWS, the CanTp module shall follow this recommendation.

For further descriptions of SF, FF, CF and FC frames, network layer timing parameters, and further functionalities of CAN Transport Layer please refer to the ISO 15765-2 specification [13].

ISO 15765-4 is a particular case of ISO-15765-2. Therefore, the CAN Transport Layer will be configurable, in order to be able to adapt the module to all ISO 15765-4 use cases (e.g. specific timing, padding configuration, addressing mode). See chapter 10, Configuration specification, for details.

7.1 Services provided to upper layer

The service interface of the CanTp module can be divided into the following main categories:

- Initialization and shutdown
- Communication services

The following paragraphs describe the functionality of each services category.

7.1.1 Initialization and shutdown

CanTp027: The CanTp module shall have two internal states, CANTP_OFF and CANTP ON.

CanTp168: The CanTp module shall be in the CANTP_OFF state after power up.

CanTp169: In the state CANTP_OFF, the CanTp shall allow an update of the postbuild configuration.



CanTp170: The CanTp module shall change to the internal state CANTP_ON when the CanTp has been successfully initialized with CanTp_Init().

CanTp238: The CanTp module shall performed segmentation and reassembly tasks only when the CanTp is in the CANTP_ON state.

CanTp030: The function <code>CanTp_Init</code> shall initialize all global variables of the module and sets all transport protocol connections in a sub-state of <code>CANTP_ON</code>, in which neither segmented transmission nor segmented reception are in progress (Rx thread in state <code>CANTP RX WAIT</code> and <code>Tx</code> thread in state <code>CANTP TX WAIT</code>).

The COM Manager module should call the function CanTp_Init() before using the CanTp functionalities.

CanTp031: If development error detection for the CanTp module is enabled: The CanTp module shall raise an error (CANTP_E_UNINIT) when the PDU Router or CAN Interface tries to use any function (except CanTp_GetVersionInfo) before the function CanTp_Init has been called.

CanTp111: If called when the CanTp module is in the global state CANTP_ON, the function CanTp_Init shall return the module to state Idle (state = CANTP_ON, but neither transmission nor reception are in progress) and the module shall loose all current connections.

CanTp010: The function CanTp_Shutdown shall stop the CanTp module properly.

The COM Manager module shall call the function CanTp Shutdown().

The following figure summarizes all of the above requirements:



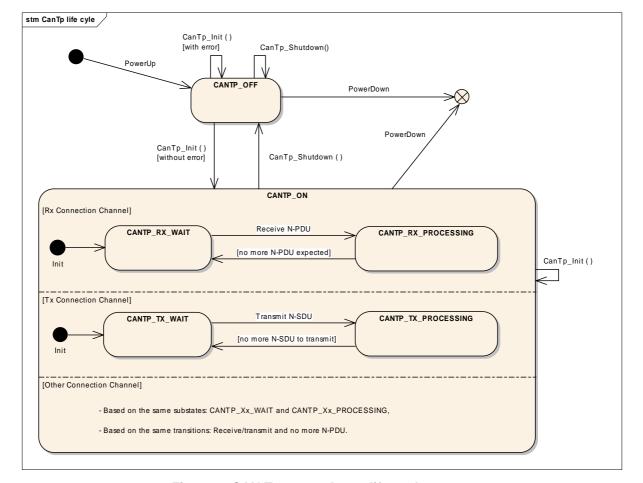


Figure 4: CAN Transport Layer life cycle

7.1.2 Transmit request

The transmit operation, CanTp_Transmit(), will allow upper layers to ask for data transfer using CAN transport protocol facilities (segmentation, extended addressing format and so on).

CanTp176: The function CanTp_Transmit() shall be asynchronous.

CanTp177: The CanTp module shall notify its upper layer if the N-SDU transfer is fully processed (successfully or not).

CanTp072: The function CanTp_Transmit() shall reject the transmit request and return the status value E_NOT_OK if there is no hardware resource available.

7.1.3 Transmit cancellation

The transmit cancellation feature allows the upper layer to cancel a transmission in progress.

Use case: Cancel a diagnostic transmission due to the reception of another diagnostic protocol with higher priority.



CanTp242: This feature shall be (de)activated by static configuration (parameter CanTpTc). Transmit Cancellation is triggered by the call of CanTp_CancelTransmitRequest().

CanTp243: After the call of the service CanTp_CancelTransmitRequest(), the transfer on this connection shall be aborted

CanTp244: The Api PduR_CanTpTxConfirmation() shall be called after a transmit cancellation with value NTFRSLT_E_CANCELATION_OK

Note that if a transfer is in progress, that will generate a time-out error on the receiver side.

7.2 Services provided to the lower layer

According to the AUTOSAR specification of the communication stack, the CAN Transport Layer provides the following two callback functions to the Can interface: CanTp_TxConfirmation() and CanTp_RxIndication().

7.2.1 Transmit confirmation

CanTp074: The CanIf module shall call the transmit confirmation function to notify the CAN Transport Layer that a CAN frame transmission, requested by the CanTp, has been performed successfully. The L-PDU identifier is associated with the call in order to identify the corresponding transmission.

CanTp075: If the transmit confirmation is not received after a maximum time (equal to N_As), the CanTp module shall act as if it had received an unsuccessful transmission confirmation and any late confirmation shall be ignored. The CanTp module shall cancel (internally) the failed transmission.

CanTp076: For confirmation calls, the CanTp module shall provide the function CanTp_TxConfirmation().

7.2.2 Reception indication

CanTp077: The CanIf module shall call the reception indication function to notify the CanTp module that a new CAN N-PDU frame (i.e. a transport protocol frame) has been received.

The reception indication can be performed in ISR context according to Canlf configuration.

CanTp078: For reception indication, the CanTp module shall provide CanTp RxIndication().



7.3 Internal behavior

The internal operation of the CAN Transport Layer provides basic mechanisms in order to perform the main purpose of this module, which is to transfer diagnostic messages in a single CAN frame or in multiple CAN frames.

The entire behavior of the CAN Transport Layer will be event triggered, so that CanTp can processes transfer of N-SDU (respectively L-SDU) coming from the PDU Router (respectively CAN Interface) directly.

7.3.1 N-SDU Reception

To optimize communication stack resources, it has been decided to provide the CAN Transport Layer with limited buffering capacity.

CanTp079: When receiving an SF or an FF N-PDU, the CanTp module shall notify the upper layer (PDU Router) about this reception and request an Rx buffer to process the frame reassembly. These two operations shall be performed using the PduR CanTpProvideRxBuffer() function.

CanTp166: At the reception of a FF or a SF, the CanTp module shall start a time-out N_Br before requesting a Rx buffer. If a buffer has not been provided before the timer elapsed, the CanTp module shall abort the communication.

CanTp080:The Rx buffer provided can be smaller than the expected N-SDU data length. In this case, when the current buffer has been filled up with data, the CanTp module shall request another buffer by calling the PduR CanTpProvideRxBuffer() service again.

To avoid confusion, it should be clarified that the expression "request a buffer" is not related to dynamic memory allocation. This expression simply means the upper layer makes a buffer available to the CAN Transport Layer (i.e. the Rx buffer is locked until CanTp calls either PduR_CanTpRxIndication() or PduR_CanTpProvideRxBuffer()).

If the upper layer cannot provide a buffer because of an error (e.g. in the gateway case it may indicate that the transport session to the destination network has been broken) or a resource limitation (e.g. N-SDU length exceeds the maximum buffer size of the upper layer), the PduR_CanTpProvideRxBuffer() function returns BUFREQ_E_NOT_OK or BUFREQ_E_OVFL.

CanTp081: After the reception of a First Frame, if the function PduR_CanTpProvideRxBuffer returns BUFREQ_E_NOT_OK or BUFREQ_E_OVFL to the CanTp module, the CanTp module shall send a Flow Control N-PDU with overflow status (FC(OVFLW)) and abort the N-SDU reception. If the error occurs after a Consecutive Frame reception, the Flow Control frame shall not be sent



If the upper layer temporarily has no Rx buffer available, the PduR_CanTpProvideRxBuffer() function returns BUFREQ_E_BUSY.

CanTp082: If the function PduR_CanTpProvideRxBuffer returns BUFREQ_E_BUSY to the CanTp module, the CanTp module shall suspend the N-SDU reception by sending the next Flow Control N-PDU with status WAIT (i.e. FC(WT)).

CanTp222: Before expiration of the N_Br timer (ISO 15765-2 specification defines the following performance requirement: (N_Br+N_Ar) < 0.9*N_Bs timeout), the CanTp module shall call the service to provide an Rx buffer again during the next processing of the MainFunction. If the buffer request is delayed again, the CanTp module shall send a new FC(WAIT).

CanTp223: The CanTp module shall send a maximum of WFTmax consecutive FC(WAIT) N-PDU. If this number is reached, the CanTp module shall abort the reception of this N-SDU (the receiver did not send any FC N-PDU, so the N_Bs timer expires on the sender side and then the transmission is aborted) and a receiving indication with NTFRSLT_E_NOT_OK occurs.

CanTp224: When the Rx buffer is finally provided, the CanTp module shall send a Flow Control N-PDU with ClearToSend status (FC(CTS)) and shall carry on the reception of the Consecutive Frame N-PDUs.

CanTp084: When the transport reception session is completed (successfully or not) the CanTp module shall call the upper layer notification service PduR_CanTpRxIndication().

With regard to FF N-PDU reception, the content of the Flow Control N-PDU depends on the PduR CanTpProvideRxBuffer() service result.

CanTp064: Furthermore, it should be noted that when receiving a FF N-PDU, the Flow Control shall only be sent after having the result of the PduR CanTpProvideRxBuffer() service.

It is important to note that FC N-PDU will only be sent after every block, composed of a number BS (Block Size) of consecutive frames.

CanTp067: If the Rx buffer provided is smaller than the entire N-SDU data length and its length is not a multiple of BS*7 (or BS*6 in case of extended addressing format), the CanTp module shall temporarily change the BS value to fill up the buffer reception completely. The desired behavior is described in the following picture



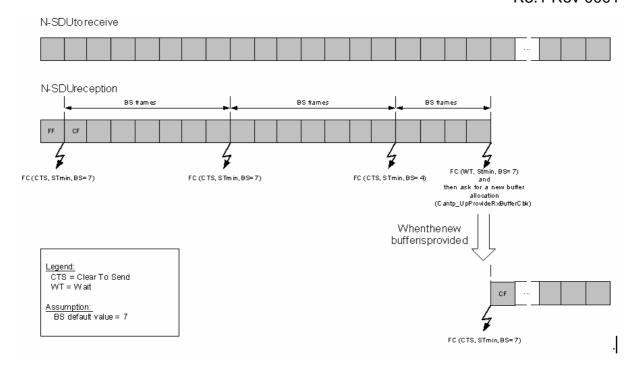


Figure 5: Management of the BS value

7.3.2 N-SDU Transmission

As described in chapter 7.1.2, the upper layer asks for the transmission of a N-SDU by calling CanTp_Transmit(). The parameters of CanTp_Transmit()describe the CAN NSduld and a reference to a PduInfoType that indicates the full Tx N-SDU length given.

CanTp225: The function CanTp_Transmit shall only use the SduLength information within the PduInfoType parameter and shall not use the pointer to the payload N-SDU data.

CanTp226: After a transmission request from the upper layer, the CanTp module shall call PduR CanTpProvideTxBuffer at least once to request the necessary transmit buffer.

CanTp167: After a transmission request from upper layer, the CanTp module shall start time-out N Cs before requesting a Tx buffer. If a buffer has not been provided before the timer elapsed, the CanTp module shall abort the communication.

The Tx buffer provided can be smaller than the full Tx N-SDU data length.

CanTp086: If the Tx buffer provided to the CanTp module is smaller than the full Tx N-SDU data length and when the entire content of this buffer has been sent, the CanTp shall request another buffer bν calling PduR_CanTpProvideTxBuffer()again.



CanTp117: If the data in the Tx buffer cannot be sent completely, the CanTp layer shall request a new buffer from the upper layer and shall buffer the remaining bytes that have not been sent yet.

If the upper layer cannot provide a Tx buffer because of an error (e.g. in the gateway case it may indicate that the transport session to the destination network has been broken), the $PduR_CanTpProvideTxBuffer()$ function returns $BUFREQ_E_NOT_OK$.

CanTpO87: If PduR_CanTpProvideTxBuffer() returns BUFREQ_E_NOT_OK, the CanTp module shall abort the transmit request and notify the upper layer of this failure by calling the callback function PduR_CanTpTxConfirmation() with the result NTFRSLT E NOT OK.

If upper layer temporarily has no Tx buffer available, the PduR_CanTpProvideTxBuffer() function returns BUFREQ_E_BUSY.

CanTp184: If the PduR_CanTpProvideTxBuffer() function returns BUFREQ_E_BUSY, the CanTp module shall later (implementation specific) retry to receive a buffer.

CanTp185: If no buffer is provided before the expiration of the N_Cs timer (ISO 15765-2 specification defines the following performance requirement: (N_Cs+N_As) < 0.9*N_Cr timeout), the CanTp module shall abort this transmission session and notify the upper layer of this failure by calling the callback function PduR_CanTpTxConfirmation with the result NTFRSLT_E_NOT_OK.

The API PduR_CanTpProvideTxBuffer() contains a parameter length used for the recovery mechanism. Because ISO 15765-2 does not support such a mechanism, the CAN Transport Layer does not implement any kind of recovery. Thus, the length parameter is always set to zero (0) and upper layers can return a buffer of free length.

CanTp186: The CanTp module shall set the length parameter in the call to PduR_CanTpProvideTxBuffer to zero (0).

CanTp089: When the Tx buffer is provided, the CanTp module shall resume the transmission of the N-SDU.

CanTp090: When the transport transmission session is successfully completed, the CanTp module shall call a notification service of the upper layer, PduR_CanTpTxConfirmation(), with the result NTFRSLT_OK.



7.3.3 Buffer strategy

Because CanTp has limited buffering capability, the N-SDU payload, which is to be transmitted, is not copied internally and the N-PDU received is not reassembled internally.

The CAN Transport Layer works directly on the memory area of the upper layers (e.g. PduR, DCM, or COM). To access these memory areas, the CAN Transport Layer uses the indicator returned by the PduR_CanTpProvideTxBuffer() or PduR_CanTpProvideRxBuffer() functions.

Thus, to guarantee data consistency, the upper layer should lock this memory area until an indication occurs.

When a transmit buffer is locked, the upper layer must not write data inside the buffer area.

When a receiving buffer is locked the CAN Transport Layer does not guarantee data consistency of the buffer. The upper layer should neither read nor write data in the buffer area.

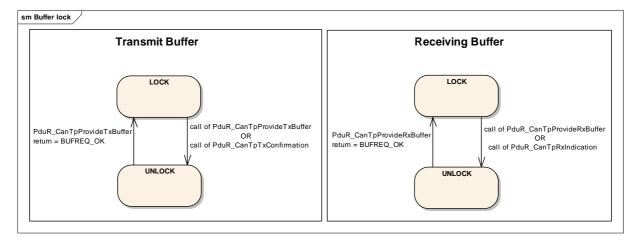


Figure 6: Tx and Rx Buffer locking

CanTp227: The PduR module shall lock the buffer when it returns a status BUFREQ_OK to a PduR_CanTpProvideTxBuffer() or PduR_CanTpProvideRxBuffer() call and shall keep the buffer locked until the CAN transport Layer requests a new buffer (PduR_CanTpProvideTxBuffer() or PduR_CanTpProvideRxBuffer() call) or when a confirmation or indication (PduR_CanTpTxConfirmation() or PduR_CanTpRxIndication() call) occurs.



The following figure provides an example, to summarize the process of sending a frame, with a length of 50 bytes and two sub-buffers of 25 bytes.

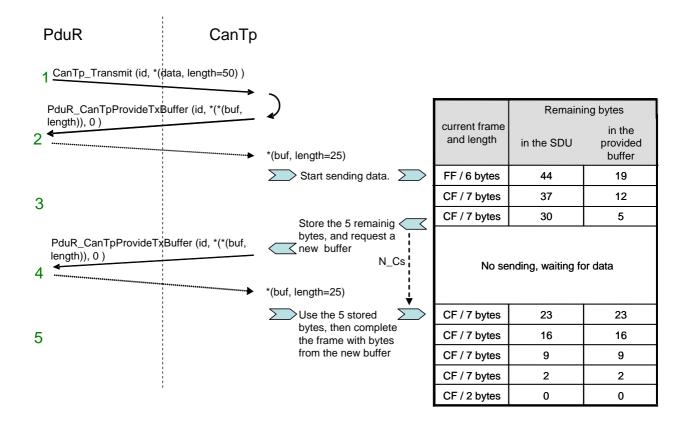


Figure 7: Example of transmit process



- 1: The PduR asks for the transmission of 50 data bytes
- **2:** The CanTp asks the PduR for the data by requesting the buffer containing the payload data. The PduR provides a buffer of 25 bytes (by conception in this example, it is not able to provide a buffer of 50 bytes directly)
- **3:** The CanTp starts the transmission of the payload data. After the second consecutive frame transmission, there are still 5 data bytes available in the buffer. As a consecutive frame will contain 7 data bytes, the CanTp should request a new buffer from the PduR, in order to have enough data to send. Therefore, it should store the 5 data bytes available and afterwards request the buffer.
- **4:** The CanTp asks the PduR for the data, by requesting the buffer containing the next payload data. The PduR provides a buffer of 25 bytes
- **5:** The CanTp continues the transmission of the payload data.

This figure shows the necessity for CAN Transport Layer to use a local buffer to store some data before requesting a new buffer.

The new buffer should be provided before the N_Cs timer expires. To extend this timing constraint, the CAN Transport Layer could use a larger internal buffer and request the next buffer (PduR_CanTpProvideTxBuffer()) before the current buffer is empty (or not sufficient to transmit a complete consecutive frame).

The next figure is an example of an N-SDU receiving 49 bytes, with two buffers of 25 bytes provided.



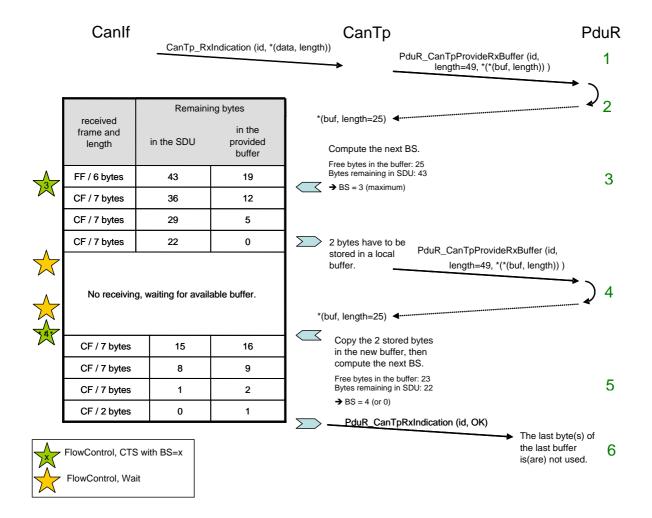


Figure 8: Example of receiving process

- **1:** The CanIf notifies a new reception with CanTp_RxIndication(). The CanTp asks the PduR for a buffer in order to store the received data.
- 2: The PduR provides a buffer of 25 bytes (by conception in this example, it is not able to provide a buffer of 49 bytes directly)
- **3:** The CanTp manages the payload data reception until the buffer is full (on the third consecutive frame). On this third consecutive frame the CAN Transport Protocol can only store 5 bytes in the buffer. Therefore, it should request a new buffer and temporarily store the remaining 2 bytes in a local buffer.
- **4:** The CanTp asks the PduR for a new buffer in order to store the data received subsequently.
- **5:** The CanTp copies the 2 bytes, temporarily stored in local buffer, to the buffer provided by the PduR and manages the payload data reception until the end of reception.
- **6:** The CanTp informs the PduR of the end of reception by a call to PduR_CanTpRxIndication().

The CAN Transport Layer will compute the BS values (See <u>CanTp067</u>) depending on:

maximum configured value for this N-SDU,



- number of free bytes inside the buffer provided,
- amount of receiving bytes.

When the last buffer is returned to the upper layer (PduR_CanTpRxIndication()), the last bytes (in the example just the last byte) could be unused.

The upper layer shall take care identify these unused bytes with the knowledge of the total N-SDU length (function parameter of PduR_CanTpProvideRxBuffer()).

Another solution to avoid unused bytes is for the upper layer to provide the last buffer with the exact length, which should be received.

If the BS value is equal to 0 the buffer should be sized to a value equal or larger than the number of bytes to be received.

7.3.4 No Protocol parameter setting services

CanTp091: The CanTp module shall not support optional primitives (proposed in ISO 15765-2 specification) for the dynamic setting of some transport protocol internal parameters (STmin and BS) by application. Thus, STmin and BS values shall only be set statically N-SDU by N-SDU.

The configured BS value is only a maximum value. For reasons of buffer length, the CAN Transport Layer can adapt the BS value within the limit of the configured maximum value.

7.3.5 Tx and Rx data flow

The following figures show examples of an un-segmented message transmission and a segmented one.

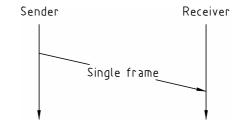


Figure 9: Example of single part message



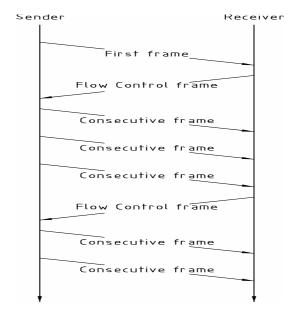


Figure 10: Example of multiple parts message

Flow control is used to adjust the sender to the capabilities of the receiver. The main usage of this transport protocol is peer-to-peer communication (i.e. 1 to 1 communication – physical addressing [13]).

CanTp092: The CanTp module shall provide 1 to n communication (i.e. functional addressing [13]), in the form of functionality to SF N-PDUs (and only SF N-SDU).

The configuration tool shall check whether it is only SF N-PDUs that have been configured with a functional addressing property.

CanTp093: If a multiple segmented session occurs (on both receiver and sender side) with a handle whose communication type is functional, the CanTp module shall reject the request and generate, if the development error detection is enabled, a development error CANTP E PARAM CONFIG.

7.3.6 Relationship between CAN NSduld and CAN LSduld

This chapter describes the connection that exists between CAN NSduld and CAN LSduld, in order to make transmission and reception of transport protocol data units possible.

CanTp035: A CAN NSduld shall only be linked to one CAN LSduld that is used to transmit SF, FF, FC and CF frames.

However, if the message is configured to use an extended addressing format, the CanTp module must fill the first byte of each transmitted segment (SF, FF and CF) with the N_TA value. Therefore a CAN NSduld may also be related to a N_TA value.

FC protocol data units give receivers the possibility of controlling senders' data flow by authorizing or delaying transmission of subsequent CF N-PDUs. For extended addressing format, the first data byte of the FC also contains the N_TA value.





CanTp094: Thus the CAN LSduld of a FC frame combined with its N_TA value (e.g. the N AI) shall only identify one CAN NSduld.

In the reception direction, the first data byte value of each (SF, FF or CF) transport protocol data unit will be used to determine the relevant N-SDU.

CanTp095: Therefore, in extended addressing N-PDU reception, the CanTp module shall extract the N-TA value to establish the related N-SDU.

The following figure summarizes these discussions.

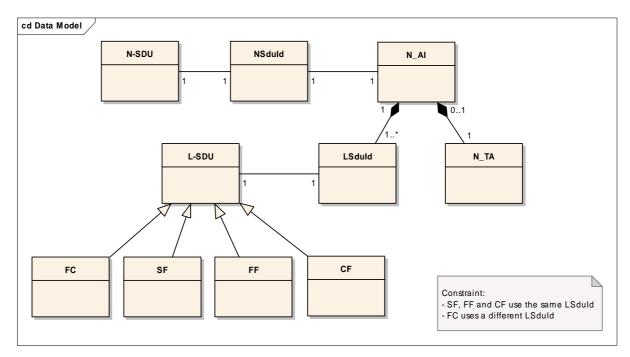


Figure 11: Possible links between NSduld and LSduld

7.3.7 Concurrent connection

In this second release document, the CAN Transport Layer will only be used for diagnosis communication (i.e. the CanTp is used to transfer DCM I-PDU). However, the CAN Transport Layer is able to manage several connections simultaneously (e.g. a UDS and an OBD request can be received at the same time).

CanTp096: The CanTp module shall support several connections simultaneously

CanTp120: It shall be possible to configure concurrent connections in the CanTp module. The connection channels are only destined for CAN TP internal use, so they are not accessible externally. All the necessary information (Channel number, Timing parameter ...) is configured inside the CAN Transport Layer module.

CanTp121: Each N-SDU is statically linked to one connection channel. This connection channel represents an internal path, for the transmission or receiving of the N-SDU. A connection channel is attached to one or more N-SDU.



CanTp122: Each connection channel is independent of the other connection channels. This means that a connection channel uses its own resources, such as internal buffer, timer, or state machine.

CanTp190: The CanTp module shall route the N-SDU through the correctly configured connection channel.

Note that this mechanism does not allow for the receiving or the transmission of N-SDU with the same identifier in parallel, because each N-SDU is linked to only one connection channel.

If a user wants to dedicate a specific connection channel to only one N-SDU, they should assign this connection channel to one N-SDU only during the configuration process.

If a connection channel is assigned to multiple N-SDUs, then resources are shared between different N-SDUs, and the CAN Transport Layer will reject transmission or abort receiving, if no free connection channels are available.

The number of connection channels is not directly configurable. It will be determined by the configuration tools during the configuration process, by analyzing the N-SDU/Channel routing table.

Cantp123: If the configured transmit connection channel is in use (state CANTP_TX_PROCESSING), the CanTp module shall reject new transmission requests linked to this channel. To reject a transmission, CanTp returns E_NOT_OK when the upper layer asks for a transmission with the CanTp_Transmit() function.

Cantp124: If the configured receiving connection channel is in use (state CANTP_RX_PROCESSING), on reception of new data (First Frame reception) the CanTp module shall abort the reception in progress and shall process the received frame as the start of a new reception.


CanTp248: An N-PDU Id shall not be used on two different connection channels.

7.3.8 N-PDU padding

To guarantee complete compatibility with all upper layer requirements concerning the frame data length (e.g. OBD requires data length to always be set to 8 bytes, however UDS does not), the padding activation is configurable at pre-compile time.

CanTp114: The CanTp module shall allow configuration of the padding activation at pre-compile time, by using parameter CanTpRxPaddingActivation.

CanTp040: If the CanTpRxPaddingActivation parameter is set to ON, the CanTp module shall only transfer N-PDU with a length of eight bytes (i.e. DLC = 8) between the CanTp and the CanIf. Thus, a received N-PDU shorter than 8 bytes will be considered corrupt by CanTp







CanTp098: If the CanTpRxPaddingActivation parameter is set to OFF, the CanTp module shall check the frame data length. If a frame is received with an unexpected datalength (check only for too short DLCs), the frame shall be ignored.

CanTp116: In both padding and no padding modes, the CanTp module shall only transfer used data bytes to the upper layer.

CanTp059 To improve transfer time, the CanTp module shall send unused byte(s) without any initialization.

7.3.9 Handling of unexpected N-PDU arrival

The behavior of the CAN Transport Layer on unexpected N-PDU arrival is greatly dependent on the communication direction type of the processing N-SDU.

CanTp057: If unexpected frames are received, the CanTp module shall behave according to the table below.

This table considers the actual CanTp internal status (CanTp status) and the requirement to not support full-duplex communication. It must be understood, that the received N-PDU contains the same address information (N AI) as the reception or transmission, which may be in progress at the time the N_PDU is received.



CanTp	Reception of				
status	SF N-PDU	FF N-PDU	CF N-PDU	FC N-PDU	Unknow n N-PDU
Segment ed Transmit in progress	Ignore	Ignore	Ignore	If awaited, process the FC N-PDU, otherwise ignore it.	Ignore
Segment ed Receive in progress	Terminate the current reception, report an indication, with parameter Result set to NTFRSLT_E_N OT_OK, to the upper layer, and process the SF N-PDU as the start of a new reception	Terminate the current reception, report an indication, with parameter Result set to NTFRSLT_E_NO T_OK, to the upper layer, and process the FF N-PDU as the start of a new reception	Process the CF N-PDU in the on- going reception and perform the required checks (e.g. SN in right order)	Ignore	Ignore
ldle ²	Process the SF N-PDU as the start of a new reception	Process the FF N-PDU as the start of a new reception	Ignore	Ignore	Ignore

Table 1: Handling of unexpected N-PDU arrivals

7.4 Error classification

This section describes how the CanTp module has to manage the several error classes that may occur during the life cycle of this basic software.

The general requirements document of AUTOSAR [3] specifies that all basic software modules must distinguish (according to the product life cycle) two error types:

- Development errors: these errors should be detected and fixed during development phase. In most cases, these errors are software errors. The detection errors that should only occur during development can be switched off for production code (by static configuration, namely preprocessor switches).
- Production errors: these errors are hardware errors and software exceptions that cannot be avoided and are expected to occur in the production (i.e. series) code.

-

² Idle = CANTP_ON.CANTP_RX_WAIT and CANTP_ON.CANTP_TX_WAIT



CanTp008: On errors and exceptions, the CanTp module shall not modify its current module state (see Figure 4: CAN Transport Layer life cycle) but shall simply report the error event.

In case of production error, the Diagnostic Event Manager module (via the Function Inhibition Manager) will perform the appropriate action (e.g. status modification of the calling module).

CanTp192: Values for production code Event Ids are assigned externally by the configuration of the Dem. They are published in the file Dem_IntErrId.h and included via Dem.h.

CanTp101: Development error values are of type uint8.

Type or error	Relevance	Related error code	Value [hex]
API service called with wrong parameter(s): When CanTp_Transmit is called for a none configured TX I-Pdu On any Null-Pointer given on API calls	Development	Could be a combination of: CANTP_E_PARAM_CONFIG CANTP_E_PARAM_ID CANTP_E_PARAM_ADDRESS	0x01 0x02 0x04
API service used without module initialization: On any API call except CanTp_Init() and CanTp_GetVersionInfo() if CanTp is in state CANTP_OFF"	Development	CANTP_E_UNINIT	0x20
Invalid Transmit PDU identifier (e.g. a service is called with an inexistent Tx PDU identifier)	Development	CANTP_E_INVALID_TX_ID	0x30
Invalid Receive PDU identifier (e.g. a service is called with an inexistent Rx PDU identifier)	Development	CANTP_E_INVALID_RX_ID	0x40
Invalid Transmit buffer address (e.g. the Tx buffer address is inaccessible or NULL)	Development	CANTP_E_INVALID_TX_BUFFER	0x50
Invalid Receive buffer address (e.g. the Rx buffer address is inaccessible or NULL)	Development	CANTP_E_INVALID_RX_BUFFER	0x60
Invalid data length of the transmit PDU (e.g. a transmit N-SDU has a length equal to zero)	Development	CANTP_E_INVALID_TX_LENGTH	0x70
Invalid data length of the receive PDU (e.g. a receive FF N-PDU has a FF_DL equal to zero)	Development	CANTP_E_INVALID_RX_LENGTH	0x80
CanTp_Transmit() is called	Development	CANTP_E_INVALID_TATYPE	0x90



R3.1 Rev 0001

for a configured Tx I-Pdu			
with functional			
addressing and the length			
parameter indicates, that			
the message can not be			
sent with a SF			
Requested operation is not	Production	CANTP E OPER NOT SUPPORTED	Assigned by
supported	Fioduction	CANTEL_OFER_NOT_SUFFORTED	DEM
Another error occurred			Assigned by
during a reception or a	Production	CANTP_E_COMM	DEM
transmission			DEINI

7.5 Error detection

CanTp006: The detection of development errors is configurable (*ON / OFF*) at precompile time.

The switch CanTpDevErrorDetect (see chapter 10) should activate or deactivate the detection of all development errors.

CanTp132: If the *CanTpDevErrorDetect* switch is enabled API parameter checking is enabled. The detailed description of the detected errors can be found in chapter 7.4 and chapter 8.

CanTp133: The detection of production code errors cannot be switched off.

CanTp161: A static status variable, denoting whether a BSW module is initialized, should be initialized with value 0 before any APIs of the BSW module are called. The initialization function of the BSW modules will set the static status variable to a value not equal to 0.

This variable is used to check if the module has been initialized before calling an API.

7.6 Error notification

CanTp134: Detected development errors will be reported to the error hook of the Development Error Tracer (DET) if the pre-processor switch CanTpDevErrorDetect is set.

CanTp193: Production errors shall be reported to Diagnostic Event Manager.

The Development Error Tracer module is merely an aid to BSW development and integration. The API is defined, but the functionality can be chosen and implemented according to the development needs (e.g. error count, send error information via a serial interface to an external logger, and so on).

CanTp021: The CanTp module shall use the Development Error Tracer service [8]: void Det_ReportError(ModuleId, InstanceId, ApiId, ErrorId) to report development errors.



CanTp115: The header file of the CanTp module, CanTp.h, shall provide a module ID, called CANTP_MODULE_ID sets, to the value 0x23.

The following figure describes how this function can be used when the Development Error Tracer is on.

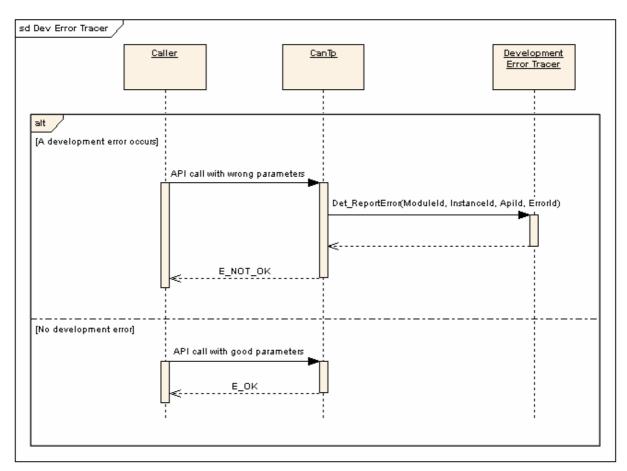



Figure 12: Development error reporting

As shown in the above figure, when a development error occurs the CanTp returns the value E_NOT_OK . The error description is only reported via the API of the Development Error Tracer module.

CanTp100: The CanTP module shall use the API services of the DEM module software specification [11] to report production errors.

This DEM module dumps the error into the "error memory" and informs the FIM module, which has a pre-defined reaction for the ECU (e.g. disabling ECU functions, switching ECU mode, etc).

CanTp228: After a task is completed successfully by calling PduR_TxConfirmation() or PduR_RxIndication(), the CanTp module shall call the DEM with EventId= CANTP E COM and EventStatus=DEM EVENT STATUS PREPASSED.





CanTp229: If the task was aborted (e.g. As, Bs, Cs, Ar, Br, Cr timeout), the CanTp module shall call the DEM with EventId= CANTP_E_COM EventStatus=DEM EVENT STATUS PREFAILED.

CanTp230: The DEM shall use a debounce algorithm of type *Counter based* for CanTp errors.



8 API specification

8.1 Imported types

In this chapter all types included from the following files are listed:

CanTp209:

Header file	Imported Type
Dem_Types.h	Dem_EventIdType
BufReq_Types.h	BufReq_ReturnType
LinIf_Types.h	PduInfoType
PrimitiveTypes.h	PduInfoType
Std_Types.h	Std_ReturnType
	Std_VersionInfoType
FrTp_Types.h	NotifResultType
ComStack_Types.h	PduldType
	PduLengthType

In order to receive a consistent API for the AUTOSAR communication stack, basic types have been defined. These types are used by the CAN Transport Layer to communicate with the Pdu-Router and with the CAN Interface Layer.

For more information, these basic types are presented in depth in the AUTOSAR COM stack API specification.

These AUTOSAR standard types will be used without any type redefinition.

CanTp002: If, for implementation reasons, some additional types have to be defined, the CanTp module shall label these types as follows: CanTp_<TypeName>Type, where <TypeName> is the name of this type adhering to the rules:

- No underscore usage
- First letter of each word upper case, consecutive letters lower case.

The CanTp module shall ensure that implementation-specific types are not "visible" outside of CanTp. Otherwise, the complete architecture would be corrupted.

8.2 Type definitions

8.2.1 CanTp_CancelReasonType

Name:	FrTp_CancelReas	FrTp_CancelReasonType	
Туре:	Enumeration	Enumeration	
Range:	FRTP_CNLDO	FRTP_CNLDO Cancel Transfer because data are outdated	
	FRTP_CNLNB Cancel Transfer because no further buffer can be provided		
	FRTP_CNLOR Cancel Transfer because of another reason		
Description:	The reason is sent to the other peer (not on receiver side in a 1:n connection) by		
	the means of an appropriate FC frame.		



8.3 Function definitions

This is a list of functions provided for upper layer modules

CanTp003: The following provides the API Naming convention for the CanTp services:

- The service name format is CanTp_<ServiceName>(...)
- <ServiceName>: is the name of the service primitive with first letter of each word upper case and consecutive letters lower case

8.3.1 CanTp_Init

CanTp208:

Service name:	CanTp_Init
Syntax:	void CanTp_Init(
Service ID[hex]:	0x01
Sync/Async:	Synchronous
Reentrancy:	Non Reentrant
Parameters (in):	None
Parameters	None
(inout):	
Parameters (out):	None
Return value:	None
Description:	This function initialzes the CanTp module.

After power up, CanTp is in a state called CANTP_OFF (see <u>CanTp168</u>). In this state, the CanTp is not yet configured and therefore cannot perform any communication task.

The function CanTp_Init initializes all global variables of the CAN Transport Layer with the given configuration set and set it in the idle state (state = CANTP_ON but neither transmission nor reception are in progress) (see <u>CanTp170</u> and <u>CanTp030</u>).

The function CanTp_Init has no return value because configuration data errors should be detected during configuration time (e.g. by the configuration tools). Furthermore, if a hardware error occurs, it will be reported via the error manager modules.

CanTp199: The CanTp module's environment shall call CanTp_Init before using the CanTp module for further processing.

8.3.2 CanTp_ GetVersionInfo

CanTp210:

Service name:	CanTp_GetVersionInfo
Syntax:	void CanTp_GetVersionInfo(
	Std_VersionInfoType* versioninfo



Service ID[hex]:	0x07	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	None	
Parameters	None	
(inout):		
Parameters (out):	versioninfo Indicator as to where to store the version information of this module.	
Return value:	None	
Description:	This function returns the version information of the CanTp module.	

CanTp162: The function CanTp_GetVersionInfo shall return the version information of this module. The version information includes:

- Module Id
- Vendor Id
- Vendor specific version numbers (BSW00407).

CanTp163: The function CanTp_GetVersionInfo shall be pre compile time configurable (On/Off) by the configuration parameter: CANTP_VERSION_INFO_API.

CanTp218: If source code for caller and callee of CanTp_GetVersionInfo is available, the CanTp module should realize CanTp_GetVersionInfo as a macro, defined in the module's header file.

Note that the function CanTp_GetVersionInfo can be called before initialization of the CanTp module.

8.3.3 CanTp_Shutdown

CanTp211:

Service name:	CanTp_Shutdown
Syntax:	void CanTp_Shutdown(
Service ID[hex]:	0x02
Sync/Async:	Synchronous
Reentrancy:	Non Reentrant
Parameters (in):	None
Parameters	None
(inout):	
Parameters (out):	None
Return value:	None
Description:	This function to shutdown the CanTp module.



CanTp202: The function CanTp_Shutdown shall close all pending transport protocol connections, free all resources and set the CanTp module into the CANTP_OFF state.

CanTp200: The function CanTp_Shutdown shall not raise a notification about the pending frame transmission or reception.

8.3.4 CanTp_Transmit

CanTp212:

Service name:	CanTp_Transmit		
Syntax:	Std_ReturnType CanTp_Transmit(
	PduIdType CanTpTxSduId,		
	const PduInfoType* CanTpTxInfoPtr		
Service ID[hex]:	0x03		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
	CanTpTxSduld This parameter contains the unique CanTp module identifier of		
	the CAN N-SDU to be transmitted.		
Parameters (in):	Range: 0(maximum number of L-PDU IDs received) - 1		
	CanTpTxInfoPtr An indicator of a structure with CAN N-SDU related data: indicator of a CAN N-SDU buffer and the length of this buffer.		
Parameters	None		
(inout):			
Parameters (out):	None		
	Std_ReturnTypeE_OK: The request can be started successfully		
Return value:	E_NOT_OK: The request cannot be started (e.g. a transmit		
	request is in progress with the same N-SDU identifier)		
Description:	This service is used to request the transfer of segmented data.		



CanTp231: If data length is less than 7 or 6 (depending on normal or extended addressing format), the function CanTp_Transmit shall send a SF N-PDU.

CanTp232: If data length is greater than 7 or 6 (depending on normal or extended addressing format), the function CanTp_Transmit shall initiate a multiple frame transmission session.

CanTp204: The CanTp module shall notify the upper layer by calling the PduR_CanTpTxConfirmation callback when the transmit request has been completed.

CanTp205: The CanTp module shall abort the transmit request and call the PduR_CanTpTxConfirmation callback function with the appropriate error result value if an error occurred (over flow, N As timeout, N Bs timeout and so on).

CanTp206: The function CanTp_Transmit shall reject a request if the CanTp_Transmit service is called for a N-SDU identifier which is being used in a currently running CAN Transport Layer session.

Because CanTp has limited buffering capability, the N-SDU payload to be transmitted is not copied internally. The CAN Transport Layer works on the memory area referenced by the CAN N-SDU pointer obtained within the CanTpProvideTxBuffer service.

Thus, to guarantee the data consistency, the upper layer (e.g. DCM, PduRouter or AUTOSAR COM) must lock this memory area until the confirmation notification occurs.

When the upper layer calls this function, only the data length information of the structure indicated by CanTpTxInfoPtr has to be used. Its value indicates the payload length of the N-SDU, which is to be transmitted.

To access a Tx buffer, the CAN Transport Layer should call the PduR CanTpProvideTxBuffer service.

8.3.4.1 CanTp CancelTransmitRequest

CanTp246:

Service name:	FrTp_CancelTransmitRequest		
Syntax:	Std_ReturnType FrTp_CancelTransmitRequest(
	PduIdType FrTpTxPduId,		
	FrTp_CancelReasonType FrTpCancelReason		
Service ID[hex]:	0x03		
Sync/Async:	Asynchronous		
Reentrancy:	Reentrant		
•	FrTpTxPduId This parameter contains the FlexRay TP instance unique		
Parameters (in):	identifier of the Fr N-SDU which transfer has to be cancelled.		
	FrTpCancelReason The reason for cancellation		
Parameters	None		



	_	0004
R3.1	Rev	0001

(inout):		
Parameters (out):	None	
Return value:	Std_ReturnType E_OK: Cancellation request of the transfer (sending or receiving) of the specified Fr N-SDU is accepted. E_NOT_OK: Cancellation request of the transfer of the specified Fr N-SDU is rejected, e. g. cancellation is requested at the receiver in an 1:n connection or in an unsegmented transfer at the receiver or cancellation is not allowed for the corresponding channel.	
Description:	This service primitive is used to cancel the transfer of pending Fr N-SDUs. The connection is identified by FrTpTxSduId. This function has to be called with the PDU-Id of the FrTp, i. e. the upper layer has to translate its own PDU-Id into the one of the TP for the corresponding message.	

8.3.5 Main Function

CanTp213:

Service name:	CanTp_MainFunction	
Syntax:	void CanTp_MainFunction(
Service ID[hex]:	0x06	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	None	
Parameters	None	
(inout):		
Parameters (out):	None	
Return value:	None	
Description:	The main function for scheduling the CAN TP.	

CanTp164: The main function for scheduling the CAN TP (Entry point for scheduling) The main function will be called by the Schedule Manager or by the Free Running Timer module according of the call period needed.

The function CanTp_MainFunction is affected by configuration parameter CanTpMainFunctionPeriod.

8.4 Call-back notifications



The following is a list of functions provided for lower layer modules.

CanTp233: The CanTp module shall provide the function prototypes of the callback functions in the file $CanTp_Cbk.h$

8.4.1 CanTp RxIndication

CanTp214:

Service name:	CanTp RxIndication		
Syntax:	void CanTp_RxIndication(PduIdType CanTpRxPduId, const PduInfoType* CanTpRxPduPtr)		
Service ID[hex]:	0x04		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
Parameters (in):	CanTpRxPduId ID of CAN L-PDU that has been received. Identifies the data that has been received. Range: 0(maximum number of L-PDU IDs received) - 1 CanTpRxPduPtrIndicator of structure with received L-SDU (payload) and data length		
Parameters (inout):	None		
Parameters (out):	None		
Return value:	None		
Description:	This function is called by the CAN Interface after a successful reception of a Rx CAN L-PDU.		

CanTp019: The CanIf module shall call this function after a successful reception of a Rx CAN L-PDU.

The data will be copied by the CanTp via the PDU structure PduInfoType. In this case the L-PDU buffers are not global and are therefore distributed in the corresponding CAN Transport Layer.

CanTp235: The function CanTp_RxIndication shall be callable in interrupt context (it could be called from the CAN receive interrupt).

CanTp234: The function CanTp_RxIndication shall be implemented using a precompile macro

8.4.2 CanTp_TxConfirmation

CanTp215:

Service name:	CanTp_TxConfirmation	
Syntax:	<pre>void CanTp_TxConfirmation(PduIdType CanTpTxPduId)</pre>	
Service ID[hex]:	0x05	
Sync/Async:	Synchronous	



Reentrancy:	Reentrant		
Parameters (in):	CanTpTxPduId ID of CAN L-PDU that has been transmitted. Range: 0(maximum number of L-PDU IDs received) - 1		
Parameters (inout):	None		
Parameters (out):	None		
Return value:	None		
	All transmitted CAN frames belonging to the CAN Transport Layer will be confirmed by this function.		

CanTp020: The CanIf module shall call the function CanTp_TxConfirmation after the TP related CAN Frame (SF, FF, CF, FC) has been transmitted through the CAN network.

CanTp236: The function CanTp_TxConfirmation shall be callable in interrupt context (it could be called from the CAN transmit interrupt).

CanTp237: The function CanTp_TxConfirmation shall be implemented using a precompile macro

8.5 Expected Interfaces

In this chapter, all interfaces required from other modules are listed.

8.5.1 Mandatory Interfaces

This chapter defines all interfaces, which are required, in order to fulfill the core functionality of the module.

CanTp216:

API function	Description
PduR_CanTpProvideRxBuffer	Provides Rx buffer for the CAN TP.
PduR_CanTpProvideTxBuffer	Provides Tx buffer for the CAN TP.
PduR_CanTpRxIndication	Rx indicator for the CAN TP
PduR_CanTpTxConfirmation	Tx confirmation for the CAN TP
CanIf_Transmit	
Dem_ReportErrorStatus	Reports errors to the DEM.

8.5.2 Optional Interfaces

This chapter defines the interface, which is required, in order to fulfill the optional functionality of the module.

CanTp217:

API function	Description
Det_ReportError	Service to report development errors.



9 Sequence diagrams


The goal of this chapter is to make it easier to understand the CAN Transport Layer by describing most of the more frequent and complicated use cases. Thus, the following diagram sequences are not exhaustive and do not reflect all the specified API possibilities.

9.1 SF N-SDU received and no buffer provided

9.1.1 Assumptions

- All input parameters are OK
- The N-SDU data length is smaller than or equal to 7 bytes (6 bytes in the case of extended addressing format)
- Upper layer can not provide an Rx buffer

9.1.2 Sequence diagram

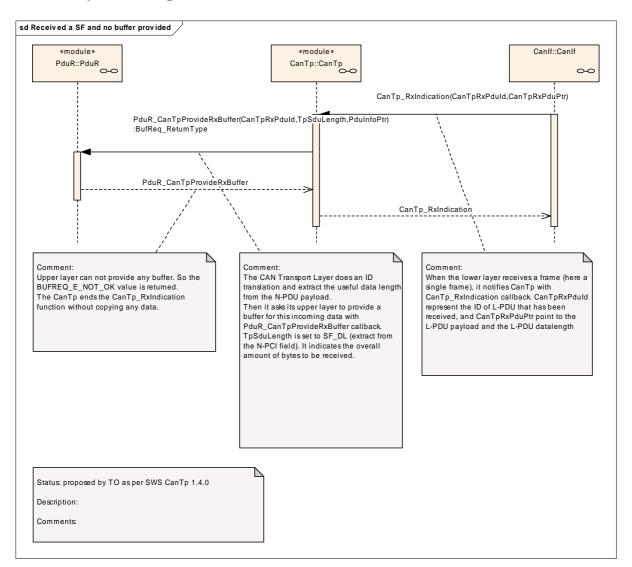



Note: This sequence diagram demonstrates the working of the CAN_Tp module only. However, if the whole system is considered during such reception, more modules are involved. Since this reception can be triggered in the context of CAN ISR, the CAN_Tp operation should be as short as possible.

9.1.3 Transition description

Transition	Name	Description
1	CanTp_RxIndication (CanTpRxPduId, CanTpRxPduPtr	When the lower layer receives a frame (here a single frame), it notifies CanTp by means of a CanTp_RxIndication callback. CanTpRxPduId represents the ID of L-PDU that has been received, and CanTpRxPduPtr indicates the L-PDU payload and the L-PDU datalength
2	PduR_CanTpProvideRx Buffer(CanTpRxSduId, TpSduLength, PduInfoPtr)	The CAN Transport Layer performs an ID translation and extracts the useful data length from the N-PDU payload. It then asks its upper layer to provide a buffer for this incoming data with a PduR_CanTpProvideRxBuffer callback. TpSduLength is set to SF_DL (extracted from the N-PCI field). It indicates the overall amount of bytes to be received.
3	BUFREQ_E_NOT_OK	The upper layer cannot provide any buffer, so the BUFREQ_E_NOT_OK value is returned. The CanTp ends the CanTp_RxIndication function without copying any data.




9.2 Successful SF N-PDU reception

9.2.1 Assumptions

- All input parameters are OK
- The N-SDU data length is smaller than or equal to 7 bytes (6 bytes in the case of extended addressing format)
- The SF N-PDU is successfully received

9.2.2 Sequence diagram

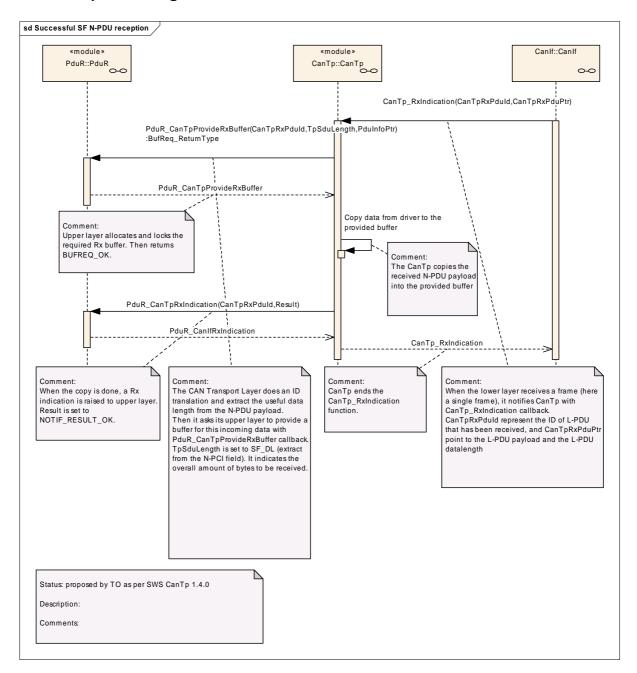

Note: This sequence diagram demonstrates the working of the CAN_Tp module only. However, if the whole system is considered during such reception, more modules are



involved. Since this reception can be triggered in the context of CAN ISR, the CAN_Tp operation should be as short as possible.

9.2.3 Transition description

Transition	Name	Description
1	CanTp_RxIndication (CanTpRxPduId, CanTpRxPduPtr	When the lower layer receives a frame (here a single frame), it notifies CanTp by means of a CanTp_RxIndication callback. CanTpRxPduId represents the ID of the L-PDU that has been received, and CanTpRxPduPtr indicates the L-PDU payload and the L-PDU data length.
2	PduR_CanTpProvideRx Buffer (CanTpRxSduId, TpSduLength, PduInfoPtr)	The CAN Transport Layer performs an ID translation and extract the useful data length from the N-PDU payload. Then it asks its upper layer to provide a buffer for this incoming data with a PduR_CanTpProvideRxBuffer callback. TpSduLength is set to SF_DL (extracted from the N-PCI field). It indicates the overall amount of bytes to be received.
3	BUFREQ_OK	Upper layer allocates and locks the required Rx buffer. Then returns <code>BUFREQ_E_OK</code> .
4		The CanTp copies the received N-PDU payload into the buffer provided.
5	PduR_CanTpRxIndicat ion (CanTpRxSduId, Result)	When the copy is complete, an Rx indication is sent to the upper layer. The result is set to NTFRSLT_OK.
6		CanTp ends the CanTp_RxIndication function.


9.3 Transmit request of SF N-SDU

9.3.1 Assumptions

- All input parameters are OK
- The N-SDU data length is smaller than or equal to 7 bytes (6 bytes in case of extended addressing format)
- The transmission is successfully processed

Specification of CAN Transport Layer V2.2.2 R3.1 Rev 0001

9.3.2 Sequence diagram

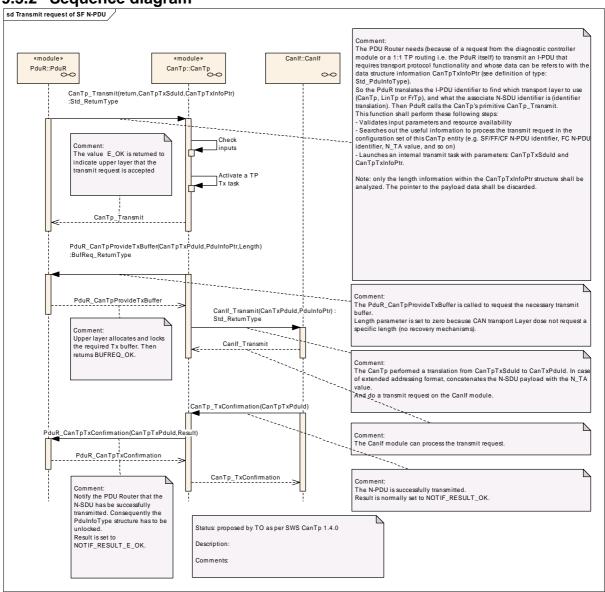



9.3.3 Transition description

Transition	Name	Description
1	CanTp_Transmit(CanTpTxSduId, CanTpTxInfoPtr)	The PDU Router needs (because of a request from the diagnostic controller module or a 1:1 TP routing – i.e. the PduR itself) to transmit an I-PDU that requires transport protocol functionality and whose data can be refered to with the data structure information CanTpTxInfoPtr (see definition of type: Std_PduInfoType). Thus, the PduR translates the I-PDU identifier to establish which transport layer to use (CanTp, LinTp or FrTp), and what the associate N-SDU identifier is (identifier translation). Then PduR calls the CanTp's primitive CanTp_Transmit. This function will perform the following steps: - Validates input parameters and resource availability - Searches for the useful information to process the transmit request in the configuration set of this CanTp entity (e.g. SF/FF/CF N-PDU identifier, FC N-PDU identifier, N_TA value, and so on) - Launches an internal transmit task with the parameters: CanTpTxSduId and CanTpTxInfoPtr. Note: only information concerning length, within the CanTpTxInfoPtr structure, will be analyzed. The payload
2	E_OK	indicator data should be discarded. The value E_OK is returned to indicate to the upper layer that the transmit request is accepted
3	PduR_CanTpProvideTx Buffer (CanTpTxSduId, PduInfoPtr, Length=0)	The PduR_CanTpProvideTxBuffer is called upon to request the necessary transmit buffer. Length parameter is set to zero because the CAN transport Layer does not request a specific length (no recovery mechanism).
4	BUFREQ_OK	Upper layer allocates and locks the required Tx buffer, then returns BUFREQ_E_OK.
5	CanIf_Transmit(CanTxPduId, PduInfoPtr)	The CanTp performs a translation from CanTpTxSduld to CanTxPduld. In case of extended addressing format, it concatenates the N-SDU payload with the N_TA value, to perform a transmit request on the CanIf module.
6	E_OK	The Canlf module can process the transmit request.
7	CanTp_TxConfirmatio n(CanTpTxPduId,)	The N-PDU is successfully transmitted.
8	PduR_CanTpTxConfirm ation (CanTpTxSduId, Result)	Notifies the PDU Router that the N-SDU has been successfully transmitted. Consequently, the PduInfoType structure has to be unlocked. Result is set to NTFRSLT_OK.




9.4 Transmit request of larger N-SDU

9.4.1 Assumptions

- All input parameters are OK
- The N-SDU data length is larger than 7 bytes (6 bytes in case of extended addressing format)
- The transmission is successfully processed



9.4.2 Sequence diagram

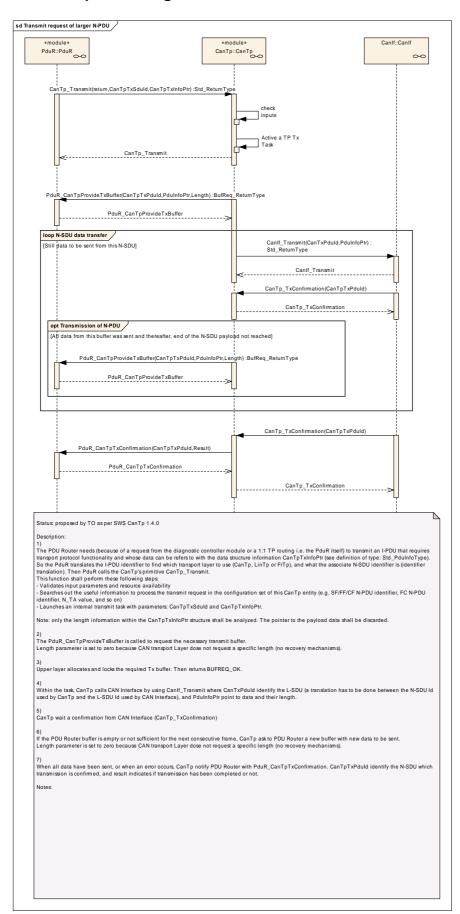



9.4.3 Transition description

Transition	Name	Description
1	CanTp_Transmit (CanTpTxSduId, CanTpTxInfoPtr)	The PDU Router needs (because of a request from the diagnostic controller module or a 1:1 TP routing – i.e. the PduR itself) to transmit an I-PDU that requires transport protocol functionality and whose data can be referred to with the data structure information CanTpTxInfoPtr (see definition of type: Std_PduInfoType). Thus, the PduR translates the I-PDU identifier to establish which transport layer to use (CanTp, LinTp or FrTp), and what the associate N-SDU identifier is (identifier translation). Then PduR calls the CanTp's primitive CanTp_Transmit. This function should perform the following steps: - Validate input parameters and resource availability - Search for the useful information to process the transmit request in the configuration set of this CanTp entity (e.g. SF/FF/CF N-PDU identifier, FC N-PDU identifier, N_TA value, and so on) - Launch an internal transmit task with parameters: CanTpTxSduId and CanTpTxInfoPtr. Note: only information concerning length within the CanTpTxInfoPtr structure will be analyzed. The indicactor
2	PduR_CanTpProvideTx Buffer (CanTpTxSduId, PduInfoPtr, Length=0	to the payload data should be discarded. The PduR_CanTpProvideTxBuffer is called upon to request the necessary transmit buffer. Length parameter is set to zero because the CAN transport Layer does not request a specific length (no recovery mechanism).
3	BUFREQ_OK	The upper layer allocates and locks the required Tx buffer. Then returns BUFREQ_OK.
4	CanIf_Transmit (CanTxPduId, PduInfoPtr)	Within the task, CanTp calls the CAN Interface by using CanIf_Transmit, where CanTxPduId identifies the L-SDU (a translation has to be preformed between the N-SDU Id used by CanTp and the L-SDU Id used by CAN Interface), and PduInfoPtr indicator data and their length.
5	<pre>CanTp_TxConfirmatio n(CanTpTxPduId,)</pre>	CanTp awaits a confirmation from the CAN Interface (CanTp_TxConfirmation)
6	PduR_CanTpProvideTx Buffer (CanTpTxTxSduId, PduInfoPtr, Length=0)	If the PDU Router buffer is empty or not sufficient for the next consecutive frame, CanTp asks the PDU Router for a new buffer, with new data, to be sent. Length parameter is set to zero because the CAN transport Layer does not request a specific length (no recovery mechanism).
7	PduR_CanTpTxConfirm ation (CanTpTxSduId, Result)	When all data has been sent, or when an error occurs, CanTp notifies the PDU Router by means of PduR_CanTpTxConfirmation. CanTpTxPduId informs the N-SDU which transmission has been confirmed, and result indicates whether the transmission has been completed or not.




9.5 Large N-SDU Reception

9.5.1 Assumptions

- All input parameters are OK
- The N-SDU data length is larger than 7 bytes (6 bytes in case of extended addressing format)
- Reception is successfully processed



9.5.2 Sequence diagram

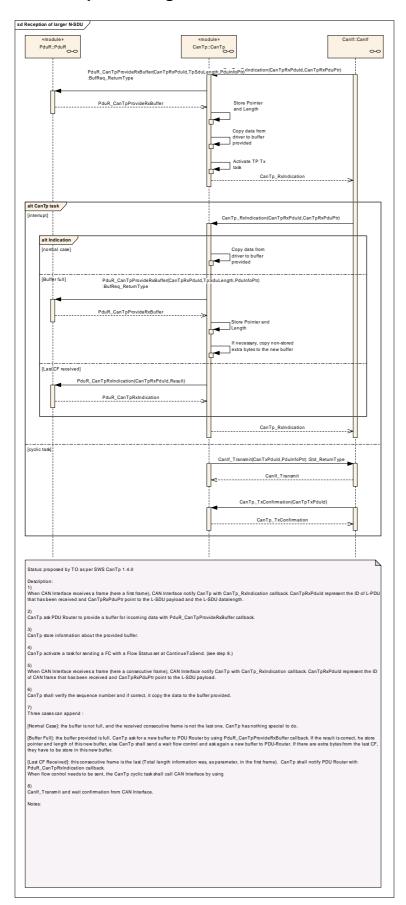



Note: This sequence diagram demonstrates the working of the CAN_Tp module only. However, if the whole system is considered in such reception, more modules are involved. Since this reception can be triggered in the context of a CAN ISR, the CAN Tp operation should be as short as possible.

9.5.3 Transition description

Transition	Name	Description
1	CanTp_RxIndication (CanTpRxPduId, CanTpRxPduPtr	When the CAN Interface receives a frame (here a first frame), it notifies CanTp by means of a CanTp_RxIndication callback. CanTpRxPduId represents the ID of L-PDU that has been received and CanTpRxPduPtr indicates payload and L-SDU
	PduR_CanTpProvideRx Buffer (datalength to the L-SDU.
2	CanTpRxSduId, TpSduLength, PduInfoPtr	CanTp asks the PDU Router to provide a buffer for incoming data by means of a PduR_CanTpProvideRxBuffer callback.
3	,	CanTp stores information about the buffer provided.
4		CanTp activates a task for sending an FC with a Flow Status set to ContinueToSend. (see step 8.)
5	CanTp_RxIndication (CanTpRxPduId, CanTpRxPduPtr)	When the CAN Interface receives a frame (here a consecutive frame), CAN Interface notifies CanTp by means of a CanTp_RxIndication callback. CanTpRxPduId represents the ID of the CAN frame that has been received and CanTpRxPduPtr indicates payload to the L-SDU.
6		CanTp will verify the sequence number and if correct, copy the data to the buffer provided.
7	Nothing or PduR_CanTpProvideRx Buffer (CanTpRxSduId, TpSduLength, PduInfoPtr) Or PduR_CanTpRxIndicat ion (CanTpRxSduId, Result)	 Three cases can append: [Normal Case]: the buffer is not full, and the received consecutive frame is not the last one. CanTp has nothing special to do. [Buffer Full]: the buffer provided is full. CanTp asks the PDU Router for a new buffer by means of a PduR_CanTpProvideRxBuffer callback. If the result is correct, it stores the indication and length of this new buffer. Otherwise CanTp sends a wait flow control and asks the PDU-Router once again for a new buffer. If there are extra bytes from the last CF, they have to be stored in this new buffer. [Last CF Received]: this consecutive frame is the last (Total length information is known using the FF_DL parameter in the first frame). CanTp notifies PDU Router by means of a PduR_CanTpRxIndication callback.
8		When flow control needs to be sent, the CanTp cyclical task should call the CAN Interface by using CanIf_Transmit and await confirmation from the CAN Interface.



10 Configuration specification

This chapter defines configuration parameters and their clustering into containers. In order to support the specification, Chapter 10.1 describes fundamentals.

Chapter 10.2 specifies the structure (containers) and the parameters of the module CAN Transport Layer.

Chapter 10.3 specifies published information for the module CAN Transport Layer

CanTp146: The listed configuration items can be derived from a network description database, which is based on the EcuConfigurationTemplate. The configuration tool should extract all information to configure the CAN Transport Protocol.

CanTp147: The consistency of the configuration must be checked by the configuration tool at configuration time. Configuration rules and constraints for plausibility checks will be performed where possible, during configuration time.

10.1 How to read this chapter

In addition to this section, it is highly recommended to read the documents:

- AUTOSAR Layered Software Architecture [2]
- AUTOSAR ECU Configuration Specification [4]. This document describes the AUTOSAR configuration methodology and the AUTOSAR configuration metamodel in detail.

The following is only a short survey of the topic and will not replace the ECU Configuration Specification document.

10.1.1 Configuration and configuration parameters

Configuration parameters define the variability of the generic part(s) of an implementation of a module. This means that only generic or configurable module implementation can be adapted to the environment (software/hardware) in use during system and/or ECU configuration.

The configuration of parameters can be achieved at different times during the software process: before compile time, before link time or after build time. In the following, the term "configuration class" (of a parameter) will be used in order to refer to a specific point in time during configuration.

10.1.2 Variants

Variants describe sets of configuration parameters. E.g. variant 1: only pre-compile time configuration parameters, variant 2: mix of pre-compile- and post build time-configuration parameters. In one variant, a parameter can only be of one configuration class.



10.1.3 Containers

Containers structure the set of configuration parameters. This means:

- all configuration parameters are kept in containers.
- (sub-) containers can reference (sub-) containers. It is possible to assign a multiplicity to these references. This multiplicity defines the possible number of occurrences of the contained parameters.

10.1.4 Specification template for configuration parameters

The following tables consist of three sections:

- general section
- configuration parameter section
- section of included/referenced containers

SWS Item	
Container Name	Identifies the container with a name
Description	Explains the intention and content of the container.
Configuration Parameters	

Name	Identifies the parameter by	namo		
	Identifies the parameter by name.			
Description	Explains the intention of the configuration parameter.			
Type or Unit	Specifies the type of parameter (e.g., uint8uint32) or specifies the			
	unit of the parameter (e.g., ms)			
Range	Specifies the range (or	Descr	ibes the value(s) or range(s).	
	possible values) of the			
	parameter (e.g., 115,			
	ON,OFF)			
Configuration Class	Pre-compile	see ³	Refer here to (a) variant(s).	
	Link time	see4	Refer here to (a) variant(s).	
	Post Build	see ⁵	Refer here to (a) variant(s).	
Scope	Describes the scope of the	param	eter.	
	The scope describes the	impact	of the configuration parameter: Does	
			tance of the module (instance), all	
	instances of this module (n			
		,	,	
	Possible values of scope : instance, module, ECU, network			
Dependency	Describes the dependencies with respect to the scope.			

 $^{^{\}rm 3}$ see the explanation below this table - Pre-compile time $^{\rm 4}$ see the explanation below this table - Link time

⁵ see the explanation below this table - Post Build



Included Containers					
Container Name	Multiplicity	Scope / Dependency			
Reference a valid (sub)container by its name.	Specifies the number of possible instances of the referenced container and its contained configuration parameters. Possible values: <multiplicity> <min_multiplicity. max_multiplicity=""></min_multiplicity.></multiplicity>	Describes the scope of the referenced subcontainer. The scope describes the impact of the configuration parameter: Does the setting affect only one instance of the module (instance), all instances of this module (module), the ECU or a network? Possible values of scope: instance, module, ECU, network> Describes the dependencies with respect to the scope.			

Pre-compile time

- specifies whether the configuration parameter will be of the configuration class *Pre-compile time* or not

Label	Description
Х	The configuration parameter will be of configuration class <i>Pre-compile time</i> .
	The configuration parameter will never be of configuration class <i>Pre-compile time</i> .

Link time

- specifies whether the configuration parameter will be of configuration class *Link time* or not

Label	Description
Х	The configuration parameter will be of configuration class Link time.
	The configuration parameter will never be of configuration class Link time.

Post Build

 specifies whether the configuration parameter will be of configuration class Post Build or not

Label	Description
х	The configuration parameter will be of configuration class <i>Post Build</i> and no specific implementation is required.
L	Loadable - the configuration parameter will be of configuration class Post Build and only one configuration parameter set resides in the ECU.
М	Multiple - the configuration parameter will be of configuration class Post Build and is selected from a set of multiple parameters by passing a dedicated pointer to the init function of the module.
	The configuration parameter will never be of configuration class Post Build.



10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters are described in Chapters 7 and 8.

10.2.1 Variants

Variant 1: all parameters are configured at compile time.

Variant 2: some parameters are configured at compile time, some parameters are configured at post build time.

10.2.2 CanTp

Module Name	CanTp
Module Description	Configuration of the CanTp (CAN Transport Protocol) module.


Included Containers						
Container Name	Multiplicity	Scope / Dependency				
CanTpGeneral		This container contains the general configuration parameters of the CanTp module.				
CanTpRxNSdu		The following parameters needs to be configured for each CAN N-SDU that the CanTp module shall receive.				
CanTpTxNSdu		The following parameters needs to be configured for each CAN N-SDU that the CanTp module shall transmitt.				

10.2.3 CanTpGeneral

SWS Item	CanTp238:		
Container Name	CanTpGeneral{CanTpConfiguration}		
II)escription	This container contains the general configuration parameters of the CanTp module.		
Configuration Parameters			

SWS Item	CanTp239:				
Name	CanTpDevErrorDetect {CANTP_DEV_ERROR_DETECT}				
Description	Switches the Development E	rror D	Detection and Notification ON or OFF		
Multiplicity	1	1			
Type	BooleanParamDef				
Default value					
ConfigurationClass	Pre-compile time	Χ	All Variants		
	Link time				
	Post-build time				
Scope / Dependency	scope: Module				

SWS Item	CanTp240 :	CanTp240 :			
Name	CanTpMainFunctionPeriod	CanTpMainFunctionPeriod {CANTP_MAIN_FUNCTION_PERIOD}			
Description		Allow to configure the time for the MainFunction (as float in seconds). Please note: This configuration value shall be equal to the value in the ScheduleManger module.			
Multiplicity	1	1			
Туре	FloatParamDef	FloatParamDef			
Range	0.0 0.255				
Default value					
ConfigurationClass	Pre-compile time	X VARIANT-PRE-COMPILE			







	Link time		
	Post-build time	L	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

SWS Item	CanTp242:			
Name	CanTpTc {CANTP_TC}			
Description	Preprocessor switch for enal	oling 1	Fransmit Cancellation.	
Multiplicity	1			
Туре	BooleanParamDef			
Default value				
ConfigurationClass	Pre-compile time X All Variants			
	Link time			
	Post-build time			
Scope / Dependency	scope: ECU			

No Included Containers

10.2.4 CanTpRxNSdu

SWS Item	CanTp137:
Container Name	CanTpRxNSdu{RxNsdu}
	The following parameters needs to be configured for each CAN N-SDU that the CanTp module shall receive.
Configuration Parameters	

SWS Item	CanTp242:					
Name	CanTpAddressingFormat {CANTP_ADDRESSING_FORMAT}					
Description	Declares which communication addressing mode is supported for this Rx N-SDU. Enum values: CanTpStandard. To use normal addressing format. CanTpExtended. To use extended addressing format.					
Multiplicity	1	1				
Type	EnumerationParamDef					
Range	CANTP_EXTENDED	Ext	Extended addressing format			
	CANTP_STANDARD	Standard addressing format				
ConfigurationClass	Pre-compile time	X All Variants				
	Link time					
	Post-build time					
Scope / Dependency	scope: Module					

SWS Item	CanTp243:				
Name	CanTpBs {CANTP_BS}				
Description	Sets the maximum number of N-PDUs the CanTp receiver allows the sender to send, before waiting for an authorization to continue transmission of the following N-PDUs.For further details on this parameter value see ISO 15765-2 specification. Note: For reasons of buffer length, the CAN Transport Layer can adapt the BS value within the limit of this maximum BS				
Multiplicity	1				
Type	IntegerParamDef				
Default value					
ConfigurationClass	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time				
	Post-build time L VARIANT-POST-BUILD				
Scope / Dependency	scope: Module				



SWS Item	CanTp244:			
Name	CanTpNar {CANTP_NAR}			
Description	Value in seconds of the N_Ar timeout. N_Ar is the time for transmission of a CAN frame (any N_PDU) on the receiver side.			
Multiplicity	1			
Туре	FloatParamDef			
Default value				
ConfigurationClass	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time			
	Post-build time L VARIANT-POST-BUILD			
Scope / Dependency	scope: Module			

SWS Item	CanTp245 :	CanTp245 :			
Name	CanTpNbr {CANTP_NBR}				
Description	is the elapsed time between	Value in seconds of the performance requirement for (N_Br + N_Ar). N_Br is the elapsed time between the receiving indication of a FF or CF or the transmit confirmation of a FC, until the transmit request of the next FC.			
Multiplicity	1	1			
Туре	FloatParamDef	FloatParamDef			
Default value					
ConfigurationClass	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	Link time			
	Post-build time	Post-build time L VARIANT-POST-BUILD			
Scope / Dependency	scope: Module				

SWS Item	CanTp246 :			
Name	CanTpNcr {CANTP_NCR	? }		
Description	Value in seconds of the N_Cr timeout. N_Cr is the time until reception of the next Consecutive Frame N_PDU.			
Multiplicity	1	1		
Type	FloatParamDef			
Default value				
ConfigurationClass	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time			
	Post-build time	L	VARIANT-POST-BUILD	
Scope / Dependency	scope: Module			

SWS Item	CanTp247:			
Name	CanTpRxChannel {CANTP_RX_CHANNEL}			
Description	Link to the Rx connection channel, which has to be used for receiving this N-PDU.			
Multiplicity	1			
Туре	IntegerParamDef			
Default value				
ConfigurationClass	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: Module			

SWS Item	CanTp248 :
Name	CanTpRxDI {CANTP_DL}
·	Data Length Code of this RxNsdu. In case of variable message length, this value indicates the minimum data length. Depending on SF or FF N-SDU the value will be limited to 7 (6 for an extended addressing format) and 4095 respectively.





Multiplicity	1			
Type	IntegerParamDef			
Default value				
ConfigurationClass	Pre-compile time	Χ	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: Module			

SWS Item	CanTp249:			
Name	CanTpRxPaddingActiva	tion	{CANTP_PADDING_ACTIVATION}	
Description	Defines if the receive frame uses padding or not. Definition of enumeration values: CanTpOn: The N-PDU received uses padding for SF, FC and the last CF. (N-PDU length is always 8 bytes) CanTpOff: The N-PDU received does not use padding for SF, CF and the last CF. (N-PDU length is dynamic)			
Multiplicity	1			
Type	EnumerationParamDef			
Range	CANTP_OFF	Padding is not used		
	CANTP_ON	Pado	ding is used	
ConfigurationClass	Pre-compile time	Χ	All Variants	
_	Link time			
	Post-build time			
Scope / Dependency	scope: Module			

SWS Item	CanTp250 :				
Name	CanTpRxTaType (CANTI	CanTpRxTaType {CANTP_TA_TYPE}			
Description	Declares the communicat	ion ty	pe of this Rx N-SDU.		
Multiplicity	1	1			
Туре	EnumerationParamDef	EnumerationParamDef			
Range	CANTP_FUNCTIONAL	Functional request type			
	CANTP_PHYSICAL	Physical request type			
ConfigurationClass	Pre-compile time	Х	All Variants		
	Link time				
	Post-build time				
Scope / Dependency	scope: Module				

SWS Item	CanTp251 :				
Name	CanTpRxWftMax {CANTP_V	VFTM	IAX}		
Description	This parameter indicates how many Flow Control wait N-PDUs can be consecutively transmitted by the receiver. It is local to the node and is not transmitted inside the FC protocol data unit. CanTpRxWftMax is used to avoid sender nodes being potentially hooked-up in case of a temporarily reception inability on the part of the receiver nodes, whereby the sender could be waiting continuously.				
Multiplicity	1	1			
Type	IntegerParamDef				
Default value					
ConfigurationClass	Pre-compile time	Χ	VARIANT-PRE-COMPILE		
	Link time				
	Post-build time	Post-build time L VARIANT-POST-BUILD			
Scope / Dependency	scope: Module				

SWS Item	CanTp252:
Name	CanTpSTmin {CANTP_STMIN}
Description	Sets the duration of the minimum time the CanTp sender shall wait
	between the transmissions of two CF N-PDUs. For further details on this



	parameter value see ISO 15765-2 specification.				
Multiplicity	1	1			
Type	IntegerParamDef	IntegerParamDef			
Default value					
ConfigurationClass	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE			
-	Link time				
	Post-build time	Post-build time L VARIANT-POST-BUILD			
Scope / Dependency	scope: Module				

SWS Item	CanTp241:			
Name	CanTpRxNSduRef			
Description	Reference to a Pdu in the COM-Stack.			
Multiplicity	1			
Туре	Reference to Pdu			
ConfigurationClass	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-POST-BUILD			
	Post-build time			
Scope / Dependency				

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTpNSa		Contains the parameters needed to configure each RxNSdu or TxNSdu with CanTpAddressingFormat set to CanTpExtended.
CanTpNTa	01	The following parameters need to be configured for each RxNsdu or TxNsdu with the CanTpAddressingFormat set to CanTpExtended.
CanTpRxNPdu		Used for grouping of the ID of a PDU and the Reference to a PDU.
CanTpTxFcNPdu		Used for grouping of the ID of a PDU and the Reference to a PDU.

10.2.5 CanTpRxNPdu

TOILIO GAITT PITATTI AA	
SWS Item	CanTp256:
Container Name	CanTpRxNPdu
Description	Used for grouping of the ID of a PDU and the Reference to a PDU.
Configuration Parameters	

SWS Item	CanTp258:			
Name	CanTpRxNPduld {CANTP_F	RXNPI	DU_ID}	
Description	The N-PDU identifier attached to the RxNsdu is identified by CanTpRxNSduld. Each RxNsdu identifier is linked to only one SF/FF/CF N-PDU identifier. Nevertheless, in the case of extended addressing format, the same N-PDU identifier can be used for several N-SDU identifiers. The distinction is made by the N_TA value (first data byte of SF or FF frames).			
Multiplicity	1	1		
Type	IntegerParamDef (Symbolic	IntegerParamDef (Symbolic Name generated for this parameter)		
Default value				
ConfigurationClass	Pre-compile time	Pre-compile time X All Variants		
	Link time			
	Post-build time			
Scope / Dependency	scope: module			

SWS Item	CanTp257:	
Name	CanTpRxNPduRef	
Description	eference to a Pdu in the COM-Stack.	



Multiplicity	1			
Туре	Reference to Pdu			
ConfigurationClass	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time			
	Post-build time	L	VARIANT-POST-BUILD	
Scope / Dependency				

No Included Containers

10.2.6 CanTpTxFcNPdu

SWS Item	CanTp259:
Container Name	CanTpTxFcNPdu
Description	Used for grouping of the ID of a PDU and the Reference to a PDU.
Configuration Parameters	

SWS Item	CanTp260 :	CanTp260:			
Name	CanTpTxFcNPduRef				
Description	Reference to a Pdu in the C	OM-St	tack.		
Multiplicity	1	1			
Туре	Reference to Pdu	Reference to Pdu			
ConfigurationClass	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	Link time			
	Post-build time L VARIANT-POST-BUILD				
Scope / Dependency					

No Included Containers

10.2.7 CanTpTxNSdu

SWS Item	CanTp138:
Container Name	CanTpTxNSdu{TxNsdu}
Description	The following parameters needs to be configured for each CAN N-SDU that the CanTp module shall transmitt.
Configuration Parameters	

SWS Item	CanTp262:				
Name	CanTpAddressingMode {	CanTpAddressingMode {CANTP_ADDRESSING_MODE}			
Description	Declares which communication addressing format is supported for this TxNsdu. Definition of Enumeration values: CanTpStandard to use normal addressing format. CanTpExtended to use extended addressing format (the N_TA container of this TxNsdu will be used).				
Multiplicity	1				
Туре	EnumerationParamDef	EnumerationParamDef			
Range	CANTP_EXTENDED	ENDED Extended addressing format			
	CANTP_STANDARD	Standard addressing format			
ConfigurationClass	Pre-compile time	Х	All Variants		
	Link time				
	Post-build time				
Scope / Dependency	scope: Module				

SWS Item	CanTp263:
Name	CanTpNas {CANTP_NAS}
Description	Value in second of the N_As timeout. N_As is the time for transmission of
	a CAN frame (any N_PDU) on the part of the sender.
Multiplicity	1





Туре	FloatParamDef			
Default value				
ConfigurationClass	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time	1		
	Post-build time	L	VARIANT-POST-BUILD	
Scope / Dependency	scope: Module			

SWS Item	CanTp264:		
Name	CanTpNbs {CANTP_NBS}		
Description	Value in seconds of the N_Bs timeout. N_Bs is the time of transmission until reception of the next Flow Control N_PDU.		
Multiplicity	1		
Type	FloatParamDef		
Default value			
ConfigurationClass	Pre-compile time X VARIANT-PRE-COMPILE		
	Link time		
	Post-build time L VARIANT-POST-BUILD		
Scope / Dependency	scope: Module		

SWS Item	CanTp265 :	CanTp265:			
Name	CanTpNcs {CANTP_NC	S}			
Description	Value in seconds of the performance requirement of (N_Cs + N_As). N_Cs is the time which elapses between the transmit request of a CF N-PDU until the transmit request of the next CF N-PDU.				
Multiplicity	1				
Туре	FloatParamDef				
Default value					
ConfigurationClass	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time				
	Post-build time L VARIANT-POST-BUILD				
Scope / Dependency	scope: Module				

SWS Item	CanTp266:				
Name	CanTpTxChannel {CANT	CanTpTxChannel {CANTP_TX_CHANNEL}			
Description	Link to the connection chathis N-PDU.	Link to the connection channel which has to be used for transmission of this N-PDU.			
Multiplicity	1	1			
Туре	IntegerParamDef	IntegerParamDef			
Default value					
ConfigurationClass	Pre-compile time	Pre-compile time X All Variants			
	Link time				
	Post-build time	Post-build time			
Scope / Dependency	scope: Module	'			

SWS Item	CanTp267 :			
Name	CanTpTxDl {CANTP_DL}			
Description		Data Length Code of this TxNsdu. In case of variable length message, this value indicates the minimum data length.		
Multiplicity	1	1		
Type	IntegerParamDef	IntegerParamDef		
Default value				
ConfigurationClass	Pre-compile time	Х	All Variants	
	Link time			
	Post-build time			
Scope / Dependency	scope: Module			



SWS Item	CanTp268:		
Name	CanTpTxNSduld {CANTP_T	XNSE	DU_ID}
Description	Unique identifier to a structure that contains all useful information to process the transmission of a TxNsdu.		
Multiplicity	1		
Type	IntegerParamDef (Symbolic Name generated for this parameter)		
Default value			
ConfigurationClass	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: Module		

SWS Item	CanTp269:			
Name	CanTpTxPaddingActiva	CanTpTxPaddingActivation {CANTP_PADDING_ACTIVATION}		
Description	Defines if the transmit frame use padding or not. Definition of Enumeration values: CanTpOn The transmit N-PDU uses padding for SF, FC and the last CF. (N-PDU length is always 8 bytes) CanTpOff The transmit N-PDU does not use padding for SF, CF and the last CF. (N-PDU length is dynamic)			
Multiplicity	1			
Туре	EnumerationParamDef			
Range	CANTP_OFF	Padding is not used		
	CANTP_ON	Padding is used		
ConfigurationClass	Pre-compile time	X All Variants		
	Link time			
	Post-build time	I time		
Scope / Dependency	scope: Module			

SWS Item	CanTp270 :				
Name	CanTpTxTaType {CANTP_TA_TYPE}				
Description	Declares the communication type of this TxNsdu. Enumeration values: CanTpPhysical. Used for 1:1 communication. CanTpFunctional. Used for 1:n communication.				
Multiplicity	1				
Туре	EnumerationParamDef				
Range	CANTP_FUNCTIONAL	Functional request type			
	CANTP_PHYSICAL	P_PHYSICAL Physical request type			
ConfigurationClass	Pre-compile time	X All Variants			
	Link time				
	Post-build time				
Scope / Dependency	scope: Module				

SWS Item	CanTp261:			
Name	CanTpTxNSduRef			
Description	Reference to a Pdu in the COM-Stack.			
Multiplicity	1			
Туре	Reference to Pdu			
ConfigurationClass	Pre-compile time X VARIANT-PRE-COMPILE			
_	Link time	Х	VARIANT-POST-BUILD	
	Post-build time			
Scope / Dependency		1		

Included Containers	
Container Name	Multiplicity Scope / Dependency



Specification of CAN Transport Layer V2.2.2

R3.1 Rev 0001

CanTpNSa	01	Contains the parameters needed to configure each RxNSdu or TxNSdu with CanTpAddressingFormat set to CanTpExtended.
CanTpNTa	01	The following parameters need to be configured for each RxNsdu or TxNsdu with the CanTpAddressingFormat set to CanTpExtended.
CanTpRxFcNPdu	01	Used for grouping of the ID of a PDU and the Reference to a PDU.
CanTpTxNPdu	1	Used for grouping of the ID of a PDU and the Reference to a PDU.

10.2.8 CanTpTxNPdu

SWS Item	CanTp274 :
Container Name	CanTpTxNPdu
Description	Used for grouping of the ID of a PDU and the Reference to a PDU.
Configuration Parameters	

SWS Item	CanTp275 :			
Name	CanTpTxNPduRef	CanTpTxNPduRef		
Description	Reference to a Pdu in the C	Reference to a Pdu in the COM-Stack.		
Multiplicity	1	1		
Туре	Reference to Pdu	Reference to Pdu		
ConfigurationClass	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE		
	Link time	Link time		
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency				

No Included Containers

10.2.9 CanTpRxFcNPdu

TOILIO GUITT PITAL GIAL AL	4
SWS Item	CanTp271:
Container Name	CanTpRxFcNPdu
Description	Used for grouping of the ID of a PDU and the Reference to a PDU.
Configuration Parameters	

SWS Item	CanTp273 :				
Name	CanTpRxFcNPduId {CAN	P_RXF	-C_NPDU_ID}		
Description	CanTpTxNSduld. Each Tx identifier only. However, in same FC N-PDU identifier	N-PDU identifier attached to the FC N-PDU of this TxNsdu identified by CanTpTxNSduld. Each TxNsdu identifier is linked to one Rx FC N-PDU identifier only. However, in the case of extended addressing format, the same FC N-PDU identifier can be used for several N-SDU identifiers. The distinction is made by means of the N_TA value (first data byte of FC frames).			
Multiplicity	1				
Туре	IntegerParamDef (Symbol	c Name	e generated for this parameter)		
Default value					
ConfigurationClass	Pre-compile time	X	All Variants		
	Link time				
	Post-build time	Post-build time			
Scope / Dependency	scope: Module	,			

SWS Item	CanTp272 :
Name	CanTpRxFcNPduRef
Description	Reference to a Pdu in the COM-Stack.
Multiplicity	1
Туре	Reference to Pdu



Specification of CAN Transport Layer V2.2.2

R3.1 Rev 0001

ConfigurationClass	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time		
	Post-build time	L	VARIANT-POST-BUILD
Scope / Dependency			

No Included Containers

10.2.10 **CanTpNTa**

SWS Item	CanTp139:
Container Name	CanTpNTa{N_Ta}
Description	The following parameters need to be configured for each RxNsdu or TxNsdu with the CanTpAddressingFormat set to CanTpExtended.
Configuration Paramet	ters

SWS Item	CanTp255 :		
Name	CanTpNTa {CANTP_NTA}		
Description	If an RxNsdu or a TxNsdu is configured for extended addressing format, this parameter contains the transport protocol target address's value.		
Multiplicity	1		
Туре	IntegerParamDef		
Default value			
ConfigurationClass	Pre-compile time	X	All Variants
	Link time		
	Post-build time		
Scope / Dependency	scope: Module	1	-

No Included Containers

10.2.11 CanTpNSa

SWS Item	CanTp253 :
Container Name	CanTpNSa{N_Sa}
Description	Contains the parameters needed to configure each RxNSdu or TxNSdu with CanTpAddressingFormat set to CanTpExtended.
Configuration Parameter	ters

SWS Item	CanTp254 :		
Name	CanTpNSa {CANTP_NSA}		
Description	If an RxNSdu ora TxNSdu is configured for extended addressing format, this parameter contains the transport protocol source address's value.		
Multiplicity	1		
Туре	IntegerParamDef		
Default value			
ConfigurationClass	Pre-compile time	Χ	All Variants
	Link time		
	Post-build time		
Scope / Dependency			

No Included Containers



10.3 Published Information

Published information contains data defined by the implementer of the SW module that does not change when the module is adapted (i.e. configured) to the actual HW/SW environment. It thus contains version and manufacturer information.

The standard common published information like

```
vendorld (<Module>_VENDOR_ID),
moduleId (<Module>_MODULE_ID),
arMajorVersion (<Module>_AR_MAJOR_VERSION),
arMinorVersion (<Module>_AR_MINOR_VERSION),
arPatchVersion (<Module>_AR_PATCH_VERSION),
swMajorVersion (<Module>_SW_MAJOR_VERSION),
swMinorVersion (<Module>_SW_MINOR_VERSION),
swPatchVersion (<Module>_SW_PATCH_VERSION),
vendorApiInfix (<Module>_VENDOR_API_INFIX)
```

is provided in the BSW Module Description Template (see [12] Figure 4.1 and Figure 7.1).

Additional published parameters are listed below if applicable for this module.



11 Changes to Release 1

11.1 Deleted SWS Items

SWS Item	Rationale
CanTp004	Requirement obsolete
CanTp015	Covered by CanTp001
CanTp026	Requirement obsolete
CanTp036	Requirement obsolete
CanTp037	Requirement obsolete
CanTp038	Requirement obsolete
CanTp039	Requirement obsolete
CanTp097	Multiple connection now is available
CanTp099	Requirement partly wrong

11.2 Replaced SWS Items

SWS Item of Release 1	replaced by SWS Item	Rationale
CanTp005	CanTp101	Covered by CanTp101
CanTp007	CanTp101	Covered by CanTp101
CanTp025	CanTp140	modification of type
CanTp041	CanTp137	Grouping of requirement and modification of name
CanTp042	CanTp138	Grouping of requirement and modification of name
CanTp043	CanTp137	Grouping of requirement and modification of name
CanTp044	CanTp138	Grouping of requirement and modification of name
CanTp045	CanTp137	Grouping of requirement and modification of name
CanTp046	<u>CanTp138</u>	Grouping of requirement and modification of name
CanTp047	CanTp137	Grouping of requirement and modification of name
CanTp048	<u>CanTp138</u>	Grouping of requirement and modification of name
CanTp049	CanTp137	Grouping of requirement and modification of name
CanTp050	<u>CanTp138</u>	Grouping of requirement and modification of name
CanTp051	<u>CanTp139</u>	Grouping of requirement and modification of name
CanTp052	<u>CanTp139</u>	Grouping of requirement and modification of name
CanTp053	<u>CanTp138</u>	Grouping of requirement and modification of name
CanTp054	CanTp137	Grouping of requirement and modification of name
CanTp056	<u>CanTp138</u>	Grouping of requirement and modification of name
CanTp060	<u>CanTp138</u>	Grouping of requirement and modification of name
CanTp061	CanTp137	Grouping of requirement and modification of name
CanTp062	<u>CanTp138</u>	Grouping of requirement and modification of name
CanTp063	CanTp137	Grouping of requirement and modification of name
CanTp065	CanTp140	Grouping of requirement and modification of name
CanTp066	CanTp140	Grouping of requirement and modification of name
CanTp068	CanTp137	Grouping of requirement and modification of name
CanTp069	CanTp138	Grouping of requirement and modification of name
CanTp108	CanTp137	Grouping of requirement and modification of name
CanTp109	CanTp138	Grouping of requirement and modification of name
CanTp113	CanTp137	Grouping of requirement and modification of name



11.3 Changed SWS Items

SWS Item	Rationale	
CanTp001	File structure deleted and reported to CanTp156	
CanTp010	Modification of the figure: addition of CanTp_Shutdown call in CANTP_OFF	
ConTn010	Addition of Range value for parameter	
CanTp019	Change CanTpRxPduPtr parameter to const	
CanTp020	Addition of Range value for parameter	
CanTp032	Addition of ISO 15765-4 reference	
CanTp040	Change of parameter name	
CanTp074	Requirement that Canlf confirms only successful transmission confirmation	
CanTp075	Requirement for the CAN Tp behavior in case of transmission time-out	
CanTp082	Requirement when the CAN Tp has to call again for a buffer to be	
Carrposz	provided	
CanTp096	Addition of several connection management	
CanTp114	Requirement that it is a pre-compile time configuration	

11.4 Added SWS Items

SWS Item	Rationale
CanTp156	File structure from CanTp001 reworked in this requirement
CanTp119	ISO 15765-4
CanTp120	Concurrent connections
CanTp121	Concurrent connections
CanTp122	Concurrent connections
CanTp123	Concurrent connections
CanTp124	Concurrent connections
CanTp130	Dem.h file inclusion
CanTp132	CanTpDevErrorDetect switch
CanTp133	Production error detection
CanTp134	Development Error Tracer
CanTp137	RxNsDu Configuration
CanTp138	RxNsDu Configuration
CanTp139	CanTpNTa Configuration
CanTp140	Published information Configuration
CanTp146	Configuration tool
CanTp147	Configuration tool
CanTp150	Design rules
CanTp151	Design rules
CanTp152	Design rules
CanTp153	Design rules
CanTp155	Design rules
CanTp158	Design rules
CanTp156	File structure
CanTp157	CanTp.h file
CanTp158	Can Tp source code
CanTp159	Configuration files
CanTp160	Reference to c-configuration parameters
CanTp161	Initialization status variable
CanTp162	CanTp_GetVersionInfo Api
CanTp163	CanTp_GetVersionInfo Api
CanTp164	MainFunction Api



12 Changes during SWS Improvements by Technical Office

12.1 Deleted SWS Items

SWS Item	Rationale
CanTp118	No requirement, just description -> ID removed but text kept
CanTp016	No requirement, just description -> ID removed but text kept
CanTp014	No requirement, just description -> ID removed but text kept
CanTp022	No requirement, just description -> ID removed but text kept
CanTp034	No requirement, just description -> ID removed but text kept
CanTp032	No requirement, just description -> ID removed but text kept
CanTp119	No requirement, just description -> ID removed but text kept
CanTp070	No requirement, just description -> ID removed but text kept
CanTp073	No requirement, just description -> ID removed but text kept
CanTp012	No requirement, just description -> ID removed but text kept
CanTp013	No requirement, just description -> ID removed but text kept
CanTp085	No requirement, just description -> ID removed but text kept
CanTp112	No requirement, just description -> ID removed but text kept
CanTp058	No requirement, just description -> ID removed but text kept
CanTp135	No requirement for CanTp, text remove

12.2 Replaced SWS Items

SWS Item of	replaced by	Rationale
Release 1	SWS Item	
CanTp028	CanTp168, CanTp169	Made requirement atomic
CanTp029	CanTp170	Made requirement atomic (part became normal
		text)
CanTp071	CanTp176, CanTp177	Made requirement atomic
CanTp088	CanTp184, CanTp185	Made requirement atomic
CanTp018	CanTp199	Made requirement atomic
CanTp011	CanTp200, CanTp202	Made requirement atomic
CanTp083	CanTp222, CanTp223,	Made requirement atomic
	CanTp224	
CanTp110	CanTp225, CanTp226	Made requirement atomic
CanTp103	CanTp231, CanTp232	Made requirement atomic

12.3 Changed SWS Items

Many requirements have been changed to improve understandability without changing the technical contents.

12.4 Added SWS Items

SWS Item	Rationale
CanTp186	Requirement for CanTp module
CanTp190	Requirement for CanTp module
CanTp192	Standard template requirement



Specification of CAN Transport Layer V2.2.2

R3.1 Rev 0001

OT100	Chan dead to contact an arrivant and
CanTp193	Standard template requirement
CanTp204	Requirement for function CanTp_Transmit
CanTp205	Requirement for function CanTp_Transmit
CanTp206	Requirement for function CanTp_Transmit
CanTp208	UML Model linking of CanTp_Init
CanTp209	UML Model linking of imported types
CanTp210	UML Model linking of CanTp_GetVersionInfo
CanTp211	UML Model linking of CanTp_Shutdown
CanTp212	UML Model linking of CanTp_Transmit
CanTp213	UML Model linking of CanTp_MainFunction
CanTp214	UML Model linking of CanTp_RxIndication
CanTp215	UML Model linking of CanTp_TxConfirmation
CanTp216	UML Model linking of mandatory interfaces
CanTp217	UML Model linking of optional interfaces
CanTp218	Gave ID to existing requirement
CanTp219	Gave ID to existing requirement
CanTp220	Gave ID to existing requirement
CanTp221	Gave ID to existing requirement
CanTp227	Gave ID to existing requirement
CanTp228	Gave ID to existing requirement
CanTp229	Gave ID to existing requirement
CanTp230	Gave ID to existing requirement
CanTp233	Gave ID to existing requirement
CanTp234	Gave ID to existing requirement
CanTp235	Gave ID to existing requirement
CanTp236	Gave ID to existing requirement
CanTp237	Gave ID to existing requirement
CanTp238	Gave ID to existing requirement