
## SIGNALS CLASSIFICATION

Signals are classified into the following categories:


- Continuous Time and Discrete Time Signals
- Deterministic and Non-deterministic Signals
- Even and Odd Signals
- Periodic and Aperiodic Signals
- Energy and Power Signals
- Real and Imaginary Signals

### **Continuous Time and Discrete Time Signals**

A signal is said to be continuous when it is defined for all instants of time.

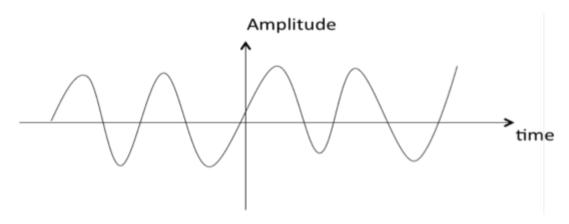

A signal is said to be discrete when it is defined at only discrete instants of time/

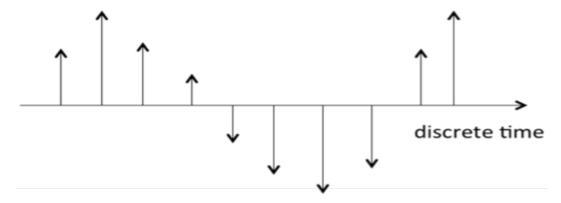


# **Deterministic and Non-deterministic Signals**

A signal is said to be deterministic if there is no uncertainty with respect to its value at any instant of time. Or, signals which can be defined exactly by a mathematical formula are known as deterministic signals.



A signal is said to be non-deterministic if there is uncertainty with respect to its value at some instant of time. Non-deterministic signals are random in nature hence they are called random signals. Random signals cannot be described by a mathematical equation. They are modelled in probabilistic terms.

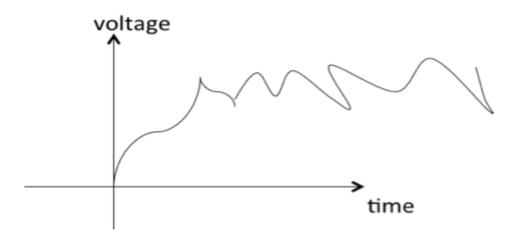

## **Even and Odd Signals**

A signal is said to be even when it satisfies the condition xt = x-t


**Example 1:** t2, t4... cost etc.

Let 
$$xt = t2$$

$$x-t = -t2 = t2 = xt$$

∴, t2 is even function

**Example 2:** As shown in the following diagram, rectangle function xt = x-t so it is also even function.

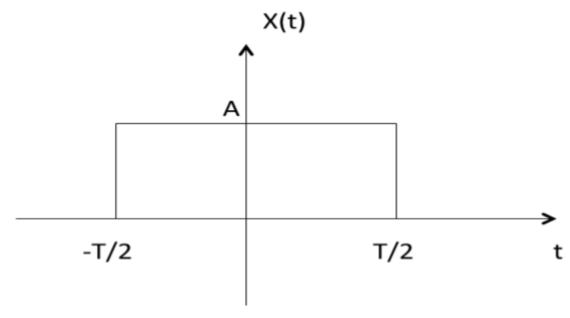

A signal is said to be odd when it satisfies the condition xt = -x-t

Example: t, t3 ... And sin t

Let 
$$xt = \sin t$$

$$x-t = \sin -t = -\sin t = -xt$$

∴, sin t is odd function.

Any function ft can be expressed as the sum of its even function fet and odd function fot.

$$f(t) = f_e(t) + f_0(t)$$

where

$$f_e(t) = \frac{1}{2}[f(t) + f(-t)]$$


### **Periodic and Aperiodic Signals**

A signal is said to be periodic if it satisfies the condition xt = xt + T or xn = xn + N.

Where

T = fundamental time period,

1/T = f = fundamental frequency.

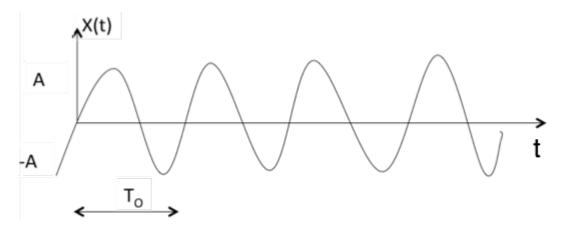

The above signal will repeat for every time interval  $T_0$  hence it is periodic with period  $T_0$ .

## **Energy and Power Signals**

A signal is said to be energy signal when it has finite energy.

Energy 
$$E = \int_{-\infty}^{\infty} x^2(t)dt$$

A signal is said to be power signal when it has finite power.

$$ext{Power}\,P = \lim_{T o\infty}\,rac{1}{2T}\,\int_{-T}^{T}\,x^2(t)dt$$

NOTE:A signal cannot be both, energy and power simultaneously. Also, a signal may be neither energy nor power signal.

Power of energy signal = 0

Energy of power signal  $= \infty$ 

## **Real and Imaginary Signals**

A signal is said to be real when it satisfies the condition xt = x\*t

A signal is said to be odd when it satisfies the condition  $\mathbf{x}t = -\mathbf{x}^*t$ 

Example:

If xt = 3 then x\*t = 3\* = 3 here xt is a real signal.


If xt = 3j then x\*t = 3j\* = -3j = -xt hence xt is a odd signal.

<b>Note:</b> For a real signal, imaginary should be zero.	part should be zero. Simila	rly for an imaginary signal, real part	

Here are a few basic signals:

### **Unit Step Function**


Unit step function is denoted by ut . It is defined as u $t=\left\{egin{array}{ll} 1 & t\geqslant 0 \\ 0 & t<0 \end{array}\right.$ 

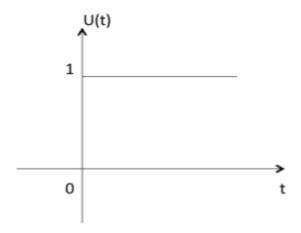

- It is used as best test signal.
- Area under unit step function is unity.


### **Unit Impulse Function**

Impulse function is denoted by  $\delta t.$  and it is defined as  $\delta t = \left\{ egin{array}{ll} 1 & t=0 \\ 0 & t 
eq 0 \end{array} \right.$ 

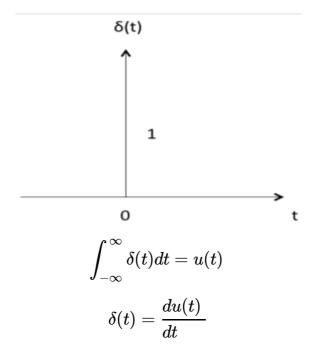

## **Ramp Signal**


Ramp signal is denoted by rt, and it is defined as  $rt = \left\{ egin{array}{ll} t & t \geqslant 0 \\ 0 & t < 0 \end{array} \right.$ 

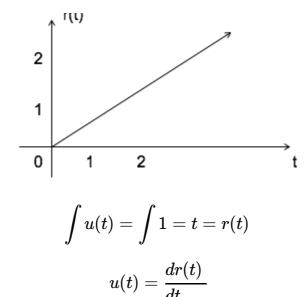

Area under unit ramp is unity.

## **Parabolic Signal**


Parabolic signal can be defined as  $\mathbf{x}t = \left\{ egin{array}{cc} t^2/2 & t\geqslant 0 \\ 0 & t<0 \end{array} 
ight.$ 

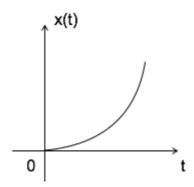

$$egin{aligned} \iint u(t)dt &= \int tdt = rac{t^2}{2} = parabolic signal \ \ &\Rightarrow u(t) = rac{d^2x(t)}{dt^2} \ \ &\Rightarrow r(t) = rac{dx(t)}{dt} \end{aligned}$$

## **Signum Function**

Signum function is denoted as  $\mathrm{sgn}t$ . It is defined as  $\mathrm{sgn}t = \left\{ egin{array}{ll} 1 & t>0 \\ 0 & t=0 \\ -1 & t<0 \end{array} \right.$ 

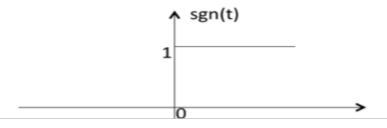


$$sgnt = 2ut - 1$$

## **Exponential Signal**


Exponential signal is in the form of  $xt = e^{\alpha t}$ .

The shape of exponential can be defined by  $\alpha$ .


Case i: if  $\alpha = 0 \rightarrow \mathsf{x} t = e^0 = 1$ 

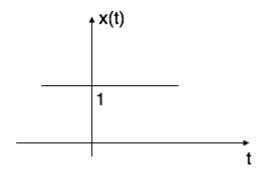

Case ii: if  $\alpha$  < 0 i.e. -ve then  $\mathbf{x}t = e^{-\alpha t}$ . The shape is called decaying exponential.

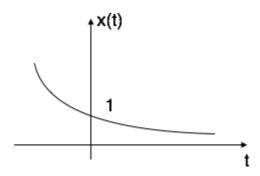


Case iii: if  $\alpha >$  0 i.e. +ve then  $\mathbf{x}t = e^{\alpha t}$  . The shape is called raising exponential.

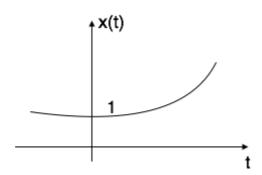

## **Rectangular Signal**


Let it be denoted as  $\mathbf{x}t$  and it is defined as


$$x(t) = A \, rect \left[ \frac{r}{T} \right]$$
ex:  $4 \, rect \left[ \frac{r}{6} \right]$ 

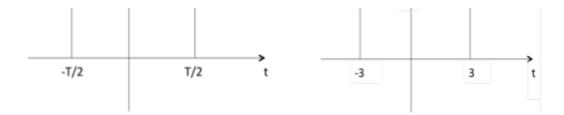

# **Triangular Signal**


Let it be denoted as  $\mathbf{x}t$ 

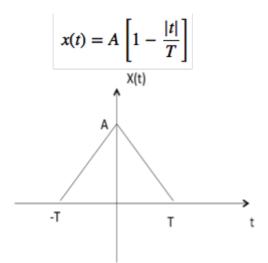

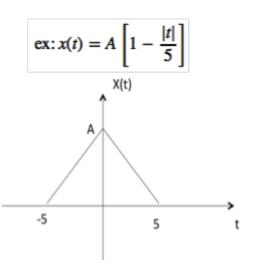

## **Sinusoidal Signal**

Sinusoidal signal is in the form of xt = A cos $\$w_0 \,\pm \phi\$$  or A sin $\$w_0 \,\pm \phi\$$ 

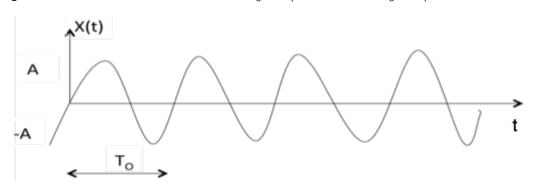


Where  $T_0 = \frac{2\pi}{w_0}$ 

### **Sinc Function**

It is denoted as  ${\sf sinc} t$  and it is defined as  ${\sf sinc}$ 


$$(t)=rac{sin\pi t}{\pi t}$$
  $=0\, ext{for}\,\, ext{t}=\pm 1,\pm 2,\pm 3\dots$ 

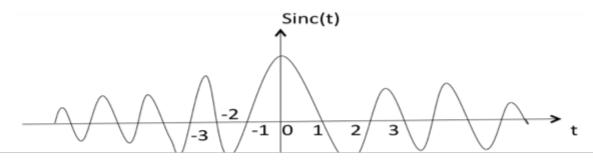

# **Sampling Function**

It is denoted as  $\operatorname{\mathsf{sa}} t$  and it is defined as

$$sa(t)=rac{sint}{t}$$
  $=0 ext{ for } ext{t}=\pm\pi,\,\pm2\pi,\,\pm3\pi\dots$ 

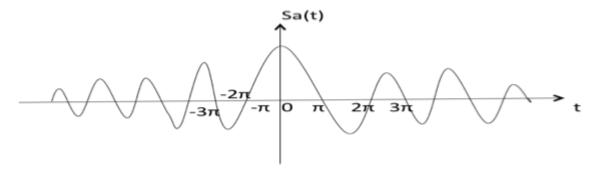

## SIGNALS BASIC OPERATIONS


There are two variable parameters in general:

- 1. Amplitude
- 2. Time

#### The following operation can be performed with amplitude:


### **Amplitude Scaling**

 $\mathsf{C}\,\mathsf{x} t$  is a amplitude scaled version of  $\mathsf{x} t$  whose amplitude is scaled by a factor  $\mathsf{C}.$ 

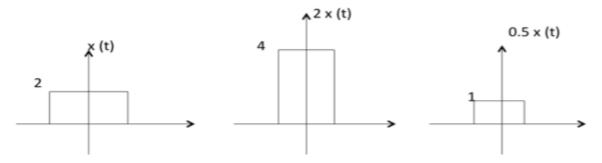

#### **Addition**

Addition of two signals is nothing but addition of their corresponding amplitudes. This can be best explained by using the following example:

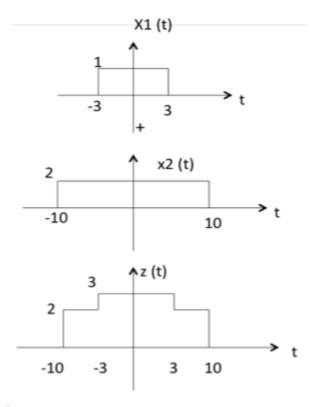

As seen from the diagram above,


$$-10 < t < -3$$
 amplitude of  $zt = x1t + x2t = 0 + 2 = 2$ 

$$-3 < t < 3$$
 amplitude of  $zt = x1t + x2t = 1 + 2 = 3$ 

$$3 < t < 10$$
 amplitude of  $zt = x1t + x2t = 0 + 2 = 2$ 

#### **Subtraction**

subtraction of two signals is nothing but subtraction of their corresponding amplitudes. This can be best explained by the following example:

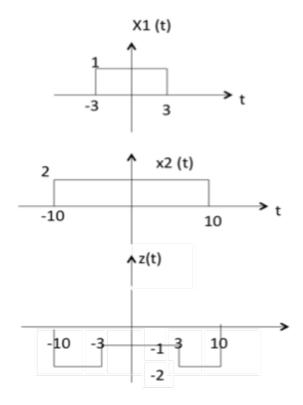

As seen from the diagram above,


-10 < t < -3 amplitude of z t = x1t - x2t = 0 - 2 = -2

-3 < t < 3 amplitude of z t = x1t - x2t = 1 - 2 = -1

3 < t < 10 amplitude of z t = x1t + x2t = 0 - 2 = -2

## Multiplication

Multiplication of two signals is nothing but multiplication of their corresponding amplitudes. This can be best explained by the following example:

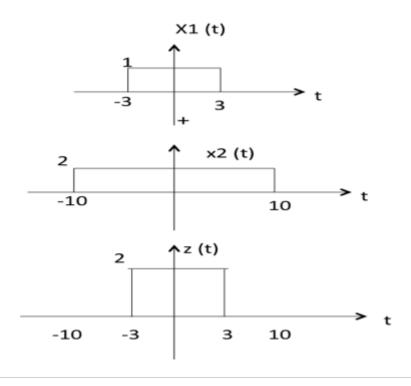

As seen from the diagram above,

-10 < t < -3 amplitude of z 
$$t$$
 = x1 $t$  ×x2 $t$  = 0 ×2 = 0

$$-3 < t < 3$$
 amplitude of z  $t = x1t \times x2t = 1 \times 2 = 2$ 

$$3 < t < 10$$
 amplitude of  $z t = x1t \times x2t = 0 \times 2 = 0$ 


#### The following operations can be performed with time:

## **Time Shifting**

 $x(t \pm t_0)$  is time shifted version of the signal xt.

$$x (t + t_0) \rightarrow negative shift$$

$$x (t - t_0) \rightarrow positive shift$$

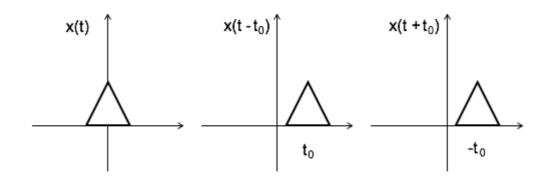


## **Time Scaling**

 $\mathsf{x} A t$  is time scaled version of the signal  $\mathsf{x} t$ . where A is always positive.

$$|A| > 1 \rightarrow$$
 Compression of the signal


$$|A| < 1 \rightarrow$$
 Expansion of the signal

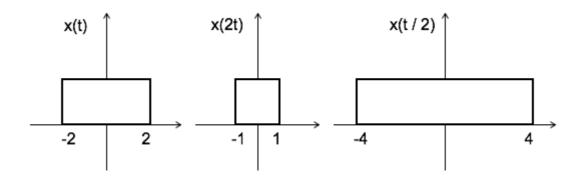

Note: uat = ut time scaling is not applicable for unit step function.

#### **Time Reversal**

 $\mathbf{x}{-}t$  is the time reversal of the signal  $\mathbf{x}t$ .

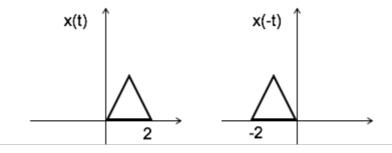

### FOURIER SERIES

**Jean Baptiste Joseph Fourier,** a French mathematician and a physicist; was born in Auxerre, France. He initialized Fourier series, Fourier transforms and their applications to problems of heat transfer and vibrations. The Fourier series, Fourier transforms and Fourier's Law are named in his honour.



Jean Baptiste Joseph Fourier 21 March 1768 - 16 May 1830

#### **Fourier series**

To represent any periodic signal xt, Fourier developed an expression called Fourier series. This is in terms of an infinite sum of sines and cosines or exponentials. Fourier series uses orthogonality condition.

### Fourier Series Representation of Continuous Time Periodic Signals

A signal is said to be periodic if it satisfies the condition x t = x t + T or x n = x n + N.

Where T = fundamental time period,

 $\omega_0$ = fundamental frequency =  $2\pi/T$ 

There are two basic periodic signals:

$$x(t) = \cos \omega_0 t \ sinusoidal \ \&$$

$$x(t) = e^{j\omega_0 t}$$
 complexexponential

These two signals are periodic with period  $T=2\pi/\omega_0$  .

A set of harmonically related complex exponentials can be represented as  $\{\phi_k(t)\}$ 

$$\phi_k(t) = \{e^{jk\omega_0 t}\} = \{e^{jk(\frac{2\pi}{T})t}\} \text{where } k = 0 \pm 1, \pm 2... n \ldots (1)$$

All these signals are periodic with period T

According to orthogonal signal space approximation of a function x t with n, mutually orthogonal functions is given by

$$x(t) = \sum_{k=-\infty}^{\infty} a_k e^{jk\omega_0 t}.\dots.(2)$$

$$=\sum_{k=-\infty}^{\infty}a_kke^{jk\omega_0t}$$

Where  $a_k$  = Fourier coefficient = coefficient of approximation.

This signal xt is also periodic with period T.

Equation 2 represents Fourier series representation of periodic signal xt.

The term k = 0 is constant.

The term  $k=\pm 1$  having fundamental frequency  $\omega_0$  , is called as 1 st harmonics.

The term  $k=\pm 2$  having fundamental frequency  $2\omega_0$  , is called as 2<sup>nd</sup> harmonics, and so on...

The term  $k=\pm n$  having fundamental frequency  $n\omega 0$  , is called as  $\mathsf{n}^\mathsf{th}$  harmonics.

### **Deriving Fourier Coefficient**

We know that  $x(t) = \sum_{k=-\infty}^{\infty} a_k e^{jk\omega_0 t} \ldots \ldots (1)$ 

Multiply  $e^{-jn\omega_0t}$  on both sides. Then

$$a_k(t)e^{-jn\omega_0t}=\sum_{k=-\infty}^\infty a_ke^{jk\omega_0t}.\,e^{-jn\omega_0t}$$

Consider integral on both sides.

$$egin{aligned} \int_0^T x(t)e^{jk\omega_0t}dt &= \int_0^T \sum_{k=-\infty}^\infty a_k e^{jk\omega_0t} \cdot e^{-jn\omega_0t}dt \ &= \int_0^T \sum_{k=-\infty}^\infty a_k e^{j(k-n)\omega_0t} \cdot dt \ &\int_0^T x(t)e^{jk\omega_0t}dt &= \sum_{k=-\infty}^\infty a_k \int_0^T e^{j(k-n)\omega_0t}dt \cdot \ldots \cdot (2) \end{aligned}$$

by Euler's formula,

$$egin{split} \int_0^T e^{j(k-n)\omega_0 t} dt. &= \int_0^T \cos(k-n)\omega_0 dt + j \int_0^T \sin(k-n)\omega_0 t \, dt \ &= \int_0^T e^{j(k-n)\omega_0 t} \, dt. = egin{cases} T & k = n \ 0 & k 
eq n \end{cases} \end{split}$$

Hence in equation 2, the integral is zero for all values of k except at k = n. Put k = n in equation 2.

$$egin{aligned} \Rightarrow \int_0^T x(t) e^{-jn\omega_0 t} dt &= a_n T \ \ \Rightarrow a_n &= rac{1}{T} \int_0^T e^{-jn\omega_0 t} dt \end{aligned}$$

Replace n by k.

$$\Rightarrow a_k = rac{1}{T} \int_0^T e^{-jk\omega_0 t} dt$$

$$\therefore x(t) = \sum_{k=-\infty}^{\infty} a_k e^{j(k-n)\omega_0 t}$$

$$ext{where} a_k = rac{1}{T} \int_0^T e^{-jk\omega_0 t} \, dt$$

### FOURIER SERIES PROPERTIES

These are properties of Fourier series:

### **Linearity Property**

If 
$$x(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{xn} \ \&\ y(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{yn}$$

then linearity property states that

$$\mathrm{a}\,x(t) + \mathrm{b}\,y(t) \stackrel{fourier\,series}{\longleftarrow} \stackrel{coefficient}{\longrightarrow} \mathrm{a}\,f_{xn} + \mathrm{b}\,f_{yn}$$

### **Time Shifting Property**

If 
$$x(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{xn}$$

then time shifting property states that

$$x(t-t_0) \stackrel{fourier\ series}{\longleftarrow} \stackrel{coefficient}{\longrightarrow} e^{-jn\omega_0 t_0} \, f_{xn}$$

### **Frequency Shifting Property**

If 
$$x(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{xn}$$

then frequency shifting property states that

$$e^{jn\omega_0t_0}$$
 .  $x(t) \stackrel{fourier\ series}{\longleftarrow} rac{coefficient}{\longrightarrow} f_{x(n-n_0)}$ 

## **Time Reversal Property**

If 
$$x(t) \xleftarrow{fourier\ series} \stackrel{coefficient}{\longrightarrow} f_{xn}$$

then time reversal property states that

If 
$$x(-t) \stackrel{fourier\ series}{\longleftarrow} \xrightarrow{coefficient} f_{-xn}$$

## **Time Scaling Property**

If 
$$x(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{xn}$$

then time scaling property states that

If 
$$x(at) \xleftarrow{fourier\ series} \stackrel{coefficient}{\longleftrightarrow} f_{xn}$$

Time scaling property changes frequency components from  $\omega_0$  to  $a\omega_0$ .

## **Differentiation and Integration Properties**

If 
$$x(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{xn}$$

then differentiation property states that

If 
$$\frac{dx(t)}{dt} \overset{fourier\ series}{\longleftrightarrow} \frac{coefficient}{jn\omega_0}$$
.  $f_{xn}$ 

& integration property states that

If 
$$\int x(t)dt \stackrel{fourier\ series}{\longleftarrow} rac{coefficient}{jn\omega_0}$$

## **Multiplication and Convolution Properties**

If 
$$x(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{xn}\ \&\ y(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{yn}$$

then multiplication property states that

$$x(t).\,y(t) \overset{fourier\,series}{\longleftarrow} \overset{coefficient}{\longrightarrow} Tf_{xn} * f_{yn}$$

& convolution property states that

$$x(t)*y(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} Tf_{xn}.\ f_{yn}$$

## **Conjugate and Conjugate Symmetry Properties**

If 
$$x(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f_{xn}$$

Then conjugate property states that

$$x*(t) \xleftarrow{fourier\ series} \xrightarrow{coefficient} f*_{xn}$$

Conjugate symmetry property for real valued time signal states that

$$f *_{xn} = f_{-xn}$$

& Conjugate symmetry property for imaginary valued time signal states that

$$f*_{xn} = -f_{-xn}$$

#### **FOURIER SERIES TYPES**

#### Trigonometric Fourier Series TFS

 $\sin n\omega_0 t$  and  $\sin m\omega_0 t$  are orthogonal over the interval  $(t_0,t_0+\frac{2\pi}{\omega_0})$ . So  $\sin \omega_0 t$ ,  $\sin 2\omega_0 t$  forms an orthogonal set. This set is not complete without  $\{\cos n\omega_0 t\}$  because this cosine set is also orthogonal to sine set. So to complete this set we must include both cosine and sine terms. Now the complete orthogonal set contains all cosine and sine terms i.e.  $\{\sin n\omega_0 t, \cos n\omega_0 t\}$  where n=0, 1, 2...

. Any function xt in the interval  $(t_0,t_0+rac{2\pi}{\omega_0})$  can be represented as

$$\begin{split} x(t) &= a_0 \cos 0\omega_0 t + a_1 \cos 1\omega_0 t + a_2 \cos 2\omega_0 t + \ldots + a_n \cos n\omega_0 t + \ldots \\ &\quad + b_0 \sin 0\omega_0 t + b_1 \sin 1\omega_0 t + \ldots + b_n \sin n\omega_0 t + \ldots \\ &= a_0 + a_1 \cos 1\omega_0 t + a_2 \cos 2\omega_0 t + \ldots + a_n \cos n\omega_0 t + \ldots \\ &\quad + b_1 \sin 1\omega_0 t + \ldots + b_n \sin n\omega_0 t + \ldots \end{split}$$

$$\therefore x(t) = a_0 + \sum_{n=1}^{\infty} (a_n \cos n\omega_0 t + b_n \sin n\omega_0 t) \quad (t_0 < t < t_0 + T)$$

The above equation represents trigonometric Fourier series representation of  $\mathsf{x}t$ 

$$\begin{split} \text{Where } a_0 &= \frac{\int_{t_0}^{t_0+T} x(t) \cdot 1 dt}{\int_{t_0}^{t_0+T} 1^2 dt} = \frac{1}{T} \cdot \int_{t_0}^{t_0+T} x(t) dt \\ a_n &= \frac{\int_{t_0}^{t_0+T} x(t) \cdot \cos n\omega_0 t \, dt}{\int_{t_0}^{t_0+T} \cos^2 n\omega_0 t \, dt} \\ b_n &= \frac{\int_{t_0}^{t_0+T} x(t) \cdot \sin n\omega_0 t \, dt}{\int_{t_0}^{t_0+T} \sin^2 n\omega_0 t \, dt} \end{split}$$
 
$$\mathsf{Here} \int_{t_0}^{t_0+T} \cos^2 n\omega_0 t \, dt = \int_{t_0}^{t_0+T} \sin^2 n\omega_0 t \, dt = \frac{T}{2} \\ \therefore a_n &= \frac{2}{T} \cdot \int_{t_0}^{t_0+T} x(t) \cdot \cos n\omega_0 t \, dt \\ b_n &= \frac{2}{T} \cdot \int_{t_0}^{t_0+T} x(t) \cdot \sin n\omega_0 t \, dt \end{split}$$

#### Exponential Fourier Series EFS

Consider a set of complex exponential functions  $\left\{e^{jn\omega_0t}\right\}(n=0,\pm 1,\pm 2...)$  which is orthogonal over the interval  $(t_0,t_0+T)$  . Where  $T=\frac{2\pi}{\omega_0}$  . This is a complete set so it is possible to represent any function ft as shown below

$$f(t) = F_0 + F_1 e^{j\omega_0 t} + F_2 e^{j2\omega_0 t} + \dots + F_n e^{jn\omega_0 t} + \dots$$
$$F_{-1} e^{-j\omega_0 t} + F_{-2} e^{-j2\omega_0 t} + \dots + F_{-n} e^{-jn\omega_0 t} + \dots$$

$$\therefore f(t) = \sum_{n=-\infty}^{\infty} F_n e^{jn\omega_0 t} \qquad (t_0 < t < t_0 + T).....(1)$$

Equation 1 represents exponential Fourier series representation of a signal ft over the interval  $(t_0,t_0+T)$ . The Fourier coefficient is given as

$$egin{align*} F_n &= rac{\int_{t_0}^{t_0+T} f(t) (e^{jn\omega_0 t})^* dt}{\int_{t_0}^{t_0+T} e^{jn\omega_0 t} (e^{jn\omega_0 t})^* dt} \ &= rac{\int_{t_0}^{t_0+T} f(t) e^{-jn\omega_0 t} dt}{\int_{t_0}^{t_0+T} e^{-jn\omega_0 t} e^{jn\omega_0 t} dt} \ &= rac{\int_{t_0}^{t_0+T} f(t) e^{-jn\omega_0 t} dt}{\int_{t_0}^{t_0+T} 1 dt} = rac{1}{T} \int_{t_0}^{t_0+T} f(t) e^{-jn\omega_0 t} dt \end{aligned}$$

$$\therefore F_n = rac{1}{T} \int_t^{t_0+T} f(t) e^{-jn\omega_0 t} dt$$

#### Relation Between Trigonometric and Exponential Fourier Series

Consider a periodic signal  $\mathsf{x}t$ , the TFS & EFS representations are given below respectively

$$x(t) = a_0 + \sum_{n=1}^{\infty} (a_n \cos n \omega_0 t + b_n \sin n \omega_0 t). \ldots (1)$$

$$x(t) = \Sigma_{n=-\infty}^{\infty} F_n e^{jn\omega_0 t}$$

$$=F_0+F_1e^{j\omega_0t}+F_2e^{j2\omega_0t}+\ldots+F_ne^{jn\omega_0t}+\ldots$$

$$F_{-1}e^{-j\omega_0t} + F_{-2}e^{-j2\omega_0t} + \dots + F_{-n}e^{-jn\omega_0t} + \dots$$

 $=F_{0}+F_{1}(\cos \omega_{0}t+j\sin \omega_{0}t)+F_{2}(\cos 2\omega_{0}t+j\sin 2\omega_{0}t)+\ldots+F_{n}(\cos n\omega_{0}t+j\sin n\omega_{0}t)+\ldots+F_{-1}(\cos \omega_{0}t-j\sin \omega_{0}t)+F_{-2}(\cos 2\omega_{0}t-j\sin 2\omega_{0}t)+\ldots+F_{-n}(\cos n\omega_{0}t-j\sin n\omega_{0}t)+\ldots\\=F_{0}+(F_{1}+F_{-1})\cos \omega_{0}t+(F_{2}+F_{-2})\cos 2\omega_{0}t+\ldots+j(F_{1}-F_{-1})\sin \omega_{0}t+j(F_{2}-F_{-2})\sin 2\omega_{0}t+\ldots$ 

$$= F_0 + (F_1 + F_{-1})\cos \omega_0 t + (F_2 + F_{-2})\cos 2\omega_0 t + \dots + j(F_1 - F_{-1})\sin \omega_0 t + j(F_2 - F_{-2})\sin \omega_0 t$$

$$\therefore x(t) = F_0 + \sum_{n=1}^{\infty} ((F_n + F_{-n}) \cos n\omega_0 t + j(F_n - F_{-n}) \sin n\omega_0 t). \dots (2)$$

Compare equation 1 and 2

$$a_0 = F_0$$

$$a_n = F_n + F_{-n}$$

$$b_n = j(F_n - F_{-n})$$

Similarly,

$$F_n=rac{1}{2}(a_n-jb_n)$$

 $F_{-n}=rac{1}{2}(a_n+jb_n)$ 

### FOURIER TRANSFORMS

The main drawback of Fourier series is, it is only applicable to periodic signals. There are some naturally produced signals such as nonperiodic or aperiodic, which we cannot represent using Fourier series. To overcome this shortcoming, Fourier developed a mathematical model to transform signals between time orspatial domain to frequency domain & vice versa, which is called 'Fourier transform'.

Fourier transform has many applications in physics and engineering such as analysis of LTI systems, RADAR, astronomy, signal processing etc.

### **Deriving Fourier transform from Fourier series**

Consider a periodic signal  ${\it ft}$  with period T. The complex Fourier series representation of  ${\it ft}$  is given as

$$egin{align} f(t) &= \sum_{k=-\infty}^\infty a_k e^{jk\omega_0 t} \ &= \sum_{k=-\infty}^\infty a_k e^{jrac{2\pi}{T_0}kt}.\ldots\ldots(1) \end{split}$$

Let  $rac{1}{T_0} = \Delta f$  , then equation 1 becomes

$$f(t) = \sum_{k=-\infty}^{\infty} a_k e^{j2\pi k\Delta ft} \dots (2)$$

but you know that

$$a_k=rac{1}{T_0}\int_{t_0}^{t_0+T}f(t)e^{-jk\omega_0t}\,dt$$

Substitute in equation 2.

$$2 \Rightarrow f(t) = \sum_{k=-\infty}^{\infty} rac{1}{T_0} \int_{t_0}^{t_0+T} f(t) e^{-jk\omega_0 t} \, dt \, e^{j2\pi k\Delta ft}$$

Let 
$$t_0=rac{T}{2}$$

$$= \Sigma_{k=-\infty}^{\infty} \left[ \int_{rac{-T}{2}}^{rac{T}{2}} f(t) e^{-j2\pi k \Delta f t} \, dt 
ight] e^{j2\pi k \Delta f t} \, . \, \Delta f$$

In the limit as  $T \to \infty, \Delta f$  approaches differential  $df, k\Delta f$  becomes a continuous variable f, and summation becomes integration

$$egin{aligned} f(t) &= lim_{T o\infty} \left\{ \Sigma_{k=-\infty}^{\infty} \left[ \int_{rac{-T}{2}}^{rac{T}{2}} f(t) e^{-j2\pi k \Delta f t} \, dt 
ight] e^{j2\pi k \Delta f t} \, . \, \Delta f 
ight\} \ &= \int_{-\infty}^{\infty} \left[ \int_{-\infty}^{\infty} f(t) e^{-j2\pi f t} \, dt 
ight] e^{j2\pi f t} \, df \end{aligned}$$

$$f(t)=\int_{-\infty}^{\infty}F[\omega]e^{j\omega t}d\omega$$

Where 
$$F[\omega] = [\int_{-\infty}^{\infty} \, f(t) e^{-j2\pi f t} \, dt]$$

Fourier transform of a signal

$$f(t)=F[\omega]=[\int_{-\infty}^{\infty}\,f(t)e^{-j\omega t}\,dt]$$


Inverse Fourier Transform is

$$f(t)=\int_{-\infty}^{\infty}F[\omega]e^{j\omega t}d\omega$$

#### **Fourier Transform of Basic Functions**

Let us go through Fourier Transform of basic functions:

#### **FT of GATE Function**

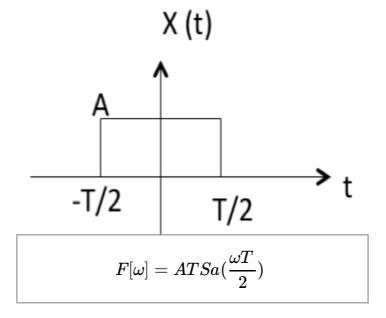

## **FT of Impulse Function**

$$\begin{split} FT[\omega(t)] &= [\int_{-\infty}^{\infty} \delta(t) e^{-j\omega t} dt] \\ &= e^{-j\omega t} \mid t = 0 \\ &= e^0 = 1 \end{split}$$

$$\delta(\omega)=1$$

## FT of Unit Step Function:

$$U(\omega) = \pi \delta(\omega) + 1/j\omega$$

## **FT of Exponentials**

$$e^{-at}u(t) \stackrel{ ext{F.T}}{\longleftrightarrow} 1/(a+j\omega)$$

$$e^{-at}u(t) \stackrel{ ext{F.T}}{\longleftrightarrow} 1/(a+j\omega)$$

$$e^{-a \mid t \mid} \overset{ ext{F.T}}{\longleftrightarrow} rac{2a}{a^2 + \omega^2}$$

$$e^{j\omega_0 t} \overset{ ext{F.T}}{\longleftrightarrow} \delta(\omega - \omega_0)$$

## **FT of Signum Function**

$$sgn(t) \overset{ ext{F.T}}{\longleftrightarrow} rac{2}{j\omega}$$

### **Conditions for Existence of Fourier Transform**

Any function  ${\it ft}$  can be represented by using Fourier transform only when the function satisfies Dirichlet's conditions. i.e.

- $\bullet$  The function ft has finite number of maxima and minima.
- There must be finite number of discontinuities in the signal ft, in the given interval of time.
- It must be absolutely integrable in the given interval of time i.e.

$$\int_{-\infty}^{\infty} |f(t)| dt < \infty$$

### FOURIER TRANSFORMS PROPERTIES

Here are the properties of Fourier Transform:

### **Linearity Property**

If 
$$x(t) \stackrel{\text{F.T}}{\longleftrightarrow} X(\omega)$$

$$\&\; y(t) \stackrel{ ext{F.T}}{\longleftrightarrow} Y(\omega)$$

Then linearity property states that

$$ax(t) + by(t) \overset{ ext{F.T}}{\longleftrightarrow} aX(\omega) + bY(\omega)$$

### **Time Shifting Property**

If 
$$x(t) \stackrel{\mathrm{F.T}}{\longleftrightarrow} X(\omega)$$

Then Time shifting property states that

$$x(t-t_0) \stackrel{ ext{F.T}}{\longleftrightarrow} e^{-j\omega t_0}\,X(\omega)$$

## **Frequency Shifting Property**

If 
$$x(t) \stackrel{\mathrm{F.T}}{\longleftrightarrow} X(\omega)$$

Then frequency shifting property states that

$$e^{j\omega_0 t}$$
 .  $x(t) \overset{ ext{F.T}}{\longleftrightarrow} X(\omega - \omega_0)$ 

## **Time Reversal Property**

If 
$$x(t) \stackrel{\text{F.T}}{\longleftrightarrow} X(\omega)$$

Then Time reversal property states that

$$x(-t) \overset{ ext{F.T}}{\longleftrightarrow} X(-\omega)$$

# **Time Scaling Property**

If 
$$x(t) \stackrel{\text{F.T}}{\longleftrightarrow} X(\omega)$$

Then Time scaling property states that

$$x(at) \frac{1}{|a|} X \frac{\omega}{a}$$

# **Differentiation and Integration Properties**

$$If \ x(t) \stackrel{{\rm F.T}}{\longleftrightarrow} X(\omega)$$

Then Differentiation property states that

$$\frac{dx(t)}{dt} \stackrel{\text{F.T}}{\longleftrightarrow} j\omega. X(\omega)$$

$$rac{d^n x(t)}{dt^n} \stackrel{ ext{F.T}}{\longleftrightarrow} (j\omega)^n . \, X(\omega)$$

and integration property states that

$$\int x(t) dt \stackrel{\text{F.T}}{\longleftrightarrow} \frac{1}{i\omega} X(\omega)$$

$$\iiint \dots \int x(t) dt \overset{\mathrm{F.T}}{\longleftrightarrow} \frac{1}{(i\omega)^n} X(\omega)$$

# **Multiplication and Convolution Properties**

If 
$$x(t) \stackrel{\text{F.T}}{\longleftrightarrow} X(\omega)$$

$$\&\ y(t) \overset{\mathrm{F.T}}{\longleftrightarrow} Y(\omega)$$

Then multiplication property states that

$$x(t).\,y(t) \stackrel{\mathrm{F.T}}{\longleftrightarrow} X(\omega) * Y(\omega)$$

and convolution property states that

$$x(t)*y(t) \stackrel{\mathrm{F.T}}{\longleftrightarrow} \frac{1}{2\pi}X(\omega).Y(\omega)$$


### SIGNALS SAMPLING THEOREM

**Statement:** A continuous time signal can be represented in its samples and can be recovered back when sampling frequency  $f_s$  is greater than or equal to the twice the highest frequency component of message signal. i. e.

$$f_s \leq 2f_m$$
.

**Proof:** Consider a continuous time signal xt. The spectrum of xt is a band limited to  $f_m$  Hz i.e. the spectrum of xt is zero for  $|\omega| > \omega_m$ .

Sampling of input signal xt can be obtained by multiplying xt with an impulse train  $\delta t$  of period  $T_s$ . The output of multiplier is a discrete signal called sampled signal which is represented with yt in the following diagrams:

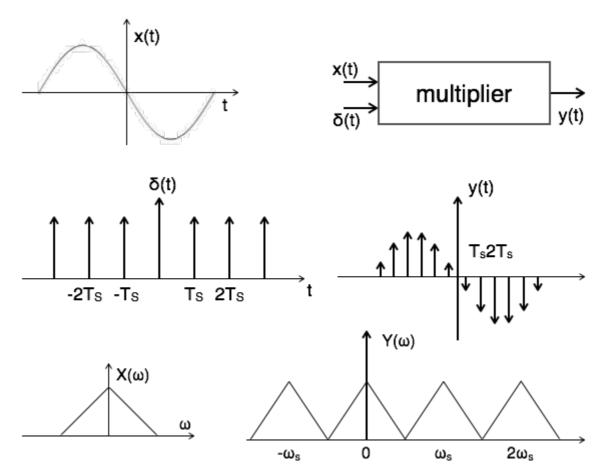

Here, you can observe that the sampled signal takes the period of impulse. The process of sampling can be explained by the following mathematical expression:

Sampled signal 
$$y(t) = x(t). \delta(t) .....(1)$$

The trigonometric Fourier series representation of  $\delta t$  is given by

$$\delta(t) = a_0 + \sum_{n=1}^{\infty} (a_n \cos n\omega_s t + b_n \sin n\omega_s t) \dots (2)$$

Where 
$$a_0=rac{1}{T_s}\int_{rac{-T}{2}}^{rac{T}{2}}\delta(t)dt=rac{1}{T_s}\delta(0)=rac{1}{T_s}$$

$$a_n=rac{2}{T_s}\int_{rac{T}{2}}^{rac{T}{2}}\delta(t)\cos n\omega_s\,dt=rac{2}{T_2}\delta(0)\cos n\omega_s0=rac{2}{T_s}$$

$$b_n=rac{2}{T_s}\int_{rac{T}{2}}^{rac{T}{2}}\delta(t)\sin n\omega_s t\,dt=rac{2}{T_s}\delta(0)\sin n\omega_s 0=0$$

Substitute above values in equation 2.

$$\therefore \delta(t) = rac{1}{T_s} + \sum_{n=1}^{\infty} (rac{2}{T_s} \cos n \omega_s t + 0)$$

Substitute  $\delta t$  in equation 1.


$$egin{aligned} 
ightarrow y(t) &= x(t).\,\delta(t) \ &= x(t)[rac{1}{T_s} + \Sigma_{n=1}^\infty(rac{2}{T_s}\cos n\omega_s t)] \ &= rac{1}{T_s}[x(t) + 2\Sigma_{n=1}^\infty(\cos n\omega_s t)x(t)] \ &y(t) &= rac{1}{T_s}[x(t) + 2\cos \omega_s t.\,x(t) + 2\cos 2\omega_s t.\,x(t) + 2\cos 3\omega_s t.\,x(t) \ldots \ ] \end{aligned}$$

Take Fourier transform on both sides.

$$egin{aligned} Y(\omega) &= rac{1}{T_s}[X(\omega) + X(\omega - \omega_s) + X(\omega + \omega_s) + X(\omega - 2\omega_s) + X(\omega + 2\omega_s) + \dots] \ &\therefore \ Y(\omega) &= rac{1}{T_s} \sum_{n = -\infty}^{\infty} X(\omega - n\omega_s) \qquad where \ n = 0, \pm 1, \pm 2, \dots \end{aligned}$$

To reconstruct xt, you must recover input signal spectrum  $X\omega$  from sampled signal spectrum  $Y\omega$ , which is possible when there is no overlapping between the cycles of  $Y\omega$ .

Possibility of sampled frequency spectrum with different conditions is given by the following diagrams:

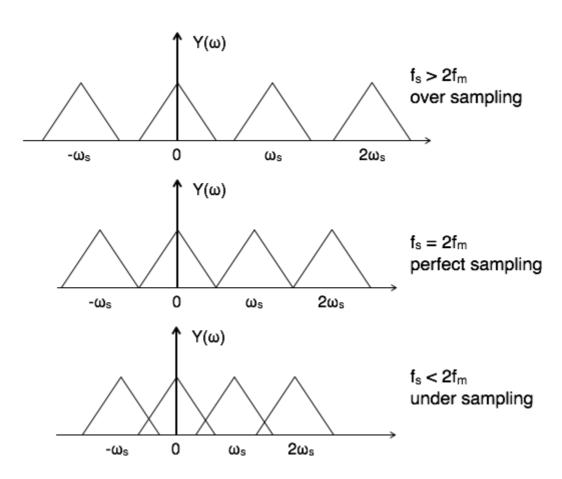

## **Aliasing Effect**

The overlapped region in case of under sampling represents aliasing effect, which can be

## removed by

- considering  $f_s > 2f_m$
- By using anti aliasing filters.


## SIGNALS SAMPLING TECHNIQUES

There are three types of sampling techniques:

- Impulse sampling.
- · Natural sampling.
- Flat Top sampling.

### **Impulse Sampling**

Impulse sampling can be performed by multiplying input signal xt with impulse train  $\sum_{n=-\infty}^\infty \delta(t-nT)$  of period 'T'. Here, the amplitude of impulse changes with respect to amplitude of input signal xt. The output of sampler is given by

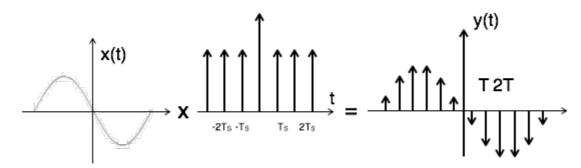

$$y(t)=x(t) imes$$
 impulse train  $=x(t) imes \Sigma_{n=-\infty}^\infty \delta(t-nT)$   $y(t)=y_\delta(t)=\Sigma_{n=-\infty}^\infty x(nt)\delta(t-nT)\dots 1$ 


To get the spectrum of sampled signal, consider Fourier transform of equation 1 on both sides

$$Y(\omega) = rac{1}{T} \Sigma_{n=-\infty}^{\infty} X(\omega - n\omega_s)$$

This is called ideal sampling or impulse sampling. You cannot use this practically because pulse width cannot be zero and the generation of impulse train is not possible practically.

## **Natural Sampling**

Natural sampling is similar to impulse sampling, except the impulse train is replaced by pulse train of period T. i.e. you multiply input signal xt to pulse train  $\sum_{n=-\infty}^{\infty} P(t-nT)$  as shown below

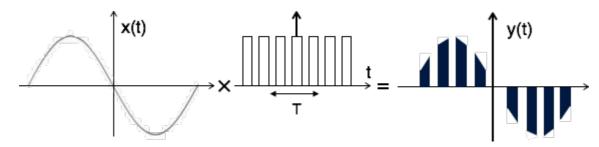

The output of sampler is

$$egin{aligned} y(t) &= x(t) imes ext{pulse train} \ &= x(t) imes p(t) \ &= x(t) imes \Sigma_{n=-\infty}^{\infty} P(t-nT) \dots \dots (1) \end{aligned}$$

The exponential Fourier series representation of pt can be given as

$$egin{aligned} p(t) &= \sum_{n=-\infty}^{\infty} F_n e^{jn\omega_s t} \dots \dots (2) \ &= \sum_{n=-\infty}^{\infty} F_n e^{j2\pi n f_s t} \end{aligned}$$

Where 
$$F_n=rac{1}{T}\int_{rac{T}{2}}^{rac{T}{2}}p(t)e^{-jn\omega_s t}dt$$
  $=rac{1}{TP}(n\omega_s)$ 

Substitute F<sub>n</sub> value in equation 2

$$egin{aligned} \therefore p(t) &= \sum_{n=-\infty}^{\infty} rac{1}{T} P(n\omega_s) e^{jn\omega_s t} \ &= rac{1}{T} \sum_{n=-\infty}^{\infty} P(n\omega_s) e^{jn\omega_s t} \end{aligned}$$

Substitute pt in equation 1

$$egin{aligned} y(t) &= x(t) imes p(t) \ &= x(t) imes rac{1}{T} \Sigma_{n=-\infty}^{\infty} P(n\omega_s) \, e^{jn\omega_s t} \ y(t) &= rac{1}{T} \Sigma_{n=-\infty}^{\infty} P(n\omega_s) \, x(t) \, e^{jn\omega_s t} \end{aligned}$$

To get the spectrum of sampled signal, consider the Fourier transform on both sides.

$$egin{aligned} F.\,T[y(t)] &= F.\,T[rac{1}{T}\Sigma_{n=-\infty}^{\infty}P(n\omega_s)\,x(t)\,e^{jn\omega_s t}] \ &= rac{1}{T}\Sigma_{n=-\infty}^{\infty}P(n\omega_s)\,F.\,T[x(t)\,e^{jn\omega_s t}] \end{aligned}$$


According to frequency shifting property

$$[F.T[x(t) e^{jn\omega_s t}] = X[\omega - n\omega_s]$$

$$\therefore Y[\omega] = \frac{1}{T} \sum_{n=-\infty}^{\infty} P(n\omega_s) X[\omega - n\omega_s]$$


## **Flat Top Sampling**

During transmission, noise is introduced at top of the transmission pulse which can be easily removed if the pulse is in the form of flat top. Here, the top of the samples are flat i.e. they have constant amplitude. Hence, it is called as flat top sampling or practical sampling. Flat top sampling makes use of sample and hold circuit.

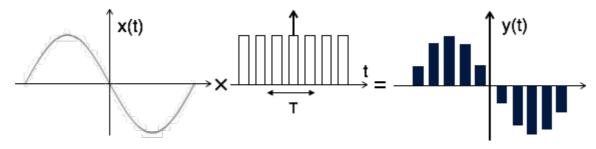

Theoretically, the sampled signal can be obtained by convolution of rectangular pulse pt with ideally sampled signal say  $y_{\delta}t$  as shown in the diagram:

i.e. 
$$y(t) = p(t) imes y_{\delta}(t) \dots \dots (1)$$

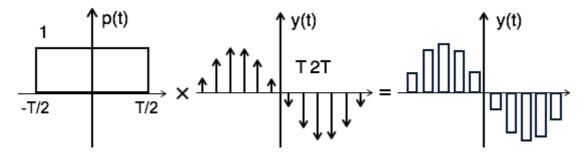

To get the sampled spectrum, consider Fourier transform on both sides for equation 1

$$Y[\omega] = F.T [P(t) imes y_{\delta}(t)]$$

By the knowledge of convolution property,

$$Y[\omega] = P(\omega) Y_{\delta}(\omega)$$

Here 
$$P(\omega) = TSa(rac{\omega T}{2}) = 2\sin\omega T/\omega$$

### **Nyquist Rate**

It is the minimum sampling rate at which signal can be converted into samples and can be recovered back without distortion.

Nyquist rate  $f_N = 2f_m hz$ 

Nyquist interval =  $\frac{1}{fN} = \frac{1}{2fm}$  seconds.

## **Samplings of Band Pass Signals**

In case of band pass signals, the spectrum of band pass signal  $X[\omega] = 0$  for the frequencies outside the range  $f_1 \le f \le f_2$ . The frequency  $f_1$  is always greater than zero. Plus, there is no aliasing effect when  $f_s > 2f_2$ . But it has two disadvantages:

- The sampling rate is large in proportion with f<sub>2</sub>. This has practical limitations.
- The sampled signal spectrum has spectral gaps.

To overcome this, the band pass theorem states that the input signal xt can be converted into its samples and can be recovered back without distortion when sampling frequency  $f_s < 2f_2$ .

Also,

$$f_s=rac{1}{T}=rac{2f_2}{m}$$

Where m is the largest integer  $<\frac{f_2}{B}$ 

and B is the bandwidth of the signal. If  $f_2$ =KB, then

$$f_s = rac{1}{T} = rac{2KB}{m}$$

For band pass signals of bandwidth  $2f_m$  and the minimum sampling rate  $f_s$ = 2~B =  $4f_m$ ,

the spectrum of sampled signal is given by  $Y[\omega]=rac{1}{T}\Sigma_{n=-\infty}^{\infty}\,X[\omega-2nB]$ 

### SYSTEMS CLASSIFICATION

Systems are classified into the following categories:

- Liner and Non-liner Systems
- Time Variant and Time Invariant Systems
- Liner Time variant and Liner Time invariant systems
- Static and Dynamic Systems
- Causal and Non-causal Systems
- Invertible and Non-Invertible Systems
- Stable and Unstable Systems

### **Liner and Non-liner Systems**

A system is said to be linear when it satisfies superposition and homogenate principles. Consider two systems with inputs as  $x_1t$ ,  $x_2t$ , and outputs as  $y_1t$ ,  $y_2t$  respectively. Then, according to the superposition and homogenate principles,

T [
$$a_1 x_1 t + a_2 x_2 t$$
] =  $a_1 T[x_1 t] + a_2 T[x_2 t]$   
 $\therefore$ , T [ $a_1 x_1 t + a_2 x_2 t$ ] =  $a_1 y_1 t + a_2 y_2 t$ 

From the above expression, is clear that response of overall system is equal to response of individual system.

#### **Example:**

$$t = x^2t$$

Solution:

$$y_1 t = T[x_1 t] = x_1^2 t$$

$$y_2 t = T[x_2 t] = x_2^2 t$$

$$T[a_1 x_1 t + a_2 x_2 t] = [a_1 x_1 t + a_2 x_2 t]^2$$

Which is not equal to  $a_1 y_1 t + a_2 y_2 t$ . Hence the system is said to be non linear.

### **Time Variant and Time Invariant Systems**

A system is said to be time variant if its input and output characteristics vary with time. Otherwise, the system is considered as time invariant.

The condition for time invariant system is:

$$y n, t = yn - t$$

The condition for time variant system is:

$$\forall n, t \neq \forall n - t$$

Where y n, t = T[xn - t] = input change

y 
$$n-t$$
 = output change

#### **Example:**

$$yn = x-n$$

$$yn, t = T[xn - t] = x - n - t$$

$$yn - t = x - (n - t) = x - n + t$$

 $\therefore$  y $n, t \neq$  yn - t. Hence, the system is time variant.

## Liner Time variant LTV and Liner Time Invariant LTI Systems

If a system is both liner and time variant, then it is called liner time variant LTV system.

If a system is both liner and time Invariant then that system is called liner time invariant LTI system.

### **Static and Dynamic Systems**

Static system is memory-less whereas dynamic system is a memory system.

**Example 1:** yt = 2 xt

For present value t=0, the system output is y0=2x0. Here, the output is only dependent upon present input. Hence the system is memory less or static.

**Example 2:** yt = 2 xt + 3 xt - 3

For present value t=0, the system output is y0 = 2x0 + 3x-3.

Here x-3 is past value for the present input for which the system requires memory to get this output. Hence, the system is a dynamic system.

### **Causal and Non-Causal Systems**

A system is said to be causal if its output depends upon present and past inputs, and does not depend upon future input.

For non causal system, the output depends upon future inputs also.

**Example 1:** yn = 2 xt + 3 xt - 3

For present value t=1, the system output is y1 = 2x1 + 3x-2.


Here, the system output only depends upon present and past inputs. Hence, the system is causal.

**Example 2:** 
$$yn = 2 xt + 3 xt - 3 + 6xt + 3$$

For present value t=1, the system output is y1 = 2x1 + 3x - 2 + 6x4 Here, the system output depends upon future input. Hence the system is non-causal system.

### Invertible and Non-Invertible systems

A system is said to invertible if the input of the system appears at the output.

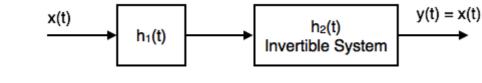

$$YS = XS H1S H2S$$

= 
$$XS H1S \cdot \frac{1}{(H1(S))}$$
 Since  $H2S = 1/H1(S)$ 

$$\therefore$$
, YS = XS

$$\rightarrow$$
 y $t = xt$ 

Hence, the system is invertible.

If  $yt \neq xt$ , then the system is said to be non-invertible.

## **Stable and Unstable Systems**

The system is said to be stable only when the output is bounded for bounded input. For a bounded input, if the output is unbounded in the system then it is said to be unstable.

**Note:** For a bounded signal, amplitude is finite.

**Example 1:** 
$$y t = x^2 t$$

Let the input is  $ut\ units tepbounded input$  then the output yt = u2t = ut = bounded output. Hence, the system is stable.

Example 2: y 
$$t = \int x(t) dt$$

Let the input is u t units tepbounded input then the output y $t = \int u(t) \, dt = \text{ramp signal}$   $unbounded because amplitude of rampisnot finite it goes to infinite when t$$ $\Rightarrow $infinite$$ 

Hence, the system is unstable.

## CONVOLUTION AND CORRELATION

#### Convolution

Convolution is a mathematical operation used to express the relation between input and output of an LTI system. It relates input, output and impulse response of an LTI system as

$$y(t) = x(t) * h(t)$$

Where y t = output of LTI


x t = input of LTI

h t = impulse response of LTI

There are two types of convolutions:

- Continuous convolution
- Discrete convolution

#### **Continuous Convolution**

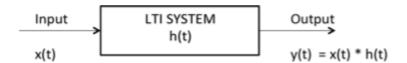

$$y(t) = x(t) * h(t)$$

$$= \int_{-\infty}^{\infty} x(\tau)h(t-\tau)d\tau$$
 $or$ 

$$= \int_{-\infty}^{\infty} x(t-\tau)h(\tau)d\tau$$

#### **Discrete Convolution**

Input 
$$x(n)$$
 LTI SYSTEM Output  $y(n) = x(n) * h(n)$ 

$$egin{aligned} y(n) &= x(n) * h(n) \ &= \Sigma_{k=-\infty}^{\infty} x(k) h(n-k) \ & or \ &= \Sigma_{k=-\infty}^{\infty} x(n-k) h(k) \end{aligned}$$

By using convolution we can find zero state response of the system.

#### **Deconvolution**

Deconvolution is reverse process to convolution widely used in signal and image processing.

## **Properties of Convolution**

## **Commutative Property**

$$x_1(t) * x_2(t) = x_2(t) * x_1(t)$$

### **Distributive Property**

$$x_1(t) * [x_2(t) + x_3(t)] = [x_1(t) * x_2(t)] + [x_1(t) * x_3(t)]$$

## **Associative Property**

$$x_1(t) * [x_2(t) * x_3(t)] = [x_1(t) * x_2(t)] * x_3(t)$$

### **Shifting Property**

$$egin{aligned} x_1(t) * x_2(t) &= y(t) \ &x_1(t) * x_2(t-t_0) &= y(t-t_0) \ &x_1(t-t_0) * x_2(t) &= y(t-t_0) \ &x_1(t-t_0) * x_2(t-t_1) &= y(t-t_0-t_1) \end{aligned}$$

### **Convolution with Impulse**

$$x_1(t)*\delta(t)=x(t)$$
  $x_1(t)*\delta(t-t_0)=x(t-t_0)$ 

### **Convolution of Unit Steps**

$$egin{split} u(t) * u(t) &= r(t) \ &u(t-T_1) * u(t-T_2) &= r(t-T_1-T_2) \ &u(n) * u(n) &= [n+1] u(n) \end{split}$$

# **Scaling Property**

If 
$$x(t)*h(t)=y(t)$$
 then  $x(at)*h(at)=rac{1}{|a|}y(at)$ 

# **Differentiation of Output**

if 
$$y(t)=x(t)*h(t)$$
 then  $\frac{dy(t)}{dt}=\frac{dx(t)}{dt}*h(t)$  or  $\frac{dy(t)}{dt}=x(t)*\frac{dh(t)}{dt}$ 

#### Note:

- Convolution of two causal sequences is causal.
- Convolution of two anti causal sequences is anti causal.
- Convolution of two unequal length rectangles results a trapezium.
- Convolution of two equal length rectangles results a triangle.

• A function convoluted itself is equal to integration of that function.

**Example:** You know that u(t)\*u(t)=r(t)

According to above note,  $u(t)*u(t)=\int u(t)dt=\int 1dt=t=r(t)$ 


Here, you get the result just by integrating u(t).

### **Limits of Convoluted Signal**

If two signals are convoluted then the resulting convoluted signal has following range:

#### Sum of lower limits < t < sum of upper limits

Ex: find the range of convolution of signals given below

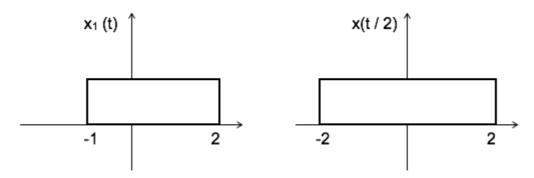

Here, we have two rectangles of unequal length to convolute, which results a trapezium.

The range of convoluted signal is:

#### Sum of lower limits < t < sum of upper limits

$$-1 + -2 < t < 2 + 2$$
  
 $-3 < t < 4$ 

Hence the result is trapezium with period 7.

## **Area of Convoluted Signal**

The area under convoluted signal is given by  $A_y = A_x A_h$ 

Where  $A_X$  = area under input signal

 $A_h$  = area under impulse response

 $A_V$  = area under output signal

Proof: 
$$y(t) = \int_{-\infty}^{\infty} x( au) h(t- au) d au$$

Take integration on both sides

$$\int y(t)dt = \int \int_{-\infty}^{\infty} x(\tau)h(t-\tau)d\tau dt$$
  
=  $\int x(\tau)d\tau \int_{-\infty}^{\infty} h(t-\tau)dt$ 

We know that area of any signal is the integration of that signal itself.


$$A_y = A_x A_h$$

# **DC Component**

DC component of any signal is given by

$$DC component = \frac{area of the signal}{period of the signal}$$

Ex: what is the dc component of the resultant convoluted signal given below?

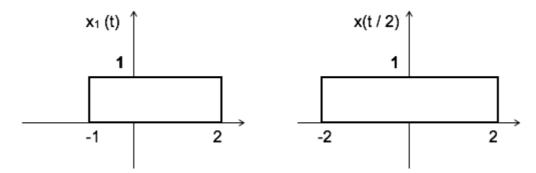

Here area of  $x_1t$  = length  $\times$  breadth = 1  $\times$  3 = 3

area of 
$$x_2t$$
 = length × breadth = 1 × 4 = 4

area of convoluted signal = area of  $x_1t \times area$  of  $x_2t$ 

$$= 3 \times 4 = 12$$

Duration of the convoluted signal = sum of lower limits < t < sum of upper limits

$$= -1 + -2 < t < 2+2$$

$$= -3 < t < 4$$

#### Period=7

 $\therefore$  Dc component of the convoluted signal =  $\frac{\text{area of the signal}}{\text{period of the signal}}$ 

Dc component =  $\frac{12}{7}$ 

#### **Discrete Convolution**

Let us see how to calculate discrete convolution:

#### i. To calculate discrete linear convolution:

Convolute two sequences  $x[n] = \{a,b,c\} \& h[n] = [e,f,g]$ 

	а	b	С
е	ea	eb	ec /
f	fa	fb	fc
g	ga	gb	gc

Convoluted output = [ea, eb+fa, ec+fb+ga, fc+gb, gc]

**Note:** if any two sequences have m, n number of samples respectively, then the resulting convoluted sequence will have [m+n-1] samples.

**Example:** Convolute two sequences  $x[n] = \{1,2,3\} \& h[n] = \{-1,2,2\}$ 

×	1	2	3
-1	-1	<b>-2</b>	/-3
2	2	4	6
2	2	4	6

Convoluted output y[n] = [-1, -2+2, -3+4+2, 6+4, 6]

$$= [-1, 0, 3, 10, 6]$$


Here x[n] contains 3 samples and h[n] is also having 3 samples so the resulting sequence having 3+3-1=5 samples.

#### ii. To calculate periodic or circular convolution:

Periodic convolution is valid for discrete Fourier transform. To calculate periodic convolution all the samples must be real. Periodic or circular convolution is also called as fast convolution.

If two sequences of length m, n respectively are convoluted using circular convolution then resulting sequence having max [m,n] samples.

Ex: convolute two sequences  $x[n] = \{1,2,3\} \& h[n] = \{-1,2,2\}$  using circular convolution

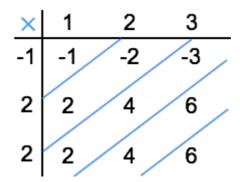

Normal Convoluted output y[n] = [-1, -2+2, -3+4+2, 6+4, 6].

$$= [-1, 0, 3, 10, 6]$$

Here x[n] contains 3 samples and h[n] also has 3 samples. Hence the resulting sequence obtained by circular convolution must have max[3,3]=3 samples.

Now to get periodic convolution result, 1st 3 samples [as the period is 3] of normal convolution is same next two samples are added to 1st samples as shown below:

 $\therefore$  Circular convolution result  $y[n] = [9 \quad 6 \quad 3]$ 

#### Correlation

Correlation is a measure of similarity between two signals. The general formula for correlation is

$$\int_{-\infty}^{\infty} x_1(t) x_2(t-\tau) dt$$

There are two types of correlation:

- · Auto correlation
- Cros correlation

#### **Auto Correlation Function**

It is defined as correlation of a signal with itself. Auto correlation function is a measure of similarity between a signal & its time delayed version. It is represented with R\$ $\tau$ \$.

Consider a signals xt. The auto correlation function of xt with its time delayed version is given by

$$R_{11}( au) = R( au) = \int_{-\infty}^{\infty} x(t) x(t- au) dt \qquad ext{[+ve shift]}$$
  $= \int_{-\infty}^{\infty} x(t) x(t+ au) dt \qquad ext{[-ve shift]}$ 

Where  $\tau$  = searching or scanning or delay parameter.

If the signal is complex then auto correlation function is given by

$$R_{11}( au) = R( au) = \int_{-\infty}^{\infty} x(t)x*(t- au)dt \qquad ext{[+ve shift]}$$
  $= \int_{-\infty}^{\infty} x(t+ au)x*(t)dt \qquad ext{[-ve shift]}$ 

## **Properties of Auto-correlation Function of Energy Signal**

- Auto correlation exhibits conjugate symmetry i.e. R  $\$\tau\$= \mathsf{R}^*-\$\tau\$$
- Auto correlation function of energy signal at origin i.e. at  $\tau$ =0 is equal to total energy of that signal, which is given as:

$$R 0 = E = \int_{-\infty}^{\infty} |x(t)|^2 dt$$

- Auto correlation function  $\infty \frac{1}{\tau}$ ,
- Auto correlation function is maximum at  $\tau$ =0 i.e |R  $\tau$  |  $\leq$  R  $\tau$
- Auto correlation function and energy spectral densities are Fourier transform pairs. i.e.

$$F.\,T\left[R( au)
ight]=\Psi(\omega)$$

$$\Psi(\omega) = \int_{-\infty}^{\infty} R( au) e^{-j\omega au} d au$$

• 
$$R(\tau) = x(\tau) * x(-\tau)$$

## **Auto Correlation Function of Power Signals**

The auto correlation function of periodic power signal with period T is given by

$$R( au) = \lim_{T o \infty} rac{1}{T} \int_{rac{-T}{2}}^{rac{T}{2}} x(t) x st (t- au) dt$$

#### **Properties**

- Auto correlation of power signal exhibits conjugate symmetry i.e. R( au)=R\*(- au)
- Auto correlation function of power signal at au=0 atorigin is equal to total power of that signal. i.e.

$$R(0) = \rho$$

- Auto correlation function of power signal  $\infty \frac{1}{\tau}$ ,
- Auto correlation function of power signal is maximum at  $\tau = 0$  i.e.,

$$|R( au)| \leq R(0) \, \forall \, au$$

• Auto correlation function and power spectral densities are Fourier transform pairs. i.e.,

$$F.T[R( au)] = s(\omega)$$

$$s(\omega) = \int_{-\infty}^{\infty} R(\tau) e^{-j\omega \tau} d\tau$$

• 
$$R(\tau) = x(\tau) * x(-\tau)$$

### **Density Spectrum**

Let us see density spectrums:

#### **Energy Density Spectrum**

Energy density spectrum can be calculated using the formula:

$$E=\int_{-\infty}^{\infty}|\,x(f)\,|^2df$$

## **Power Density Spectrum**

Power density spectrum can be calculated by using the formula:

$$P = \sum_{n=-\infty}^{\infty} |C_n|^2$$

#### **Cross Correlation Function**

Cross correlation is the measure of similarity between two different signals.

Consider two signals  $\mathsf{x}_1t$  and  $\mathsf{x}_2t$ . The cross correlation of these two signals  $R_{12}( au)$  is given by

$$egin{aligned} R_{12}( au) &= \int_{-\infty}^{\infty} x_1(t) x_2(t- au) \, dt & \quad ext{[+ve shift]} \ &= \int_{-\infty}^{\infty} x_1(t+ au) x_2(t) \, dt & \quad ext{[-ve shift]} \end{aligned}$$

If signals are complex then

$$egin{aligned} R_{12}( au) &= \int_{-\infty}^{\infty} x_1(t) x_2^*(t- au) \, dt & \quad ext{[+ve shift]} \ &= \int_{-\infty}^{\infty} x_1(t+ au) x_2^*(t) \, dt & \quad ext{[-ve shift]} \end{aligned}$$

$$egin{aligned} R_{21}( au) &= \int_{-\infty}^{\infty} x_2(t) x_1^*(t- au) \, dt & \quad ext{[+ve shift]} \ &= \int_{-\infty}^{\infty} x_2(t+ au) x_1^*(t) \, dt & \quad ext{[-ve shift]} \end{aligned}$$

### **Properties of Cross Correlation Function of Energy and Power Signals**

- ullet Auto correlation exhibits conjugate symmetry i.e.  $R_{12}( au)=R_{21}^*(- au)$  .
- Cross correlation is not commutative like convolution i.e.

$$R_{12}( au) 
eq R_{21}(- au)$$

• If R $_{12}0$  = 0 means, if  $\int_{-\infty}^{\infty}x_1(t)x_2^*(t)dt=0$  , then the two signals are said to be orthogonal.

For power signal if  $\lim_{T o\infty} rac{1}{T} \int_{-\frac{T}{2}}^{\frac{T}{2}} x(t) x^*(t) \, dt$  then two signals are said to be orthogonal.

• Cross correlation function corresponds to the multiplication of spectrums of one signal to the complex conjugate of spectrum of another signal. i.e.

$$R_{12}( au) \leftarrow \rightarrow X_1(\omega) X_2^*(\omega)$$

This also called as correlation theorem.

#### **Parsvel's Theorem**

Parsvel's theorem for energy signals states that the total energy in a signal can be obtained by the spectrum of the signal as

$$E = \frac{1}{2\pi} \int_{-\infty}^{\infty} |X(\omega)|^2 d\omega$$

**Note:** If a signal has energy E then time scaled version of that signal xat has energy E/a.

## **DISTORTION LESS TRANSMISSION**

Transmission is said to be distortion-less if the input and output have identical wave shapes. i.e., in distortion-less transmission, the input xt and output yt satisfy the condition:

$$y t = Kx(t - t_d)$$

Where  $t_d$  = delay time and

k = constant.

Take Fourier transform on both sides

$$FT[ y t] = FT[Kx(t - t_d)]$$
$$= K FT[x(t - t_d)]$$

According to time shifting property,


= 
$$KXwe^{-j\omega t_d}$$

$$\therefore Y(w) = KX(w)e^{-j\omega t_d}$$


Thus, distortionless transmission of a signal  $\mathbf{x}t$  through a system with impulse response  $\mathbf{h}t$  is achieved when

$$|H(\omega)| = K \text{ and } \quad amplitude response$$

$$\Phi(\omega) = -\omega t_d = -2\pi f t_d \quad phase response$$

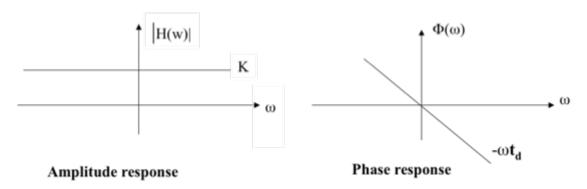

A physical transmission system may have amplitude and phase responses as shown below:

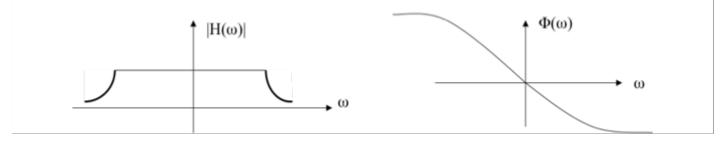

# LAPLACE TRANSFORMS LT

Complex Fourier transform is also called as Bilateral Laplace Transform. This is used to solve differential equations. Consider an LTI system exited by a complex exponential signal of the form  $x = Ge^{st}$ .

Where s = any complex number =  $\sigma + j\omega$ ,

 $\sigma$  = real of s, and

 $\omega$  = imaginary of s

The response of LTI can be obtained by the convolution of input with its impulse response i.e.

$$egin{aligned} y(t) &= x(t) imes h(t) = \int_{-\infty}^{\infty} \ h( au) \, x(t- au) d au \ &= \int_{-\infty}^{\infty} \ h( au) \, Ge^{s(t- au)} \, d au \ &= Ge^{st} \cdot \int_{-\infty}^{\infty} \ h( au) \, e^{(-s au)} \, d au \end{aligned}$$
  $egin{aligned} y(t) &= Ge^{st} \cdot H(S) = x(t) \cdot H(S) \end{aligned}$ 

Where HS = Laplace transform of  $h( au) = \int_{-\infty}^{\infty} h( au) e^{-s au} d au$ 

Similarly, Laplace transform of  $x(t) = X(S) = \int_{-\infty}^{\infty} x(t) e^{-st} \, dt \ldots \ldots (1)$ 

### **Relation between Laplace and Fourier transforms**

Laplace transform of  $x(t) = X(S) = \int_{-\infty}^{\infty} x(t) e^{-st} \, dt$ 

Substitute  $s = \sigma + j\omega$  in above equation.

$$egin{aligned} 
ightarrow X(\sigma+j\omega) &= \int_{-\infty}^{\infty} \, x(t) e^{-(\sigma+j\omega)t} \, dt \ &= \int_{-\infty}^{\infty} [x(t) e^{-\sigma t}] e^{-j\omega t} \, dt \ &dots \cdot X(S) = F. \, T[x(t) e^{-\sigma t}] \ldots \ldots (2) \ X(S) &= X(\omega) \qquad for \, s = j\omega \end{aligned}$$

### **Inverse Laplace Transform**

You know that 
$$X(S) = F.\, T[x(t)e^{-\sigma t}\,]$$

$$egin{aligned} 
ightarrow x(t)e^{-\sigma t} &= F.\,T^{-1}[X(S)] = F.\,T^{-1}[X(\sigma+j\omega)] \ &= rac{1}{2}\pi\int_{-\infty}^{\infty}X(\sigma+j\omega)e^{j\omega t}\,d\omega \ &x(t) = e^{\sigma t}rac{1}{2\pi}\int_{-\infty}^{\infty}X(\sigma+j\omega)e^{j\omega t}\,d\omega \ &= rac{1}{2\pi}\int_{-\infty}^{\infty}X(\sigma+j\omega)e^{(\sigma+j\omega)t}\,d\omega \ldots \ldots \end{cases}$$

Here,  $\sigma + j\omega = s$ 

$$jd\omega=ds
ightarrow d\omega=ds/j$$

$$\therefore x(t) = \frac{1}{2\pi i} \int_{-\infty}^{\infty} X(s) e^{st} ds \dots (4)$$

Equations 1 and 4 represent Laplace and Inverse Laplace Transform of a signal xt.

### **Conditions for Existence of Laplace Transform**

Dirichlet's conditions are used to define the existence of Laplace transform. i.e.

- The function ft has finite number of maxima and minima.
- There must be finite number of discontinuities in the signal ft, in the given interval of time.
- It must be absolutely integrable in the given interval of time. i.e.

$$\int_{-\infty}^{\infty} |f(t)| dt < \infty$$

#### **Initial and Final Value Theorems**

If the Laplace transform of an unknown function xt is known, then it is possible to determine the initial and the final values of that unknown signal i.e. xt at  $t=0^+$  and  $t=\infty$ .

#### **Initial Value Theorem**

**Statement:** if xt and its 1st derivative is Laplace transformable, then the initial value of xt is given by

$$x(0^+) = \lim_{s o\infty} SX(S)$$

#### **Final Value Theorem**

**Statement:** if xt and its 1st derivative is Laplace transformable, then the final value of xt is given by

$$x(\infty) = \lim_{s o\infty} SX(S)$$

### LAPLACE TRANSFORMS PROPERTIES

The properties of Laplace transform are:

### **Linearity Property**

If 
$$x(t) \overset{ ext{L.T}}{\longleftrightarrow} X(s)$$

& 
$$y(t) \stackrel{\text{L.T}}{\longleftrightarrow} Y(s)$$

Then linearity property states that

$$ax(t) + by(t) \stackrel{ ext{L.T}}{\longleftrightarrow} aX(s) + bY(s)$$

### **Time Shifting Property**

If 
$$x(t) \overset{ ext{L.T}}{\longleftrightarrow} X(s)$$

Then time shifting property states that

$$x(t-t_0) \overset{ ext{L.T}}{\longleftrightarrow} e^{-st_0} X(s)$$

# **Frequency Shifting Property**

If 
$$x(t) \overset{ ext{L.T}}{\longleftrightarrow} X(s)$$

Then frequency shifting property states that

$$e^{s_0t}$$
.  $x(t) \stackrel{ ext{L.T}}{\longleftrightarrow} X(s-s_0)$ 

## **Time Reversal Property**

If 
$$x(t) \overset{ ext{L.T}}{\longleftrightarrow} X(s)$$

Then time reversal property states that

$$x(-t) \stackrel{ ext{L.T}}{\longleftrightarrow} X(-s)$$

# **Time Scaling Property**

If 
$$x(t) \overset{ ext{L.T}}{\longleftrightarrow} X(s)$$

Then time scaling property states that

$$x(at) \overset{ ext{L.T}}{\longleftrightarrow} rac{1}{|a|} X(rac{s}{a})$$

# **Differentiation and Integration Properties**

If 
$$x(t) \overset{ ext{L.T}}{\longleftrightarrow} X(s)$$

Then differentiation property states that

$$\frac{dx(t)}{dt} \stackrel{\text{L.T}}{\longleftrightarrow} s. X(s)$$

$$rac{d^n x(t)}{dt^n} \stackrel{ ext{L.T}}{\longleftrightarrow} (s)^n.\, X(s)$$

The integration property states that

$$\int x(t)dt \stackrel{ ext{L.T}}{\longleftrightarrow} rac{1}{s}X(s)$$

$$\iiint \dots \int x(t)dt \stackrel{\text{L.T}}{\longleftrightarrow} \frac{1}{s^n} X(s)$$

# **Multiplication and Convolution Properties**

If 
$$x(t) \overset{ ext{L.T}}{\longleftrightarrow} X(s)$$

and 
$$y(t) \overset{ ext{L.T}}{\longleftrightarrow} Y(s)$$

Then multiplication property states that

$$x(t).\,y(t) \overset{ ext{L.T}}{\longleftrightarrow} rac{1}{2\pi j} X(s) * Y(s)$$

The convolution property states that


$$x(t)*y(t) \stackrel{\mathrm{L.T}}{\longleftrightarrow} X(s). Y(s)$$

# REGION OF CONVERGENCE ROC

The range variation of  $\sigma$  for which the Laplace transform converges is called region of convergence.

## **Properties of ROC of Laplace Transform**

• ROC contains strip lines parallel to  $j\omega$  axis in s-plane.

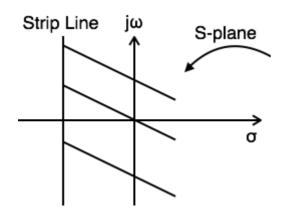

- ullet If xt is absolutely integral and it is of finite duration, then ROC is entire s-plane.
- If xt is a right sided sequence then ROC : Re{s} >  $\sigma_0$ .
- If xt is a left sided sequence then ROC : Re{s} <  $\sigma_0$ .
- ullet If xt is a two sided sequence then ROC is the combination of two regions.


ROC can be explained by making use of examples given below:

## Example 1: Find the Laplace transform and ROC of $x(t)=e^{-at}\;u(t)$

$$L.T[x(t)] = L.T[e^{-at} u(t)] = \frac{1}{S+a}$$

Re > -a

ROC: Res >> -a

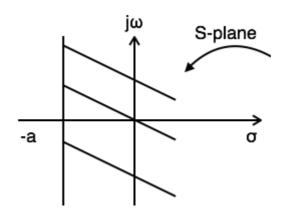


Example 2: Find the Laplace transform and ROC of  $x(t)=e^{at}u(-t)$ 

$$[L.T[x(t)] = L.T[e^{at}u(t)] = \frac{1}{S-a}$$

Res < a

ROC: Res < a

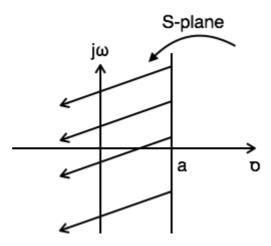


Example 3: Find the Laplace transform and ROC of  $x(t)=e^{-at}u(t)+e^{at}u(-t)$ 

$$[L.\,T[x(t)] = L.\,T[e^{-at}u(t) + e^{at}u(-t)] = rac{1}{S+a} + rac{1}{S-a}$$

For 
$$rac{1}{S+a}Re\{s\}>-a$$

For 
$$rac{1}{S-a}Re\{s\} < a$$

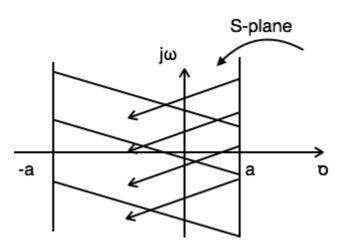


Referring to the above diagram, combination region lies from -a to a. Hence,


$$ROC: -a < Res < a$$

## **Causality and Stability**


• For a system to be causal, all poles of its transfer function must be right half of s-plane.

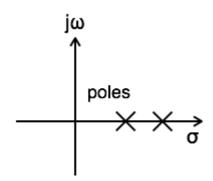


• A system is said to be stable when all poles of its transfer function lay on the left half of splane.

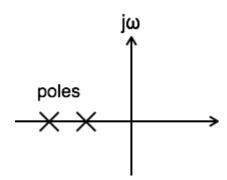

• A system is said to be unstable when at least one pole of its transfer function is shifted to the right half of s-plane.

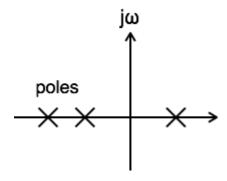

ullet A system is said to be marginally stable when at least one pole of its transfer function lies on the j $\omega$  axis of s-plane.

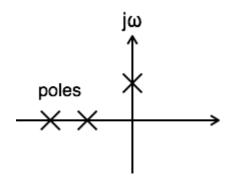

### **ROC of Basic Functions**

$\mathbf{f}t$	Fs	ROC
u(t)	$\frac{1}{s}$	ROC: Re{s} > 0
tu(t)	$rac{1}{s^2}$	$ROC:Re\{s\} > 0$
$t^nu(t)$	$\frac{n!}{s^{n+1}}$	$ROC:Re\{s\} > 0$
$e^{at}u(t)$	$\frac{1}{s-a}$	ROC:Re{s} > a

$$e^{-at}\,u(t)$$
  $\dfrac{1}{s+a}$  ROC:Re{s} > -a

$$e^{at}\,u(t)$$
  $-rac{1}{s-a}$  ROC:Re{s} < a

$$\frac{e^{-at}}{u(-t)} \qquad -\frac{1}{s+a} \qquad \text{ROC:Re\{s\}} < \text{-a}$$

$$t\,e^{at}\,u(t) \qquad \frac{1}{(s-a)^2} \qquad \text{ROC:Re\{s\}} > \text{a}$$

$$\begin{array}{ccc} t^n e^{at} & & \frac{n!}{(s)} & & \text{ROC:Re\{s\} > a} \\ u(t) & & -a)^{n+1} & & \end{array}$$

$$\frac{t\,e^{-at}}{u(t)} \qquad \frac{1}{(s+a)^2} \quad \text{ROC:Re\{s\} > -a}$$

$$\begin{array}{ll} t^n\,e^{-at} & & \frac{n!}{(s)} \\ u(t) & & +a)^{n+1} \end{array} \qquad \text{ROC:Re}\{\text{s}\} > \text{-a}$$

$$egin{array}{ll} t\,e^{at} & & -rac{1}{(s-a)^2} & ext{ROC:Re\{s\}} < ext{a} \end{array}$$

$$t^n\,e^{at}$$
  $-rac{n!}{(s)}$  ROC:Re{s} < a  $-a)^{n+1}$ 

$$\frac{t\,e^{-at}}{u(-t)} \qquad -\frac{1}{(s+a)^2} \quad \text{ROC:Re\{s\}} < \text{-a}$$

$$egin{array}{ll} t^n\,e^{-at} & -rac{n!}{(s)} & & & & & \\ u(-t) & & +a)^{n+1} & & & & & \end{array}$$
 ROC:Re{s} < -a

$$e^{-at}\cos \qquad rac{s+a}{(s+a)^2} \ + b^2$$

$$e^{-at}\sin egin{array}{c} b \ (s+a)^2 \ +b^2 \end{array}$$

## Z-TRANSFORMS ZT

Analysis of continuous time LTI systems can be done using z-transforms. It is a powerful mathematical tool to convert differential equations into algebraic equations.

The bilateral two sided z-transform of a discrete time signal xn is given as

$$Z.T[x(n)] = X(Z) = \sum_{n=-\infty}^{\infty} x(n)z^{-n}$$

The unilateral one sided z-transform of a discrete time signal xn is given as

$$Z.T[x(n)] = X(Z) = \sum_{n=0}^{\infty} x(n)z^{-n}$$

Z-transform may exist for some signals for which Discrete Time Fourier Transform DTFT does not exist.

#### **Concept of Z-Transform and Inverse Z-Transform**

Z-transform of a discrete time signal xn can be represented with XZ, and it is defined as

$$X(Z) = \sum_{n=-\infty}^{\infty} x(n)z^{-n} \dots (1)$$

If  $Z=re^{j\omega}$  then equation 1 becomes

$$egin{aligned} X(re^{j\omega}) &= \Sigma_{n=-\infty}^{\infty} x(n) [re^{j\omega}]^{-n} \ &= \Sigma_{n=-\infty}^{\infty} x(n) [r^{-n}] e^{-j\omega n} \end{aligned}$$

$$X(re^{j\omega})=X(Z)=F.\,T[x(n)r^{-n}]\ldots\ldots(2)$$

The above equation represents the relation between Fourier transform and Z-transform.

$$|X(Z)|_{z=e^{j\omega}}=F.\,T[x(n)].$$

#### **Inverse Z-transform**

$$egin{aligned} X(re^{j\omega}) &= F.\,T[x(n)r^{-n}] \ x(n)r^{-n} &= F.\,T^{-1}[X(re^{j\omega}] \ x(n) &= r^n\,F.\,T^{-1}[X(re^{j\omega})] \ &= r^nrac{1}{2\pi}\int X(re^j\omega)e^{j\omega n}\,d\omega \ &= rac{1}{2\pi}\int X(re^j\omega)[re^{j\omega}]^n\,d\omega \ldots \qquad (3) \end{aligned}$$

Substitute  $re^{j\omega}=z$  .

$$dz=jre^{j\omega}d\omega=jzd\omega$$

$$d\omega = rac{1}{j}z^{-1}dz$$

Substitute in equation 3.

$$3\,
ightarrow\,x(n)=rac{1}{2\pi}\int X(z)z^nrac{1}{j}z^{-1}dz=rac{1}{2\pi j}\int X(z)z^{n-1}dz$$

$$X(Z) = \sum_{n=-\infty}^{\infty} \, x(n) z^{-n}$$

$$x(n)=rac{1}{2\pi j}\int\,X(z)z^{n-1}dz$$

### **Z-TRANSFORMS PROPERTIES**

Z-Transform has following properties:

### **Linearity Property**

If 
$$x(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z)$$

and 
$$y(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} Y(Z)$$

Then linearity property states that

$$a\,x(n) + b\,y(n) \stackrel{\mathrm{Z.T}}{\longleftrightarrow} a\,X(Z) + b\,Y(Z)$$

### **Time Shifting Property**

If 
$$x(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z)$$

Then Time shifting property states that

$$x(n-m) \overset{\mathrm{Z.T}}{\longleftrightarrow} z^{-m} X(Z)$$

## **Multiplication by Exponential Sequence Property**

If 
$$x(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z)$$

Then multiplication by an exponential sequence property states that

$$a^n \cdot x(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z/a)$$

# **Time Reversal Property**

If 
$$x(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z)$$

Then time reversal property states that

$$x(-n) \stackrel{\mathrm{Z.T}}{\longleftrightarrow} X(1/Z)$$

# Differentiation in Z-Domain OR Multiplication by n Property

If 
$$x(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z)$$

Then multiplication by n or differentiation in z-domain property states that

$$n^k x(n) \overset{ ext{Z.T}}{\longleftrightarrow} [-1]^k z^k rac{d^k X(Z)}{dZ^K}$$

# **Convolution Property**

If 
$$x(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z)$$

and 
$$y(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} Y(Z)$$

Then convolution property states that

$$x(n) * y(n) \stackrel{\mathrm{Z.T}}{\longleftrightarrow} X(Z). Y(Z)$$

### **Correlation Property**

If 
$$x(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z)$$

and 
$$y(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} Y(Z)$$

Then correlation property states that

$$x(n) \otimes y(n) \overset{\mathrm{Z.T}}{\longleftrightarrow} X(Z). Y(Z^{-1})$$

#### **Initial Value and Final Value Theorems**

Initial value and final value theorems of z-transform are defined for causal signal.

#### **Initial Value Theorem**

For a causal signal xn, the initial value theorem states that

$$x(0) = \lim_{z o \infty} X(z)$$

This is used to find the initial value of the signal without taking inverse z-transform

#### **Final Value Theorem**

For a causal signal xn, the final value theorem states that

$$x(\infty) = \lim_{z o 1} [z-1] X(z)$$

This is used to find the final value of the signal without taking inverse z-transform.

# Region of Convergence ROC of Z-Transform

The range of variation of z for which z-transform converges is called region of convergence of z-transform.

## **Properties of ROC of Z-Transforms**

- ROC of z-transform is indicated with circle in z-plane.
- ROC does not contain any poles.
- If xn is a finite duration causal sequence or right sided sequence, then the ROC is entire z-plane except at z=0.
- If xn is a finite duration anti-causal sequence or left sided sequence, then the ROC is entire z-plane except at  $z = \infty$ .
- If xn is a infinite duration causal sequence, ROC is exterior of the circle with radius a. i.e. |z| > a.
- If xn is a infinite duration anti-causal sequence, ROC is interior of the circle with radius a. i.e. |z| < a.
- If xn is a finite duration two sided sequence, then the ROC is entire z-plane except at z=0 &  $z=\infty$ .


The concept of ROC can be explained by the following example:

**Example 1:** Find z-transform and ROC of  $a^nu[n] + a^-nu[-n-1]$ 


$$Z.\,T[a^nu[n]] + Z.\,T[a^{-n}u[-n-1]] = rac{Z}{Z-a} + rac{Z}{Zrac{-1}{a}}$$

$$ROC: |z| > a \qquad ROC: |z| < rac{1}{a}$$

The plot of ROC has two conditions as a > 1 and a < 1, as you do not know a.

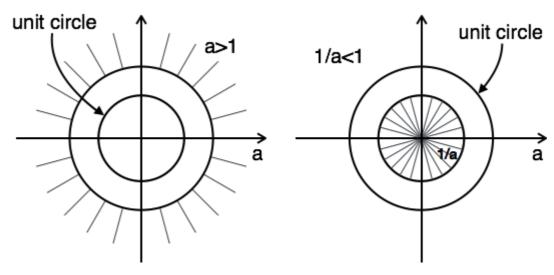

In this case, there is no combination ROC.

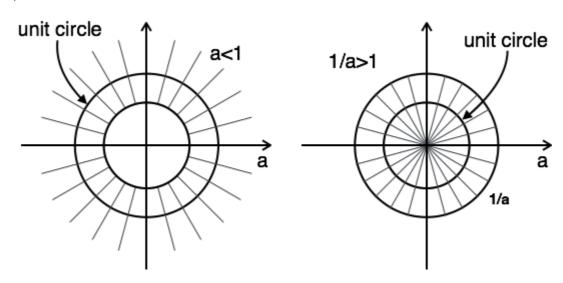

Here, the combination of ROC is from  $a<|z|<rac{1}{a}$ 

Hence for this problem, z-transform is possible when a < 1.

## **Causality and Stability**

## Causality condition for discrete time LTI systems is as follows:

A discrete time LTI system is causal when

- ROC is outside the outermost pole.
- In The transfer function H[Z], the order of numerator cannot be grater than the order of denominator

## **Stability Condition for Discrete Time LTI Systems**

A discrete time LTI system is stable when

- its system function H[Z] include unit circle |z|=1.
- all poles of the transfer function lay inside the unit circle |z|=1.

# **Z-Transform of Basic Signals**

$\mathbf{x}t$	X[Z]
δ	1
u(n)	
$u(-n\\-1)$	$-\frac{Z}{Z-1}$
$\delta(n-m)$	$z^{-m}$
$a^nu[n]$	
$egin{aligned} a^n u[-n \ -1] \end{aligned}$	
$na^nu[n]$	$rac{aZ}{\leftert Z-a ightert ^{2}}$
$egin{aligned} n  a^n u[n] \ n  a^n u[-n] \ -1] \end{aligned}$	$-rac{aZ}{\leftert Z-a vert ^{2}}$
$a^n\cos \ \omega nu[n]$	$rac{Z^2 - aZ\cos\omega}{Z^2 - 2aZ\cos\omega} \ \omega + a^2$
$a^n \sin \ \omega n u[n]$	$rac{aZ\sin\omega}{Z^2-2aZ\cos} \ \omega + a^2$