# **RTOS - Tasks**

Interesting stuff in Embedded Systems and IoT Applications. From hardwares to cloud applications. Step by step.

#arm #stm32 #rtos

Last update: 2021-08-01 14:07:06

# **Table of Content**

- 1. A Task
- 2. Startup
- 3. The IDLE Task
- 4. Task Lists
- 5. Task Functions
- 6. Task states
- 7. Task priorities
- 8. Task context switching
- 9. Lab 0: Tasks
  - 9.1. Enable UART redirection
  - 9.2. Add 2 Tasks
  - 9.3. Build and Run
  - 9.4. Change Priority
  - 9.5. Use OS Delay
- 10. Other Tasks functions
- 11. Appendix

#### 1. A Task

A task will do a specific functionality, such as toggling an LED, reading an input. The task function usually is in infinite loop, it means a task will continuously run and never returns.

The Task Function is declared as:

```
void taskFunctionName(void* argument) {
    for(;;) {
        // do things over and over
    }
}
```

In freeRTOS, every task has its own stack that stores TCB (Task Control Block) and other stack-related operations while the task is being executed. It also stores processor context before a context switch (switching to other task). Stack size must be sufficient to accommodate all local variables and processor context.

## 2. Startup

- 1. Main Application sets up the System Clock and necessary Peripherals
- 2. FreeRTOS is started by the osKernelStart() function in the main.c file from CMSIS\_OS APIs:
  - 1. This calls to the vTaskStartScheduler() function from FreeRTOS APIs
  - 2. vTaskStartScheduler() creates an IDLE task using xTaskCreate(), then disables all interrupts by calling portDISABLE\_INTERRUPTS() to be sure that no tick will happened before or during the call to xPortStartScheduler() function from FreeRTOS API
  - 3. xPortStartScheduler() configures the lowest priority level for SysTick and PendSV interrupts, then it starts the timer that generates the SysTick, enables FPU if presented (e.g. in CortexM4) and starts the first task using the prvPortStartFirstTask() function
  - 4. prvPortStartFirstTask() function (usually written in assembler) locates the stack and set MSP (used by the OS) to the start of the stack, then enables all interrupts. After this, it triggers software interrupt SVC 0
  - 5. As the result of SVC interrupt, vPortSVCHandler() is called
  - 6. vPortSVCHandler() restores the context, loads TCB (Task Block Control) of the first task (the highest priority one) from the Ready list and starts executing this task

### 3. The IDLE Task

The Idle task is created automatically when the scheduler is started:

- It is the portTASK\_FUNCTION() function in the task.c file
- It performs the following operations (in endless loop):
  - 1. Check for deleted tasks to clean the memory
  - 2. Call taskYIELD() if not using preemption configUSE\_PREEMPTION = 0
  - 3. Call taskYIELD() if there is another task waiting and configIDLE\_SHOULD\_YIELD =
    1 to not waste time
  - 4. Executes vApplicationIdleHook() if configUSE\_IDLE\_HOOK = 1
  - 5. Perform low power entrance if configUSE\_TICKLESS\_IDLE != 0

### 1 The default task

When using STM32CubeIDE to add FreeRTOS to project, there is a *default task* which is marked as *can be modified, not be removed.* This not the IDLE task mentioned above. User can configure it as a normal task, or even remove it in the main source code.

## 4. Task Lists

Task List	Description
ReadyTasksList[]	Prioritized ready tasks lists separate for each task priority up to configMAX_PRIORITIES
TasksWaitingTermination	List of tasks which have been deleted but their memory pools are not freed yet.
SuspendedTaskList	List of tasks currently suspended
PendingReadyTaskList	Lists of tasks that have been read while the scheduler was suspended
DelayedTaskList	List of delayed tasks
OverflowDelayedTaskList	List of delayed tasks which have overflowed the current tick count

i There is no dedicated list for task in Running mode (as there is only one task in this state at the moment), but the currently run task ID is stored in variable pxCurrentTCB.

### 5. Task Functions

A task will do a specific functionality, such as toggling an LED, reading an input. The task function usually is in infinite loop, it means a task will continuously run and never returns. The Task Function is declared as:

```
void taskFunctionName(void* argument) {
    // do something first
    for(;;) {
        // do things over and over
    }
}
```

In freeRTOS, every task has its own stack that stores TCB (Task Control Block) and other stack-related operations while the task is being executed. It also stores processor context before a context switch (switching to other task). Stack size must be sufficient to accommodate all local variables and processor context.

A Task is created by calling osThreadNew() which indeed calls to:

- xTaskCreateStatic() if configSUPPORT\_STATIC\_ALLOCATION == 1, or calls to
- xTaskCreate() if configSUPPORT\_DYNAMIC\_ALLOCATION == 1.

The argument passed to the Task Function is declared as a **void\*** pointer. This help to pass any type of data into the function handler.

### 6. Task states

#### Ready

Task is ready to be executed but is not currently executing because a different task with equal or higher priority is running

#### **Running**


Task is actually running (only one can be in this state at the moment)

#### **Blocked**

Task is waiting for either a temporal or an external event

#### Suspended

Task not available for scheduling, but still being kept in memory

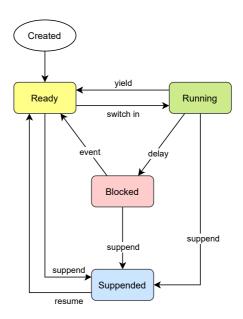


Task states

# 7. Task priorities

- Each task is assigned a priority from tskIDLE\_PRIORITY /\* defined in task.h \*/ to MAX\_PRIORITIES - 1 /\* defined in FreeRTOSConfig.h \*/.
- The order of execution of tasks depends on this priority. The scheduler activates the task that has the highest priority of all tasks in the READY state.
- A Task with higher priority can preempt the running task if configUSE\_PREEMPTION = 1
  /\* defined in FreeRTOSConfig.h \*/

Priority name	Value	Comment
osPriorityIdle	-3	priority: idle (lowest)
osPriorityLow	-2	priority: low
osPriorityBelowNormal	-1	priority: below normal
osPriorityNormal	0	priority: normal (default)
osPriorityAboveNormal	1	priority: above normal
osPriorityHigh	2	priority: high
osPriorityRealtime	3	priority: realtime (highest)
osPriorityError	0x84	system cannot determine priority or thread has illegal priority

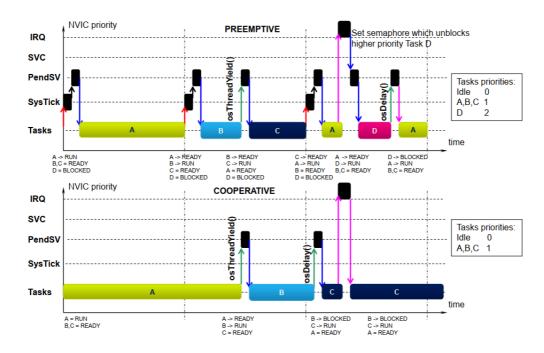

Task priority and execution order

# 8. Task context switching

The process of saving the context of a task that is being suspended and restoring the context of a task being resumed is called context switching.

There are two 2 triggers that cause context switching:

- 1. **SysTick interrupt** This interrupt is used as a periodical signal to check if system needs to switch to another task.
  - The interrupt causes xPortSysTickHandler() run
  - xPortSysTickHandler() will:
    - blocks all interrupts (as its own priority is the lowest one) using portDISABLE\_INTERRUPTS()
    - activates the PendSV bit to trigger xPortPendSVHandler():
      - calls to vTaskSwitchContext() function which selects the highest priority task in the READY List using the macro taskSELECT\_HIGHEST\_PRIORITY\_TASK()
    - unblocks all interrupts using portENABLE\_INTERRUPT()
- 2. **Task yield** When a task has done its work, it can trigger a context switching by send a yield by calling to portYIELD() which will set the PendSV bit to trigger xPortPendSVHandler() and start the scheduler (see above sequence).

Here are some cases that a task yield is called:

- The idle task is done its internal task, it calls to taskYIELD()
- When a task is in the block state, such as it has a delay or delayUntil function call, using portYIELD\_WITHIN\_API()
- When an interrupt unblocks a task using portYIELD\_FROM\_ISR()

### 9. Lab 0: Tasks

Star a new project with FreeRTOS included in STM32CubeIDE. Refer to the Lab: Overview.

At this time, tasks will be added manually in code, without using the code generation in CubeMX. This project can be targeted on any MCU which has enough RAM to hold FreeRTOS.

Here are the settings needed for the lab:

- 1. HAL Timebase is assigned to a general timer, let FreeRTOS use the SysTick
- 2. UART1 is enabled for printing debug information, note the pinout.
- 3. Select CMSIS\_OS version 2, and use default FreeRTOS settings

#### 9.1. Enable UART redirection

It is useful to print out debug information, and to make it easier, UART redirection will be used. In this lab, it can be implemented in a minimal method by overriding the low-level \_write function in the main file. Inside this function, a blocking call will be used to make sure all data is written in multi-thread. The correct method of synchronization will be discussed later.

main.c

#### 9.2. Add 2 Tasks

Define two tasks in the main file. At this moment, two tasks will have the same priority as osPriorityNormal level. There is a delay param will be sent to the Task Function.

```
main.c

osThreadId_t Task1_Handle;
const osThreadAttr_t Task1_attributes = {
    .name = "Task1",
    .stack_size = 128 * 4,
    .priority = (osPriority_t) osPriorityNormal,
};

uint32_t Task1_delay = 500;

osThreadId_t Task2_Handle;
const osThreadAttr_t Task2_attributes = {
    .name = "Task2",
    .stack_size = 128 * 4,
    .priority = (osPriority_t) osPriorityNormal,
};
uint32_t Task2_delay = 1000;
```

These two tasks will print out a sequence of number by using the same task <code>CounterTask()</code> which gets delay time from its task function's parameter:

### ⚠ HAL\_Delay()

At the beginning of this lab, HAL\_Delay() function is used to simulate a heavy work which is consuming CPU. Scheduler will never put these tasks to the Blocked state.

```
static void CounterTask(void *argument) {
   char* name = pcTaskGetName(NULL); // the current active task
   uint32_t delay = *((uint32_t*)argument);
   uint8_t counter = 0;
   printf("%s: delay=%lu\r\n", name, delay);
   // main loop
   for(;;) {
      printf("%s: counter = %u\r\n", name, counter++);
      HAL_Delay(delay);
   }
}
```

In the main function, create two tasks using the <code>CounterTask()</code> function with different delay params. Note that the pointer pointing to the <code>int</code> param is converted to a <code>void\*</code> pointer.

```
int main(void) {
    // Hardware init
    HAL_Init();
    SystemClock_Config();
    MX_GPIO_Init();
    MX_USART1_UART_Init();

    // FreeRTOS Init
    osKernelInitialize();

    // Add Tasks
    Task1_Handle = osThreadNew(CounterTask, (void*)&Task1_delay,
    &Task1_attributes);
    Task2_Handle = osThreadNew(CounterTask, (void*)&Task2_delay,
    &Task2_attributes);

    //Start scheduler
    osKernelStart();
}
```

#### 9.3. Build and Run

Compile the project and connect the UART1 to PC, and check the result:

- At startup, tasks print out their name and delay to confirm the attributes and params
- Both tasks run and print their counter value
- Task 1 has a smaller delay (500 ms) so it prints out faster than Task 2

```
FreeRTOS Tasks

Task2: delay=1000

Task2: counter = 0

Task1: delay=500

Task1: counter = 0

Task1: counter = 1

Task2: counter = 1

Task1: counter = 2

Task1: counter = 3

Task2: counter = 4

Task1: counter = 4

Task1: counter = 5

Task2: counter = 3


Task1: counter = 5

Task2: counter = 5

Task2: counter = 3
```

Two tasks are printing

Note that, because two tasks have the same priority, they will be switched at every SysTick interruption (about 1 ms). Both tasks use HAL\_Delay() which in fact consume

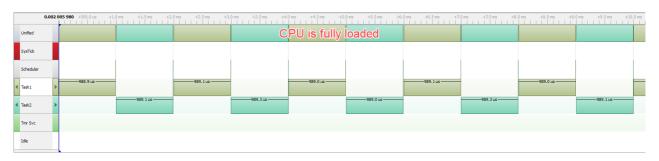

*Two tasks have the same priority* 

### 9.4. Change Priority

Let change one of two task to use osPriorityHigh priority, and see how system works after that modification.

The result is only high priority task can run because higher priory are requesting to use CPU all the time.

```
const osThreadAttr_t Task1_attributes
                                            const osThreadAttr_t Task2_attributes
= {
                                            = {
 .name = "Task1",
                                            .name = "Task2",
 .stack_size = 128 * 4,
                                            .stack_size = 128 * 4,
 .priority = (osPriority_t)
                                            .priority = (osPriority_t)
osPriorityHigh,
                                            osPriorityHigh,
FreeRTOS Tasks
                                           FreeRTOS Tasks
Task1: delay=500
                                           Task2: delay=1000
Task1: counter = 0
                                           Task2: counter = 0
Task1: counter = 1
                                           Task2: counter = 1
Task1: counter = 2
                                           Task2: counter = 2
Task1: counter = 3
                                           Task2: counter = 3
Task1: counter = 4
                                           Task2: counter = 4
```

Only Task 1 with High Priority is running

Only Task 2 with High Priority is running

### **(i)** Change priority in runtime

There are two functions to get and set task priority in runtime:

- The function osThreadGetPriority() calls uxTaskPriorityGet() or uxTaskPriorityGetFromISR() defined in tasks.c file
- The function osThreadSetPriority() calls vTaskPrioritySet() defined in tasks.c file. After setting new priority, this function also trigger the task scheduler to re-arrange tasks in the scheduled lists.


Two these functions must be enabled in **Include definitions** settings of FreeRTOS.

### 9.5. Use OS Delay

Keep one task in high priority, how to run both tasks? The key of RTOS scheduler is whenever a task is not working, it can be moved to block state and other task, even in lower priority, can run.

```
static void CounterTask(void *argument) {
   char* name = pcTaskGetName(NULL); // the current active task
   uint32_t delay = *((uint32_t*)argument);
   uint8_t counter = 0;
   printf("%s: delay=%lu\r\n", name, delay);
   // main loop
   for(;;) {
      printf("%s: counter = %u\r\n", name, counter++);
      osDelay(delay); // 1 tick = 1 ms
   }
}
```

Here is the CPU load while using <code>osDelay()</code> . CPU is only busy when it prints out on UART, and move to IDLE state in which CPU does nothing and waits for SysTick interruption. This is much effective way to lower power consumption.

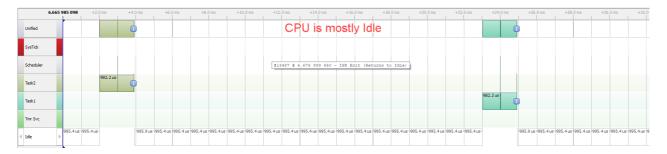

CPU is in Idle when both tasks are in delay

There are some more functions related to delay:

- osDelayUntil() which calls to vTaskDelayUntil()
- osAbortDelay() which calls to xTaskAbortDelay()

- The function osDelay() calls to vTaskDelay() function defined in tasks.c file to do below actions:
  - 1. Calls vTaskSuspendAll() to pause the scheduler without disabling interrupts. RTOS tick will be held pending until the scheduler has been resumed.
  - 2. Remove task from event list (running tasks) and move it to delayed list with given delay value using the function prvAddCurrentTaskToDelayedList()
  - 3. Resume the scheduler using xTaskResumeAll() function
  - 4. Trigger PendSV interrupt (using portYIELD\_WITHIN\_API() macro) to switch the context

### 10. Other Tasks functions

#### Suspend and Resume

A task can be put into Suspended State by calling to osThreadSuspend() which calls to vTaskSuspend() function. To resume a task, call to osThreadResume() function which actually calls to either vTaskResume() or xTaskResumeFromISR() function.

#### Terminate a task


Call to osThreadTerminate() function which indeed calls to vTaskDelete() defined in task.c file:

- 1. Remove the task from the ready list using uxListRemove() and removes the task from waiting on an event tasks list.
- 2. In case the task is deleting itself, this function will switch execution to the next task calling function by calling portYIELD\_WITHIN\_API()

Memory allocated by the task code is not automatically freed and should be freed before the task is deleted. TCB and its original stack are freed by the IDLE Task.

#### Task Yield

When a task has done its job, and don't want to wait for a SysTick interruption, it can yield to scheduler to trigger context switching.

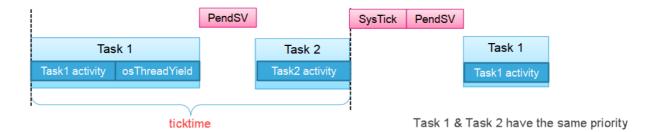

Task 1 yield

# 11. Appendix

CMSIS_RTOS API	FreeRTOS API
osKernelInitialize()	
osKernelStart()	vTaskStartScheduler()
osKernelRunning()	xTaskGetSchedulerState()
osKernelSysTick()	xTaskGetTickCount() xTaskGetTickCountFromISR()
osThreadCreate()	xTaskCreate()
osThreadGetId()	xTaskGetCurrentTaskHandle()
osThreadTerminate()	vTaskDelete()
osThreadYield()	taskYIELD()
osThreadSetPriority()	vTaskPrioritySet()
osThreadGetPriority()	uxTaskPriorityGet() uxTaskPriorityGetFromIS()
osDelay()	vTaskDelay()
osWait()	
osThreadGetState()	eTaskGetState()
osThreadIsSuspended()	eTaskGetState()
osThreadSuspend()	vTaskSuspend()
osThreadSuspendAll()	vTaskSuspendAll()
osThreadResume()	vTaskResume() tr>xTaskResumeFromISR()
osThreadResumeAll()	xTaskResumeAll()
osDelayUntil()	vTaskDelayUntil()
osAbortDelay()	xTaskAbortDelay()
osThreadList()	vTaskList()