





EMBEDDED SYSTEM COURSE

LECTURE 8: PERIPHERALS UART

Learning Goals





- Understanding basis concepts about UART and how to transmit/receive data via UART connection.
- Introduce about RS232 protocol.
- Understanding on how to configure the KL46 UART module.

Table of contents





- **❖** Introduction to UART
- UART Applications
- Data Transmission
- ❖ Data Reception
- **❖ RS232**
- ❖ Freedom KL46 UART

Table of contents





- **❖** Introduction to UART
- UART Applications
- Data Transmission
- Data Reception
- * RS232
- ❖ Freedom KL46 UART

Introduction to UART





- UART: Universal Asynchronous Receiver/Transmitter
- A UART maybe used when:
 - High speed is not required
 - An inexpensive communication link between two devices is required
- Very widely used
 - Low hardware cost.
 - Relatively simple hardware.
 - Single wire for each direction (plus ground wire)
 - Asynchronous because no clock signal is transmit.

Table of contents






- Introduction to UART
- UART Applications
- Data Transmission
- Data Reception
- * RS232
- ❖ Freedom KL46 UART

UART applications







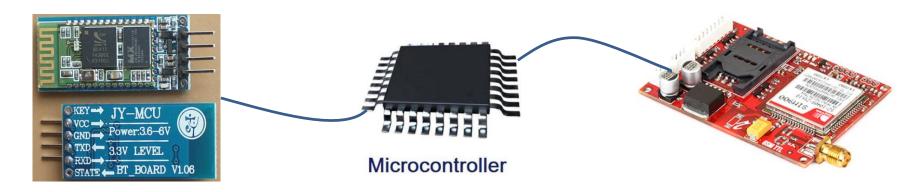

Bluetooth module

GSM and **GPRS** Modems

UART applications






 Use in applications that do not require fast communication.

UART Connection





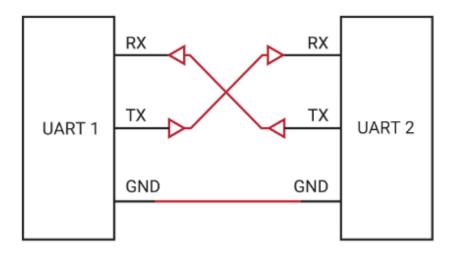

UART functions





□ Transmitter

- ✓ Convert from parallel to serial
- ✓ Add Start and Stop bits
- ✓ Add parity bit

Receiver

- ✓ Convert from serial to parallel
- ✓ Remove Start and Stop bits
- ✓ Check and remove parity bit

Table of contents






- Introduction to UART
- UART Applications
- Data Transmission
- Data Reception
- **RS232**
- ❖ Freedom KL46 UART






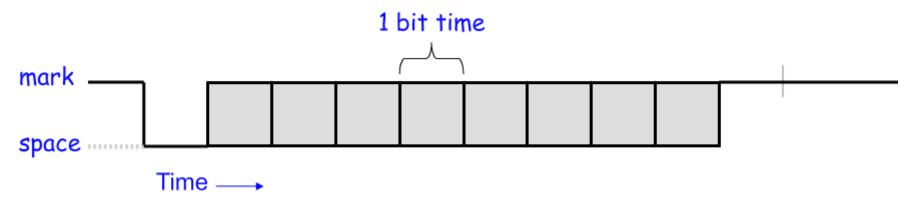

- Use a single wire for transmission
- Each bit has fixed time duration determined by the transmission rate.
 - Example: a 1200 bps (bit per second) UART will have a 1/1200 s or about 833.3 us bit duration.






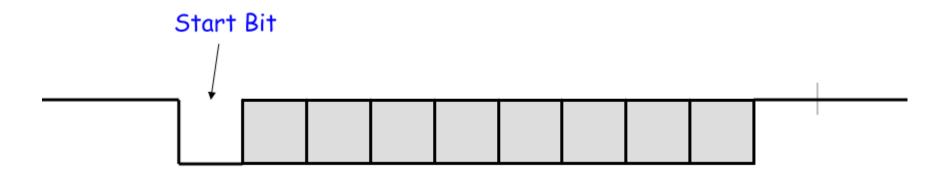

- □ The Start bit marks the beginning of a new transmission.
- When detected, the receiver synchronizes with the new data stream.






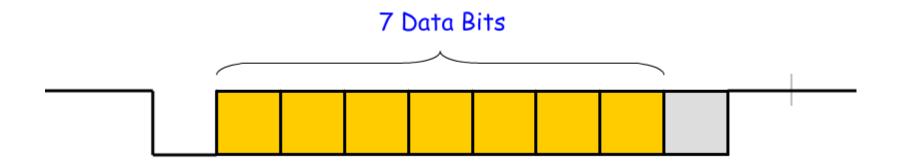

- □ Next follow the data bits (7 or 8).
- The least significant bit is sent first.






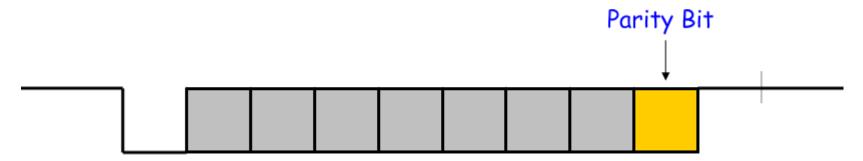

- The parity bit is added to make the number of 1's even (even parity) or odd (odd parity).
- This is can be used by the receiver to check for transmission errors.
- Use of parity bit is optional.






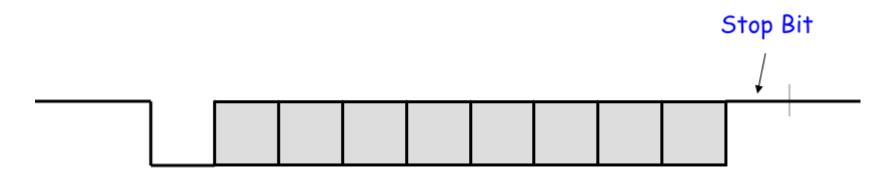

- □ The Stop bit marks the end of transmission.
- Receiver checks to make sure it is "1".
- Separates one word from the start bit of the next word.






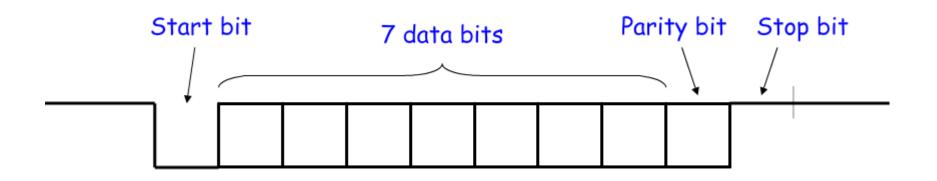

- In the configuration shown, it takes 10 bits to send 7bits of data.
- □ Transmission efficiency is 70%.





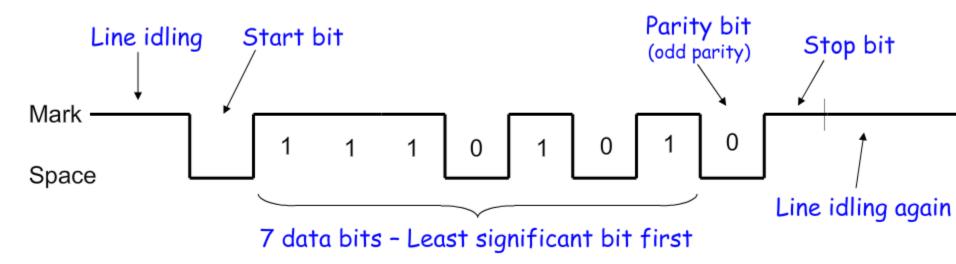

□ An example of sending the ASCII letter "W" - 1010111.

Table of contents






- Introduction to UART
- UART Applications
- Data Transmission
- ❖ Data Reception
- **RS232**
- ❖ Freedom KL46 UART





Start bit says a character is coming, receiver resets its timers

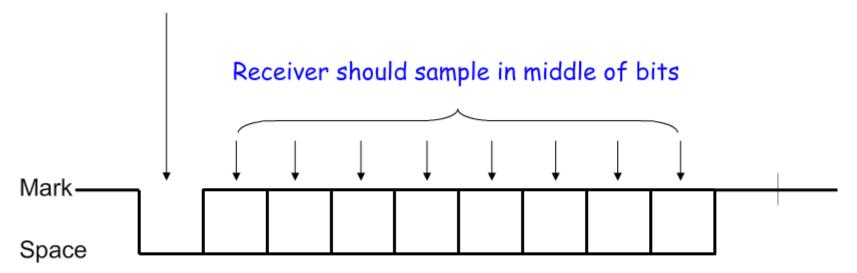


Receiver uses a timer (counter) to time when it samples. Transmission rate (i.e., bit duration) must be known!






If receiver samples too quickly, see what happens...

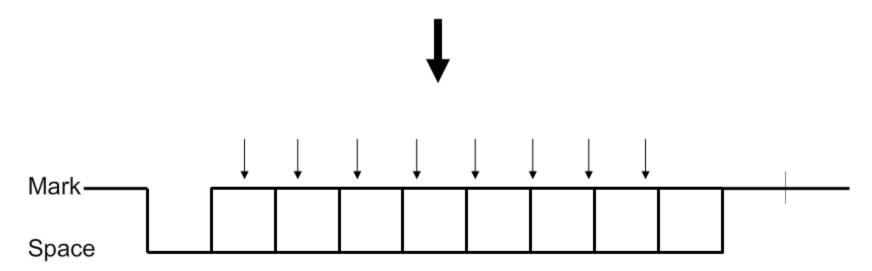





If receiver samples too slowly, see what happens...

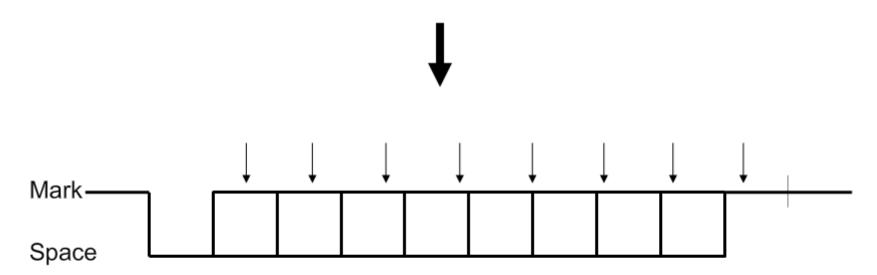

Receiver resynchronizes on every start bit. Only has to be accurate enough to read 9 bits.



- □ Receiver also verifies that stop bit is "1", if not, reports "framing error" to host system.
- New start bit can appear immediately after Stop bit.
- Receive will resynchronize for each Start bit.

UART options





- UARTs usually have programmable options:
 - ✓ Data: 7 or 8 bits.
 - ✓ Parity: even, odd, none.
 - ✓ Stop bits: 1, 1.5, 2.
 - ✓ Baud rate: 300, 1200, 2400, 4800, 9600, 19.2k, 38.4k, 57.6k. 115.2k...

UART Data throughput





- Data throughput Example
 - ✓ Assume 19200 baud, 8 data bits, no parity, 1 stop bit
 - 19200 baud → 19.2kbps
 - 1 start bit + 8 data bits + 1 stop bit = 10 bits → It takes 10 bits to send 8 bits of data.
 - 19.2 kbps * 8/10 = 15.36 kbps.
 - How many KB (kilobytes) per second:
 - =15.36 * 1KB / 8192 bits = 1.875 KB/s

Table of contents





- Introduction to UART
- UART Applications
- Data Transmission
- Data Reception
- **❖ RS232**
- ❖ Freedom KL46 UART

RS232





- RS232 is the most common UART standard.
 - Used by PC serial ports.
- RS232 does not use positive logic.
 - Logic 1 is any signal from -25V to -3V
 - Logic 0 is any signal from +3V to 25V
 - The range -3V to 3V is a transition region that is not assigned to a logic level.
- RS232 connecting between a DTE (Data Terminal Equipment) and a DCE (Data Circuit-terminating Equipment).

RS232 signals





Signal			Origin		DD 25 nin
Name	Typical purpose	Abbreviation	DTE		DB-25 pin
Data Terminal Ready	Indicates presence of DTE to DCE.	DTR	•		20
Data Carrier Detect	DCE is connected to the telephone line.	DCD		•	8
Data Set Ready	DCE is ready to receive commands or data.	DSR		•	6
Ring Indicator	DCE has detected an incoming ring signal on the telephone line.	RI		•	22
Request To Send	DTE requests the DCE prepare to receive data.	RTS	•		4
Clear To Send	Indicates DCE is ready to accept data.	CTS		•	5
Transmitted Data	Carries data from DTE to DCE.	TxD	•		2
Received Data	Carries data from DCE to DTE.	RxD		•	3
Common Ground		GND	common		7
Protective Ground		PG	соп	mon	1

Hardware flow control = RTS/CTS handshaking

Connect MCU with PC over RS232





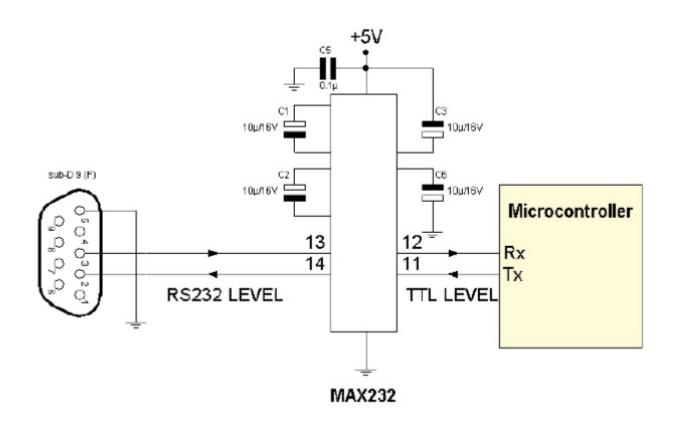


Table of contents





- Introduction to UART
- UART Applications
- Data Transmission
- Data Reception
- * RS232
- ❖ Freedom KL46 UART

Freedom KL46 UART Block Diagram





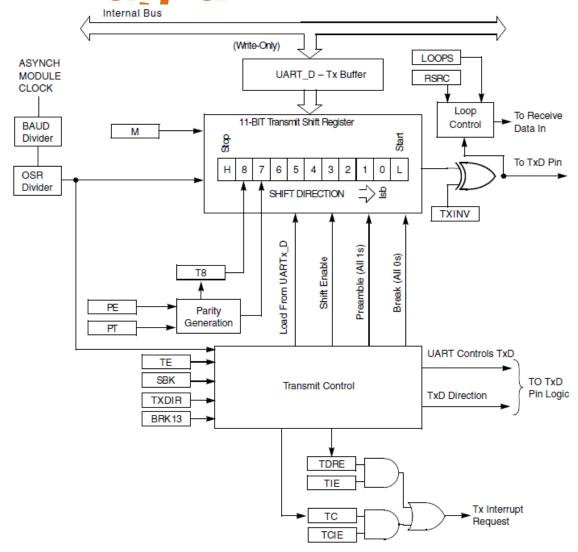


Figure 39-1. UART transmitter block diagram

Freedom KL46 UART Block Diagram





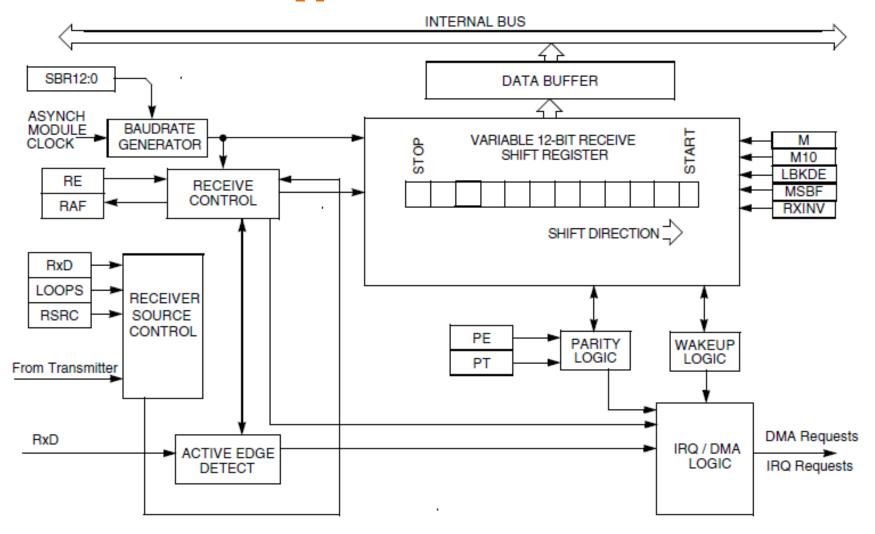


Figure 39-2. UART receiver block diagram

Features





- Full-duplex operation
- 13 bit baud rate selection.
- Programmable 8-bit, 9-bit or 10-bit data format.
- Double-buffered transmitter and receiver with separate enables
- Independent FIFO structure for transmit and receive.
- DMA interface.
- Three operation mode: Wait, Stop and Debug mode.

Baud Rate Registers





- UARTx_BDH
 - ✓ SBR[4-0]: 5 higher bits of the 13 bits UART baud rate bits
- UARTx_BDL
 - ✓ SBR[7-0]: 8 lower bits of the 13 bits UART baud rate bits

$$UARTO \ baud \ rate = \frac{UART \ module \ clock}{SBR[12:0] * (OSR + 1)}$$

UART1 or UART2 baud rate =
$$\frac{UART \text{ module clock}}{SBR[12:0] * 16}$$

Control Registers





- □ UARTx_C1:
 - ✓ M: 9-bit or 8-bit select mode
 - ✓ PE: Parity Enable
 - ✓ PT: Parity Type (Even, Odd)
- □ UARTx_C2:
 - ✓ TIE: Transmit Interrupt or DMA Transfer Enable
 - ✓ TCIE: Transmission Complete Interrupt Enable
 - ✓ RIE: Receiver Full Interrupt or DMA Transfer Enable
 - ✓ TE: Transmitter Enable
 - ✓ RE: Receiver Enable

Status Register





- UARTx_S1
 - ✓TDRE: Transmit Data Register Empty Flag
 - √TC: Transmit Complete Flag.
 - ✓ RDRF: Receiver Data Register Full Flag.
 - √ FE: Framing Error Flag.
 - ✓ PF: Parity Error Flag.
- UARTx_S2
 - ✓ MSBF: Most Significant Bit First.
 - ✓ RAF: Receiver Active Flag.

Data Register





- UARTx_D
 - -RxTx[7:0]:
 - Reads return the contents of the read-only receive data register.
 - Writes go to the write-only transmit data register.

Example UART Init



- Enable the clock for the port associated with the UART pins you want to use (SIM_SCGCx)
- 2. Enable UART pins (PORTx_PCRn)
- 3. Enable the UART module clock (SIM_SCGCn)
- 4. Configure the UART control registers for the desired data format
 - Number of data bits (UARTn_C1[M] and UARTn_C4[M10])
 - Parity and parity type (UARTn_C1[PE,PT])
 - MSB or LSB first (UARTn_S2[MSBF])
 - Data polarity (UARTn_S2[RXINV] and UARTn_C3[TXINV])
- 5. Configure the baud rate (UARTn_BDH and UARTn_BDL)
- 6. Enable the receiver and/or transmitter (UARTn_C2[RE, TE])

Reference



- http://www.powershow.com/view/af8e1-ZTk2Z/20 UART flash ppt presentation
- http://en.wikipedia.org/wiki/Universal_asynch ronous_receiver/transmitter
- KL46 Reference Manual

Summary





- Understanding about the basic concepts regarding UART such as its applications, how the data has been transmitted as well as received.
- Understanding about RS232 standard.
- Understand on how to configure the Freedom KL46 UART module.

Question & Answer





Thanks for your attention!

Copyright



- This course including Lecture Presentations,
 Quiz, Mock Project, Syllabus, Assignments,
 Answers are copyright by FPT Software Corporation.
- This course also uses some information from external sources and non-confidential training document from Freescale, those materials comply with the original source licenses.