TABLE OF CONTENTS

SECTION	PAGE
Charging GPS Invisabelt	1
Charging TipsBattery Life	
First Use & Testing	2
Waking UpTesting for Satisfactory ConnectivitGPS General Information	ту 3
Maintaining GPS Invisabelt	4
Monitoring App	5
Log in to the GTX Corp Monitoring Portal	6
Mapping and Tracking	6
Navigating the Sidebar	7
Select a Date RangeBattery Status	
Managing Geozone Alerts	8
Generating Reports	9
Detail ReportsSummary ReportsPerformance Reports	10
Contacting Technical Support	11

WARNINGS FOR GPS INVISABELT

YOU MUST TEST INVISABELT IN YOUR AREA FOR SATISFACTORY COVERAGE BEFORE 1ST USE



DO NOT BEND



DO NOT SUBMERGE



DO NOT PUNCTURE



REMOVE DEVICE BEFORE WASHING BELT



DO NOT APPLY EXCESSIVE WEIGHT
DO NOT IMPACT WHEN OUTSIDE OF FOOTWEAR

Failure to observe these warnings may damage your GPS Invisabelt and will void your warranty.

Never open the Invisabelt case. Prying open the case will damage it, risk the electronic components inside, break wiring connections and WILL VOID YOUR WARRANTY.

CHARGING GPS INVISABELT



Charging Your GPS Invisabelt

Connect the USB cable into the USB wall adapter and into the USB port of the charging pad. When properly plugged in to an outlet, the LED status indicator light will be GREEN to indicate it is ready to charge.

Align the target symbol so it is facing

down and set the target onto the center of the charging pad. Adjust your Invisabelt position until the charging pad status indicator light is SOLID BLUE. When charging has begun, the status indicator will stay SOLID BLUE for 30 seconds and then turn off. Charging will continue to while the LED is off. If the charging is interrupted due to a

charging is interrupted due to a change in alignment, the LED will turn back to GREEN.

Light	Status Indication
Solid Blue, then turns off	Currently Charging
Solid Green	Ready to Begin Charging / Not Charging

Charging Tips



For convenience, you may charge the GPS device inside the belt, however, variations in fabric thickness & layers may disrupt charging. If you do not see the proper status indicator light from the charging pad, the material may be too thick. Consider inserting the device to face inward where the pocket has only 1 layer, or remove the device from the belt altogether.

If the status indicator flashes or becomes GREEN, there is a problem with alignment. Realign the Invisabelt until the status indicator light is SOLID BLUE again.

GPS Invisabelt takes 2 - 4 hours to fully charge. While there is no indication that charging is complete, you may continue to leave it on the charging pad no more than 12 hours. Charging for more than 12 hours may reduce the lifespan of the product. **Do not charge GPS Invisabelt for more than 12 hours.**

<u>CAUTION</u>: Like all inductively charged devices, Invisabelt will become warm during charging. Take care when removing Invisabelt from the charging pad as it is normal for the device to feel hot. It will cool in minutes and is *not* warm during use.

Battery Life

Like other mobile devices, we recommend charging your GPS Invisabelt daily. Depending on your usage, your GPS Invisabelt may be powered for 1-2 days after a full charge. Long drives or short reporting intervals will use battery more quickly. Note: Rechargeable batteries have a limited number of charge cycles and may eventually lose capacity.

Battery Status

Check the percent of battery charge from the Monitoring Portal or Smart Locator app. From the Portal, from the Invisabelt Map screen, click the "Invisabelt Status" button. This is a great way

FIRST USE AND TESTING

Before First Use - Testing for Satisfactory Coverage

GPS Invisabelt uses cellular service to send it's GPS data. While most smartphones use 4G/LTE networks, GPS Invisabelt uses a smaller 2G module. The 2G module saves power & is small enough to fit in the insole, making this solution possible.

Because cellular signals may be affected by building structures, location and geography, and because 2G cellular coverage is not available everywhere, GPS Invisabelt may not work in your area. You must test your GPS Invisabelt for satisfactory cellular connectivity, before wearing it.

Coverage Test Procedure

You may test your GPS Invisabelt either carried by hand, in a purse or bag, or in a car. Do not wear your GPS Invisabelt for the connectivity test, as GPS Invisabelt is no longer eligible for a full refund once the belt has been worn or soiled.

Charge the GPS Invisabelt and verify that it reports on the Portal. Over the course of the next few days, carry it through the primary areas where the wearer may travel.

- Verify that location reports are received in a timely manner.
- Verify the accuracy of the received location reports.

If you notice any delayed, missing or inaccurate location reports, or if the coverage or performance is not satisfactory in any way, please contact GPS Invisabelt Technical Support immediately for support and advice on next steps.

Technical Support will analyze device performance, run diagnostics, and advise on next steps, which may include returning or replacing the device.

GPS Signal Requirement

GPS Invisabelt, like all GPS trackers, requires sufficient GPS signal for proper operation. Accurate GPS signal is only available outdoors with a clear view of the sky. When indoors, GPS devices cannot properly communicate with satellites to obtain location data. Depending on the material of the indoor structure or placement of the insole while indoors, GPS Invisabelt may report inaccurate locations or no locations at all. In some extreme circumstances, such as buildings with large glass panels, GPS signal may become so distorted that large errors in accuracy may be reported.

If your GPS Invisabelt is reporting inaccurate locations or no locations while indoors, it may be experiencing inaccurate GPS signal. GPS Invisabelt will regain accurate positioning once it is outdoors again.

GPS First Fix

The first location report that a GPS tracker obtains is referred to as the "first fix" and can take an extended period of time to obtain while the tracker searches for the positions of the GPS satellites. When outdoors, under clear view the sky, awake, GPS Invisabelt can take approximately 1 minute to obtain its first fix if not moving. The first fix takes longer when the GPS Invisabelt is moving (e.g. in a vehicle), sometimes up to 20 minutes. After the first fix has been obtained, GPS Invisabelt will be able to report subsequent locations within 1 or 2 seconds.

When not awake, charged or reporting for more than 12 hours, GPS Invisabelt will need to obtain a new first fix. Therefore, it is strongly recommended to verify a first fix each day before your GPS Invisabelt is worn or used. Obtaining a first fix is covered under the "Wake Up Procedure".

Wake Up Procedure

Your GPS Invisabelt is equipped with a motion sensor. After 5 minutes of no movement, it enters sleep mode to conserve power. When your GPS Invisabelt has been asleep or unused for a prolonged period of time, e.g. after charging overnight, it needs extra time to update a new location. For best results, we recommend waking up your GPS Invisabelt when first receiving it, after charging, or after several days of inactivity.

- 1. Gently move the Invisabelt (about 5 seconds).
- 2. Place it next to an outside-facing window (about 5 minutes).



If the monitoring portal does not show a new location after 5 minutes, gently move the GPS Invisabelt again to keep it awake. Repeat steps 1 and 2 until the monitoring portal displays a new location.

Retrieving the first GPS location may take seconds or up to 5 minutes. An obstructed view of the sky increases this time.

Note: Gentle, continuous movement is sufficient to wake up your Invisabelt. Do not apply excessive force or impact during the Wake Up Procedure.

MAINTAINING GPS INVISABELT

Do not wear your GPS Invisabelt until you have tested it for satisfactory coverage in your area.

Wearing GPS Invisabelt

The waistband of GPS Invisabelt is made of highest quality athletic material. It is designed to fit comfortably around the waist, neither too tight nor too loose. Try the belt for fit before wearing or soiling the belt. Unworn belts may be exchanged for a different size (customer pays return shipping).

Adjust the position of the Invisabelt for comfort. Invisabelt should not be in a position to receive impact. Do not wear Invisabelt around the neck or head. GPS Invisabelt is not designed for regular overnight use.

As with all clothing and wearable items, Invisabelt will naturally wear with use. In accordance with the user's wear patterns, the Invisabelt waistband may eventually need to be replaced. Replacement belts are available for sale at www.gpsinvisabelt.com

Washing Invisabelt

The waistband of GPS Invisabelt can be washed as needed.

REMOVE THE ELECTRONIC DEVICE FROM THE BELT

POCKET BEFORE WASHING! Submersion or prolonged exposure to water will damage the GPS device. The Invisabelt case is not waterproof and you should dry the device quickly after any exposure to splashing or sprays of water.

Care Label



GPS Invisabelt Case

The GPS Invisabelt is designed to fit tighly inside the belt pocket, as to make it difficult to be removed. Do not bend or apply excessive force when moving GPS Invisabelt in or out of it's hidden belt pocket. The case is slightly flexible for comfort while wearing, however, this means it could be bent or broken open with excessive force. Take care while handling.

Never open the Invisabelt case. Prying open the case risks damaging the GPS electronics and WILL VOID YOUR WARRANTY. Once the seal around the case is broken the device will no longer be protected from dirt and moisture and will no longer be eligible for return, repair or replacement.

MONITORING APP

Smart Locator App

Use of the Smart Locator monitoring app is included in your service plan and allows you to view your GPS Invisabelt and other GTX Corp trackers from a mobile device.

Google play

Account

User ID

Password

Download GTX Corp Smart Locator

Smart Locator App Icon

Search "Smart Locator GTX" & download free.

Apple iOS Devices Go To: App Store http://appstore.com/gtxcorpsmartlocator



Invisabelt

vour email address

your password

Android Devices Go To: http://goo.gl/rRxOjt

Log In to Smart Locator

Sign in with the same account info. as required for the GTX

Corp Monitoring Portal (See Page 4).

Please note the password is case sensitive.

Add your GPS Invisabelt to track:

The "Add Device" screen will prompt you to add your device. You will need to enter in the Device Alias and the Device ID.

Device Alias - Any description or nickname for your Invisabelt.

Device ID - The Device ID is "gpv2_" followed by your 15-digit IMEI number. The Device ID has been provided to you in your account set up email, or you can find the IMEI on the label of your GPS Invisabelt. If you do not have your IMEI, find it on the Monitoring Portal by generating a Detail Report (see page 8). It will be in brackets below the name of the report. Everything within the brackets is your Device ID.

Finding Device ID / IMEI

Example Device ID: Event Detail

Swett Insole [gpv2_356363055999801]

2014/10/21' through 2014/10/31' [US/Pacific]

When typing your Device ID, check that your smartphone has not used autocorrect to change any characters. Also, be sure to follow "gpv2" with the underscore symbol "_" rather than a space or dash.

Tracking a Device

Tap your device from the device list to view its location and status list.

The location list displays the 50 most recent locations and statuses of your Invisabelt. Tap on any location with an address to view it on a map.

On the map, there are two icons. The red icon "GTX" shows the location of the Invisabelt. A blue, flashing icon shows YOUR current location (your smartphone or tablet). Tap on the red "GTX" icon to view details or get directions to that location.

Notifications Screen



LOG IN TO THE GTX CORP MONITORING PORTAL

You can view the location history of your GPS Invisabelt from any computer, smartphone or tablet with internet access. From any browser, visit **track1.gtxcorp.com** and login.

For best results, update your web browser to the latest version available, and make sure cookies and JavaScript are enabled. When trying to access the Monitoring Portal from an office or work computer, please contact your IT department for troubleshooting browser issues.

Login screen: track1.gtxcorp.com



GTX Corp Monitoring Portal Web Address	track1.gtxcorp.com
Account	Invisabelt
User ID	Primary account email address
Password	enter yours here, case sensitive

If you have not received your account login details, please contact your Invisabelt provider for this information.

MAPPING AND TRACKING

Once logged in to the GTX Corp Monitoring Portal, Invisabelt Map shows the location history and routes of your Invisabelt. Navigate to Invisabelt Map by selecting the "Mapping" tab followed by "Invisabelt Map" from the dropdown menu.

If you choose "Family Map", you will see the most recent locations of all Invisabelt devices in your "family" or group.

Mapping Tab & Invisabelt Map Screen

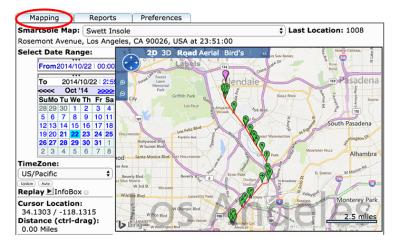


Figure 2.

Routes and Pins

Invisabelt Map displays the location and route of the GPS Invisabelt represented by a trail of pushpins. Addresses of the locations are listed below the map, by selecting 'Show Location Details.' Please note: Red lines connecting the pins do not represent actual routes traveled.

Pin Color	Meaning	Addresses are listed
Green Pin	Location trail	Mouse over In 'Show Location Details'
Purple Pin	Last Updated Location	Above map in 'Last Location'

NAVIGATING THE SIDEBAR

Invisabelt Map Sidebar



Select a Date Range

The date range on the top of the Invisabelt Sidebar allows you to display events within a specific date and time range.

To change the beginning date or time, click on the 'From' calendar and choose your start date. Double-click on the timestamp, e.g. "00:00", to enter a specific start time.

Follow the same steps to change the end date in the 'To' calendar. **Press 'Update'** to display the events in your time range.

Battery Status

Click the 'Invisabelt Status' button to see the most recent status of your GPS Invisabelt, including its most recent location and last known battery level.

Other Sidebar Features

The 'TimeZone' drop-down

menu allows you to adjust the time zone of displayed events.

You can measure the straight-line distance between any two points by dragging across the map from one point to another while holding down the [Control] button.

The sidebar also contains the entry point into the Geozone alerts feature, via the 'Edit Geozone' button.

Managing Geozone Alerts

The Geozone feature allows you to set multiple virtual perimeters for the GPS Invisabelt. If the Invisabelt enters or leaves a Geozone, the system will send a notification via email and/or SMS to the phone numbers and/or email addresses that you set up following the steps below.

In setting up a Geozone, it is important to remember that your GPS Invisabelt is configured to update its status on a timed interval. When passing in or out of a Geozone's perimeter, your Invisabelt will report this crossing event on its **next scheduled update**, which could be several minutes later.

Adding a Geozone

Click the 'Edit Geozone' button on the Invisabelt Map sidebar. Your first Geozone can be managed right away. Describe your virtual perimeter in the 'Zone Description' box. To add another Geozone, select 'New' at the top left of the Geozone sidebar.

Selecting a Geozone

To edit a Geozone, you must first select it from the drop-down menu at the top of the sidebar. Selecting a Geozone updates the map to display that Geozone's virtual perimeter in green. Once you have selected the Geozone you wish to edit, you can rename it, delete with the 'Delete' button at the top or reconfigure any of the settings of that Geozone.

Managing a Geozone



Centering a Geozone Around an Address

In the 'Find Address' box above the map, type in the address, and select 'Go' to the right. Do NOT press the [Enter] key on your keyboard.

Resizing a Geozone

In the 'Radius (meters)' box, type in the desired range of your Geozone in meters. **TIP:** If your Geozone is set around an indoor location (e.g. a house or nursing home), it is recommended that the radius be set to at least 200 meters. *Note: A range set below 200 meters may generate false alerts due to indoor GPS drift.*

Managing Notification Recipients

Geozone notifications can be sent via email and SMS. In the 'E-Mail or Mobile Phone' box of the Geozone sidebar, you may enter up to ten email addresses and/or phone numbers. Separate each entry with a single comma. Do NOT use any spaces. For phone numbers, enter the numbers only, without any dashes or periods. For phone numbers outside of the USA, enter "+", followed by the full phone number, including country code. For example: +441234567890 for a UK number (+44).

EXAMPLE NOTIFICATION RECIPIENTS: E-Mail and/or Mobile Phone

me@gtxcorp.com,2134893019,caretaker@gtxcorp.com

Separate each entry with a single comma. Do not use any spaces.

Preview And Save Your Geozone Settings

Once you have finished managing a Geozone, you may view it on the map by pressing the 'Preview' button. Apply your changes with the 'Save' button. Always remember to save.

GENERATING REPORTS

The GTX Corp Monitoring Portal gives you the choice of generating different reports to fit your needs. Reports fall in three general sections: **Detail Reports**, **Summary Reports**, and **Performance Reports**.

Navigating the Reports Menu




Navigating to the Reports Menu

At the top of the screen, select the "Reports" tab and choose one of the three report types.

Detail Reports

Detail Reports list every location update and alert per specified date and time period. To generate a Detail Report, select a date range from the calendar on the left panel, pick a report format (HTML to view on the website, CSV to download), and click "Get Report".

Example of a Detail Report

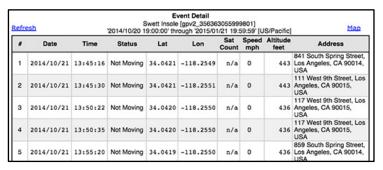


Summary Reports

Summary Reports compile data for all the devices in your group/family. To generate a Summary Report, select a date range from the calendar, choose either the "Last Known Device Location Summary" or "All Received Event Counts". Click "Get Report".

All Received Event Counts

Shows the number of updates and alerts that occurred during a selected date range for each of your devices.

Example of a Count of All Received Events Report

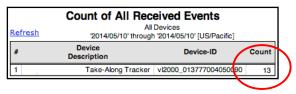

Last Known Device Location Summary

Shows the most recent check-in date and location each of your Invisabelt devices.

Example of a Last Known Device Location Summary Report



Performance Reports

Performance Reports generate relevant driving information for your devices.

To generate a
Performance Report,
select a date range from
the calendar, choose one
of the five reports, and
pick a report format
(HTML to view in the




website, CSV to export). Click "Get Report" to generate your Performance Report.

There are five Performance Reports you can choose from:


- 1. Speeds over 10mph
- 2. Speeds over 45mph
- 3. Speeds over 70mph
- 4. Driving Distance Summary: Shows a mileage estimation
- **5. Driving/Stopped Time Summary:** Shows a summary of start/stop times

Performance Report Figures

Example of a Speed Report

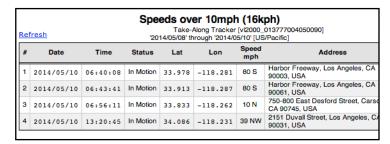

Example of a Driving Distance Summary Report

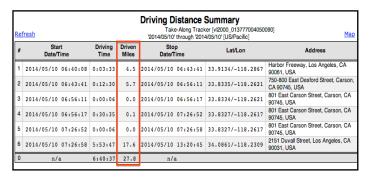

CONTACTING SUPPORT

For U.S. and Canada customers, please contact Technical and Billing Support below:

Technical and Billing Support Contact		
Email	support@gtxcorp.com billing@gtxcorp.com	
Phone	Support: +1 (213) 489-3019 x 2 Billing: +1 (213) 489-3019 x 3	
Hours	Mon-Fri 9 AM – 5 PM US Pacific Time	

For International customers, please contact your local distributor or the original seller of your GPS Invisabelt for support.

GPS Invisabelt Model: GTX-GSS-01 FCC ID: 2AD9S-GTXGSS01 IC ID: 20166-GTXGSS01

X CE

Model: GTX-MBX-01

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications made to this equipment not expressly approved by Global Trek Xploration may void the FCC / IC authorization to operate this equipment.

Les changements ou modifications non expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorité de l'utilisateur à utiliser l'équipement.

The FCC / IC Specific Absorption Rate (SAR) limits have been shown by measurement to be respected for a minimum distance of 5 mm between the built-in radio transmitter and the human tissue (sole). This minimum distance is ensured when the equipment is used for its intended purpose and as described within this user guide. Using it in a different way may not ensure compliance with FCC RF exposure guidelines.

Les normes de la FCC / IC Débit d'Absorption Spécifique (DAS) a été démontré par la mesure à respecter pour une distance minimale de 5 mm entre le haut-émetteur radio et le tissu humain (semelle). Cette distance minimale est assurée seulement quand l'équipement est utilisé conformément à sa destination et comme décrit dans ce guide de l'utilisateur. Utilisation différente ne peut pas assurer la conformité avec les lignes directrices de la FCC.

© 2018 - 2019 GTX Corp. All Rights Reserved.

Use of your GPS Invisabelt is subject to the terms and conditions of your End User License Agreement located at http://www.gpsinvisabelt.com/terms-conditions-of-sale/
All content in this User's Manual is subject to change. Please refer to the online End User License Agreement for the most current information. Screenshots, product images and illustrations are simulated and for instructional purposes only. They may differ from the actual product and are subject to change without notice.