ARM® ARM926EJ-S 32-bit Microprocessor

NuMaker NuWicam Samples

nuvoTon

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com



Table of Contents

1 IN	TRODUCTION	3
2 AR	RDUINO UNO (OR NUDUINO UNO/MEGA) BOARD	4
2.1	Board schematics	4
2.2	Requirement	5
2.2.1	Hardware	5
2.2.2	Software	5
2.3	Purchasing information	6
2.4	Sample code building	7
2.5	Function testing	9
3 NL	JDUINO MEGA BOARD	11
3.1	Board schematics	11
3.2	Requirement	11
3.2.1	Hardware	11
3.2.2	Software	11
3.3	Purchasing information	
3.4	Sample code building	13
3.5	Function testing	
4 RE	EVISION HISTORY	16



1 INTRODUCTION

In this document, we will descript how to construct the NuMaker NuWicam^[1] samples. These samples include LEDs controlling, get temperature value from digital or analog sensor. These samples can be executed on Arduino UNO, Nuduino or Nubed board. We will descript more details in sub-chapter as below.

- Arduino(or Nuduino) UNO board
- Nuduino M453 board

[1] NuWicam is short for NuMaker NuWicam.



2 ARDUINO UNO (OR NUDUINO UNO/MEGA) BOARD

2.1 Board schematics

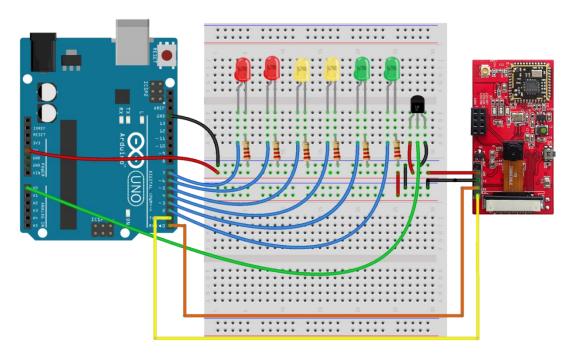


Figure 2-1 NuWicam-VGA board with Arduino UNO

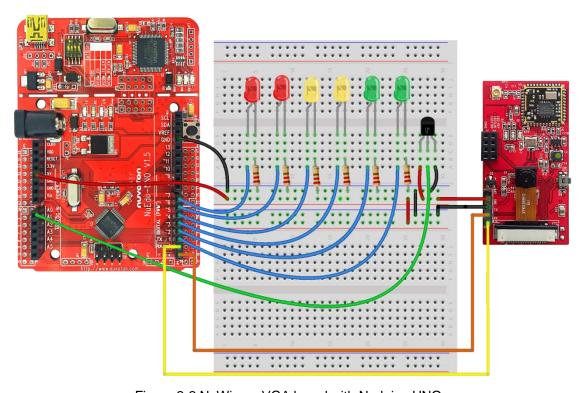


Figure 2-2 NuWicam-VGA board with Nuduino UNO

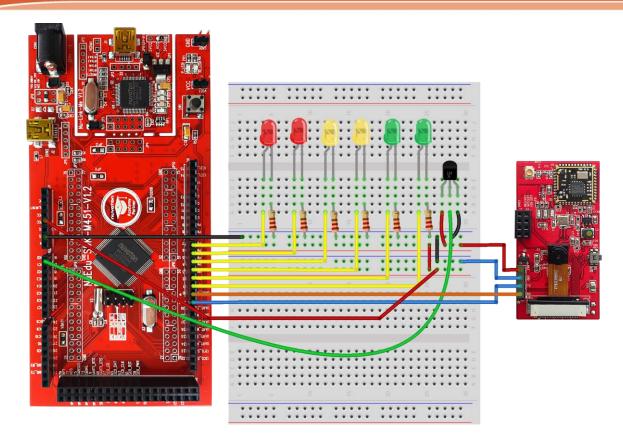


Figure 2-3 NuWicam-VGA board with Nuduino Mega

2.2 Requirement

2.2.1 Hardware

nuvoTon

- NuWicam board with firmware x 1
- Geduino UNO(or Nuduino UNO/Mega) board x 1 (with USB Line, DC Power adapter)
 - If your board is Nuduino UNO, please remember to switch 2, 3 and 4 of SW2 to 'OFF' on the board.
- Red LEDs x 2, Green LEDs x 2 and Blue LEDs x 2
- 220 ohm resistor x 6
- Some dupont lines
- LM35 analog temperature sensor

2.2.2 Software

- Arduino IDE v1.6.7 (or later)
 - You can find it on Arduino official website https://www.arduino.cc/en/Main/Software.
- Modbus-Master-Slave-for-Arduino Modbus library
 - Please download source on github server.
 - Path: https://github.com/smarmengol/Modbus-Master-Slave-for-Arduino
- NuWicam sample code for Arduino UNO/Mega board.
 - Please download source on github server.
 - https://github.com/OpenNuvoton/NuMaker_NuWicam_Samples/NuMaker_NuWiC am_Arduino_UNO



2.3 Purchasing information

■ Nuduino UNO board

URL: https://world.tmall.com/item/523268526584&rn=93873a1038dd4952f86ee4c2766ccae0&abbucket=10

■ Nuduino Mega board

URL: https://world.tmall.com/item/43127043123.htm?spm=a312a.7700824.w4011-6765047385.25.Usfy8Y&id=43127043123&rn=7b5af4061de8905a6de7032ec4af54a8&abbucket=3

■ LM35 analog temperature sensor module

URL: https://world.taobao.com


Sample code building

nuvoTon

Please follow below steps to build executable binary.

Step 1: Import Modbus-Master-Slave-for-Arduino Modbus library

<<u>Sketch> → <Include Library> → <Add .ZIP library ...> → Select the .zip file path.</u> → <Open>

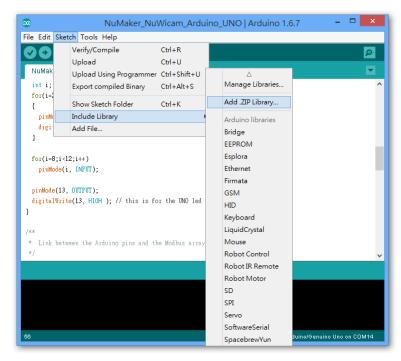


Step 2: Load NuWicam sample code for Arduino UNO board.

```
NuMaker_NuWicam_Arduino_UNO | Arduino 1.6.7
File Edit Sketch Tools Help
  NuMaker_NuWicam_Arduino_UNO
  int i;
  for(i=2;i<8;i++)
   pinMode(i, OUTPUT);
   digitalWrite(i, LOW );
  for(i=8;i<12;i++)
   pinMode(i, INPUT);
  pinMode(13, OUTPUT);
  digitalWrite(13, HIGH ); // this is for the UNO led pin
 * Link between the Arduino pins and the Modbus array
```

Step 3: Select configuration for Geduino UNO board.




<Tools> → <Board: "Arduino/Geduino UNO"> → Select Arduino/Geduino UNO.

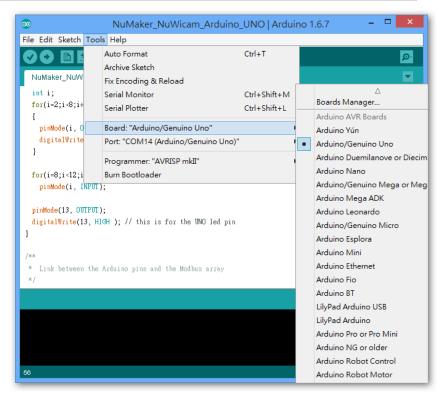

Step 4: Plug in Arduino USB line to PC and select Port.


<Tools> → <Port: COMx ("Arduino/Geduino UNO")> → Select COMx ("Arduino/Geduino UNO").

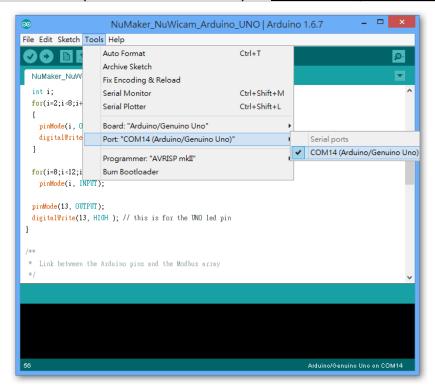

Step 5: Build sample code.




<<u>S</u>ketch> → <Verify/Compile>

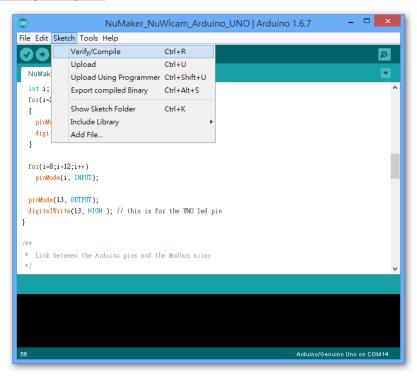

Step 6: Upload executable binary to board.

<<u>S</u>ketch> → <Upload>

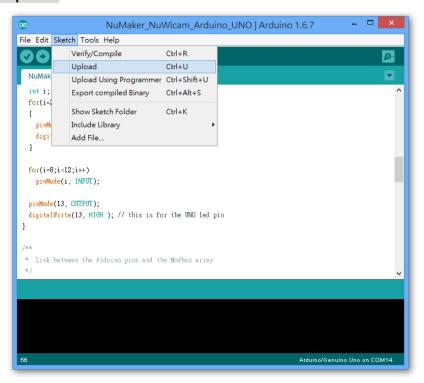


2.5 Function testing

Open NuMaker NuWicam Player mobile APP to test function. As below figure, it shows a



temperature value on the screen and these six circles are for every LED controllers. You can press these circles to light on/off LED.

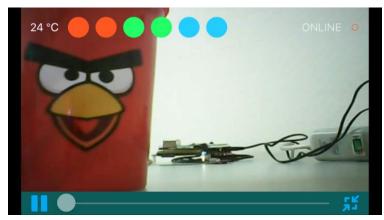



3 NUDUINO MEGA BOARD

3.1 Board schematics

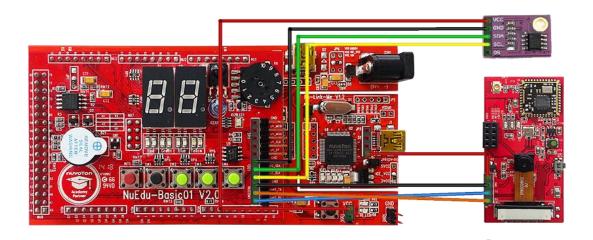


Figure 3-1 NuWicam-VGA board with Nuduino MEGA and its daughter board

3.2 Requirement

3.2.1 Hardware

- NuWicam board with firmware x 1
- Nuduino board x 1 (with USB Line, and NuEdu basic board)
- TI LM75a temperature sensor module board.
- Some dupont lines

3.2.2 Software

- Arduino IDE v1.5.8 (Must)
 - Download path: https://www.arduino.cc/en/Main/OldSoftwareReleases#previous
- NuWicam sample code and patch files for Nuduino board.
 - Path:

https://github.com/OpenNuvoton/NuMaker_NuWicam_Samples/NuMaker_NuWiCam_Nuduino/numaker_nuwicam_arduino_1.5.8_patch.exe

3.3 Purchasing information

Nuduino board x1
If you need to Nuduino board, we provide purchasing information for you. About more information, please visit the Nuvoton on-line store on Tmall(天貓).



URL: https://world.tmall.com/item/43127043123.htm?spm=a312a.7700824.w4011-6765047385.25.Usfy8Y&id=43127043123&rn=7b5af4061de8905a6de7032ec4af54a8&abbucket=3

■ TI LM75a temperature sensor module board

URL: https://world.taobao.com/item/534877355522.htm?spm=a312a.7700714.0.0.Z5guaz#detail

Notice: Please remember to short A0, A1 and A2 switch to GND.




3.4 Sample code building

Please follow below steps to build executable binary.

Step 1: Install NuWicam patch files for Nuduino board


You should specify the arduino-1.5.8 IDE installation path. For example, the arduino-1.5.8 IDE installation path is 'C:\arduino-1.5.8'. You need extract files into 'C:\arduino-1.5.8\hardware'.

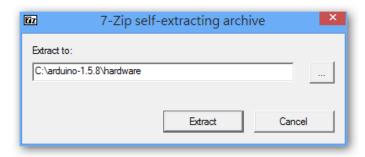

Step 2: Load NuWicam sample code for Nuduino board.

To execute C:\arduino-1.5.8\arduino.exe and Load NuWicam sample code.


<<u>File> → <Examples> → <NuMaker_NuWicam_M451>.</u>

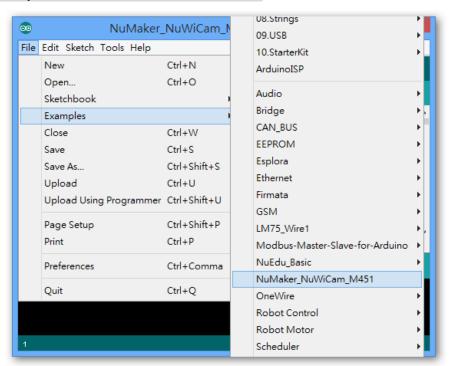



Step 3: Select configuration for Nuduino board.


<Tools> → <Board: "NuEdu/M451"> → Select NuEdu-M451.

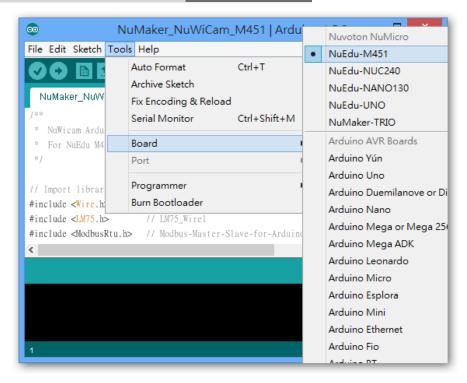

Step 4: Build sample code.

<<u>S</u>ketch> → <Verify/Compile>


Notice: The NuWicam patch for Nuduino already includes modified MODBUS library. You should remove Modbus-Master-Slave-for-Arduino Modbus library if necessary.

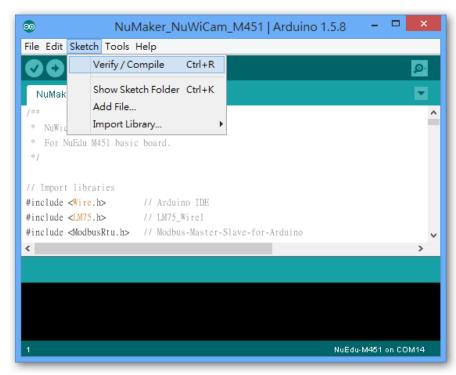



Step 5: Upload executable binary to board.

<File> → <Upload>

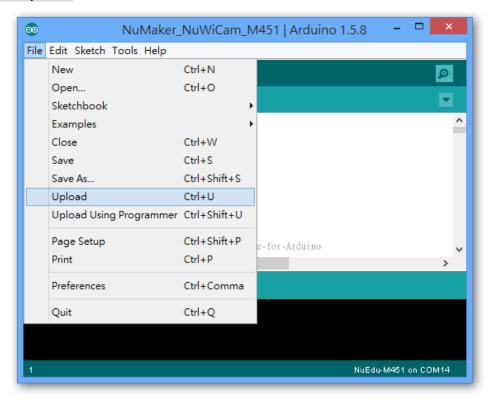

3.5 Function testing

Current temperature information is shown on 7-segment LEDs. After touching the LM75 temperature sensor module, you can see increased value. You can also open NuMaker NuWicam Player mobile APP to test function. As below figure, it shows a temperature value on the screen and these six circles are for every LED controllers. You can press these circles to light on/off LED.



4 REVISION HISTORY

Date	Revision	Description
2016.07.31	1.00	Initially issued.



Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

Please note that all data and specifications are subject to change without notice.

All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.