

ARM® ARM926EJ-S 32-bit Microprocessor

NuMaker NuWicam Samples

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com



Table of Contents

1	IN	FRODUCTION	3
2		DUINO UNO (OR NUDUINO UNO) BOARD	
	2.1	Board schematics	
	2.2	Requirement	. 5
	2.2.1	Hardware	
	2.2.2	Software	5
	2.3	Purchasing information	. 5
	2.4	Arduino IDE installation	. 6
	2.5	Sample code building	. 9
	2.6	Function testing	11
3	NU	IDUINO MEGA BOARD	12
	3.1	Board schematics	12
	3.2	Requirement	12
	3.2.1	Hardware	12
	3.2.2	Software	.12
	3.3	Purchasing information	12
	3.4	Sample code building	14
	3.5	Function testing	16
4	RE	VISION HISTORY	17



1 INTRODUCTION

In this document, we will descript how to construct the NuMaker NuWicam^[1] samples. These samples include LEDs controlling, get temperature value from digital or analog sensor. These samples can be executed on Arduino UNO, Nuduino or Nubed board. We will descript more details in sub-chapter as below.

Arduino(or Nuduino) UNO board

[1] NuWicam is short for NuMaker NuWicam.



2 ARDUINO UNO (OR NUDUINO UNO) BOARD

2.1 Board schematics

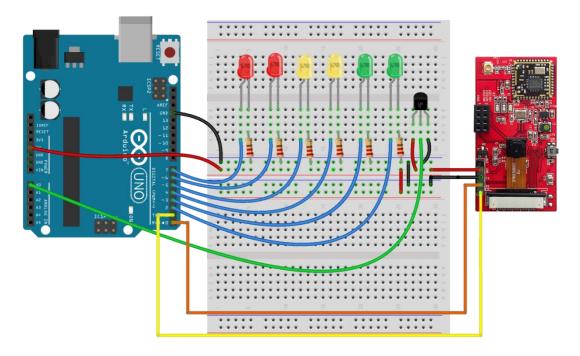


Figure 2-1 NuWicam-VGA board with Arduino UNO

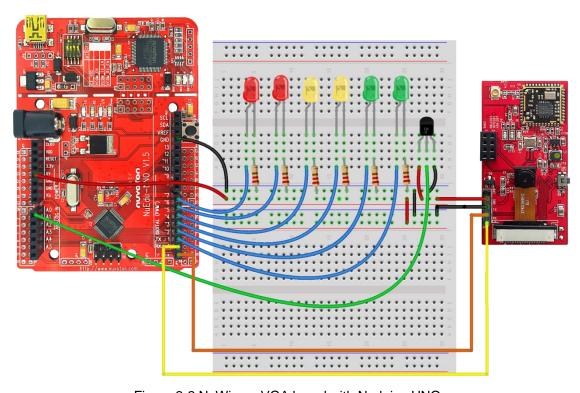


Figure 2-2 NuWicam-VGA board with Nuduino UNO



2.2 Requirement

2.2.1 Hardware

- NuWicam board with firmware x 1
- Geduino UNO(or Nuduino UNO) board x 1 (with USB Line, DC Power adapter)
 - If your board is Nuduino UNO, please remember to switch 2, 3 and 4 of SW2 to 'OFF' on the board.
- Red LEDs x 2, Green LEDs x 2 and Blue LEDs x 2
- 220 ohm resistor x 6
- Some dupont lines
- LM35 analog temperature sensor
- USB power adapter(5V/1A).

2.2.2 Software

- Arduino IDE v1.6.9 (or later)
 - You can refer the page to install arduino IDE for NuEdu-UNO. https://github.com/OpenNuvoton/NuEdu-UNO
- Modified Modbus-Master-Slave-for-Arduino Modbus library
 - Please download library on github server.
 - Path:
 - https://github.com/OpenNuvoton/NuMaker_NuWicam_Samples/NuMaker_NuWiCam_Arduino_UNO/Modbus-Master-Slave-for-Arduino.zip
- NuWicam sample code for Arduino UNO/Mega board.
 - Please download source on github server.
 - Path:

https://github.com/OpenNuvoton/NuMaker_NuWicam_Samples/NuMaker_NuWiCam_Arduino_UNO

2.3 Purchasing information

Nuduino UNO board

URL: https://world.tmall.com/item/523268526584&rn=93873a1038dd4952f86ee4c2766ccae0&abbucket=10

■ LM35 analog temperature sensor module

URL: https://world.taobao.com




2.4 Arduino IDE installation

Step 1: Download Arduino 1.6.10 IDE from https://www.arduino.cc/en/Main/Software




- Step 2: Extract arduino-1.6.10-windows.zip to c:\arduino-1.6.10.
- Step 3: Double-click arduino.exe, and then go to File->Preferences.

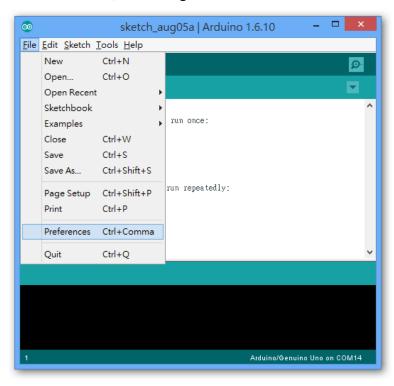




Step 4: Paste following URL to 'Additional Boards Manager URLs' input field:

https://raw.githubusercontent.com/OpenNuvoton/NuEdu-UNO/master/package_nuvoton_index.json

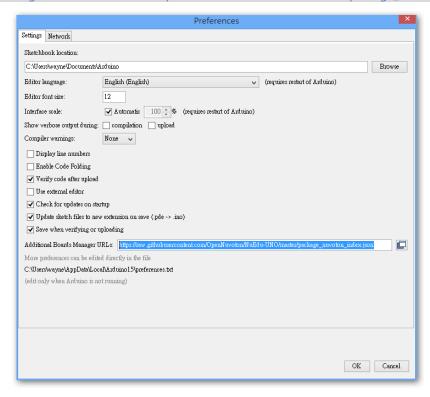


Step 5: Under Tools->Board->Boards Manger, search NuEdu-UNO by Nuvoton, click Install

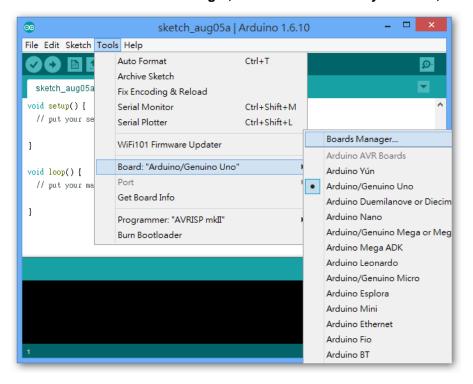



Step 6: You can select NuEdu-UNO in Arduino IDE now.

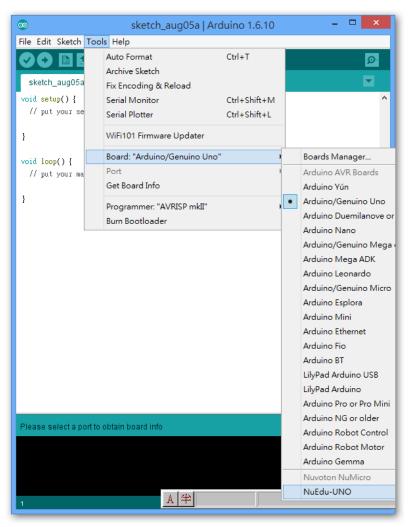




2.5 Sample code building


Please follow below steps to build executable binary.

Step 1: Import the modified Modbus-Master-Slave-for-Arduino Modbus.zip library

<<u>Sketch> → <Include Library> → <Add .ZIP library ...> → Select the .zip file path</u>. → <Open>

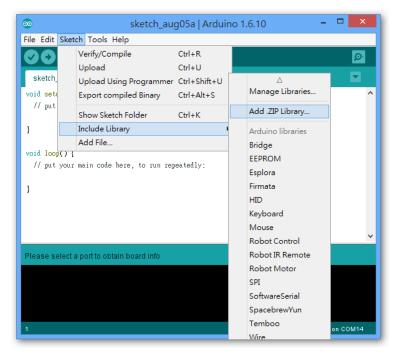


Step 2: Load NuWicam sample code for Arduino UNO board.

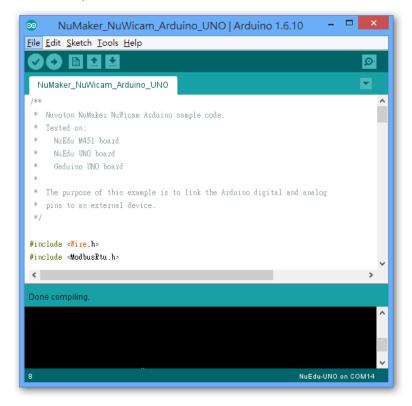




Step 3: Select configuration for Geduino UNO board.

<Tools> → <Board: "Arduino/Geduino UNO"> → Select Arduino/Geduino UNO.

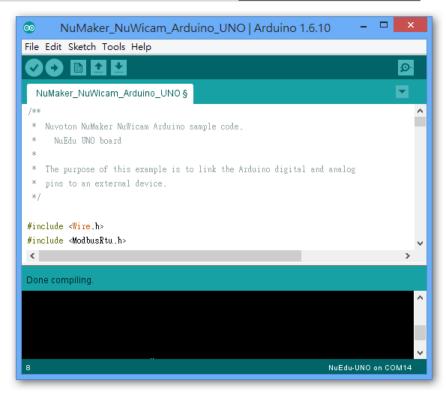

Step 4: Build sample code.


<Sketch> → <Verify/Compile>

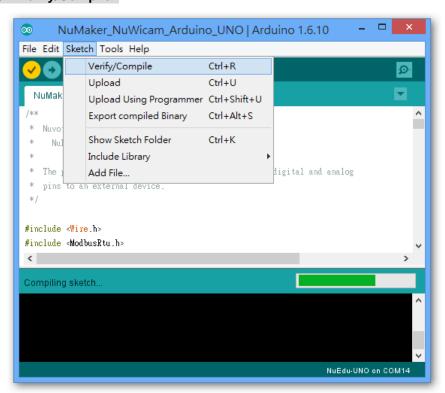




Step 5: Upload executable binary to board.

<<u>S</u>ketch> → <Upload>

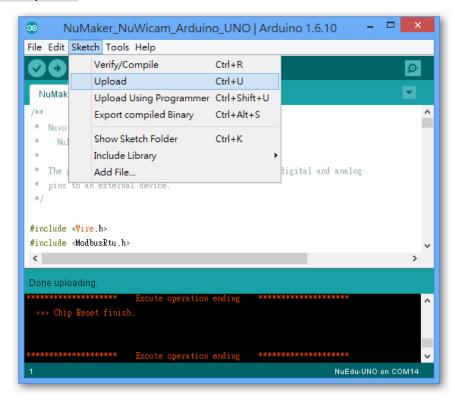

2.6 Function testing

Open NuMaker NuWicam Player mobile APP to test function. As below figure, it shows a temperature value on the screen and these six circles are for every LED controllers. You can press these circles to light on/off LED.

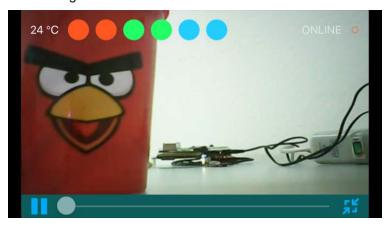



3 NUDUINO MEGA BOARD

3.1 Board schematics

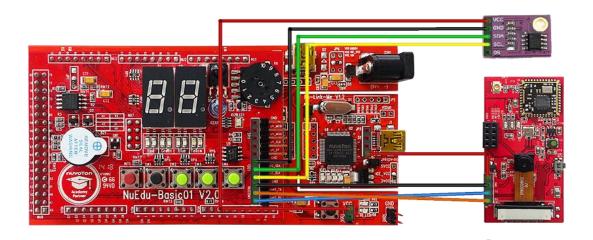


Figure 3-1 NuWicam-VGA board with Nuduino MEGA and its daughter board

3.2 Requirement

3.2.1 Hardware

- NuWicam board with firmware x 1
- Nuduino board x 1 (with USB Line, and NuEdu basic board)
- TI LM75a temperature sensor module board.
- Some dupont lines
- USB power adapter(5V/1A).

3.2.2 Software

- Arduino IDE v1.5.8 (Must)
 - Download path: https://www.arduino.cc/en/Main/OldSoftwareReleases#previous
- NuWicam sample code and patch files for Nuduino board.
 - Path:

https://github.com/OpenNuvoton/NuMaker_NuWicam_Samples/NuMaker_NuWiCam_Nuduino/numaker_nuwicam_arduino_1.5.8_patch.exe

3.3 Purchasing information

Nuduino board x1
If you need to Nuduino board, we provide purchasing information for you. About more information, please visit the Nuvoton on-line store on Tmall(天貓).



URL: https://world.tmall.com/item/43127043123.htm?spm=a312a.7700824.w4011-6765047385.25.Usfy8Y&id=43127043123&rn=7b5af4061de8905a6de7032ec4af54a8&abbucket=3

■ TI LM75a temperature sensor module board

URL: https://world.taobao.com/item/534877355522.htm?spm=a312a.7700714.0.0.Z5guaZ#detail

Notice: Please remember to short A0, A1 and A2 switch to GND.



3.4 Sample code building

Please follow below steps to build executable binary.

Step 1: Install NuWicam patch files for Nuduino board


You should specify the arduino-1.5.8 IDE installation path. For example, the arduino-1.5.8 IDE installation path is 'C:\arduino-1.5.8'. You need extract files into 'C:\arduino-1.5.8\hardware'.



Step 2: Load NuWicam sample code for Nuduino board.

To execute C:\arduino-1.5.8\arduino.exe and Load NuWicam sample code.


<<u>File> → <Examples> → <NuMaker_NuWicam_M451>.</u>

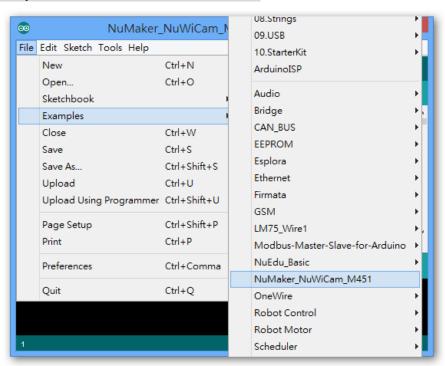



Step 3: Select configuration for Nuduino board.


<Tools> → <Board: "NuEdu/M451"> → Select NuEdu-M451.

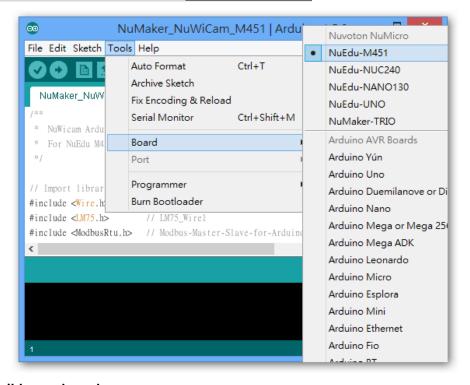

Step 4: Build sample code.

<<u>S</u>ketch> → <Verify/Compile>


Notice: The NuWicam patch for Nuduino already includes modified MODBUS library. You should remove Modbus-Master-Slave-for-Arduino Modbus library if necessary.

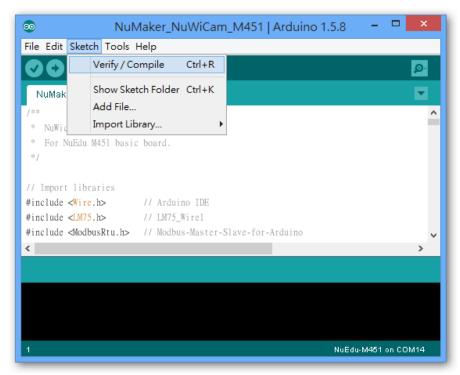



Step 5: Upload executable binary to board.

<File> → <Upload>

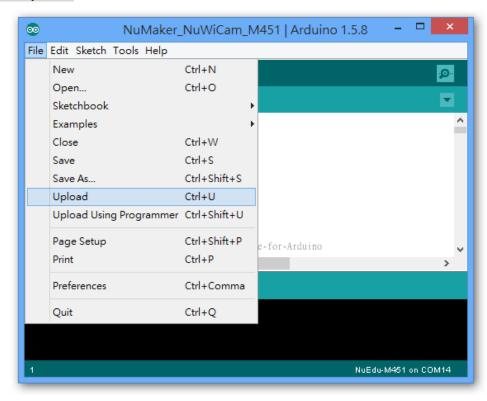

3.5 Function testing

Current temperature information is shown on 7-segment LEDs. After touching the LM75 temperature sensor module, you can see increased value. You can also open NuMaker NuWicam Player mobile APP to test function. As below figure, it shows a temperature value on the screen and these six circles are for every LED controllers. You can press these circles to light on/off LED.



4 REVISION HISTORY

Date	Revision	Description
2016.07.31	1.00	1. Initially issued.

nuvoTon

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

Please note that all data and specifications are subject to change without notice.

All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.