
# MIT AI2 204 loT with MIT App Inventor


Fundamental

Description: In this project, a temperature and humidity sensor module is connected to your Raspberry Pi. The Raspberry Pi sends the ambient temperature and humidity measurements every 10 seconds to the Android mobile phone where they are displayed on the screen.


Hygrothermograph is an important tool in our lives to give us data on the temperature and humidity in our environment. In this project, we will use the RPi to read Temperature and Humidity data of the DHT11 Module.

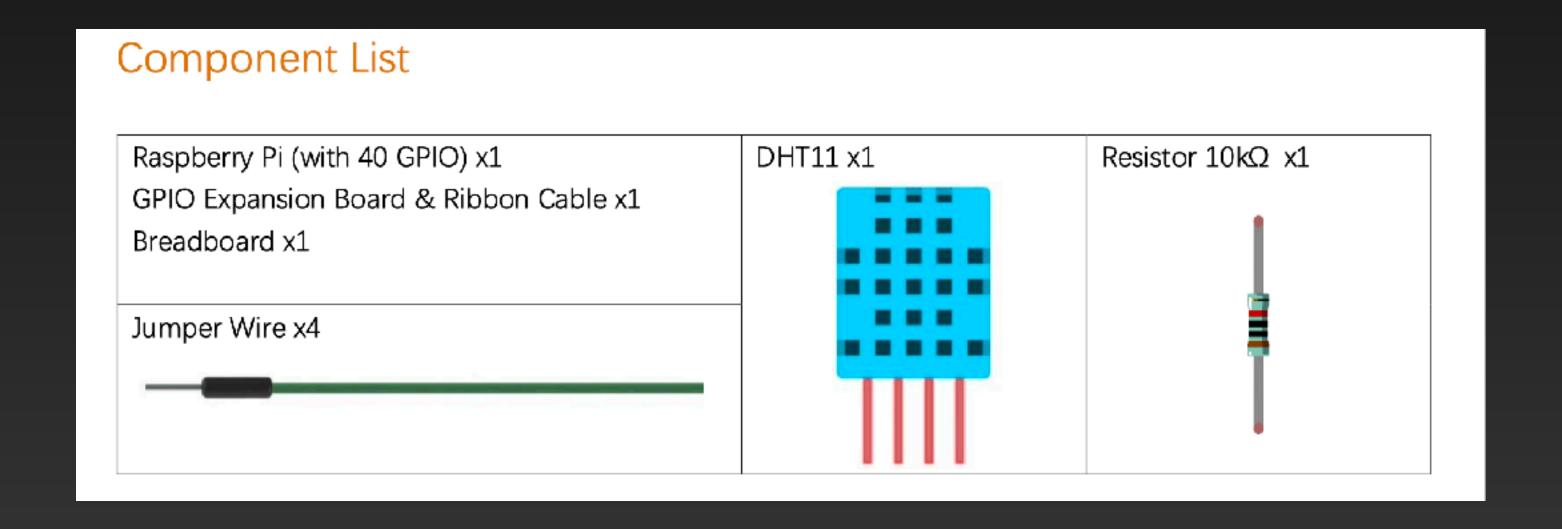


The Temperature & Humidity Sensor DHT11 is a compound temperature & humidity sensor, and the output digital signal has been calibrated by its manufacturer.

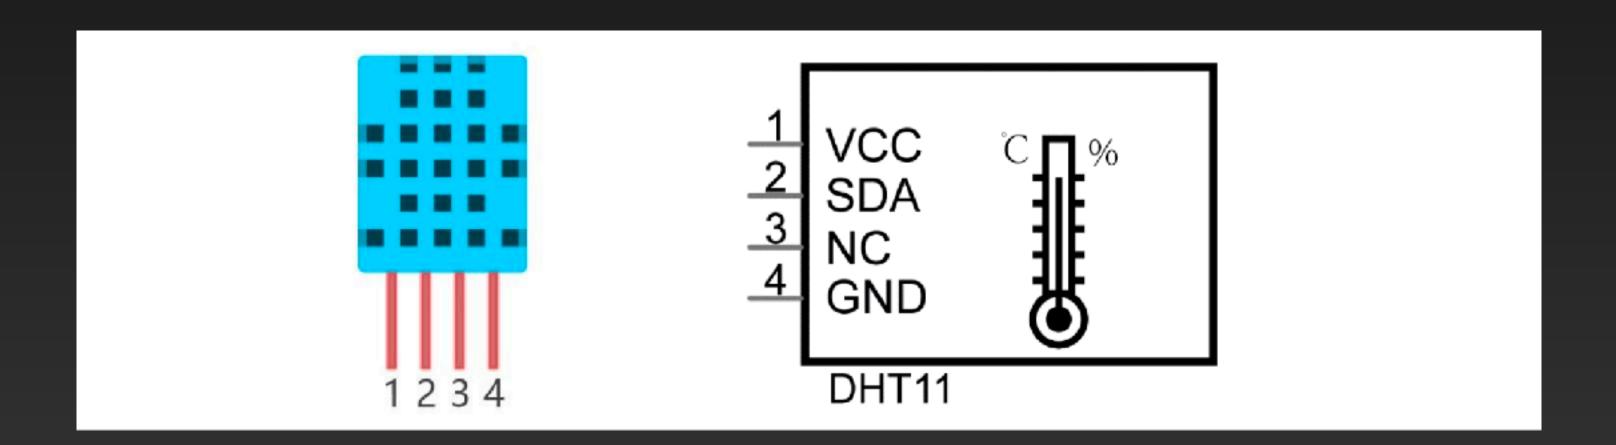


After being powered up, it will initialize in 1 second. Its operating voltage is within the range of 3.3V-5.5V. The SDA pin is a data pin, which is used to communicate with other devices. The NC pin (Not Connected Pin) are a type of pin found on various integrated circuit packages. Those pins have no functional purpose to the outside circuit (but may have an unknown functionality during manufacture and test). Those pins **should not be connected** to any of the circuit connections.

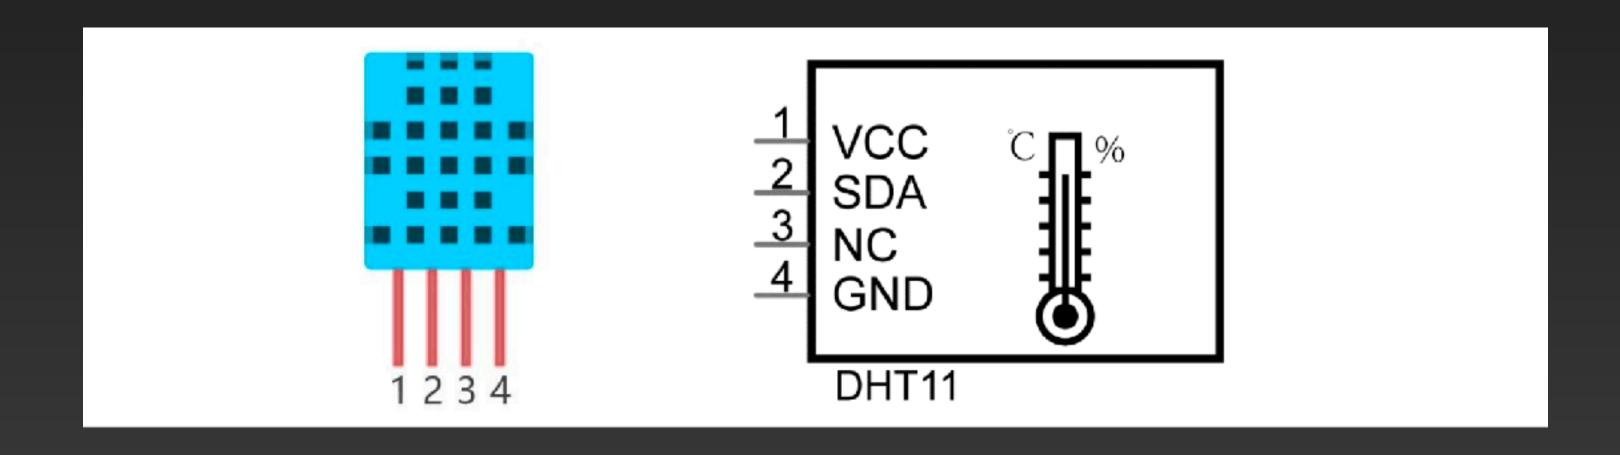

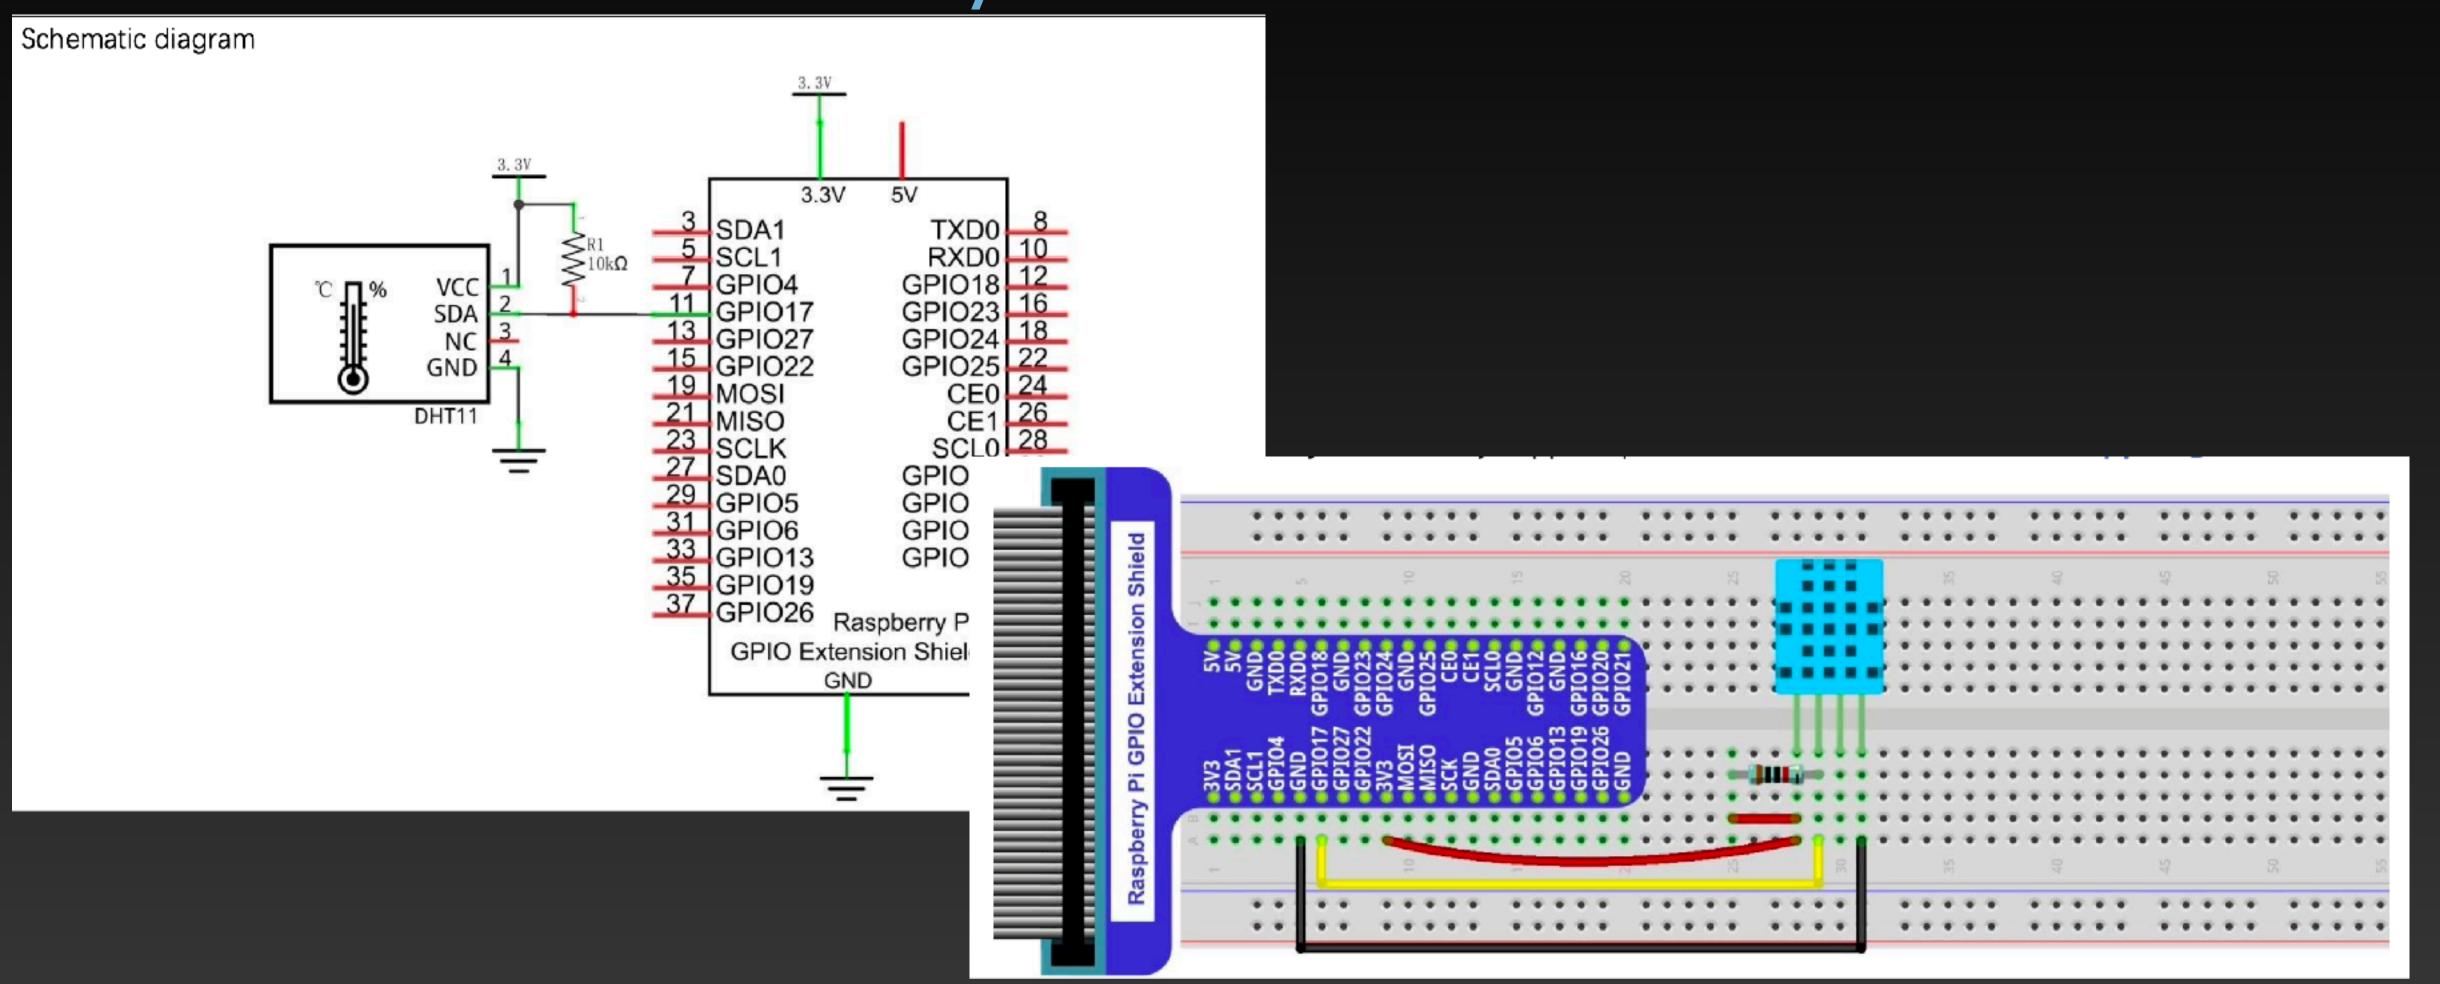

Build your MIT App

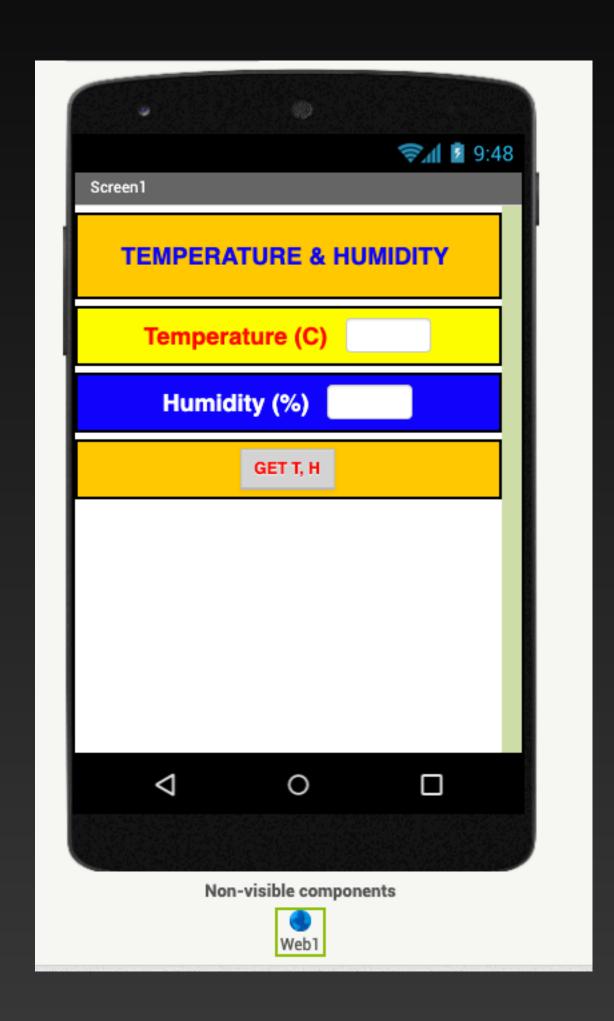

```
initialize global TH to 📜 " 🔳 "
initialize global RaspberryPi to
                            " http://192.168.1.xxx
when Button1 .Click
   set Web1 . Url to get global RaspberryPi -
   call Web1 ▼ .Get
responseCode
                   responseType responseContent
                      get responseContent -
do set global TH v to
    set TextBox1 . Text to segment text
                                           get global TH ▼
                                     length
    set TextBox2 ▼ . Text ▼ to
                              segment text
                                            get global TH 🔻
```

Prepare the environment:

sudo pip3 install adafruit-circuitpython-dht


There is new updates to the library:

https://github.com/adafruit/Adafruit\_CircuitPython\_DHT


Write the pythons control program

```
import time
10 from flask import Flask, render_template
  import RPi.GPI0 as GPI0
  import adafruit dht
  from board import *
  # GPI017
  SENSOR PIN = D17
  app = Flask( name
  @app.route('/', methods=['GET','POST'])
  def get_data():
      dht11 = adafruit_dht.DHT11(SENSOR_PIN, use_pulseio=False)
      temp = dhtll.temperature
      hum = dhtll.humidity
      tempint = int(temp)
      humint = int(hum)
      if tempint < 10:
           datat = "0" + str(tempint)
       else:
           datat = str(tempint)
      datath = datat + "," + str(humint)
       return(datath)
      name == ' main ':
      app.run(debug=True, port=<mark>80</mark>, host='0.0.0.0',use_reloader=False)
```

We will learn how to make motor rotate.

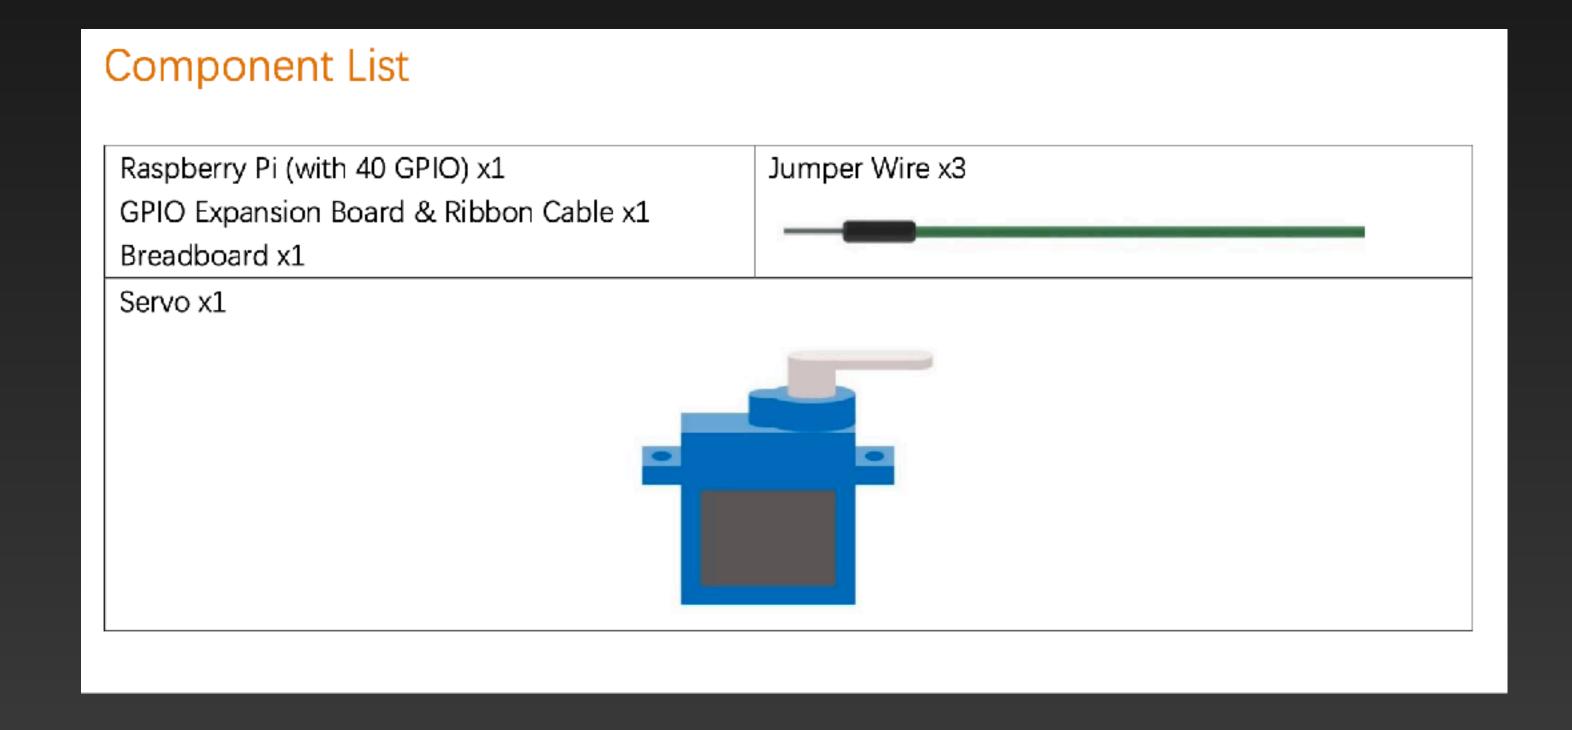


Servo is a compact package which consists of a DC Motor, a set of reduction gears to provide torque, a sensor and control circuit board. Most Servos only have a 180-degree range of motion via their "horn". Servos can output higher torque than a simple DC Motor alone and they are widely used to control motion in model cars, model airplanes, robots, etc. Servos have three wire leads which usually terminate to a male or female 3-pin plug. Two leads are for electric power: Positive (2-VCC, Red wire), Negative (3-GND, Brown wire), and the signal line (1-Signal, Orange wire) as represented in the Servo provided in your Kit.

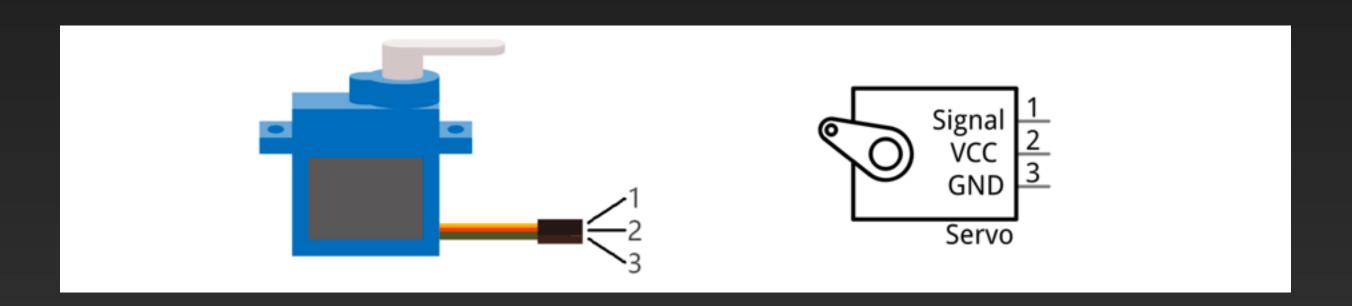


We will use a 50Hz PWM signal with a duty cycle in a certain range to drive the Servo. The lasting time 0.5ms- 2.5ms of PWM single cycle high level corresponds to the Servo angle 0 degrees - 180 degree linearly. Part of the corresponding values are as follows:

Note: the lasting time of high level corresponding to the servo angle is absolute instead of accumulating. For example, the high level time lasting for 0.5ms correspond to the 0 degree of the servo. If the high level time lasts for another 1ms, the servo rotates to 45 degrees.

High level time	Servo angle
0.5ms	0 degree
1ms	45 degree
1.5ms	90 degree
2ms	135 degree
2.5ms	180 degree

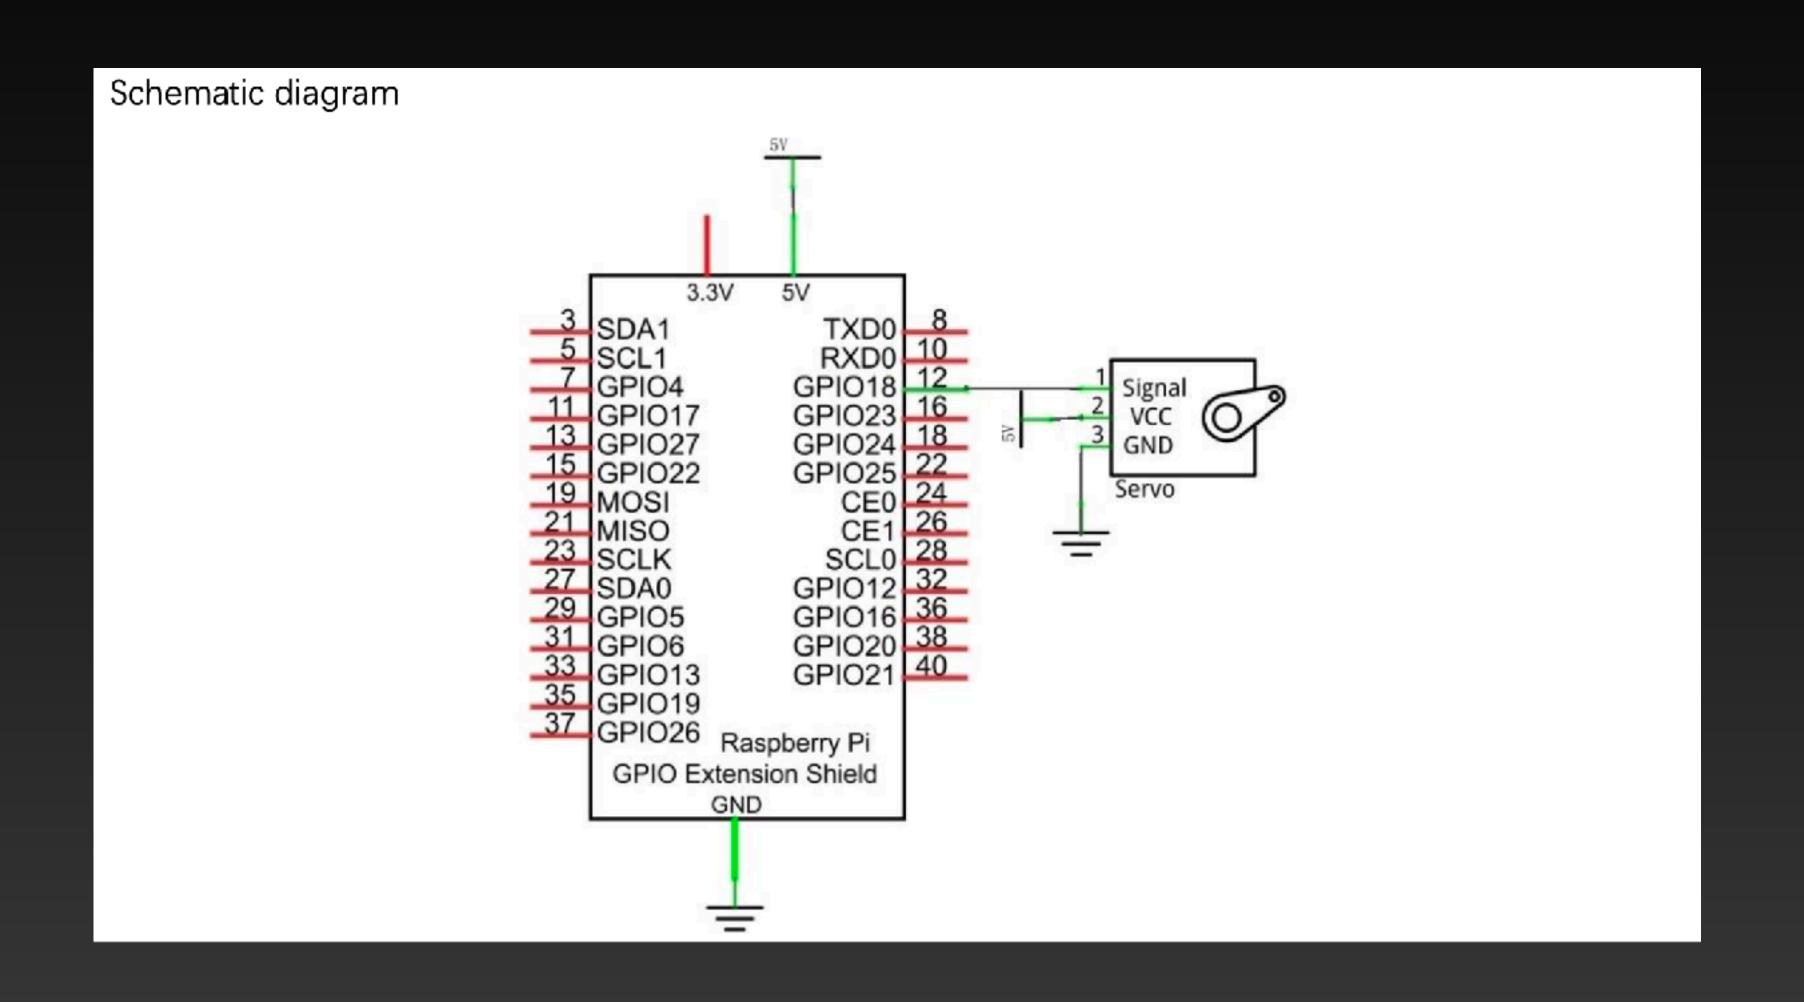

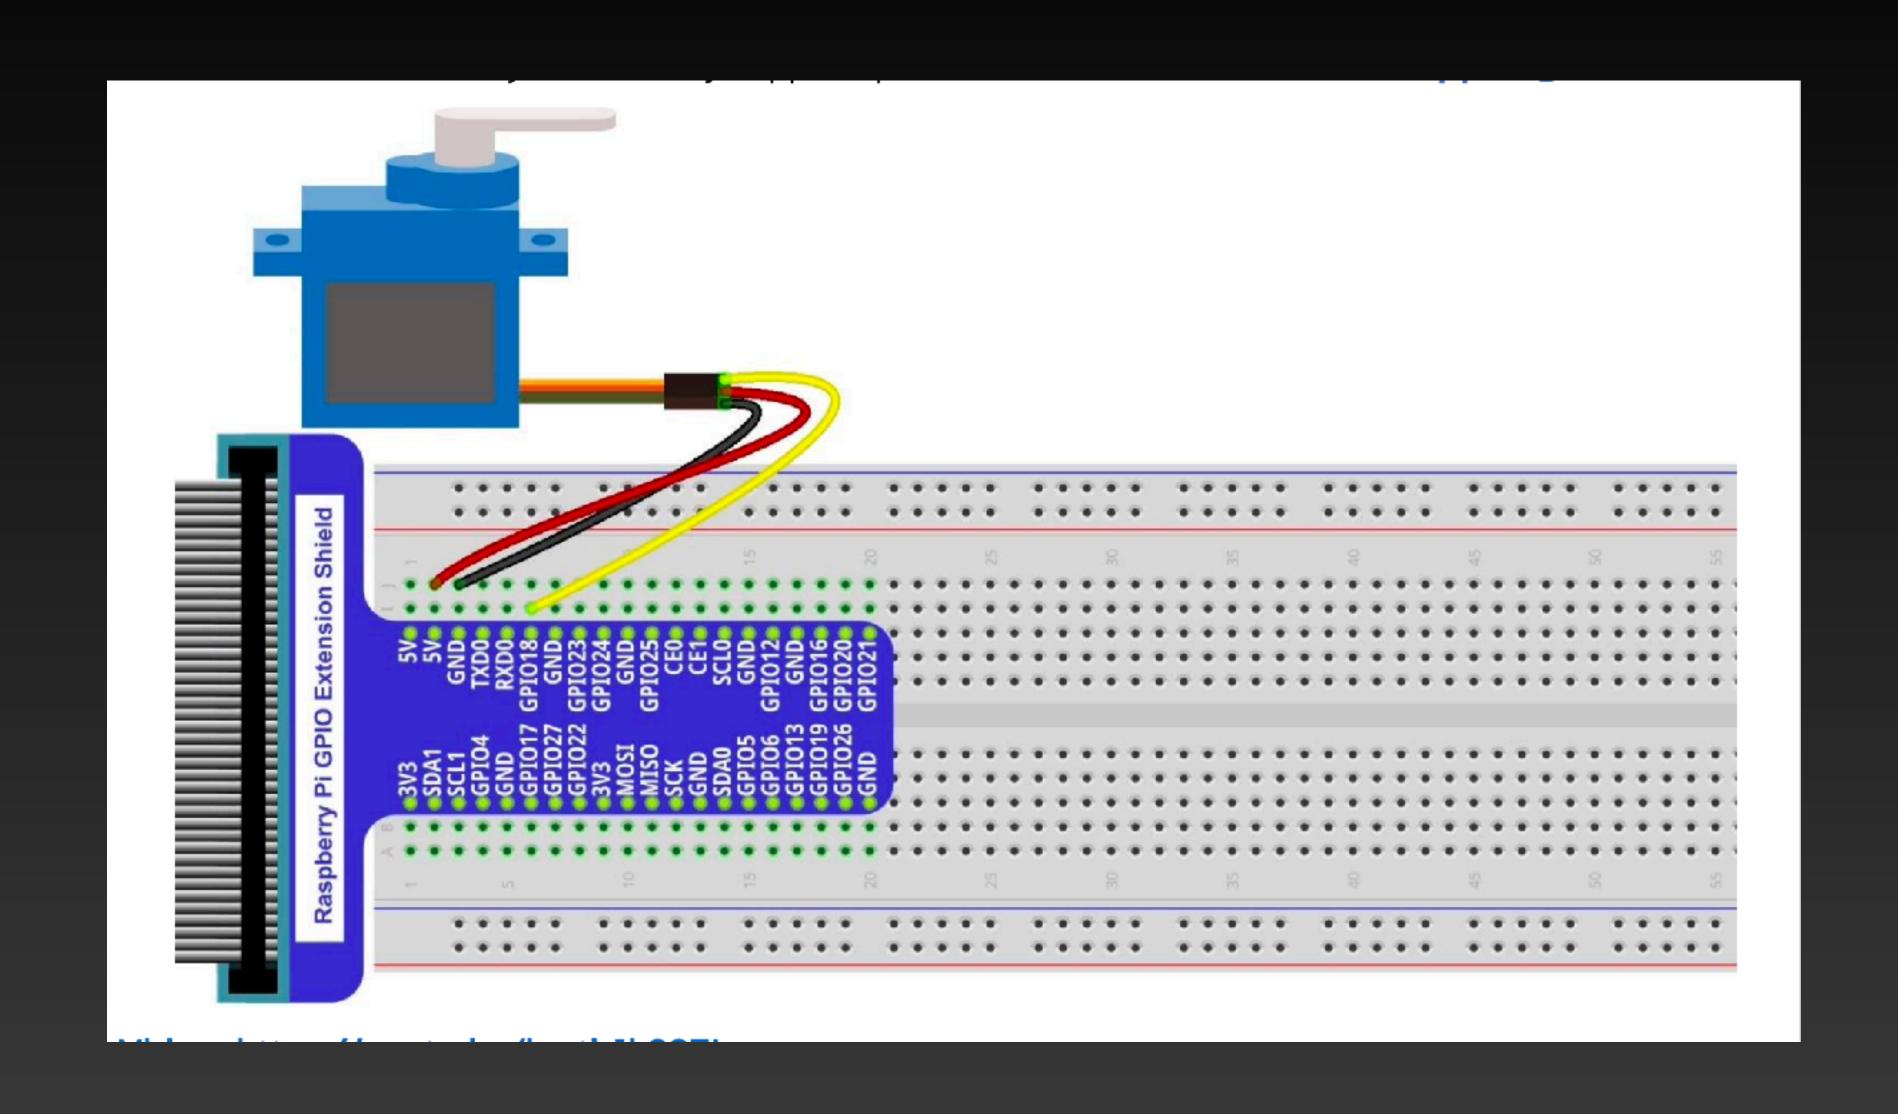

```
import RPi.GPIO as GPIO
import time
OFFSE_DUTY = 0.5 #define pulse offset of servo
SERVO_MIN_DUTY = 2.5 + OFFSE_DUTY #define the minimum angle of servo
SERVO_MAX_DUTY = 12.5 + 0FFSE_DUTY #define the maximum angle of servo
servoPin = 12
def map(value, fromLow, fromHigh, toLow, toHigh):
    return (toHigh-toLow)*(value-fromLow)/(fromHigh-fromLow) + toLow
```

```
def setup():
    global p
    GPIO.setmode(GPIO.BOARD) #use PHYSICAL GPIO numbering
    GPIO.setup(servoPin, GPIO.OUT) #set servoPin to OUTPUT mode
    GPIO.setup(servoPin, GPIO.LOW) #make servoPin output to LOW level

    p = GPIO.PWM(servoPin, 50) #set Freq to 50Hz
    p.start(0) #set initial duty cycle to 0
```

```
def servoWrite(angle):
    if(angle<0):
        angle = 0
    elif(angle > 180):
        angle = 180
    p.ChangeDutyCycle(map(angle,0,180,SERVO_MIN_DUTY,SERVO_MAX_DUTY)) #map the angle to duty cycle and output it
```

```
def loop():
    while True:
        for dc in range(0, 181, 1): # make servo rotate from 0 to 180
            servoWrite(dc) #write dc value to servo
            time.sleep(0.001)
        time.sleep(0.5)
        for dc in range(180, -1, -1): # make the servo rotate from 180 to 0 deg
            servoWrite(dc)
            time.sleep(0.001)
        time.sleep(0.5)
```

```
def destroy():
    p.stop()
    GPIO.cleanup()
if __name__ == '__main__': # program entrance
    print('Program is starting...')
    setup()
    try:
        loop()
    except KeyboardInterrupt: #press ctrl-c to end the program
        destroy()
```

#### Homework

Finish class project to setup Temperature and Humidity sensor, and post questions you have encounter