





5V C14 100nF@50V ETH1.PAIR_A_PGND
ETH1.PAIR_A_N
ETH1.PAIR_B_P
ETH1.PAIR_C_P
ETH1.PAIR_C_N
ETH1.PAIR_D_N
ETH1.PAIR_D_N
ETH1.PAIR_D_N
ETH1.PAIR_D_N
ETH1.PAIR_D_N ETH1{ETH_TPI}D-USB 2 Power Switches and Connectors
Power is always on, switches are there for safety
(they will deliver max 1A and shyt off on overcurrent)
R8
10k C4 100nF@50\ U3 TPS2065CDBV C5 470nF@50V R11 300R GND 5V 5 IN → GND ETH1.LED_G HR911130A GREEN 87 10k C9 470nF@50V R12 300R → GND ETH1.LED_Y **→** NELLON GND SHIELD J6 USB_A_Stacked VBUS1 5 -dusbh1{P N} USBH1.P USBH1.N USBH2.P USBH2.N D1+ 3 D1- 2 D2+ 7 D2- 6 GND —dusbh2{P N} C15 100nF@50V ETH2{ETH_TPI}D-R13 300R J8 HR911130A ETH2.LED_G GREEN R14 300R ETH2.LED_Y _


A YELLO Sheet: /subpcb_logic/Connectors/ File: Connectors.kicad_sch Title: Size: A3 Date: KiCad E.D.A. 8.0.4

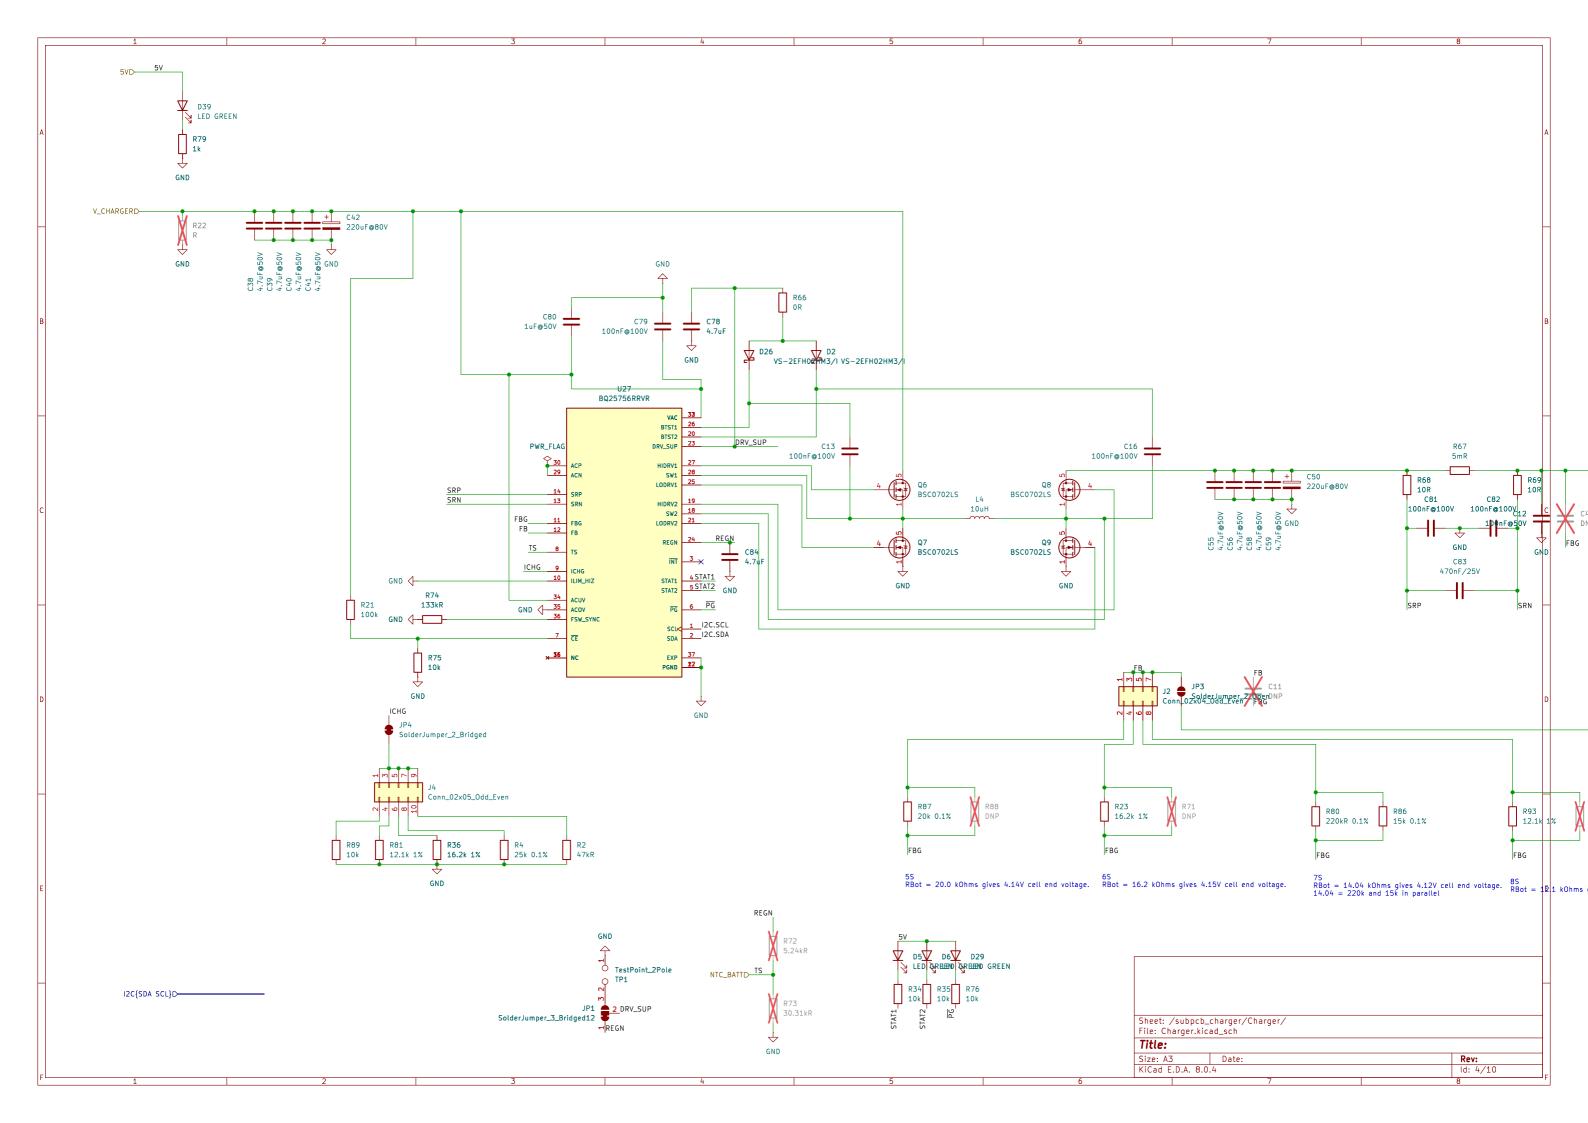


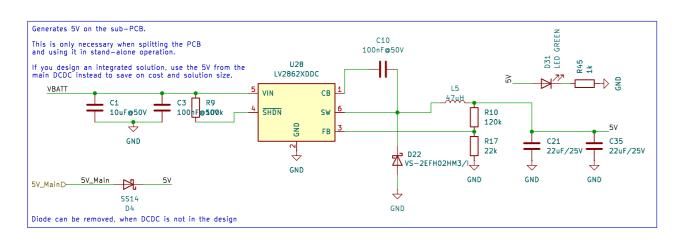


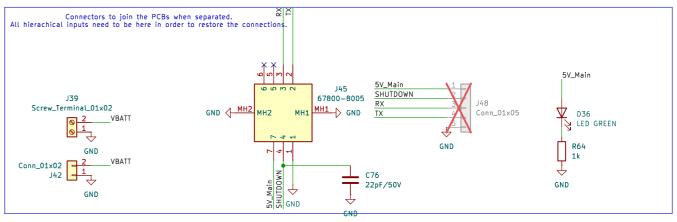


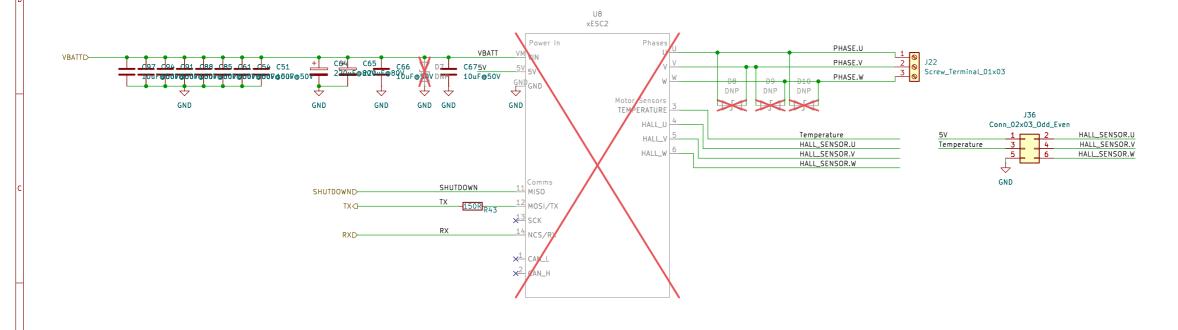

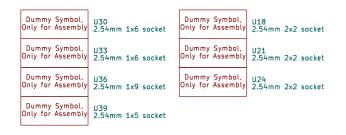


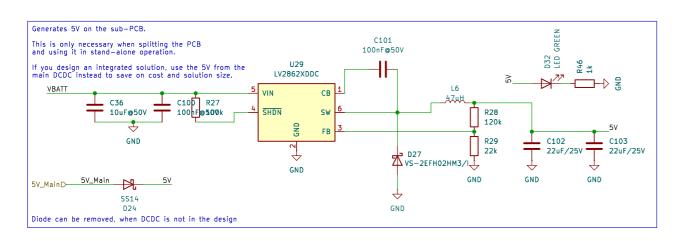


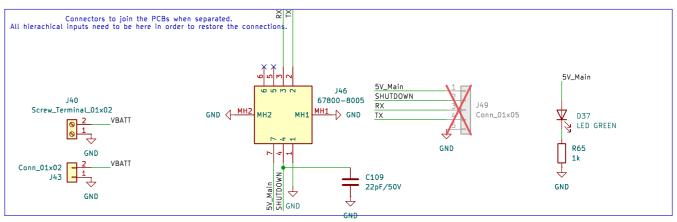


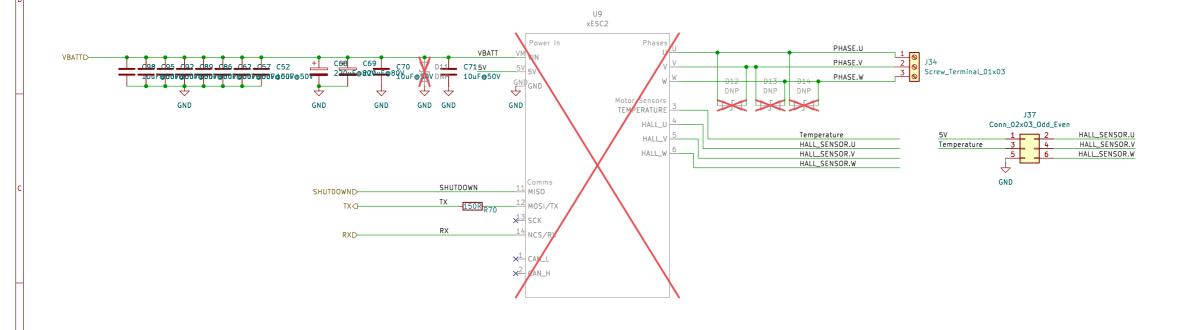

Dummy Symbol, Only for Assembly 2.54mm 1x6 socket Dummy Symbol, Only for Assembly 2.54mm 1x9 socket Dummy Symbol, Only for Assembly 2.54mm 1x9 socket Dummy Symbol, Only for Assembly 2.54mm 1x5 socket Dummy Symbol, Only for Assembly 2.54mm 1x5 socket Dummy Symbol, Only for Assembly 2.54mm 1x5 socket

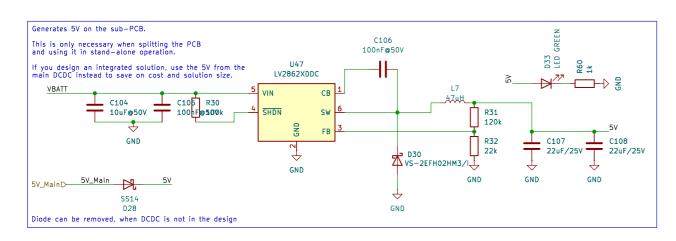

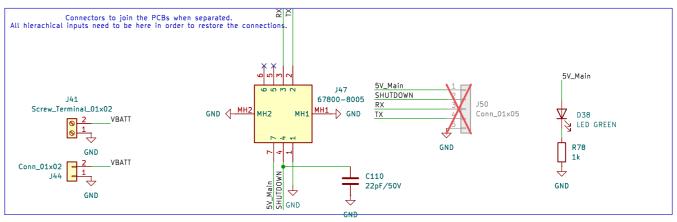

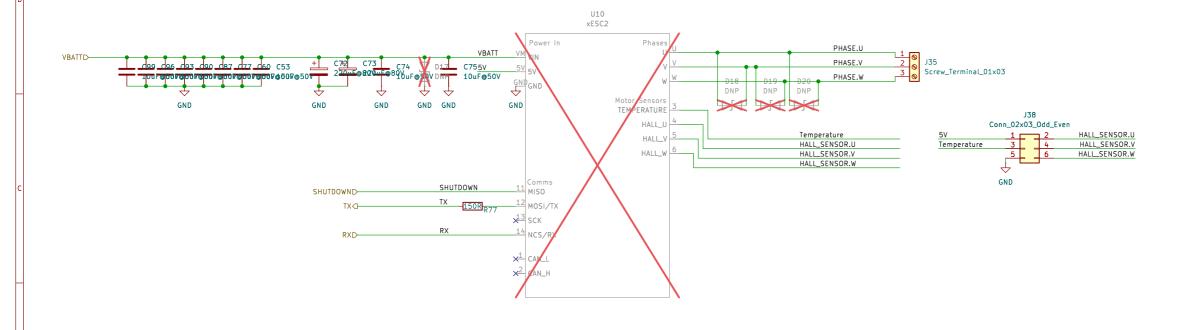

Dummy Symbol, Only for Assembly 2.54mm 1x6 socket Dummy Symbol, Only for Assembly 2.54mm 1x9 socket Dummy Symbol, Only for Assembly 2.54mm 1x9 socket Dummy Symbol, Only for Assembly 2.54mm 1x5 socket Dummy Symbol, Only for Assembly 2.54mm 1x5 socket Dummy Symbol, Only for Assembly 2.54mm 1x5 socket

b.

