

Lab 4 plus

Nama: Yasmin Batrisyia Binti Zahiruddin

Section: 02

*Lab 4 plus is a combination of Lab 4 and an extra activity on ARP.

Packet Tracer Simulation – Exploration of ARP and Switch Table Communications

Objectives

- To explore ARP and switching operations.

Introduction

The topology is given to you. All IP addresses have been assigned to all devices. Please follow each step in sequence.

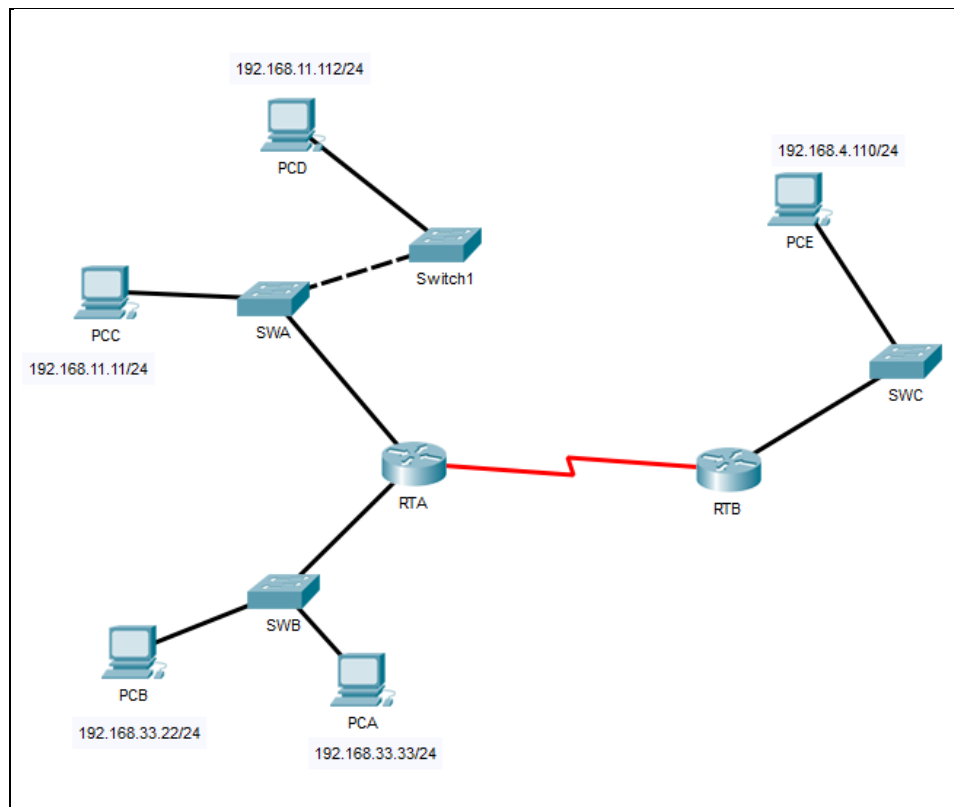


Figure 1

Part 1: Review the topology

Step 1: Open the *Lab_4_ARP.pkt*, and Perform the following tasks.

- a. At Router RTA, enter the CLI. At the command prompt type the following commands. Snap the results after the last command and paste it here.

```
RTA>enable
RTA#show arp
```

```
RTA>enable
RTA#show arp
Protocol  Address          Age (min)  Hardware Addr  Type   Interface
Internet  192.168.11.1      -          0002.4A00.0E91  ARPA   FastEthernet1/0
Internet  192.168.33.1      -          000C.CF0C.593A  ARPA   FastEthernet0/0
```

- b. At Router RTB, enter the CLI. At the command prompt type the commands as in Figure 2. Snap the results after the last command and paste it here.

```
RTB>enable
RTB#show arp
Protocol  Address          Age (min)  Hardware Addr  Type   Interface
Internet  192.168.4.1      -          0001.977A.B614  ARPA   FastEthernet0/0
RTB#
```

- c. At Switches SWA, SWAB and SWC, enter the CLI. At the command prompt type the following commands. Snap the results after the last command and paste it here.

```
SWA>enable
SWA#show arp
SWA#show mac-address-table
```

SWA:

```
SWA>enable
SWA#show arp
SWA#show mac-address-table
      Mac Address Table
-----
Vlan  Mac Address      Type      Ports
----  -
1     0002.4a00.0e91    DYNAMIC   Fa0/1
1     000c.8546.7d85    DYNAMIC   Fa1/1
```

SWB:

```
SWB>enable
SWB#show arp

SWB#show mac-address-table
      Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
1       000c.cf0c.593a   DYNAMIC Fa0/1
```

SWC:

```
SWC>enable
SWC#show arp

SWC#show mac-address-table
      Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
1       0001.977a.b614   DYNAMIC Fa0/1
```

- d. At PCA, click on the PC icon, and then choose Desktop-Command Prompt. At the command prompt type **arp -a** and click enter. Snap the results after the last command and paste it here. Do this to all PCs in the topology.

PCA:

```
Cisco Packet Tracer PC Command Line 1.0
C:\>arp
Cisco Packet Tracer PC ARP
Display ARP entries: arp -a
Clear ARP table: arp -d

C:\>arp -a
No ARP Entries Found
```

PCB:

```
Cisco Packet Tracer PC Command Line 1.0
C:\>arp
Cisco Packet Tracer PC ARP
Display ARP entries: arp -a
Clear ARP table: arp -d

C:\>arp -a
No ARP Entries Found
C:\>
```

PCC:

```
Cisco Packet Tracer PC Command Line 1.0
C:\>arp
Cisco Packet Tracer PC ARP
Display ARP entries: arp -a
Clear ARP table: arp -d

C:\>arp -a
No ARP Entries Found
C:\>
```

PCD:

```
Cisco Packet Tracer PC Command Line 1.0
C:\>arp
Cisco Packet Tracer PC ARP
Display ARP entries: arp -a
Clear ARP table: arp -d

C:\>arp -a
No ARP Entries Found
C:\>
```

PCE:

```
Cisco Packet Tracer PC Command Line 1.0
C:\>arp
Cisco Packet Tracer PC ARP
Display ARP entries: arp -a
Clear ARP table: arp -d

C:\>arp -a
No ARP Entries Found
C:\>
```

- e. What are your thoughts on the results?

There is no communication is being made yet at all these PCs.

Part 2: Generate Network Traffic

Step 1: Generate traffic between PCA and PCB.

In the command prompt Perform the following tasks task to reduce the amount of network traffic viewed in the simulation.

- Click **PCA** and click the Desktop tab > Command Prompt.
- Enter the **ping 192.168.33.22** command. This may take a few seconds.
- In the Command prompt of PCA, type **arp -a**. Paste the result of this command here.

```
C:\>ping 192.168.33.22

Pinging 192.168.33.22 with 32 bytes of data:

Reply from 192.168.33.22: bytes=32 time<1ms TTL=128
Reply from 192.168.33.22: bytes=32 time=1ms TTL=128
Reply from 192.168.33.22: bytes=32 time<1ms TTL=128
Reply from 192.168.33.22: bytes=32 time=1ms TTL=128

Ping statistics for 192.168.33.22:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

C:\>arp -a

Internet Address      Physical Address      Type
192.168.33.22         0060.47ea.a746       dynamic
```

- In the Command prompt of PCB, type **arp -a**. Paste the result of this command here

```
C:\>arp -a

Internet Address      Physical Address      Type
192.168.33.33         0002.1755.9a06       dynamic
```

- In the Command prompt of PCC, PCD abd PCE, type **arp -a**. Paste the result of this command here.

PCC:

```
C:\>arp -a
No ARP Entries Found
C:\>|
```

PCD:

```
C:\>arp -a
No ARP Entries Found
C:\>|
```

PCE:

```
C:\>arp -a
No ARP Entries Found
C:\>
```

Step 2: Generate traffic between PCC to all other PC except PCA.

- Click **PCC** and click the Desktop tab > Command Prompt.
- Enter the **ping 192.168.33.22** command (ping to PCB). Then type **arp -a**. Paste the result after these commands here.

```
C:\>ping 192.168.33.22

Pinging 192.168.33.22 with 32 bytes of data:

Request timed out.
Reply from 192.168.33.22: bytes=32 time<1ms TTL=127
Reply from 192.168.33.22: bytes=32 time<1ms TTL=127
Reply from 192.168.33.22: bytes=32 time<1ms TTL=127

Ping statistics for 192.168.33.22:
    Packets: Sent = 4, Received = 3, Lost = 1 (25% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\>arp -a
Internet Address      Physical Address      Type
192.168.11.1          0002.4a00.0e91        dynamic
```

- Enter the **ping 192.168.11.112** command (ping to PCD). Then type **arp -a**. Paste the result after these commands here.

```
C:\>ping 192.168.11.112

Pinging 192.168.11.112 with 32 bytes of data:

Reply from 192.168.11.112: bytes=32 time=1ms TTL=128
Reply from 192.168.11.112: bytes=32 time<1ms TTL=128
Reply from 192.168.11.112: bytes=32 time<1ms TTL=128
Reply from 192.168.11.112: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.11.112:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

C:\>arp -a
Internet Address      Physical Address      Type
192.168.11.1          0002.4a00.0e91        dynamic
192.168.11.112        0001.6462.0278        dynamic
```

- d. Enter the **ping 192.168.4.110** command (ping to PCE). Then type **arp -a**. Paste the result after these commands here.

```
C:\>ping 192.168.4.110

Pinging 192.168.4.110 with 32 bytes of data:

Request timed out.
Reply from 192.168.4.110: bytes=32 time=2ms TTL=126
Reply from 192.168.4.110: bytes=32 time=2ms TTL=126
Reply from 192.168.4.110: bytes=32 time=2ms TTL=126

Ping statistics for 192.168.4.110:
    Packets: Sent = 4, Received = 3, Lost = 1 (25% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 2ms, Maximum = 2ms, Average = 2ms

C:\>arp -a
Internet Address      Physical Address      Type
192.168.11.1          0002.4a00.0e91        dynamic
192.168.11.112        0001.6462.0278        dynamic
```

- e. Discuss the results you got from all the commands on PCC.
- [ARP is dynamically resolves the MAC addresses based on the outcomes of successful communication of a PCC with other PCs.](#)
- f. At Router RTA, enter the CLI. At the command prompt type the following commands. Snap the results after the last command and paste it here.

```
RTA>enable
RTA#show arp
```

```
RTA>enable
RTA#show arp
Protocol  Address      Age (min)  Hardware Addr  Type   Interface
Internet  192.168.11.1  -          0002.4A00.0E91 ARPA    FastEthernet1/0
Internet  192.168.11.11 16          00D0.D39A.C0D9 ARPA    FastEthernet1/0
Internet  192.168.33.1  -          000C.CF0C.593A ARPA    FastEthernet0/0
Internet  192.168.33.22 16          0060.47EA.A746 ARPA    FastEthernet0/0
RTA#|
```

- g. At Router RTB, enter the CLI. At the command prompt type the following commands.
Snap the results after the last command and paste it here.

```
RTB>enable
RTB#show arp
```

```
RTB>enable
RTB#show arp
Protocol  Address          Age (min)  Hardware Addr  Type   Interface
Internet  192.168.4.1      -         0001.977A.B614  ARPA   FastEthernet0/0
Internet  192.168.4.110    13        0060.702D.7C08  ARPA   FastEthernet0/0
RTB#
```

Step 3: Switch MAC address table.

- a. At Switch SWA, enter the CLI. At the command prompt type the following commands.
Snap the results after the last command and paste it here.

```
SWA>enable
SWA#show arp

SWA#show mac-address-table
```

```
SWA>enable
SWA#show arp

SWA#show mac-address-table
      Mac Address Table
-----
Vlan  Mac Address      Type      Ports
----  -
1     0002.4a00.0e91    DYNAMIC   Fa0/1
1     000c.8546.7d85    DYNAMIC   Fa1/1
SWA#
```


- b. At Switch SWB, enter the CLI. At the command prompt type the following commands. Snap the results after the last command and paste it here.

```
SWB>enable
SWB#show arp

SWB#show mac-address-table
```

```
SWB>enable
SWB#show arp

SWB#show mac-address-table
      Mac Address Table
-----
Vlan    Mac Address      Type        Ports
----    -
1       000c.cf0c.593a    DYNAMIC     Fa0/1
SWB#
```

- c. At Switches SWC and Switch1, enter the CLI. At the command prompt type the following commands. Snap the results after the last command and paste it here.

```
SWC>enable
SWC#show arp

SWC#show mac-address-table
```

SWC:

```
SWC>enable
SWC#show arp

SWC#show mac-address-table
      Mac Address Table
-----
Vlan    Mac Address      Type        Ports
----    -
1       0001.977a.b614    DYNAMIC     Fa0/1
```

SWITCH 1:

```
Switch>enable
Switch#show arp
```

```
Switch#show mac-address-table
      Mac Address Table
```

```
-----
Vlan    Mac Address      Type      Ports
----    -
      1    0005.5e95.187b    DYNAMIC   Fa0/1
```

d. Do switches use arp table? (Y/N)

no

e. Explain your answer in (d) **Hint: the answer may surprise you. Google for the explanation. It is not part of NetComm syllabi, it is just for knowledge..*

Switches transfer Ethernet transmissions using MAC address tables and function at Layer 2 of the OSI model (Data Link Layer). The IP addresses and ARP tables that routers require are not necessary for switches as they just employ MAC addresses. By connecting IP addresses to MAC addresses, ARP tables, on the other hand, facilitate communication between devices connected to the same local network.

f. What information does the command `show mac-address-table` gives?

- The information of the MAC address table

Part 3: Attach wireless lab results.

In this part, you will use **Lab_4_Wireless.pka** file.

Step1: Change the filename of the pka file.

- Change the Lab 4 filename to include your name. **Example: Lab4AliAhmad.pkt*
- Go through the instructions. As you complete the tasks, you will see the bottom right hand corner of the pkt file increase in completion percentage, until you get 100/100.

The screenshot displays the Cisco Packet Tracer interface. On the left, a network topology is shown with a switch (S1) connected to a wireless router (WRS2). S1 has subinterfaces G0/0.10, G0/0.20, and G0/0.88. WRS2 is connected to PC3. PC1 and PC2 are connected to S1. The activity window on the right, titled "Packet Tracer – Configuring Wireless LAN Access", shows an "Addressing Table" and a "Completion: 100/100" status.

Subinterfaces

Subinterface	IP Address	Subnet Mask
G0/0.10	172.17.10.1/24	255.255.255.0
G0/0.20	172.17.20.1/24	255.255.255.0
G0/0.88	172.17.88.1/24	255.255.255.0

Addressing Table

Device	Interface	IP Address	Subnet Mask	Default Gate
R1	G0/0.10	172.17.10.1	255.255.255.0	N/A
	G0/0.20	172.17.20.1	255.255.255.0	N/A
	G0/0.88	172.17.88.1	255.255.255.0	N/A
PC1	NIC	172.17.10.21	255.255.255.0	172.17.10.1

Time Elapsed: 00:12:52
Completion: 100/100
1/1

- c. Once you have completed fully, capture the screen (which includes the filename, the topology and the activity wizard showing completion) and paste it here.

The screenshot displays the Cisco Packet Tracer interface. On the left, a network topology is shown with a switch (S1) connected to a wireless router (WRS2). S1 has subinterfaces G0/0.10, G0/0.20, and G0/0.88. WRS2 is connected to PC3. PC1 and PC2 are connected to S1. The activity window on the right, titled "Packet Tracer – Configuring Wireless LAN Access", shows an "Addressing Table" and a "Completion: 100/100" status.

Subinterfaces

Subinterface	IP Address	Subnet Mask
G0/0.10	172.17.10.1/24	255.255.255.0
G0/0.20	172.17.20.1/24	255.255.255.0
G0/0.88	172.17.88.1/24	255.255.255.0

Addressing Table

Device	Interface	IP Address	Subnet Mask	Default Gateway
R1	G0/0.10	172.17.10.1	255.255.255.0	N/A
	G0/0.20	172.17.20.1	255.255.255.0	N/A
	G0/0.88	172.17.88.1	255.255.255.0	N/A
PC1	NIC	172.17.10.21	255.255.255.0	172.17.10.1
PC2	NIC	172.17.20.22	255.255.255.0	172.17.20.1
PC3	NIC	DHCP Assigned	DHCP Assigned	DHCP Assigned
WRS2	NIC	172.17.88.25	255.255.255.0	172.17.88.1

Time Elapsed: 00:20:44
Completion: 100/100
1/1

Activity Results

Time Elapsed: 00:21:23

Congratulations Guest! You completed the activity.

[Overall Feedback](#) [Assessment Items](#) [Connectivity Tests](#)

Completed Feedback: Congratulations! You successfully completed the Configuring Wireless LAN Access activity. However, your final score may change based on your answers to the questions in the Instructions. Consult your instructor.