

UM10114 LPC21xx and LPC22xx User manual Rev. 03 — 2 April 2008

User manual

Document information

Info	Content
Keywords	LPC2109/00, LPC2109/01, LPC2119, LPC2119/01, LPC2129, LPC2129/01, LPC2114, LPC2114/01, LPC2124, LPC2124/01, LPC2194, LPC2194/01, LPC2210, LPC2220, LPC2210/01, LPC2212, LPC2212/01, LPC2214, LPC2214/01, LPC2290, LPC2290/01, LPC2292, LPC2292/01, LPC2294, LPC2294/01, ARM, ARM7, 32-bit, Microcontroller
Abstract	User manual for LPC2109/19/29/14/24/94 and LPC2210/20/12/14/90/92/94 including /01 parts



Revision history

Rev	Date	Description
3.0	20080402	Flash chapter updated with correct boot process flowchart.
		 The Reinvoke ISP command has been removed from the ISP command description because it is not implemented in the LPC21xx/LPC22xx.
		 Description of CRP levels has been corrected, and CRP description for different bootloader code versions has been added.
		 Numbering of CAN controllers in the global CAN filter look-up table has been corrected for /01 devices.
		 Part ID's have been updated for LPC2210/20 parts.
2.0	20080104	Integrated related parts into this manual and made numerous editorial and content updates throughout the document:
		 The format of this data sheet has been redesigned to comply with the new identity guidelines of NXP Semiconductors.
		 Legal texts have been adapted to the new company name where appropriate.
		 Parts LPC2109, LPC2119, LPC2129, LPC2114, LPC2124, LPC2194, LPC2212, LPC2214, LPC2290, LPC2292, LPC2294 and /01 parts added.
		PWM mode description updated.
		Fractional baud rate generator updated.
		CTCR register updated.
		 ADC pin description updated.
		 SPI clock conditions updated.
		 JTAG pin description updated.
		Startup sequence diagram added.
		 SPI master mode: SPI SSEL line conditioning for LPC2210/20 added in SPI pin description table.
1.0	20051012	Moved the UM document into the new structured FrameMaker template. Many changes were made to the format throughout the document. Here are the most important:
		 UART0 and UART1 description updated (fractional baudrate generator and hardware handshake features added - auto-CTS/RTS)
		 ADC chapter updated with the dedicated result registers
		GPIO chapter updated with the description of the Fast IOs

Contact information

For more information, please visit: http://www.nxp.com

For sales office addresses, please send an email to: salesaddresses@nxp.com

UM10114

Chapter 1: Introductory information

Rev. 03 — 2 April 2008

User manual

1. Introduction

The LPC21xx and LPC22xx are based on a 16/32 bit ARM7TDMI-STM CPU with real-time emulation and embedded trace support, together with 64/128/256 kilobytes (kB) of embedded high speed flash memory. A 128-bit wide internal memory interface and a unique accelerator architecture enable 32-bit code execution at maximum clock rate. For critical code size applications, the alternative 16-bit Thumb Mode reduces code by more than 30% with minimal performance penalty.

With their compact 64 and 144 pin packages, low power consumption, various 32-bit timers, up to 12 external interrupt pins, and four channel 10-bit ADC and 46 GPIOs (64 pin packages), or 8-channel 10-bit ADC and 112 GPIOs (144 pin package), these microcontrollers are particularly targeted for industrial control, medical systems, access control, and point-of-sale. With a wide range of serial communications interfaces, they are also very well suited for communication gateways, protocol converters, and embedded soft modems as well as many other general-purpose applications.

2. How to read this manual

The LPC21xx and LPC22xx user manual covers the following parts and versions:

- LPC2109, LPC2119, LPC2129, /00 and /01 versions
- LPC2114, LPC2124, /00 and /01 versions
- LPC2194 and LPC2194/01
- LPC2210, LPC2210/01, and LPC2220
- LPC2212, LPC2214, /00 and /01 versions
- LPC2290 and LPC2290/01
- LPC2292, LPC2294, /00 and /01 versions

All parts exist in **legacy** versions and **enhanced** versions. Enhanced parts are equipped with enhanced GPIO, SSP, ADC, UART, and timer peripherals. They are also backward compatible to the "legacy" parts containing legacy versions of the same peripherals. Therefore, enhanced parts contain all features of legacy parts as well. See <u>Table 1–16</u> for an overview.

To denote different versions the following suffixes are used (see <u>Section 1–4 "Ordering options"</u>); no suffix, /00, /01, and /G. All /01 versions and the LPC2220 (no suffix) contain enhanced features.

Chapter 1: Introductory information

Table 1. LPC21xx and LPC22xx legacy/enhanced parts overview

Legacy parts	Enhanced parts
LPC2109/00	LPC2109/01
LPC2119, LPC2119/00	LPC2119/01
LPC2129, LPC2129/00	LPC2129/01
LPC2114, LPC2114/00	LPC2114/01
LPC2124, LPC2124/00	LPC2124/01
LPC2194, LPC2194/00	LPC2194/01
LPC2210	LPC2210/01 LPC2220, LPC2220/G
LPC2212, LPC2212/00	LPC2212/01
LPC2214, LPC2214/00	LPC2214/01
LPC2290	LPC2290/01
LPC2292, LPC2292/00	LPC2292/01
LPC2294, LPC2294/00	LPC2294/01

This user manual describes enhanced features together with legacy features for all LPC21xx and LPC22xx parts. Part specific and legacy/enhanced specific pinning, registers, and configurations are listed in a table at the beginning of each chapter (see for example Table 6–52 "LPC21xx/22xx part-specific register bits"). Use this table to determine which parts of the user manual apply.

3. Features

3.1 Legacy features common to all LPC21xx and LPC22xx parts

- 16-bit/32-bit ARM7TDMI-S microcontroller in a 64 or 144 pin package.
- 8/16/64 kB of on-chip static RAM and 64/128/256 kB of on-chip flash program memory (except for flashless LPC2210/20/90). 128-bit wide interface/accelerator enables high-speed 60 MHz operation.
- Diversified Code Read Protection (CRP) enables different security levels to be implemented.
 - In-System/In-Application Programming (ISP/IAP) via on-chip boot loader software. Single flash sector or full chip erase in 100 ms and programming of 256 bytes in 1 ms.
- External 8, 16, or 32-bit bus (144 pin package).
- EmbeddedICE RT and Embedded Trace offer real-time debugging with the on-chip RealMonitor software and high speed tracing of instruction execution.
- Up to four interconnected CAN interfaces with advanced acceptance filters.
- 10-bit A/D converter providing four/eight analog inputs with conversion times as low as 2.44 ms per channel and dedicated result registers to minimize interrupt overhead.
- Two 32-bit timers/external event counters with four capture and four compare channels each, PWM unit (6 outputs), Real Time Clock (RTC), and watchdog.
- Multiple serial interfaces including two UARTs (16C550), a fast I²C-bus (400 kbit/s), and two SPI interfaces.
- Vectored interrupt controller with configurable priorities and vector addresses.
- Up to forty-eight 5 V tolerant fast general purpose I/O pins.

- Chapter 1: Introductory information
- Up to 12 edge or level sensitive external interrupt pins available.
- 60 MHz maximum CPU clock available from programmable on-chip PLL with a possible input frequency of 10 MHz to 25 MHz and a settling time of 100 ms.
- For flashless LPC2210/20/90 only: 60 MHz (LPC2210/90), 72 MHz (LPC2290/01), or 75 MHz (LPC2210/01 and LPC2220) maximum CPU clock available from programmable on-chip Phase-Locked Loop (PLL) with settling time of 100 μs.
- On-chip integrated oscillator operates with an external crystal in the range from 1 MHz to 25 MHz and with an external oscillator up to 50 MHz.
- Two power saving modes, Idle mode and Power-down mode.
- Peripheral clock scaling and individual enable/disable of peripheral functions for additional power optimization.
- Processor wake-up from Power-down mode via external interrupt or CAN controllers.
- Dual power supply:
 - CPU operating voltage range of 1.65 V to 1.95 V (1.8 V \pm 8.3 %).
 - I/O power supply range of 3.0 V to 3.6 V (3.3 V \pm 10 %) with 5 V tolerant I/O pads.

3.2 Enhanced features

- Fast GPIO ports enable port pin toggling up to 3.5 times faster than the original device. They also allow for a port pin to be read at any time regardless of its function.
- Dedicated result registers for ADC reduce interrupt overhead. The ADC pads are 5 V tolerant when configured for digital I/O function(s).
- UART0/1 include fractional baud rate generator, auto-bauding capabilities, and handshake flow-control fully implemented in hardware.
- Buffered SSP serial controller supporting SPI, 4-wire SSI, and Microwire formats.
- SPI programmable data length and master mode enhancement.
- General purpose timers can operate as external event counters.

4. Ordering options

4.1 LPC2109/2119/2129

Table 2. LPC2109/2119/2129 Ordering information

Type number	Package						
	Name	Description	Version				
LPC2109FBD64/00	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2				
LPC2109FBD64/01	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2				
LPC2119FBD64	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2				
LPC2119FBD64/00	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2				
LPC2119FBD64/01	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2				

UM10114 3 © NXP B.V. 2008. All rights reserved.

Chapter 1: Introductory information

Table 2. LPC2109/2119/2129 Ordering information ...continued

Type number	Package						
	Name	Description	Version				
LPC2129FBD64	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2				
LPC2129FBD64/00	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2				
LPC2129FBD64/01	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2				

Table 3. LPC2109/2119/2129 Ordering options

Type number	Flash memory	RAM	CAN	Fast GPIO/ SSP/ Enhanced UART, ADC, Timer	Temperature range
LPC2109FBD64/00	64 kB	8 kB	1 channel	no	–40 °C to +85 °C
LPC2109FBD64/01	64 kB	8 kB	1 channel	yes	−40 °C to +85 °C
LPC2119FBD64	128 kB	16 kB	2 channels	no	–40 °C to +85 °C
LPC2119FBD64/00	128 kB	16 kB	2 channels	no	–40 °C to +85 °C
LPC2119FBD64/01	128 kB	16 kB	2 channels	yes	−40 °C to +85 °C
LPC2129FBD64	256 kB	16 kB	2 channels	no	−40 °C to +85 °C
LPC2129FBD64/00	256 kB	16 kB	2 channels	no	–40 °C to +85 °C
LPC2129FBD64/01	256 kB	16 kB	2 channels	yes	–40 °C to +85 °C

4.2 LPC2114/2124

Table 4. LPC 2114/2124 Ordering information

Type number	Package					
	Name	Description				
LPC2114FBD64	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4 \text{ mm}$	SOT314-2			
LPC2114FBD64/00	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4 \text{ mm}$	SOT314-2			
LPC2114FBD64/01	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2			
LPC2124FBD64	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4 \text{ mm}$	SOT314-2			
LPC2124FBD64/00	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2			
LPC2124FBD64/01	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2			

Chapter 1: Introductory information

Table 5. LPC2114/2124 Ordering options

Type number	Flash memory	RAM	Fast GPIO/SSP/ Enhanced UART, ADC, Timer	Temperature range
LPC2114FBD64	128 kB	16 kB	no	−40 °C to +85 °C
LPC2114FBD64/00	128 kB	16 kB	no	-40 °C to +85 °C
LPC2114FBD64/01	128 kB	16 kB	yes	-40 °C to +85 °C
LPC2124FBD64	256 kB	16 kB	no	-40 °C to +85 °C
LPC2124FBD64/00	256 kB	16 kB	no	−40 °C to +85 °C
LPC2124FBD64/01	256 kB	16 kB	yes	-40 °C to +85 °C

4.3 LPC2194

Table 6. LPC2194 Ordering information

Type number	Package					
	Name	Description	Version			
LPC2194HBD64	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2			
LPC2194HBD64/00	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4 \text{ mm}$	SOT314-2			
LPC2194HBD64/01	LQFP64	plastic low profile quad flat package; 64 leads; body $10 \times 10 \times 1.4$ mm	SOT314-2			

Table 7. LPC2194 Ordering options

Type number	Flash memory	RAM	CAN	Fast GPIO/ SSP/ Enhanced UART, ADC, Timer	Temperature range
LPC2194HBD64	256 kB	16 kB	4 channels	no	$-40~^{\circ}\text{C}$ to +125 $^{\circ}\text{C}$
LPC2194HBD64/00	256 kB	16 kB	4 channels	no	–40 °C to +125 °C
LPC2194HBD64/01	256 kB	16 kB	4 channels	yes	–40 °C to +125 °C

4.4 LPC2210/2220

Table 8. LPC2210/2220 Ordering information

Type number	Package				
	Name	Description	Version		
LPC2210FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1		
LPC2210FBD144/01	LQFP144	plastic low profile quad flat package; 144 leads; body 20 × 20 × 1.4 mm	SOT486-1		

Chapter 1: Introductory information

 Table 8.
 LPC2210/2220 Ordering information ...continued

Type number	Package					
	Name	Description	Version			
LPC2220FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body 20 × 20 × 1.4 mm	SOT486-1			
LPC2220FET144	TFBGA144	plastic thin fine-pitch ball grid array package; 144 balls; body $12 \times 12 \times 0.8$ mm	SOT569-1			
LPC2220FET144/G	TFBGA144	plastic thin fine-pitch ball grid array package; 144 balls; body 12 \times 12 \times 0.8 mm	SOT569-1			

Table 9. LPC2210/2220 Ordering options

Type number	RAM	Fast GPIO/ SSP/ Enhanced UART, ADC, Timer	Temperature range
LPC2210FBD144	16 kB	no	–40 °C to +85 °C
LPC2210FBD144/01	16 kB	yes	–40 °C to +85 °C
LPC2220FBD144	64 kB	yes	–40 °C to +85 °C
LPC2220FET144	64 kB	yes	–40 °C to +85 °C
LPC2220FET144/G	64 kB	yes	−40 °C to +85 °C

4.5 LPC2212/2214

Table 10. LPC2212/2214 Ordering information

Type number	Package						
	Name	Description	Version				
LPC2212FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1				
LPC2212FBD144/00	LQFP144	plastic low profile quad flat package; 144 leads; body 20 \times 20 \times 1.4 mm	SOT486-1				
LPC2212FBD144/01	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1				
LPC2214FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1				
LPC2214FBD144/00	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1				
LPC2214FBD144/01	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1				

Chapter 1: Introductory information

Table 11. LPC2212/2214 Ordering options

Type number	Flash memory	RAM	Fast GPIO/ SSP/ Enhanced UART, ADC, Timer	Temperature range
LPC2212FBD144	128 kB	16 kB	no	–40 °C to +85 °C
LPC2212FBD144/00	128 kB	16 kB	no	–40 °C to +85 °C
LPC2212FBD144/01	128 kB	16 kB	yes	–40 °C to +85 °C
LPC2214FBD144	256 kB	16 kB	no	–40 °C to +85 °C
LPC2214FBD144/00	256 kB	16 kB	no	–40 °C to +85 °C
LPC2214FBD144/01	256 kB	16 kB	yes	–40 °C to +85 °C

4.6 LPC2290

Table 12. LPC2290 Ordering information

Type number	Package					
	Name Description		Version			
LPC2290FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body 20 × 20 × 1.4 mm	SOT486-1			
LPC2290FBD144/01	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1			

Table 13. LPC2290 Ordering options

Type number	RAM	CAN	Enhancements	Temperature range
LPC2290FBD144	16 kB	2 channels	None	–40 °C to +85 °C
LPC2290FBD144/01	64 kB	2 channels	Higher CPU clock, more on-chip SRAM, Fast I/Os, improved UARTs, added SSP, upgraded ADC	–40 °C to +85 °C

4.7 LPC2292/2294

Table 14. LPC2292/2294 Ordering information

Type number	Package						
	Name	Description	Version				
LPC2292FBD144	LQFP144	plastic low profile quad flat package; 144 leads; body 20 × 20 × 1.4 mm	SOT486-1				
LPC2292FBD144/00	LQFP144	plastic low profile quad flat package; 144 leads; body 20 × 20 × 1.4 mm	SOT486-1				
LPC2292FBD144/01	LQFP144	plastic low profile quad flat package; 144 leads; body 20 × 20 × 1.4 mm	SOT486-1				
LPC2292FET144/00	TFBGA144	plastic thin fine-pitch ball grid array package; 144 balls; body $12 \times 12 \times 0.8$ mm	SOT569-1				
LPC2292FET144/01	TFBGA144	plastic thin fine-pitch ball grid array package; 144 balls; body $12 \times 12 \times 0.8$ mm	SOT569-1				
LPC2292FET144/G	TFBGA144	plastic thin fine-pitch ball grid array package; 144 balls; body $12 \times 12 \times 0.8$ mm	SOT569-1				

Chapter 1: Introductory information

Table 14. LPC2292/2294 Ordering information ...continued


Type number	Package						
	Name	Description	Version				
LPC2294HBD144	LQFP144	plastic low profile quad flat package; 144 leads; body 20 × 20 × 1.4 mm	SOT486-1				
LPC2294HBD144/00	LQFP144	plastic low profile quad flat package; 144 leads; body $20 \times 20 \times 1.4$ mm	SOT486-1				
LPC2294HBD144/01	LQFP144	plastic low profile quad flat package; 144 leads; body 20 × 20 × 1.4 mm	SOT486-1				

Table 15. LPC2292/2294 Ordering options

Type number	Flash memory	RAM	CAN	Fast GPIO/ SSP/ Enhanced UART, ADC, Timer	Temperature range
LPC2292FBD144	256 kB	16 kB	2 channels	no	$-40~^{\circ}\text{C}$ to +85 $^{\circ}\text{C}$
LPC2292FBD144/00	256 kB	16 kB	2 channels	no	–40 °C to +85 °C
LPC2292FBD144/01	256 kB	16 kB	2 channels	yes	–40 °C to +85 °C
LPC2292FET144/00	256 kB	16 kB	2 channels	no	–40 °C to +85 °C
LPC2292FET144/01	256 kB	16 kB	2 channels	yes	–40 °C to +85 °C
LPC2292FET144/G	256 kB	16 kB	2 channels	no	–40 °C to +85 °C
LPC2294HBD144	256 kB	16 kB	4 channels	no	−40 °C to +125 °C
LPC2294HBD144/00	256 kB	16 kB	4 channels	no	−40 °C to +125 °C
LPC2294HBD144/01	256 kB	16 kB	4 channels	yes	–40 °C to +125 °C

Chapter 1: Introductory information

5. Block diagram

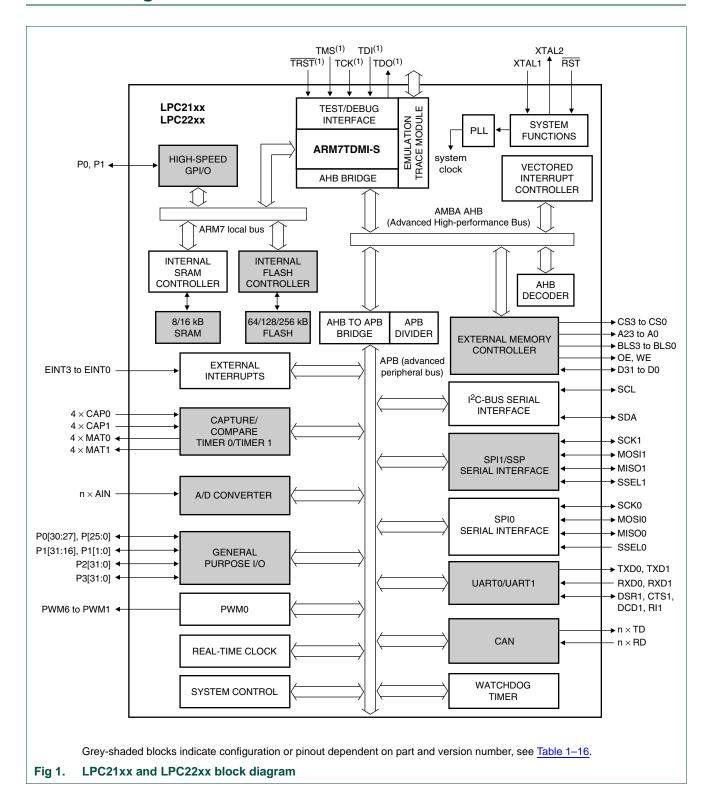

Chapter 1: Introductory information

Table 16. LPC21xx/22xx part-specific configuration

Part	EMC	SRAM	Flash	Legacy GPIO	Fast GPIO	SSP	CAN	ADC	Enhanced UART	Enhanced timers
							channels	channels/ enhanced ADC		
No-suffix	and /00 p									
LPC2109	-	8 kB	64 kB	P0/1	-	-	1	4/-	-	-
LPC2119	-	16 kB	128 kB	P0/1	-	-	2	4/-	-	-
LPC2129	-	16 kB	256 kB	P0/1	-	-	2	4/-	-	-
LPC2114	-	16 kB	128 kB	P0/1	-	-	-	4/-	-	-
LPC2124	-	16 kB	256 kB	P0/1	-	-	-	4/-	-	-
LPC2194	-	16 kB	256 kB	P0/1	-	-	4	4/-	-	-
LPC2210	yes	16 kB	-	P0/1/2/3	-	-	-	4/-	-	-
LPC2220	yes	64 kB	-	P0/1/2/3	P0/1	yes	-	8/yes	yes	yes
LPC2212	yes	16 kB	128 kB	P0/1/2/3	-	-	-	8/-	-	-
LPC2214	yes	16 kB	256 kB	P0/1/2/3	-	-	-	8/-	-	-
LPC2290	yes	16 kB	-	P0/1/2/3	-	-	2	8/-	-	-
LPC2292	yes	16 kB	256 kB	P0/1/2/3	-	-	2	8/-	-	-
LPC2294	yes	16 kB	256 kB	P0/1/2/3	-	-	4	8/-	-	-
/01 parts										
LPC2109	-	8 kB	64 kB	P0/1	P0/1	yes	1	4/yes	yes	yes
LPC2119	-	16 kB	128 kB	P0/1	P0/1	yes	2	4/yes	yes	yes
LPC2129	-	16 kB	256 kB	P0/1	P0/1	yes	2	4/yes	yes	yes
LPC2114	-	16 kB	128 kB	P0/1	P0/1	yes	-	4/yes	yes	yes
LPC2124	-	16 kB	256 kB	P0/1	P0/1	yes	-	4/yes	yes	yes
LPC2194	-	16 kB	256 kB	P0/1	P0/1	yes	4	4/yes	yes	yes
LPC2210	yes	16 kB	-	P0/1/2/3	P0/1	yes	-	8/yes	yes	yes
LPC2212	yes	16 kB	128 kB	P0/1/2/3	P0/1	yes	-	8/yes	yes	yes
LPC2214	yes	16 kB	256 kB	P0/1/2/3	P0/1	yes	-	8/yes	yes	yes
LPC2290	yes	64 kB	-	P0/1/2/3	P0/1	yes	2	8/yes	yes	yes
LPC2292	yes	16 kB	256 kB	P0/1/2/3	P0/1	yes	2	8/yes	yes	yes
LPC2294	yes	16 kB	256 kB	P0/1/2/3	P0/1	yes	4	8/yes	yes	yes

6. Architectural overview

The LPC21xx/LPC22xx consist of an ARM7TDMI-S CPU with emulation support, the ARM7 Local Bus for interface to on-chip memory controllers, the AMBA Advanced High-performance Bus (AHB) for interface to the interrupt controller, and the ARM Peripheral Bus (APB, a compatible superset of ARM's AMBA Advanced Peripheral Bus) for connection to on-chip peripheral functions. The LPC21xx/LPC22xx configures the ARM7TDMI-S processor in little-endian byte order.

Chapter 1: Introductory information

AHB peripherals are allocated a 2 megabyte range of addresses at the very top of the 4 gigabyte ARM memory space. Each AHB peripheral is allocated a 16 kB address space within the AHB address space. LPC21xx/LPC22xx peripheral functions (other than the interrupt controller) are connected to the APB bus. The AHB to APB bridge interfaces the APB bus to the AHB bus. APB peripherals are also allocated a 2 megabyte range of addresses, beginning at the 3.5 gigabyte address point. Each APB peripheral is allocated a 16 kB address space within the APB address space.

The connection of on-chip peripherals to device pins is controlled by a Pin Connect Block (see <u>Section 8–6</u>). This must be configured by software to fit specific application requirements for the use of peripheral functions and pins.

7. ARM7TDMI-S processor

The ARM7TDMI-S is a general purpose 32-bit microprocessor, which offers high performance and very low power consumption. The ARM architecture is based on Reduced Instruction Set Computer (RISC) principles, and the instruction set and related decode mechanism are much simpler than those of microprogrammed Complex Instruction Set Computers. This simplicity results in a high instruction throughput and impressive real-time interrupt response from a small and cost-effective processor core.

Pipeline techniques are employed so that all parts of the processing and memory systems can operate continuously. Typically, while one instruction is being executed, its successor is being decoded, and a third instruction is being fetched from memory.

The ARM7TDMI-S processor also employs a unique architectural strategy known as THUMB, which makes it ideally suited to high-volume applications with memory restrictions, or applications where code density is an issue.

The key idea behind THUMB is that of a super-reduced instruction set. Essentially, the ARM7TDMI-S processor has two instruction sets:

- The standard 32-bit ARM instruction set.
- A 16-bit THUMB instruction set.

The THUMB set's 16-bit instruction length allows it to approach twice the density of standard ARM code while retaining most of the ARM's performance advantage over a traditional 16-bit processor using 16-bit registers. This is possible because THUMB code operates on the same 32-bit register set as ARM code.

THUMB code is able to provide up to 65% of the code size of ARM, and 160% of the performance of an equivalent ARM processor connected to a 16-bit memory system.

The ARM7TDMI-S processor is described in detail in the ARM7TDMI-S data sheet that can be found on official ARM website.

8. On-chip flash memory system

The LPC21xx/LPC22xx incorporate a 64 kB to 256 kB flash memory. This memory may be used for both code and data storage. Programming of the flash memory may be accomplished in several ways:

Chapter 1: Introductory information

- · using the serial built-in JTAG interface
- using In System Programming (ISP) and UART
- using In Application Programming (IAP) capabilities

The application program, using the IAP functions, may also erase and/or program the flash while the application is running, allowing a great degree of flexibility for data storage field firmware upgrades, etc. The entire flash memory is available for user code because the boot loader resides in a separate memory location.

The LPC21xx/LPC22xx flash memory provides minimum of 100,000 erase/write cycles and 20 years of data-retention.

9. On-chip Static RAM (SRAM)

On-chip Static RAM (SRAM) may be used for code and/or data storage. The on-chip SRAM may be accessed as 8-bits, 16-bits, and 32-bits.

The LPC21xx/LPC22xx SRAM is designed to be accessed as a byte-addressed memory. Word and halfword accesses to the memory ignore the alignment of the address and access the naturally-aligned value that is addressed (so a memory access ignores address bits 0 and 1 for word accesses, and ignores bit 0 for halfword accesses). Therefore valid reads and writes require data accessed as halfwords to originate from addresses with address line 0 being 0 (addresses ending with 0, 2, 4, 6, 8, A, C, and E in hexadecimal notation) and data accessed as words to originate from addresses with address lines 0 and 1 being 0 (addresses ending with 0, 4, 8, and C in hexadecimal notation).

The SRAM controller incorporates a write-back buffer in order to prevent CPU stalls during back-to-back writes. The write-back buffer always holds the last data sent by software to the SRAM. This data is only written to the SRAM when another write is requested by software (the data is only written to the SRAM when software does another write). If a chip reset occurs, actual SRAM contents will not reflect the most recent write request (i.e. after a "warm" chip reset, the SRAM does not reflect the last write operation). Any software that checks SRAM contents after reset must take this into account. Two identical writes to a location guarantee that the data will be present after a Reset. Alternatively, a dummy write operation before entering idle or power-down mode will similarly guarantee that the last data written will be present in SRAM after a subsequent Reset.

UM10114

Chapter 2: LPC21xx/22xx Memory map

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

Remark: The LPC21xx and LPC22xx contain different memory configurations and APB/AHB peripherals. See <u>Table 2–17</u> for part-specific memory and peripherals.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

Table 17. LPC21xx and LPC22xx memory and peripheral configuration

Part	EMC Figure 2–2	SRAM Figure 2–2	Flash Figure 2-2	Fast GPIO Figure 2-2	SSP Table 2-18	CAN <u>Table 2–18</u>				
	addresses	size/ addresses	size/ addresses	addresses	APB base add	dresses				
No suffix a	No suffix and /01 parts									
LPC2109	-	8 kB/ 0x4000 0000 - 0x4000 1FFF	64 kB/ 0x0000 0000 - 0x0000 FFFF	-	-	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000				
LPC2119	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	128 kB/ 0x0000 0000 - 0x0001 FFFF	-	-	0xE003 8000 - 0xE004 0000 CAN1:0xE004 4000 CAN2: 0xE004 8000				
LPC2129	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	-	-	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000				
LPC2114	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	128 kB/ 0x0000 0000 - 0x0001 FFFF	-	-	-				
LPC2124	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	-	-	-				
LPC2194	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	-	-	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000 CAN3: 0xE004 C000 CAN4: 0xE005 0000				
LPC2210	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	-	-	-	-				
LPC2220	0x8000 0000 - 0x83FF FFFF	64 kB/ 0x4001 0000 - 0x4000 FFFF	-	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	-				
LPC2212	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	128 kB/ 0x0000 0000 - 0x0001 FFFF	-	-	-				

Chapter 2: LPC21xx/22xx Memory map

Table 17. LPC21xx and LPC22xx memory and peripheral configuration

Part	EMC Figure 2-2 addresses	SRAM Figure 2–2 size/ addresses	Flash Figure 2-2 size/ addresses	Fast GPIO Figure 2–2 addresses	SSP Table 2–18 APB base add	CAN <u>Table 2–18</u> dresses
LPC2214	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	-	-	-
LPC2290	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	-	-	-	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000
LPC2292	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	-	-	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000
LPC2294	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	-	-	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000 CAN3: 0xE004 C000 CAN4: 0xE005 0000
/01 parts						
LPC2109	-	8 kB/ 0x4000 0000 - 0x4000 1FFF	64 kB/ 0x0000 0000 - 0x0000 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000
LPC2119	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	128 kB/ 0x0000 0000 - 0x0001 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000
LPC2129	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x003 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000
LPC2114	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	128 kB/ 0x0000 0000 - 0x0001 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	-
LPC2124	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x003 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	-
LPC2194	-	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000 CAN3: 0xE004 C000 CAN4: 0xE005 0000
LPC2210	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	-	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	-
LPC2212	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	128 kB/ 0x0000 0000 - 0x0001 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	-

Chapter 2: LPC21xx/22xx Memory map


Table 17. LPC21xx and LPC22xx memory and peripheral configuration

Part	EMC Figure 2–2	SRAM Figure 2-2	Flash Figure 2–2	Fast GPIO Figure 2–2	SSP Table 2–18	CAN <u>Table 2–18</u>
	addresses	size/ addresses	size/ addresses	addresses	APB base add	Iresses
LPC2214	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	-
LPC2290	0x8000 0000 - 0x83FF FFFF	64 kB/ 0x4001 0000 - 0x4000 FFFF	-	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000
LPC2292	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000
LPC2294	0x8000 0000 - 0x83FF FFFF	16 kB/ 0x4000 0000 - 0x4000 2FFF	256 kB/ 0x0000 0000 - 0x0003 FFFF	0x3FFF C000 - 0x3FFF FFFF	0xE005 C000	0xE003 8000 - 0xE004 0000 CAN1: 0xE004 4000 CAN2: 0xE004 8000 CAN3: 0xE004 C000 CAN4: 0xE005 0000


2. Memory maps

The LPC21xx and LPC22xx incorporate several distinct memory regions, shown in the following figures. Figure 2–2 shows the overall map of the entire address space from the user program viewpoint following reset. The interrupt vector area supports address remapping, which is described later in this section.

Chapter 2: LPC21xx/22xx Memory map

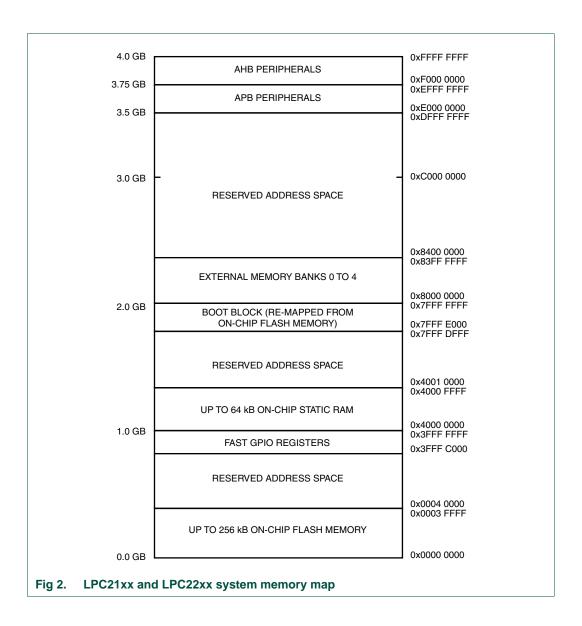


Chapter 2: LPC21xx/22xx Memory map

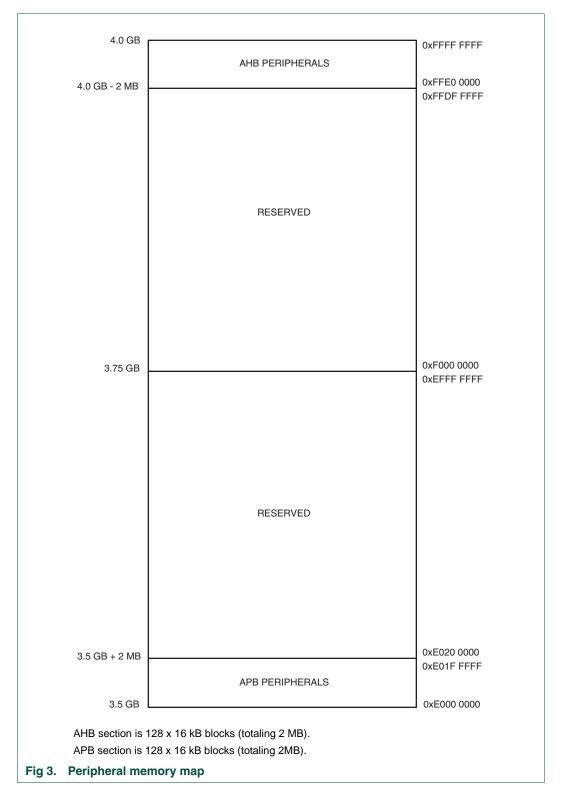

Figures 3 through 4 and Table 2–18 show different views of the peripheral address space. Both the AHB and APB peripheral areas are 2 megabyte spaces which are divided up into 128 peripherals. Each peripheral space is 16 kilobytes in size. This allows simplifying the address decoding for each peripheral. All peripheral register addresses are word aligned

Chapter 2: LPC21xx/22xx Memory map

(to 32-bit boundaries) regardless of their size. This eliminates the need for byte lane mapping hardware that would be required to allow byte (8-bit) or half-word (16-bit) accesses to occur at smaller boundaries. An implication of this is that word and half-word registers must be accessed all at once. For example, it is not possible to read or write the upper byte of a word register separately.

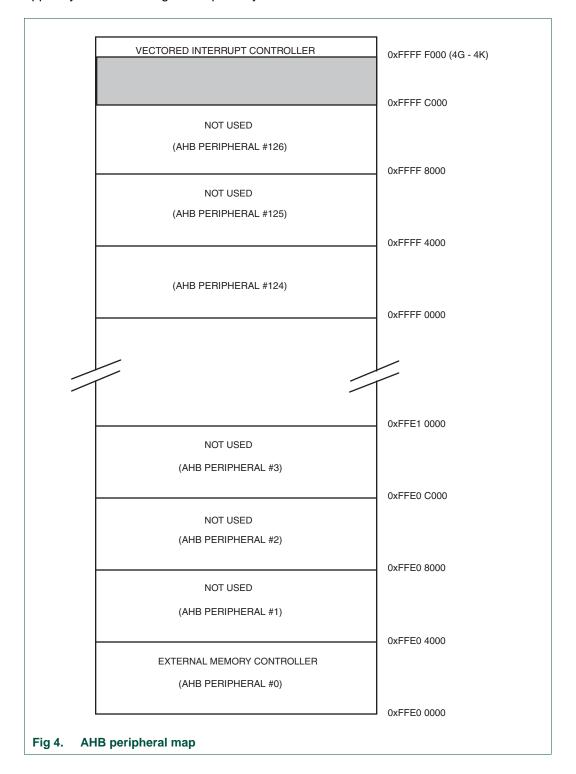

Chapter 2: LPC21xx/22xx Memory map

Table 18. APB peripheries and base addresses

APB peripheral	Base address	Peripheral name
0	0xE000 0000	Watchdog timer
1	0xE000 4000	Timer 0
2	0xE000 8000	Timer 1
3	0xE000 C000	UART0
4	0xE001 0000	UART1
5	0xE001 4000	PWM
6	0xE001 8000	Not used
7	0xE001 C000	I ² C
8	0xE002 0000	SPI0
9	0xE002 4000	RTC
10	0xE002 8000	GPIO
11	0xE002 C000	Pin connect block
12	0xE003 0000	SPI1
13	0xE003 4000	10 bit ADC
14	0xE003 8000	CAN Acceptance Filter RAM
15	0xE003 C000	CAN Acceptance Filter Registers
16	0xE004 0000	CAN Common Registers
17	0xE004 4000	CAN Controller 1
18	0xE004 8000	CAN Controller 2
19	0xE004 C000	CAN Controller 3
20	0xE005 0000	CAN Controller 4
21 - 22	0xE005 4000 0xE005 8000	Not used
23	0xE005 C000	SSP
24 - 126	0xE006 0000 - 0xE01F 8000	Not used
127	0xE01F C000	System Control Block

3. LPC21xx and LPC22xx memory re-mapping and boot block

3.1 Memory map concepts and operating modes

The basic concept on the LPC21xx and LPC22xx is that each memory area has a "natural" location in the memory map. This is the address range for which code residing in that area is written. The bulk of each memory space remains permanently fixed in the same location, eliminating the need to have portions of the code designed to run in different address ranges.

Because of the location of the interrupt vectors on the ARM7 processor (at addresses 0x0000 0000 through 0x0000 001C, as shown in <u>Table 2–19</u> below), a small portion of the Boot Block and SRAM spaces need to be re-mapped in order to allow alternative uses of interrupts in the different operating modes described in <u>Table 2–20</u>. Re-mapping of the interrupts is accomplished via the Memory Mapping Control features. To select a specific memory mapping mode, see <u>Table 6–62</u>.

Chapter 2: LPC21xx/22xx Memory map

Table 19. ARM exception vector locations

Address	Exception
0x0000 0000	Reset
0x0000 0004	Undefined Instruction
0x0000 0008	Software Interrupt
0x0000 000C	Prefetch Abort (instruction fetch memory fault)
0x0000 0010	Data Abort (data access memory fault)
0x0000 0014	Reserved
	Note: Identified as reserved in ARM documentation.
0x0000 0018	IRQ
0x0000 001C	FIQ

Table 20. LPC21xx and LPC22xx memory mapping modes

Mode	Activation	Usage
Boot Loader mode	Hardware activation by any Reset	The boot loader always executes after any reset. The boot block interrupt vectors are mapped to the bottom of memory to allow handling exceptions and using interrupts during the boot loading process.
User Flash mode	Software activation by Boot code	Activated by boot loader when a valid user program signature is recognized in memory and boot loader operation is not forced. Interrupt vectors are not re-mapped and are found in the bottom of the flash memory.
		Remark: This mode is not available in flashless parts (see Table 2–17).
User RAM mode	Software activation by User program	Activated by a user program as desired. Interrupt vectors are re-mapped to the bottom of the Static RAM.
User External mode	Activated by BOOT1:0 pins	Activated by the boot loader when one or both BOOT pins are LOW at the end of RESET LOW. Interrupt vectors are re-mapped from the bottom of the external memory map (see Section 8–6.5).
		Remark: This mode is available for parts with external memory controller only (see <u>Table 2–17</u>).

3.2 Memory re-mapping

In order to allow for compatibility with future derivatives, the entire boot block is mapped to the top of the on-chip memory space. Memory spaces other than the interrupt vectors remain in fixed locations. Figure 2–5 shows the on-chip memory mapping in the modes defined above.

The portion of memory that is re-mapped to allow interrupt processing in different modes includes the interrupt vector area (32 bytes) and an additional 32 bytes, for a total of 64 bytes. The re-mapped code locations overlay addresses 0x0000 0000 through 0x0000 003F. The vector contained in the SRAM, external memory, and boot block must contain branches to the actual interrupt handlers or to other instructions that accomplish the branch to the interrupt handlers.

There are two reasons this configuration was chosen:

Chapter 2: LPC21xx/22xx Memory map

- 1. Minimize the need for the SRAM and Boot Block vectors to deal with arbitrary boundaries in the middle of code space.
- To provide space to store constants for jumping beyond the range of single word branch instructions.

Re-mapped memory areas, including the boot block and interrupt vectors, continue to appear in their original location in addition to the re-mapped address.

Details on re-mapping and examples can be found in <u>Section 6–8.1 "Memory Mapping</u> control register (MEMMAP - 0xE01F C040)" on page 68.

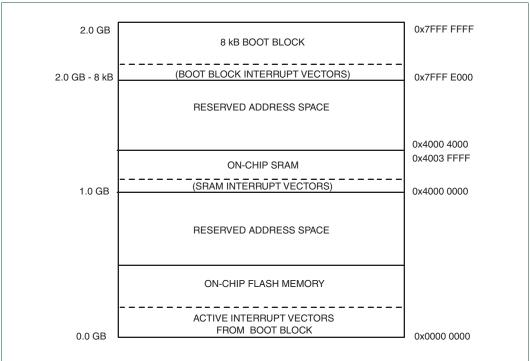


Fig 5. Map of lower memory is showing re-mapped and re-mappable areas for a part with on-chip flash memory

4. Prefetch Abort and Data Abort Exceptions

The LPC21xx and LPC22xx generate the appropriate bus cycle abort exception if an access is attempted for an address that is in a reserved or unassigned address region. The regions are:

- Areas of the memory map that are not implemented for a specific ARM derivative. For the LPC21xx and LPC22xx, those areas are:
 - Address space between the on-chip non-volatile memory and On-Chip SRAM, labelled "Reserved Address Space" in <u>Figure 2–2</u>, and <u>Figure 2–5</u>. This is an address range from 0x0002 0000 to 0x3FFF FFFF for the 128 kB flash device and 0x0004 0000 to 0x3FFF FFFF for the 256 kB flash device.
 - Address space between on-chip SRAM and the boot block. This is the address range from 0x4000 4000 to 0x7FFF DFFF, labelled "Reserved Address Space" in <u>Figure 2–2</u>, and <u>Figure 2–5</u>.

Chapter 2: LPC21xx/22xx Memory map

- Address space between the top of the boot block and the APB peripheral space, except space used for external memory (LPC2292/2294 only). This is the address range from 0x8000 0000 to 0xDFFF FFFF, labelled "Reserved Address Space" in <u>Figure 2–2</u>, and <u>Figure 2–5</u>.
- Reserved regions of the AHB and APB spaces. See <u>Figure 2–3</u> and <u>Table 2–18</u>.
- Unassigned AHB peripheral spaces. See Figure 2-4.
- Unassigned APB peripheral spaces. See Table 2–18.

For these areas, both attempted data access and instruction fetch generate an exception. In addition, a Prefetch Abort exception is generated for any instruction fetch that maps to an AHB or APB peripheral address.

Within the address space of an existing APB peripheral, a data abort exception is not generated in response to an access to an undefined address. Address decoding within each peripheral is limited to that needed to distinguish defined registers within the peripheral itself. For example, an access to address 0xE000 D000 (an undefined address within the UART0 space) may result in an access to the register defined at address 0xE000 C000. Details of such address aliasing within a peripheral space are not defined in the LPC21xx and LPC22xx documentation and are not a supported feature.

Note: The ARM core stores the Prefetch Abort flag along with the associated instruction (which will be meaningless) in the pipeline and processes the abort only if an attempt is made to execute the instruction fetched from the illegal address. This prevents accidental aborts that could be caused by prefetches that occur when code is executed very near a memory boundary.

UM10114

Chapter 3: LPC21xx/22xx Memory Accelerator Module (MAM)

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The MAM is identical for all parts with **flash memory**. It is available in the following parts:

- LPC2109, LPC2119, LPC2129, and /01 versions
- LPC2114, LPC2124, and /01 versions
- LPC2194 and LPC2194/01
- LPC2212, LPC2214, and /01 versions
- LPC2292, LPC2294, and /01 versions

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Introduction

The MAM block in the LPC21xx and LPC22xx maximizes the performance of the ARM processor when it is running code in flash memory using a dual flash bank.

3. Operation

Simply put, the Memory Accelerator Module (MAM) attempts to have the next ARM instruction that will be needed in its latches in time to prevent CPU fetch stalls. The method used is to split the flash memory into two banks, each capable of independent accesses. Each of the two flash banks has its own prefetch buffer and branch trail buffer. The branch trail buffers for the two banks capture two 128-bit lines of flash data when an instruction fetch is not satisfied by either the prefetch buffer or branch trail buffer for its bank, and for which a prefetch has not been initiated. Each prefetch buffer captures one 128-bit line of instructions from its flash bank at the conclusion of a prefetch cycle initiated speculatively by the MAM.

Each 128 bit value includes four 32-bit ARM instructions or eight 16-bit Thumb instructions. During sequential code execution, typically one flash bank contains or is fetching the current instruction and the entire flash line that contains it. The other bank contains or is prefetching the next sequential code line. After a code line delivers its last instruction, the bank that contained it begins to fetch the next line in that bank.

Timing of flash read operations is programmable and is described in Section 3-9.

Branches and other program flow changes cause a break in the sequential flow of instruction fetches described above. When a backward branch occurs, there is a distinct possibility that a loop is being executed. In this case the branch trail buffers may already contain the target instruction. If so, execution continues without the need for a flash read cycle. For a forward branch, there is also a chance that the new address is already contained in one of the prefetch buffers. If it is, the branch is again taken with no delay.

Chapter 3: LPC21xx/22xx Memory Accelerator Module (MAM)

When a branch outside the contents of the branch trail and prefetch buffers is taken, one flash access cycle is needed to load the branch trail buffers. Subsequently, there will typically be no further fetch delays until another such "Instruction Miss" occurs.

The flash memory controller detects data accesses to the flash memory and uses a separate buffer to store the results in a manner similar to that used during code fetches. This allows faster access to data if it is accessed sequentially. A single line buffer is provided for data accesses, as opposed to the two buffers per flash bank that are provided for code accesses. There is no prefetch function for data accesses.

4. MAM blocks

The Memory Accelerator Module is divided into several functional blocks:

- A flash address latch for each bank: An incrementor function is associated with the bank 0 flash address latch.
- Two flash memory banks
- Instruction latches, data latches, address comparison latches
- Control and wait logic

<u>Figure 3–6</u> shows a simplified block diagram of the Memory Accelerator Module data paths.

In the following descriptions, the term "fetch" applies to an explicit flash read request from the ARM. "Pre-fetch" is used to denote a flash read of instructions beyond the current processor fetch address.


4.1 Flash memory bank

There are two banks of flash memory in order to allow parallel access and eliminate delays for sequential access.

Flash programming operations are not controlled by the MAM but are handled as a separate function. A "boot block" sector contains flash programming algorithms that may be called as part of the application program and a loader that may be run to allow serial programming of the flash memory.

The flash memories are wired so that each sector exists in both banks and that a sector erase operation acts on part of both banks simultaneously. In effect, the existence of two banks is transparent to the programming functions.

Chapter 3: LPC21xx/22xx Memory Accelerator Module (MAM)

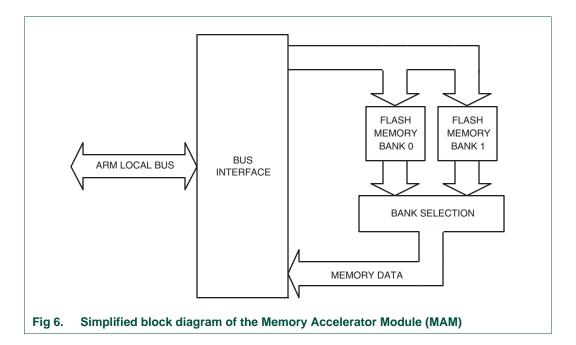

4.2 Instruction latches and data latches

Code and data accesses are treated separately by the Memory Accelerator Module. There are two sets of 128-bit instruction latches and 12-bit comparison address latches associated with each flash bank. One of the two sets, called the branch trail buffer, holds the data and comparison address for that bank from the last instruction miss. The other set, called the prefetch buffer, holds the data and comparison address from prefetches undertaken speculatively by the MAM. Each instruction latch holds 4 words of code (4 ARM instructions, or 8 Thumb instructions).

Similarly, there is a 128-bit data latch and 13-bit data address latch, that are used during data cycles. This single set of latches is shared by both flash banks. Each data access that is not in the data latch causes a flash fetch of 4 words of data, which are captured in the data latch. This speeds up sequential data operations, but has little or no effect on random accesses.

4.3 Flash programming Issues

Since the flash memory does not allow access during programming and erase operations, it is necessary for the MAM to force the CPU to wait if a memory access to a flash address is requested while the flash module is busy. Under some conditions, this delay could result in a Watchdog time-out. The user will need to be aware of this possibility and take steps to insure that an unwanted Watchdog reset does not cause a system failure while programming or erasing the flash memory.

In order to preclude the possibility of stale data being read from the flash memory, the LPC21xx and LPC22xx MAM holding latches are automatically invalidated at the beginning of any flash programming or erase operation. Any subsequent read from a flash address will cause a new fetch to be initiated after the flash operation has completed.

Chapter 3: LPC21xx/22xx Memory Accelerator Module (MAM)

5. MAM operating modes

Three modes of operation are defined for the MAM, trading off performance for ease of predictability:

Mode 0: MAM off. All memory requests result in a flash read operation (see <u>Table</u> note 3–2). There are no instruction prefetches.

Mode 1: MAM partially enabled. Sequential instruction accesses are fulfilled from the holding latches if the data is present. Instruction prefetch is enabled. Non-sequential instruction accesses initiate flash read operations (see <u>Table note 3–2</u>). This means that all branches cause memory fetches. All data operations cause a flash read because buffered data access timing is hard to predict and is very situation dependent.

Mode 2: MAM fully enabled. Any memory request (code or data) for a value that is contained in one of the corresponding holding latches is fulfilled from the latch. Instruction prefetch is enabled. Flash read operations are initiated for instruction prefetch and code or data values not available in the corresponding holding latches.

Table 21. MAM responses to program accesses of various types

Program Memory Request Type	MAM Mode			
	0	1	2	
Sequential access, data in latches	Initiate Fetch[2]	Use Latched Data[1]	Use Latched Data ^[1]	
Sequential access, data not in latches	Initiate Fetch	Initiate Fetch[1]	Initiate Fetch[1]	
Non-sequential access, data in latches	Initiate Fetch[2]	Initiate Fetch[1][2]	Use Latched Data ^[1]	
Non-sequential access, data not in latches	Initiate Fetch	Initiate Fetch[1]	Initiate Fetch[1]	

^[1] Instruction prefetch is enabled in modes 1 and 2.

Table 22. MAM responses to data accesses of various types

Data Memory Request Type	MAM Mode			
	0	1	2	
Sequential access, data in latches	Initiate Fetch[1]	Initiate Fetch[1]	Use Latched Data	
Sequential access, data not in latches	Initiate Fetch	Initiate Fetch	Initiate Fetch	
Non-sequential access, data in latches	Initiate Fetch[1]	Initiate Fetch[1]	Use Latched Data	
Non-sequential access, data not in latches	Initiate Fetch	Initiate Fetch	Initiate Fetch	

^[1] The MAM actually uses latched data if it is available, but mimics the timing of a flash read operation. This saves power while resulting in the same execution timing. The MAM can truly be turned off by setting the fetch timing value in MAMTIM to one clock.

^[2] The MAM actually uses latched data if it is available, but mimics the timing of a flash read operation. This saves power while resulting in the same execution timing. The MAM can truly be turned off by setting the fetch timing value in MAMTIM to one clock.

Chapter 3: LPC21xx/22xx Memory Accelerator Module (MAM)

6. MAM configuration

After reset the MAM defaults to the disabled state. Software can turn memory access acceleration on or off at any time. This allows most of an application to be run at the highest possible performance, while certain functions can be run at a somewhat slower but more predictable rate if more precise timing is required.

7. Register description

All registers, regardless of size, are on word address boundaries. Details of the registers appear in the description of each function.

Table 23. Summary of MAM registers

Name	Description	Access	Reset value[1]	Address
MAMCR	Memory Accelerator Module Control Register. Determines the MAM functional mode, that is, to what extent the MAM performance enhancements are enabled. See <u>Table 3–24</u> .	R/W	0x0	0xE01F C000
MAMTIM	Memory Accelerator Module Timing control. Determines the number of clocks used for flash memory fetches (1 to 7 processor clocks).	R/W	0x07	0xE01F C004

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

8. MAM Control Register (MAMCR - 0xE01F C000)

Two configuration bits select the three MAM operating modes, as shown in <u>Table 3–24</u>. Following Reset, MAM functions are disabled. Changing the MAM operating mode causes the MAM to invalidate all of the holding latches, resulting in new reads of flash information as required.

Table 24. MAM Control Register (MAMCR - address 0xE01F C000) bit description

Bit	Symbol	Value	Description	Reset value	
1:0 MAM_mode _control		00	MAM functions disabled	0	
		01	MAM functions partially enabled		
		10	MAM functions fully enabled		
		11	Reserved. Not to be used in the application.		
7:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

9. MAM Timing register (MAMTIM - 0xE01F C004)

The MAM Timing register determines how many CCLK cycles are used to access the flash memory. This allows tuning MAM timing to match the processor operating frequency. flash access times from 1 clock to 7 clocks are possible. Single clock flash accesses would essentially remove the MAM from timing calculations. In this case the MAM mode may be selected to optimize power usage.

UM10114 3 © NXP B.V. 2008. All rights reserved.

Chapter 3: LPC21xx/22xx Memory Accelerator Module (MAM)

Table 25. MAM Timing register (MAMTIM - address 0xE01F C004) bit description

Bit	Symbol	Value	Description	Reset value
2:0	MAM_fetch_ cycle_timing	000	0 - Reserved.	07
		001	1 - MAM fetch cycles are 1 processor clock (CCLK) in duration	
		010	2 - MAM fetch cycles are 2 CCLKs in duration	
		011	3 - MAM fetch cycles are 3 CCLKs in duration	
		100	4 - MAM fetch cycles are 4 CCLKs in duration	
		101	5 - MAM fetch cycles are 5 CCLKs in duration	
		110	6 - MAM fetch cycles are 6 CCLKs in duration	
		111	7 - MAM fetch cycles are 7 CCLKs in duration	
		as liste	ng: These bits set the duration of MAM flash fetch operations and here. Improper setting of this value may result in incorrect on of the device.	
7:3	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

10. MAM usage notes

When changing MAM timing, the MAM must first be turned off by writing a zero to MAMCR. A new value may then be written to MAMTIM. Finally, the MAM may be turned on again by writing a value (1 or 2) corresponding to the desired operating mode to MAMCR.

For system clock slower than 20 MHz, MAMTIM can be 001. For system clock between 20 MHz and 40 MHz, flash access time is suggested to be 2 CCLKs, while in systems with system clock faster than 40 MHz, 3 CCLKs are proposed. For system clocks of 60 MHz and above, 4CCLK's are needed.

Table 26. Suggestions for MAM timing selection

system clock	Number of MAM fetch cycles in MAMTIM
< 20 MHz	1 CCLK
20 MHz to 40 MHz	2 CCLK
40 MHz to 60 MHz	3 CCLK
> 60 MHz	4 CCLK

UM10114

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

This chapter applies to all parts with external memory controller. The EMC is identical for all these parts. It is available in the following parts (in all 144 pin packages):

- LPC2210, LPC2210/01, and LPC2220
- LPC2212, LPC2214, and /01 versions
- LPC2290 and LPC2290/01
- LPC2292, LPC2294, and /01 versions

The LPC21xx parts do **not** have an EMC controller.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- Support for various static memory-mapped devices including RAM, ROM, flash, burst ROM, and some external I/O devices
- Asynchronous page mode read operation in non-clocked memory subsystems
- Asynchronous burst mode read access to burst mode ROM devices
- Independent configuration for up to four banks, each up to 16 MB
- Programmable bus turnaround (idle) cycles (1 to 16)
- Programmable read and write WAIT states (up to 32) for static RAM devices
- Programmable initial and subsequent burst read WAIT state, for burst ROM devices
- Programmable write protection
- Programmable burst mode operation
- Programmable read byte lane enable control

3. Description

The external Static Memory Controller is an AMBA AHB slave module which provides an interface between an AMBA AHB system bus and external (off-chip) memory devices. It provides support for up to four independently configurable memory banks simultaneously. Each memory bank is capable of supporting SRAM, ROM, Flash EPROM, Burst ROM memory, or some external I/O devices.

Each memory bank may be 8, 16, or 32 bits wide.

Since the LPC22xx 144 pin packages pin out address lines A[23:0] only, the decoding among the four banks uses address bits A[25:24]. The native location of the four banks is at the start of the External Memory area identified in Figure 2–2, but Bank 0 can be used for initial booting under control of the state of the BOOT[1:0] pins.

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

Table 27. Address ranges of the external memory banks

Bank	Address range	Configuration register
0	0x8000 0000 - 0x80FF FFFF	BCFG0
1	0x8100 0000 - 0x81FF FFFF	BCFG1
2	0x8200 0000 - 0x82FF FFFF	BCFG2
3	0x8300 0000 - 0x83FF FFFF	BCFG3

4. Pin description

Table 28. External Memory Controller pin description

	•	•
Pin name	Туре	Pin description
D[31:0]	Input/Output	External memory Data lines
A[23:0]	Output	External memory Address lines
OE	Output	Low-active Output Enable signal
BLS[3:0]	Output	Low-active Byte Lane Select signals
WE	Output	Low-active Write Enable signal
CS[3:0]	Output	Low-active Chip-Select signals

5. Register description

The external memory controller contains 4 registers as shown in <u>Table 4–29</u>.

Table 29. External Memory Controller register map

Name	Description	Access	Reset value, see <u>Table 4–30</u>	Address
BCFG0	Configuration register for memory bank 0	R/W	0x0000 FBEF	0xFFE0 0000
BCFG1	Configuration register for memory bank 1	R/W	0x2000 FBEF	0xFFE0 0004
BCFG2	Configuration register for memory bank 2	R/W	0x1000 FBEF	0xFFE0 0008
BCFG3	Configuration register for memory bank 3	R/W	0x0000 FBEF	0xFFE0 000C

Each register selects the following options for its memory bank:

- The number of idle clock cycles inserted between read and write accesses in this bank, and between an access in another bank and an access in this bank, to avoid bus contention between devices (1 to 17 clocks)
- The length of read accesses, except for subsequent reads from a burst ROM (3 to 35 clocks)
- The length of write accesses (3 to 19 clocks)
- Whether the bank is write-protected or not
- Whether the bank is 8, 16, or 32 bits wide

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

5.1 Bank Configuration Registers 0-3 (BCFG0-3 - 0xFFE0 0000 to 0xFFE0 000C)

Table 30. Bank Configuration Registers 0-3 (BCFG0-3 - 0xFFE0 0000 to 0xFFE0 000C) address description

	address description		
BCFG0-3	Name	Function	Reset value
3:0	IDCY	This field controls the minimum number of "idle" CCLK cycles that the EMC maintains between read and write accesses in this bank, and between an access in another bank and an access in this bank, to avoid bus contention between devices. The number of idle CCLK cycles between such accesses is the value in this field plus 1.	
4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
9:5	WST1	This field controls the length of read accesses (except for subsequent reads from a burst ROM). The length of read accesses, in CCLK cycles, is this field value plus 3.	11111
10	RBLE	This bit should be 0 for banks composed of byte-wide or non-byte-partitioned devices, so that the EMC drives the BLS3:0 lines High during read accesses. This bit should be 1 for banks composed of 16-bit and 32-bit wide devices that include byte select inputs, so that the EMC drives the BLS3:0 lines Low during read accesses.	0
15:11	WST2	For SRAM banks, this field controls the length of write accesses, which consist of: One CCLK cycle of address setup with CS, BLS, and WE high This value plus 1, CCLK cycles with address valid and CS, BLS, and WE low AND One CCLK cycle with address valid, CS low, BLS and WE high. For burst ROM banks, this field controls the length of subsequent accesses, which are (this value plus 1) CCLK cycles long.	11111
23:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
24	BUSERR	The only known case in which this bit is set is if the EMC detects an AMBA request for more than 32 bits of data. The ARM7TDMI-S will not make such a request.	0
25	WPERR	This bit is set if software attempts to write to a bank that has the WP bit 1. Write a 1 to this bit to clear it.	0
26	WP	A 1 in this bit write-protects the bank.	0
27	ВМ	A 1 in this bit identifies a burst-ROM bank.	0
29:28	MW	This field controls the width of the data bus for this bank: 00=8 bit, 01=16 bit, 10=32 bit, 11=reserved	See Table 4– 31
31:30	AT	Always write 00 to this field.	00

The table below shows the state of BCFG0[29:28] after the Boot Loader has run. The hardware reset state of these bits is 10.

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

8 bits

Bank	BOOT[1:0] during Reset	BCFG[29:28] Reset value	Memory width
0	LL	00	8 bits
0	LH	01	16 bits
0	HL	10	32 bits
0	HH	01	16 bits
1	XX	10	32 bits
2	XX	01	16 bits

Table 31. Default memory widths at reset

5.2 Read Byte Lane Control (RBLE)

3

XX

The External Memory Controller (EMC) generates byte lane control signals BLS[3:0] according to:

00

- External memory bank data bus width, defined within each configuration register (see MW field in BCFG register)
- External memory bank type, being either byte (8 bits), halfword (16 bits) or word (32 bits) (see RBLE field in BCFG register)

Each memory bank can either be 8, 16 or 32 bits wide. The type of memory used to configure a particular memory bank determines how the WE and BLS signals are connected to provide byte, halfword and word access. For read accesses, it is necessary to control the BLS signals by driving them either all HIGH, or all LOW.

This control is achieved by programming the Read Byte Lane Enable (RBLE) bit within each configuration register. The following two sections explain why different connections in respect of WE and BLS[3:0] are needed for different memory configurations.

5.2.1 Accesses to memory banks constructed from 8-bit or non byte-partitioned memory devices

For memory banks constructed from 8-bit or non byte-partitioned memory devices, it is important that the RBLE bit is cleared to zero within the respective memory bank configuration register. This forces all BLS[3:0] lines HIGH during a read access to that particular bank.

<u>Figure 4–7</u> (a), <u>Figure 4–8</u> (a) and <u>Figure 4–9</u> show 8-bit memory being used to configure memory banks that are 8, 16 and 32 bits wide. In each of these configurations, the BLS[3:0] signals are connected to write enable (WE) inputs of each 8-bit memory.

Note: The WE signal from the EMC is not used. For write transfers, the relevant BLS[3:0] byte lane signals are asserted LOW and steer the data to the addressed bytes.

For read transfers, all of the BLS[3:0] lines are deasserted HIGH, which allows the external bus to be defined for at least the width of the accessed memory.

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

5.2.2 Accesses to memory banks constructed from 16 or 32 bit memory devices

For memory banks constructed from 16 bit or 32-bit memory devices, it is important that the RBLE bit is set to one within the respective memory bank configuration register. This asserts all BLS[3:0] lines LOW during a read access to that particular bank. For 16 and 32-bit wide memory devices, byte select signals exist and must be appropriately controlled as shown in Figure 4–7 and Figure 4–8.

6. External memory interface


External memory interfacing depends on the bank width (32, 16 or 8 bit selected via MW bits in corresponding BCFG register). Furthermore, the memory chip(s) require an adequate setup of RBLE bit in BCFG register. Memory accessed with an 8-bit wide data bus require RBLE = 0, while memory banks capable of accepting 16 or 32 bit wide data require RBLE = 1.

If a memory bank is configured to be 32 bits wide, address lines A0 and A1 can be used as non-address lines. If a memory bank is configured to 16 bits wide, A0 is not required. However, 8 bit wide memory banks do require all address lines down to A0. Configuring A1 and/or A0 line(s) to provide address or non-address function is accomplished using bits 23 and 24 in Pin Function Select Register 2 (PINSEL2 register, see Table 8–88).


Symbol "a_b" in the following figures refers to the highest order address line in the data bus. Symbol "a_m" refers to the highest order address line of the memory chip used in the external memory interface.

See Section 8–6.5 "Boot control for LPC22xx parts" for how to boot from external memory.


Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

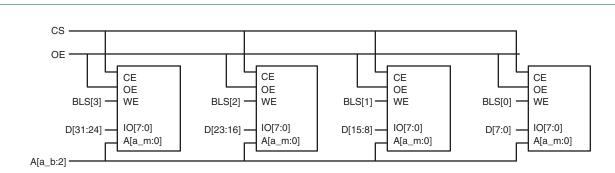

a. 32 bit wide memory bank interfaced to 8 bit memory chips (RBLE = 0)

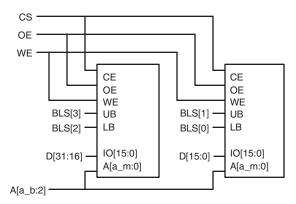


b. 32 bit wide memory bank interfaced to 16 bit memory chips (RBLE = 1)

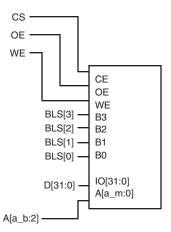


c. 32 bit wide memory bank interfaced to 32 bit memory chips (RBLE = 1)

Fig 7. 32 bit bank external memory interfaces (BGFGx Bits MW = 10)

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

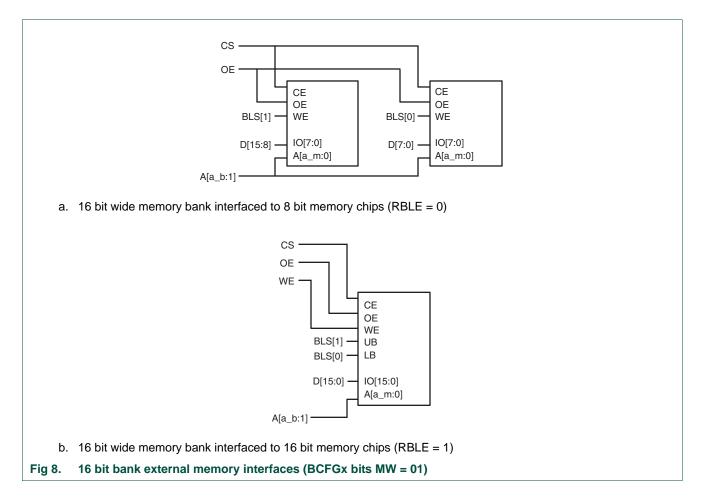


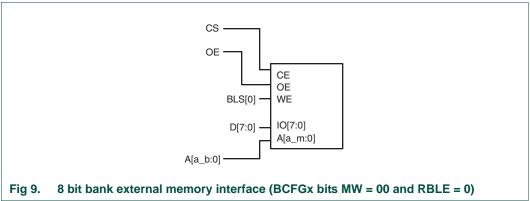


7. Typical bus sequences

The following figures show typical external read and write access cycles. XCLK is the clock signal available on P3.23. While not necessarily used by external memory, in these examples it is used to provide time reference (XCLK and CCLK are set to have the same frequency).

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

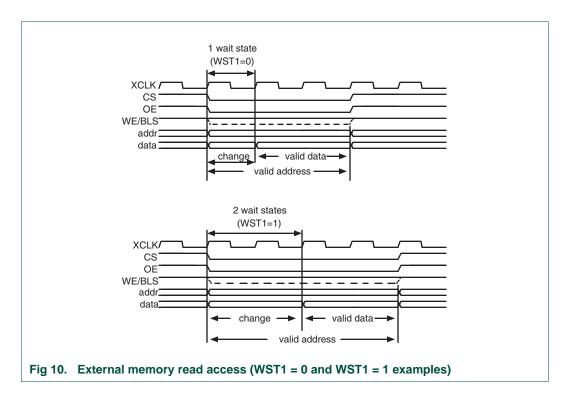

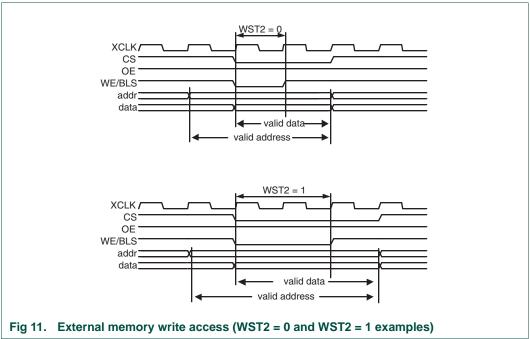

<u>Figure 4–10</u> and <u>Figure 4–11</u> show typical read and write accesses to external memory. Dashed lines on <u>Figure 4–10</u> correspond to memory banks using 16/32 bit memory chips having BLS lines connected to UB/LB or B[3:0] (see <u>Section 4–5.2.2</u> and <u>Figure 4–7</u>, <u>Figure 4–8</u>).


It is important to notice that some variations from <u>Figure 4–10</u> and <u>Figure 4–11</u> do exist in some particular cases.

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

For example, when the first read access to the memory bank that has just been selected is performed, CS and OE lines may become low one XCLK cycle earlier than it is shown in Figure 4–11.

Likewise, in a sequence of several consecutive write accesses to SRAM, the last write access will look like those shown in <u>Figure 4–11</u>. On the other hand, leading write cycles in that case will have data valid one cycle longer. Also, isolated write access will be identical to the one in <u>Figure 4–11</u>.

The EMC supports sequential access burst reads of up to four consecutive locations in 8, 16 or 32-bit memories. This feature supports burst mode ROM devices and increases the bandwidth by using reduced (configurable) access time for three sequential reads following a quad-location boundary read. Figure 4–12 shows an external memory burst read transfer. The first burst read access has two wait states and subsequent accesses have zero wait states.

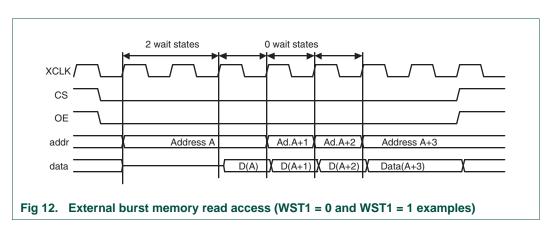

8. External memory selection

Based on the description of the EMC operation and external memory in general (appropriate read and write access times tAA and tWRITE respectively), the following table can be constructed and used for external memory selection. tCYC is the period of a single CCLK cycle (see Figure 4-10 and Figure 4-11 where one XCLK cycle equals one CCLK cycle). fmax is the maximum CCLK frequency achievable in the system with selected external memory.

Table 32. External memory and system requirements

Access cycle	Maximum frequency	WST setting (WST>=0; round up to integer)	Required memory access time
Standard Read	$f_{MAX} \le \frac{2 + WST1}{t_{RAM} + 20ns}$	$WSTI \ge \frac{t_{RAM} + 20ns}{t_{CYC}} - 2$	$t_{RAM} \le t_{CYC} \times (2 + WSTI) - 20ns$

Chapter 4: LPC21xx/22xx External Memory Controller (EMC)

Table 32. External memory and system requirements

Access cycle	Maximum frequency	WST setting (WST>=0; round up to integer)	Required memory access time
Standard Write	$f_{MAX} \leq \frac{1 + WST2}{t_{WRITE} + 5ns}$	$WST2 \ge \frac{t_{WRITE} - t_{CYC} + 5}{t_{CYC}}$	$t_{WRITE} \le t_{CYC} \times (1 + WST2) - 5ns$
Burst read (initial)	$f_{MAX} \le \frac{2 + WST1}{t_{INIT} + 20ns}$	$WST1 \ge \frac{t_{INIT} + 20ns}{t_{CYC}} - 2$	$t_{INIT} \le t_{CYC} \times (2 + WST1) - 20ns$
Burst read subseque nt 3x	$f_{MAX} \le \frac{1}{t_{ROM} + 20ns}$	N/A	$t_{ROM} \le t_{CYC} - 20ns$

UM10114

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Rev. 03 — 2 April 2008

User manual

© NXP B.V. 2008. All rights reserved.

1. How to read this chapter

The VIC is identical for all parts. However, the interrupts routed to the VIC depend on the peripherals implemented on a specific part. See <u>Table 5–33</u> for part specific interrupt sources. All other interrupt sources in <u>Table 5–33</u> are common to all parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

Table 33. LPC21xx/22xx part-specific interrupts

UM10114 3

Part	SSP	CAN	UART
	Registers: <u>Table 5–51</u> , <u>Table 5–5</u>	<u>35</u>	
no suffix and /00	parts		
LPC2109	-	CAN common, CAN1 TX, CAN1 RX	-
LPC2119	-	CAN common, CAN1/2 TX, CAN1/2 RX	-
LPC2129	-	CAN common, CAN1/2 TX, CAN1/2 RX	-
LPC2114	-	-	-
LPC2124	-	-	-
LPC2194	-	CAN common, CAN1/2/3/4 TX, CAN1/2/3/4 RX	-
LPC2210	-	-	-
LPC2220	TXRIS, RXRIS, RTRIS, RORRIS	-	ABTO, ABEO
LPC2212	-	-	-
LPC2214	-	-	-
LPC2290	-	CAN common, CAN1/2 TX, CAN1/2 RX	-
LPC2292	-	CAN common, CAN1/2 TX, CAN1/2 RX	-
LPC2294	-	CAN common, CAN1/2/3/4 TX, CAN1/2/3/4 RX	-
/01 parts			
LPC2109	TXRIS, RXRIS, RTRIS, RORRIS	CAN common, CAN1 TX, CAN1 RX	ABTO, ABEO
LPC2119	TXRIS, RXRIS, RTRIS, RORRIS	CAN common, CAN1/2 TX, CAN1/2 RX	ABTO, ABEO
LPC2129	TXRIS, RXRIS, RTRIS, RORRIS	CAN common, CAN1/2 TX, CAN1/2 RX	ABTO, ABEO
LPC2114	TXRIS, RXRIS, RTRIS, RORRIS	-	ABTO, ABEO
LPC2124	TXRIS, RXRIS, RTRIS, RORRIS	-	ABTO, ABEO
LPC2194	TXRIS, RXRIS, RTRIS, RORRIS	CAN common, CAN1/2/3/4 TX, CAN1/2/3/4 RX	ABTO, ABEO

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Table 33. LPC21xx/22xx part-specific interrupts

Part	SSP	CAN	UART
	Registers: <u>Table 5–51</u> , <u>Table 5–5</u>	<u>35</u>	
LPC2210	TXRIS, RXRIS, RTRIS, RORRIS	-	ABTO, ABEO
LPC2212	TXRIS, RXRIS, RTRIS, RORRIS	-	ABTO, ABEO
LPC2214	TXRIS, RXRIS, RTRIS, RORRIS	-	ABTO, ABEO
LPC2290	TXRIS, RXRIS, RTRIS, RORRIS	CAN common, CAN1/2 TX, CAN1/2 RX	ABTO, ABEO
LPC2292	TXRIS, RXRIS, RTRIS, RORRIS	CAN common, CAN1/2 TX, CAN1/2 RX	ABTO, ABEO
LPC2294	TXRIS, RXRIS, RTRIS, RORRIS	CAN common, CAN1/2/3/4 TX, CAN1/2/3/4 RX	ABTO, ABEO

2. Features

- ARM PrimeCell Vectored Interrupt Controller
- 32 interrupt request inputs
- 16 vectored IRQ interrupts
- 16 priority levels dynamically assigned to interrupt requests
- Software interrupt generation

3. Description

The Vectored Interrupt Controller (VIC) takes 32 interrupt request inputs and programmably assigns them into 3 categories, FIQ, vectored IRQ, and non-vectored IRQ. The programmable assignment scheme means that priorities of interrupts from the various peripherals can be dynamically assigned and adjusted.

Fast Interrupt reQuest (FIQ) requests have the highest priority. If more than one request is assigned to FIQ, the VIC ORs the requests to produce the FIQ signal to the ARM processor. The fastest possible FIQ latency is achieved when only one request is classified as FIQ because then the FIQ service routine can simply start dealing with that device. But if more than one request is assigned to the FIQ class, the FIQ service routine can read a word from the VIC that identifies which FIQ source(s) is (are) requesting an interrupt.

Vectored IRQs have the middle priority, but only 16 of the 32 requests can be assigned to this category. Any of the 32 requests can be assigned to any of the 16 vectored IRQ slots, among which slot 0 has the highest priority and slot 15 has the lowest.

Non-vectored IRQs have the lowest priority.

The VIC ORs the requests from all the vectored and non-vectored IRQs to produce the IRQ signal to the ARM processor. The IRQ service routine can start by reading a register from the VIC and jumping there. If any of the vectored IRQs are requesting, the VIC provides the address of the highest-priority requesting IRQs service routine, otherwise it provides the address of a default routine that is shared by all the non-vectored IRQs. The default routine can read another VIC register to see what IRQs are active.

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

All registers in the VIC are word registers. Byte and halfword reads and write are not supported.

Additional information on the Vectored Interrupt Controller is available in the ARMPrimeCell Vectored Interrupt Controller (PL190) documentation.

4. Register description

The VIC implements the registers shown in Table 5–34. More detailed descriptions follow.

Table 34. VIC register map

Name	Description	Access	Reset value[1]	Address
VICIRQStatus	IRQ Status Register. This register reads out the state of those interrupt requests that are enabled and classified as IRQ.	RO	0	0xFFFF F000
VICFIQStatus	FIQ Status Requests. This register reads out the state of those interrupt requests that are enabled and classified as FIQ.	RO	0	0xFFFF F004
VICRawIntr	Raw Interrupt Status Register. This register reads out the state of the 32 interrupt requests / software interrupts, regardless of enabling or classification.	RO	0	0xFFFF F008
VICIntSelect	Interrupt Select Register. This register classifies each of the 32 interrupt requests as contributing to FIQ or IRQ.	R/W	0	0xFFFF F00C
VICIntEnable	Interrupt Enable Register. This register controls which of the 32 interrupt requests and software interrupts are enabled to contribute to FIQ or IRQ.	R/W	0	0xFFFF F010
VICIntEnCIr	Interrupt Enable Clear Register. This register allows software to clear one or more bits in the Interrupt Enable register.	WO	0	0xFFFF F014
VICSoftInt	Software Interrupt Register. The contents of this register are ORed with the 32 interrupt requests from various peripheral functions.	R/W	0	0xFFFF F018
VICSoftIntClear	Software Interrupt Clear Register. This register allows software to clear one or more bits in the Software Interrupt register.	WO	0	0xFFFF F01C
VICProtection	Protection enable register. This register allows limiting access to the VIC registers by software running in privileged mode.	R/W	0	0xFFFF F020
VICVectAddr	Vector Address Register. When an IRQ interrupt occurs, the IRQ service routine can read this register and jump to the value read.	R/W	0	0xFFFF F030
VICDefVectAddr	Default Vector Address Register. This register holds the address of the Interrupt Service routine (ISR) for non-vectored IRQs.	R/W	0	0xFFFF F034
VICVectAddr0	Vector address 0 register. Vector Address Registers 0-15 hold the addresses of the Interrupt Service routines (ISRs) for the 16 vectored IRQ slots.	R/W	0	0xFFFF F100

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Table 34. VIC register map

VICVectAddr2 Vector address 2 register. R/W 0 0xFFFF F108 VICVectAddr3 Vector address 3 register. R/W 0 0xFFFF F100 VICVectAddr4 Vector address 4 register. R/W 0 0xFFFF F110 VICVectAddr5 Vector address 5 register. R/W 0 0xFFFF F114 VICVectAddr6 Vector address 7 register. R/W 0 0xFFFF F116 VICVectAddr7 Vector address 8 register. R/W 0 0xFFFF F112 VICVectAddr8 Vector address 9 register. R/W 0 0xFFFF F120 VICVectAddr10 Vector address 10 register. R/W 0 0xFFFF F122 VICVectAddr11 Vector address 11 register. R/W 0 0xFFFF F120 VICVectAddr11 Vector address 12 register. R/W 0 0xFFFF F130 VICVectAddr13 Vector address 13 register. R/W 0 0xFFFF F130 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F130 VICVectAddr15 Vector address 15 register.	Name	Description	Access	Reset value[1]	Address
VICVectAddr3 Vector address 3 register. R/W 0 0xFFFF F100 VICVectAddr4 Vector address 4 register. R/W 0 0xFFFF F110 VICVectAddr5 Vector address 5 register. R/W 0 0xFFFF F114 VICVectAddr6 Vector address 6 register. R/W 0 0xFFFF F118 VICVectAddr7 Vector address 7 register. R/W 0 0xFFFF F110 VICVectAddr8 Vector address 9 register. R/W 0 0xFFFF F120 VICVectAddr9 Vector address 10 register. R/W 0 0xFFFF F120 VICVectAddr10 Vector address 11 register. R/W 0 0xFFFF F120 VICVectAddr11 Vector address 12 register. R/W 0 0xFFFF F120 VICVectAddr13 Vector address 13 register. R/W 0 0xFFFF F130 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F130 VICVectAddr15 Vector control 0 register. R/W 0 0xFFFF F130 VICVectCnt10 Vector control 1 register.	VICVectAddr1	Vector address 1 register.	R/W	0	0xFFFF F104
VICVectAddr4 Vector address 4 register. R/W 0 0xFFFF F110 VICVectAddr5 Vector address 5 register. R/W 0 0xFFFF F114 VICVectAddr6 Vector address 6 register. R/W 0 0xFFFF F118 VICVectAddr7 Vector address 7 register. R/W 0 0xFFFF F110 VICVectAddr8 Vector address 8 register. R/W 0 0xFFFF F120 VICVectAddr9 Vector address 9 register. R/W 0 0xFFFF F120 VICVectAddr10 Vector address 10 register. R/W 0 0xFFFF F120 VICVectAddr11 Vector address 11 register. R/W 0 0xFFFF F120 VICVectAddr12 Vector address 12 register. R/W 0 0xFFFF F130 VICVectAddr13 Vector address 13 register. R/W 0 0xFFFF F130 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F130 VICVectAddr15 Vector address 15 register. R/W 0 0xFFFF F130 VICVectCnt10 Vector control 0 register.	VICVectAddr2	Vector address 2 register.	R/W	0	0xFFFF F108
VICVectAddr5 Vector address 5 register. R/W 0 0xFFFF F114 VICVectAddr6 Vector address 6 register. R/W 0 0xFFFF F118 VICVectAddr7 Vector address 7 register. R/W 0 0xFFFF F110 VICVectAddr8 Vector address 8 register. R/W 0 0xFFFF F120 VICVectAddr9 Vector address 9 register. R/W 0 0xFFFF F124 VICVectAddr10 Vector address 10 register. R/W 0 0xFFFF F128 VICVectAddr11 Vector address 11 register. R/W 0 0xFFFF F120 VICVectAddr12 Vector address 12 register. R/W 0 0xFFFF F130 VICVectAddr13 Vector address 13 register. R/W 0 0xFFFF F130 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F130 VICVectAddr15 Vector control 0 register. R/W 0 0xFFFF F130 VICVectCnt10 Vector control 1 register. R/W 0 0xFFFF F200 VICVectCnt11 Vector control 2 register.	VICVectAddr3	Vector address 3 register.	R/W	0	0xFFFF F10C
VICVectAddr6 Vector address 6 register. R/W 0 0xFFFF F118 VICVectAddr7 Vector address 7 register. R/W 0 0xFFFF F110 VICVectAddr8 Vector address 8 register. R/W 0 0xFFFF F120 VICVectAddr9 Vector address 10 register. R/W 0 0xFFFF F124 VICVectAddr10 Vector address 11 register. R/W 0 0xFFFF F120 VICVectAddr11 Vector address 12 register. R/W 0 0xFFFF F120 VICVectAddr12 Vector address 13 register. R/W 0 0xFFFF F130 VICVectAddr13 Vector address 14 register. R/W 0 0xFFFF F130 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F130 VICVectAddr15 Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. R/W 0 0xFFFF F200 VICVectCnt11 Vector control 2 register. R/W 0 0xFFFF F200 VICVectCnt12 Vector control 3 register. R/W 0 0xFFFF F200 VICVectCnt14 Vector control 5 r	VICVectAddr4	Vector address 4 register.	R/W	0	0xFFFF F110
VICVectAddr7 Vector address 7 register. R/W 0 0xFFFF F110 VICVectAddr8 Vector address 8 register. R/W 0 0xFFFF F120 VICVectAddr9 Vector address 9 register. R/W 0 0xFFFF F124 VICVectAddr10 Vector address 10 register. R/W 0 0xFFFF F126 VICVectAddr11 Vector address 11 register. R/W 0 0xFFFF F130 VICVectAddr12 Vector address 13 register. R/W 0 0xFFFF F134 VICVectAddr13 Vector address 14 register. R/W 0 0xFFFF F134 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F136 VICVectAddr15 Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. R/W 0 0xFFFF F200 VICVectCnt11 Vector control 2 register. R/W 0 0xFFFF F204 VICVectCnt12 Vector control 3 register. R/W 0 0xFFFF F205 VICVectCnt14 Vector control 4 register. R/W 0 0xFFFF F210 VICVectCnt15 Vector control 5 re	VICVectAddr5	Vector address 5 register.	R/W	0	0xFFFF F114
VICVectAddr8 Vector address 8 register. R/W 0 0xFFFF F120 VICVectAddr9 Vector address 9 register. R/W 0 0xFFFF F124 VICVectAddr10 Vector address 10 register. R/W 0 0xFFFF F128 VICVectAddr11 Vector address 11 register. R/W 0 0xFFFF F130 VICVectAddr12 Vector address 13 register. R/W 0 0xFFFF F134 VICVectAddr13 Vector address 14 register. R/W 0 0xFFFF F136 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F136 VICVectAddr15 Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. R/W 0 0xFFFF F200 VICVectCntl1 Vector control 1 register. R/W 0 0xFFFF F204 VICVectCntl2 Vector control 2 register. R/W 0 0xFFFF F206 VICVectCntl3 Vector control 3 register. R/W 0 0xFFFF F206 VICVectCntl4 Vector control 6 register. R/W 0 0xFFFF F210 VICVectCntl6 Vector control 7 re	VICVectAddr6	Vector address 6 register.	R/W	0	0xFFFF F118
VICVectAddr9 Vector address 9 register. R/W 0 0xFFFF F124 VICVectAddr10 Vector address 10 register. R/W 0 0xFFFF F126 VICVectAddr11 Vector address 11 register. R/W 0 0xFFFF F126 VICVectAddr12 Vector address 12 register. R/W 0 0xFFFF F130 VICVectAddr13 Vector address 13 register. R/W 0 0xFFFF F134 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F130 VICVectAddr15 Vector address 15 register. R/W 0 0xFFFF F130 VICVectCntl0 Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. N/W 0 0xFFFF F200 VICVectCntl1 Vector control 1 register. R/W 0 0xFFFF F204 VICVectCntl2 Vector control 2 register. R/W 0 0xFFFF F205 VICVectCntl3 Vector control 3 register. R/W 0 0xFFFF F210 VICVectCntl4 Vector control 5 register. R/W 0 0xFFFF F214 VICVectCntl6 Vector control 7 r	VICVectAddr7	Vector address 7 register.	R/W	0	0xFFFF F11C
VICVectAddr10 Vector address 10 register. R/W 0 0xFFFF F128 VICVectAddr11 Vector address 11 register. R/W 0 0xFFFF F120 VICVectAddr12 Vector address 12 register. R/W 0 0xFFFF F130 VICVectAddr13 Vector address 13 register. R/W 0 0xFFFF F134 VICVectAddr14 Vector address 15 register. R/W 0 0xFFFF F130 VICVectAddr15 Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. R/W 0 0xFFFF F200 VICVectCntl1 Vector control 1 register. R/W 0 0xFFFF F204 VICVectCntl2 Vector control 2 register. R/W 0 0xFFFF F204 VICVectCntl3 Vector control 3 register. R/W 0 0xFFFF F205 VICVectCntl4 Vector control 4 register. R/W 0 0xFFFF F210 VICVectCntl4 Vector control 5 register. R/W 0 0xFFFF F210 VICVectCntl4 Vector control 6 register. R/W 0 0xFFFF F210 VICVectCntl6 Vector control 7 re	VICVectAddr8	Vector address 8 register.	R/W	0	0xFFFF F120
VICVectAddr11 Vector address 11 register. R/W 0 0xFFFF F12C VICVectAddr12 Vector address 12 register. R/W 0 0xFFFF F13C VICVectAddr13 Vector address 13 register. R/W 0 0xFFFF F13A VICVectAddr14 Vector address 14 register. R/W 0 0xFFFF F13B VICVectAddr15 Vector address 15 register. R/W 0 0xFFFF F13C VICVectCntl0 Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. R/W 0 0xFFFF F200 VICVectCntl1 Vector control 1 register. R/W 0 0xFFFF F204 VICVectCntl2 Vector control 3 register. R/W 0 0xFFFF F200 VICVectCntl3 Vector control 4 register. R/W 0 0xFFFF F200 VICVectCntl4 Vector control 5 register. R/W 0 0xFFFF F210 VICVectCntl5 Vector control 6 register. R/W 0 0xFFFF F214 VICVectCntl6 Vector control 7 register. R/W 0 0xFFFF F220 VICVectCntl8 Vector control 8 reg	VICVectAddr9	Vector address 9 register.	R/W	0	0xFFFF F124
VICVectAddr12Vector address 12 register.R/W00xFFFF F130VICVectAddr13Vector address 13 register.R/W00xFFFF F134VICVectAddr14Vector address 14 register.R/W00xFFFF F136VICVectAddr15Vector address 15 register.R/W00xFFFF F130VICVectCntl0Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest.00xFFFF F200VICVectCntl1Vector control 1 register.R/W00xFFFF F208VICVectCntl2Vector control 2 register.R/W00xFFFF F208VICVectCntl3Vector control 3 register.R/W00xFFFF F200VICVectCntl4Vector control 4 register.R/W00xFFFF F200VICVectCntl5Vector control 5 register.R/W00xFFFF F210VICVectCntl6Vector control 6 register.R/W00xFFFF F214VICVectCntl6Vector control 7 register.R/W00xFFFF F210VICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F220VICVectCntl10Vector control 10 register.R/W00xFFFF F220VICVectCntl11Vector control 11 register.R/W00xFFFF F220VICVectCntl11Vector control 12 register.R/W00xFFFF F220VICVectCntl13Vector control 13 register.R/W0	VICVectAddr10	Vector address 10 register.	R/W	0	0xFFFF F128
VICVectAddr13Vector address 13 register.R/W00xFFFF F134VICVectAddr14Vector address 14 register.R/W00xFFFF F138VICVectAddr15Vector address 15 register.R/W00xFFFF F130VICVectCntl0Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest.R/W00xFFFF F200VICVectCntl1Vector control 1 register.R/W00xFFFF F204VICVectCntl2Vector control 2 register.R/W00xFFFF F205VICVectCntl3Vector control 3 register.R/W00xFFFF F206VICVectCntl4Vector control 4 register.R/W00xFFFF F210VICVectCntl5Vector control 5 register.R/W00xFFFF F214VICVectCntl6Vector control 6 register.R/W00xFFFF F218VICVectCntl7Vector control 7 register.R/W00xFFFF F220VICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F220VICVectCntl11Vector control 12 register.R/W00xFFFF F220VICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W <td>VICVectAddr11</td> <td>Vector address 11 register.</td> <td>R/W</td> <td>0</td> <td>0xFFFF F12C</td>	VICVectAddr11	Vector address 11 register.	R/W	0	0xFFFF F12C
VICVectAddr14Vector address 14 register.R/W00xFFFF F138VICVectAddr15Vector address 15 register.R/W00xFFFF F13CVICVectCntl0Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest.R/W00xFFFF F200VICVectCntl1Vector control 1 register.R/W00xFFFF F204VICVectCntl2Vector control 2 register.R/W00xFFFF F208VICVectCntl3Vector control 3 register.R/W00xFFFF F200VICVectCntl4Vector control 4 register.R/W00xFFFF F200VICVectCntl5Vector control 5 register.R/W00xFFFF F210VICVectCntl6Vector control 6 register.R/W00xFFFF F218VICVectCntl7Vector control 7 register.R/W00xFFFF F210VICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F220VICVectCntl10Vector control 10 register.R/W00xFFFF F220VICVectCntl11Vector control 11 register.R/W00xFFFF F230VICVectCntl112Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F234	VICVectAddr12	Vector address 12 register.	R/W	0	0xFFFF F130
VICVectAddr15Vector address 15 register.R/W00xFFFF F13CVICVectCntl0Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest.R/W00xFFFF F200VICVectCntl1Vector control 1 register.R/W00xFFFF F204VICVectCntl2Vector control 2 register.R/W00xFFFF F208VICVectCntl3Vector control 3 register.R/W00xFFFF F200VICVectCntl4Vector control 4 register.R/W00xFFFF F210VICVectCntl5Vector control 5 register.R/W00xFFFF F210VICVectCntl6Vector control 6 register.R/W00xFFFF F218VICVectCntl7Vector control 7 register.R/W00xFFFF F210VICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F220VICVectCntl10Vector control 10 register.R/W00xFFFF F220VICVectCntl11Vector control 11 register.R/W00xFFFF F230VICVectCntl11Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F234	VICVectAddr13	Vector address 13 register.	R/W	0	0xFFFF F134
VICVectCntl0Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest.R/W00 xFFFF F200VICVectCntl1Vector control 1 register.R/W00 xFFFF F204VICVectCntl2Vector control 2 register.R/W00 xFFFF F208VICVectCntl3Vector control 3 register.R/W00 xFFFF F200VICVectCntl4Vector control 4 register.R/W00 xFFFF F210VICVectCntl5Vector control 5 register.R/W00 xFFFF F214VICVectCntl6Vector control 6 register.R/W00 xFFFF F214VICVectCntl7Vector control 7 register.R/W00 xFFFF F210VICVectCntl8Vector control 8 register.R/W00 xFFFF F220VICVectCntl9Vector control 9 register.R/W00 xFFFF F224VICVectCntl10Vector control 10 register.R/W00 xFFFF F224VICVectCntl11Vector control 11 register.R/W00 xFFFF F230VICVectCntl12Vector control 12 register.R/W00 xFFFF F234VICVectCntl13Vector control 13 register.R/W00 xFFFF F234VICVectCntl14Vector control 14 register.R/W00 xFFFF F238	VICVectAddr14	Vector address 14 register.	R/W	0	0xFFFF F138
Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. VICVectCntl1 Vector control 1 register. R/W 0 0xFFFF F204 VICVectCntl2 Vector control 2 register. R/W 0 0xFFFF F208 VICVectCntl3 Vector control 3 register. R/W 0 0xFFFF F200 VICVectCntl4 Vector control 4 register. R/W 0 0xFFFF F210 VICVectCntl5 Vector control 5 register. R/W 0 0xFFFF F210 VICVectCntl6 Vector control 6 register. R/W 0 0xFFFF F214 VICVectCntl7 Vector control 7 register. R/W 0 0xFFFF F218 VICVectCntl8 Vector control 8 register. R/W 0 0xFFFF F210 VICVectCntl8 Vector control 9 register. R/W 0 0xFFFF F220 VICVectCntl9 Vector control 9 register. R/W 0 0xFFFF F220 VICVectCntl10 Vector control 10 register. R/W 0 0xFFFF F220 VICVectCntl11 Vector control 11 register. R/W 0 0xFFFF F220 VICVectCntl11 Vector control 12 register. R/W 0 0xFFFF F230 VICVectCntl12 Vector control 13 register. R/W 0 0xFFFF F230 VICVectCntl13 Vector control 13 register. R/W 0 0xFFFF F230 VICVectCntl14 Vector control 14 register. R/W 0 0xFFFF F230	VICVectAddr15	Vector address 15 register.	R/W	0	0xFFFF F13C
VICVectCntl2Vector control 2 register.R/W00xFFFF F208VICVectCntl3Vector control 3 register.R/W00xFFFF F200VICVectCntl4Vector control 4 register.R/W00xFFFF F210VICVectCntl5Vector control 5 register.R/W00xFFFF F214VICVectCntl6Vector control 6 register.R/W00xFFFF F218VICVectCntl7Vector control 7 register.R/W00xFFFF F210VICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F226VICVectCntl11Vector control 11 register.R/W00xFFFF F220VICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl0	Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest	R/W	0	0xFFFF F200
VICVectCntl3Vector control 3 register.R/W00xFFFF F20CVICVectCntl4Vector control 4 register.R/W00xFFFF F210VICVectCntl5Vector control 5 register.R/W00xFFFF F214VICVectCntl6Vector control 6 register.R/W00xFFFF F218VICVectCntl7Vector control 7 register.R/W00xFFFF F21CVICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F226VICVectCntl11Vector control 11 register.R/W00xFFFF F220VICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl1	Vector control 1 register.	R/W	0	0xFFFF F204
VICVectCntl4Vector control 4 register.R/W00xFFFF F210VICVectCntl5Vector control 5 register.R/W00xFFFF F214VICVectCntl6Vector control 6 register.R/W00xFFFF F218VICVectCntl7Vector control 7 register.R/W00xFFFF F210VICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F228VICVectCntl11Vector control 11 register.R/W00xFFFF F230VICVectCntl12Vector control 12 register.R/W00xFFFF F234VICVectCntl13Vector control 13 register.R/W00xFFFF F238VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl2	Vector control 2 register.	R/W	0	0xFFFF F208
VICVectCntl5Vector control 5 register.R/W00xFFFF F214VICVectCntl6Vector control 6 register.R/W00xFFFF F218VICVectCntl7Vector control 7 register.R/W00xFFFF F21CVICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F228VICVectCntl11Vector control 11 register.R/W00xFFFF F220VICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl3	Vector control 3 register.	R/W	0	0xFFFF F20C
VICVectCntl6Vector control 6 register.R/W00xFFFF F218VICVectCntl7Vector control 7 register.R/W00xFFFF F21CVICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F228VICVectCntl11Vector control 11 register.R/W00xFFFF F220VICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl4	Vector control 4 register.	R/W	0	0xFFFF F210
VICVectCntl7Vector control 7 register.R/W00xFFFF F21CVICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F228VICVectCntl11Vector control 11 register.R/W00xFFFF F220VICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl5	Vector control 5 register.	R/W	0	0xFFFF F214
VICVectCntl8Vector control 8 register.R/W00xFFFF F220VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F228VICVectCntl11Vector control 11 register.R/W00xFFFF F220VICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl6	Vector control 6 register.	R/W	0	0xFFFF F218
VICVectCntl9Vector control 9 register.R/W00xFFFF F224VICVectCntl10Vector control 10 register.R/W00xFFFF F228VICVectCntl11Vector control 11 register.R/W00xFFFF F22CVICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl7	Vector control 7 register.	R/W	0	0xFFFF F21C
VICVectCntl10Vector control 10 register.R/W00xFFFF F228VICVectCntl11Vector control 11 register.R/W00xFFFF F22CVICVectCntl12Vector control 12 register.R/W00xFFFF F23CVICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl8	Vector control 8 register.	R/W	0	0xFFFF F220
VICVectCntl11Vector control 11 register.R/W00xFFFF F22CVICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl9	Vector control 9 register.	R/W	0	0xFFFF F224
VICVectCntl12Vector control 12 register.R/W00xFFFF F230VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl10	Vector control 10 register.	R/W	0	0xFFFF F228
VICVectCntl13Vector control 13 register.R/W00xFFFF F234VICVectCntl14Vector control 14 register.R/W00xFFFF F238	VICVectCntl11	Vector control 11 register.	R/W	0	0xFFFF F22C
VICVectCntl14 Vector control 14 register. R/W 0 0xFFFF F238	VICVectCntl12	Vector control 12 register.	R/W	0	0xFFFF F230
·	VICVectCntl13	Vector control 13 register.	R/W	0	0xFFFF F234
VICVectCntl15 Vector control 15 register. R/W 0 0xFFFF F23C	VICVectCntl14	Vector control 14 register.	R/W	0	0xFFFF F238
	VICVectCntl15	Vector control 15 register.	R/W	0	0xFFFF F23C

^[1] Reset Value refers to the data stored in used bits only. It does not include reserved bits content.

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

5. VIC registers

The following section describes the VIC registers in the order in which they are used in the VIC logic, from those closest to the interrupt request inputs to those most abstracted for use by software. For most people, this is also the best order to read about the registers when learning the VIC.

5.1 Software Interrupt register (VICSoftInt - 0xFFFF F018)

The contents of this register are ORed with the 32 interrupt requests from the various peripherals, before any other logic is applied.

Table 35. Software Interrupt Register (VICSoftInt - address 0xFFFF F018) bit allocation

Reset value:	00000 00000							
Bit	31	30	29	28	27	26	25	24
Symbol	-	-	CAN4 RX	CAN3 RX	CAN2 RX	CAN1 RX	-	-
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	23	22	21	20	19	18	17	16
Symbol	CAN4 TX	CAN3 TX	CAN2 TX	CAN1 TX	CAN Common	ADC	EINT3	EINT2
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C	PW\M0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W

Table 36. Software Interrupt Register (VICSoftInt - address 0xFFFF F018) bit description

Bit	Symbol	Reset value	Value	Description
31-0	See VICSoftInt bit allocation	0	0	Do not force the interrupt request with this bit number. Writing zeroes to bits in VICSoftInt has no effect, see VICSoftIntClear (Section 5–5.2).
	table.	1	1	Force the interrupt request with this bit number.

5.2 Software Interrupt Clear Register (VICSoftIntClear - 0xFFFF F01C)

This register allows software to clear one or more bits in the Software Interrupt register, without having to first read it.

Table 37. Software Interrupt Clear Register (VICSoftIntClear - 0xFFFF F01C)

VICSoftIntClear	Description	Reset Value
31:0	1: writing a 1 clears the corresponding bit in the Software Interrupt register, thus releasing the forcing of this request.	0
	0: writing a 0 leaves the corresponding bit in VICSoftInt unchanged.	

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Table 38. Software Interrupt Clear Register (VICSoftIntClear - address 0xFFFF F01C) bit allocation Reset value: 0x0000 0000

Bit 31 30 29 28 27 26 25 24 Symbol - - CAN4 RX CAN3 RX CAN2 RX CAN1 RX - - Access WO WO WO WO WO WO WO Bit 23 22 21 20 19 18 17 16 Symbol CAN4 TX CAN3 TX CAN2 TX CAN1 TX CAN ADC EINT3 EINT2 Access WO WO WO WO WO WO WO Bit 15 14 13 12 11 10 9 8 Symbol EINT1 EINT0 RTC PLL SPI1/SSP SPI0 I2C PWM Access WO WO WO WO WO WO WO WO Bit 7 6 5 4 3 2 1 0		07.0000							
Access WO WDT Bit 7 6 5 4 3 2 1 0 WDT Symbol UART1 UART0 TIMER1 TIMER0 ARMCore1 ARMCore0 - WDT	Bit	31	30	29	28	27	26	25	24
Bit 23 22 21 20 19 18 17 16 Symbol CAN4 TX CAN3 TX CAN2 TX CAN1 TX CAN ADC EINT3 EINT2 Access WO WO WO WO WO WO WO Bit 15 14 13 12 11 10 9 8 Symbol EINT1 EINT0 RTC PLL SPI1/SSP SPI0 I2C PWM Access WO WO WO WO WO WO WO Bit 7 6 5 4 3 2 1 0 Symbol UART1 UART0 TIMER1 TIMER0 ARMCore1 ARMCore0 - WDT	Symbol	-	-	CAN4 RX	CAN3 RX	CAN2 RX	CAN1 RX	-	-
Symbol CAN4 TX CAN3 TX CAN2 TX CAN1 TX CAN Common Common ADC EINT3 EINT2 Access WO WD WDT	Access	WO	WO	WO	WO	WO	WO	WO	WO
Access WO WDT Symbol UART1 UART0 TIMER1 TIMER1 TIMER0 ARMCore1 ARMCore0 - WDT	Bit	23	22	21	20	19	18	17	16
Bit 15 14 13 12 11 10 9 8 Symbol EINT1 EINT0 RTC PLL SPI1/SSP SPI0 I2C PWM Access WO WO WO WO WO WO WO WO Bit 7 6 5 4 3 2 1 0 Symbol UART1 UART0 TIMER1 TIMER0 ARMCore1 ARMCore0 - WDT	Symbol	CAN4 TX	CAN3 TX	CAN2 TX	CAN1 TX		ADC	EINT3	EINT2
Symbol EINT1 EINT0 RTC PLL SPI1/SSP SPI0 I2C PWM Access WO WDT WDT Symbol UART1 UART0 TIMER1 TIMER0 ARMCore1 ARMCore0 - WDT	Access	WO	WO	WO	WO	WO	WO	WO	WO
Access WO WO <th< th=""><th>Bit</th><th>15</th><th>14</th><th>13</th><th>12</th><th>11</th><th>10</th><th>9</th><th>8</th></th<>	Bit	15	14	13	12	11	10	9	8
Bit 7 6 5 4 3 2 1 0 Symbol UART1 UART0 TIMER1 TIMER0 ARMCore1 ARMCore0 - WDT	Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C	PWM
Symbol UART1 UART0 TIMER1 TIMER0 ARMCore1 ARMCore0 - WDT	Access	WO	WO	WO	WO	WO	WO	WO	WO
	Bit	7	6	5	4	3	2	1	0
Access WO WO WO WO WO WO WO	Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
	Access	WO	WO	WO	WO	WO	WO	WO	WO

Table 39. Software Interrupt Clear Register (VICSoftIntClear - address 0xFFFF F01C) bit description

Bit	Symbol	Reset value	Value	Description
31-0	31-0 See VICSoftIntClear		0	Writing a 0 leaves the corresponding bit in VICSoftInt unchanged.
	bit allocation table.		1	Writing a 1 clears the corresponding bit in the Software Interrupt register, thus releasing the forcing of this request.

5.3 Raw Interrupt Status Register (VICRawIntr - 0xFFFF F008)

This is a read only register. This register reads out the state of the 32 interrupt requests and software interrupts, regardless of enabling or classification.

Table 40. Raw Interrupt Status Register (VICRawIntr - address 0xFFFF F008) bit description

VICRawIntr	Description	Reset value
31:0	1:The hardware or software interrupt request with this bit number is asserted.	0
	0: Neither the hardware nor software interrupt request with this bit number is asserted.	

5.4 Interrupt Enable Register (VICIntEnable - 0xFFFF F010)

This is a read/write accessible register. This register controls which of the 32 interrupt requests and software interrupts contribute to FIQ or IRQ.

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Table 41. Interrupt Enable Register (VICINtEnable - address 0xFFFF F010) bit description

VICIntEnable	Description	Reset value
31:0	When this register is read, 1s indicate interrupt requests or software interrupts that are enabled to contribute to FIQ or IRQ.	0
	When this register is written, ones enable interrupt requests or software interrupts to contribute to FIQ or IRQ, zeroes have no effect. See Section 5–5.5 "Interrupt Enable Clear Register (VICIntEnClear - OxFFFF F014)" on page 47 and Table 5–42 below for how to disable interrupts.	

5.5 Interrupt Enable Clear Register (VICIntEnClear - 0xFFFF F014)

This is a write only register. This register allows software to clear one or more bits in the Interrupt Enable register (Section 5–5.4), without having to first read it.

Table 42. Software Interrupt Clear Register (VICIntEnClear - address 0xFFFF F014) bit description

VICIntEnClear	Description	Reset value
31:0	1: writing a 1 clears the corresponding bit in the Interrupt Enable register, thus disabling interrupts for this request.	0
	0: writing a 0 leaves the corresponding bit in VICIntEnable unchanged.	

5.6 Interrupt Select Register (VICIntSelect - 0xFFFF F00C)

This is a read/write accessible register. This register classifies each of the 32 interrupt requests as contributing to FIQ or IRQ.

Table 43. Interrupt Select Register (VICIntSelect - address 0xFFFF F00C) bit description

VICIntSelect	Description	Reset value
31:0	1: the interrupt request with this bit number is assigned to the FIQ category.	0
	0: the interrupt request with this bit number is assigned to the IRQ category.	

5.7 IRQ Status Register (VICIRQStatus - 0xFFFF F000)

This is a read only register. This register reads out the state of those interrupt requests that are enabled and classified as IRQ. It does not differentiate between vectored and non-vectored IRQs.

Table 44. IRQ Status Register (VICIRQStatus - address 0xFFFF F000) bit description

VICIRQStatus	Description	Reset value
31:0	1: the interrupt request with this bit number is enabled, classified as IRQ, and asserted.	0

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

5.8 FIQ Status Register (VICFIQStatus - 0xFFFF F004)

This is a read only register. This register reads out the state of those interrupt requests that are enabled and classified as FIQ. If more than one request is classified as FIQ, the FIQ service routine can read this register to see which request(s) is (are) active.

Table 45. FIQ Status Register (VICFIQStatus - address 0xFFFF F004) bit description

VICFIQStatus	Description	Reset value
31:0	1: the interrupt request with this bit number is enabled, classified as FIQ, and asserted.	0

5.9 Vector Control registers 0-15 (VICvectCntl0-15 - 0xFFFF F200-23C)

These are a read/write accessible registers. Each of these registers controls one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. Note that disabling a vectored IRQ slot in one of the VICVectCntl registers does not disable the interrupt itself, the interrupt is simply changed to the non-vectored form.

Table 46. Vector Control registers (VICVectCntI0-15 - addresses 0xFFFF F200-23C) bit description

VICVectCntl0-15	Description	Reset value
4:0	The number of the interrupt request or software interrupt assigned to this vectored IRQ slot. As a matter of good programming practice, software should not assign the same interrupt number to more than one enabled vectored IRQ slot. But if this does occur, the lower numbered slot will be used when the interrupt request or software interrupt is enabled, classified as IRQ, and asserted.	0
5	1: this vectored IRQ slot is enabled, and can produce a unique ISR address when its assigned interrupt request or software interrupt is enabled, classified as IRQ, and asserted.	0
31:6	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.10 Vector Address registers 0-15 (VICVectAddr0-15 - 0xFFFF F100-13C)

These are a read/write accessible registers. These registers hold the addresses of the Interrupt Service routines (ISRs) for the 16 vectored IRQ slots.

Table 47. Vector Address registers (VICVectAddr0-15 - addresses 0xFFFF F100-13C) bit description

VICVectAddr0-15	Description	Reset value
31:0	When one or more interrupt request or software interrupt is (are) enabled, classified as IRQ, asserted, and assigned to an enabled vectored IRQ slot, the value from this register for the highest-priority such slot will be provided when the IRQ service routine reads the Vector Address register -VICVectAddr (Section 5–5.10).	0

5.11 Default Vector Address register (VICDefVectAddr - 0xFFFF F034)

This is a read/write accessible register. This register holds the address of the Interrupt Service routine (ISR) for non-vectored IRQs.

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Table 48. Default Vector Address register (VICDefVectAddr - address 0xFFFF F034) bit description

VICDefVectAddr	Description	Reset value
31:0	When an IRQ service routine reads the Vector Address register (VICVectAddr), and no IRQ slot responds as described above, this address is returned.	0

5.12 Vector Address register (VICVectAddr - 0xFFFF F030)

This is a read/write accessible register. When an IRQ interrupt occurs, the IRQ service routine can read this register and jump to the value read.

Table 49. Vector Address register (VICVectAddr - address 0xFFFF F030) bit description

VICVectAddr	Description	Reset value
31:0	If any of the interrupt requests or software interrupts that are assigned to a vectored IRQ slot is (are) enabled, classified as IRQ, and asserted, reading from this register returns the address in the Vector Address Register for the highest-priority such slot (lowest-numbered) such slot. Otherwise it returns the address in the Default Vector Address Register.	0
	Writing to this register does not set the value for future reads from it. Rather, this register should be written near the end of an ISR, to update the priority hardware.	

5.13 Protection Enable register (VICProtection - 0xFFFF F020)

This is a read/write accessible register. This one-bit register controls access to the VIC registers by software running in User mode.

Table 50. Protection Enable register (VICProtection - address 0xFFFF F020) bit description

VICProtection	Description	Reset value
0	1: the VIC registers can only be accessed in privileged mode.0: VIC registers can be accessed in User or privileged mode.	0
31:1	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6. Interrupt sources

<u>Table 5–51</u> lists the interrupt sources for each peripheral function. Each peripheral device has one interrupt line connected to the Vectored Interrupt Controller, but may have several internal interrupt flags. Individual interrupt flags may also represent more than one interrupt source. See <u>Table 5–33</u> for which flags are implemented for which parts.

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Table 51. Connection of interrupt sources to the Vectored Interrupt Controller


Block	Flag(s)		VIC Channel # and Mask
WDT	Watchdog Interrupt (WDINT)	0	0x0000 0001
-	Reserved for software interrupts only	1	0x0000 0002
ARM Core	Embedded ICE, DbgCommRx	2	0x0000 0004
ARM Core	Embedded ICE, DbgCommTX	3	0x0000 0008
TIMER0	Match 0 - 3 (MR0, MR1, MR2, MR3)	4	0x0000 0010
	Capture 0 - 3 (CR0, CR1, CR2, CR3)		
TIMER1	Match 0 - 3 (MR0, MR1, MR2, MR3)	5	0x0000 0020
	Capture 0 - 3 (CR0, CR1, CR2, CR3)		
UART0	Rx Line Status (RLS)	6	0x0000 0040
	Transmit Holding Register Empty (THRE)		
	Rx Data Available (RDA)		
	Character Time-out Indicator (CTI)		
	Auto-Baud Time-Out (ABTO)		
UART1	End of Auto-Baud (ABEO) Rx Line Status (RLS)	7	0x0000 0080
UARTI	Transmit Holding Register Empty (THRE)	,	0x0000 0080
	Rx Data Available (RDA)		
	Character Time-out Indicator (CTI)		
	Modem Status Interrupt (MSI)		
	Auto-Baud Time-Out (ABTO)		
	End of Auto-Baud (ABEO)		
PWM	Match 0 - 6 (MR0, MR1, MR2, MR3, MR4, MR5, MR6)	8	0x0000 0100
I ² C	SI (state change)	9	0x0000 0200
SPI0	SPI Interrupt Flag (SPIF) Mode Fault (MODF)	10	0x0000 0400
SPI1 (SSP)	Source: SPI1	11	0x0000 0800
	SPI Interrupt Flag (SPIF)		
	Mode Fault (MODF)		
	Source: SSP		
	TX FIFO at least half empty (TXRIS)		
	Rx FIFO at least half full (RXRIS)		
	Receive Timeout condition (RTRIS)		
	Receive overrun (RORRIS)		
PLL	PLL Lock (PLOCK)	12	0x0000 1000
RTC	Counter Increment (RTCCIF) Alarm (RTCALF)	13	0x0000 2000
System Control	External Interrupt 0 (EINT0)	14	0x0000 4000
	External Interrupt 1 (EINT1)	15	0x0000 8000
	External Interrupt 2 (EINT2)	16	0x0001 0000
	External Interrupt 3 (EINT3)	17	0x0002 0000
ADC	A/D Converter end of conversion	18	0x0004 0000

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Table 51. Connection of interrupt sources to the Vectored Interrupt Controller

Block	Flag(s)	VIC Hex	VIC Channel # and Mask
CAN	CAN common and acceptance filter (1 ORed CAN, LUTerr)	19	0x0008 0000
CAN	CAN1 TX	20	0x0010 0000
CAN	CAN2 TX	21	0x0020 0000
CAN	CAN3 TX	22	0x0040 0000
CAN	CAN4 TX	23	0x0080 0000
Reserved		24- 25	0x0100 0000 -0x0200 0000
CAN	CAN1 RX	26	0x0400 0000
CAN	CAN2 RX	27	0x0800 0000
CAN	CAN3 RX	28	0x1000 0000
CAN	CAN4 RX	29	0x2000 0000

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

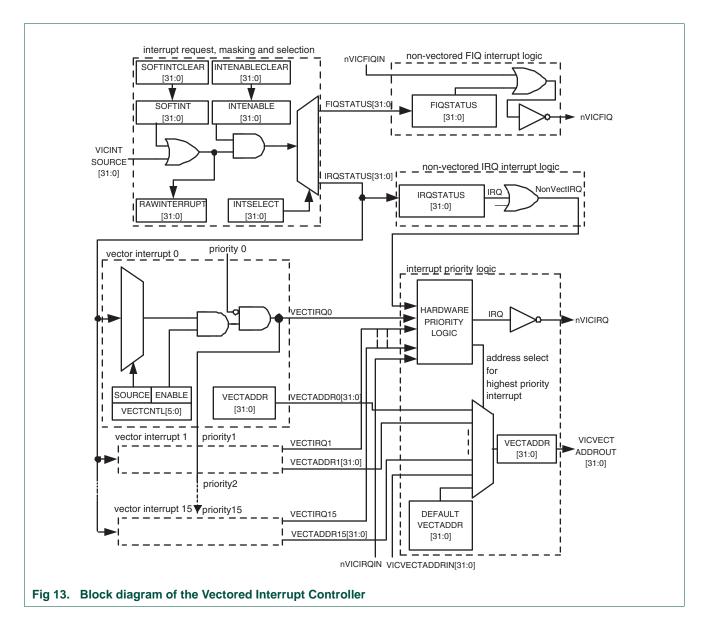

7. Spurious interrupts

Spurious interrupts are possible in the ARM7TDMI based microcontrollers such as the LPC21xx and LPC22xx due to asynchronous interrupt handling. The asynchronous character of the interrupt processing has its roots in the interaction of the core and the VIC. If the VIC state is changed between the moments when the core detects an interrupt, and the core actually processes an interrupt, problems may be generated.

Real-life applications may experience the following scenarios:

- 1. VIC decides there is an IRQ interrupt and sends the IRQ signal to the core.
- 2. Core latches the IRQ state.
- 3. Processing continues for a few cycles due to pipelining.
- 4. Core loads IRQ address from VIC.

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Furthermore, It is possible that the VIC state has changed during step 3. For example, VIC was modified so that the interrupt that triggered the sequence starting with step 1) is no longer pending -interrupt got disabled in the executed code. In this case, the VIC will not be able to clearly identify the interrupt that generated the interrupt request, and as a result the VIC will return the default interrupt VicDefVectAddr (0xFFFF F034).

This potentially disastrous chain of events can be prevented in two ways:

- 1. Application code should be set up in a way to prevent the spurious interrupts from occurring. Simple guarding of changes to the VIC may not be enough since, for example, glitches on level sensitive interrupts can also cause spurious interrupts.
- 2. VIC default handler should be set up and tested properly.

7.1 Details and case studies on spurious interrupts

This chapter contains details that can be obtained from the official ARM website, FAQ section under the "Technical Support":

What happens if an interrupt occurs as it is being disabled?

Applies to: ARM7TDMI

If an interrupt is received by the core during execution of an instruction that disables interrupts, the ARM7 family will still take the interrupt. This occurs for both IRQ and FIQ interrupts.

For example, consider the following instruction sequence:

```
MRS r0, cpsr

ORR r0, r0, #I_Bit:OR:F_Bit ;disable IRQ and FIQ interrupts

MSR cpsr c, r0
```

If an IRQ interrupt is received during execution of the MSR instruction, then the behavior will be as follows:

- The IRQ interrupt is latched.
- The MSR cpsr, r0 executes to completion setting both the I bit and the F bit in the CPSR.
- The IRQ interrupt is taken because the core was committed to taking the interrupt exception before the I bit was set in the CPSR.
- The CPSR (with the I bit and F bit set) is moved to the SPSR IRQ.

This means that, on entry to the IRQ interrupt service routine, you can see the unusual effect that an IRQ interrupt has just been taken while the I bit in the SPSR is set. In the example above, the F bit will also be set in both the CPSR and SPSR. This means that FIQs are disabled upon entry to the IRQ service routine, and will remain so until explicitly re-enabled. FIQs will not be reenabled automatically by the IRQ return sequence.

Although the example shows both IRQ and FIQ interrupts being disabled, similar behavior occurs when only one of the two interrupt types is being disabled. The fact that the core processes the IRQ after completion of the MSR instruction which disables IRQs does not normally cause a problem, since an interrupt arriving just one cycle earlier would be expected to be taken. When the interrupt routine returns with an instruction like:

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

```
SUBS pc, lr, #4
```

The SPSR_IRQ is restored to the CPSR. The CPSR will now have the I bit and F bit set, and therefore execution will continue with all interrupts disabled. However, this can cause problems in the following cases:

Problem 1: A particular routine maybe called as an IRQ handler, or as a regular subroutine. In the latter case, the system guarantees that IRQs would have been disabled prior to the routine being called. The routine exploits this restriction to determine how it was called (by examining the I bit of the SPSR), and returns using the appropriate instruction. If the routine is entered due to an IRQ being received during execution of the MSR instruction which disables IRQs, then the I bit in the SPSR will be set. The routine would therefore assume that it could not have been entered via an IRQ.

Problem 2: FIQs and IRQs are both disabled by the same write to the CPSR. In this case, if an IRQ is received during the CPSR write, FIQs will be disabled for the execution time of the IRQ handler. This may not be acceptable in a system where FIQs must not be disabled for more than a few cycles.

7.1.1 Workaround

There are 3 suggested workarounds. Which of these is most applicable will depend upon the requirements of the particular system.

7.1.1.1 Solution 1: Test for an IRQ received during a write to disable IRQs

Add code similar to the following at the start of the interrupt routine.

```
SUB
         lr, lr, #4
                         ; Adjust LR to point to return
STMFD
         sp!, {..., lr}
                         ; Get some free regs
        lr, SPSR
                         ; See if we got an interrupt while
MRS
        lr, #I_Bit
                         ; interrupts were disabled.
TST
LDMNEFD sp!, {..., pc}^ ; If so, just return immediately.
                         ; The interrupt will remain pending since we haven't
                         ; acknowledged it and will be reissued when interrupts
                         ; are next enabled.
                         ; Rest of interrupt routine
```

This code will test for the situation where the IRQ was received during a write to disable IRQs. If this is the case, the code returns immediately - resulting in the IRQ not being acknowledged (cleared), and further IRQs being disabled.

Similar code may also be applied to the FIQ handler, in order to resolve the first issue.

This is the recommended workaround, as it overcomes both problems mentioned above. However, in the case of problem two, it does add several cycles to the maximum length of time FIQs will be disabled.

7.1.1.2 Solution 2: Disable IRQs and FIQs using separate writes to the CPSR

```
MRS r0, cpsr
ORR r0, r0, #I_Bit ;disable IRQs
MSR cpsr_c, r0
ORR r0, r0, #F_Bit ;disable FIQs
MSR cpsr_c, r0
```

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

This is the best workaround where the maximum time for which FIQs are disabled is critical (it does not increase this time at all). However, it does not solve problem one, and requires extra instructions at every point where IRQs and FIQs are disabled together.

7.1.1.3 Solution 3: Re-enable FIQs at the beginning of the IRQ handler

As the required state of all bits in the c field of the CPSR are known, this can be most efficiently be achieved by writing an immediate value to CPSR_C, for example:

```
MSR cpsr_c, #I_Bit:OR:irq_MODE    ;IRQ should be disabled
;FIQ enabled
;ARM state, IRO mode
```

This requires only the IRQ handler to be modified, and FIQs may be re-enabled more quickly than by using workaround 1. However, this should only be used if the system can guarantee that FIQs are never disabled while IRQs are enabled. It does not address problem one.

8. VIC usage notes

If user code is running from an on-chip RAM and an application uses interrupts, interrupt vectors must be re-mapped to on-chip address 0x0. This is necessary because all the exception vectors are located at addresses 0x0 and above. This is easily achieved by configuring the MEMMAP register (see <u>Table 2–20</u>) to User RAM mode. Application code should be linked such that at 0x4000 0000 the Interrupt Vector Table (IVT) will reside.

Although multiple sources can be selected (VICIntSelect) to generate FIQ request, only one interrupt service routine should be dedicated to service all available/present FIQ request(s). Therefore, if more than one interrupt sources are classified as FIQ the FIQ interrupt service routine must read VICFIQStatus to decide based on this content what to do and how to process the interrupt request. However, it is recommended that only one interrupt source should be classified as FIQ. Classifying more than one interrupt sources as FIQ will increase the interrupt latency.

Following the completion of the desired interrupt service routine, clearing of the interrupt flag on the peripheral level will propagate to corresponding bits in VIC registers (VICRawIntr, VICFIQStatus and VICIRQStatus). Also, before the next interrupt can be serviced, it is necessary that write is performed into the VICVectAddr register before the return from interrupt is executed. This write will clear the respective interrupt flag in the internal interrupt priority hardware.

In order to disable the interrupt at the VIC you need to clear corresponding bit in the VICIntEnCIr register, which in turn clears the related bit in the VICIntEnable register. This also applies to the VICSoftInt and VICSoftIntClear in which VICSoftIntClear will clear the respective bits in VICSoftInt. For example, if VICSoftInt = 0x0000 0005 and bit 0 has to be cleared, VICSoftIntClear = 0x0000 0001 will accomplish this. Before the new clear operation on the same bit in VICSoftInt using writing into VICSoftIntClear is performed in the future, VICSoftIntClear = 0x0000 0000 must be assigned. Therefore writing 1 to any bit in Clear register will have one-time-effect in the destination register.

If the watchdog is enabled for interrupt on underflow or invalid feed sequence only then there is no way of clearing the interrupt. The only way you could perform return from interrupt is by disabling the interrupt at the VIC (using VICIntEnClr).

Chapter 5: LPC21xx/22xx Vectored Interrupt Controller (VIC)

Example: Assuming that UART0 and SPI0 are generating interrupt requests that are classified as vectored IRQs (UART0 being on the higher level than SPI0), while UART1 and I²C are generating non-vectored IRQs, the following could be one possibility for VIC setup:

```
VICIntSelect = 0x0000 0000
                             ; SPIO, I2C, UART1 and UART0 are IRQ =>
                             ; bit10, bit9, bit7 and bit6=0
VICIntEnable = 0 \times 0000 0000
                             ; SPIO, I2C, UART1 and UART0 are enabled interrupts =>
                             ; bit10, bit9, bit 7 and bit6=1
VICDefVectAddr = 0x...
                             ; holds address at what routine for servicing
                             ; non-vectored IRQs (i.e. UART1 and I2C) starts
VICVectAddr0 = 0x...
                             ; holds address where UARTO IRQ service routine starts
VICVectAddr1 = 0x...
                             ; holds address where SPIO IRQ service routine starts
VICVectCntl0 = 0x0000 0026
                             ; interrupt source with index 6 (UARTO) is enabled as
                             ; the one with priority 0 (the highest)
                             ; interrupt source with index 10 (SPIO) is enabled
VICVectCntl1 = 0x0000 002A
                             ; as the one with priority 1
```

After any of IRQ requests (SPI0, I²C, UART0 or UART1) is made, microcontroller will redirect code execution to the address specified at location 0x0000 0018. For vectored and non-vectored IRQ's the following instruction could be placed at 0x0000 0018:

```
LDR pc, [pc,#-0xFF0]
```

This instruction loads PC with the address that is present in VICVectAddr register.

In case UART0 request has been made, VICVectAddr will be identical to VICVectAddr0, while in case SPI0 request has been made value from VICVectAddr1 will be found here. If neither UART0 nor SPI0 have generated IRQ request but UART1 and/or I²C were the reason, content of VICVectAddr will be identical to VICDefVectAddr.

UM10114

Chapter 6: LPC21xx/22xx System control

Rev. 03 — 2 April 2008

User manual

57 of 386

1. How to read this chapter

Remark: The LPC21xx and LPC22xx have different features and peripherals enabled depending on part number and version. Refer to <u>Table 6–52</u> for registers that need to be configured for each specific part and peripheral.

The following register descriptions include all LPC21xx and LPC22xx parts. Registers not listed in <u>Table 6–52</u> are identical for all parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

Table 52. LPC21xx/22xx part-specific register bits

	Power control for Hi-Speed GPIO Peripher peripherals		Peripheral Clock	Memory mapping modes
	PCONP bit, <u>Table 6–74</u>	SCS bit, <u>Table 6–61</u>	APBDIV bit, Table 6–76	MEMMAP mode, Table 6–62
no suffix a	nd /00 parts			
LPC2109	all 1 + PCCAN1	n/a	APBDIV	Flash/ROM/RAM
LPC2119	all[1] + PCCAN1/2	n/a	APBDIV	Flash/ROM/RAM
LPC2129	all[1] + PCCAN1/2	n/a	APBDIV	Flash/ROM/RAM
LPC2114	all common peripherals[1]	n/a	APBDIV	Flash/ROM/RAM
LPC2124	all common peripherals[1]	n/a	APBDIV	Flash/ROM/RAM
LPC2194	all 11+ PCCAN1/2/3/4	n/a	APBDIV	Flash/ROM/RAM
LPC2210	all + PCEMC	n/a	APBDIV/XCLK	ROM/RAM/EMC
LPC2220	all[1] + PCEMC, PCSSP[2]	GPIO0/1M	APBDIV/XCLK	ROM/RAM/EMC
LPC2212	all 1 + PCEMC	n/a	APBDIV/XCLK	Flash/ROM/RAM/EMC
LPC2214	all 1 + PCEMC	n/a	APBDIV/XCLK	Flash/ROM/RAM/EMC
LPC2290	all + PCEMC, PCAN1/2	n/a	APBDIV/XCLK	Flash/ROM/RAM/EMC
LPC2292	all + PCEMC, PCAN1/2	n/a	APBDIV/XCLK	Flash/ROM/RAM/EMC
LPC2294	all[1] + PCEMC, PCCAN1/2/3/4	n/a	APBDIV/XCLK	Flash/ROM/RAM/EMC
/01 parts				
LPC2109	all[1] + PCSSP, PCCAN1	GPIO0/1M	APBDIV	Flash/ROM/RAM
LPC2119	all[1] + PCSSP, PCCAN1/2	GPIO0/1M	APBDIV	Flash/ROM/RAM
LPC2129	all[1] + PCSSP, PCCAN1/2	GPIO0/1M	APBDIV	Flash/ROM/RAM
LPC2114	all[1] + PCSSP	GPIO0/1M	APBDIV	Flash/ROM/RAM
LPC2124	all[1] + PCSSP	GPIO0/1M	APBDIV	Flash/ROM/RAM
LPC2194	all[1] + PCSSP, PCCAN1/2/3/4	GPIO0/1M	APBDIV	Flash/ROM/RAM
LPC2210	all[1] + PCEMC, PCSSP[2]	GPIO0/1M	APBDIV/XCLK	ROM/RAM/EMC
LPC2212	all[1] + PCEMC, PCSSP[2]	GPIO0/1M	APBDIV/XCLK	Flash/ROM/RAM/EMC
LPC2214	all[1] + PCEMC, PCSSP[2]	GPIO0/1M	APBDIV/XCLK	Flash/ROM/RAM/EMC

Chapter 6: LPC21xx/22xx System control

Table 52. LPC21xx/22xx part-specific register bits

	Power control for Hi-Speed GPIO P peripherals		Peripheral Clock	Memory mapping modes
	PCONP bit, <u>Table 6–74</u>	SCS bit, <u>Table 6–61</u>	APBDIV bit, Table 6–76	MEMMAP mode, Table 6–62
LPC2290	all[1] + PCEMC, PCSSP[2], PCCAN1/2	GPIO0/1M	APBDIV/XCLK	Flash/ROM/RAM/EMC
LPC2292	all[1] + PCEMC, PCSSP[2], PCCAN1/2	GPIO0/1M	APBDIV/XCLK	Flash/ROM/RAM/EMC
LPC2294	all[1] + PCEMC, PCSSP[2], PCCAN1/2/3/4	GPIO0/1M	APBDIV/XCLK	Flash/ROM/RAM/EMC

^[1] The PCONP bits common to all parts are: PCTIM0/1, PCUART0/1, PCI2C, PCSPI0/1, PCRTC, PCAD.

2. Summary of system control block functions

The System Control Block includes several system features and control registers for a number of functions that are not related to specific peripheral devices. These include:

- Crystal Oscillator
- External Interrupt Inputs
- Miscellaneous System Controls and Status
- Memory Mapping Control
- PLL
- Power Control
- Reset
- APB Divider
- Wakeup Timer

Each type of function has its own register(s) if any are required and unneeded bits are defined as reserved in order to allow future expansion. Unrelated functions never share the same register addresses

3. Pin description

Table 6–53 shows pins that are associated with System Control block functions.

Table 53. Pin summary

Pin name	Pin direction	Pin description
XTAL1	Input	Crystal Oscillator Input - Input to the oscillator and internal clock generator circuits
XTAL2	Output	Crystal Oscillator Output - Output from the oscillator amplifier
EINT0	Input	External Interrupt Input 0 - An active low/high level or falling/rising edge general purpose interrupt input. This pin may be used to wake up the processor from Idle or Power-down modes. Pins P0.1 and P0.16 can be selected to perform EINTO function.

UM10114_3 © NXP B.V. 2008. All rights reserved.

^[2] Use the PCSSP bit to configure the SPI1 interface as SSP interface.

Chapter 6: LPC21xx/22xx System control

Table 53. Pin summary

Pin name	Pin direction	Pin description
EINT1	Input	External Interrupt Input 1 - See the EINT0 description above.
		Pins P0.3 and P0.14 can be selected to perform EINT1 function.
		Important: LOW level on pin P0.14 immediately after reset is considered as an external hardware request to start the ISP command handler. More details on ISP and Serial Boot Loader can be found in Section 21—5 on page 312.
EINT2	Input	External Interrupt Input 2 - See the EINT0 description above.
		Pins P0.7 and P0.15 can be selected to perform EINT2 function.
EINT3	Input	External Interrupt Input 3 - See the EINT0 description above.
		Pins P0.9, P0.20 and P0.30 can be selected to perform EINT3 function.
RESET	Input	External Reset input - A LOW on this pin resets the chip, causing I/O ports and peripherals to take on their default states and the processor to begin execution at address 0x0000 0000.

Register description

All registers, regardless of size, are on word address boundaries. Details of the registers appear in the description of each function.

Table 54. Summary of system control registers

Name	Description	Access	Reset value[1]	Address							
External Interrup	External Interrupts										
EXTINT	External Interrupt Flag Register	R/W	0	0xE01F C140							
EXTWAKE	External Interrupt Wakeup Register	R/W	0	0xE01F C144							
EXTMODE	External Interrupt Mode Register	R/W	0	0xE01F C148							
EXTPOLAR	External Interrupt Polarity Register	R/W	0	0xE01F C14C							
Memory Mapping	g Control										
MEMMAP	Memory Mapping Control	R/W	0	0xE01F C040							
Phase Locked Lo	рор										
PLLCON	PLL Control Register	R/W	0	0xE01F C080							
PLLCFG	PLL Configuration Register	R/W	0	0xE01F C084							
PLLSTAT	PLL Status Register	RO	0	0xE01F C088							
PLLFEED	PLL Feed Register	WO	NA	0xE01F C08C							
Power Control											
PCON	Power Control Register	R/W	0	0xE01F C0C0							
PCONP	Power Control for Peripherals	R/W	0x1FBE	0xE01F C0C4							
APB Divider											
APBDIV	APB Divider Control	R/W	0	0xE01F C100							
Syscon Miscellar	neous Registers										
SCS	System Controls and Status	R/W	0	0xE01F C1A0							

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 6: LPC21xx/22xx System control

5. Crystal oscillator

While an input signal of 50-50 duty cycle within a frequency range from 1 MHz to 50 MHz can be used by the LPC21xx/22xx if supplied to its input XTAL1 pin, this microcontroller's onboard oscillator circuit supports external crystals in the range of 1 MHz to 30 MHz only. If the on-chip PLL system or the boot-loader is used, the input clock frequency is limited to an exclusive range of 10 MHz to 25 MHz.

The oscillator output frequency is called F_{OSC} , and the ARM processor clock frequency is referred to as CCLK for purposes of rate equations, etc. elsewhere in this document. F_{OSC} and CCLK are the same value unless the PLL is running and connected. Refer to the Section 6–9 "Phase Locked Loop (PLL)" on page 69 for details and frequency limitations.

The onboard oscillator in the LPC21xx/LPC22xx can operate in one of two modes: slave mode and oscillation mode.

In slave mode the input clock signal should be coupled by means of a capacitor of 100 pF (C_C in Figure 6–14, drawing a), with an amplitude of at least 200 mVrms. The XTAL2 pin in this configuration can be left not connected. If slave mode is selected, the F_{OSC} signal of 50-50 duty cycle can range from 1 MHz to 50 MHz.

External components and models used in oscillation mode are shown in Figure 6–14, drawings b and c, and in Table 6–55. Since the feedback resistance is integrated on chip, only a crystal and the capacitances C_{X1} and C_{X2} need to be connected externally in case of fundamental mode oscillation (the fundamental frequency is represented by L, C_L and R_S). Capacitance C_P in Figure 6–14, drawing c, represents the parallel package capacitance and should not be larger than 7 pF. Parameters F_C , C_L , R_S and C_P are supplied by the crystal manufacturer.

Choosing the oscillation mode as an on-board oscillator mode of operation, limits F_{OSC} clock selection to 1 MHz to 30 MHz.


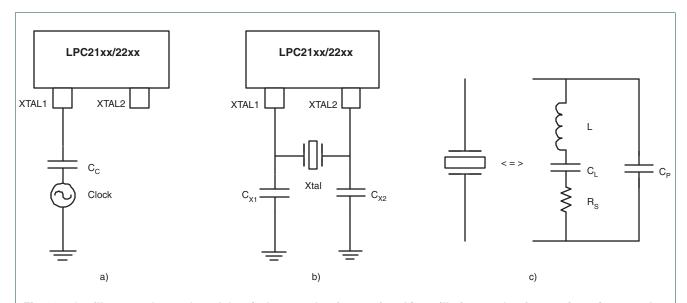


Fig 14. Oscillator modes and models: a) slave mode of operation, b) oscillation mode of operation, c) external crystal model used for C_{X1}/X_2 evaluation

Chapter 6: LPC21xx/22xx System control

Table 55. Recommended values for $C_{X1/X2}$ in oscillation mode (crystal and external components parameters)

Fundamental oscillation frequency Fosc	Crystal load capacitance C _L	Maximum crystal series resistance R _S	External load capacitors C _{X1} , _{CX2}
1 MHz - 5 MHz	10 pF	NA	NA
	20 pF	NA	NA
	30 pF	< 300 Ω	58 pF, 58 pF
5 MHz - 10 MHz	10 pF	< 300 Ω	18 pF, 18 pF
	20 pF	< 300 Ω	38 pF, 38 pF
	30 pF	< 300 Ω	58 pF, 58 pF
10 MHz - 15 MHz	10 pF	< 300 Ω	18 pF, 18 pF
	20 pF	< 220 Ω	38 pF, 38 pF
	30 pF	< 140 Ω	58 pF, 58 pF
15 MHz - 20 MHz	10 pF	< 220 Ω	18 pF, 18 pF
	20 pF	< 140 Ω	38 pF, 38 pF
	30 pF	< 80 Ω	58 pF, 58 pF
20 MHz - 25 MHz	10 pF	< 160 Ω	18 pF, 18 pF
	20 pF	< 90 Ω	38 pF, 38 pF
	30 pF	< 50 Ω	58 pF, 58 pF
25 MHz - 30 MHz	10 pF	< 130 Ω	18 pF, 18 pF
	20 pF	< 50 Ω	38 pF, 38 pF
	30 pF	NA	NA

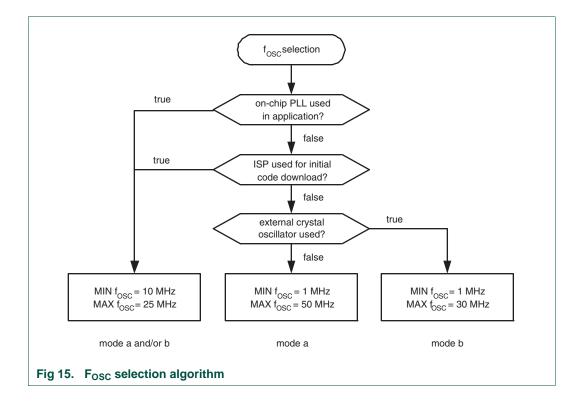

Chapter 6: LPC21xx/22xx System control

6. External interrupt inputs

The LLPC21xx/LPC22xx includes four external interrupt inputs as selectable pin functions. The external interrupt inputs can optionally be used to wake up the processor from Power-down mode.

6.1 Register description

The external interrupt function has four registers associated with it. The EXTINT register contains the interrupt flags, and the EXTWAKE register contains bits that enable individual external interrupts to wake up the microcontroller from Power-down mode. The EXTMODE and EXTPOLAR registers specify the level and edge sensitivity parameters.

Table 56. External interrupt registers

Name	Description	Access	Reset value ^[1]	Address
EXTINT	The External Interrupt Flag Register contains interrupt flags for EINT0, EINT1, EINT2 and EINT3. See <u>Table 6–57</u> .	R/W	0	0xE01F C140
EXTWAKE	The External Interrupt Wakeup Register contains four enable bits that control whether each external interrupt will cause the processor to wake up from Power-down mode. See Table 6–58 .	R/W	0	0xE01F C144
EXTMODE	The External Interrupt Mode Register controls whether each pin is edge- or level sensitive.	R/W	0	0xE01F C148
EXTPOLAR	The External Interrupt Polarity Register controls which level or edge on each pin will cause an interrupt.	R/W	0	0xE01F C14C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

6.2 External Interrupt Flag register (EXTINT - 0xE01F C140)

When a pin is selected for its external interrupt function, the level or edge on that pin (selected by its bits in the EXTPOLAR and EXTMODE registers) will set its interrupt flag in this register. This asserts the corresponding interrupt request to the VIC, which will cause an interrupt if interrupts from the pin are enabled.

Writing ones to bits EINT0 through EINT3 in EXTINT register clears the corresponding bits. In level-sensitive mode this action has an effect only when the pin is in its inactive state.

Once a bit from EINT0 to EINT3 is set and an appropriate code starts to execute (handling wakeup and/or external interrupt), this bit in EXTINT register must be cleared. Otherwise the event that was just triggered by activity on the EINT pin will not be recognized in the future.

Important: whenever a change of external interrupt operating mode (i.e. active level/edge) is performed (including the initialization of an external interrupt), the corresponding bit in the EXTINT register must be cleared! For details see Section 6–6.4 "External Interrupt Mode register (EXTMODE - 0xE01F C148)" and Section 6–6.5 "External Interrupt Polarity register (EXTPOLAR - 0xE01F C14C)".

Chapter 6: LPC21xx/22xx System control

For example, if a system wakes up from power-down using a low level on external interrupt 0 pin, its post-wakeup code must reset the EINT0 bit in order to allow future entry into the power-down mode. If the EINT0 bit is left set to 1, subsequent attempt(s) to invoke Power-down mode will fail. The same goes for external interrupt handling.

More details on the Power-down mode will be discussed in the following chapters.

Table 57. External Interrupt Flag register (EXTINT - address 0xE01F C140) bit description

Bit	Symbol	Description	Reset value
0	EINT0	In level-sensitive mode, this bit is set if the EINT0 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT0 function is selected for its pin, and the selected edge occurs on the pin.	0
		Up to two pins can be selected to perform the EINT0 function (see P0.1 and P0.16 description in "Pin Configuration" chapter, Section $7-2$ and Section $7-3$).	
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state (e.g. if EINT0 is selected to be low level sensitive and a low level is present on the corresponding pin, this bit can not be cleared; this bit can be cleared only when the signal on the pin becomes high).	
1	EINT1	In level-sensitive mode, this bit is set if the EINT1 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT1 function is selected for its pin, and the selected edge occurs on the pin.	0
		Up to two pins can be selected to perform the EINT1 function (see P0.3 and P0.14 description in "Pin Configuration" chapter, Section $7-2$ and Section $7-3$).	
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state (e.g. if EINT1 is selected to be low level sensitive and a low level is present on the corresponding pin, this bit can not be cleared; this bit can be cleared only when the signal on the pin becomes high).	
2	EINT2	In level-sensitive mode, this bit is set if the EINT2 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT2 function is selected for its pin, and the selected edge occurs on the pin.	0
		Up to two pins can be selected to perform the EINT2 function (see P0.7 and P0.15 description in "Pin Configuration" chapter, Section 7–2 and Section 7–3).	
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state (e.g. if EINT2 is selected to be low level sensitive and a low level is present on the corresponding pin, this bit can not be cleared; this bit can be cleared only when the signal on the pin becomes high).	
3	EINT3	In level-sensitive mode, this bit is set if the EINT3 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT3 function is selected for its pin, and the selected edge occurs on the pin.	0
		Up to three pins can be selected to perform the EINT3 function (see P0.9, P0.20 and P0.30 description in "Pin Configuration" chapter, Section 7–2 and Section 7–3).	
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state (e.g. if EINT3 is selected to be low level sensitive and a low level is present on the corresponding pin, this bit can not be cleared; this bit can be cleared only when the signal on the pin becomes high).	
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 6: LPC21xx/22xx System control

6.3 External interrupt Wakeup register (EXTWAKE - 0xE01F C144)

Enable bits in the EXTWAKE register allow the external interrupts and other sources to wake up the processor if it is in Power-down mode. The related EINTn function must be mapped to the pin in order for the wakeup process to take place. It is not necessary for the interrupt to be enabled in the Vectored Interrupt Controller for a wakeup to take place. This arrangement allows additional capabilities, such as having an external interrupt input wake up the processor from Power-down mode without causing an interrupt (simply resuming operation), or allowing an interrupt to be enabled during Power-down without waking the processor up if it is asserted (eliminating the need to disable the interrupt if the wakeup feature is not desirable in the application).

For an external interrupt pin to be a source that would wake up the microcontroller from Power-down mode, it is also necessary to clear the corresponding bit in the External Interrupt Flag register (Section 6–6.2 on page 62).

Table 58. Interrupt Wakeup register (INTWAKE - address 0xE01F C144) bit description

Bit	Symbol	Description	Reset value
0	EXTWAKE0	When one, assertion of EINT0 will wake up the processor from Power-down mode.	0
1	EXTWAKE1	When one, assertion of EINT1 will wake up the processor from Power-down mode.	0
2	EXTWAKE2	When one, assertion of EINT2 will wake up the processor from Power-down mode.	0
3	EXTWAKE3	When one, assertion of EINT3 will wake up the processor from Power-down mode.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.4 External Interrupt Mode register (EXTMODE - 0xE01F C148)

The bits in this register select whether each EINT pin is level- or edge-sensitive. Only pins that are selected for the EINT function (see Section 8–6) and enabled via the VICIntEnable register (Section 5–5.4 "Interrupt Enable Register (VICIntEnable - OXFFFF F010)" on page 46) can cause interrupts from the External Interrupt function (though of course pins selected for other functions may cause interrupts from those functions).

Note: Software should only change a bit in this register when its interrupt is disabled in the VICIntEnable register, and should write the corresponding 1 to the EXTINT register before enabling (initializing) or re-enabling the interrupt, to clear the EXTINT bit that could be set by changing the mode.

Table 59. External Interrupt Mode register (EXTMODE - address 0xE01F C148) bit description

Bit	Symbol	Value	Description	Reset value
0	EXTMODE0	0	Level-sensitivity is selected for EINT0.	0
		1	EINT0 is edge sensitive.	
1	EXTMODE1	0	Level-sensitivity is selected for EINT1.	0
		1	EINT1 is edge sensitive.	

UM10114 3 © NXP B.V. 2008. All rights reserved.

Chapter 6: LPC21xx/22xx System control

Table 59. External Interrupt Mode register (EXTMODE - address 0xE01F C148) bit description

Bit	Symbol	Value	Description	Reset value
2	EXTMODE2	0	Level-sensitivity is selected for EINT2.	0
		1	EINT2 is edge sensitive.	
3	EXTMODE3	0	Level-sensitivity is selected for EINT3.	0
		1	EINT3 is edge sensitive.	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.5 External Interrupt Polarity register (EXTPOLAR - 0xE01F C14C)

In level-sensitive mode, the bits in this register select whether the corresponding pin is high- or low-active. In edge-sensitive mode, they select whether the pin is rising- or falling-edge sensitive. Only pins that are selected for the EINT function (see Section 8–6) and enabled in the VICIntEnable register (Section 5–5.4 "Interrupt Enable Register (VICIntEnable - 0xFFFF F010)" on page 46) can cause interrupts from the External Interrupt function (though of course pins selected for other functions may cause interrupts from those functions).

Note: Software should only change a bit in this register when its interrupt is disabled in the VICIntEnable register, and should write the corresponding 1 to the EXTINT register before enabling (initializing) or re-enabling the interrupt, to clear the EXTINT bit that could be set by changing the polarity.

Table 60. External Interrupt Polarity register (EXTPOLAR - address 0xE01F C14C) bit description

Bit	Symbol	Value	Description	Reset value
0	EXTPOLAR0	0	EINT0 is low-active or falling-edge sensitive (depending on EXTMODE0).	0
		1	EINT0 is high-active or rising-edge sensitive (depending on EXTMODE0).	
1	EXTPOLAR1	0	EINT1 is low-active or falling-edge sensitive (depending on EXTMODE1).	0
		1	EINT1 is high-active or rising-edge sensitive (depending on EXTMODE1).	
2	EXTPOLAR2	0	EINT2 is low-active or falling-edge sensitive (depending on EXTMODE2).	0
		1	EINT2 is high-active or rising-edge sensitive (depending on EXTMODE2).	
3	EXTPOLAR3	0	EINT3 is low-active or falling-edge sensitive (depending on EXTMODE3).	0
		1	EINT3 is high-active or rising-edge sensitive (depending on EXTMODE3).	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 6: LPC21xx/22xx System control

6.6 Multiple external interrupt pins

Software can select multiple pins for each of EINT3:0 in the Pin Select registers, which are described in <u>Section 8–6</u>. The external interrupt logic for each of EINT3:0 receives the state of all of its associated pins from the pins' receivers, along with signals that indicate whether each pin is selected for the EINT function.


The external interrupt logic handles the case when more than one pin is selected for a particular interrupt, depending on how the interrupt's mode and polarity bits are set:

- In Low-Active Level Sensitive mode, the states of all pins selected for the same EINTx functionality are digitally combined using a positive logic AND gate.
- In High-Active Level Sensitive mode, the states of all pins selected for the same EINTx functionality are digitally combined using a positive logic OR gate.
- In Edge Sensitive mode, regardless of polarity, the pin with the lowest GPIO port number is used. (Selecting multiple pins for an EINTx in edge-sensitive mode could be considered a programming error.)

The signal derived by this logic processing multiple external interrupt pins is the "EINTi to wakeup timer" signal in the following logic schematic Figure 6–16.

For example, if the EINT3 function is selected in the PINSEL0 and PINSEL1 registers for pins P0.9, P0.20 and P0.30, and EINT3 is configured to be low level sensitive, the inputs from all three pins will be logically ANDed. When more than one EINT pin is logically ORed, the interrupt service routine can read the states of the pins from the GPIO port using the IO0PIN and IO1PIN registers, to determine which pin(s) caused the interrupt.

Chapter 6: LPC21xx/22xx System control

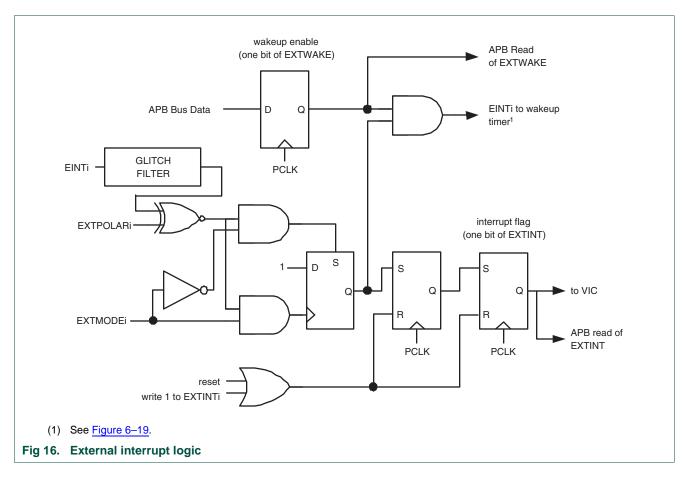

7. Other system controls

Some aspects of controlling LPC21xx/LPC22xx operation that do not fit into peripheral or other registers are grouped here.

7.1 System Control and Status flags register (SCS - 0xE01F C1A0)

Table 61. System Control and Status flags register (SCS - address 0xE01F C1A0) bit description

Bit	Symbol	Value	Description	Reset value	
0	GPIO0M		GPIO port 0 mode selection.	0	
		0	GPIO port 0 is accessed via APB addresses in a fashion compatible with previous LCP2000 devices.		
			1	High speed GPIO is enabled on GPIO port 0, accessed via addresses in the on-chip memory range. This mode includes the port masking feature described in Section 9-5.5 "Fast GPIO port Mask register FIOMASK(FIO0MASK - 0x3FFF C010, FIO1MASK - 0x3FFF C030)"	

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 6: LPC21xx/22xx System control

Table 61. System Control and Status flags register (SCS - address 0xE01F C1A0) bit description

Bit	Symbol	Value	Description	Reset value
1	GPIO1M		GPIO port 1 mode selection.	0
		0	GPIO port 1 is accessed via APB addresses in a fashion compatible with previous LCP2000 devices.	
		1	High speed GPIO is enabled on GPIO port 1, accessed via addresses in the on-chip memory range. This mode includes the port masking feature described in Section_9-5.5 "Fast GPIO port Mask register FIOMASK(FIO0MASK - 0x3FFF C010, FIO1MASK - 0x3FFF C030)"	
31:2	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

8. Memory mapping control

The Memory Mapping Control alters the mapping of the interrupt vectors that appear beginning at address 0x0000 0000. This allows code running in different memory spaces to have control of the interrupts.

8.1 Memory Mapping control register (MEMMAP - 0xE01F C040)

Whenever an exception handling is necessary, the microcontroller will fetch an instruction residing on the exception corresponding address as described in Table 2-19 "ARM exception vector locations" on page 22. The MEMMAP register determines the source of data that will fill this table.

Table 62. Memory Mapping control register (MEMMAP - address 0xE01F C040) bit description

Symbol	Value	Description	Reset	
			value	
MAP	00	Boot Loader Mode. Interrupt vectors are re-mapped to Boot Block.	00[1]	
	01	User flash mode. Interrupt vectors are not re-mapped and reside in Flash memory		
	10	User RAM Mode. Interrupt vectors are re-mapped to Static RAM.		
	11	User External memory Mode. Interrupt vectors are re-mapped to external memory.		
			Remark: This mode is available in 144-pin parts with external memory controller only. This value is reserved for parts without external memory controller, and user software should not write ones to reserved bits.	
-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
	-	01 10 11 Warnin	MAP O0 Boot Loader Mode. Interrupt vectors are re-mapped to Boot Block. O1 User flash mode. Interrupt vectors are not re-mapped and reside in Flash memory 10 User RAM Mode. Interrupt vectors are re-mapped to Static RAM. 11 User External memory Mode. Interrupt vectors are re-mapped to external memory. Remark: This mode is available in 144-pin parts with external memory controller only. This value is reserved for parts without external memory controller, and user software should not write ones to reserved bits. Warning: Improper setting of this value may result in incorrect operation of the device. - Reserved, user software should not write ones to reserved	

^[1] The hardware reset value of the MAP1:0 bits is 00 for LPC21xx/LPC22xx parts. The apparent reset value visible to the user is different because it is altered by the Boot Loader code, which always runs initially at reset.

Chapter 6: LPC21xx/22xx System control

8.2 Memory mapping control usage notes

The Memory Mapping Control simply selects one out of three available sources of data (sets of 64 bytes each) necessary for handling ARM exceptions (interrupts).

For example, whenever a Software Interrupt request is generated, the ARM core will always fetch 32-bit data "residing" on 0x0000 0008 see Table 2-19 "ARM exception vector locations" on page 22. This means that when MEMMAP[1:0]=10 (User RAM Mode), a read/fetch from 0x0000 0008 will provide data stored in 0x4000 0008. In case of MEMMAP[1:0]=00 (Boot Loader Mode), a read/fetch from 0x0000 0008 will provide data available also at 0x7FFF E008 (Boot Block remapped from on-chip Bootloader). MEMMAP[1:1]=11 (User External Memory Mode) will result in fetching data from off-chip memory at location 0x8000 0008.

9. Phase Locked Loop (PLL)

The PLL accepts an input clock frequency in the range of 10 MHz to 25 MHz only. The input frequency is multiplied up the range of 10 MHz to 75 MHz for the CCLK clock using a Current Controlled Oscillators (CCO). The multiplier can be an integer value from 1 to 32 (in practice, the multiplier value cannot be higher than 7 on the LPC21xx/LPC22xx due to the upper frequency limit of the CPU). The CCO operates in the range of 156 MHz to 320 MHz, so there is an additional divider in the loop to keep the CCO within its frequency range while the PLL is providing the desired output frequency. The output divider may be set to divide by 2, 4, 8, or 16 to produce the output clock. Since the minimum output divider value is 2, it is insured that the PLL output has a 50% duty cycle. A block diagram of the PLL is shown in Figure 6–17.

PLL activation is controlled via the PLLCON register. The PLL multiplier and divider values are controlled by the PLLCFG register. These two registers are protected in order to prevent accidental alteration of PLL parameters or deactivation of the PLL. Since all chip operations, including the Watchdog Timer, are dependent on the PLL when it is providing the chip clock, accidental changes to the PLL setup could result in unexpected behavior of the microcontroller. The protection is accomplished by a feed sequence similar to that of the Watchdog Timer. Details are provided in the description of the PLLFEED register.

The PLL is turned off and bypassed following a chip reset and when by entering Power-down mode. The PLL is enabled by software only. The program must configure and activate the PLL, wait for the PLL to Lock, then connect to the PLL as a clock source.

9.1 Register description

The PLL is controlled by the registers shown in <u>Table 6–63</u>. More detailed descriptions follow.


Warning: Improper setting of the PLL values may result in incorrect operation of the device!

Chapter 6: LPC21xx/22xx System control

Table 63. PLL registers

	•			
Name	Description	Access	Reset value ^[1]	Address
PLLCON	PLL Control Register. Holding register for updating PLL control bits. Values written to this register do not take effect until a valid PLL feed sequence has taken place.	R/W	0	0xE01F C080
PLLCFG	PLL Configuration Register. Holding register for updating PLL configuration values. Values written to this register do not take effect until a valid PLL feed sequence has taken place.	R/W	0	0xE01F C084
PLLSTAT	PLL Status Register. Read-back register for PLL control and configuration information. If PLLCON or PLLCFG have been written to, but a PLL feed sequence has not yet occurred, they will not reflect the current PLL state. Reading this register provides the actual values controlling the PLL, as well as the status of the PLL.	RO	0	0xE01F C088
PLLFEED	PLL Feed Register. This register enables loading of the PLL control and configuration information from the PLLCON and PLLCFG registers into the shadow registers that actually affect PLL operation.	WO	NA	0xE01F C08C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

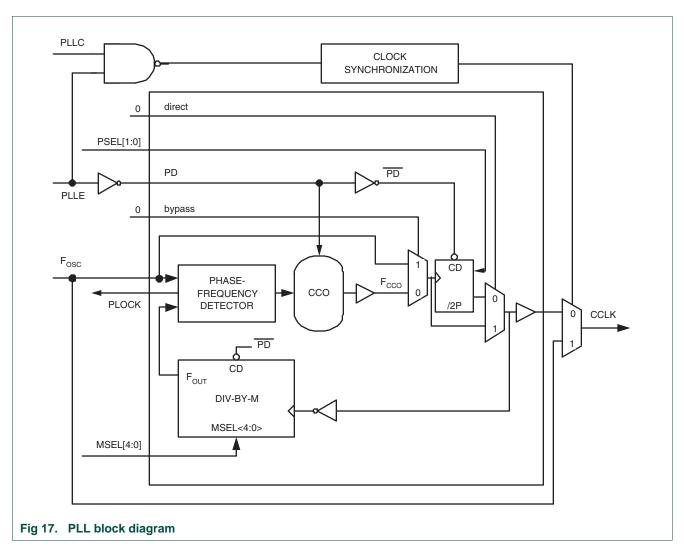

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 6: LPC21xx/22xx System control

9.2 PLL Control register (PLLCON - 0xE01F C080)

The PLLCON register contains the bits that enable and connect the PLL. Enabling the PLL allows it to attempt to lock to the current settings of the multiplier and divider values. Connecting the PLL causes the processor and all chip functions to run from the PLL output clock. Changes to the PLLCON register do not take effect until a correct PLL feed sequence has been given (see Section 6–9.7 "PLL Feed register (PLLFEED - 0xE01F C08C)" and Section 6–9.3 "PLL Configuration register (PLLCFG - 0xE01F C084)" on page 71).

Table 64. PLL Control register (PLLCON - address 0xE01F C080) bit description

Bit	Symbol	Description	Reset value
0	PLLE	PLL Enable. When one, and after a valid PLL feed, this bit will activate the PLL and allow it to lock to the requested frequency. See PLLSTAT register, <u>Table 6–66</u> .	0
1	PLLC	PLL Connect. When PLLC and PLLE are both set to one, and after a valid PLL feed, connects the PLL as the clock source for the microcontroller. Otherwise, the oscillator clock is used directly by the microcontroller. See PLLSTAT register, Table 6–66 .	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

The PLL must be set up, enabled, and Lock established before it may be used as a clock source. When switching from the oscillator clock to the PLL output or vice versa, internal circuitry synchronizes the operation in order to ensure that glitches are not generated. Hardware does not insure that the PLL is locked before it is connected or automatically disconnect the PLL if lock is lost during operation. In the event of loss of PLL lock, it is likely that the oscillator clock has become unstable and disconnecting the PLL will not remedy the situation.

9.3 PLL Configuration register (PLLCFG - 0xE01F C084)

The PLLCFG register contains the PLL multiplier and divider values. Changes to the PLLCFG register do not take effect until a correct PLL feed sequence has been given (see Section 6–9.7 "PLL Feed register (PLLFEED - 0xE01F C08C)" on page 73). Calculations for the PLL frequency, and multiplier and divider values are found in the PLL Frequency Calculation section on page 73.

Table 65. PLL Configuration register (PLLCFG - address 0xE01F C084) bit description

Bit	Symbol	Description	Reset value
4:0	MSEL	PLL Multiplier value. Supplies the value "M" in the PLL frequency calculations.	0
		Note: For details on selecting the right value for MSEL see <u>Section</u> 6–9.9 "PLL frequency calculation" on page 73.	
6:5	PSEL	PLL Divider value. Supplies the value "P" in the PLL frequency calculations.	0
		Note: For details on selecting the right value for PSEL see <u>Section</u> 6–9.9 "PLL frequency calculation" on page 73.	
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 6: LPC21xx/22xx System control

9.4 PLL Status register (PLLSTAT - 0xE01F C088)

The read-only PLLSTAT register provides the actual PLL parameters that are in effect at the time it is read, as well as the PLL status. PLLSTAT may disagree with values found in PLLCON and PLLCFG because changes to those registers do not take effect until a proper PLL feed has occurred (see Section 6-9.7 "PLL Feed register (PLLFEED - OxE01F C08C)").

Table 66. PLL Status register (PLLSTAT - address 0xE01F C088) bit description

Bit	Symbol	Description	Reset value
4:0	MSEL	Read-back for the PLL Multiplier value. This is the value currently used by the PLL.	0
6:5	PSEL	Read-back for the PLL Divider value. This is the value currently used by the PLL.	0
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	PLLE	Read-back for the PLL Enable bit. When one, the PLL is currently activated. When zero, the PLL is turned off. This bit is automatically cleared when Power-down mode is activated.	0
9	PLLC	Read-back for the PLL Connect bit. When PLLC and PLLE are both one, the PLL is connected as the clock source for the microcontroller. When either PLLC or PLLE is zero, the PLL is bypassed and the oscillator clock is used directly by the microcontroller. This bit is automatically cleared when Power-down mode is activated.	0
10	PLOCK	Reflects the PLL Lock status. When zero, the PLL is not locked. When one, the PLL is locked onto the requested frequency.	0
15:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

9.5 PLL Interrupt

The PLOCK bit in the PLLSTAT register is connected to the interrupt controller. This allows for software to turn on the PLL and continue with other functions without having to wait for the PLL to achieve lock. When the interrupt occurs (PLOCK = 1), the PLL may be connected, and the interrupt disabled. For details on how to enable and disable the PLL interrupt, see Section 5–5.4 "Interrupt Enable Register (VICIntEnable - 0xFFFF F010)" on page 46 and Section 5–5.5 "Interrupt Enable Clear Register (VICIntEnClear - 0xFFFF F014)" on page 47.

9.6 PLL Modes

The combinations of PLLE and PLLC are shown in Table 6-67.

Chapter 6: LPC21xx/22xx System control

Table 67. PLL Control bit combinations

PLLC	PLLE	PLL Function
0	0	PLL is turned off and disconnected. The CCLK equals (system runs from) the unmodified clock input.
0	1	The PLL is active, but not yet connected. The PLL can be connected after PLOCK is asserted.
1	0	Same as 00 combination. This prevents the possibility of the PLL being connected without also being enabled.
1	1	The PLL is active and has been connected as the system clock source. CCLK/system clock equals the PLL output.

9.7 PLL Feed register (PLLFEED - 0xE01F C08C)

A correct feed sequence must be written to the PLLFEED register in order for changes to the PLLCON and PLLCFG registers to take effect. The feed sequence is:

- 1. Write the value 0xAA to PLLFEED.
- 2. Write the value 0x55 to PLLFEED.

The two writes must be in the correct sequence, and must be consecutive APB bus cycles. The latter requirement implies that interrupts must be disabled for the duration of the PLL feed operation. If either of the feed values is incorrect, or one of the previously mentioned conditions is not met, any changes to the PLLCON or PLLCFG register will not become effective.

Table 68. PLL Feed register (PLLFEED - address 0xE01F C08C) bit description

Bit	Symbol	Description	Reset value
7:0	PLLFEED	The PLL feed sequence must be written to this register in order for PLL configuration and control register changes to take effect.	0x00

9.8 PLL and Power-down mode

Power-down mode automatically turns off and disconnects activated PLL. Wakeup from Power-down mode does not automatically restore the PLL settings, this must be done in software. Typically, a routine to activate the PLL, wait for lock, and then connect the PLL can be called at the beginning of any interrupt service routine that might be called due to the wakeup. It is important not to attempt to restart the PLL by simply feeding it when execution resumes after a wakeup from Power-down mode. This would enable and connect the PLL at the same time, before PLL lock is established.

9.9 PLL frequency calculation

The PLL equations use the following parameters:

Table 69. Elements determining PLL's frequency

Element	Description
Fosc	the frequency from the crystal oscillator/external oscillator
F _{CCO}	the frequency of the PLL current controlled oscillator

Chapter 6: LPC21xx/22xx System control

Table 69. Elements determining PLL's frequency

Element	Description
CCLK	the PLL output frequency (also the processor clock frequency)
M	PLL Multiplier value from the MSEL bits in the PLLCFG register
Р	PLL Divider value from the PSEL bits in the PLLCFG register

The PLL output frequency (when the PLL is both active and connected) is given by:

CCLK =
$$M \times F_{OSC}$$
 or CCLK = $F_{CCO} / (2 \times P)$

The CCO frequency can be computed as:

$$F_{CCO} = CCLK \times 2 \times P$$
 or $F_{CCO} = F_{OSC} \times M \times 2 \times P$

The PLL inputs and settings must meet the following:

- F_{OSC} is in the range of 10 MHz to 25 MHz.
- CCLK is in the range of 10 MHz to F_{max} (the maximum allowed frequency for the microcontroller - determined by the system microcontroller is embedded in).
- F_{CCO} is in the range of 156 MHz to 320 MHz.

9.10 Procedure for determining PLL settings

If a particular application uses the PLL, its configuration may be determined as follows:

- 1. Choose the desired processor operating frequency (CCLK). This may be based on processor throughput requirements, need to support a specific set of UART baud rates, etc. Bear in mind that peripheral devices may be running from a lower clock than the processor (see Section 6–12 "APB divider" on page 80).
- Choose an oscillator frequency (F_{OSC}). CCLK must be the whole (non-fractional) multiple of F_{OSC}.
- 3. Calculate the value of M to configure the MSEL bits. $M = CCLK / F_{OSC}$. M must be in the range of 1 to 32. The value written to the MSEL bits in PLLCFG is M-1 (see Table 6–71.
- 4. Find a value for P to configure the PSEL bits, such that F_{CCO} is within its defined frequency limits. F_{CCO} is calculated using the equation given above. P must have one of the values 1, 2, 4, or 8. The value written to the PSEL bits in PLLCFG is 00 for P = 1; 01 for P = 2; 10 for P = 4; 11 for P = 8 (see Table 6–70).

Table 70. PLL Divider values

PSEL Bits (PLLCFG bits [6:5])	Value of P
00	1
01	2
10	4
11	8

Chapter 6: LPC21xx/22xx System control

Table 71. PLL Multiplier values

MSEL Bits (PLLCFG bits [4:0])	Value of M
00000	1
00001	2
00010	3
00011	4
11110	31
11111	32

9.11 PLL configuring examples

Example: System design asks for F_{OSC}= 10 MHz and requires CCLK = 60 MHz.

Based on these specifications, M = CCLK / Fosc = 60 MHz / 10 MHz = 6. Consequently, M - 1 = 5 will be written as PLLCFG[4:0].

Value for P can be derived from P = F_{CCO} / (CCLK x 2), using condition that F_{CCO} must be in range of 156 MHz to 320 MHz. Assuming the lowest allowed frequency for F_{CCO} = 156 MHz, P = 156 MHz / (2 x 60 MHz) = 1.3. The highest F_{CCO} frequency criteria produces P = 2.67. The only solution for P that satisfies both of these requirements and is listed in Table 6–70 is P = 2. Therefore, PLLCFG[6:5] = 1 will be used.

10. Power control

The LPC21xx/LPC22xx supports two reduced power modes: Idle mode and Power-down mode. In Idle mode, execution of instructions is suspended until either a reset or interrupt occurs. Peripheral functions continue operation during Idle mode and may generate interrupts to cause the processor to resume execution. Idle mode eliminates power used by the processor itself, memory systems and related controllers, and internal buses.

In Power-down mode, the oscillator is shut down and the chip receives no internal clocks. The processor state and registers, peripheral registers, and internal SRAM values are preserved throughout Power-down mode and the logic levels of chip pins remain static. The Power-down mode can be terminated and normal operation resumed by either a reset or certain specific interrupts that are able to function without clocks. Since all dynamic operation of the chip is suspended, Power-down mode reduces chip power consumption to nearly zero.

Entry to Power-down and Idle modes must be coordinated with program execution. Wakeup from Power-down or Idle modes via an interrupt resumes program execution in such a way that no instructions are lost, incomplete, or repeated. Wake up from Power-down mode is discussed further in Section 6–13 "Wakeup timer" on page 82.

A Power Control for Peripherals feature allows individual peripherals to be turned off if they are not needed in the application, resulting in additional power savings.

10.1 Register description

The Power Control function contains two registers, as shown in <u>Table 6–72</u>. More detailed descriptions follow.

Chapter 6: LPC21xx/22xx System control

Table 72. Power control registers

Name	Description	Access	Reset value ^[1]	Address
PCON	Power Control Register. This register contains control bits that enable the two reduced power operating modes of the microcontroller. See <u>Table 6–73</u> .	R/W	0x00	0xE01F C0C0
PCONP	Power Control for Peripherals Register. This register contains control bits that enable and disable individual peripheral functions, Allowing elimination of power consumption by peripherals that are not needed.	R/W	0x0000 1FBE	0xE01F C0C4

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

10.2 Power Control register (PCON - 0xE01F COCO)

The PCON register contains two bits. Writing a one to the corresponding bit causes entry to either the Power-down or Idle mode. If both bits are set, Power-down mode is entered.

Table 73. Power Control register (PCON - address 0xE01F COCO) bit description

Bit	Symbol	Description	Reset value
0	IDL	Idle mode - when 1, this bit causes the processor clock to be stopped, while on-chip peripherals remain active. Any enabled interrupt from a peripheral or an external interrupt source will cause the processor to resume execution.	0
1	PD	Power-down mode - when 1, this bit causes the oscillator and all on-chip clocks to be stopped. A wakeup condition from an external interrupt can cause the oscillator to restart, the PD bit to be cleared, and the processor to resume execution.	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

10.3 Power Control for Peripherals register (PCONP - 0xE01F COC4)

The PCONP register allows turning off selected peripheral functions for the purpose of saving power. This is accomplished by gating off the clock source to the specified peripheral blocks. A few peripheral functions cannot be turned off (i.e. the Watchdog timer, GPIO, the Pin Connect block, and the System Control block). Some peripherals, particularly those that include analog functions, may consume power that is not clock dependent. These peripherals may contain a separate disable control that turns off additional circuitry to reduce power. Each bit in PCONP controls one of the peripherals. The bit numbers correspond to the related peripheral number as shown in the APB peripheral map Table 2–18 "APB peripheries and base addresses".

If a peripheral control bit is 1, that peripheral is enabled. If a peripheral bit is 0, that peripheral is disabled to conserve power. For example, if bit 7 is 1, the I²C interface is enabled. If bit 7 is 0, the I²C1 interface is disabled.

Important: valid read from a peripheral register and valid write to a peripheral register is possible only if that peripheral is enabled in the PCONP register!

Chapter 6: LPC21xx/22xx System control

Table 74. Power Control for Peripherals register (PCONP - address 0xE01F C0C4) bit description

Bit	Symbol	Description	Reset value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	
1	PCTIM0	Timer/Counter 0 power/clock control bit.	1
2	PCTIM1	Timer/Counter 1 power/clock control bit.	1
3	PCUART0	UART0 power/clock control bit.	1
4	PCUART1	UART1 power/clock control bit.	1
5	PCPWM0	PWM0 power/clock control bit.	1
6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	PCI2C	The I ² C interface power/clock control bit.	1
8	PCSPI0	The SPI0 interface power/clock control bit.	1
9	PCRTC	The RTC power/clock control bit.	1
10	PCSPI1	The SPI1 interface power/clock control bit.	1
11	PCEMC	The EMC power/clock control bit.	1
12	PCAD	A/D Converter (ADC) power/clock control bit.	1
		Note: Clear the PDN bit in the ADCR before clearing this bit, and set this bit before setting PDN.	
13	PCCAN1	CAN1 controller bit.	1
14	PCCAN2	CAN2 controller bit.	1
15	PCCAN3	CAN3 controller bit.	1
16	PCCAN4	CAN4 controller bit.	1
22:17	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
23	PCSSP	The SSP interface power/clock control bit	0
		Remark: Setting this bit to 1 and bit 10 (PSPI1) to 0, selects the SPI1 interface as SSP interface. At reset, SPI1 is enabled. See Section 14–3 on page 219.	
31:24	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

10.4 Power control usage notes

After every reset, the PCONP register contains the value that enables all interfaces and peripherals controlled by the PCONP. Therefore, apart from proper configuring via peripheral dedicated registers, the user's application has no need to access the PCONP in order to start using any of the on-board peripherals.

Power saving oriented systems should have 1s in the PCONP register only in positions that match peripherals really used in the application. All other bits, declared to be "Reserved" or dedicated to the peripherals not used in the current application, must be cleared to 0.

Chapter 6: LPC21xx/22xx System control


11. Reset

Reset has two sources on the LPC21xx/LPC22xx: the RESET pin and Watchdog reset. The RESET pin is a Schmitt trigger input pin with an additional glitch filter. Assertion of chip reset by any source starts the wakeup timer (see description in Section 6–13 "Wakeup timer" in this chapter), causing reset to remain asserted until the external reset is de-asserted, the oscillator is running, a fixed number of clocks have passed, and the on-chip circuitry has completed its initialization. The relationship between reset, the oscillator, and the wakeup timer during the startup sequence are shown in Figure 6–18. See Figure 6–19 for a block diagram of the Reset logic.

The reset glitch filter allows the processor to ignore external reset pulses that are very short, and also determines the minimum duration of RESET that must be asserted in order to guarantee a chip reset. Once asserted, RESET pin can be deasserted only when crystal oscillator is fully running and an adequate signal is present on the XTAL1 pin of the microcontroller. Assuming that an external crystal is used in the crystal oscillator subsystem, after power on, the RESET pin should be asserted for 10 ms. For all subsequent resets, when the crystal oscillator is already running and a stable signal is on the XTAL1 pin, the RESET pin needs to be asserted for 300 ns only.

When the internal reset is removed, the processor begins executing at address 0, which is initially the reset vector mapped from the Boot Block. At that point, all of the processor and peripheral registers have been initialized to predetermined values.


Chapter 6: LPC21xx/22xx System control

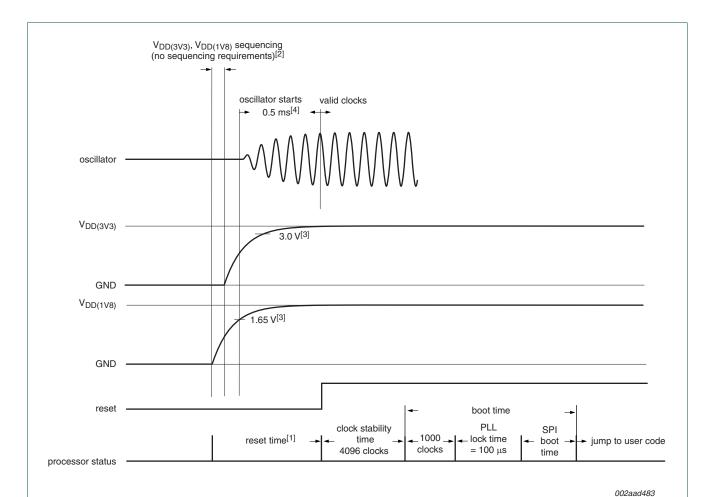

- (1) Reset time: The time reset needs to be held LOW. This time depends on system parameters such as V_{DD(1V8)}, V_{3V3} risetime, and the oscillator startup time. There are no restrictions from the microcontroller except that V_{DD(1V8)}, V_{3V3}, and the oscillator must be within the specific operating range.
- (2) There are no sequencing requirements for V_{3V3} and $V_{DD(1V8)}$.
- (3) When V_{3V3} and $V_{DD(1V8)}$ reach the minimum voltage, a reset is registered within two valid oscillator clocks.
- (4) Typical startup time is 0.5 ms for a 12 mHz crystal.

Fig 18. Startup sequence diagram

Chapter 6: LPC21xx/22xx System control

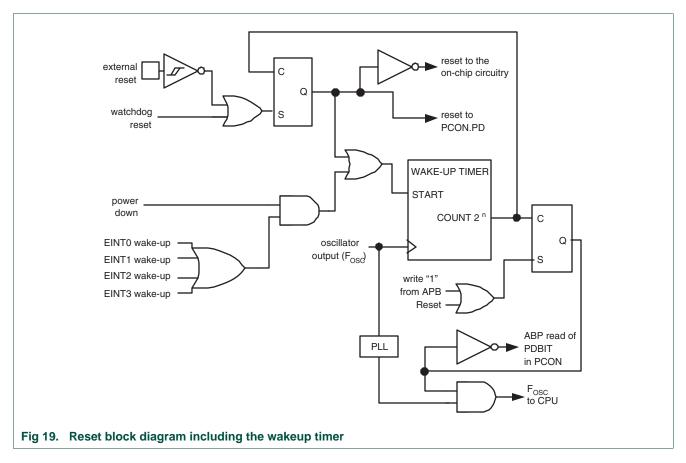

External and internal resets have some small differences. An external reset causes the value of certain pins to be latched to configure the part. External circuitry cannot determine when an internal reset occurs in order to allow setting up those special pins, so those latches are not reloaded during an internal reset. Pins that are examined during an external reset for various purposes are: P1.20/TRACESYNC, P1.26/RTCK (see Section 7–2, Section 7–3, and Section 8–6. Pin P0.14 (see Section 21–5) is examined by on-chip bootloader when this code is executed after every reset.

12. APB divider

The APB Divider determines the relationship between the processor clock (CCLK) and the clock used by peripheral devices (PCLK). The APB Divider serves two purposes.

- 1. The first purpose is to provide peripherals with desired PCLK via APB bus so that they can operate at the speed chosen for the ARM processor. In order to achieve this, the APB bus may be slowed down to one half or one fourth of the processor clock rate. Because the APB bus must work properly at power up (and its timing cannot be altered if it does not work since the APB divider control registers reside on the APB bus), the default condition at reset is for the APB bus to run at one quarter speed.
- 2. The second purpose of the APB Divider is to allow power savings when an application does not require any peripherals to run at the full processor rate.

Chapter 6: LPC21xx/22xx System control

The connection of the APB Divider relative to the oscillator and the processor clock is shown in <u>Figure 6–20</u>. Because the APB Divider is connected to the PLL output, the PLL remains active (if it was running) during Idle mode.

12.1 Register description

Only one register is used to control the APB Divider.

Table 75. APB divider register map

Name	Description	Access	Reset value[1]	Address
APBDIV	Controls the rate of the APB clock in relation to the processor clock.	R/W	0x00	0xE01F C100

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.


12.2 APB divider register (APBDIV - 0xE01F C100)

The APB Divider register contains two bits, allowing three divider values, as shown in Table 6–76.

Table 76. APB Divider register (APBDIV - address 0xE01F C100) bit description

Bit	Symbol	Value	Description	Reset value
1:0	APBDIV	00	APB bus clock is one fourth of the processor clock.	00
		01	APB bus clock is the same as the processor clock.	
		10	APB bus clock is one half of the processor clock.	
		11	Reserved. If this value is written to the APBDIV register, it has no effect (the previous setting is retained).	
3:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
5:4	XCLKDIV		On the LPC22xx devices only, these bits control the clock that can be driven onto the P3.23/A23/XCLK pin. They have the same encoding as the APBDIV bits above. Bits 13 and 27:25 in the PINSEL2 register (Section 8–6.4) controls whether the pin carries A23 or the clock selected by this field.	00
			Remark:	
			If this field and APBDIV have the same value, the same clock is used on the APB and XCLK. (This might be useful for external logic dealing with the APB peripherals).	
		00	XCLK clock is one fourth of the processor clock.	
		01	XCLK clock is the same as the processor clock.	
		10	XCLK clock is one half of the processor clock.	
		11	Reserved. If this value is written to the APBDIV register, it has no effect (the previous setting is retained).	
7:6	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 6: LPC21xx/22xx System control

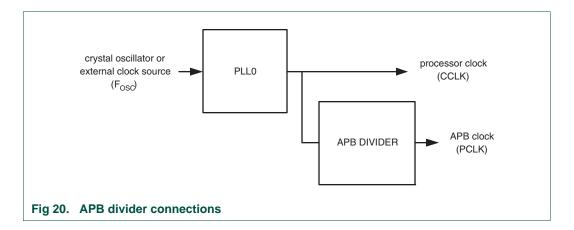

13. Wakeup timer

On the LPC21xx/LPC22xx, the wakeup timer enforces a minimum reset duration based on the crystal oscillator and is activated whenever there is a wakeup from Power-down mode or any type of reset.

The purpose of the wakeup timer is to ensure that the oscillator and other analog functions required for chip operation are fully functional before the processor is allowed to execute instructions. This is important at power on, all types of reset, and whenever any of the aforementioned functions are turned off for any reason. Since the oscillator and other functions are turned off during Power-down mode, any wakeup of the processor from Power-down mode makes use of the wakeup timer.

The wakeup timer monitors the crystal oscillator to check whether it is safe to begin code execution. When power is applied to the chip, or some event caused the chip to exit Power-down mode, some time is required for the oscillator to produce a signal of sufficient amplitude to drive the clock logic. The amount of time depends on many factors, including the rate of V_{DD} ramp (in the case of power on), the type of crystal and its electrical characteristics (if a quartz crystal is used) as well as any other external circuitry (e.g. capacitors), and the characteristics of the oscillator itself under the existing ambient conditions.

Once a clock is detected, the wakeup timer counts 4096 clocks and then enables the flash memory to initialize. When the flash memory initialization is complete, the processor is released to execute instructions if the external reset has been deasserted. If an external clock source is used in the system (as opposed to a crystal connected to the oscillator pins), the possibility that there could be little or no delay for oscillator start-up must be considered. The wakeup timer design then ensures that any other required chip functions will be operational prior to the beginning of program execution.

Any of the various resets can bring the microcontroller out of power-down mode, as can the external interrupts EINT3:0. When one of these interrupts is enabled for wakeup and its selected event occurs, an oscillator wakeup cycle is started. The actual interrupt (if any) occurs after the wakeup timer expires and is handled by the Vectored Interrupt Controller.

Chapter 6: LPC21xx/22xx System control

The pin multiplexing on the LPC21xx/LPC22xx (see Section 7–2, Section 7–3, and Section 8–6) allows peripherals that share pins with external interrupts to, in effect, bring the device out of Power-down mode. The following pin-function pairings allow interrupts from events relating to UART0 or 1, SPI 0 or 1, or the I²C: RXD0 / EINT0, SDA / EINT1, SSEL0 / EINT2, RXD1 / EINT3, DCD1 / EINT1, RI1 / EINT2, SSEL1 / EINT3.

To put the device in Power-down mode and allow activity on one or more of these buses or lines to power it back up, software should reprogram the pin function to External Interrupt, select the appropriate mode and polarity for the Interrupt, and then select Power-down mode. Upon wakeup software should restore the pin multiplexing to the peripheral function.

14. Code security vs. debugging

Applications in development typically need the debugging and tracing facilities in the LPC21xx/LPC22xx. Later in the life cycle of an application, it may be more important to protect the application code from observation by hostile or competitive eyes. The Code Read Protection feature of the LPC21xx/LPC22xx allows an application to control whether it can be debugged or protected from observation.

Details on the way Code Read Protection works can be found in <u>Section 21–8 "Code</u> Read Protection (CRP)".

UM10114

Chapter 7: LPC21xx/22xx Pin configuration

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The pin configurations are identical for all 64-pin packages and all 144-pin packages with the exception of the CAN pins which depend on the CAN configuration for each part, see <u>Table 7–77</u> and <u>Table 7–78</u>. Pin configurations are identical for no-suffix, /00, and /01 versions.

Table 77. LPC21xx part-specific pin configurations 64-pin packages

			•	
	LPC209, LPC2109/01	LPC2119, LPC2119/01 LPC2129, LPC2129/01	LPC2114, LPC2114/01 LPC2124, LPC2124/01	LPC2194, LPC2194/01
Pin number Table 7–79				
1	P0[21]/PWM5/CAP1[3]	P0[21]/PWM5/CAP1[3]	P0[21]/PWM5/CAP1[3]	P0[21]/PWM5/RD3/CAP1[3]
2	P0[22]/CAP0[0]/MAT0[0]	P0[22]/CAP0[0]/MAT0[0]	P0[22]/CAP0[0]/MAT0[0]	P0[22]/TD3/CAP0[0]/MAT0[0]
3	P0[23]	P0[23]/RD2	P0[23]	P0[23]/RD2
5	P0[24]	P0[24]/TD2	P0[24]	P0[24]/TD2
9	P0[25]/RD1	P0[25]/RD1	P0[25]	P0[25]/RD1
10	TD1	TD1	n.c.	TD1
38	P0[12]/DSR1/MAT1[0]	P0[12]/DSR1/MAT1[0]	P0[12]/DSR1/MAT1[0]	P0[12]/DSR1/MAT1[0]/RD4
39	P0[13]/DTR1/MAT1[1]	P0[13]/DTR1/MAT1[1]	P0[13]/DTR1/MAT1[1]	P0[13]/DTR1/MAT1[1]/TD4

Table 78. LPC22xx part-specific pin configurations 144-pin packages

		LPC2210, LPC2210/01 LPC2220 LPC2212, LPC2212/01 LPC2214, LPC2214/01	LPC2290, LPC2290/01 LPC2292, LPC2292/01	LPC2294, LPC2294/01
Pin number				
LQFP144 Table 7-81	TFBGA144 Table 7–80			
4	C1	P0[21]/PWM5/CAP1[3]	P0[21]/PWM5/CAP1[3]	P0[21]/PWM5/RD3/CAP1[13]
5	D4	P0[22]/CAP0[0]/MAT0[0]	P0[22]/CAP0[0]/MAT0[0]	P0[22]/TD3/CAP0[0]/MAT0[0
6	D3	P0[23]	P0[23]/RD2	P0[23]/RD2
8	D1	P0[24]	P0[24]/TD2	P0[24]/TD2
21	H1	P0[25]	P0[25]/RD1	P0[25]/RD1
22	H2	n.c.	TD1	TD1
84	J13	P0[12]/DSR1/MAT1[0]	P0[12]/DSR1/MAT1[0]	P0[12]/DSR1/MAT1[0]/RD4
85	H10	P0[13]/DTR1/MAT1[1]	P0[13]/DTR1/MAT1[1]	P0[13]/DTR1/MAT1[1]/TD4

The SPI1 pins are shared with the SSP pins if the SSP interface is implemented. The following parts have an SSP interface:

- LPC2109/01, LPC2119/01, LPC2129/01
- LPC2114/01, LPC2124/01

Chapter 7: LPC21xx/22xx Pin configuration

- LPC2194/01
- LPC2210/01, LPC2220
- LPC2212/01, LPC2214/01
- LPC2290/01
- LPC2292/01, LPC2294/01

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Pin configuration for 64-pin packages

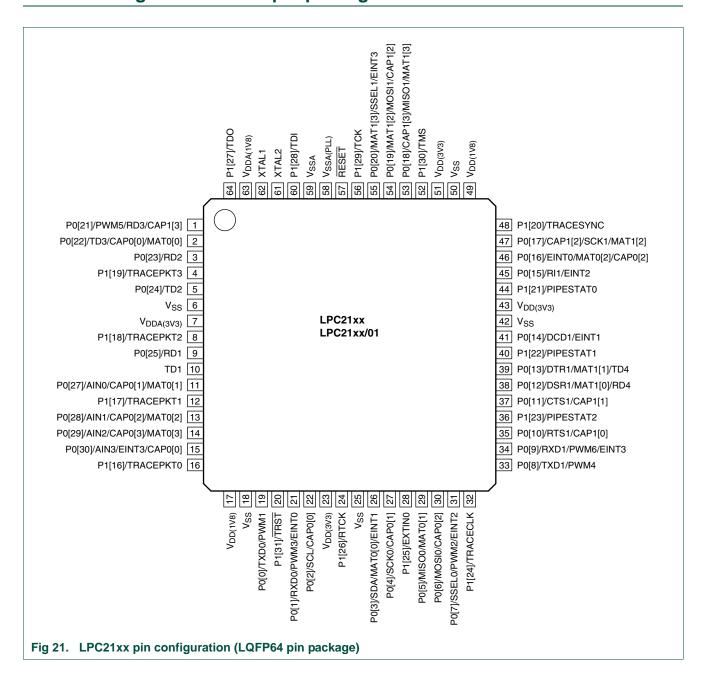


Table 79. LPC21xx Pin description (64-pin packages)

Symbol	Pin	Type	Description
P0[0] to P0[31]		I/O	Port 0 is a 32-bit bidirectional I/O port with individual direction controls for each bit. The operation of port 0 pins depends upon the pin function selected via the Pin Connect Block. Pins 26 and 31 of port 0 are not available.
P0[0]/TXD0/ PWM1	19 <mark>1</mark> 1	0	TXD0 — Transmitter output for UART0.
PVVIVII	/VIVI I		PWM1 — Pulse Width Modulator output 1.
P0[1]/RXD0/ PWM3/EINT0	21[2]	I	RXD0 — Receiver input for UART0.
PVVIVI3/EIINTU		0	PWM3 — Pulse Width Modulator output 3.
		I	EINT0 — External interrupt 0 input.
P0[2]/SCL/	22[3]	I/O	SCL — I ² C-bus clock input/output. Open-drain output (for I ² C-bus compliance).
CAPU[U]	CAP0[0]		CAP0[0] — Capture input for Timer 0, channel 0.
P0[3]/SDA/	26 <mark>[3]</mark>	I/O	SDA — I ² C-bus data input/output. Open-drain output (for I ² C-bus compliance).
MAT0[0]/EINT1	ΙΟ[Ο]/ΕΠΝΤΙ		MAT0[0] — Match output for Timer 0, channel 0.
		I	EINT1 — External interrupt 1 input.
P0[4]/SCK0/			SCK0 — Serial clock for SPI0. SPI clock output from master or input to slave.
CAP0[1]		I	CAP0[1] — Capture input for Timer 0, channel 1.
P0[5]/MISO0/ MAT0[1]			MISO0 — Master In Slave Out for SPI0. Data input to SPI master or data output from SPI slave.
		0	MAT0[1] — Match output for Timer 0, channel 1.
P0[6]/MOSI0/ CAP0[2]	30[1]	I/O	MOSI0 — Master Out Slave In for SPI0. Data output from SPI master or data input to SPI slave.
		I	CAP0[2] — Capture input for Timer 0, channel 2.
P0[7]/SSEL0/	31 <mark>2</mark>	I	SSEL0 — Slave Select for SPI0. Selects the SPI interface as a slave.
PWM2/EINT2		0	PWM2 — Pulse Width Modulator output 2.
		I	EINT2 — External interrupt 2 input.
P0[8]/TXD1/	33 <u>[1]</u>	0	TXD1 — Transmitter output for UART1.
PWM4		0	PWM4 — Pulse Width Modulator output 4.
P0[9]/RXD1/	34 <mark>[2]</mark>	I	RXD1 — Receiver input for UART1.
PWM6/EINT3		0	PWM6 — Pulse Width Modulator output 6.
		I	EINT3 — External interrupt 3 input.
P0[10]/RTS1/	35 <mark>[1]</mark>	0	RTS1 — Request to Send output for UART1.
CAP1[0]		I	CAP1[0] — Capture input for Timer 1, channel 0.
P0[11]/CTS1/	37[1]	I	CTS1 — Clear to Send input for UART1.
CAP1[1]		I	CAP1[1] — Capture input for Timer 1, channel 1.

Table 79. LPC21xx Pin description (64-pin packages) ...continued

Symbol	Pin		Description
P0[12]/DSR1/	38[1]	I	DSR1 — Data Set Ready input for UART1.
MAT1[0]/RD4		0	MAT1[0] — Match output for Timer 1, channel 0.
		0	RD4 — CAN4 receiver input.
P0[13]/DTR1/	39 <u>[1]</u>	0	DTR1 — Data Terminal Ready output for UART1.
MAT1[1]/TD4		0	MAT1[1] — Match output for Timer 1, channel 1.
		0	TD4 — CAN4 transmitter output.
P0[14]/DCD1/ EINT1	412	I	DCD1 — Data Carrier Detect input for UART1.
LIIVI		I	EINT1 — External interrupt 1 input.
			Note: LOW on this pin while $\overline{\text{RESET}}$ is LOW forces on-chip bootloader to take control of the part after reset.
P0[15]/RI1/EINT2	P0[15]/RI1/EINT2 45[2]		RI1 — Ring Indicator input for UART1.
			EINT2 — External interrupt 2 input.
P0[16]/EINT0/ MAT0[2]/CAP0[2]	46 <mark>[2]</mark>	I	EINT0 — External interrupt 0 input.
MATU[2]/CAPU[2]		0	MAT0[2] — Match output for Timer 0, channel 2.
		I	CAP0[2] — Capture input for Timer 0, channel 2.
P0[17]/CAP1[2]/ SCK1/MAT1[2]	47 <u>[1]</u>	I	CAP1[2] — Capture input for Timer 1, channel 2.
SCR1/MAT [[2]		I/O	SCK1 — Serial Clock for SPI1/SSP. SPI clock output from master or input to slave.
		0	MAT1[2] — Match output for Timer 1, channel 2.
P0[18]/CAP1[3]/ MISO1/MAT1[3]	53 <u>[1]</u>	I	CAP1[3] — Capture input for Timer 1, channel 3.
WIGO I/WIAT TO		I/O	MISO1 — Master In Slave Out for SPI1/SSP. Data input to SPI master or data output from SPI slave.
		0	MAT1[3] — Match output for Timer 1, channel 3.
P0[19]/MAT1[2]/ MOSI1/CAP1[2]	54 <mark>[1]</mark>	0	MAT1[2] — Match output for Timer 1, channel 2.
WOSH/CAF I[2]		I/O	MOSI1 — Master Out Slave In for SPI1/SSP. Data output from SPI master or data input to SPI slave.
		I	CAP1[2] — Capture input for Timer 1, channel 2.
P0[20]/MAT1[3]/ SSEL1/EINT3	55 <mark>[2]</mark>	0	MAT1[3] — Match output for Timer 1, channel 3.
SSEL I/EINTS		I	SSEL1 — Slave Select for SPI1/SSP. Selects the SPI interface as a slave.
		I	EINT3 — External interrupt 3 input.
P0[21]/PWM5/ RD3/CAP1[3]	1[1]	0	PWM5 — Pulse Width Modulator output 5.
NDO/OAL I[0]		I	RD3 — CAN3 receiver input.
		I	CAP1[3] — Capture input for Timer 1, channel 3.

Table 79. LPC21xx Pin description (64-pin packages) ...continued

Symbol	Pin	Type	Description
P0[22]/TD3/	2[1]	0	TD3 — CAN3 transmitter output.
CAP0[0]/MAT0[0]		I	CAP0[0] — Capture input for Timer 0, channel 0.
		0	MAT0[0] — Match output for Timer 0, channel 0.
P0[23]/RD2	3[1]	I	CAN2 receiver input.
P0[24]/TD2	5 <u>[1]</u>	0	CAN2 transmitter output.
P0[25]/RD1	9[1]	0	CAN1 receiver input.
P0[27]/AIN0/ CAP0[1]/MAT0[1]	11[4]	I	AIN0 — A/D converter, input 0. This analog input is always connected to its pin.
o,		I	CAP0[1] — Capture input for Timer 0, channel 1.
		0	MAT0[1] — Match output for Timer 0, channel 1.
P0[28]/AIN1/ CAP0[2]/MAT0[2]			AIN1 — A/D converter, input 1. This analog input is always connected to its pin.
0/11 0[2]/W/11 0[2]		I	CAP0[2] — Capture input for Timer 0, channel 2.
		0	MAT0[2] — Match output for Timer 0, channel 2.
P0[29]/AIN2/	14 ^[4]	I	AIN2 — A/D converter, input 2. This analog input is always connected to its pin.
CAP0[3]/MAT0[3]			CAP0[3] — Capture input for Timer 0, Channel 3.
		0	MAT0[3] — Match output for Timer 0, channel 3.
P0[30]/AIN3/ 15 ^[4] EINT3/CAP0[0]		I	AIN3 — A/D converter, input 3. This analog input is always connected to its pin.
EINTS/CAPO[0]		I	EINT3 — External interrupt 3 input.
		I	CAP0[0] — Capture input for Timer 0, channel 0.
P1[0] to P1[31]		I/O	Port 1 is a 32-bit bidirectional I/O port with individual direction controls for each bit. The operation of port 1 pins depends upon the pin function selected via the Pin Connect Block. Pins 0 through 15 of port 1 are not available.
P1[16]/ TRACEPKT0	16 ^[5]	0	Trace Packet, bit 0. Standard I/O port with internal pull-up.
P1[17]/ TRACEPKT1	12 ⁵	0	Trace Packet, bit 1. Standard I/O port with internal pull-up.
P1[18]/ TRACEPKT2	8 <u>[5]</u>	0	Trace Packet, bit 2. Standard I/O port with internal pull-up.
P1[19]/ TRACEPKT3	4[5]	0	Trace Packet, bit 3. Standard I/O port with internal pull-up.
P1[20]/ TRACESYNC	48 <u>[5]</u>	0	Trace Synchronization. Standard I/O port with internal pull-up. Note: LOW on this pin while RESET is LOW, enables pins P1[25:16] to operate as Trace port after reset.
P1[21]/ PIPESTAT0	44[5]	0	Pipeline Status, bit 0. Standard I/O port with internal pull-up.
P1[22]/ PIPESTAT1	40[5]	0	Pipeline Status, bit 1. Standard I/O port with internal pull-up.
P1[23]/ PIPESTAT2	36 ^[5]	0	Pipeline Status, bit 2. Standard I/O port with internal pull-up.
P1[24]/ TRACECLK	32[5]	0	Trace Clock. Standard I/O port with internal pull-up.

Table 79. LPC21xx Pin description (64-pin packages) ... continued

Symbol	Pin	Туре	Description
P1[25]/EXTIN0	28[5]	1	External Trigger Input. Standard I/O with internal pull-up.
P1[26]/RTCK	24[5]	I/O	Returned Test Clock output. Extra signal added to the JTAG port. Assists debugger synchronization when processor frequency varies. Bidirectional pin with internal pull-up. Note: LOW on this pin while RESET is LOW, enables pins P1[31:26] to operate as Debug port after reset.
P1[27]/TDO	64 <u>[5]</u>	0	Test Data out for JTAG interface.
P1[28]/TDI	60[5]	ī	Test Data in for JTAG interface.
		•	
P1[29]/TCK	56 ^[5]	I	Test Clock for JTAG interface. This clock must be slower than $\frac{1}{6}$ of the CPU clock (CCLK) for the JTAG interface to operate.
P1[30]/TMS	52 <mark>5</mark>	I	Test Mode Select for JTAG interface.
P1[31]/TRST	20[5]	I	Test Reset for JTAG interface.
TD1	10	0	CAN1 transmitter output.
RESET	57	I	external reset input; a LOW on this pin resets the device, causing I/O ports and peripherals to take on their default states, and processor execution to begin at address 0. TTL with hysteresis, 5 V tolerant.
XTAL1	62	I	input to the oscillator circuit and internal clock generator circuits.
XTAL2	61	0	output from the oscillator amplifier.
V _{SS}	6, 18, 25, 42, 50	I	ground: 0 V reference.
V _{SSA}	59	I	analog ground; 0 V reference. This should nominally be the same voltage as $V_{\rm SS}$, but should be isolated to minimize noise and error.
V _{SSA(PLL)}	58	I	PLL analog ground; 0 V reference. This should nominally be the same voltage as $V_{\rm SS}$, but should be isolated to minimize noise and error.
V _{DD(1V8)}	17, 49	I	1.8 V core power supply; this is the power supply voltage for internal circuitry.
V _{DDA(1V8)}	63	I	analog 1.8 V core power supply; this is the power supply voltage for internal circuitry. This should be nominally the same voltage as $V_{DD(1V8)}$ but should be isolated to minimize noise and error.
V _{DD(3V3)}	23, 43, 51	I	3.3 V pad power supply; this is the power supply voltage for the I/O ports.
V _{DDA(3V3)}	7	I	analog 3.3 V pad power supply; this should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. The level on this pin also provides the voltage reference level for the ADC.

- [1] 5 V tolerant pad providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control.
- [2] 5 V tolerant pad providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control. If configured for an input function, this pad utilizes built-in glitch filter that blocks pulses shorter than 3 ns.
- [3] Open drain 5 V tolerant digital I/O I²C-bus 400 kHz specification compatible pad. It requires external pull-up to provide an output functionality. Open-drain functionality applies to all output functions on this pin.
- [4] 5 V tolerant pad providing digital I/O (with TTL levels and hysteresis and 10 ns slew rate control) and analog input function. If configured for a digital input function, this pad utilizes built-in glitch filter that blocks pulses shorter than 3 ns. When configured as an ADC input, digital section of the pad is disabled.
- [5] 5 V tolerant pad with built-in pull-up resistor providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control. The pull-up resistor's value ranges from $60 \text{ k}\Omega$ to $300 \text{ k}\Omega$.

Chapter 7: LPC21xx/22xx Pin configuration

3. Pin configuration for 144-pin packages


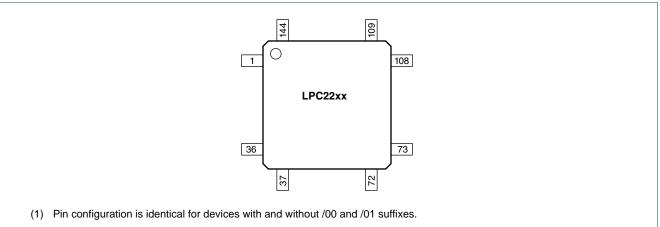


Fig 22. LQFP144 pinning

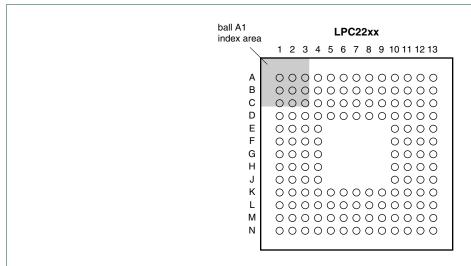

Transparent top view

(1) Pin configuration is identical for devices with and without /00 and /01 suffixes.

Fig 23. TFBGA144 pinning

Tab	e 80. LPC	22xx Ball al	location										
Tab Rov	v Column												
	1	2	3	4	5	6	7	8	9	10	11	12	13
Α	P2[22]/ D22	V _{DDA(1V8)}	P1[28]/ TDI	P2[21]/ D21	P2[18]/ D18	P2[14]/ D14	P1[29]/ TCK	P2[11]/ D11	P2[10]/ D10	P2[7]/D7	V _{DD(3V3)}	V _{DD(1V8)}	P2[4]/D4
В	$V_{DD(3V3)}$	P1[27]/ TDO	XTAL2	V _{SSA(PLL)}	P2[19]/ D19	P2[15]/ D15	P2[12]/ D12	P0[20]/ MAT1[3]/ SSEL1/ EINT3	V _{DD(3V3)}	P2[6]/D6	V _{SS}	P2[3]/D3	V _{SS}
С	P0[21]/ PWM5/ CAP1[3]	V _{SS}	XTAL1	V _{SSA}	RESET	P2[16]/ D16	P2[13]/ D13	P0[19]/ MAT1[2]/ MOSI1/ CAP1[2]	P2[9]/D9	P2[5]/D5	P2[2]/D2	P2[1]/D1	V _{DD(3V3)}
D	P0[24]/ TD2	P1[19]/ TRACE PKT3	P0[23]/ RD2	P0[22]/ CAP0[0]/ MAT0[0]	P2[20]/ D20	P2[17]/ D17	V _{SS}	P0[18]/ CAP1[3]/ MISO1/ MAT1[3]	P2[8]/D8	P1[30]/ TMS	V _{SS}	P1[20]/ TRACE SYNC	P0[17]/ CAP1[2]/ SCK1/ MAT1[2]
Е	P2[25]/ D25	P2[24]/ D24	P2[23]	V _{SS}						P0[16]/ EINT0/ MAT0[2]/ CAP0[2]	P0[15]/ RI1/ EINT2	P2[0]/D0	P3[30]/ BLS1
F	P2[27]/ D27/ BOOT1	P1[18]/ TRACE PKT2	V _{DDA(3V3)}	P2[26]/ D26/ BOOT0						P3[31]/ BLS0	P1[21]/ PIPE STAT0	V _{DD(3V3)}	V _{SS}
G	P2[29]/ D29	P2[28]/ D28	P2[30]/ D30/AIN4	P2[31]/ D31/AIN5						P0[14]/ DCD1/ EINT1	P1[0]/CS0	P3[0]/A0	P1[1]/OE
Н	P0[25]/ RD1	TD1	P0[27]/ AIN0/ CAP0[1]/ MAT0[1]	P1[17]/ TRACE PKT1						P0[13]/ DTR1/ MAT1[1]	P1[22]/ PIPE STAT1	P3[2]/A2	P3[1]/A1
J	P0[28]/ AIN1/ CAP0[2]/ MAT0[2]	V _{SS}	P3[29]/ BLS2/ AIN6	P3[28]/ BLS3/ AIN7						P3[3]/A3	P1[23]/ PIPE STAT2	P0[11]/ CTS1/ CAP1[1]	P0[12]/ DSR1/ MAT1[0]
NXP B.V. 2008. All rights re	P3[27]/ WE	P3[26]/ CS1	V _{DD(3V3)}	P3[22]/ A22	P3[20]/ A20	P0[1]/ RXD0/ PWM3/ EINT0	P3[14]/ A14	P1[25]/ EXTIN0	P3[11]/ A11	V _{DD(3V3)}	P0[10]/ RTS1/ CAP1[0]	V _{SS}	P3[4]/A4

Table 80. LPC22xx Ball allocationcontinue

Tab Ro	w Column												
ω	1	2	3	4	5	6	7	8	9	10	11	12	13
L	P0[29]/ AIN2/ CAP0[3]/ MAT0[3]	P0[30]/ AIN3/ EINT3/ CAP0[0]	P1[16]/ TRACE PKT0	P0[0]/ TXD0/ PWM1	P3[19]/ A19	P0[2]/ SCL/ CAP0[0]	P3[15]/ A15	P0[4]/ SCK0/ CAP0[1]	P3[12]/ A12	V _{SS}	P1[24]/ TRACE CLK	P0[8]/ TXD1/ PWM4	P0[9]/ RXD1/ PWM6/ EINT3
M	P3[25]/ CS2	P3[24]/ CS3	V _{DD(3V3)}	P1[31]/ TRST	P3[18]/ A18	V _{DD(3V3)}	P3[16]/ A16	P0[3]/ SDA/ MAT0[0]/ EINT1	P3[13]/ A13	P3[9]/A9	P0[7]/ SSEL0/ PWM2/ EINT2	P3[7]/A7	P3[5]/A5
N	V _{DD(1V8)}	V_{SS}	P3[23]/ A23/ XCLK	P3[21]/ A21	P3[17]/ A17	P1[26]/ RTCK	V_{SS}	V _{DD(3V3)}	P0[5]/ MISO0/ MAT0[1]	P3[10]/ A10	P0[6]/ MOSI0/ CAP0[2]	P3[8]/A8	P3[6]/A6

Table 81. LPC22xx Pin description (144 pin packages)

Symbol	Pin (LQFP)	Pin (TFBGA)	Туре	Description
P0[0] to P0[31]			I/O	Port 0: Port 0 is a 32-bit bidirectional I/O port with individual direction controls for each bit. The operation of port 0 pins depends upon the pin function selected via the Pin Connect Block.
				Pins 26 and 31 of port 0 are not available.
P0[0]/TXD0/ PWM1	42 <u>[1]</u>	L4[1]	0	TXD0 — Transmitter output for UART0.
FVVIVII			0	PWM1 — Pulse Width Modulator output 1.
P0[1]/RXD0/ PWM3/EINT0	49[2]	K6[2]	I	RXD0 — Receiver input for UART0.
PWW3/EINTU			0	PWM3 — Pulse Width Modulator output 3.
			I	EINT0 — External interrupt 0 input
P0[2]/SCL/ CAP0[0]	50[3]	L6[3]	I/O	SCL — I ² C-bus clock input/output. Open-drain output (for I ² C-bus compliance).
			I	CAP0[0] — Capture input for Timer 0, channel 0.
P0[3]/SDA/ MAT0[0]/EINT1	58[3]	M8[3]	I/O	SDA — I ² C-bus data input/output. Open-drain output (for I ² C-bus compliance).
			0	MAT0[0] — Match output for Timer 0, channel 0.
		1	EINT1 — External interrupt 1 input.	
P0[4]/SCK0/ CAP0[1]	-	L8[<u>1]</u>	I/O	SCK0 — Serial clock for SPI0. SPI clock output from master or input to slave.
			I	CAP0[1] — Capture input for Timer 0, channel 1.
P0[5]/MISO0/ MAT0[1]	61 <u>[1]</u>	N9[1]	I/O	MISO0 — Master In Slave OUT for SPI0. Data input to SPI master or data output from SPI slave.
			0	MAT0[1] — Match output for Timer 0, channel 1.
P0[6]/MOSI0/ CAP0[2]	68 <u>[1]</u>	N11 ^[1]	I/O	MOSI0 — Master Out Slave In for SPI0. Data output from SPI master or data input to SPI slave.
			I	CAP0[2] — Capture input for Timer 0, channel 2.
P0[7]/SSEL0/ PWM2/EINT2	69 <u>[2]</u>	M11 ²	1	SSEL0 — Slave Select for SPI0. Selects the SPI interface as a slave.
			0	PWM2 — Pulse Width Modulator output 2.
			I	EINT2 — External interrupt 2 input.
P0[8]/TXD1/	75 <u>[1]</u>	L12[1]	0	TXD1 — Transmitter output for UART1.
PWM4			0	PWM4 — Pulse Width Modulator output 4.
P0[9]/RXD1/	76[2]	L13 ^[2]	I	RXD1 — Receiver input for UART1.
PWM6/EINT3			0	PWM6 — Pulse Width Modulator output 6.
			1	EINT3 — External interrupt 3 input.

Table 81. LPC22xx Pin description (144 pin packages) ...continued

Symbol	Pin (LQFP)	Pin (TFBGA)	Туре	Description
P0[10]/RTS1/	78 <mark>[1]</mark>	K11 ¹¹	0	RTS1 — Request to Send output for UART1.
CAP1[0]			1	CAP1[0] — Capture input for Timer 1, channel 0.
P0[11]/CTS1/	83[1]	J12[1]	I	CTS1 — Clear to Send input for UART1.
CAP1[1]			I	CAP1[1] — Capture input for Timer 1, channel 1.
P0[12]/DSR1/	84 <mark>[1]</mark>	J13[1]	I	DSR1 — Data Set Ready input for UART1.
MAT1[0]/RD4			0	MAT1[0] — Match output for Timer 1, channel 0.
			I	RD4 — CAN4 receiver input (LPC2294 only).
P0[13]/DTR1/	85 <mark>[1]</mark>	H10[1]	0	DTR1 — Data Terminal Ready output for UART1.
MAT1[1]/TD4			0	MAT1[1] — Match output for Timer 1, channel 1.
			0	TD4 — CAN4 transmitter output (LPC2294 only).
P0[14]/DCD1/ EINT1	92[2]	G10 ^[2]	I	DCD1 — Data Carrier Detect input for UART1.
EINTI			I	EINT1 — External interrupt 1 input.
				Note: LOW on this pin while RESET is LOW forces on-chip bootloader to take over control of the part after reset.
P0[15]/RI1/	99[2]	E11[2]	ı	RI1 — Ring Indicator input for UART1.
EINT2			I	EINT2 — External interrupt 2 input.
P0[16]/EINT0/	100[2]	E10[2]	I	EINT0 — External interrupt 0 input.
MAT0[2]/ CAP0[2]			0	MAT0[2] — Match output for Timer 0, channel 2.
			I	CAP0[2] — Capture input for Timer 0, channel 2.
P0[17]/CAP1[2]/	101[1]	D13[1]	I	CAP1[2] — Capture input for Timer 1, channel 2.
SCK1/MAT1[2]			I/O	SCK1 — Serial Clock for SPI1/SSP. SPI clock output from master or input to slave.
			0	MAT1[2] — Match output for Timer 1, channel 2.
P0[18]/CAP1[3]/	121[1]	D8[1]	I	CAP1[3] — Capture input for Timer 1, channel 3.
MISO1/MAT1[3]			I/O	MISO1 — Master In Slave Out for SPI1/SSP. Data input to SPI master or data output from SPI slave.
			0	MAT1[3] — Match output for Timer 1, channel 3.
P0[19]/MAT1[2]/	122[1]	C8[1]	0	MAT1[2] — Match output for Timer 1, channel 2.
MOSI1/CAP1[2]			I/O	MOSI1 — Master Out Slave In for SPI1/SSP. Data output from SPI master or data input to SPI slave.
			1	CAP1[2] — Capture input for Timer 1, channel 2.

Table 81. LPC22xx Pin description (144 pin packages) ...continued

Symbol	Pin (LQFP)	Pin (TFBGA)	Туре	Description
P0[20]/MAT1[3]/	123[2]	B8[2]	0	MAT1[3] — Match output for Timer 1, channel 3.
SSEL1/EINT3			I	SSEL1 — Slave Select for SPI1/SSP. Selects the SPI interface as a slave.
			1	EINT3 — External interrupt 3 input.
P0[21]/PWM5/	4 <u>[1]</u>	C1[1]	0	PWM5 — Pulse Width Modulator output 5.
RD3/CAP1[3]			1	RD3 — CAN3 receiver input (LPC2294 only).
			I	CAP1[3] — Capture input for Timer 1, channel 3.
P0[22]/TD3/	5 <u>[1]</u>	D4[1]	0	TD3 — CAN3 transmitter output (LPC2294 only).
CAP0[0]/ MAT0[0]			I	CAP0[0] — Capture input for Timer 0, channel 0.
			0	MAT0[0] — Match output for Timer 0, channel 0.
P0[23]/RD2	6 <u>[1]</u>	D3[1]	1	RD2 — CAN2 receiver input.
P0[24]/TD2	8[1]	D1[1]	0	TD2 — CAN2 transmitter output.
P0[25]/RD1	21[1]	H1[1]	I	RD1 — CAN1 receiver input.
P0[27]/AIN0/ CAP0[1]/	23[4]	H3 <u>[4]</u>	I	AIN0 — ADC, input 0. This analog input is always connected to its pin.
MAT0[1]			I	CAP0[1] — Capture input for Timer 0, channel 1.
			0	MAT0[1] — Match output for Timer 0, channel 1.
P0[28]/AIN1/ CAP0[2]/	25 ^[4]	J1[4]	I	AIN1 — ADC, input 1. This analog input is always connected to its pin.
MAT0[2]			I	CAP0[2] — Capture input for Timer 0, channel 2.
			0	MAT0[2] — Match output for Timer 0, channel 2.
P0[29]/AIN2/ CAP0[3]/	32[4]	L1[4]	I	AIN2 — ADC, input 2. This analog input is always connected to its pin.
MAT0[3]			1	CAP0[3] — Capture input for Timer 0, Channel 3.
			0	MAT0[3] — Match output for Timer 0, channel 3.
P0[30]/AIN3/ EINT3/CAP0[0]	33[4]	L2[4]	I	AIN3 — ADC, input 3. This analog input is always connected to its pin.
			I	EINT3 — External interrupt 3 input.
			Ī	CAP0[0] — Capture input for Timer 0, channel 0.
P1[0] to P1[31]			I/O	Port 1: Port 1 is a 32-bit bidirectional I/O port with individual direction controls for each bit. The operation of port 1 pins depends upon the pin function selected via the Pin Connect Block. Pins 2 through 15 of port 1 are not available.
P1[0]/CS0	915	G11 <u>5</u>	0	CS0 — LOW-active Chip Select 0 signal.
				(Bank 0 addresses range 0x8000 0000 to 0x80FF FFFF)

Table 81. LPC22xx Pin description (144 pin packages) ...continued

Symbol	Pin (LQFP)	Pin (TFBGA)	Туре	Description
P1[1]/OE	90[5]	G13 ^[5]	0	OE — LOW-active Output Enable signal.
P1[16]/ TRACEPKT0	34 <u>[5]</u>	L3[5]	0	TRACEPKT0 — Trace Packet, bit 0. Standard I/O port with internal pull-up.
P1[17]/ TRACEPKT1	24[5]	H4[5]	0	TRACEPKT1 — Trace Packet, bit 1. Standard I/O port with internal pull-up.
P1[18]/ TRACEPKT2	15 ⁵	F2[5]	0	TRACEPKT2 — Trace Packet, bit 2. Standard I/O port with internal pull-up.
P1[19]/ TRACEPKT3	7 <u>[5]</u>	D2[5]	0	TRACEPKT3 — Trace Packet, bit 3. Standard I/O port with internal pull-up.
P1[20]/ TRACESYNC	1025	D12 ⁵	0	TRACESYNC — Trace Synchronization. Standard I/O port with internal pull-up. Note: LOW on this pin while RESET is LOW, enables pins P1[25:16] to operate as Trace port after reset.
P1[21]/ PIPESTAT0	95 <u>[5]</u>	F11 <u>^[5]</u>	0	PIPESTAT0 — Pipeline Status, bit 0. Standard I/O port with internal pull-up.
P1[22]/ PIPESTAT1	86 <u>[5]</u>	H11 <u>5</u>	0	PIPESTAT1 — Pipeline Status, bit 1. Standard I/O port with internal pull-up.
P1[23]/ PIPESTAT2	82[5]	J11 <u>5</u>	0	PIPESTAT2 — Pipeline Status, bit 2. Standard I/O port with internal pull-up.
P1[24]/ TRACECLK	70[5]	L11 ^[5]	0	TRACECLK — Trace Clock. Standard I/O port with internal pull-up.
P1[25]/EXTIN0	60 <u>[5]</u>	K8[5]	I	EXTIN0 — External Trigger Input. Standard I/O with internal pull-up.
P1[26]/RTCK	52[5]	N6[5]	I/O	RTCK — Returned Test Clock output. Extra signal added to the JTAG port. Assists debugger synchronization when processor frequency varies. Bidirectional pin with internal pull-up.
				Note: LOW on this pin while RESET is LOW, enables pins P1[31:26] to operate as Debug port after reset.
P1[27]/TDO	144[5]	B2[5]	0	TDO — Test Data out for JTAG interface.
P1[28]/TDI	140[5]	A3[5]	I	TDI — Test Data in for JTAG interface.
P1[29]/TCK	1265	A7 ^[5]	ı	TCK — Test Clock for JTAG interface. This clock must be slower than $^{1}\!\!/_{\!6}$ of the CPU clock (CCLK) for the JTAG interface to operate.
P1[30]/TMS	113 <u>^[5]</u>	D10[5]	I	TMS — Test Mode Select for JTAG interface.
P1[31]/TRST	43[5]	M4[5]	1	TRST — Test Reset for JTAG interface.
P2[0] to P2[31]			I/O	Port 2 — Port 2 is a 32-bit bidirectional I/O port with individual direction controls for each bit. The operation of port 2 pins depends upon the pin function selected via the Pin Connect Block.
P2[0]/D0	98 <u>[5]</u>	E12[5]	I/O	D0 — External memory data line 0.

UM10114 NXP Semiconductors

Chapter 7: LPC21xx/22xx Pin configuration

Table 81. LPC22xx Pin description (144 pin packages) ...continued

0 1 1	D' (' 0 = E')	Di (TED CA)		Description
Symbol	Pin (LQFP)	Pin (TFBGA)		Description
P2[1]/D1	105 ^[5]	C12 ⁵	I/O	D1 — External memory data line 1.
P2[2]/D2	106 ^[5]	C11 ^[5]	I/O	D2 — External memory data line 2.
P2[3]/D3	108 <mark>[5]</mark>	B12 ^[5]	I/O	D3 — External memory data line 3.
P2[4]/D4	109[5]	A13 ^[5]	I/O	D4 — External memory data line 4.
P2[5]/D5	114 <u>⁵</u>	C10 ^[5]	I/O	D5 — External memory data line 5.
P2[6]/D6	115 <u>⁵</u>	B10[5]	I/O	D6 — External memory data line 6.
P2[7]/D7	116 ⁵	A10 ^[5]	I/O	D7 — External memory data line 7.
P2[8]/D8	117 <u>5</u>	D9[5]	I/O	D8 — External memory data line 8.
P2[9]/D9	118 <u>^[5]</u>	C9[5]	I/O	D9 — External memory data line 9.
P2[10]/D10	120[5]	A9[5]	I/O	D10 — External memory data line 10.
P2[11]/D11	124 <mark>5</mark>	A8[5]	I/O	D11 — External memory data line 11.
P2[12]/D12	125 <u>^[5]</u>	B7[5]	I/O	D12 — External memory data line 12.
P2[13]/D13	127 <u>⁵</u>	C7 ⁵	I/O	D13 — External memory data line 13.
P2[14]/D14	129[5]	A6[5]	I/O	D14 — External memory data line 14.
P2[15]/D15	130 <u>^[5]</u>	B6[5]	I/O	D15 — External memory data line 15.
P2[16]/D16	131 <u>5</u>	C6 ^[5]	I/O	D16 — External memory data line 16.
P2[17]/D17	132[5]	D6 ⁵	I/O	D17 — External memory data line 17.
P2[18]/D18	133 <u>^[5]</u>	A5[5]	I/O	D18 — External memory data line 18.
P2[19]/D19	134 <u>^[5]</u>	B5[5]	I/O	D19 — External memory data line 19.
P2[20]/D20	136 ^[5]	D5[5]	I/O	D20 — External memory data line 20.
P2[21]/D21	137 <u>^[5]</u>	A4[5]	I/O	D21 — External memory data line 21.
P2[22]/D22	15	A1[5]	I/O	D22 — External memory data line 22.
P2[23]/D23	10[5]	E3[5]	I/O	D23 — External memory data line 23.
P2[24]/D24	11 <u>^[5]</u>	E2[5]	I/O	D24 — External memory data line 24.
P2[25]/D25	12[5]	E15	I/O	D25 — External memory data line 25.
P2[26]/D26/	13[5]	F4[5]	I/O	D26 — External memory data line 26.
воото			I	BOOT0 — While RESET is low, together with BOOT1 controls booting and internal operation. Internal pull-up ensures high state if pin is left unconnected.

ensures high state if pin is left unconnected.

Table 81. LPC22xx Pin description (144 pin packages) ...continued

Symbol	Pin (LQFP)	Pin (TFBGA)	,	Description
P2[27]/D27/	16 ^[5]	F1 ⁵	I/O	D27 — External memory data line 27.
BOOT1			Ī	BOOT1 — While RESET is low, together with BOOT0 controls booting and internal operation. Internal pull-up ensures high state if pin is left unconnected. BOOT1:0 = 00 selects 8-bit memory on CS0 for boot. BOOT1:0 = 01 selects 16-bit memory on CS0 for boot. BOOT1:0 = 10 selects 32-bit memory on CS0 for boot. BOOT1:0 = 11 selects internal flash memory or 16-bit memory for CS0 boot for flashless LPC22xx.
P2[28]/D28	17 <mark>5</mark>	G2 ^[5]	I/O	D28 — External memory data line 28.
P2[29]/D29	18 <u>^[5]</u>	G1 <u>5</u>	I/O	D29 — External memory data line 29.
P2[30]/D30/	19 [4]	G3[2]	I/O	D30 — External memory data line 30.
AIN4			I	AIN4 — ADC, input 4. This analog input is always connected to its pin.
P2[31]/D31/	20[4]	G4[2]	I/O	D31 — External memory data line 31.
AIN5			I	AIN5 — ADC, input 5. This analog input is always connected to its pin.
P3[0] to P3[31]			I/O	Port 3 — Port 3 is a 32-bit bidirectional I/O port with individual direction controls for each bit. The operation of port 3 pins depends upon the pin function selected via the Pin Connect Block.
P3[0]/A0	89 <u>[5]</u>	G12 ⁵	0	A0 — External memory address line 0.
P3[1]/A1	88 <u>[5]</u>	H13 ⁵	0	A1 — External memory address line 1.
P3[2]/A2	87 <u>^[5]</u>	H12 ⁵	0	A2 — External memory address line 2.
P3[3]/A3	81 <u>5</u>	J10 ^[5]	0	A3 — External memory address line 3.
P3[4]/A4	80[5]	K13 ⁵	0	A4 — External memory address line 4.
P3[5]/A5	74 <u>[5]</u>	M13[5]	0	A5 — External memory address line 5.
P3[6]/A6	73 <u>[5]</u>	N13 ⁵	0	A6 — External memory address line 6.
P3[7]/A7	72 <mark>5</mark>	M12 ^[5]	0	A7 — External memory address line 7.
P3[8]/A8	71 <u>5</u>	N12[5]	0	A8 — External memory address line 8.
P3[9]/A9	66 ^[5]	M10[5]	0	A9 — External memory address line 9.
P3[10]/A10	65 <u>[5]</u>	N10 ⁵	0	A10 — External memory address line 10.
P3[11]/A11	64 <u>[5]</u>	K9[5]	0	A11 — External memory address line 11.
P3[12]/A12	63 <mark>[5]</mark>	L9[<u>5]</u>	0	A12 — External memory address line 12.
P3[13]/A13	62 <mark>5</mark>	M9 ^[5]	0	A13 — External memory address line 13.
P3[14]/A14	56 <u>[5]</u>	K7[5]	0	A14 — External memory address line 14.
P3[15]/A15	55 ^[5]	L7[5]	0	A15 — External memory address line 15.

Table 81. LPC22xx Pin description (144 pin packages) ...continued

Symbol	Pin (LQFP)	Pin (TFBGA)	Туре	Description
P3[16]/A16	53 <u>[5]</u>	M7[5]	0	A16 — External memory address line 16.
P3[17]/A17	48 <u>^[5]</u>	N5[5]	0	A17 — External memory address line 17.
P3[18]/A18	47 <u>[5]</u>	M5[5]	0	A18 — External memory address line 18.
P3[19]/A19	46 ^[5]	L5[5]	0	A19 — External memory address line 19.
P3[20]/A20	45 <u>[5]</u>	K5[5]	0	A20 — External memory address line 20.
P3[21]/A21	44 <u>[5]</u>	N4 <u>^[5]</u>	0	A21 — External memory address line 21.
P3[22]/A22	41 <u>⁵</u>	K4[5]	0	A22 — External memory address line 22.
P3[23]/A23/ XCLK	40 <u>[5]</u>	N3[5]	I/O	A23 — External memory address line 23.
AOLIX			0	XCLK — Clock output.
P3[24]/CS3	36[5]	M2 ^[5]	0	CS3 — LOW-active Chip Select 3 signal. (Bank 3 addresses range 0x8300 0000 to 0x83FF FFFF)
P3[25]/CS2	35 <u>[5]</u>	M1 ^[5]	0	CS2 — LOW-active Chip Select 2 signal. (Bank 2 addresses range 0x8200 0000 to 0x82FF FFFF)
P3[26]/CS1	30[5]	K2[5]	0	CS1 — LOW-active Chip Select 1 signal. (Bank 1 addresses range 0x8100 0000 to 0x81FF FFFF)
P3[27]/WE	29 <mark>5</mark>	K15	0	WE — LOW-active Write enable signal.
P3[28]/BLS3/ AIN7	28[4]	J4[4]	0	BLS3 — LOW-active Byte Lane Select signal (Bank 3).
Ally			I	AIN7 — ADC, input 7. This analog input is always connected to its pin.
P3[29]/BLS2/ AIN6	27 <mark>[4]</mark>	J3 <u>[4]</u>	0	BLS2 — LOW-active Byte Lane Select signal (Bank 2).
Alino			I	AIN6 — ADC, input 6. This analog input is always connected to its pin.
P3[30]/BLS1	97 <mark>[4]</mark>	E13[4]	0	BLS1 — LOW-active Byte Lane Select signal (Bank 1).
P3[31]/BLS0	96 <mark>[4]</mark>	F10[4]	0	BLS0 — LOW-active Byte Lane Select signal (Bank 0).
TD1	22 <mark>[5]</mark>	H2[5]	0	TD1: CAN1 transmitter output.
RESET	135 <u>[6]</u>	C5[6]	I	External Reset input: A LOW on this pin resets the device, causing I/O ports and peripherals to take on their default states, and processor execution to begin at address 0. TTL with hysteresis, 5 V tolerant.
XTAL1	142[7]	C3[7]	I	Input to the oscillator circuit and internal clock generator circuits.
XTAL2	141[7]	B3[7]	0	Output from the oscillator amplifier.
V _{SS}	3, 9, 26, 38, 54, 67, 79, 93, 103, 107, 111, 128	C2, E4, J2, N2, N7, L10, K12, F13, D11, B13, B11, D7	I	Ground: 0 V reference.

Table 81. LPC22xx Pin description (144 pin packages) ...continued

Symbol	Pin (LQFP)	Pin (TFBGA)	Туре	Description
V _{SSA}	139	C4	I	Analog ground: 0 V reference. This should nominally be the same voltage as V_{SS} , but should be isolated to minimize noise and error.
V _{SSA(PLL)}	138	B4	I	PLL analog ground: 0 V reference. This should nominally be the same voltage as V_{SS} , but should be isolated to minimize noise and error.
V _{DD(1V8)}	37, 110	N1, A12	I	1.8 V core power supply: This is the power supply voltage for internal circuitry.
V _{DDA(1V8)}	143	A2	I	Analog 1.8 V core power supply: This is the power supply voltage for internal circuitry. This should be nominally the same voltage as $V_{DD(1V8)}$ but should be isolated to minimize noise and error.
V _{DD(3V3)}	2, 31, 39, 51, 57, 77, 94, 104, 112, 119	M6, N8, K10,	I	3.3 V pad power supply: This is the power supply voltage for the I/O ports.
V _{DDA(3V3)}	14	F3	I	Analog 3.3 V pad power supply: This should be nominally the same voltage as $V_{DD(3V3)}$ but should be isolated to minimize noise and error. The level on this pin also provides the voltage reference level for the ADC.

^{[1] 5} V tolerant pad providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control.

- [6] 5 V tolerant pad providing digital input (with TTL levels and hysteresis) function only.
- [7] Pad provides special analog functionality.

^{[2] 5} V tolerant pad providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control. If configured for an input function, this pad utilizes built-in glitch filter that blocks pulses shorter than 3 ns.

^[3] Open drain 5 V tolerant digital I/O I²C-bus 400 kHz specification compatible pad. It requires external pull-up to provide an output functionality. Open-drain functionality applies to all output functions on this pin.

^{[4] 5} V tolerant pad providing digital I/O (with TTL levels and hysteresis and 10 ns slew rate control) and analog input function. If configured for a digital input function, this pad utilizes built-in glitch filter that blocks pulses shorter than 3 ns. When configured as an ADC input, digital section of the pad is disabled.

^{[5] 5} V tolerant pad with built-in pull-up resistor providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control. The pull-up resistor's value ranges from $60 \text{ k}\Omega$ to $300 \text{ k}\Omega$.

UM10114

Chapter 8: LPC21xx/22xx Pin connect block

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The pin connect blocks are identical for all LPC21xx and LPC22xx parts, respectively. The LPC22xx use additional bits in the PINSEL2 register to select the EMC, additional ADC pins, and for boot control (see <u>Table 8–83</u>). For parts with CAN interface, see <u>Table 8–82</u> for which bits select the CAN pins in the PINSEL registers. The CAN bit settings are reserved for parts without CAN interfaces.

Table 82. CAN configuration in the LPC21xx/22xx pin connect registers

Pin	available in part	PINSEL register	Bits
	no suffix, /00, /01		
RD1 ¹¹	LPC2109 LPC2119 LPC2129 LPC2194 LPC2290 LPC2292 LPC2294	PINSEL1 <u>Table 8–87</u>	19:18
RD2/TD2	LPC2119 LPC2129 LPC2194 LPC2290 LPC2292 LPC2294	PINSEL1 <u>Table 8–87</u>	15:14/17:16
RD3/TD3	LPC2194 LPC2294	PINSEL1 Table 8–87	11:10/13:12
RD4/TD4	LPC2194 LPC2294	PINSEL0 <u>Table 8–86</u>	25:24/27:26

^[1] The TD1 output, if available, is not shared with other pins.

Table 83. Pin select registers for 64-pin (LPC21xx) and 144-pin (LPC22xx) configurations

Parts	PINSEL0	PINSEL1	PINSEL2	Boot control
all LPC21xx	Table 8-86	Table 8–87	Table 8–88	n/a
all LPC22xx	Table 8–86	Table 8–87	Table 8–89	Table 8–90

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

Allows individual pin configuration.

3. Applications

The purpose of the Pin connect block is to configure the microcontroller pins to the desired functions.

Chapter 8: LPC21xx/22xx Pin connect block

4. Description

The pin connect block allows selected pins of the microcontroller to have more than one function. Configuration registers control the multiplexers to allow connection between the pin and the on chip peripherals.

Peripherals should be connected to the appropriate pins prior to being activated, and prior to any related interrupt(s) being enabled. Activity of any enabled peripheral function that is not mapped to a related pin should be considered undefined.

Selection of a single function on a port pin completely excludes all other functions otherwise available on the same pin.

The only exception are the inputs to the A/D converter. Regardless of the function that is selected for the port pin that also hosts the A/D input, this A/D input can be read at any time, and variations of the voltage level on this pin will be reflected in the A/D readings. However, valid analog reading(s) can be obtained if and only if the analog input function is selected. Only then the proper interface circuit is active in between the physical pin and the A/D module. In all other cases, the logic necessary for the digital function will be active and will disrupt proper behavior of the A/D.

5. Pin function Select register values

The PINSEL registers control the functions of device pins as shown below. Pairs of bits in these registers correspond to specific device pins.

Table 84. Pin function Select register bits

PINSEL0 & PINSEL1 values	Function	Value after reset
00	Primary (default) function, typically GPIO port	00
01	First alternate function	
10	Second alternate function	
11	Third alternate function	

The direction control bit in the IO0DIR/IO1DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically. Each derivative typically has a different pinout and therefore a different set of functions possible for each pin. Details for a specific derivative may be found in the appropriate data sheet.

6. Register description

The Pin Control Module contains 3 registers as shown in <u>Table 8–85</u> below.

Chapter 8: LPC21xx/22xx Pin connect block

Table 85. Pin connect block register map

Name	Description	Access	Reset value	Address
PINSEL0	Pin function select register 0	R/W	0x0000 0000	0xE002 C000
PINSEL1	Pin function select register 1	R/W	0x1540 0000	0xE002 C004
PINSEL2	Pin function select register 2	R/W	See <u>Table 8–88</u> .	0xE002 C014

6.1 Pin function Select register 0 (PINSEL0 - 0xE002 C000)

The PINSEL0 register controls the functions of the pins using the settings listed in <u>Table 8–86</u>. The direction control bit in the IO0DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically.

The CAN bit settings are reserved for parts without CAN interfaces (see Table 8-82).

Table 86. Pin function Select register 0 (PINSEL0 - address 0xE002 C000) bit description)

Bit	Symbol	Value	Function	Reset value
1:0	P0.0	00	GPIO Port 0.0	0
		01	TXD (UART0)	
	10	PWM1		
		11	Reserved	
3:2	P0.1	00	GPIO Port 0.1	0
		01	RxD (UART0)	
		10	PWM3	
		11	EINT0	
5:4	P0.2[1]	00	GPIO Port 0.2	0
		01	SCL (I ² C)	
		10	Capture 0.0 (Timer 0)	
		11	Reserved	
7:6	P0.3[1]	00	GPIO Port 0.3	0
		01	SDA (I ² C)	
		10	Match 0.0 (Timer 0)	
		11	EINT1	
9:8	P0.4	00	GPIO Port 0.4	0
		01	SCK0 (SPI0)	
		10	Capture 0.1 (Timer 0)	
		11	Reserved	
11:10	P0.5	00	GPIO Port 0.5	0
		01	MISO0 (SPI0)	
		10	Match 0.1 (Timer 0)	
		11	Reserved	

Chapter 8: LPC21xx/22xx Pin connect block

Table 86. Pin function Select register 0 (PINSEL0 - address 0xE002 C000) bit description)

Bit	Symbol	Value	Function	Reset value
13:12	P0.6	00	GPIO Port 0.6	0
		01	MOSI0 (SPI0)	
		10	Capture 0.2 (Timer 0)	
		11	Reserved	
15:14	P0.7	00	GPIO Port 0.7	0
		01	SSEL0 (SPI0)	
		10	PWM2	
	11	EINT2		
17:16	P0.8	00	GPIO Port 0.8	0
		01	TXD UART1	
		10	PWM4	
	11	Reserved		
19:18 P0.9	00	GPIO Port 0.9	0	
		01	RxD (UART1)	
		10	PWM6	
	11	EINT3		
21:20	P0.10	00	GPIO Port 0.10	0
	01	RTS1 (UART1)		
		10	Capture 1.0 (Timer 1)	
		11	Reserved	
23:22	P0.11	00	GPIO Port 0.11	0
	01 CT	CTS1 (UART1)		
		10	Capture 1.1 (Timer 1)	
		11	Reserved	
25:24	P0.12	00	GPIO Port 0.12	0
		01	DSR1 (UART1)	
		10	Match 1.0 (Timer 1)	
		11	RD4 (CAN 4)	
27:26	P0.13	00	GPIO Port 0.13	0
		01	DTR1 (UART1)	
		10	Match 1.1 (Timer 1)	
		11	TD4 (CAN 4)	
29:28	P0.14	00	GPIO Port 0.14	0
		01	DCD1 (UART1)	
		10	EINT1	
		11	Reserved	
31:30	P0.15	00	GPIO Port 0.15	0
		01	RI1 (UART1)	
		10	EINT2	
		11	Reserved	

^[1] All functions on this pin are open-drain outputs for I²C-bus compliance.

Chapter 8: LPC21xx/22xx Pin connect block

6.2 Pin function Select register 1 (PINSEL1 - 0xE002 C004)

The PINSEL1 register controls the functions of the pins using the settings listed in <u>Table 8–87</u>. The direction control bit in the IO0DIR register is effective only when the GPIO function is selected for a pin. For other functions direction is controlled automatically.

The CAN bit settings are reserved for parts without CAN interfaces (see Table 8-82).

Table 87. Pin function Select register 1 (PINSEL1 - address 0xE002 C004) bit description

Bit	Symbol	Value	Function	Reset value
1:0	P0.16	00	GPIO Port 0.16	0
		01	EINT0	
		10	Match 0.2 (Timer 0)	
		11	Capture 0.2 (Timer 0)	
3:2	P0.17	00	GPIO Port 0.17	0
		01	Capture 1.2 (Timer 1)	
		10	SCK1 (SSP)	
		11	Match 1.2 (Timer 1)	
5:4	5:4 P0.18	00	GPIO Port 0.18	0
		01	Capture 1.3 (Timer 1)	
		10	MISO1 (SSP)	
		11 Match 1.3 (Match 1.3 (Timer 1)	
7:6	P0.19	00	GPIO Port 0.19	0
		01	Match 1.2 (Timer 1)	
		10	MOSI1 (SSP)	
		11	Capture 1.2 (Timer 1)	
9:8	P0.20	00	GPIO Port 0.20	0
		01	Match 1.3 (Timer 1)	
		10	SSEL1 (SSP)	
		11	EINT3	
11:10	P0.21	00	GPIO Port 0.21	0
		01	PWM5	
	10	10	RD3 (CAN 3)	
		11	Capture 1.3 (Timer 1)	
13:12	P0.22	00	GPIO Port 0.22	0
		01	TD3 (CAN 3)	
		10	Capture 0.0 (Timer 0)	
		11	Match 0.0 (Timer 0)	
15:14	P0.23	00	GPIO Port 0.23	0
		01	RD2 (CAN2)	
		10	Reserved	
		11	Reserved	

Chapter 8: LPC21xx/22xx Pin connect block

Table 87. Pin function Select register 1 (PINSEL1 - address 0xE002 C004) bit description

Bit	Symbol	Value	Function	Reset value
17:16	P0.24	00	GPIO Port 0.24	0
		01	TD2 (CAN2)	
		10	Reserved	
	11	Reserved		
19:18	P0.25	00	GPIO Port 0.25	0
		01	RD1 (CAN1)	
		10	Reserved	
		11	Reserved	
21:20	21:20 P0.26	00	Reserved	0
		01	Reserved	
		10	Reserved	
		11	Reserved	
23:22	P0.27	00	GPIO Port 0.27	01
		01	AIN0	
		10	CAP0.1 (Timer 0)	
		11	MAT0.1 (Timer 0)	
25:24	P0.28	00	GPIO Port 0.28	01
		01	AIN1	
		10	Capture 0.2 (Timer 0)	
		11	Match 0.2 (Timer 0)	
27:26	P0.29	00	GPIO Port 0.29	01
		01	AIN2	
		10	Capture 0.3 (Timer 0)	
		11	Match 0.3 (Timer 0)	
29:28	P0.30	00	GPIO Port 0.30	01
		01	AIN3	
		10	EINT3	
		11	Capture 0.0 (Timer 0)	
31:30	P0.31	00	Reserved	0
		01	Reserved	
		10	Reserved	
		11	Reserved	
		11	Reserved	

6.3 LPC21xx Pin function Select register 2 (PINSEL2 - 0xE002 C014)

The PINSEL2 register controls the functions of the pins using the settings listed in <u>Table 8–88</u>. The direction control bit in the IO1DIR register is effective only when the GPIO function is selected for a pin. For other functions direction is controlled automatically.

Warning: use read-modify-write operation when accessing PINSEL2 register. Accidental write of 0 to bit 2 and/or bit 3 results in loss of debug and/or trace functionality! Changing of either bit 4 or bit 5 from 1 to 0 may cause an incorrect code execution!

Chapter 8: LPC21xx/22xx Pin connect block

Table 88. Pin function Select register 2 (PINSEL2 - 0xE002 C014) bit description

Bit	Symbol	Value	Function	Reset value
1:0	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	GPIO/DEBUG	0	Pins P1.36-26 are used as GPIO pins.	P1.26/RTCK
		1	Pins P1.36-26 are used as a Debug port.	
3	GPIO/TRACE	0	Pins P1.25-16 are used as GPIO pins.	P1.20/ TRACESYNC
		1	Pins P1.25-16 are used as a Trace port.	
31:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.4 LPC22xx Pin function Select register 2 (PINSEL2 - 0xE002 C014)

The PINSEL2 register controls the functions of the pins using the settings listed in <u>Table 8–89</u>. The direction control bit in the IODIR register is effective only when the GPIO function is selected for a pin. For other functions direction is controlled automatically.

Warning: Use read-modify-write operation when accessing PINSEL2 register. Accidental write of 0 to bit 2 and/or bit 3 results in loss of debug and/or trace functionality! Changing of either bit 4 or bit 5 from 1 to 0 may cause an incorrect code execution!

Table 89. Pin function Select register 2 (PINSEL2 - 0xE002 C014) bit description

Bit	Symbol	Value	Function	Value after reset		
1:0	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		
2	GPIO/ DEBUG	Controls the use of P1.31-26 pins.				
		0 Pins P1.31-26 are used as GPIO pins.		P1.26/RTCK		
		1	Pins P1.31-26 are used as a Debug port.			
3	GPIO/ TRACE	Contro	P1.20/			
		0	Pins P1.25-16 are used as GPIO pins.	TRACESYNC		
		1	Pins P1.25-16 are used as a Trace port.			

Chapter 8: LPC21xx/22xx Pin connect block

Table 89. Pin function Select register 2 (PINSEL2 - 0xE002 C014) bit description

Bit	Symbol	Value Fund	Value after reset						
5:4	CTRLDBP	Controls the use of the data bus and strobe pins. At a reset triggered via the RESET pin, these bits are loaded with the content from lines BOOT1:0; if a watchdog reset occurs, these two bits are loaded with the BOOT10_SAVE register content (see Section 8–6.5 "Boot control for LPC22xx parts" on page 110).					BOOT1:0 or BOOT10_SAVE		
			Functions available based on PINSEL2[5:4] values						
		Pins	10	01	00	11			
		P1.1	OE	-		P1.1			
		P2.7:0	D7:0			P2.7:0			
		P2.15:8	D15:8		P2.15:8				
		P2.27:16	D27:16	P2.27:16					
		P2.29:28	D29:28	P2.29:28 or res	served (see bit 20)			
		P2.30	D30	P2.30 or AIN4	(see bit 21)				
		P2.31	D31	P2.31 or AIN5	(see bit 22)				
		P1.0	CS0			P1.0			
		P3.31	BLS0			P3.31			
		P3.30	BLS1		P3.30				
	P3.28		BLS2 P3.28 or AIN7 (see bit 7)						
		P3.29	BLS3	P3.29 or AIN6	(see bit 6)				
6	CTRLP329	If bits 5:4 are not 10, controls the use of pin P3.29:					1		
			<u>'</u>						
		1 P3.2							
7	CTRLP328	If bits 5:4 are not 10, controls the use of pin P3.28:					_ 1		
			0 P3.28 is a GPIO pin.						
			8 is an ADC input						
8	CTRLP327	Controls the use of pin P3.27:					0		
		0 P3.27 is a GPIO pin.							
			1 P3.27 is a Write Enable pin (WE).						
10:9	-	Rese	-						
11	CTRLP326	Controls the use of pin P3.26:					0		
		 P3.26 is a GPIO pin. P3.26 is a chip/memory bank select pin (CS1). 							
12	-		NA Reserved						
13	CTRLP323	If bits 25:23 are not 111, controls the use of pin P3.23/A23/XCLK:					0		
		 P3.23 is a GPIO/address line pin (see bits 27:25). P3.23 is XCLK output pin. 							
		1 P3.2	3 is XCLK output	pın.					

Chapter 8: LPC21xx/22xx Pin connect block

Table 89. Pin function Select register 2 (PINSEL2 - 0xE002 C014) bit description

Bit	Symbol	Value	Function	Value after reset	
15:14	CTRLP325	Contro	ls the use of pin P3.25:	00	
		00	P3.25 is a GPIO pin.		
		01	P3.25 is a chip/memory bank select pin (CS2).		
		10	Reserved		
		11	Reserved		
17:16	CTRLP324	Contro	ls the use of pin P3.24:	00	
		00	P3.24 is a GPIO pin.		
		01	P3.24 is a chip/memory bank select pin (CS3).		
		10	Reserved		
		11	Reserved		
19:18	-	NA	Reserved	-	
20	CTRLP229_28	If bits F	PINSEL2[5:4] are not 10, controls the use of pin P2.29:28:	0	
		0	P2.29 and P2.28 are GPIO pins.		
		1	Reserved		
21	CTRLP230	If bits F	PINSEL2[5:4] are not 10, controls the use of pin P2.30:	1	
		0	P2.30 is a GPIO pin.		
		1	P2.30 is an ADC input pin (AIN4).		
22	CTRLP231	If bits F	PINSEL2[5:4] are not 10, controls the use of pin P2.31:	1	
		0	P2.31 is a GPIO pin.		
		1	P2.31 is an ADC input pin (AIN5).		
23	CTRLP300	CTRLP300	Contro	ls the use of pin P3.0:	1 if
		0	P3.0/A0 is a GPIO pin.	BOOT1:0 = 00 at RESET = 0	
		1	P3.0/A0 is an address line.	0 otherwise	
24	CTRLP301	Contro	ls the use of pin P3.1:	BOOT1 during	
		0	3.1/A1 is a GPIO pin.	Reset	
		1	3.1/A1 is an address line.		
27:25	CTRLAB		Is the number of pins among P3.23/A23/XCLK and P3.22:2/A2.22:2 that dress lines:	000 if BOOT1:0 = 11	
		000	None	at Reset;	
		001	A3:2 are address lines.	111 otherwise	
		010	A5:2 are address lines.		
		011	A7:2 are address lines.		
		100	A11:2 are address lines.		
		101	A15:2 are address lines.		
		110	A19:2 are address lines.		
		111	A23:2 are address lines.		
31:28	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	00	

Chapter 8: LPC21xx/22xx Pin connect block

6.5 Boot control for LPC22xx parts

The state of the BOOT1:0 pins (P2.26 and P2.27) while RESET is low controls booting and initial operation. Internal pull-up resistors in the receivers ensure high state if a pin is left unconnected. Board designers can connect weak pull-down resistors (10 k Ω) or transistors that drive low while RESET is low to these pins to select among the following options:

Table 90. Boot control on BOOT1:0

P2.27/D27/BOOT1	P2.26/D26/BOOT0	Boot from
0	0	8 bit memory on CS0[1]
0	1	16 bit memory on CS0[1]
1	0	32 bit memory on CS0[1]
1	1	internal flash memory or 16 bit memory on CS0[1] for flashless parts LPC2210/20/90

^[1] See Section 4–6 on how to connect external memory to the LPC22xx.

When the LPC22xx hardware detects a rising edge on the Reset pin, it latches content from BOOT[1:0] pins and stores it into bits 5 and 4 of the BOOT10_SAVE register (0x3FFF 8030). Once this register is written, it is accessible for reading only.

Whenever the bootloader is executed, it reads the content of the BOOT10_SAVE register, and configures the PINSEL2 (address and data bus structure) together with other resources. For the bootloader flowchart details, see Figure 21-73 for parts with flash and Figure 22-76 for flashless parts.

UM10114

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

For port 0 and port 1, the GPIO can be selected to be Fast GPIO or legacy GPIO (see Section 9–5). Port 2 and port 3 are available in the 144-pin packages only and are always legacy GPIO. See table Table 9–91 for a list of LPC21xx and LPC22xx parts and their GPIO pins and available ports.

Not all pins are available on port 0 and port 1. The respective bits in the GPIO registers are reserved.

Table 91. GPIO features

Part	Legacy I/O por Register base		Fast GPIO ports Register base address			
	P0	P1	P2	P3	P0	P1
	0xE002 8000	0xE002 8010	0xE002 8020	0xE002 8030	0x3FFF C000	0x3FFF C020
no suffix and	/00 parts					
LPC2109	P0[30:27], P0[25:0]	P1[31:16]	-	-	-	-
LPC2119	P0[30:27], P0[25:0]	P1[31:16]	-	-	-	-
LPC2129	P0[30:27], P0[25:0]	P1[31:16]	-	-	-	-
LPC2114	P0[30:27], P0[25:0]	P1[31:16]	-	-	-	-
LPC2124	P0[30:27], P0[25:0]	P1[31:16]	-	-	-	-
LPC2194	P0[30:27], P0[25:0]	P1[31:16]	-	-	-	-
LPC2210	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	-	-
LPC2220	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]
LPC2212	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	-	-
LPC2214	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	-	-
LPC2290	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	-	-
LPC2292	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	-	-
LPC2294	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	-	-
/01 parts						
LPC2109	P0[30:27], P0[25:0]	P1[31:16]	-	-	P0[30:27], P0[25:0]	P1[31:16]
UM10114_3						© NXP B.V. 2008. All rights reserved.

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 91. GPIO features

Part	Legacy I/O por Register base			Fast GPIO ports Register base address		
	P0	P1	P2	P3	P0	P1
	0xE002 8000	0xE002 8010	0xE002 8020	0xE002 8030	0x3FFF C000	0x3FFF C020
LPC2119	P0[30:27], P0[25:0]	P1[31:16]	-	-	P0[30:27], P0[25:0]	P1[31:16]
LPC2129	P0[30:27], P0[25:0]	P1[31:16]	-	-	P0[30:27], P0[25:0]	P1[31:16]
LPC2114	P0[30:27], P0[25:0]	P1[31:16]	-	-	P0[30:27], P0[25:0]	P1[31:16]
LPC2124	P0[30:27], P0[25:0]	P1[31:16]	-	-	P0[30:27], P0[25:0]	P1[31:16]
LPC2194	P0[30:27], P0[25:0]	P1[31:16]	-	-	P0[30:27], P0[25:0]	P1[31:16]
LPC2210	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]
LPC2212	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]
LPC2214	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]
LPC2290	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]
LPC2292	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]
LPC2294	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]	P2[31:0]	P3[31:0]	P0[30:27], P0[25:0]	P1[31:16], P1[1:0]

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- Every physical GPIO port can be accessed either through registers providing enhanced features and accelerated port access or through legacy registers providing backward compatibility to earlier LPC2000 devices.
- Accelerated Fast GPIO functions (see Table 9–91):
 - GPIO registers are relocated to the ARM local bus so that the fastest possible I/O timing can be achieved.
 - Mask registers allow treating sets of port bits as a group, leaving other bits unchanged.
 - All registers are byte, half-word, and word addressable.
 - The entire port value can be written in one instruction.
- Bit-level set and clear registers allow a single instruction set or clear of any number of bits in one port.
- Direction of each pin can be controlled individually.
- All I/O default to inputs after reset.

UM10114 3 © NXP B.V. 2008. All rights reserved.

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

 Backward compatibility with other earlier devices is maintained with legacy registers appearing at the original addresses on the APB bus.

3. Applications

- General purpose I/O
- Driving LEDs, or other indicators
- Controlling off-chip devices
- Sensing digital inputs

4. Pin description

Table 92. GPIO pin description

Pin	Туре	Description
P031:0] P1[31:0]	Input/ Output	General purpose input/output. The number of GPIOs actually available depends on the use of alternate functions.
P2[31:0] P3[31:0]	Input/ Output	External bus data/address lines shared with GPIO, digital and analog functions. The number of GPIOs/digital and analog functions available depends on the selected bus structure.

5. Register description

LPC21xx/LPC22xx devices have two 32-bit General Purpose I/O ports. PORT0 and PORT1 are controlled by two groups of 4 registers as shown in <u>Table 9–93</u> and <u>Table 9–94</u>. LPC22xx devices have two additional 32-bit ports, PORT2 and PORT3. These ports can be configured either as external memory data address and data bus or as GPIOs sharing pins with a handful of digital and analog functions. Details on PORT2 and PORT3 usage can be found in <u>Section 8–6.4</u>.

Legacy registers shown in <u>Table 9–93</u> allow backward compatibility with earlier family devices, using existing code. The functions and relative timing of older GPIO implementations is preserved.

The registers in <u>Table 9–94</u> represent the enhanced Fast GPIO features available on the PORT0 and PORT1 only. All of these registers are located directly on the local bus of the CPU for the fastest possible read and write timing. An additional feature has been added that provides byte and half-word addressability of all GPIO registers. A mask register allows treating groups of bits in a single GPIO port separately from other bits on the same port.

When PORT0 and/or PORT1 are used, the user must select whether a these ports will be accessed via registers that provide enhanced features or a legacy set of registers (see Section 6–7.1). While both of a port's fast and legacy GPIO registers are controlling the same physical pins, these two port control branches are mutually exclusive and operate independently. For example, changing a pin's output through a fast register will not be observable trough the corresponding legacy register.

The following text will refer to the legacy GPIO as "the slow" GPIO, while GPIO equipped with the enhanced features will be referred as "the fast" GPIO.

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

The "slow", legacy registers are word accessible only. The "fast" GPIO registers are byte, half-word, and word accessible.

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 93. GPIO register map (legacy APB accessible registers)

Generic Name	Description	Access	Reset value ^[1]	PORT0 Address & Name	PORT1 Address & Name	PORT2 Address & name	PORT3 Address & name
IOPIN	GPIO Port Pin value register. The current state of the GPIO configured port pins can always be read from this register, regardless of pin direction.	R/W	NA	0xE002 8000 IO0PIN	0xE002 8010 IO1PIN	0xE002 8020 IO2PIN	0xE002 8030 IO3PIN
IOSET	GPIO Port Output Set register. This register controls the state of output pins in conjunction with the IOCLR register. Writing ones produces HIGHs at the corresponding port pins. Writing zeroes has no effect.	R/W	0x0000 0000	0xE002 8004 IO0SET	0xE002 8014 IO1SET	0xE002 8024 IO2SET	0xE002 8034 IO3SET
IODIR	GPIO Port Direction control register. This register individually controls the direction of each port pin.	R/W	0x0000 0000	0xE002 8008 IO0DIR	0xE002 8018 IO1DIR	0xE002 8028 IO2DIR	0xE002 8038 IO3DIR
IOCLR	GPIO Port Output Clear register. This register controls the state of output pins. Writing ones produces LOWs at the corresponding port pins and clears the corresponding bits in the IOSET register. Writing zeroes has no effect.	WO	0x0000 0000	0xE002 800C IO0CLR	0xE002 801C IO1CLR	0xE002 802C IO2CLR	0xE002 803C IO3CLR

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Table 94. GPIO register map (local bus accessible registers - enhanced GPIO features)

Generic Name	Description	Access	Reset value[1]	PORT0 Address & Name	PORT1 Address & Name
FIODIR	Fast GPIO Port Direction control register. This register individually controls the direction of each port pin.	R/W	0x0000 0000	0x3FFF C000 FIO0DIR	0x3FFF C020 FIO1DIR
FIOMASK	Fast Mask register for port. Writes, sets, clears, and reads to port (done via writes to FIOPIN, FIOSET, and FIOCLR, and reads of FIOPIN). Only the bits enabled by zeroes in this register are altered or cleared.	R/W	0x0000 0000	0x3FFF C010 FIO0MASK	0x3FFF C030 FIO1MASK

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 94. GPIO register map (local bus accessible registers - enhanced GPIO features)

Generic Name	Description	Access	Reset value[1]	PORT0 Address & Name	PORT1 Address & Name
FIOPIN	Fast Port Pin value register using FIOMASK. The current state of digital port pins can be read from this register, regardless of pin direction or alternate function selection (as long as pins is not configured as an input to ADC). The value read is masked by ANDing with FIOMASK. Writing to this register places corresponding values in all bits enabled by zeroes in FIOMASK.	R/W	0x0000 0000	0x3FFF C014 FIO0PIN	0x3FFF C034 FIO1PIN
FIOSET	Fast Port Output Set register using FIOMASK. This register controls the state of output pins. Writing 1s produces highs at the corresponding port pins. Writing 0s has no effect. Reading this register returns the current contents of the port output register. Only bits enabled by zeroes in FIOMASK can be altered.	R/W	0x0000 0000	0x3FFF C018 FIO0SET	0x3FFF C038 FIO1SET
FIOCLR	Fast Port Output Clear register using FIOMASK0. This register controls the state of output pins. Writing 1s produces lows at the corresponding port pins. Writing 0s has no effect. Only bits enabled by zeroes in FIOMASK can be altered.	WO	0x0000 0000	0x3FFF C01C FIO0CLR	0x3FFF C03C FIO1CLR

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

5.1 GPIO port Direction register IODIR (IO0DIR - 0xE002 8008, IO1DIR - 0xE002 8018, IO2DIR - 0xE002 8028, IO3DIR - 0xE002 8038, FIO0DIR - 0x3FFF C000, FIO1DIR - 0x3FFF C020)

This word accessible register is used to control the direction of the pins when they are configured as GPIO port pins. Direction bit for any pin must be set according to the pin functionality.

Legacy registers are the IO0DIR, IO1DIR, IO2DIR and IO3DIR while the enhanced GPIO functions are supported via the FIO0DIR and FIO1DIR registers.

Table 95. GPIO port 0 Direction register (IO0DIR - address 0xE002 8008) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P0xDIR		Slow GPIO Direction control bits. Bit 0 controls P0.0 bit 31 controls P0.31.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

Table 96. GPIO port 1 Direction register (IO1DIR - address 0xE002 8018) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P1xDIR		Slow GPIO Direction control bits. Bit 0 in IO1DIR controls P1.0 Bit 31 in IO1DIR controls P1.31.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 97. GPIO port 2 Direction register (IO2DIR - address 0xE002 8028) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P2xDIR		Slow GPIO Direction control bits. Bit 0 in IO2DIR controls P2.0 Bit 31 in IO2DIR controls P2.31.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

Table 98. GPIO port 3 Direction register (IO3DIR - address 0xE002 8038) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P3xDIR		Slow GPIO Direction control bits. Bit 0 in IO3DIR controls P3.0 Bit 31 in IO3DIR controls P3.31.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

Table 99. Fast GPIO port 0 Direction register (FIO0DIR - address 0x3FFF C000) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP0xDIR		Fast GPIO Direction control bits. Bit 0 in FIO0DIR controls P0.0 Bit 31 in FIO0DIR controls P0.31.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

Table 100. Fast GPIO port 1 Direction register (FIO1DIR - address 0x3FFF C020) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP1xDIR		Fast GPIO Direction control bits. Bit 0 in FIO1DIR controls P1.0 Bit 31 in FIO1DIR controls P1.31.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

In addition to the 32-bit long and word only accessible FIODIR register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 9–101 and Table 9–102. Next to providing the same functions as the FIODIR register, these additional registers allow easier and faster access to the physical port pins.

Table 101. Fast GPIO port 0 Direction control byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0DIR0	8 (byte)	0x3FFF C000	Fast GPIO Port 0 Direction control register 0. Bit 0 in FIO0DIR0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0DIR1	8 (byte)	0x3FFF C001	Fast GPIO Port 0 Direction control register 1. Bit 0 in FIO0DIR1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0DIR2	8 (byte)	0x3FFF C002	Fast GPIO Port 0 Direction control register 2. Bit 0 in FIO0DIR2 register corresponds to P0.16 bit 7 to P0.23.	0x00

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0DIR3	8 (byte)	0x3FFF C003	Fast GPIO Port 0 Direction control register 3. Bit 0 in FIO0DIR3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0DIRL	16 (half-word)	0x3FFF C000	Fast GPIO Port 0 Direction control Lower half-word register. Bit 0 in FIO0DIRL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0DIRU	16 (half-word)	0x3FFF C002	Fast GPIO Port 0 Direction control Upper half-word register. Bit 0 in FIO0DIRU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Table 102. Fast GPIO port 1 Direction control byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1DIR0	8 (byte)	0x3FFF C020	Fast GPIO Port 1 Direction control register 0. Bit 0 in FIO1DIR0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1DIR1	8 (byte)	0x3FFF C021	Fast GPIO Port 1 Direction control register 1. Bit 0 in FIO1DIR1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1DIR2	8 (byte)	0x3FFF C022	Fast GPIO Port 1 Direction control register 2. Bit 0 in FIO1DIR2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1DIR3	8 (byte)	0x3FFF C023	Fast GPIO Port 1 Direction control register 3. Bit 0 in FIO1DIR3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1DIRL	16 (half-word)	0x3FFF C020	Fast GPIO Port 1 Direction control Lower half-word register. Bit 0 in FIO1DIRL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1DIRU	16 (half-word)	0x3FFF C022	Fast GPIO Port 1 Direction control Upper half-word register. Bit 0 in FIO1DIRU register corresponds to P1.16 bit 15 to P1.31.	0x0000

5.2 GPIO port output Set register IOSET (IO0SET - 0xE002 8004, IO1SET - 0xE002 8014, IO2SET - 0xE002 8024, IO3SET - 0xE002 8034, FIO0SET - 0x3FFF C018, FIO1SET - 0x3FFF C038)

This register is used to produce a HIGH level output at the port pins configured as GPIO in an OUTPUT mode. Writing 1 produces a HIGH level at the corresponding port pins. Writing 0 has no effect. If any pin is configured as an input or a secondary function, writing 1 to the corresponding bit in the IOSET has no effect.

Reading the IOSET register returns the value of this register, as determined by previous writes to IOSET and IOCLR (or IOPIN as noted above). This value does not reflect the effect of any outside world influence on the I/O pins.

Legacy registers are the IOOSET, IO1SET, IO2SET and IO3SET while the enhanced GPIOs are supported via the FIOOSET and FIO1SET registers. Access to a port pins via the FIOSET register is conditioned by the corresponding FIOMASK register (see Section 9-5.5 "Fast GPIO port Mask register FIOMASK(FIO0MASK - 0x3FFF C010, FIO1MASK - 0x3FFF C030)").

Table 103. GPIO port 0 output Set register (IO0SET - address 0xE002 8004 bit description

Bit	Symbol	Description	Reset value
31:0	P0xSET	Slow GPIO output value Set bits. Bit 0 in IO0SET corresponds to P0.0 Bit 31 in IO0SET corresponds to P0.31.	0x0000 0000

UM10114 3 © NXP B.V. 2008. All rights reserved.

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 104. GPIO port 1 output Set register (IO1SET - address 0xE002 8014) bit description

Bit	Symbol	Description	Reset value
31:0	P1xSET	Slow GPIO output value Set bits. Bit 0 in IO1SET corresponds to P1.0 Bit 31 in IO1SET corresponds to P1.31.	0x0000 0000

Table 105. GPIO port 2 output Set register (IO2SET - address 0xE002 8024) bit description

Bit	Symbol	Description	Reset value
31:0	P2xSET	Slow GPIO output value Set bits. Bit 0 in IO2SET corresponds to P2.0 Bit 31 in IO2SET corresponds to P2.31.	0x0000 0000

Table 106. GPIO port 3 output Set register (IO3SET - address 0xE002 8034) bit description

Bit	Symbol	Description	Reset value
31:0	P3xSET	Slow GPIO output value Set bits. Bit 0 in IO3SET corresponds to P3.0 \dots Bit 31 in IO3SET corresponds to P3.31.	0x0000 0000

Table 107. Fast GPIO port 0 output Set register (FIO0SET - address 0x3FFF C018) bit description

Bit	Symbol	Description	Reset value
31:0	FP0xSET	Fast GPIO output value Set bits. Bit 0 in FIO0SET corresponds to P0.0 \dots Bit 31 in FIO0SET corresponds to P0.31.	0x0000 0000

Table 108. Fast GPIO port 1 output Set register (FIO1SET - address 0x3FFF C038) bit description

Bit	Symbol	Description	Reset value
31:0	FP1xSET	Fast GPIO output value Set bits. Bit 0 in FIO1SET corresponds to P1.0 Bit 31 in FIO1SET corresponds to P1.31.	0x0000 0000

Aside from the 32-bit long and word only accessible FIOSET register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 9–109 and Table 9–110. Next to providing the same functions as the FIOSET register, these additional registers allow easier and faster access to the physical port pins.

Table 109. Fast GPIO port 0 output Set byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0SET0	8 (byte)	0x3FFF C018	Fast GPIO Port 0 output Set register 0. Bit 0 in FIO0SET0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0SET1	8 (byte)	0x3FFF C019	Fast GPIO Port 0 output Set register 1. Bit 0 in FIO0SET1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0SET2	8 (byte)	0x3FFF C01A	Fast GPIO Port 0 output Set register 2. Bit 0 in FIO0SET2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0SET3	8 (byte)	0x3FFF C01B	Fast GPIO Port 0 output Set register 3. Bit 0 in FIO0SET3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0SETL	16 (half-word)	0x3FFF C018	Fast GPIO Port 0 output Set Lower half-word register. Bit 0 in FIO0SETL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0SETU	16 (half-word)	0x3FFF C01A	Fast GPIO Port 0 output Set Upper half-word register. Bit 0 in FIO0SETU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 110	Fast GPIO	oort 1 outnu	t Set hyte ar	d half-word	accessible	register	description
Table 110.	I ast Grio	Joil i Gulpu	t Jet byte at	iu iiaii-woiu	accessible	register	description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1SET0	8 (byte)	0x3FFF C038	Fast GPIO Port 1 output Set register 0. Bit 0 in FIO1SET0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1SET1	8 (byte)	0x3FFF C039	Fast GPIO Port 1 output Set register 1. Bit 0 in FIO1SET1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1SET2	8 (byte)	0x3FFF C03A	Fast GPIO Port 1 output Set register 2. Bit 0 in FIO1SET2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1SET3	8 (byte)	0x3FFF C03B	Fast GPIO Port 1 output Set register 3. Bit 0 in FIO1SET3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1SETL	16 (half-word)	0x3FFF C038	Fast GPIO Port 1 output Set Lower half-word register. Bit 0 in FIO1SETL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1SETU	16 (half-word)	0x3FFF C03A	Fast GPIO Port 1 output Set Upper half-word register. Bit 0 in FIO1SETU register corresponds to P1.16 bit 15 to P1.31.	0x0000

5.3 GPIO port output Clear register IOCLR (IO0CLR - 0xE002 800C, IO1CLR - 0xE002 801C, IO2CLR - 0xE002 802C, IO3CLR - 0xE002 803C, FIO0CLR - 0x3FFF C01C, FIO1CLR - 0x3FFF C03C)

This register is used to produce a LOW level output at port pins configured as GPIO in an OUTPUT mode. Writing 1 produces a LOW level at the corresponding port pin and clears the corresponding bit in the IOSET register. Writing 0 has no effect. If any pin is configured as an input or a secondary function, writing to IOCLR has no effect.

Legacy registers are the IOOCLR, IO1CLR, IO2CLR and IO3CLR while the enhanced GPIOs are supported via the FIOOCLR and FIO1CLR registers. Access to a port pins via the FIOCLR register is conditioned by the corresponding FIOMASK register (see Section 9-5.5 "Fast GPIO port Mask register FIOMASK(FIO0MASK - 0x3FFF C010, FIO1MASK - 0x3FFF C030)")).

Table 111. GPIO port 0 output Clear register 0 (IO0CLR - address 0xE002 800C) bit description

Bit	Symbol	Description	Reset value
31:0	P0xCLR	Slow GPIO output value Clear bits. Bit 0 in IO0CLR corresponds to P0.0 \dots Bit 31 in IO0CLR corresponds to P0.31.	0x0000 0000

Table 112. GPIO port 1 output Clear register 1 (IO1CLR - address 0xE002 801C) bit description

Bit	Symbol	Description	Reset value
31:0	P1xCLR	Slow GPIO output value Clear bits. Bit 0 in IO1CLR corresponds to P1.0 Bit 31 in IO1CLR corresponds to P1.31.	0x0000 0000

Table 113. GPIO port 2 output Clear register 2 (IO2CLR - address 0xE002 802C) bit description

Bit	Symbol	Description	Reset value
31:0	P2xCLR	Slow GPIO output value Clear bits. Bit 0 in IO2CLR corresponds to P1.0 \dots Bit 31 in IO2CLR corresponds to P2.31.	0x0000 0000

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 114. GPIO port 3 output Clear register 3 (IO3CLR - address 0xE002 803C) bit description

Bit	Symbol	Description	Reset value
31:0	P3xCLR	Slow GPIO output value Clear bits. Bit 0 in IO3CLR corresponds to P1.0 \dots Bit 31 in IO3CLR corresponds to P2.31.	0x0000 0000

Table 115. Fast GPIO port 0 output Clear register 0 (FIO0CLR - address 0x3FFF C01C) bit description

Bit	Symbol	Description	Reset value
31:0	FP0xCLR	Fast GPIO output value Clear bits. Bit 0 in FIO0CLR corresponds to P0.0 \dots Bit 31 in FIO0CLR corresponds to P0.31.	0x0000 0000

Table 116. Fast GPIO port 1 output Clear register 1 (FIO1CLR - address 0x3FFF C03C) bit description

Bit	Symbol	Description	Reset value
31:0	FP1xCLR	Fast GPIO output value Clear bits. Bit 0 in FIO1CLR corresponds to P1.0 Bit 31 in FIO1CLR corresponds to P1.31.	0x0000 0000

Aside from the 32-bit long and word only accessible FIOCLR register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 9-118. Next to providing the same functions as the FIOCLR register, these additional registers allow easier and faster access to the physical port pins.

Table 117. Fast GPIO port 0 output Clear byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0CLR0	8 (byte)	0x3FFF C01C	Fast GPIO Port 0 output Clear register 0. Bit 0 in FIO0CLR0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0CLR1	8 (byte)	0x3FFF C01D	Fast GPIO Port 0 output Clear register 1. Bit 0 in FIO0CLR1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0CLR2	8 (byte)	0x3FFF C01E	Fast GPIO Port 0 output Clear register 2. Bit 0 in FIO0CLR2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0CLR3	8 (byte)	0x3FFF C01F	Fast GPIO Port 0 output Clear register 3. Bit 0 in FIO0CLR3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0CLRL	16 (half-word)	0x3FFF C01C	Fast GPIO Port 0 output Clear Lower half-word register. Bit 0 in FIO0CLRL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0CLRU	16 (half-word)	0x3FFF C01E	Fast GPIO Port 0 output Clear Upper half-word register. Bit 0 in FIO0SETU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Table 118. Fast GPIO port 1 output Clear byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1CLR0	8 (byte)	0x3FFF C03C	Fast GPIO Port 1 output Clear register 0. Bit 0 in FIO1CLR0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1CLR1	8 (byte)	0x3FFF C03D	Fast GPIO Port 1 output Clear register 1. Bit 0 in FIO1CLR1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1CLR2	8 (byte)	0x3FFF C03E	Fast GPIO Port 1 output Clear register 2. Bit 0 in FIO1CLR2 register corresponds to P1.16 bit 7 to P1.23.	0x00

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 118. Fast GPIO port 1 output Clear byte and half-word accessible register description	Table 118.	Fast GPIO port	1 output Clear b	vte and half-word	accessible register	description
---	-------------------	----------------	------------------	-------------------	---------------------	-------------

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1CLR3	8 (byte)	0x3FFF C03F	Fast GPIO Port 1 output Clear register 3. Bit 0 in FIO1CLR3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1CLRL	16 (half-word)	0x3FFF C03C	Fast GPIO Port 1 output Clear Lower half-word register. Bit 0 in FIO1CLRL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1CLRU	16 (half-word)	0x3FFF C03E	Fast GPIO Port 1 output Clear Upper half-word register. Bit 0 in FIO1CLRU register corresponds to P1.16 bit 15 to P1.31.	0x0000

5.4 GPIO port Pin value register IOPIN (IO0PIN - 0xE002 8000, IO1PIN - 0xE002 8010, IO2PIN - 0xE002 8020, IO3PIN - 0xE002 8030, FIO0PIN - 0x3FFF C014, FIO1PIN - 0x3FFF C034)

This register provides the value of port pins that are configured to perform only digital functions. The register will give the logic value of the pin regardless of whether the pin is configured for input or output, or as GPIO or an alternate digital function. As an example, a particular port pin may have GPIO input, GPIO output, UART receive, and PWM output as selectable functions. Any configuration of that pin will allow its current logic state to be read from the corresponding IOPIN register.

If a pin has an analog function as one of its options, the pin state cannot be read if the analog configuration is selected. Selecting the pin as an A/D input disconnects the digital features of the pin. In that case, the pin value read in the IOPIN register is not valid.

Writing to the IOPIN register stores the value in the port output register, bypassing the need to use both the IOSET and IOCLR registers to obtain the entire written value. This feature should be used carefully in an application since it affects the entire port.

Legacy registers are the IOOPIN, IO1PIN, IO2PIN and IO3PIN while the enhanced GPIOs are supported via the FIO0PIN and FIO1PIN registers. Access to a port pins via the FIOPIN register is conditioned by the corresponding FIOMASK register (see Section 9–5.5 "Fast GPIO port Mask register FIOMASK(FIO0MASK - 0x3FFF C010, FIO1MASK - 0x3FFF C030)").

Only pins masked with zeros in the Mask register (see <u>Section 9–5.5 "Fast GPIO port Mask register FIOMASK(FIO0MASK - 0x3FFF C010, FIO1MASK - 0x3FFF C030)"</u>) will be correlated to the current content of the Fast GPIO port pin value register.

Table 119. GPIO port 0 Pin value register (IO0PIN - address 0xE002 8000) bit description

Bit	Symbol	Description	Reset value
31:0	P0xVAL	Slow GPIO pin value bits. Bit 0 in IO0PIN corresponds to P0.0 \dots Bit 31 in IO0PIN corresponds to P0.31.	NA

Table 120. GPIO port 1 Pin value register (IO1PIN - address 0xE002 8010) bit description

Bit	Symbol	Description	Reset value
31:0	P1xVAL	Slow GPIO pin value bits. Bit 0 in IO1PIN corresponds to P1.0 Bit 31 in IO1PIN corresponds to P1.31.	NA

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 121. GPIO port 2 Pin value register (IO2PIN - address 0xE002 8020) bit description

Bit	Symbol	Description	Reset value
31:0	P2xVAL	Slow GPIO pin value bits. Bit 0 in IO2PIN corresponds to P1.0 Bit 31 in IO2PIN corresponds to P2.31.	NA

Table 122. GPIO port 3 Pin value register (IO3PIN - address 0xE002 8030) bit description

Bit	Symbol	Description	Reset value
31:0	P3xVAL	Slow GPIO pin value bits. Bit 0 in IO3PIN corresponds to P3.0 Bit 31 in IO3PIN corresponds to P3.31.	NA

Table 123. Fast GPIO port 0 Pin value register (FIO0PIN - address 0x3FFF C014) bit description

Bit	Symbol	Description	Reset value
31:0	FP0xVAL	Fast GPIO pin value bits. Bit 0 in FIO0PIN corresponds to P0.0 \dots Bit 31 in FIO0PIN corresponds to P0.31.	NA

Table 124. Fast GPIO port 1 Pin value register (FIO1PIN - address 0x3FFF C034) bit description

Bit	Symbol	Description	Reset value
31:0	FP1xVAL	Fast GPIO pin value bits. Bit 0 in FIO1PIN corresponds to P1.0 Bit 31 in FIO1PIN corresponds to P1.31.	NA

Aside from the 32-bit long and word only accessible FIOPIN register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 9-125 and Table 9-126. Next to providing the same functions as the FIOPIN register, these additional registers allow easier and faster access to the physical port pins.

Table 125. Fast GPIO port 0 Pin value byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0PIN0	8 (byte)	0x3FFF C014	Fast GPIO Port 0 Pin value register 0. Bit 0 in FIO0PIN0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0PIN1	8 (byte)	0x3FFF C015	Fast GPIO Port 0 Pin value register 1. Bit 0 in FIO0PIN1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0PIN2	8 (byte)	0x3FFF C016	Fast GPIO Port 0 Pin value register 2. Bit 0 in FIO0PIN2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0PIN3	8 (byte)	0x3FFF C017	Fast GPIO Port 0 Pin value register 3. Bit 0 in FIO0PIN3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0PINL	16 (half-word)	0x3FFF C014	Fast GPIO Port 0 Pin value Lower half-word register. Bit 0 in FIO0PINL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0PINU	16 (half-word)	0x3FFF C016	Fast GPIO Port 0 Pin value Upper half-word register. Bit 0 in FIO0PINU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Table 126. Fast GPIO port 1 Pin value byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1PIN0	8 (byte)	0x3FFF C034	Fast GPIO Port 1 Pin value register 0. Bit 0 in FIO1PIN0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1PIN1	8 (byte)	0x3FFF C035	Fast GPIO Port 1 Pin value register 1. Bit 0 in FIO1PIN1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1PIN2	8 (byte)	0x3FFF C036	Fast GPIO Port 1 Pin value register 2. Bit 0 in FIO1PIN2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1PIN3	8 (byte)	0x3FFF C037	Fast GPIO Port 1 Pin value register 3. Bit 0 in FIO1PIN3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1PINL	16 (half-word)	0x3FFF C034	Fast GPIO Port 1 Pin value Lower half-word register. Bit 0 in FIO1PINL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1PINU	16 (half-word)	0x3FFF C036	Fast GPIO Port 1 Pin value Upper half-word register. Bit 0 in FIO1PINU register corresponds to P1.16 bit 15 to P1.31.	0x0000

5.5 Fast GPIO port Mask register FIOMASK(FIO0MASK - 0x3FFF C010, FIO1MASK - 0x3FFF C030)

This register is available in the enhanced group of registers only. It is used to select the port pins that will and will not be affected by a write accesses to the FIOPIN, FIOSET or FIOSLR register. The mask register also filters the port's content when the FIOPIN register is read.

A zero in this register's bit enables an access to the corresponding physical pin via a read or write access. If a bit in this register is one, the corresponding pin will not be changed with write access and if read, will not be reflected in the updated FIOPIN register. For software examples, see Section 9–6 "GPIO usage notes" on page 125

Table 127. Fast GPIO port 0 Mask register (FIO0MASK - address 0x3FFF C010) bit description

Bit	Symbol	Value	Description	Reset value
31:0 FP0xMASK Fast GPIO			Fast GPIO physical pin access control.	0x0000 0000
		Pin is affected by writes to the FIOSET, FIOCLR, and FIOPIN registers. Current state of the pin will be observable in the FIOPIN register.		
		1	Physical pin is unaffected by writes into the FIOSET, FIOCLR and FIOPIN registers. When the FIOPIN register is read, this bit will not be updated with the state of the physical pin.	

Table 128. Fast GPIO port 1 Mask register (FIO1MASK - address 0x3FFF C030) bit description

Bit	Symbol	Value	Description	Reset value
31:0 FP1xMASK			Fast GPIO physical pin access control.	0x0000 0000
		0	Pin is affected by writes to the FIOSET, FIOCLR, and FIOPIN registers. Current state of the pin will be observable in the FIOPIN register.	
		1	Physical pin is unaffected by writes into the FIOSET, FIOCLR and FIOPIN registers. When the FIOPIN register is read, this bit will not be updated with the state of the physical pin.	

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

Aside from the 32-bit long and word only accessible FIOMASK register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 9–129 and Table 9–130. Next to providing the same functions as the FIOMASK register, these additional registers allow easier and faster access to the physical port pins.

Table 129. Fast GPIO port 0 Mask byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0MASK0	8 (byte)	0x3FFF C010	Fast GPIO Port 0 Mask register 0. Bit 0 in FIO0MASK0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0MASK1	8 (byte)	0x3FFF C011	Fast GPIO Port 0 Mask register 1. Bit 0 in FIO0MASK1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0MASK2	8 (byte)	0x3FFF C012	Fast GPIO Port 0 Mask register 2. Bit 0 in FIO0MASK2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0MASK3	8 (byte)	0x3FFF C013	Fast GPIO Port 0 Mask register 3. Bit 0 in FIO0MASK3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0MASKL	16 (half-word)	0x3FFF C010	Fast GPIO Port 0 Mask Lower half-word register. Bit 0 in FIO0MASKL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0MASKU	16 (half-word)	0x3FFF C012	Fast GPIO Port 0 Mask Upper half-word register. Bit 0 in FIO0MASKU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Table 130. Fast GPIO port 1 Mask byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1MASK0	8 (byte)	0x3FFF C010	Fast GPIO Port 1 Mask register 0. Bit 0 in FIO1MASK0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1MASK1	8 (byte)	0x3FFF C011	Fast GPIO Port 1 Mask register 1. Bit 0 in FIO1MASK1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1MASK2	8 (byte)	0x3FFF C012	Fast GPIO Port 1 Mask register 2. Bit 0 in FIO1MASK2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1MASK3	8 (byte)	0x3FFF C013	Fast GPIO Port 1 Mask register 3. Bit 0 in FIO1MASK3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1MASKL	16 (half-word)	0x3FFF C010	Fast GPIO Port 1 Mask Lower half-word register. Bit 0 in FIO1MASKL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1MASKU	16 (half-word)	0x3FFF C012	Fast GPIO Port 1 Mask Upper half-word register. Bit 0 in FIO1MASKU register corresponds to P1.16 bit 15 to P1.31.	0x0000

6. GPIO usage notes

6.1 Example 1: sequential accesses to IOSET and IOCLR affecting the same GPIO pin/bit

The state of a GPIO pin configured as output is determined by writes into the pin's port IOSET and IOCLR registers. The last access to the IOSET/IOCLR register will determine the final output of the pin.

In the following code example

IOODIR = 0x0000 0080 ;pin P0.7 configured as output

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

```
IOOCLR = 0x0000 0080 ; P0.7 goes LOW

IOOSET = 0x0000 0080 ; P0.7 goes HIGH

IOOCLR = 0x0000 0080 ; P0.7 goes LOW
```

pin P0.7 is configured as an output pin (write to IO0DIR register). Then, the P0.7 output pin is set to low (first write to IO0CLR register). A short high pulse follows on P0.7 (write access to IO0SET), and the second write to IO0CLR register sets pin P0.7 back to low level.

6.2 Example 2: an immediate output of 0s and 1s on a GPIO port

Writing 1's to the port's IOSET register (setting port output to HIGH) followed by writing 1's to the IOCLR register (setting port output to LOW) causes a slight delay between the HIGH and LOW output at the port's pins.

There are systems that can tolerate this delay of a valid output, but for some applications simultaneous output of a binary content (mixed 0s and 1s) within a group of pins on a single GPIO port is required. This can be accomplished by writing to the port's IOPIN register.

The following code will preserve existing output on PORT0 pins P0.[31:16] and P0.[7:0] and at the same time set P0.[15:8] to 0xA5, regardless of the previous value of pins P0.[15:8]:

```
IOOPIN = (IOOPIN && 0xFFFF00FF) || 0x0000A500
```

The same outcome can be obtained using the fast port access.

Solution 1: using 32-bit (word) accessible fast GPIO registers

```
FIOOMASK = 0xFFFF00FF;
FIOOPIN = 0x0000A500;
```

Solution 2: using 16-bit (half-word) accessible fast GPIO registers

```
FIOOMASKL = 0 \times 00FF;
FIOOPINL = 0 \times A500;
```

Solution 3: using 8-bit (byte) accessible fast GPIO registers

```
FIOOPIN1 = 0xA5;
```

6.3 Writing to IOSET/IOCLR .vs. IOPIN

Writing to the IOSET/IOCLR register allows easy change of the port's selected output pin(s) to high/low level. Only pin/bit(s) in the IOSET/IOCLR written as 1 will be set to high/low level, while those written as 0 will remain unaffected. However, by just writing to either IOSET or IOCLR register it is not possible to instantaneously output arbitrary binary data containing mixture of 0s and 1s on a GPIO port.

Writing to the IOPIN register enables instantaneous output of a desired content on the parallel GPIO. Binary data written into the IOPIN register will affect all output configured pins of that parallel port: 0s in the IOPIN will produce low level pin outputs and 1s in IOPIN will produce high level pin outputs. In order to change output of only a group of port's pins, the application must logically AND readout from the IOPIN with a mask. This mask must

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

contain 0s in bits corresponding to pins that will be changed, and 1s for all others. Finally, this result has to be logically ORred with the desired content and stored back into the IOPIN register. Example 2 from above illustrates output of 0xA5 on PORT0 pins 15 to 8 while leaving all other PORT0 output pins unchanged.

6.4 Output signal frequency considerations when using the legacy and enhanced GPIO registers

The enhanced features of fast GPIO ports available on this microcontroller make the performance of the GPIO pins more dependent on the details of the application code. In particular, software access to a GPIO pin is 3.5 times faster through the fast GPIO registers than through the legacy set of registers. As a result, the maximum output frequency of the digital pin is increased 3.5 times if the fast GPIO registers are used. This tremendous increase of the output frequency is less noticeable when plain C code is used. The portion of an application handling the fast port output should be written in assembly code and executed in the ARM mode to take full advantage of the fast GPIO access.

The following is a code example in which the pin control section is written in assembly language for ARM. It illustrates the difference between the fast and slow GPIO port output capabilities. For the best performances, compile this code in the ARM mode and execute from the on-chip SRAM memory.

```
ldr r0,=0xe01fc1a0 /*register address--enable fast port*/
     mov r1, #0x1
     str r1,[r0]
                        /*enable fast port0*/
     ldr r1,=0xffffffff
     ldr r0,=0x3fffc000 /*direction of fast port0*/
     str r1,[r0]
     ldr r0,=0xe0028018 /*direction of slow port 1*/
     str r1,[r0]
     ldr r0,=0x3fffc018 /*FIO0SET -- fast port0 register*/
     ldr r1,=0x3fffc01c /*FIOOCLR0 -- fast port0 register*/
     1dr r2,=0x00001000 /*select fast port 0.12 for toggle*/
     ldr r3,=0xE0028014 /*I01SET -- slow port1 register*/
     ldr r4,=0xE002801C /*IO1CLR -- slow port1 register*/
     ldr r5,=0x00100000 /*select slow port 1.20 for toggle*/
     /*Generate 2 pulses on the fast port*/
     str r2,[r0]
     str r2,[r1]
     str r2, [r0]
     str r2, [r1]
     /*Generate 2 pulses on the slow port*/
     str r5, [r3]
     str r5, [r4]
     str r5, [r3]
     str r5, [r4]
          loop
loop:b
```

Figure 9–24 illustrates the code from above executed from the LPC21xx/LPC22xx on-chip SRAM. The PLL generated F_{CCLK} =60 MHz out of external F_{OSC} = 12 MHz and VPBDIV = 1 (PCLK = CCLK).

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controller

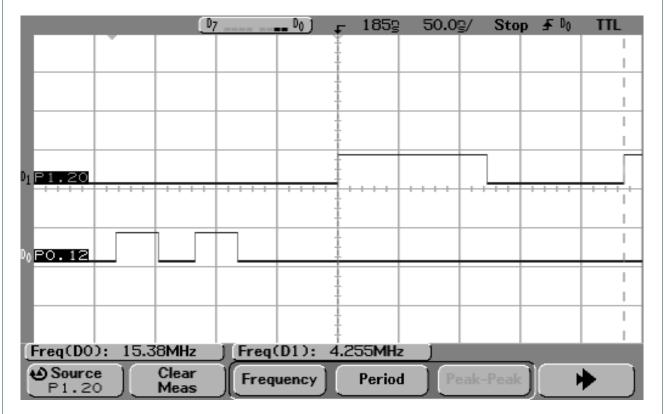


Fig 24. Illustration of the fast and slow GPIO access and output showing 3.5 x increase of the pin output frequency

UM10114

Chapter 10: LPC21xx/22xx Universal Asynchronous Receiver/Transmitter 0 (UART0)

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The following features on the LPC21xx and LPC22xx are available in parts with enhanced features only:

- Fractional baud rate controller
- Auto-baud control
- Software flow control

Therefore, the registers controlling enhanced features are available only for /01 parts and LPC2220 (see <u>Table 10–131</u>).

The baud rate is determined by the register values U0DLL and U0DLM. Enhanced parts also include a fractional baud rate generator for fine-tuning the baud rate. The fractional baud rate settings are determined by the content of the U0FDR register.

Table 131. LPC21xx/22xx part-specific registers

Part	Part Baud rate			Auto-bau	ıd control		Software flow control	
	Section	10-4.3	<u>Section</u> 10–4.4	Section 10-4.11	<u>Section 10–4.5</u>	<u>Section 10–4.6</u>	Section 10-4.12	
no suffix and /	00 parts							
LPC2109	U0DLL	U0DLM	-	-	-	-	-	
LPC2119	U0DLL	U0DLM	-	-	-	-	-	
LPC2129	U0DLL	U0DLM	-	-	-	-	-	
LPC2114	U0DLL	U0DLM	-	-	-	-	-	
LPC2124	U0DLL	U0DLM	-	-	-	-	-	
LPC2194	U0DLL	U0DLM	-	-	-	-	-	
LPC2210	U0DLL	U0DLM	-	-	-	-	-	
LPC2220	U0DLL	U0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER	
LPC2212	U0DLL	U0DLM	-	-	-	-	-	
LPC2214	U0DLL	U0DLM	-	-	-	-	-	
LPC2290	U0DLL	U0DLM	-	-	-	-	-	
LPC2292	U0DLL	U0DLM	-	-	-	-	-	
LPC2294	U0DLL	U0DLM	-	-	-	-	-	
/01 parts								
LPC2109	U0DLL	U0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER	
LPC2119	U0DLL	U0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER	
LPC2129	U0DLL	U0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER	
LPC2114	U0DLL	U0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER	
LPC2124	U0DLL	U0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER	
LPC2194	U0DLL	U0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER	
LPC2210	U0DLL	U0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER	

Chapter 10: LPC21xx/22xx Universal Asynchronous

Table 131. LPC21xx/22xx part-specific registers

Part	Baud rate	Baud rate			ıd control	Software flow control	
	Section 10	<u>)–4.3</u>	Section 10-4.4	Section 10-4.11	Section 10–4.5	<u>Section 10–4.6</u>	Section 10-4.12
LPC2212	U0DLL U	JODLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER
LPC2214	U0DLL U	J0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER
LPC2290	U0DLL U	J0DLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER
LPC2292	U0DLL U	JODLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER
LPC2294	U0DLL U	JODLM	U0FDR	U0ACR	U0IER, bits 9:8	U0IIR, bits 9:8	U0TER

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- 16 byte Receive and Transmit FIFOs
- Register locations conforming to '550 industry standard
- Receiver FIFO trigger points at 1, 4, 8, and 14 bytes
- Built-in fractional baud rate generator with autobauding capabilities.
- Mechanism that enables software and hardware flow control implementation

3. Pin description

Table 132: UART0 pin description

Pin	Туре	Description
RXD0	Input	Serial Input. Serial receive data.
TXD0	Output	Serial Output. Serial transmit data.

4. Register description

UART0 contains registers organized as shown in <u>Table 10–133</u>. The Divisor Latch Access Bit (DLAB) is contained in U0LCR[7] and enables access to the Divisor Latches.

The divisor latches are used to determine the baud rate for all UART transfers. When setting up the part, follow these steps:

- 1. Set DLAB = 1 in U0LCR (Section 10-4.8).
- Set baud rate by writing values to registers DLL and DLM at address 0xE000 C000 Section 10-4.3).
- 3. Set DLAB = 0 in U0LCR (Section 10-4.8).
- 4. Read at address 0xE000 C000 accesses the U0RBR register (Section 10-4.1).
- 5. Write at address 0xE000 C000 accesses the U0THR register (Section 10-4.2).

Table	133.	UARTO	register	map
-------	------	--------------	----------	-----

Name	Description	Bit function	ons and ad	ldresses						Access	Reset value[1]	Address
		MSB							LSB			
	'	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
U0RBR	Receiver Buffer Register				8-bit Rea	ad Data				RO	NA	0xE000 C000 (DLAB=0)
U0THR	Transmit Holding Register				8-bit Wri	te Data				WO	NA	0xE000 C000 (DLAB=0)
U0DLL	Divisor Latch LSB				8-bit	Data				R/W	0x01	0xE000 C000 (DLAB=1)
U0DLM	Divisor Latch MSB				8-bit	Data				R/W	0x00	0xE000 C004 (DLAB=1)
U0IER	Interrupt Enable Register	-	-	-	-	-	-	En.ABTO	En.ABEO	R/W	0x00	0xE000 C004
		-	-	-	-	-	En.RX Lin.St.Int	Enable THRE Int	En.RX Dat.Av.In t			(DLAB=0)
U0IIR	Interrupt ID Reg.	-	-	-	-	-	-	ABTO Int	ABEO Int	RO	0x01	0xE000 C008
		FIFOs E	Enabled	-	-	IIR3	IIR2	IIR1	IIR0			
U0FCR	FIFO Control Register	RX Tı	igger	-	-	-	TX FIFO Reset	RX FIFO Reset	FIFO Enable	WO	0x00	0xE000 C008
U0LCR	Line Control Register	DLAB	Set Break	Stick Parity	Even Par.Selct.	Parity Enable	No. of Stop Bits	Word Len	gth Select	R/W	0x00	0xE000 C00C
U0LSR	Line Status Register	RX FIFO Error	TEMT	THRE	BI	FE	PE	OE	DR	RO	0x60	0xE000 C014
U0SCR	Scratch Pad Reg.				8-bit	Data				R/W	0x00	0xE000 C01C
U0ACR	Auto-baud Control Register	-	-	-	-	-	-	ABTO Int.Clr	ABEO Int.Clr	R/W	0x00	0xE000 C020
		-	-	-	-	-	Aut.Rstrt.	Mode	Start			
U0FDR	Fractional Divider Register		Mu	IVal	Reserve	ed[31:8]	DivA	ddVal			0x10	0xE000 C028
U0TER	TX. Enable Reg.	TXEN	_	-				<u>-</u>	-	R/W	0x80	0xE000 C030

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 10: LPC21xx/22xx Universal Asynchronous

4.1 UART0 Receiver Buffer register (U0RBR - 0xE000 C000, when DLAB = 0, Read Only)

The U0RBR is the top byte of the UART0 Rx FIFO. The top byte of the Rx FIFO contains the oldest character received and can be read via the bus interface. The LSB (bit 0) represents the "oldest" received data bit. If the character received is less than 8 bits, the unused MSBs are padded with zeroes.

The Divisor Latch Access Bit (DLAB) in U0LCR must be zero in order to access the U0RBR. The U0RBR is always Read Only.

Since PE, FE and BI bits correspond to the byte sitting on the top of the RBR FIFO (i.e. the one that will be read in the next read from the RBR), the right approach for fetching the valid pair of received byte and its status bits is first to read the content of the U0LSR register, and then to read a byte from the U0RBR.

Table 134: UART0 Receiver Buffer Register (U0RBR - address 0xE000 C000, when DLAB = 0, Read Only) bit description

Bit	Symbol	Description	Reset value
7:0	RBR	The UART0 Receiver Buffer Register contains the oldest received byte in the UART0 Rx FIFO.	undefined

4.2 UARTO Transmit Holding Register (U0THR - 0xE000 C000, when DLAB = 0, Write Only)

The U0THR is the top byte of the UART0 TX FIFO. The top byte is the newest character in the TX FIFO and can be written via the bus interface. The LSB represents the first bit to transmit.

The Divisor Latch Access Bit (DLAB) in U0LCR must be zero in order to access the U0THR. The U0THR is always Write Only.

Table 135: UART0 Transmit Holding Register (U0THR - address 0xE000 C000, when DLAB = 0, Write Only) bit description

Bit	Symbol	Description	Reset value
7:0	THR	Writing to the UART0 Transmit Holding Register causes the data to be stored in the UART0 transmit FIFO. The byte will be sent when it reaches the bottom of the FIFO and the transmitter is available.	NA

4.3 UARTO Divisor Latch registers (U0DLL - 0xE000 C000 and U0DLM - 0xE000 C004, when DLAB = 1)

The UART0 Divisor Latch is part of the UART0 Baud Rate Generator and holds the value used to divide the clock in order to produce the baud rate clock, which must be 16x the desired baud rate (Equation 10–1). The U0DLL and U0DLM registers together form a 16 bit divisor where U0DLL contains the lower 8 bits of the divisor and U0DLM contains the higher 8 bits of the divisor. A 0x0000 value is treated like a 0x0001 value as division by zero is not allowed. The Divisor Latch Access Bit (DLAB) in U0LCR must be one in order to access the UART0 Divisor Latches.

Chapter 10: LPC21xx/22xx Universal Asynchronous

(1)

$$UARTn_{baudrate} = \frac{PCLK}{16 \times (256 \times UnDLM + UnDLL)}$$

Details on how to select the right value for U0DLL and U0DLM if the part includes a fractional divider (see Table 10–131) can be found later on in this chapter.

Table 136: UART0 Divisor Latch LSB register (U0DLL - address 0xE000 C000, when DLAB = 1) bit description

Bit	Symbol	Description	Reset value
7:0	DLL	The UART0 Divisor Latch LSB Register, along with the U0DLM register, determines the baud rate of the UART0.	0x01

Table 137: UART0 Divisor Latch MSB register (U0DLM - address 0xE000 C004, when DLAB = 1) bit description

Bit	Symbol	Description	Reset value
7:0	DLM	The UART0 Divisor Latch MSB Register, along with the U0DLL register, determines the baud rate of the UART0.	0x00

4.4 UART0 Fractional Divider Register (U0FDR - 0xE000 C028)

The UART0 Fractional Divider Register (U0FDR) controls the clock pre-scaler for the baud rate generation and can be read and written at the user's discretion. This pre-scaler takes the APB clock and generates an output clock according to the specified fractional requirements.

Important: If the fractional divider is active (DIVADDVAL > 0) and DLM = 0, the value of the DLL register must be 2 or greater.

Table 138: UARTn Fractional Divider Register (U0FDR - address 0xE000 C028, U2FDR - 0xE007 8028, U3FDR - 0xE007 C028) bit description

Bit	Function	Value	Description	Reset value
3:0	DIVADDVAL	0	Baud-rate generation pre-scaler divisor value. If this field is 0, fractional baud-rate generator will not impact the UARTn baudrate.	0
7:4	MULVAL	1	Baud-rate pre-scaler multiplier value. This field must be greater or equal 1 for UARTn to operate properly, regardless of whether the fractional baud-rate generator is used or not.	1
31:8	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

This register controls the clock pre-scaler for the baud rate generation. The reset value of the register keeps the fractional capabilities of UART0 disabled making sure that UART0 is fully software and hardware compatible with UARTs not equipped with this feature.

The UART0 baudrate can be calculated as (n = 0):

Chapter 10: LPC21xx/22xx Universal Asynchronous

(2)

$$UARTn_{baudrate} = \frac{PCLK}{16 \times (256 \times UnDLM + UnDLL) \times \left(1 + \frac{DivAddVal}{MulVal}\right)}$$

Where PCLK is the peripheral clock, U0DLM and U0DLL are the standard UART0 baud rate divider registers, and DIVADDVAL and MULVAL are UART0 fractional baudrate generator specific parameters.

The value of MULVAL and DIVADDVAL should comply to the following conditions:

- 1. 0 < MULVAL ≤ 15
- 2. $0 \le DIVADDVAL < 15$
- 3. DIVADDVAL<MULVAL


The value of the U0FDR should not be modified while transmitting/receiving data or data may be lost or corrupted.

If the U0FDR register value does not comply to these two requests, then the fractional divider output is undefined. If DIVADDVAL is zero then the fractional divider is disabled, and the clock will not be divided.

4.4.1 Baudrate calculation

UART can operate with or without using the Fractional Divider. In real-life applications it is likely that the desired baudrate can be achieved using several different Fractional Divider settings. The following algorithm illustrates one way of finding a set of DLM, DLL, MULVAL, and DIVADDVAL values. Such set of parameters yields a baudrate with a relative error of less than 1.1% from the desired one.

Chapter 10: LPC21xx/22xx Universal Asynchronous

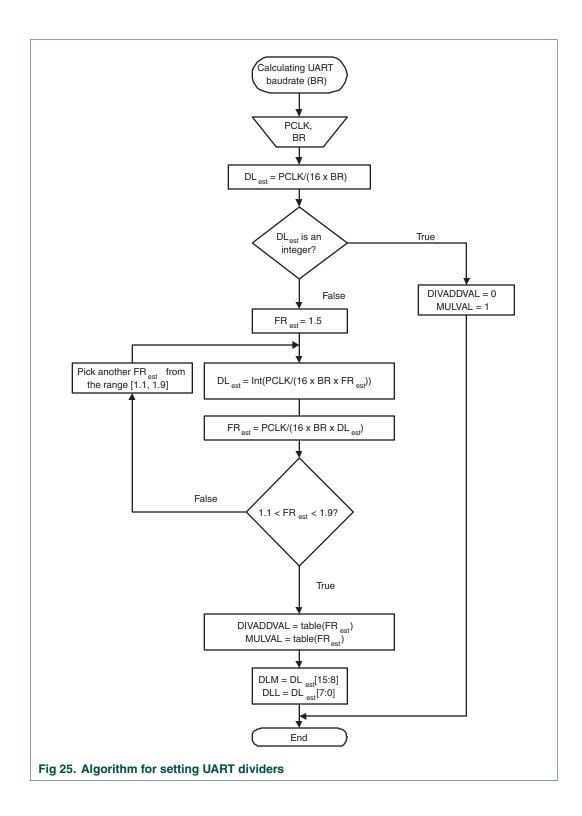

Chapter 10: LPC21xx/22xx Universal Asynchronous

FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal
1.000	0/1	1.250	1/4	1.500	1/2	1.750	3/4
1.067	1/15	1.267	4/15	1.533	8/15	1.769	10/13
1.071	1/14	1.273	3/11	1.538	7/13	1.778	7/9
1.077	1/13	1.286	2/7	1.545	6/11	1.786	11/14
1.083	1/12	1.300	3/10	1.556	5/9	1.800	4/5
1.091	1/11	1.308	4/13	1.571	4/7	1.818	9/11
1.100	1/10	1.333	1/3	1.583	7/12	1.833	5/6
1.111	1/9	1.357	5/14	1.600	3/5	1.846	11/13
1.125	1/8	1.364	4/11	1.615	8/13	1.857	6/7
1.133	2/15	1.375	3/8	1.625	5/8	1.867	13/15
1.143	1/7	1.385	5/13	1.636	7/11	1.875	7/8
1.154	2/13	1.400	2/5	1.643	9/14	1.889	8/9
1.167	1/6	1.417	5/12	1.667	2/3	1.900	9/10
1.182	2/11	1.429	3/7	1.692	9/13	1.909	10/11
1.200	1/5	1.444	4/9	1.700	7/10	1.917	11/12
1.214	3/14	1.455	5/11	1.714	5/7	1.923	12/13
1.222	2/9	1.462	6/13	1.727	8/11	1.929	13/14
1.231	3/13	1.467	7/15	1.733	11/15	1.933	14/15

Table 139. Fractional Divider setting look-up table

4.4.1.1 Example 1: PCLK = 14.7456 MHz, BR = 9600

According to the the provided algorithm $DL_{est} = PCLK/(16 \text{ x BR}) = 14.7456 \text{ MHz}$ / (16 x 9600) = 96. Since this DL_{est} is an integer number, DIVADDVAL = 0, MULVAL = 1, DLM = 0, and DLL = 96.

4.4.1.2 Example 2: PCLK = 12 MHz, BR = 115200

According to the the provided algorithm $DL_{est} = PCLK/(16 \text{ x BR}) = 12 \text{ MHz} / (16 \text{ x } 115200) = 6.51$. This DL_{est} is not an integer number and the next step is to estimate the FR parameter. Using an initial estimate of $FR_{est} = 1.5$ a new $DL_{est} = 4$ is calculated and FR_{est} is recalculated as $FR_{est} = 1.628$. Since FRest = 1.628 is within the specified range of 1.1 and 1.9, DIVADDVAL and MULVAL values can be obtained from the attached look-up table.

The closest value for FRest = 1.628 in the look-up $\underline{\text{Table } 10-139}$ is FR = 1.625. It is equivalent to DIVADDVAL = 5 and MULVAL = 8.

Based on these findings, the suggested UART setup would be: DLM = 0, DLL = 4, DIVADDVAL = 5, and MULVAL = 8. According to Equation 10–2 the UART's baud rate is 115384. This rate has a relative error of 0.16% from the originally specified 115200.

4.5 UARTO Interrupt Enable Register (U0IER - 0xE000 C004, when DLAB = 0)

The U0IER is used to enable UART0 interrupt sources.

Chapter 10: LPC21xx/22xx Universal Asynchronous

Table 140. UART0 Interrupt Enable Register (U0IER - address 0xE000 C004, when DLAB = 0) bit description

Bit	Symbol	Value	Description	Reset value		
0	RBR Interrupt Enable		U0IER[0] enables the Receive Data Available interrupt for UART0. It also controls the Character Receive Time-out interrupt.	0		
		0	Disable the RDA interrupts.			
		1	Enable the RDA interrupts.			
1	THRE Interrupt		U0IER[1] enables the THRE interrupt for UART0. The status of this can be read from U0LSR[5].	0		
	Enable	0	Disable the THRE interrupts.			
		1	Enable the THRE interrupts.			
2	RX Line Status	Status	Status		U0IER[2] enables the UART0 RX line status interrupts. The status of this interrupt can be read from U0LSR[4:1].	0
	Interrupt Enable	0	Disable the RX line status interrupts.			
	Ellable	1	Enable the RX line status interrupts.			
7:3	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		
8	ABEOIntEn		Enables the end of auto-baud interrupt.	0		
		0	Disable End of Auto-baud Interrupt.			
		1	Enable End of Auto-baud Interrupt.			
9	ABTOIntEn		Enables the auto-baud time-out interrupt.	0		
		0	Disable Auto-baud Time-out Interrupt.			
		1	Enable Auto-baud Time-out Interrupt.			
31:10	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		

4.6 UART0 Interrupt Identification Register (U0IIR - 0xE000 C008, Read Only)

The U0IIR provides a status code that denotes the priority and source of a pending interrupt. The interrupts are frozen during an U0IIR access. If an interrupt occurs during an U0IIR access, the interrupt is recorded for the next U0IIR access.

Table 141: UART0 Interrupt Identification Register (U0IIR - address 0xE000 C008, read only) bit description

Bit	Symbol	Value	Description	Reset value
0	Interrupt Pending		Note that U0IIR[0] is active LOW. The pending interrupt can be determined by evaluating U0IIR[3:1].	1
		0	At least one interrupt is pending.	
		1	No pending interrupts.	

Chapter 10: LPC21xx/22xx Universal Asynchronous

Table 141: UART0 Interrupt Identification Register (U0IIR - address 0xE000 C008, read only) bit description

Bit	Symbol	Value	Description	Reset value
3:1	Interrupt Identification		U0IER[3:1] identifies an interrupt corresponding to the UART0 Rx FIFO. All other combinations of U0IER[3:1] not listed above are reserved (000,100,101,111).	0
		011	1 - Receive Line Status (RLS).	
		010	2a - Receive Data Available (RDA).	
		110	2b - Character Time-out Indicator (CTI).	
		001	3 - THRE Interrupt	
5:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	FIFO Enable		These bits are equivalent to U0FCR[0].	0
8	ABEOInt		End of auto-baud interrupt. True if auto-baud has finished successfully and interrupt is enabled.	0
9	ABTOInt		Auto-baud time-out interrupt. True if auto-baud has timed out and interrupt is enabled.	0
31:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Interrupts are handled as described in <u>Table 10–142</u>. Given the status of U0IIR[3:0], an interrupt handler routine can determine the cause of the interrupt and how to clear the active interrupt. The U0IIR must be read in order to clear the interrupt prior to exiting the Interrupt Service Routine.

The UART0 RLS interrupt (U0IIR[3:1] = 011) is the highest priority interrupt and is set whenever any one of four error conditions occur on the UART0 Rx input: overrun error (OE), parity error (PE), framing error (FE) and break interrupt (BI). The UART0 Rx error condition that set the interrupt can be observed via U0LSR[4:1]. The interrupt is cleared upon an U0LSR read.

The UART0 RDA interrupt (U0IIR[3:1] = 010) shares the second level priority with the CTI interrupt (U0IIR[3:1] = 110). The RDA is activated when the UART0 Rx FIFO reaches the trigger level defined in U0FCR[7:6] and is reset when the UART0 Rx FIFO depth falls below the trigger level. When the RDA interrupt goes active, the CPU can read a block of data defined by the trigger level.

The CTI interrupt (U0IIR[3:1] = 110) is a second level interrupt and is set when the UARTO Rx FIFO contains at least one character and no UARTO Rx FIFO activity has occurred in 3.5 to 4.5 character times. Any UARTO Rx FIFO activity (read or write of UARTO RSR) will clear the interrupt. This interrupt is intended to flush the UARTO RBR after a message has been received that is not a multiple of the trigger level size. For example, if a peripheral wished to send a 105 character message and the trigger level was 10 characters, the CPU would receive 10 RDA interrupts resulting in the transfer of 100 characters and 1 to 5 CTI interrupts (depending on the service routine) resulting in the transfer of the remaining 5 characters.

Chapter 10: LPC21xx/22xx Universal Asynchronous

Table 142: UART0 interrupt handling

U0IIR[3:0] value[1]	Priority	Interrupt Type	Interrupt Source	Interrupt Reset
0001	-	None	None	-
0110	Highest	RX Line Status / Error	OE ^[2] or PE ^[2] or BI ^[2]	U0LSR Read[2]
0100	Second	RX Data Available	Rx data available or trigger level reached in FIFO (U0FCR0=1)	U0RBR Read ^[3] or UART0 FIFO drops below trigger level
1100	Second	Character Time-out indication	Minimum of one character in the Rx FIFO and no character input or removed during a time period depending on how many characters are in FIFO and what the trigger level is set at (3.5 to 4.5 character times).	U0RBR Read ^[3]
			The exact time will be:	
			[(word length) \times 7 $-$ 2] \times 8 + [(trigger level $-$ number of characters) \times 8 + 1] RCLKs	
0010	Third	THRE	THRE[2]	U0IIR Read (if source of interrupt) or THR write [4]

^[1] Values "0000", "0011", "0101", "0111", "1000", "1010", "1011", "1011", "1111", "1111" are reserved.

The UART0 THRE interrupt (U0IIR[3:1] = 001) is a third level interrupt and is activated when the UART0 THR FIFO is empty provided certain initialization conditions have been met. These initialization conditions are intended to give the UART0 THR FIFO a chance to fill up with data to eliminate many THRE interrupts from occurring at system start-up. The initialization conditions implement a one character delay minus the stop bit whenever THRE=1 and there have not been at least two characters in the U0THR at one time since the last THRE = 1 event. This delay is provided to give the CPU time to write data to U0THR without a THRE interrupt to decode and service. A THRE interrupt is set immediately if the UART0 THR FIFO has held two or more characters at one time and currently, the U0THR is empty. The THRE interrupt is reset when a U0THR write occurs or a read of the U0IIR occurs and the THRE is the highest interrupt (U0IIR[3:1] = 001).

4.7 UARTO FIFO Control Register (U0FCR - 0xE000 C008)

The U0FCR controls the operation of the UART0 Rx and TX FIFOs.

Table 143: UART0 FIFO Control Register (U0FCR - address 0xE000 C008) bit description

Bit	Symbol	Value	Description	Reset value
0	FIFO Enable	0	UART0 FIFOs are disabled. Must not be used in the application.	0
		1	Active HIGH enable for both UART0 Rx and TX FIFOs and U0FCR[7:1] access. This bit must be set for proper UART0 operation. Any transition on this bit will automatically clear the UART0 FIFOs.	

^[2] For details see Section 10-4.9 "UARTO Line Status Register (U0LSR - 0xE000 C014, Read Only)"

^[3] For details see Section 10–4.1 "UARTO Receiver Buffer register (U0RBR - 0xE000 C000, when DLAB = 0, Read Only)"

^[4] For details see Section 10–4.6 "UARTO Interrupt Identification Register (U0IIR - 0xE000 C008, Read Only)" and Section 10–4.2 "UARTO Transmit Holding Register (U0THR - 0xE000 C000, when DLAB = 0, Write Only)"

Chapter 10: LPC21xx/22xx Universal Asynchronous

Table 143: UART0 FIFO Control Register (U0FCR - address 0xE000 C008) bit description

Bit	Symbol	Value	Description	Reset value
1	RX FIFO	0	No impact on either of UART0 FIFOs.	0
	Reset	1	Writing a logic 1 to U0FCR[1] will clear all bytes in UART0 Rx FIFO and reset the pointer logic. This bit is self-clearing.	
2	TX FIFO	0	No impact on either of UART0 FIFOs.	0
	Reset	1	Writing a logic 1 to U0FCR[2] will clear all bytes in UART0 TX FIFO and reset the pointer logic. This bit is self-clearing.	
5:3	-	0	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	RX Trigger Level		These two bits determine how many receiver UART0 FIFO characters must be written before an interrupt is activated.	0
		00	trigger level 0 (1 character or 0x01).	
		01	trigger level 1 (4 characters or 0x04).	
		10	trigger level 2 (8 characters or 0x08).	
		11	trigger level 3 (14 characters or 0x0E).	

4.8 UARTO Line Control Register (U0LCR - 0xE000 C00C)

The U0LCR determines the format of the data character that is to be transmitted or received.

Table 144: UART0 Line Control Register (U0LCR - address 0xE000 C00C) bit description

Bit	Symbol	Value	Description	Reset value
1:0	Word Length	00	5 bit character length	0
	Select	01	6 bit character length	
		10	7 bit character length	
		11	8 bit character length	
2	Stop Bit Select	0	1 stop bit.	0
		1	2 stop bits (1.5 if U0LCR[1:0]=00).	
3	Parity Enable	0	Disable parity generation and checking.	0
		1	Enable parity generation and checking.	
5:4	Parity Select	00	Odd parity. Number of 1s in the transmitted character and the attached parity bit will be odd.	0
		01	Even Parity. Number of 1s in the transmitted character and the attached parity bit will be even.	
		10	Forced "1" stick parity.	
		11	Forced "0" stick parity.	
6	Break Control	0	Disable break transmission.	0
		1	Enable break transmission. Output pin UART0 TXD is forced to logic 0 when U0LCR[6] is active HIGH.	
7	Divisor Latch	0	Disable access to Divisor Latches.	0
	Access Bit (DLAB)	1	Enable access to Divisor Latches.	

Chapter 10: LPC21xx/22xx Universal Asynchronous

4.9 UARTO Line Status Register (U0LSR - 0xE000 C014, Read Only)

The U0LSR is a read-only register that provides status information on the UART0 TX and RX blocks.

Table 145: UART0 Line Status Register (U0LSR - address 0xE000 C014, read only) bit description

Bit	Symbol	Value	Description	Reset value
0	Receiver Data Ready		U0LSR0 is set when the U0RBR holds an unread character and is cleared when the UART0 RBR FIFO is empty.	0
	(RDR)	0	UORBR is empty.	
		1	U0RBR contains valid data.	
1	Overrun Error (OE)		The overrun error condition is set as soon as it occurs. An U0LSR read clears U0LSR1. U0LSR1 is set when UART0 RSR has a new character assembled and the UART0 RBR FIFO is full. In this case, the UART0 RBR FIFO will not be overwritten and the character in the UART0 RSR will be lost.	0
		0	Overrun error status is inactive.	
		1	Overrun error status is active.	
2	Parity Error (PE)		When the parity bit of a received character is in the wrong state, a parity error occurs. An U0LSR read clears U0LSR[2]. Time of parity error detection is dependent on U0FCR[0].	0
			Note: A parity error is associated with the character at the top of the UARTO RBR FIFO.	
		0	Parity error status is inactive.	
		1	Parity error status is active.	
3	Framing Error (FE)		When the stop bit of a received character is a logic 0, a framing error occurs. An U0LSR read clears U0LSR[3]. The time of the framing error detection is dependent on U0FCR0. Upon detection of a framing error, the Rx will attempt to resynchronize to the data and assume that the bad stop bit is actually an early start bit. However, it cannot be assumed that the next received byte will be correct even if there is no Framing Error.	0
			Note: A framing error is associated with the character at the top of the UART0 RBR FIFO.	
		0	Framing error status is inactive.	
		1	Framing error status is active.	
4	Break Interrupt (BI)		When RXD0 is held in the spacing state (all 0's) for one full character transmission (start, data, parity, stop), a break interrupt occurs. Once the break condition has been detected, the receiver goes idle until RXD0 goes to marking state (all 1's). An U0LSR read clears this status bit. The time of break detection is dependent on U0FCR[0].	0
			Note: The break interrupt is associated with the character at the top of the UARTO RBR FIFO.	
		0	Break interrupt status is inactive.	
		1	Break interrupt status is active.	
5	Transmitter Holding		THRE is set immediately upon detection of an empty UART0 THR and is cleared on a U0THR write.	1
	Register Empty (THRE))	0	U0THR contains valid data.	0
	(11111/2))	1	U0THR is empty.	

Chapter 10: LPC21xx/22xx Universal Asynchronous

Table 145: UART0 Line Status Register (U0LSR - address 0xE000 C014, read only) bit description

Bit	Symbol	Value	Description	Reset value	
6	Transmitter Empty		TEMT is set when both U0THR and U0TSR are empty; TEMT is cleared when either the U0TSR or the U0THR contain valid data.	1	
	(TEMT)	0 U0THR and/or the U0TSR contains valid data.			
		1	U0THR and the U0TSR are empty.		
	Error in RX FIFO (RXFE)		U0LSR[7] is set when a character with a Rx error such as framing error, parity error or break interrupt, is loaded into the U0RBR. This bit is cleared when the U0LSR register is read and there are no subsequent errors in the UART0 FIFO.	0	
		0	U0RBR contains no UART0 RX errors or U0FCR[0]=0.		
		1	UART0 RBR contains at least one UART0 RX error.		

4.10 UARTO Scratch Pad Register (U0SCR - 0xE000 C01C)

The UOSCR has no effect on the UARTO operation. This register can be written and/or read at user's discretion. There is no provision in the interrupt interface that would indicate to the host that a read or write of the UOSCR has occurred.

Table 146: UART0 Scratch Pad Register (U0SCR - address 0xE000 C01C) bit description

Bit	Symbol	Description	Reset value
7:0	Pad	A readable, writable byte.	0x00

4.11 UART0 Auto-baud Control Register (U0ACR - 0xE000 C020)

The UART0 Auto-baud Control Register (U0ACR) controls the process of measuring the incoming clock/data rate for the baud rate generation and can be read and written at user's discretion.

Table 147: Auto-baud Control Register (U0ACR - 0xE000 C020) bit description

Bit	Symbol	Value	Description	Reset value
0	Start		This bit is automatically cleared after auto-baud completion.	0
		0	Auto-baud stop (auto-baud is not running).	
		•	Auto-baud start (auto-baud is running). Auto-baud run bit. This bit is automatically cleared after auto-baud completion.	
1	Mode		Auto-baud mode select bit.	0
		0	Mode 0.	
		1	Mode 1.	
2	AutoRestart	0	No restart	0
		1	Restart in case of time-out (counter restarts at next UART0 Rx falling edge)	
7:3	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

defined

Chapter 10: LPC21xx/22xx Universal Asynchronous

Bit **Symbol** Value Description Reset value 8 **ABEOIntCIr** End of auto-baud interrupt clear bit (write only 0 accessible). Writing a 1 will clear the corresponding interrupt in the U0IIR. Writing a 0 has no impact. Auto-baud time-out interrupt clear bit (write only 9 **ABTOIntCIr** 0 accessible). Writing a 1 will clear the corresponding interrupt in the U0IIR. Writing a 0 has no impact. Reserved, user software should not write ones to 31:10 -NA 0 reserved bits. The value read from a reserved bit is not

Table 147: Auto-baud Control Register (U0ACR - 0xE000 C020) bit description

4.11.1 Auto-baud

The UART0 auto-baud function can be used to measure the incoming baud-rate based on the "AT" protocol (Hayes command). If enabled the auto-baud feature will measure the bit time of the receive data stream and set the divisor latch registers U0DLM and U0DLL accordingly.

Auto-baud is started by setting the U0ACR Start bit. Auto-baud can be stopped by clearing the U0ACR Start bit. The Start bit will clear once auto-baud has finished and reading the bit will return the status of auto-baud (pending/finished).

Two auto-baud measuring modes are available which can be selected by the U0ACR Mode bit. In mode 0 the baud-rate is measured on two subsequent falling edges of the UART0 Rx pin (the falling edge of the start bit and the falling edge of the least significant bit). In mode 1 the baud-rate is measured between the falling edge and the subsequent rising edge of the UART0 Rx pin (the length of the start bit).

The U0ACR AutoRestart bit can be used to automatically restart baud-rate measurement if a time-out occurs (the rate measurement counter overflows). If this bit is set the rate measurement will restart at the next falling edge of the UART0 Rx pin.

The auto-baud function can generate two interrupts.

- The U0IIR ABTOInt interrupt will get set if the interrupt is enabled (U0IER ABToIntEn is set and the auto-baud rate measurement counter overflows).
- The U0IIR ABEOInt interrupt will get set if the interrupt is enabled (U0IER ABEOIntEn is set and the auto-baud has completed successfully).

The auto-baud interrupts have to be cleared by setting the corresponding U0ACR ABTOIntClr and ABEOIntEn bits.

Typically the fractional baud-rate generator is disabled (DIVADDVAL = 0) during auto-baud. However, if the fractional baud-rate generator is enabled (DIVADDVAL > 0), it is going to impact the measuring of UARTO Rx pin baud-rate, but the value of the U0FDR register is not going to be modified after rate measurement. Also, when auto-baud is used, any write to U0DLM and U0DLL registers should be done before U0ACR register write. The minimum and the maximum baudrates supported by UARTO are function of PCLK, number of data bits, stop-bits and parity bits.

Chapter 10: LPC21xx/22xx Universal Asynchronous

(3)


$$ratemin = \frac{2 \times PCLK}{16 \times 2^{15}} \leq UARTO_{baudrate} \leq \frac{PCLK}{16 \times (2 + databits + paritybits + stopbits)} = ratemax$$

4.11.2 Auto-baud modes

When the software is expecting an "AT" command, it configures the UART0 with the expected character format and sets the U0ACR Start bit. The initial values in the divisor latches U0DLM and U0DLM don't care. Because of the "A" or "a" ASCII coding ("A" = 0x41, "a" = 0x61), the UART0 Rx pin sensed start bit and the LSB of the expected character are delimited by two falling edges. When the U0ACR Start bit is set, the auto-baud protocol will execute the following phases:

- 1. On U0ACR Start bit setting, the baud-rate measurement counter is reset and the UART0 U0RSR is reset. The U0RSR baud rate is switch to the highest rate.
- 2. A falling edge on UART0 Rx pin triggers the beginning of the start bit. The rate measuring counter will start counting PCLK cycles optionally pre-scaled by the fractional baud-rate generator.
- 3. During the receipt of the start bit, 16 pulses are generated on the RSR baud input with the frequency of the (fractional baud-rate pre-scaled) UART0 input clock, guaranteeing the start bit is stored in the U0RSR.
- 4. During the receipt of the start bit (and the character LSB for mode = 0) the rate counter will continue incrementing with the pre-scaled UART0 input clock (PCLK).
- 5. If Mode = 0 then the rate counter will stop on next falling edge of the UART0 Rx pin. If Mode = 1 then the rate counter will stop on the next rising edge of the UART0 Rx pin.
- 6. The rate counter is loaded into U0DLM/U0DLL and the baud-rate will be switched to normal operation. After setting the U0DLM/U0DLL the end of auto-baud interrupt U0IIR ABEOInt will be set, if enabled. The U0RSR will now continue receiving the remaining bits of the "A/a" character.

Chapter 10: LPC21xx/22xx Universal Asynchronous

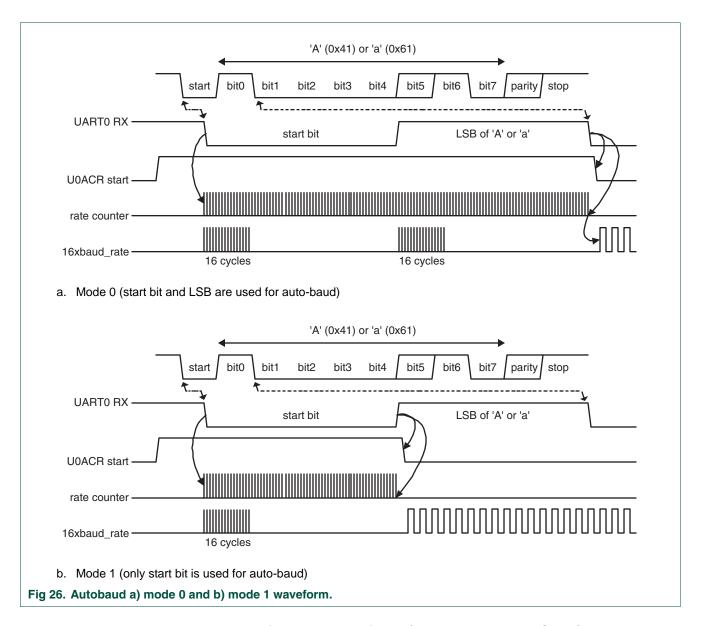

4.12 UARTO Transmit Enable Register (U0TER - 0xE000 C030)

The U0TER enables implementation of software flow control. When TXEn=1, UART0 transmitter will keep sending data as long as they are available. As soon as TXEn becomes 0, UART0 transmission will stop.

Table 10–148 describes how to use TXEn bit in order to achieve software flow control.

145 of 386

Chapter 10: LPC21xx/22xx Universal Asynchronous

Table 148: UART0 Transmit Enable Register (U0TER - address 0xE000 C030) bit description

Bit	Symbol	Description	Reset value
6:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	TXEN	When this bit is 1, as it is after a Reset, data written to the THR is output on the TXD pin as soon as any preceding data has been sent. If this bit is cleared to 0 while a character is being sent, the transmission of that character is completed, but no further characters are sent until this bit is set again. In other words, a 0 in this bit blocks the transfer of characters from the THR or TX FIFO into the transmit shift register. Software implementing software-handshaking can clear this bit when it receives an XOFF character (DC3). Software can set this bit again when it receives an XON (DC1) character.	1

5. Architecture

The architecture of the UART0 is shown below in the block diagram.

The APB interface provides a communications link between the CPU or host and the UART0.

The UART0 receiver block, U0RX, monitors the serial input line, RXD0, for valid input. The UART0 RX Shift Register (U0RSR) accepts valid characters via RXD0. After a valid character is assembled in the U0RSR, it is passed to the UART0 RX Buffer Register FIFO to await access by the CPU or host via the generic host interface.


The UART0 transmitter block, U0TX, accepts data written by the CPU or host and buffers the data in the UART0 TX Holding Register FIFO (U0THR). The UART0 TX Shift Register (U0TSR) reads the data stored in the U0THR and assembles the data to transmit via the serial output pin, TXD0.

The UARTO Baud Rate Generator block, U0BRG, generates the timing enables used by the UARTO TX block. The U0BRG clock input source is the APB clock (PCLK). The main clock is divided down per the divisor specified in the U0DLL and U0DLM registers. This divided down clock is a 16x oversample clock, NBAUDOUT.

The interrupt interface contains registers U0IER and U0IIR. The interrupt interface receives several one clock wide enables from the U0TX and U0RX blocks.

Status information from the U0TX and U0RX is stored in the U0LSR. Control information for the U0TX and U0RX is stored in the U0LCR.

Chapter 10: LPC21xx/22xx Universal Asynchronous

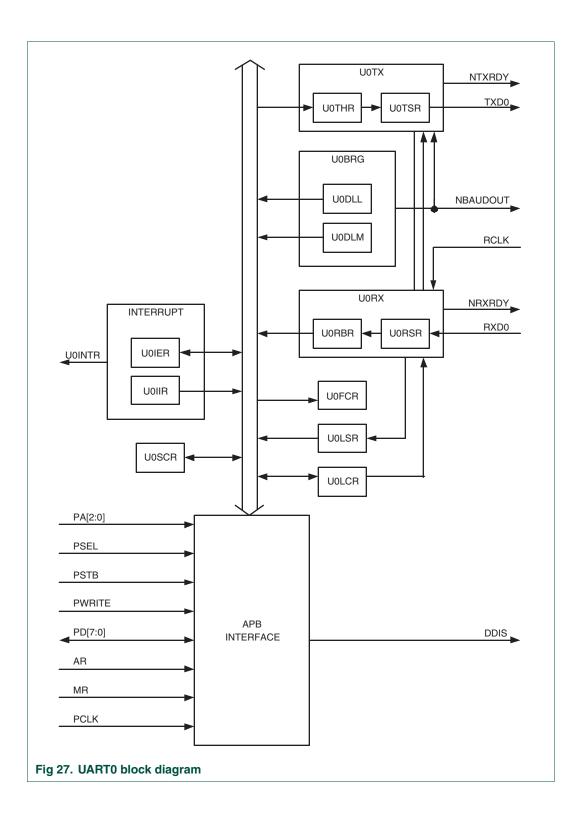

UM10114

Chapter 11: LPC21xx/22xx Universal Asynchronous Receiver/Transmitter 1 (UART1)

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The following features on the LPC21xx and LPC22xx are available in parts with enhanced features only:

- · Fractional baud rate controller
- Auto-baud control
- Software flow control

Therefore, the registers controlling enhanced features are available only for /01 parts and LPC2220 (see <u>Table 11–149</u>).

The baud rate is determined by the register values U1DLL and U1DLM. Enhanced parts also include a fractional baud rate generator for fine-tuning the baud rate. The fractional baud rate settings are determined by the content of the U1FDR register.

Table 149. LPC21xx/22xx part-specific registers

Part	Baud rate			Auto-bau	ıd control	Software flow control	
	Section	11-4.3	Section		Section 11–4.5	Section 11–4.6	Section 11-4.16
			<u>11–4.4</u>	<u>11–4.13</u>			
no suffix and	00 parts						
LPC2109	U1DLL	U1DLM	-	-	-	-	-
LPC2119	U1DLL	U1DLM	-	-	-	-	-
LPC2129	U1DLL	U1DLM	-	-	-	-	-
LPC2114	U1DLL	U1DLM	-	-	-	-	-
LPC2124	U1DLL	U1DLM	-	-	-	-	-
LPC2194	U1DLL	U1DLM	-	-	-	-	-
LPC2210	U1DLL	U1DLM	-	-	-	-	-
LPC2220	U1DLL	U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2212	U1DLL	U1DLM	-	-	-	-	-
LPC2214	U1DLL	U1DLM	-	-	-	-	-
LPC2290	U1DLL	U1DLM	-	-	-	-	-
LPC2292	U1DLL	U1DLM	-	-	-	-	-
LPC2294	U1DLL	U1DLM	-	-	-	-	-
/01 parts							
LPC2109	U1DLL	U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2119	U1DLL	U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2129	U1DLL	U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2114	U1DLL	U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2124	U1DLL	U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2194	U1DLL	U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2210	U1DLL	U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER

Chapter 11: LPC21xx/22xx Universal Asynchronous

Table 149. LPC21xx/22xx part-specific registers

Part Baud rate			Auto-bau	ıd control	Software flow control	
	Section 11–4.3	<u>Section</u> 11–4.4	Section 11-4.13	<u>Section 11–4.5</u>	<u>Section 11–4.6</u>	Section 11–4.16
LPC2212	U1DLL U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2214	U1DLL U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2290	U1DLL U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2292	U1DLL U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER
LPC2294	U1DLL U1DLM	U1FDR	U1ACR	U1IER, bits 9:8	U1IIR, bits 9:8	U1TER

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- UART1 is identical to UART0 with the addition of a modem interface.
- UART1 contains 16 byte Receive and Transmit FIFOs.
- · Register locations conform to '550 industry standard.
- Receiver FIFO trigger points at 1, 4, 8, and 14 bytes.
- Fractional baud rate generator with autobauding capabilities is built-in.
- Mechanism enables software and hardware flow control implementation.
- Standard modem interface signals are included, and flow control (auto-CTS/RTS) is fully supported in hardware.

3. Pin description

Table 150. UART1 pin description

Pin	Туре	Description
RXD1	Input	Serial Input. Serial receive data.
TXD1	Output	Serial Output. Serial transmit data.
CTS1	Input	Clear To Send. Active LOW signal indicates if the external modem is ready to accept transmitted data via TXD1 from the UART1. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[4]. State change information is stored in U1MSR[0] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
DCD1	Input	Data Carrier Detect. Active LOW signal indicates if the external modem has established a communication link with the UART1 and data may be exchanged. In normal operation of the modem interface (U1MCR[4]=0), the complement value of this signal is stored in U1MSR[7]. State change information is stored in U1MSR3 and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
DSR1	Input	Data Set Ready. Active LOW signal indicates if the external modem is ready to establish a communications link with the UART1. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[5]. State change information is stored in U1MSR[1] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).

Chapter 11: LPC21xx/22xx Universal Asynchronous

Table 150. UART1 pin description

Pin	Туре	Description
DTR1	Output	Data Terminal Ready. Active LOW signal indicates that the UART1 is ready to establish connection with external modem. The complement value of this signal is stored in U1MCR[0].
RI1	Input	Ring Indicator. Active LOW signal indicates that a telephone ringing signal has been detected by the modem. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[6]. State change information is stored in U1MSR[2] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
RTS1	Output	Request To Send. Active LOW signal indicates that the UART1 would like to transmit data to the external modem. The complement value of this signal is stored in U1MCR[1].

4. Register description

UART1 contains registers organized as shown in Table 76. The Divisor Latch Access Bit (DLAB) is contained in U1LCR[7] and enables access to the Divisor Latches.

The divisor latches are used to determine the baud rate for all UART transfers. When setting up the part, follow these steps:

- 1. Set DLAB = 1 in U1LCR (Section 11-4.10).
- 2. Set baud rate by writing values to registers DLL and DLM at address 0xE000 C000 Section 11–4.3).
- 3. Set DLAB = 0 in U1LCR ($\underbrace{\text{Section } 11-4.8}$).
- 4. Read at address 0xE000 C000 accesses the U1RBR register (Section 11-4.1).
- 5. Write at address 0xE000 C000 accesses the U1THR register (Section 11-4.2).

Name	Description	Bit functions and addresses								Access		Address
		MSB							LSB		value[1]	
	·	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
U1RBR	Receiver Buffer Register				8-bit Re	ead Data				RO	NA	0xE001 000 (DLAB=0)
U1THR	Transmit Holding Register				8-bit W	rite Data				WO	NA	0xE001 000 (DLAB=0)
U1DLL	Divisor Latch LSB				8-bit	Data				R/W	0x01	0xE001 000 (DLAB=1)
U1DLM	Divisor Latch MSB		8-bit Data						R/W	0x00	0xE001 000 (DLAB=1)	
U1IER	Interrupt Enable	-	-	-	-	-	-	En.ABTO	En.ABEO	R/W	0x00	0xE001 000
	Register	En.CTS Int	-	-	-	E.Modem St.Int	En. RX Lin.St. Int	Enable THRE Int	En. RX Dat.Av.In t			(DLAB=0)
U1IIR	Interrupt ID Reg.	-	-	-	-	-	-	ABTO Int	ABEO Int	RO	0x01	0xE001 000
		FIFOs E	nabled	-	-	IIR3	IIR2	IIR1	IIR0			
U1FCR	FIFO Control Register	RX Tı	igger	-	-	-	TX FIFO Reset	RX FIFO Reset	FIFO Enable	WO	0x00	0xE001 000
U1LCR	Line Control Register	DLAB	Set Break	Stick Parity	Even Par.Selct.	Parity Enable	No. of Stop Bits	Word Len	gth Select	R/W	0x00	0xE001 000
U1MCR	Modem Ctrl. Reg.	CTSen	RTSen	-	LoopBck.	-	-	RTS	DTR	R/W	0x00	0xE001 001
U1LSR	Line Status Register	RX FIFO Error	TEMT	THRE	BI	FE	PE	OE	DR	RO	0x60	0xE001 00
U1MSR	Modem Status Register	DCD	RI	DSR	CTS	Delta DCD	Trailing Edge RI	Delta DSR	Delta CTS	RO	0x00	0xE001 00
U1SCR	Scratch Pad Reg.				8-bit	Data				R/W	0x00	0xE001 001
U1ACR	Auto-baud Control Register	-	-	-	-	-	-	ABTO IntClr	ABEO IntClr	R/W	0x00	0xE001 002
		-	-	-	-	-	Aut.Rstrt.	Mode	Start			
U1FDR	Fractional Divider				Reserv	red[31:8]				R/W	0x10	0xE001 002
	Register		Mu	ılVal			DivA	ddVal				
U1TER	TX. Enable Reg.	TXEN	-	-	-	-	-	-	-	R/W	0x80	0xE001 003

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 11: LPC21xx/22xx Universal Asynchronous

4.1 UART1 Receiver Buffer Register (U1RBR - 0xE001 0000, when DLAB = 0 Read Only)

The U1RBR is the top byte of the UART1 RX FIFO. The top byte of the RX FIFO contains the oldest character received and can be read via the bus interface. The LSB (bit 0) represents the "oldest" received data bit. If the character received is less than 8 bits, the unused MSBs are padded with zeroes.

The Divisor Latch Access Bit (DLAB) in U1LCR must be zero in order to access the U1RBR. The U1RBR is always Read Only.

Since PE, FE and BI bits correspond to the byte sitting on the top of the RBR FIFO (i.e. the one that will be read in the next read from the RBR), the right approach for fetching the valid pair of received byte and its status bits is first to read the content of the U1LSR register, and then to read a byte from the U1RBR.

Table 152. UART1 Receiver Buffer Register (U1RBR - address 0xE001 0000, when DLAB = 0 Read Only) bit description

Bit	Symbol	Description	Reset value
7:0	RBR	The UART1 Receiver Buffer Register contains the oldest received byte in the UART1 RX FIFO.	undefined

4.2 UART1 Transmitter Holding Register (U1THR - 0xE001 0000, when DLAB = 0 Write Only)

The U1THR is the top byte of the UART1 TX FIFO. The top byte is the newest character in the TX FIFO and can be written via the bus interface. The LSB represents the first bit to transmit.

The Divisor Latch Access Bit (DLAB) in U1LCR must be zero in order to access the U1THR. The U1THR is always Write Only.

Table 153. UART1 Transmitter Holding Register (U1THR - address 0xE001 0000, when DLAB = 0 Write Only) bit description

Bit	Symbol	Description	Reset value
7:0	THR	Writing to the UART1 Transmit Holding Register causes the data to be stored in the UART1 transmit FIFO. The byte will be sent when it reaches the bottom of the FIFO and the transmitter is available.	NA

4.3 UART1 Divisor Latch registers 0 and 1 (U1DLL - 0xE001 0000 and U1DLM - 0xE001 0004, when DLAB = 1)

The UART0 Divisor Latch is part of the UART0 Baud Rate Generator and holds the value used to divide the clock in order to produce the baud rate clock, which must be 16x the desired baud rate (Equation 11–4). The U1DLL and U1DLM registers together form a 16 bit divisor where U1DLL contains the lower 8 bits of the divisor and U1DLM contains the higher 8 bits of the divisor. A 0x0000 value is treated like a 0x0001 value as division by zero is not allowed. The Divisor Latch Access Bit (DLAB) in U1LCR must be one in order to access the UART1 Divisor Latches.

Chapter 11: LPC21xx/22xx Universal Asynchronous

(4)

$$UARTn_{baudrate} = \frac{PCLK}{16 \times (256 \times UnDLM + UnDLL)}$$

Details on how to select the right value for U1DLL and U1DLM if the part includes a fractional divider (see Table 11–149) can be found later on in this chapter.

Table 154: UART1 Divisor Latch LSB register (U1DLL - address 0xE001 C000, when DLAB = 1) bit description

Bit	Symbol	Description	Reset value
7:0	DLL	The UART0 Divisor Latch LSB Register, along with the U1DLM register, determines the baud rate of the UART1.	0x01

Table 155: UART0 Divisor Latch MSB register (U1DLM - address 0xE001 C004, when DLAB = 1) bit description

Bit	Symbol	Description	Reset value
7:0	DLM	The UART1 Divisor Latch MSB Register, along with the U1DLL register, determines the baud rate of the UART1.	0x00

4.4 UART1 Fractional Divider Register (U1FDR - 0xE001 0028)

The UART1 Fractional Divider Register (U1FDR) controls the clock pre-scaler for the baud rate generation and can be read and written at the user's discretion. This pre-scaler takes the APB clock and generates an output clock according to the specified fractional requirements.

Important: If the fractional divider is active (DIVADDVAL > 0) and DLM = 0, the value of the DLL register must be 2 or greater.

Table 156. UART1 Fractional Divider Register (U1FDR - address 0xE001 0028) bit description

Bit	Function	Value	Description	Reset value
3:0	DIVADDVAL	0	Baud-rate generation pre-scaler divisor value. If this field is 0, fractional baud-rate generator will not impact the UARTn baudrate.	0
7:4	MULVAL	1	Baud-rate pre-scaler multiplier value. This field must be greater or equal 1 for UARTn to operate properly, regardless of whether the fractional baud-rate generator is used or not.	1
31:8	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

This register controls the clock pre-scaler for the baud rate generation. The reset value of the register keeps the fractional capabilities of UART1 disabled making sure that UART1 is fully software and hardware compatible with UARTs not equipped with this feature.

UART1 baudrate can be calculated as (n = 1):

Chapter 11: LPC21xx/22xx Universal Asynchronous

(5)

$$UARTn_{baudrate} = \frac{PCLK}{16 \times (256 \times UnDLM + UnDLL) \times \left(1 + \frac{DivAddVal}{MulVal}\right)}$$

Where PCLK is the peripheral clock, U1DLM and U1DLL are the standard UART1 baud rate divider registers, and DIVADDVAL and MULVAL are UART1 fractional baudrate generator specific parameters.

The value of MULVAL and DIVADDVAL should comply to the following conditions:

- 1. 0 < MULVAL ≤ 15
- 2. $0 \le DIVADDVAL < 15$
- 3. DIVADDVAL<MULVAL


The value of the U1FDR should not be modified while transmitting/receiving data or data may be lost or corrupted.

If the U1FDR register value does not comply to these two requests, then the fractional divider output is undefined. If DIVADDVAL is zero then the fractional divider is disabled, and the clock will not be divided.

4.4.1 Baudrate calculation

UART can operate with or without using the Fractional Divider. In real-life applications it is likely that the desired baudrate can be achieved using several different Fractional Divider settings. The following algorithm illustrates one way of finding a set of DLM, DLL, MULVAL, and DIVADDVAL values. Such set of parameters yields a baudrate with a relative error of less than 1.1% from the desired one.

Chapter 11: LPC21xx/22xx Universal Asynchronous

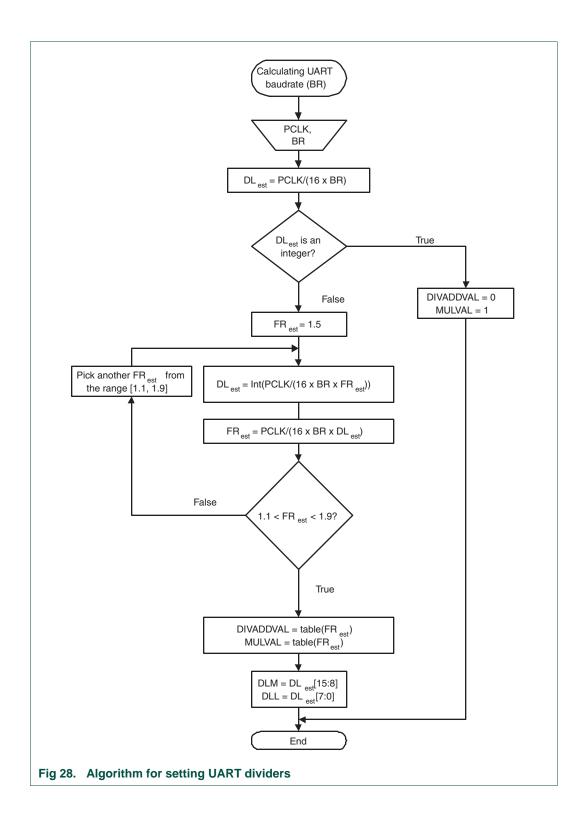

Chapter 11: LPC21xx/22xx Universal Asynchronous

FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal	FR	DivAddVal/ MulVal
1.000	0/1	1.250	1/4	1.500	1/2	1.750	3/4
1.067	1/15	1.267	4/15	1.533	8/15	1.769	10/13
1.071	1/14	1.273	3/11	1.538	7/13	1.778	7/9
1.077	1/13	1.286	2/7	1.545	6/11	1.786	11/14
1.083	1/12	1.300	3/10	1.556	5/9	1.800	4/5
1.091	1/11	1.308	4/13	1.571	4/7	1.818	9/11
1.100	1/10	1.333	1/3	1.583	7/12	1.833	5/6
1.111	1/9	1.357	5/14	1.600	3/5	1.846	11/13
1.125	1/8	1.364	4/11	1.615	8/13	1.857	6/7
1.133	2/15	1.375	3/8	1.625	5/8	1.867	13/15
1.143	1/7	1.385	5/13	1.636	7/11	1.875	7/8
1.154	2/13	1.400	2/5	1.643	9/14	1.889	8/9
1.167	1/6	1.417	5/12	1.667	2/3	1.900	9/10
1.182	2/11	1.429	3/7	1.692	9/13	1.909	10/11
1.200	1/5	1.444	4/9	1.700	7/10	1.917	11/12
1.214	3/14	1.455	5/11	1.714	5/7	1.923	12/13
1.222	2/9	1.462	6/13	1.727	8/11	1.929	13/14
1.231	3/13	1.467	7/15	1.733	11/15	1.933	14/15

Table 157. Fractional Divider setting look-up table

4.4.1.1 Example 1: PCLK = 14.7456 MHz, BR = 9600 Bd

According to the the provided algorithm $DL_{est} = PCLK/(16 \text{ x BR}) = 14.7456 \text{ MHz} / (16 \text{ x } 9600) = 96$. Since this DL_{est} is an integer number, DIVADDVAL = 0, MULVAL = 1, DLM = 0, and DLL = 96.

4.4.1.2 Example 2: PCLK = 12 MHz, BR = 115200 Bd

According to the the provided algorithm $DL_{est} = PCLK/(16 \text{ x BR}) = 12 \text{ MHz} / (16 \text{ x } 115200) = 6.51$. This DL_{est} is not an integer number and the next step is to estimate the FR parameter. Using an initial estimate of $FR_{est} = 1.5$ a new $DL_{est} = 4$ is calculated and FR_{est} is recalculated as $FR_{est} = 1.628$. Since FRest = 1.628 is within the specified range of 1.1 and 1.9, DIVADDVAL and MULVAL values can be obtained from the attached look-up table.

The closest value for FRest = 1.628 in the look-up <u>Table 11–157</u> is FR = 1.625. It is equivalent to DIVADDVAL = 5 and MULVAL = 8.

Based on these findings, the suggested UART setup would be: DLM = 0, DLL = 4, DIVADDVAL = 5, and MULVAL = 8. According to Equation 11-5 the UART's baud rate is 115384 Bd. This rate has a relative error of 0.16% from the originally specified 115200 Bd.

4.5 UART1 Interrupt Enable Register (U1IER - 0xE001 0004, when DLAB = 0)

The U1IER is used to enable UART1 interrupt sources.

Chapter 11: LPC21xx/22xx Universal Asynchronous

Table 158. UART1 Interrupt Enable Register (U1IER - address 0xE001 0004, when DLAB = 0) bit description

Dit description				Dearton
Bit	Symbol	Value	Description	Reset value
0	RBR Interrupt Enable		U1IER[0] enables the Receive Data Available interrupt for UART1. It also controls the Character Receive Time-out interrupt.	0
		0	Disable the RDA interrupts.	
		1	Enable the RDA interrupts.	
1	THRE Interrupt Enable		U1IER[1] enables the THRE interrupt for UART1. The status of this interrupt can be read from U1LSR[5].	0
		0	Disable the THRE interrupts.	
		1	Enable the THRE interrupts.	
2	RX Line Interrupt Enable		U1IER[2] enables the UART1 RX line status interrupts. The status of this interrupt can be read from U1LSR[4:1].	0
		0	Disable the RX line status interrupts.	
		1	Enable the RX line status interrupts.	
3	Modem Status		U1IER[3] enables the modem interrupt. The status of this interrupt can be read from U1MSR[3:0].	0
	Interrupt Enable	0	Disable the modem interrupt.	
	LIIANIE	1	Enable the modem interrupt.	
6:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	CTS Interrupt Enable		If auto-CTS mode is enabled this bit enables/disables the modem status interrupt generation on a CTS1 signal transition. If auto-CTS mode is disabled a CTS1 transition will generate an interrupt if Modem Status Interrupt Enable (U1IER[3]) is set.	0
			In normal operation a CTS1 signal transition will generate a Modem Status Interrupt unless the interrupt has been disabled by clearing the U1IER[3] bit in the U1IER register. In auto-CTS mode a transition on the CTS1 bit will trigger an interrupt only if both the U1IER[3] and U1IER[7] bits are set.	
		0	Disable the CTS interrupt.	
		1	Enable the CTS interrupt.	
8	ABEOIntEn		Enables the end of auto-baud interrupt.	0
		0	Disable End of Auto-baud Interrupt.	
		1	Enable End of Auto-baud Interrupt.	
9	ABTOIntEn		Enables the auto-baud time-out interrupt.	0
		0	Disable Auto-baud Time-out Interrupt.	
		1	Enable Auto-baud Time-out Interrupt.	
31:10	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 11: LPC21xx/22xx Universal Asynchronous

4.6 UART1 Interrupt Identification Register (U1IIR - 0xE001 0008, Read Only)

The U1IIR provides a status code that denotes the priority and source of a pending interrupt. The interrupts are frozen during an U1IIR access. If an interrupt occurs during an U1IIR access, the interrupt is recorded for the next U1IIR access.

Table 159. UART1 Interrupt Identification Register (U1IIR - address 0xE001 0008, read only) bit description

Bit	Symbol	Value	Description	Reset value
0	Interrupt Pending		Note that U1IIR[0] is active LOW. The pending interrupt can be determined by evaluating U1IIR[3:1].	1
		0	At least one interrupt is pending.	
		1	No interrupt is pending.	
3:1	Interrupt Identification		U1IER[3:1] identifies an interrupt corresponding to the UART1 Rx FIFO. All other combinations of U1IER[3:1] not listed above are reserved (100,101,111).	0
		011	1 - Receive Line Status (RLS).	
		010	2a - Receive Data Available (RDA).	
		110	2b - Character Time-out Indicator (CTI).	
		001	3 - THRE Interrupt.	
		000	4 - Modem Interrupt.	
5:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	FIFO Enable		These bits are equivalent to U1FCR[0].	0
8	ABEOInt		End of auto-baud interrupt. True if auto-baud has finished successfully and interrupt is enabled.	0
9	ABTOInt		Auto-baud time-out interrupt. True if auto-baud has timed out and interrupt is enabled.	0
31:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Interrupts are handled as described in <u>Table 11–160</u>. Given the status of U1IIR[3:0], an interrupt handler routine can determine the cause of the interrupt and how to clear the active interrupt. The U1IIR must be read in order to clear the interrupt prior to exiting the Interrupt Service Routine.

The UART1 RLS interrupt (U1IIR[3:1] = 011) is the highest priority interrupt and is set whenever any one of four error conditions occur on the UART1RX input: overrun error (OE), parity error (PE), framing error (FE) and break interrupt (BI). The UART1 Rx error condition that set the interrupt can be observed via U1LSR[4:1]. The interrupt is cleared upon an U1LSR read.

Chapter 11: LPC21xx/22xx Universal Asynchronous

The UART1 RDA interrupt (U1IIR[3:1] = 010) shares the second level priority with the CTI interrupt (U1IIR[3:1] = 110). The RDA is activated when the UART1 Rx FIFO reaches the trigger level defined in U1FCR7:6 and is reset when the UART1 Rx FIFO depth falls below the trigger level. When the RDA interrupt goes active, the CPU can read a block of data defined by the trigger level.

The CTI interrupt (U1IIR[3:1] = 110) is a second level interrupt and is set when the UART1 Rx FIFO contains at least one character and no UART1 Rx FIFO activity has occurred in 3.5 to 4.5 character times. Any UART1 Rx FIFO activity (read or write of UART1 RSR) will clear the interrupt. This interrupt is intended to flush the UART1 RBR after a message has been received that is not a multiple of the trigger level size. For example, if a peripheral wished to send a 105 character message and the trigger level was 10 characters, the CPU would receive 10 RDA interrupts resulting in the transfer of 100 characters and 1 to 5 CTI interrupts (depending on the service routine) resulting in the transfer of the remaining 5 characters.

Table 160. UART1 interrupt handling

	3								
U1IIR[3:0] value ^[1]	Priority	Interrupt Type	Interrupt Source	Interrupt Reset					
0001	-	None	None	-					
0110	Highest	RX Line Status / Error	OE ^[2] or PE ^[2] or BI ^[2]	U1LSR Read ^[2]					
0100	Second	RX Data Available	Rx data available or trigger level reached in FIFO (U1FCR0=1)	U1RBR Read ^[3] or UART1 FIFO drops below trigger level					
1100	Second	Character Time-out indication	Minimum of one character in the RX FIFO and no character input or removed during a time period depending on how many characters are in FIFO and what the trigger level is set at (3.5 to 4.5 character times).	U1RBR Read ^[3]					
			The exact time will be:						
			[(word length) \times 7 - 2] \times 8 + [(trigger level - number of characters) \times 8 + 1] RCLKs						
0010	Third	THRE	THRE[2]	U1IIR Read[4] (if source of interrupt) or THR write					
0000	Fourth	Modem Status	CTS or DSR or RI or DCD	MSR Read					

- [1] Values "0000" (see <u>Table note 11–2</u>), "0011", "0101", "0111", "1000", "1001", "1010", "1011", "1111" are reserved.
- [2] For details see Section 11-4.10 "UART1 Line Status Register (U1LSR 0xE001 0014, Read Only)"
- [3] For details see Section 11–4.1 "UART1 Receiver Buffer Register (U1RBR 0xE001 0000, when DLAB = 0 Read Only)"
- [4] For details see Section 11–4.6 "UART1 Interrupt Identification Register (U1IIR 0xE001 0008, Read Only)" and Section 11–4.2 "UART1 Transmitter Holding Register (U1THR 0xE001 0000, when DLAB = 0 Write Only)"

The UART1 THRE interrupt (U1IIR[3:1] = 001) is a third level interrupt and is activated when the UART1 THR FIFO is empty provided certain initialization conditions have been met. These initialization conditions are intended to give the UART1 THR FIFO a chance to fill up with data to eliminate many THRE interrupts from occurring at system start-up. The initialization conditions implement a one character delay minus the stop bit whenever THRE = 1 and there have not been at least two characters in the U1THR at one time since the last THRE = 1 event. This delay is provided to give the CPU time to write data to U1THR without a THRE interrupt to decode and service. A THRE interrupt is set

Chapter 11: LPC21xx/22xx Universal Asynchronous

immediately if the UART1 THR FIFO has held two or more characters at one time and currently, the U1THR is empty. The THRE interrupt is reset when a U1THR write occurs or a read of the U1IIR occurs and the THRE is the highest interrupt (U1IIR[3:1] = 001).

The modem interrupt (U1IIR[3:1] = 000) is available in LPC2101/02/03. It is the lowest priority interrupt and is activated whenever there is any state change on modem inputs pins, DCD, DSR or CTS. In addition, a LOW to high transition on modem input RI will generate a modem interrupt. The source of the modem interrupt can be determined by examining U1MSR[3:0]. A U1MSR read will clear the modem interrupt.

4.7 UART1 FIFO Control Register (U1FCR - 0xE001 0008)

The U1FCR controls the operation of the UART1 RX and TX FIFOs.

Table 161. UART1 FIFO Control Register (U1FCR - address 0xE001 0008) bit description

Bit	Symbol	Value	Description	Reset value	
0	FIFO Enable	0	UART1 FIFOs are disabled. Must not be used in the application.	0	
		1	Active HIGH enable for both UART1 Rx and TX FIFOs and U1FCR[7:1] access. This bit must be set for proper UART1 operation. Any transition on this bit will automatically clear the UART1 FIFOs.		
1	RX FIFO Reset	0	No impact on either of UART1 FIFOs.	0	
		1	Writing a logic 1 to U1FCR[1] will clear all bytes in UART1 Rx FIFO and reset the pointer logic. This bit is self-clearing.		
2	TX FIFO Reset	0	No impact on either of UART1 FIFOs.	0	
		1	Writing a logic 1 to U1FCR[2] will clear all bytes in UART1 TX FIFO and reset the pointer logic. This bit is self-clearing.		
5:3	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
7:6	RX Trigger Level		These two bits determine how many receiver UART1 FIFO characters must be written before an interrupt is activated.	0	
		00	trigger level 0 (1 character or 0x01).		
		01	trigger level 1 (4 characters or 0x04).		
		10	trigger level 2 (8 characters or 0x08).		
		11	trigger level 3 (14 characters or 0x0E).		

4.8 UART1 Line Control Register (U1LCR - 0xE001 000C)

The U1LCR determines the format of the data character that is to be transmitted or received.

Table 162. UART1 Line Control Register (U1LCR - address 0xE001 000C) bit description

Bit	Symbol	Value	Description	Reset value
1:0	Word Length	00	5 bit character length.	0
	Select	01	6 bit character length.	
		10	7 bit character length.	
		11	8 bit character length.	
2	Stop Bit Select	0	1 stop bit.	0
		1	2 stop bits (1.5 if U1LCR[1:0]=00).	

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 11: LPC21xx/22xx Universal Asynchronous

Table 162. UART1 Line Control Register (U1LCR - address 0xE001 000C) bit description

Bit	Symbol	Value	Description	Reset value	
3	Parity Enable	Parity Enable 0 Disable parity generation and checking.		0	
		1	Enable parity generation and checking.		
5:4	Parity Select	00	Odd parity. Number of 1s in the transmitted character and the attached parity bit will be odd.	0	
		01	Even Parity. Number of 1s in the transmitted character and the attached parity bit will be even.		
	10 F		Forced "1" stick parity.		
		11	Forced "0" stick parity.		
6	Break Control	0	Disable break transmission.	0	
		1	Enable break transmission. Output pin UART1 TXD is forced to logic 0 when U1LCR[6] is active HIGH.		
7	Divisor Latch	0	Disable access to Divisor Latches.	0	
	Access Bit (DLAB)	1	Enable access to Divisor Latches.		

4.9 UART1 Modem Control Register (U1MCR - 0xE001 0010)

The U1MCR enables the modem loopback mode and controls the modem output signals.

Table 163. UART1 Modem Control Register (U1MCR - address 0xE001 0010) bit description

Bit	Symbol	Value	Description	Reset value
0	DTR Control		Source for modem output pin, DTR. This bit reads as 0 when modem loopback mode is active.	0
1	RTS Control		Source for modem output pin RTS. This bit reads as 0 when modem loopback mode is active.	0
3:2	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
4	Loopback Mode Select		The modem loopback mode provides a mechanism to perform diagnostic loopback testing. Serial data from the transmitter is connected internally to serial input of the receiver. Input pin, RXD1, has no effect on loopback and output pin, TXD1 is held in marking state. The four modem inputs (CTS, DSR, RI and DCD) are disconnected externally. Externally, the modem outputs (RTS, DTR) are set inactive. Internally, the four modem outputs are connected to the four modem inputs. As a result of these connections, the upper four bits of the U1MSR will be driven by the lower four bits of the U1MCR rather than the four modem inputs in normal mode. This permits modem status interrupts to be generated in loopback mode by writing the lower four bits of U1MCR.	0
		0	Disable modem loopback mode.	
		1	Enable modem loopback mode.	
5:3	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
6	RTSen		Auto-RTS control bit.	0
		0	Disable auto-RTS flow control.	
		1	Enable auto-RTS flow control.	

Chapter 11: LPC21xx/22xx Universal Asynchronous

Table 163. UART1 Modem Control Register (U1MCR - address 0xE001 0010) bit description

Bit	Symbol	Value	Description	Reset value
7	CTSen		Auto-CTS control bit.	0
		0	Disable auto-CTS flow control.	
		1	Enable auto-CTS flow control.	

4.9.1 Auto-flow control

If auto-RTS mode is enabled the UART1's receiver FIFO hardware controls the RTS1 output of the UART1. If the auto-CTS mode is enabled the UART1's U1TSR hardware will only start transmitting if the CTS1 input signal is asserted.


4.9.1.1 Auto-RTS

The auto-RTS function is enabled by setting the RTSen bit. Auto-RTS data flow control originates in the U1RBR module and is linked to the programmed receiver FIFO trigger level. If auto-RTS is enabled, the data-flow is controlled as follows:

When the receiver FIFO level reaches the programmed trigger level, RTS1 is deasserted (to a high value). It is possible that the sending UART sends an additional byte after the trigger level is reached (assuming the sending UART has another byte to send) because it might not recognize the deassertion of RTS1 until after it has begun sending the additional byte. RTS1 is automatically reasserted (to a low value) once the receiver FIFO has reached the previous trigger level. The reassertion of RTS1 signals to the sending UART to continue transmitting data.

If Auto-RTS mode is disabled, the RTS Control bit controls the RTS1 output of the UART1. If Auto-RTS mode is enabled, hardware controls the RTS1 output, and the actual value of RTS1 will be copied in the RTS Control bit of the UART1. As long as Auto-RTS is enabled, the value of the RTS Control bit is read-only for software.

Example: Suppose the UART1 operating in type 550 has trigger level in U1FCR set to 0x2 then if Auto-RTS is enabled the UART1 will deassert the RTS1 output as soon as the receive FIFO contains 8 bytes (Table 11–161). The RTS1 output will be reasserted as soon as the receive FIFO hits the previous trigger level: 4 bytes.

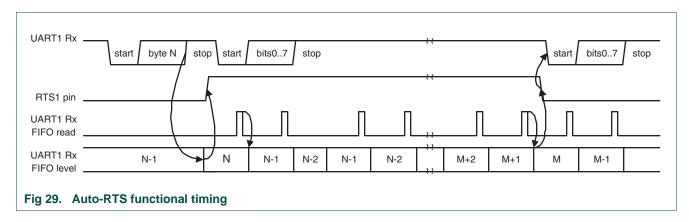

4.9.1.2 Auto-CTS

The auto-CTS function is enabled by setting the CTSen bit. If auto-CTS is enabled the transmitter circuitry in the U1TSR module checks CTS1 input before sending the next data byte. When CTS1 is active (LOW), the transmitter sends the next byte. To stop the


Chapter 11: LPC21xx/22xx Universal Asynchronous

transmitter from sending the following byte, CTS1 must be released before the middle of the last stop bit that is currently being sent. In auto-CTS mode a change of the CTS1 signal does not trigger a modem status interrupt unless the CTS Interrupt Enable bit is set, Delta CTS bit in the U1MSR will be set though. <u>Table 11–164</u> lists the conditions for generating a Modem Status interrupt.

Table 164.	Modem	status	interrupt	generation
-------------------	-------	--------	-----------	------------

Enable Modem Status Interrupt (U1IER[3])	CTSen (U1MCR[7])	CTS Interrupt Enable (U1IER[7])	Delta CTS (U1MSR[0])	Delta DCD or Trailing Edge RI or Delta DSR (U1MSR[3] or U1MSR[2] or (U1MSR[1]))	Modem Status Interrupt
0	x	x	x	х	no
1	0	x	0	0	no
1	0	х	1	х	yes
1	0	х	Х	1	yes
1	1	0	Х	0	no
1	1	0	Х	1	yes
1	1	1	0	0	no
1	1	1	1	х	yes
1	1	1	X	1	yes

The auto-CTS function reduces interrupts to the host system. When flow control is enabled, a CTS1 state change does not trigger host interrupts because the device automatically controls its own transmitter. Without auto-CTS, the transmitter sends any data present in the transmit FIFO and a receiver overrun error can result. Figure 11–30 illustrates the auto-CTS functional timing.

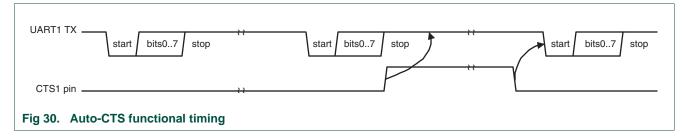

While starting transmission of the initial character the CTS1 signal is asserted. Transmission will stall as soon as the pending transmission has completed. The UART will continue transmitting a 1 bit as long as CTS1 is deasserted (HIGH). As soon as CTS1 gets deasserted transmission resumes and a start bit is sent followed by the data bits of the next character.

4.10 UART1 Line Status Register (U1LSR - 0xE001 0014, Read Only)

The U1LSR is a read-only register that provides status information on the UART1 TX and RX blocks.

Chapter 11: LPC21xx/22xx Universal Asynchronous

Table 165. UART1 Line Status Register (U1LSR - address 0xE001 0014, read only) bit description

Bit	Symbol	Value	Description	Reset value
0	Receiver Data Ready		U1LSR[0] is set when the U1RBR holds an unread character and is cleared when the UART1 RBR FIFO is empty.	0
	(RDR)	0	U1RBR is empty.	
		1	U1RBR contains valid data.	
1	Overrun Error (OE)		The overrun error condition is set as soon as it occurs. An U1LSR read clears U1LSR[1]. U1LSR[1] is set when UART1 RSR has a new character assembled and the UART1 RBR FIFO is full. In this case, the UART1 RBR FIFO will not be overwritten and the character in the UART1 RSR will be lost.	0
		0	Overrun error status is inactive.	
		1	Overrun error status is active.	
2	Parity Error (PE)		When the parity bit of a received character is in the wrong state, a parity error occurs. An U1LSR read clears U1LSR[2]. Time of parity error detection is dependent on U1FCR[0]. Note: A parity error is associated with the character at the top of the UART1 RBR	0
			FIFO.	
		0	Parity error status is inactive.	
		1	Parity error status is active.	
3	Framing Error (FE)	When the stop bit of a received character is a logic 0, a framing error occurs. An U1LSR read clears U1LSR[3]. The time of the framing error detection is dependent on U1FCR0. Upon detection of a framing error, the RX will attempt to resynchronize to the data and assume that the bad stop bit is actually an early start bit. However, it cannot be assumed that the next received byte will be correct even if there is no Framing Error.		0
	Note: A framing error is associated with the character at the top of the UART1 R FIFO.			
		0	Framing error status is inactive.	
		1	Framing error status is active.	
4	Break Interrupt (BI)		When RXD1 is held in the spacing state (all 0's) for one full character transmission (start, data, parity, stop), a break interrupt occurs. Once the break condition has been detected, the receiver goes idle until RXD1 goes to marking state (all 1's). An U1LSR read clears this status bit. The time of break detection is dependent on U1FCR[0].	0
			Note: The break interrupt is associated with the character at the top of the UART1 RBR FIFO.	
		0	Break interrupt status is inactive.	
		1	Break interrupt status is active.	
5	Transmitter Holding	olding a U1THR write.		1
	Register Empty (THRE)	0	U1THR contains valid data.	
	(IIIIL)	1	U1THR is empty.	
6	Transmitter Empty		TEMT is set when both U1THR and U1TSR are empty; TEMT is cleared when either the U1TSR or the U1THR contain valid data.	1
	(TEMT)	0	U1THR and/or the U1TSR contains valid data.	
		1	U1THR and the U1TSR are empty.	

Chapter 11: LPC21xx/22xx Universal Asynchronous

Table 165. UART1 Line Status Register (U1LSR - address 0xE001 0014, read only) bit description

Bit	Symbol	Value	Description	Reset value
7	Error in RX FIFO (RXFE)		U1LSR[7] is set when a character with a RX error such as framing error, parity error or break interrupt, is loaded into the U1RBR. This bit is cleared when the U1LSR register is read and there are no subsequent errors in the UART1 FIFO.	0
	 U1RBR contains no UART1 RX errors or U1FCR[0]=0. UART1 RBR contains at least one UART1 RX error. 			
		1	UART1 RBR contains at least one UART1 RX error.	

4.11 UART1 Modem Status Register (U1MSR - 0xE001 0018)

The U1MSR is a read-only register that provides status information on the modem input signals. U1MSR[3:0] is cleared on U1MSR read. Note that modem signals have no direct affect on UART1 operation, they facilitate software implementation of modem signal operations.

Table 166. UART1 Modem Status Register (U1MSR - address 0xE001 0018) bit description

Bit	Symbol	Value	Description	Reset value
0	Delta CTS		Set upon state change of input CTS. Cleared on an U1MSR read.	0
		0	No change detected on modem input, CTS.	
		1	State change detected on modem input, CTS.	
1	Delta DSR		Set upon state change of input DSR. Cleared on an U1MSR read.	0
		0	No change detected on modem input, DSR.	
		1	State change detected on modem input, DSR.	
2	Trailing Edge RI		Set upon LOW to HIGH transition of input RI. Cleared on an U1MSR read.	0
		0	No change detected on modem input, RI.	
		1	LOW-to-HIGH transition detected on RI.	
3	3 Delta DCD		Set upon state change of input DCD. Cleared on an U1MSR read.	0
		0	No change detected on modem input, DCD.	
		1	State change detected on modem input, DCD.	
4	CTS		Clear To Send State. Complement of input signal CTS. This bit is connected to U1MCR[1] in modem loopback mode.	0
5	DSR		Data Set Ready State. Complement of input signal DSR. This bit is connected to U1MCR[0] in modem loopback mode.	0
6	RI		Ring Indicator State. Complement of input RI. This bit is connected to U1MCR[2] in modem loopback mode.	0
7	DCD		Data Carrier Detect State. Complement of input DCD. This bit is connected to U1MCR[3] in modem loopback mode.	0

4.12 UART1 Scratch Pad Register (U1SCR - 0xE001 001C)

The U1SCR has no effect on the UART1 operation. This register can be written and/or read at user's discretion. There is no provision in the interrupt interface that would indicate to the host that a read or write of the U1SCR has occurred.

Table 167. UART1 Scratch Pad Register (U1SCR - address 0xE001 0014) bit description

Bit	Symbol	Description	Reset value
7:0	Pad	A readable, writable byte.	0x00

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 11: LPC21xx/22xx Universal Asynchronous

4.13 UART1 Auto-baud Control Register (U1ACR - 0xE001 0020)

The UART1 Auto-baud Control Register (U1ACR) controls the process of measuring the incoming clock/data rate for the baud rate generation and can be read and written at user's discretion.

Table 168. Auto-baud Control Register (U1ACR - 0xE001 0020) bit description

Bit	Symbol	Value	Description	Reset value	
0	Start		This bit is automatically cleared after auto-baud completion.	0	
		0	Auto-baud stop (auto-baud is not running).		
		1	Auto-baud start (auto-baud is running). Auto-baud run bit. This bit is automatically cleared after auto-baud completion.		
1	Mode		Auto-baud mode select bit.	0	
		0	Mode 0.		
		1	Mode 1.		
2	AutoRestart	0	No restart	0	
		1	Restart in case of time-out (counter restarts at next UART1 Rx falling edge)		
7:3	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0	
8	ABEOIntClr		End of auto-baud interrupt clear bit (write only accessible). Writing a 1 will clear the corresponding interrupt in the U1IIR. Writing a 0 has no impact.	0	
9	ABTOIntClr		Auto-baud time-out interrupt clear bit (write only accessible). Writing a 1 will clear the corresponding interrupt in the U1IIR. Writing a 0 has no impact.	0	
31:10	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0	

4.14 Auto-baud

The UART1 auto-baud function can be used to measure the incoming baud-rate based on the "AT" protocol (Hayes command). If enabled the auto-baud feature will measure the bit time of the receive data stream and set the divisor latch registers U1DLM and U1DLL accordingly.

Auto-baud is started by setting the U1ACR Start bit. Auto-baud can be stopped by clearing the U1ACR Start bit. The Start bit will clear once auto-baud has finished and reading the bit will return the status of auto-baud (pending/finished).

Two auto-baud measuring modes are available which can be selected by the U1ACR Mode bit. In mode 0 the baud-rate is measured on two subsequent falling edges of the UART1 Rx pin (the falling edge of the start bit and the falling edge of the least significant bit). In mode 1 the baud-rate is measured between the falling edge and the subsequent rising edge of the UART1 Rx pin (the length of the start bit).

Chapter 11: LPC21xx/22xx Universal Asynchronous

The U1ACR AutoRestart bit can be used to automatically restart baud-rate measurement if a time-out occurs (the rate measurement counter overflows). If this bit is set the rate measurement will restart at the next falling edge of the UART1 Rx pin.

The auto-baud function can generate two interrupts.

- The U1IIR ABTOInt interrupt will get set if the interrupt is enabled (U1IER ABToIntEn is set and the auto-baud rate measurement counter overflows).
- The U1IIR ABEOInt interrupt will get set if the interrupt is enabled (U1IER ABEOIntEn is set and the auto-baud has completed successfully).

The auto-baud interrupts have to be cleared by setting the corresponding U1ACR ABTOIntClr and ABEOIntEn bits.

Typically the fractional baud-rate generator is disabled (DIVADDVAL = 0) during auto-baud. However, if the fractional baud-rate generator is enabled (DIVADDVAL > 0), it is going to impact the measuring of UART1 Rx pin baud-rate, but the value of the U1FDR register is not going to be modified after rate measurement. Also, when auto-baud is used, any write to U1DLM and U1DLL registers should be done before U1ACR register write. The minimum and the maximum baudrates supported by UART1 are function of PCLK, number of data bits, stop-bits and parity bits.

(6)

$$ratemin = \frac{2 \times PCLK}{16 \times 2^{15}} \le UART1_{baudrate} \le \frac{PCLK}{16 \times (2 + databits + paritybits + stopbits)} = ratemax$$

4.15 Auto-baud modes


When the software is expecting an "AT" command, it configures the UART1 with the expected character format and sets the U1ACR Start bit. The initial values in the divisor latches U1DLM and U1DLM don't care. Because of the "A" or "a" ASCII coding ("A" = 0x41, "a" = 0x61), the UART1 Rx pin sensed start bit and the LSB of the expected character are delimited by two falling edges. When the U1ACR Start bit is set, the auto-baud protocol will execute the following phases:

- 1. On U1ACR Start bit setting, the baud-rate measurement counter is reset and the UART1 U1RSR is reset. The U1RSR baud rate is switch to the highest rate.
- A falling edge on UART1 Rx pin triggers the beginning of the start bit. The rate measuring counter will start counting PCLK cycles optionally pre-scaled by the fractional baud-rate generator.
- 3. During the receipt of the start bit, 16 pulses are generated on the RSR baud input with the frequency of the (fractional baud-rate pre-scaled) UART1 input clock, guaranteeing the start bit is stored in the U1RSR.
- During the receipt of the start bit (and the character LSB for mode = 0) the rate counter will continue incrementing with the pre-scaled UART1 input clock (PCLK).
- 5. If Mode = 0 then the rate counter will stop on next falling edge of the UART1 Rx pin. If Mode = 1 then the rate counter will stop on the next rising edge of the UART1 Rx pin.

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 11: LPC21xx/22xx Universal Asynchronous

6. The rate counter is loaded into U1DLM/U1DLL and the baud-rate will be switched to normal operation. After setting the U1DLM/U1DLL the end of auto-baud interrupt U1IIR ABEOInt will be set, if enabled. The U1RSR will now continue receiving the remaining bits of the "A/a" character.

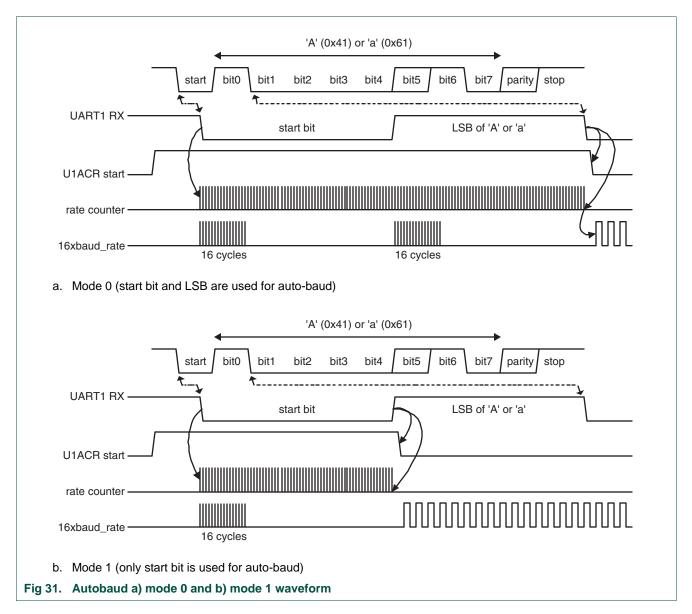

4.16 UART1 Transmit Enable Register (U1TER - 0xE001 0030)

LPC2101/2102/2103's U1TER enables implementation of software and hardware flow control. When TXEn=1, UART1 transmitter will keep sending data as long as they are available. As soon as TXEn becomes 0, UART1 transmission will stop.

Table 11–169 describes how to use TXEn bit in order to achieve software flow control.

Chapter 11: LPC21xx/22xx Universal Asynchronous

Table 169. UART1 Transmit Enable Register (U1TER - address 0xE001 0030) bit description

Bit	Symbol	Description	Reset value
6:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	TXEN	When this bit is 1, as it is after a Reset, data written to the THR is output on the TXD pin as soon as any preceding data has been sent. If this bit cleared to 0 while a character is being sent, the transmission of that character is completed, but no further characters are sent until this bit is set again. In other words, a 0 in this bit blocks the transfer of characters from the THR or TX FIFO into the transmit shift register. Software can clear this bit when it detects that the a hardware-handshaking TX-permit signal CTS has gone false, or it can clear this bit with software handshaking, when it receives an XOFF character (DC3). Software can set this bit again when it detects that the TX-permit signal has gone true, or when it receives an XON (DC1) character.	1

5. Architecture

The architecture of the UART1 is shown below in the block diagram.

The APB interface provides a communications link between the CPU or host and the UART1.

The UART1 receiver block, U1RX, monitors the serial input line, RXD1, for valid input. The UART1 RX Shift Register (U1RSR) accepts valid characters via RXD1. After a valid character is assembled in the U1RSR, it is passed to the UART1 RX Buffer Register FIFO to await access by the CPU or host via the generic host interface.

The UART1 transmitter block, U1TX, accepts data written by the CPU or host and buffers the data in the UART1 TX Holding Register FIFO (U1THR). The UART1 TX Shift Register (U1TSR) reads the data stored in the U1THR and assembles the data to transmit via the serial output pin, TXD1.


The UART1 Baud Rate Generator block, U1BRG, generates the timing enables used by the UART1 TX block. The U1BRG clock input source is the APB clock (PCLK). The main clock is divided down per the divisor specified in the U1DLL and U1DLM registers. This divided down clock is a 16x oversample clock, NBAUDOUT.

The modem interface contains registers U1MCR and U1MSR. This interface is responsible for handshaking between a modem peripheral and the UART1.

The interrupt interface contains registers U1IER and U1IIR. The interrupt interface receives several one clock wide enables from the U1TX and U1RX blocks.

Status information from the U1TX and U1RX is stored in the U1LSR. Control information for the U1TX and U1RX is stored in the U1LCR.

Chapter 11: LPC21xx/22xx Universal Asynchronous

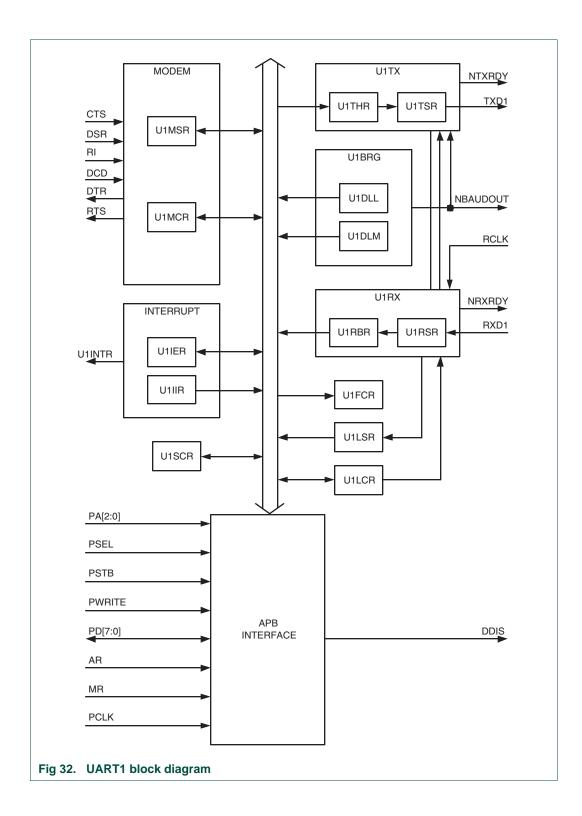

UM10114

Chapter 12: LPC21xx/22xx I²C interface

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The I²C-bus interface is identical for all LPC21xx and LPC22xx parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- Standard I²C compliant bus interfaces that may be configured as Master, Slave, or Master/Slave.
- Arbitration between simultaneously transmitting masters without corruption of serial data on the bus.
- Programmable clock to allow adjustment of I²C transfer rates.
- Bidirectional data transfer between masters and slaves.
- Serial clock synchronization allows devices with different bit rates to communicate via one serial bus.
- Serial clock synchronization can be used as a handshake mechanism to suspend and resume serial transfer.
- The I²C-bus may be used for test and diagnostic purposes.

3. Applications

Interfaces to external I²C standard parts, such as serial RAMs, LCDs, tone generators, etc.

4. Description


A typical I^2C -bus configuration is shown in <u>Figure 12–33</u>. Depending on the state of the direction bit (R/W), two types of data transfers are possible on the I^2C -bus:

- Data transfer from a master transmitter to a slave receiver. The first byte transmitted by the master is the slave address. Next follows a number of data bytes. The slave returns an acknowledge bit after each received byte.
- Data transfer from a slave transmitter to a master receiver. The first byte (the slave address) is transmitted by the master. The slave then returns an acknowledge bit. Next follows the data bytes transmitted by the slave to the master. The master returns an acknowledge bit after all received bytes other than the last byte. At the end of the last received byte, a "not acknowledge" is returned. The master device generates all of the serial clock pulses and the START and STOP conditions. A transfer is ended with a STOP condition or with a repeated START condition. Since a repeated START condition is also the beginning of the next serial transfer, the I²C-bus will not be released.

Chapter 12: LPC21xx/22xx I²C interface

The LPC21xx/22xx I²C interface is byte oriented, and have four operating modes: master transmitter mode, master receiver mode, slave transmitter mode and slave receiver mode.

The I^2C interface complies with entire I^2C specification, supporting the ability to turn power off to the LPC21xx/22xx without causing a problem with other devices on the same I^2C -bus. This is sometimes a useful capability, but intrinsically limits alternate uses for the same pins if the I^2C interface is not used.

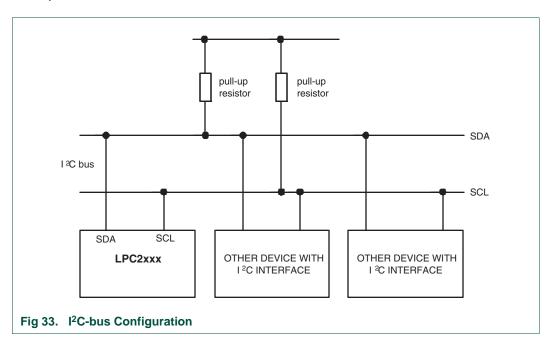

5. Pin description

Table 170. I²C Pin Description

Pin	Туре	Description
SDA	Input/Output	I ² C serial data
SCL	Input/Output	I ² C Serial clock

Remark: The SDA and SCL outputs are open-drain outputs for I²C-bus compliance.

6. I²C operating modes

In a given application, the I²C block may operate as a master, a slave, or both. In the slave mode, the I²C hardware looks for its own slave address and the general call address. If one of these addresses is detected, an interrupt is requested. If the processor wishes to become the bus master, the hardware waits until the bus is free before the master mode is entered so that a possible slave operation is not interrupted. If bus arbitration is lost in the master mode, the I²C block switches to the slave mode immediately and can detect its own slave address in the same serial transfer.

Chapter 12: LPC21xx/22xx I²C interface

6.1 Master Transmitter mode

In this mode data is transmitted from master to slave. Before the master transmitter mode can be entered, the I2CONSET register must be initialized as shown in <u>Table 12–171</u>. I2EN must be set to 1 to enable the I²C function. If the AA bit is 0, the I²C interface will not acknowledge any address when another device is master of the bus, so it can not enter slave mode. The STA, STO and SI bits must be 0. The SI Bit is cleared by writing 1 to the SIC bit in the I2CONCLR register.


Table 171. I2CCONSET used to configure Master mode

Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	0	-	-

The first byte transmitted contains the slave address of the receiving device (7 bits) and the data direction bit. In this mode the data direction bit (R/W) should be 0 which means Write. The first byte transmitted contains the slave address and Write bit. Data is transmitted 8 bits at a time. After each byte is transmitted, an acknowledge bit is received. START and STOP conditions are output to indicate the beginning and the end of a serial transfer

The I²C interface will enter master transmitter mode when software sets the STA bit. The I²C logic will send the START condition as soon as the bus is free. After the START condition is transmitted, the SI bit is set, and the status code in the I2STAT register is 0x08. This status code is used to vector to a state service routine which will load the slave address and Write bit to the I2DAT register, and then clear the SI bit. SI is cleared by writing a 1 to the SIC bit in the I2CONCLR register. The STA bit should be cleared after writing the slave address.

When the slave address and R/W bit have been transmitted and an acknowledgment bit has been received, the SI bit is set again, and the possible status codes now are 0x18, 0x20, or 0x38 for the master mode, or 0x68, 0x78, or 0xB0 if the slave mode was enabled (by setting AA to 1). The appropriate actions to be taken for each of these status codes are shown in Table 12–186 to Table 12–189.

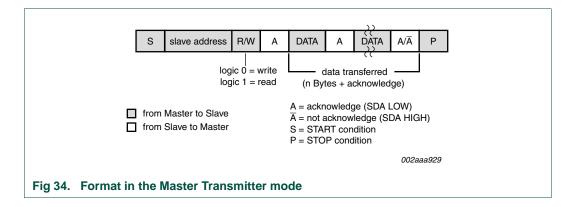


Chapter 12: LPC21xx/22xx I2C interface


6.2 Master Receiver mode

In the master receiver mode, data is received from a slave transmitter. The transfer is initiated in the same way as in the master transmitter mode. When the START condition has been transmitted, the interrupt service routine must load the slave address and the data direction bit to the I²C Data register (I2DAT), and then clear the SI bit. In this case, the data direction bit (R/W) should be 1 to indicate a read.

When the slave address and data direction bit have been transmitted and an acknowledge bit has been received, the SI bit is set, and the Status Register will show the status code. For master mode, the possible status codes are 0x40, 0x48, or 0x38. For slave mode, the possible status codes are 0x68, 0x78, or 0xB0. For details, refer to Table 12–187.

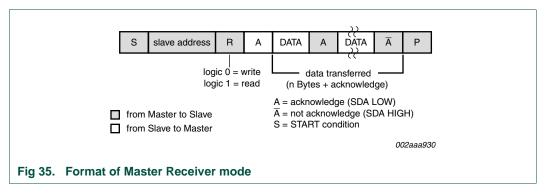

After a repeated START condition, I²C may switch to the master transmitter mode.

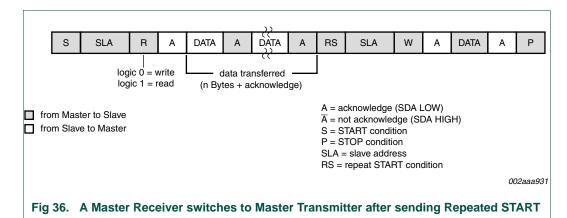

6.3 Slave Receiver mode

In the slave receiver mode, data bytes are received from a master transmitter. To initialize the slave receiver mode, user write the Slave Address register (I2ADR) and write the I²C Control Set register (I2CONSET) as shown in <u>Table 12–172</u>.

Table 172. I2CONSET used to configure Slave mode


Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	1	-	-

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 12: LPC21xx/22xx I²C interface


I2EN must be set to 1 to enable the I²C function. AA bit must be set to 1 to acknowledge its own slave address or the general call address. The STA, STO and SI bits are set to 0.

After I2ADR and I2CONSET are initialized, the I²C interface waits until it is addressed by its own address or general address followed by the data direction bit. If the direction bit is 0 (W), it enters slave receiver mode. If the direction bit is 1 (R), it enters slave transmitter mode. After the address and direction bit have been received, the SI bit is set and a valid status code can be read from the Status register (I2STAT). Refer to Table 12–188 for the status codes and actions.

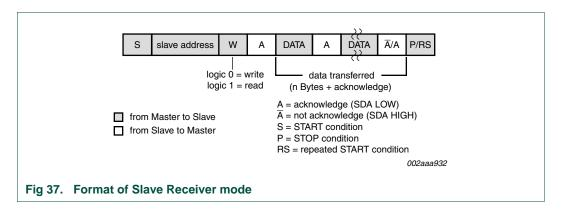

6.4 Slave Transmitter mode

The first byte is received and handled as in the slave receiver mode. However, in this mode, the direction bit will be 1, indicating a read operation. Serial data is transmitted via SDA while the serial clock is input through SCL. START and STOP conditions are recognized as the beginning and end of a serial transfer. In a given application, I²C may operate as a master and as a slave. In the slave mode, the I²C hardware looks for its own slave address and the general call address. If one of these addresses is detected, an interrupt is requested. When the microcontrollers wishes to become the bus master, the hardware waits until the bus is free before the master mode is entered so that a possible slave action is not interrupted. If bus arbitration is lost in the master mode, the I²C interface switches to the slave mode immediately and can detect its own slave address in the same serial transfer.

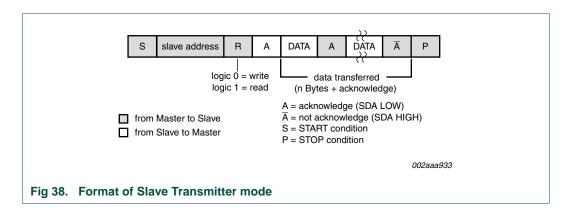

Chapter 12: LPC21xx/22xx I²C interface

7. I²C Implementation and operation


<u>Figure 12–39</u> shows how the on-chip I2C-bus interface is implemented, and the following text describes the individual blocks.

7.1 Input filters and output stages

Input signals are synchronized with the internal clock, and spikes shorter than three clocks are filtered out.

The output for I²C is a special pad designed to conform to the I²C specification.

Chapter 12: LPC21xx/22xx I²C interface

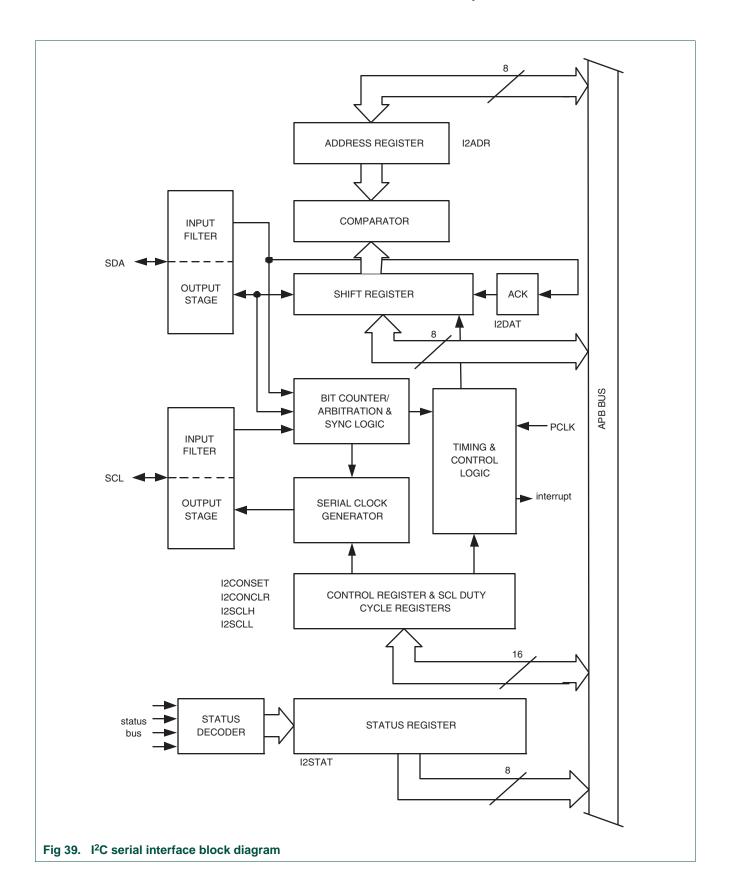

Chapter 12: LPC21xx/22xx I2C interface

7.2 Address Register, I2ADDR

This register may be loaded with the 7-bit slave address (7 most significant bits) to which the I²C block will respond when programmed as a slave transmitter or receiver. The LSB (GC) is used to enable general call address (0x00) recognition.

7.3 Comparator

The comparator compares the received 7-bit slave address with its own slave address (7 most significant bits in I2ADR). It also compares the first received 8-bit byte with the general call address (0x00). If an equality is found, the appropriate status bits are set and an interrupt is requested.


7.4 Shift register, I2DAT

This 8-bit register contains a byte of serial data to be transmitted or a byte which has just been received. Data in I2DAT is always shifted from right to left; the first bit to be transmitted is the MSB (bit 7) and, after a byte has been received, the first bit of received data is located at the MSB of I2DAT. While data is being shifted out, data on the bus is simultaneously being shifted in; I2DAT always contains the last byte present on the bus. Thus, in the event of lost arbitration, the transition from master transmitter to slave receiver is made with the correct data in I2DAT.

7.5 Arbitration and synchronization logic


In the master transmitter mode, the arbitration logic checks that every transmitted logic 1 actually appears as a logic 1 on the I²C-bus. If another device on the bus overrules a logic 1 and pulls the SDA line low, arbitration is lost, and the I²C block immediately changes from master transmitter to slave receiver. The I²C block will continue to output clock pulses (on SCL) until transmission of the current serial byte is complete.

Arbitration may also be lost in the master receiver mode. Loss of arbitration in this mode can only occur while the I²C block is returning a "not acknowledge: (logic 1) to the bus. Arbitration is lost when another device on the bus pulls this signal LOW. Since this can occur only at the end of a serial byte, the I²C block generates no further clock pulses. Figure 12–40 shows the arbitration procedure.

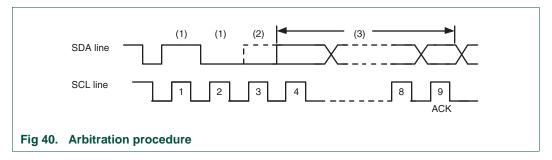

The synchronization logic will synchronize the serial clock generator with the clock pulses on the SCL line from another device. If two or more master devices generate clock pulses, the "mark" duration is determined by the device that generates the shortest "marks," and the "space" duration is determined by the device that generates the longest "spaces". Figure 12–41 shows the synchronization procedure.

Chapter 12: LPC21xx/22xx I2C interface

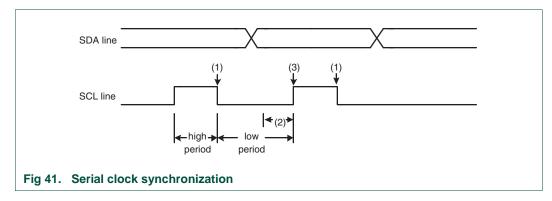

A slave may stretch the space duration to slow down the bus master. The space duration may also be stretched for handshaking purposes. This can be done after each bit or after a complete byte transfer. the I²C block will stretch the SCL space duration after a byte has been transmitted or received and the acknowledge bit has been transferred. The serial interrupt flag (SI) is set, and the stretching continues until the serial interrupt flag is cleared.

7.6 Serial clock generator

This programmable clock pulse generator provides the SCL clock pulses when the I²C block is in the master transmitter or master receiver mode. It is switched off when the I²C block is in a slave mode. The I²C output clock frequency and duty cycle is programmable via the I²C Clock Control Registers. See the description of the I2CSCLL and I2CSCLH registers for details. The output clock pulses have a duty cycle as programmed unless the bus is synchronizing with other SCL clock sources as described above.

7.7 Timing and control

The timing and control logic generates the timing and control signals for serial byte handling. This logic block provides the shift pulses for I2DAT, enables the comparator, generates and detects start and stop conditions, receives and transmits acknowledge bits, controls the master and slave modes, contains interrupt request logic, and monitors the I²C-bus status.

7.8 Control register, I2CONSET and I2CONCLR

The I²C control register contains bits used to control the following I²C block functions: start and restart of a serial transfer, termination of a serial transfer, bit rate, address recognition, and acknowledgment.

The contents of the I²C control register may be read as I2CONSET. Writing to I2CONSET will set bits in the I²C control register that correspond to ones in the value written. Conversely, writing to I2CONCLR will clear bits in the I²C control register that correspond to ones in the value written.

7.9 Status decoder and Status register

The status decoder takes all of the internal status bits and compresses them into a 5-bit code. This code is unique for each I²C-bus status. The 5-bit code may be used to generate vector addresses for fast processing of the various service routines. Each service routine processes a particular bus status. There are 26 possible bus states if all

Chapter 12: LPC21xx/22xx I²C interface

four modes of the I²C block are used. The 5-bit status code is latched into the five most significant bits of the status register when the serial interrupt flag is set (by hardware) and remains stable until the interrupt flag is cleared by software. The three least significant bits of the status register are always zero. If the status code is used as a vector to service routines, then the routines are displaced by eight address locations. Eight bytes of code is sufficient for most of the service routines (see the software example in this section).

8. Register description

Each I²C interface contains 7 registers as shown in Table 12–173 below.

Table 173. I²C register map

	o register map			
Name	Description	Access	Reset value ^[1]	Address
I2CONSET	I2C Control Set Register. When a one is written to a bit of this register, the corresponding bit in the I ² C control register is set. Writing a zero has no effect on the corresponding bit in the I ² C control register.	R/W	0x00	0xE001 C000
I2STAT	I2C Status Register. During I ² C operation, this register provides detailed status codes that allow software to determine the next action needed.	RO	0xF8	0xE001 C004
I2DAT	I2C Data Register. During master or slave transmit mode, data to be transmitted is written to this register. During master or slave receive mode, data that has been received may be read from this register.	R/W	0x00	0xE001 C008
I2ADR	I2C Slave Address Register. Contains the 7-bit slave address for operation of the I ² C interface in slave mode, and is not used in master mode. The least significant bit determines whether a slave responds to the general call address.	R/W	0x00	0xE001 C00C
I2SCLH	SCH Duty Cycle Register High Half Word. Determines the high time of the I ² C clock.	R/W	0x04	0xE001 C010
I2SCLL	SCL Duty Cycle Register Low Half Word. Determines the low time of the I ² C clock. I2SCLL and I2SCLH together determine the clock frequency generated by an I ² C master and certain times used in slave mode.	R/W	0x04	0xE001 C014
I2CONCLR	I2C Control Clear Register. When a one is written to a bit of this register, the corresponding bit in the I ² C control register is cleared. Writing a zero has no effect on the corresponding bit in the I ² C control register.	WO	NA	0xE001 C018

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

8.1 I²C Control Set register (I2CONSET - 0xE001 C000)

The I2CONSET registers control setting of bits in the I2CON register that controls operation of the I²C interface. Writing a one to a bit of this register causes the corresponding bit in the I²C control register to be set. Writing a zero has no effect.

Chapter 12: LPC21xx/22xx I²C interface

Table 174. I²C Control Set register (I2CONSET - address 0xE001 C000) bit description

Bit	Symbol	Description	Reset value
1:0	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	AA	Assert acknowledge flag. See the text below.	
3	SI	I ² C interrupt flag.	0
4	STO	STOP flag. See the text below.	0
5	STA	START flag. See the text below.	0
6	I2EN	I ² C interface enable. See the text below.	0
7	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

I2EN I²C Interface Enable. When I2EN is 1, the I²C interface is enabled. I2EN can be cleared by writing 1 to the I2ENC bit in the I2CONCLR register. When I2EN is 0, the I²C interface is disabled.

When I2EN is "0", the SDA and SCL input signals are ignored, the I²C block is in the "not addressed" slave state, and the STO bit is forced to "0".

I2EN should not be used to temporarily release the I^2C -bus since, when I2EN is reset, the I^2C -bus status is lost. The AA flag should be used instead.

STA is the START flag. Setting this bit causes the I²C interface to enter master mode and transmit a START condition or transmit a repeated START condition if it is already in master mode.

When STA is 1 and the I²C interface is not already in master mode, it enters master mode, checks the bus and generates a START condition if the bus is free. If the bus is not free, it waits for a STOP condition (which will free the bus) and generates a START condition after a delay of a half clock period of the internal clock generator. If the I²C interface is already in master mode and data has been transmitted or received, it transmits a repeated START condition. STA may be set at any time, including when the I²C interface is in an addressed slave mode.

STA can be cleared by writing 1 to the STAC bit in the I2CONCLR register. When STA is 0, no START condition or repeated START condition will be generated.

If STA and STO are both set, then a STOP condition is transmitted on the I^2C -bus if it the interface is in master mode, and transmits a START condition thereafter. If the I^2C interface is in slave mode, an internal STOP condition is generated, but is not transmitted on the bus.

STO is the STOP flag. Setting this bit causes the I²C interface to transmit a STOP condition in master mode, or recover from an error condition in slave mode. When STO is 1 in master mode, a STOP condition is transmitted on the I²C-bus. When the bus detects the STOP condition, STO is cleared automatically.

In slave mode, setting this bit can recover from an error condition. In this case, no STOP condition is transmitted to the bus. The hardware behaves as if a STOP condition has been received and it switches to "not addressed" slave receiver mode. The STO flag is cleared by hardware automatically.

Chapter 12: LPC21xx/22xx I²C interface

SI is the I²C Interrupt Flag. This bit is set when the I²C state changes. However, entering state F8 does not set SI since there is nothing for an interrupt service routine to do in that case.

While SI is set, the low period of the serial clock on the SCL line is stretched, and the serial transfer is suspended. When SCL is high, it is unaffected by the state of the SI flag. SI must be reset by software, by writing a 1 to the SIC bit in I2CONCLR register.

AA is the Assert Acknowledge Flag. When set to 1, an acknowledge (low level to SDA) will be returned during the acknowledge clock pulse on the SCL line on the following situations:

- 1. The address in the Slave Address Register has been received.
- 2. The general call address has been received while the general call bit (GC) in I2ADR is set
- 3. A data byte has been received while the I²C is in the master receiver mode.
- 4. A data byte has been received while the I²C is in the addressed slave receiver mode

The AA bit can be cleared by writing 1 to the AAC bit in the I2CONCLR register. When AA is 0, a not acknowledge (high level to SDA) will be returned during the acknowledge clock pulse on the SCL line on the following situations:

- 1. A data byte has been received while the I²C is in the master receiver mode.
- 2. A data byte has been received while the I²C is in the addressed slave receiver mode.

8.2 I²C Control Clear register (I2CONCLR - 0xE001 C018)

The I2CONCLR registers control clearing of bits in the I2CON register that controls operation of the I²C interface. Writing a one to a bit of this register causes the corresponding bit in the I²C control register to be cleared. Writing a zero has no effect.

Table 175. I²C Control Set register (I2CONCLR - address 0xE001 C018) bit description

Bit	Symbol	Description	Reset value
1:0	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	AAC	Assert acknowledge Clear bit.	
3	SIC	I ² C interrupt Clear bit.	0
4	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
5	STAC	START flag Clear bit.	0
6	I2ENC	I ² C interface Disable bit.	0
7	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

AAC is the Assert Acknowledge Clear bit. Writing a 1 to this bit clears the AA bit in the I2CONSET register. Writing 0 has no effect.

SIC is the I²C Interrupt Clear bit. Writing a 1 to this bit clears the SI bit in the I2CONSET register. Writing 0 has no effect.

Chapter 12: LPC21xx/22xx I²C interface

STAC is the Start flag Clear bit. Writing a 1 to this bit clears the STA bit in the I2CONSET register. Writing 0 has no effect.

IZENC is the I²C Interface Disable bit. Writing a 1 to this bit clears the I2EN bit in the I2CONSET register. Writing 0 has no effect.

8.3 I²C Status register (I2STAT - 0xE001 C004)

Each I²C Status register reflects the condition of the corresponding I²C interface. The I²C Status register is Read-Only.

Table 176. I²C Status register (I2STAT - address 0xE001) bit description

Bit	Symbol	Description	Reset value
2:0	-	These bits are unused and are always 0.	0
7:3	Status	These bits give the actual status information about the I ² C interface.	0x1F

The three least significant bits are always 0. Taken as a byte, the status register contents represent a status code. There are 26 possible status codes. When the status code is 0xF8, there is no relevant information available and the SI bit is not set. All other 25 status codes correspond to defined I²C states. When any of these states entered, the SI bit will be set. For a complete list of status codes, refer to tables from Table 12–186 to Table 12-189.

8.4 I²C Data register (I2DAT - 0xE001 C008)

This register contains the data to be transmitted or the data just received. The CPU can read and write to this register only while it is not in the process of shifting a byte, when the SI bit is set. Data in I2DAT remains stable as long as the SI bit is set. Data in I2DAT is always shifted from right to left: the first bit to be transmitted is the MSB (bit 7), and after a byte has been received, the first bit of received data is located at the MSB of I2DAT.

Table 177. I²C Data register (I2DAT - address 0xE001 C008) bit description

Bit	Symbol	Description	Reset value
7:0	Data	This register holds data values that have been received, or are to be transmitted.	0

8.5 I²C Slave Address register (I2ADR - 0xE001 C00C)

These registers are readable and writable, and is only used when an I²C interface is set to slave mode. In master mode, this register has no effect. The LSB of I2ADR is the general call bit. When this bit is set, the general call address (0x00) is recognized.

Table 178. I²C Slave Address register (I2ADR - address 0xE001 C00C) bit description

Bit	Symbol	Description	Reset value
0	GC	General Call enable bit.	0
7:1	Address	The I ² C device address for slave mode.	0x00

8.6 I²C SCL High duty cycle register (I2SCLH - 0xE001 C010)

Table 179. I²C SCL High Duty Cycle register (I2SCLH - address 0xE001 C010) bit description

15:0 SCLH Count for SCL HIGH time period selection 0y0004	Bit	Symbol	Description	Reset value
13.0 GOLTI Countrior GOLTITOTI time period selection.	15:0	SCLH	Count for SCL HIGH time period selection.	0x0004

UM10114 3

© NXP B.V. 2008, All rights reserved.

Chapter 12: LPC21xx/22xx I2C interface

8.7 I²C SCL Low duty cycle register (I2SCLL - 0xE001 C014)

Table 180. I²C SCL Low Duty Cycle register (I2SCLL - address 0xE001 C014) bit description

Bit	Symbol	Description	Reset value
15:0	SCLL	Count for SCL LOW time period selection.	0x0004

8.8 Selecting the appropriate I²C data rate and duty cycle

Software must set values for the registers I2SCLH and I2SCLL to select the appropriate data rate and duty cycle. I2SCLH defines the number of PCLK cycles for the SCL high time, I2SCLL defines the number of PCLK cycles for the SCL low time. The frequency is determined by the following formula (PCLK is the frequency of the peripheral bus APB):

(7)

$$I^2C_{bitfrequency} = \frac{PCLK}{I2CSCLH + I2CSCLL}$$

The values for I2SCLL and I2SCLH should not necessarily be the same. Software can set different duty cycles on SCL by setting these two registers. For example, the I 2 C-bus specification defines the SCL low time and high time at different values for a 400 kHz I 2 C rate. The value of the register must ensure that the data rate is in the I 2 C data rate range of 0 through 400 kHz. Each register value must be greater than or equal to 4. Table 12–181 gives some examples of I 2 C-bus rates based on PCLK frequency and I2SCLL and I2SCLH values.

Table 181. Example I²C clock rates

I2SCLL +	I ² C Bit Frequency (kHz) at PCLK (MHz)										
I2SCLH	1	5	10	16	20	40	60				
8	125										
10	100										
25	40	200	400								
50	20	100	200	320	400						
100	10	50	100	160	200	400					
160	6.25	31.25	62.5	100	125	250	375				
200	5	25	50	80	100	200	300				
400	2.5	12.5	25	40	50	100	150				
800	1.25	6.25	12.5	20	25	50	75				

9. Details of I²C operating modes

The four operating modes are:

- Master Transmitter
- Master Receiver
- Slave Receiver

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 12: LPC21xx/22xx I²C interface

Slave Transmitter

Data transfers in each mode of operation are shown in Figures 42 to 46. Table 12–182 lists abbreviations used in these figures when describing the I²C operating modes.

Table 182. Abbreviations used to describe an I²C operation

Abbreviation	Explanation
S	Start Condition
SLA	7-bit slave address
R	Read bit (high level at SDA)
W	Write bit (low level at SDA)
A	Acknowledge bit (low level at SDA)
Ā	Not acknowledge bit (high level at SDA)
Data	8-bit data byte
Р	Stop condition

In Figures 42 to 46, circles are used to indicate when the serial interrupt flag is set. The numbers in the circles show the status code held in the I2STAT register. At these points, a service routine must be executed to continue or complete the serial transfer. These service routines are not critical since the serial transfer is suspended until the serial interrupt flag is cleared by software.

When a serial interrupt routine is entered, the status code in I2STAT is used to branch to the appropriate service routine. For each status code, the required software action and details of the following serial transfer are given in tables from Table 12–186 to Table 12–190.

9.1 Master Transmitter mode

In the master transmitter mode, a number of data bytes are transmitted to a slave receiver (see <u>Figure 12–42</u>). Before the master transmitter mode can be entered, I2CON must be initialized as follows:

Table 183. I2CONSET used to initialize Master Transmitter mode

Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	Х	-	-

The I²C rate must also be configured in the I2SCLL and I2SCLH registers. I2EN must be set to logic 1 to enable the I²C block. If the AA bit is reset, the I²C block will not acknowledge its own slave address or the general call address in the event of another device becoming master of the bus. In other words, if AA is reset, the I²C interface cannot enter a slave mode. STA, STO, and SI must be reset.

The master transmitter mode may now be entered by setting the STA bit. The I²C logic will now test the I²C-bus and generate a start condition as soon as the bus becomes free. When a START condition is transmitted, the serial interrupt flag (SI) is set, and the status code in the status register (I2STAT) will be 0x08. This status code is used by the interrupt service routine to enter the appropriate state service routine that loads I2DAT with the slave address and the data direction bit (SLA+W). The SI bit in I2CON must then be reset before the serial transfer can continue.

Chapter 12: LPC21xx/22xx I²C interface

When the slave address and the direction bit have been transmitted and an acknowledgment bit has been received, the serial interrupt flag (SI) is set again, and a number of status codes in I2STAT are possible. There are 0x18, 0x20, or 0x38 for the master mode and also 0x68, 0x78, or 0xB0 if the slave mode was enabled (AA = logic 1). The appropriate action to be taken for each of these status codes is detailed in Table 12–186. After a repeated start condition (state 0x10). The I2C block may switch to the master receiver mode by loading I2DAT with SLA+R).

9.2 Master Receiver mode

In the master receiver mode, a number of data bytes are received from a slave transmitter (see <u>Figure 12–43</u>). The transfer is initialized as in the master transmitter mode. When the start condition has been transmitted, the interrupt service routine must load I2DAT with the 7-bit slave address and the data direction bit (SLA+R). The SI bit in I2CON must then be cleared before the serial transfer can continue.

When the slave address and the data direction bit have been transmitted and an acknowledgment bit has been received, the serial interrupt flag (SI) is set again, and a number of status codes in I2STAT are possible. These are 0x40, 0x48, or 0x38 for the master mode and also 0x68, 0x78, or 0xB0 if the slave mode was enabled (AA = 1). The appropriate action to be taken for each of these status codes is detailed in <u>Table 12–187</u>. After a repeated start condition (state 0x10), the I²C block may switch to the master transmitter mode by loading I2DAT with SLA+W.

9.3 Slave Receiver mode

In the slave receiver mode, a number of data bytes are received from a master transmitter (see <u>Figure 12–44</u>). To initiate the slave receiver mode, I2ADR and I2CON must be loaded as follows:

Table 184. I2CADR usage in Slave Receiver mode

Bit	7	6	5	4	3	2	1	0
Symbol			GC					

The upper 7 bits are the address to which the I²C block will respond when addressed by a master. If the LSB (GC) is set, the I²C block will respond to the general call address (0x00); otherwise it ignores the general call address.

Table 185. I2CONSET used to initialize Slave Receiver mode

Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	1	-	-

The I²C-bus rate settings do not affect the I²C block in the slave mode. I2EN must be set to logic 1 to enable the I²C block. The AA bit must be set to enable the I²C block to acknowledge its own slave address or the general call address. STA, STO, and SI must be reset.

When I2ADR and I2CON have been initialized, the I²C block waits until it is addressed by its own slave address followed by the data direction bit which must be "0" (W) for the I²C block to operate in the slave receiver mode. After its own slave address and the W bit have been received, the serial interrupt flag (SI) is set and a valid status code can be read from I2STAT. This status code is used to vector to a state service routine. The appropriate


Chapter 12: LPC21xx/22xx I2C interface


action to be taken for each of these status codes is detailed in Table 104. The slave receiver mode may also be entered if arbitration is lost while the I²C block is in the master mode (see status 0x68 and 0x78).


If the AA bit is reset during a transfer, the I²C block will return a not acknowledge (logic 1) to SDA after the next received data byte. While AA is reset, the I²C block does not respond to its own slave address or a general call address. However, the I²C-bus is still monitored and address recognition may be resumed at any time by setting AA. This means that the AA bit may be used to temporarily isolate the I²C block from the I²C-bus.

Chapter 12: LPC21xx/22xx I²C interface


188 of 386

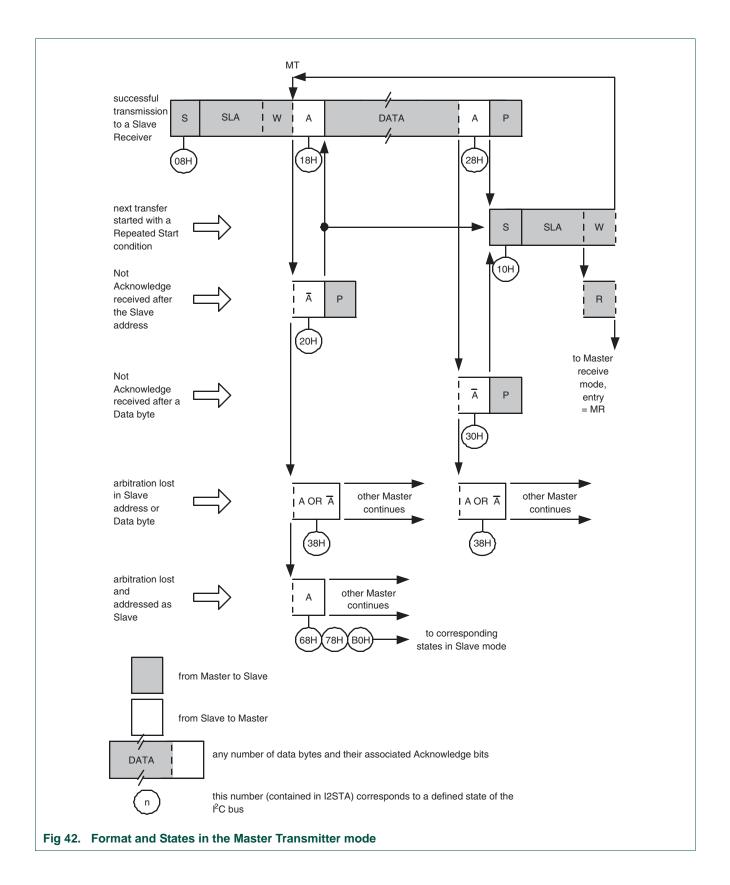

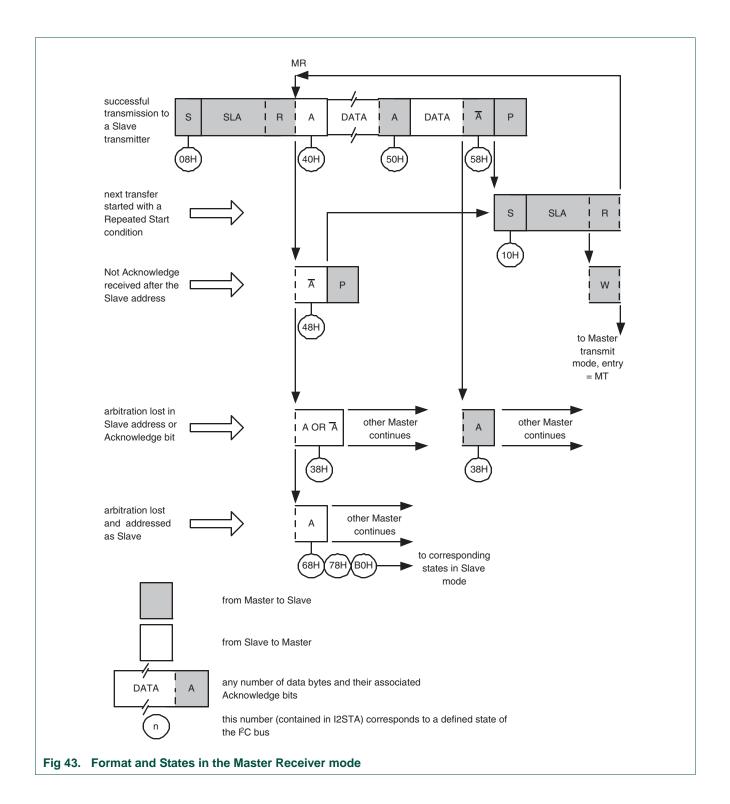

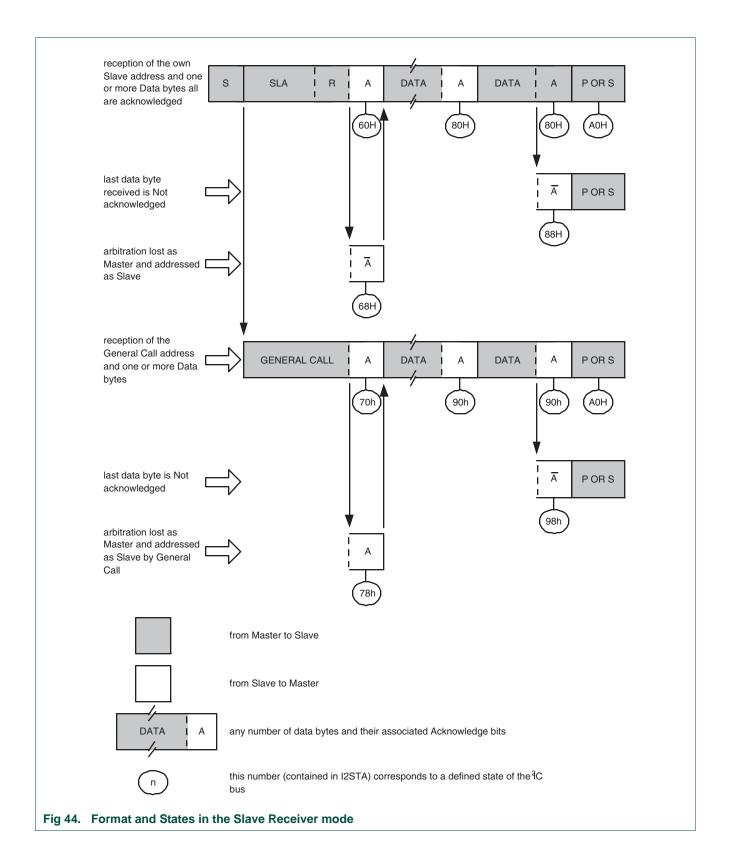

Chapter 12: LPC21xx/22xx I²C interface

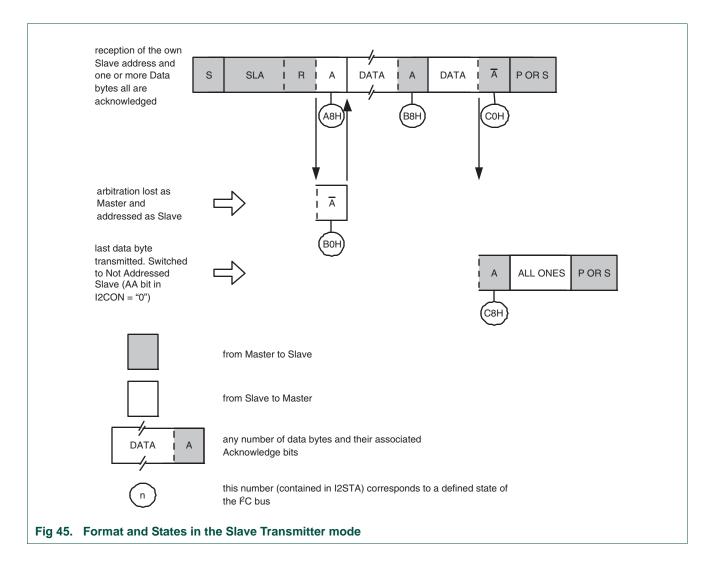

9.4 Slave Transmitter mode

In the slave transmitter mode, a number of data bytes are transmitted to a master receiver (see Figure 12–45). Data transfer is initialized as in the slave receiver mode. When I2ADR and I2CON have been initialized, the I²C block waits until it is addressed by its own slave address followed by the data direction bit which must be "1" (R) for the I²C block to operate in the slave transmitter mode. After its own slave address and the R bit have been received, the serial interrupt flag (SI) is set and a valid status code can be read from I2STAT. This status code is used to vector to a state service routine, and the appropriate action to be taken for each of these status codes is detailed in Table 12–189. The slave transmitter mode may also be entered if arbitration is lost while the I²C block is in the master mode (see state 0xB0).

If the AA bit is reset during a transfer, the I²C block will transmit the last byte of the transfer and enter state 0xC0 or 0xC8. The I²C block is switched to the not addressed slave mode and will ignore the master receiver if it continues the transfer. Thus the master receiver receives all 1s as serial data. While AA is reset, the I²C block does not respond to its own slave address or a general call address. However, the I²C-bus is still monitored, and address recognition may be resumed at any time by setting AA. This means that the AA bit may be used to temporarily isolate the I²C block from the I²C-bus.

Table 186. Master Transmitter mode

Status	Status of the I ² C-bus	Application softw	are re	spons	е		Next action taken by I ² C hardware
Code	and hardware	To/From I2DAT	To I2	CON			
(I2CSTAT)			STA	STO	SI	AA	
0x08	A START condition has been transmitted.	Load SLA+W Clear STA	Χ	0	0	Χ	SLA+W will be transmitted; ACK bit will be received.
0x10	A repeated START	Load SLA+W or	Χ	0	0	Χ	As above.
	condition has been transmitted.	Load SLA+R Clear STA	X	0	0	X	SLA+W will be transmitted; the I ² C block will be switched to MST/REC mode.
0x18	SLA+W has been transmitted; ACK has been received.	Load data byte or	0	0	0	X	Data byte will be transmitted; ACK bit will be received.
		No I2DAT action or	1	0	0	X	Repeated START will be transmitted.
		No I2DAT action or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x20	SLA+W has been transmitted; NOT ACK	Load data byte or	0	0	0	X	Data byte will be transmitted; ACK bit will be received.
	has been received.	No I2DAT action or	1	0	0	X	Repeated START will be transmitted.
		No I2DAT action or	0	1	0	X	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x28	Data byte in I2DAT has been transmitted;	Load data byte or	0	0	0	X	Data byte will be transmitted; ACK bit will be received.
	ACK has been received.	No I2DAT action or	1	0	0	X	Repeated START will be transmitted.
		No I2DAT action or	0	1	0	X	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x30	Data byte in I2DAT has been transmitted;	Load data byte or	0	0	0	Χ	Data byte will be transmitted; ACK bit will be received.
	NOT ACK has been received.	No I2DAT action or	1	0	0	X	Repeated START will be transmitted.
		No I2DAT action or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	Х	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x38	Arbitration lost in SLA+R/W or Data	No I2DAT action or	0	0	0	Χ	I ² C-bus will be released; not addressed slave will be entered.
	bytes.	No I2DAT action	1	0	0	X	A START condition will be transmitted when the bus becomes free.

Table 187. Master Receiver mode

Status	Status of the I ² C-bus	Application softw	are re	spons	е		Next action taken by I ² C hardware
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(12001711)			STA	STO	SI	AA	
0x08	A START condition has been transmitted.	Load SLA+R	X	0	0	Х	SLA+R will be transmitted; ACK bit will be received.
0x10	A repeated START	Load SLA+R or	Χ	0	0	Χ	As above.
	condition has been transmitted.	Load SLA+W	Χ	0	0	Χ	SLA+W will be transmitted; the I ² C block will be switched to MST/TRX mode.
0x38	Arbitration lost in NOT ACK bit.	No I2DAT action or	0	0	0	Х	I ² C-bus will be released; the I ² C block will enter a slave mode.
		No I2DAT action	1	0	0	Χ	A START condition will be transmitted when the bus becomes free.
0x40	SLA+R has been transmitted; ACK has	No I2DAT action or	0	0	0	0	Data byte will be received; NOT ACK bit will be returned.
	been received.	No I2DAT action	0	0	0	1	Data byte will be received; ACK bit will be returned.
0x48	SLA+R has been transmitted; NOT ACK	No I2DAT action or	1	0	0	X	Repeated START condition will be transmitted.
	has been received.	No I2DAT action or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	Х	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x50	Data byte has been received; ACK has	Read data byte or	0	0	0	0	Data byte will be received; NOT ACK bit will be returned.
	been returned.	Read data byte	0	0	0	1	Data byte will be received; ACK bit will be returned.
0x58	Data byte has been received; NOT ACK	Read data byte or	1	0	0	Χ	Repeated START condition will be transmitted.
	has been returned.	Read data byte or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.
		Read data byte	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.

Table 188. Slave Receiver mode

Status	Status of the I ² C-bus	Application softw	are re	spons	е	Next action taken by I ² C hardware	
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(120017(1)			STA	STO	SI	AA	
0x60	Own SLA+W has been received; ACK	No I2DAT action or	Χ	0	0	0	Data byte will be received and NOT ACI will be returned.
	has been returned.	No I2DAT action	Χ	0	0	1	Data byte will be received and ACK will be returned.
0x68	Arbitration lost in SLA+R/W as master;	No I2DAT action or	Χ	0	0	0	Data byte will be received and NOT ACI will be returned.
	Own SLA+W has been received, ACK returned.	No I2DAT action	X	0	0	1	Data byte will be received and ACK will be returned.
0x70	General call address (0x00) has been	No I2DAT action or	Χ	0	0	0	Data byte will be received and NOT ACF will be returned.
	received; ACK has been returned.	No I2DAT action	Χ	0	0	1	Data byte will be received and ACK will be returned.
0x78	Arbitration lost in SLA+R/W as master;	No I2DAT action or	Χ	0	0	0	Data byte will be received and NOT ACK will be returned.
	General call address has been received, ACK has been returned.	No I2DAT action	X	0	0	1	Data byte will be received and ACK will be returned.
0x80	Previously addressed with own SLV	Read data byte or	Χ	0	0	0	Data byte will be received and NOT ACH will be returned.
	address; DATA has been received; ACK has been returned.	Read data byte	X	0	0	1	Data byte will be received and ACK will be returned.
0x88	Previously addressed with own SLA; DATA byte has been	Read data byte or	0	0	0	0	Switched to not addressed SLV mode; n recognition of own SLA or General call address.
	received; NOT ACK has been returned.	Read data byte or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1.
		Read data byte or	1	0	0	0	Switched to not addressed SLV mode; n recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		Read data byte	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General can address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus become free.
0x90	Previously addressed with General Call;	Read data byte or	Χ	0	0	0	Data byte will be received and NOT ACI will be returned.
	DATA byte has been received; ACK has been returned.	Read data byte	X	0	0	1	Data byte will be received and ACK will be returned.

Table 188. Slave Receiver mode

Status	Status of the I ² C-bus	Application softw	are re	spons	е		Next action taken by I ² C hardware
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(1200171)			STA	STO	SI	AA	
0x98	Previously addressed with General Call; DATA byte has been	Read data byte or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
	received; NOT ACK has been returned.	Read data byte or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1.
		Read data byte or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		Read data byte	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.
0xA0	A STOP condition or repeated START condition has been	No STDAT action or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
	received while still addressed as SLV/REC or SLV/TRX.	No STDAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1.
		No STDAT action or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No STDAT action	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.

Table 189. Slave Transmitter mode

Status	Status of the I ² C-bus	Application softw	are re	spons	е	Next action taken by I ² C hardware	
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2		٥.		
0xA8	Own SLA+R has been	Load data byte or	X	STO 0	SI	AA 0	Last data byte will be transmitted and
	received; ACK has been returned.	Load data byte	X	0	0	1	ACK bit will be received. Data byte will be transmitted; ACK will be
0xB0	Arbitration lost in	Load data byte or	Х	0	0	0	received. Last data byte will be transmitted and
жы	SLA+R/W as master; Own SLA+R has been						ACK bit will be received.
	received, ACK has been returned.	Load data byte	X	0	0	1	Data byte will be transmitted; ACK bit wi be received.
xB8	Data byte in I2DAT has been transmitted;	Load data byte or	X	0	0	0	Last data byte will be transmitted and ACK bit will be received.
	ACK has been received.	Load data byte	X	0	0	1	Data byte will be transmitted; ACK bit wibe received.
0xC0	Data byte in I2DAT has been transmitted; NOT ACK has been	No I2DAT action or	0	0	0	0	Switched to not addressed SLV mode; n recognition of own SLA or General call address.
	received.	No I2DAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1.
		No I2DAT action or	1	0	0	0	Switched to not addressed SLV mode; n recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No I2DAT action	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus become free.
0xC8	Last data byte in I2DAT has been transmitted (AA = 0);	No I2DAT action or	0	0	0	0	Switched to not addressed SLV mode; n recognition of own SLA or General call address.
	ACK has been received.	No I2DAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1.
		No I2DAT action or	1	0	0	0	Switched to not addressed SLV mode; n recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No I2DAT action	1	0	0	01	Switched to not addressed SLV mode; Own SLA will be recognized; General can address will be recognized if I2ADR.0 = logic 1. A START condition was be transmitted when the bus becomes free.

Chapter 12: LPC21xx/22xx I2C interface

9.5 Miscellaneous States

There are two I2STAT codes that do not correspond to a defined I²C hardware state (see Table 12–190). These are discussed below.

$9.6 \ \ I2STAT = 0xF8$

This status code indicates that no relevant information is available because the serial interrupt flag, SI, is not yet set. This occurs between other states and when the I²C block is not involved in a serial transfer.

9.7 I2STAT = 0x00

This status code indicates that a bus error has occurred during an I²C serial transfer. A bus error is caused when a START or STOP condition occurs at an illegal position in the format frame. Examples of such illegal positions are during the serial transfer of an address byte, a data byte, or an acknowledge bit. A bus error may also be caused when external interference disturbs the internal I²C block signals. When a bus error occurs, SI is set. To recover from a bus error, the STO flag must be set and SI must be cleared. This causes the I²C block to enter the "not addressed" slave mode (a defined state) and to clear the STO flag (no other bits in I2CON are affected). The SDA and SCL lines are released (a STOP condition is not transmitted).

Chapter 12: LPC21xx/22xx I²C interface

Table 190. Miscellaneous States

Status	Status of the I ² C-bus	Application softw	are re	spons	е		Next action taken by I ² C hardware
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(12031A1)			STA	STO	SI	AA	
0xF8	No relevant state information available; SI = 0.	No I2DAT action	N	o I2CC	ON act	ion	Wait or proceed current transfer.
0x00	Bus error during MST or selected slave modes, due to an illegal START or STOP condition. State 0x00 can also occur when interference causes the I ² C block to enter an undefined state.	No I2DAT action	0	1	0	X	Only the internal hardware is affected in the MST or addressed SLV modes. In all cases, the bus is released and the I ² C block is switched to the not addressed SLV mode. STO is reset.

9.8 Some special cases

The I²C hardware has facilities to handle the following special cases that may occur during a serial transfer:

9.9 Simultaneous repeated START conditions from two masters

A repeated START condition may be generated in the master transmitter or master receiver modes. A special case occurs if another master simultaneously generates a repeated START condition (see <u>Figure 12–46</u>). Until this occurs, arbitration is not lost by either master since they were both transmitting the same data.

If the I²C hardware detects a repeated START condition on the I²C-bus before generating a repeated START condition itself, it will release the bus, and no interrupt request is generated. If another master frees the bus by generating a STOP condition, the I²C block will transmit a normal START condition (state 0x08), and a retry of the total serial data transfer can commence.

9.10 Data transfer after loss of arbitration

Arbitration may be lost in the master transmitter and master receiver modes (see <u>Figure 12–40</u>). Loss of arbitration is indicated by the following states in I2STAT; 0x38, 0x68, 0x78, and 0xB0 (see <u>Figure 12–42</u> and <u>Figure 12–43</u>).

If the STA flag in I2CON is set by the routines which service these states, then, if the bus is free again, a START condition (state 0x08) is transmitted without intervention by the CPU, and a retry of the total serial transfer can commence.

9.11 Forced access to the I²C-bus

In some applications, it may be possible for an uncontrolled source to cause a bus hang-up. In such situations, the problem may be caused by interference, temporary interruption of the bus or a temporary short-circuit between SDA and SCL.

Chapter 12: LPC21xx/22xx I²C interface

If an uncontrolled source generates a superfluous START or masks a STOP condition, then the I²C-bus stays busy indefinitely. If the STA flag is set and bus access is not obtained within a reasonable amount of time, then a forced access to the I²C-bus is possible. This is achieved by setting the STO flag while the STA flag is still set. No STOP condition is transmitted. The I²C hardware behaves as if a STOP condition was received and is able to transmit a START condition. The STO flag is cleared by hardware (see Figure 34).

9.12 I²C-bus obstructed by a low level on SCL or SDA

An I²C-bus hang-up occurs if SDA or SCL is pulled LOW by an uncontrolled source. If the SCL line is obstructed (pulled LOW) by a device on the bus, no further serial transfer is possible, and the I²C hardware cannot resolve this type of problem. When this occurs, the problem must be resolved by the device that is pulling the SCL bus line LOW.


If the SDA line is obstructed by another device on the bus (e.g., a slave device out of bit synchronization), the problem can be solved by transmitting additional clock pulses on the SCL line (see Figure 12–48). The I²C hardware transmits additional clock pulses when the STA flag is set, but no START condition can be generated because the SDA line is pulled LOW while the I²C-bus is considered free. The I²C hardware attempts to generate a START condition after every two additional clock pulses on the SCL line. When the SDA line is eventually released, a normal START condition is transmitted, state 0x08 is entered, and the serial transfer continues.

If a forced bus access occurs or a repeated START condition is transmitted while SDA is obstructed (pulled LOW), the I²C hardware performs the same action as described above. In each case, state 0x08 is entered after a successful START condition is transmitted and normal serial transfer continues. Note that the CPU is not involved in solving these bus hang-up problems.


9.13 Bus error


A bus error occurs when a START or STOP condition is present at an illegal position in the format frame. Examples of illegal positions are during the serial transfer of an address byte, a data bit, or an acknowledge bit.

The I²C hardware only reacts to a bus error when it is involved in a serial transfer either as a master or an addressed slave. When a bus error is detected, the I²C block immediately switches to the not addressed slave mode, releases the SDA and SCL lines, sets the interrupt flag, and loads the status register with 0x00. This status code may be used to vector to a state service routine which either attempts the aborted serial transfer again or simply recovers from the error condition as shown in <u>Table 12–190</u>.

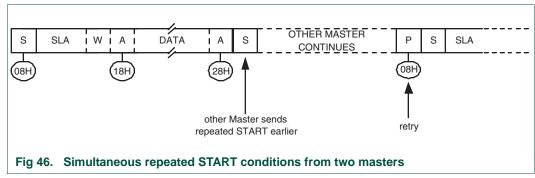

Chapter 12: LPC21xx/22xx I2C interface

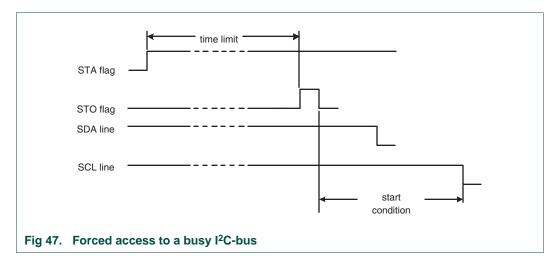

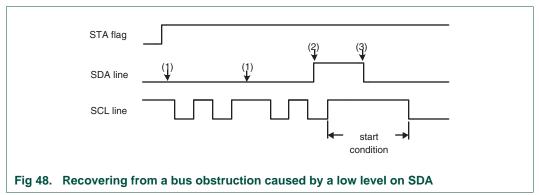

9.14 I²C State service routines

This section provides examples of operations that must be performed by various I²C state service routines. This includes:

- Initialization of the I²C block after a Reset.
- I²C Interrupt Service
- The 26 state service routines providing support for all four I²C operating modes.

9.15 Initialization

In the initialization example, the I²C block is enabled for both master and slave modes. For each mode, a buffer is used for transmission and reception. The initialization routine performs the following functions:

- I2ADR is loaded with the part's own slave address and the general call bit (GC)
- The I²C interrupt enable and interrupt priority bits are set
- The slave mode is enabled by simultaneously setting the I2EN and AA bits in I2CON and the serial clock frequency (for master modes) is defined by loading CR0 and CR1 in I2CON. The master routines must be started in the main program.

Chapter 12: LPC21xx/22xx I²C interface

The I^2C hardware now begins checking the I^2C -bus for its own slave address and general call. If the general call or the own slave address is detected, an interrupt is requested and I2STAT is loaded with the appropriate state information.

9.16 I²C interrupt service

When the I²C interrupt is entered, I2STAT contains a status code which identifies one of the 26 state services to be executed.

9.17 The State service routines

Each state routine is part of the I²C interrupt routine and handles one of the 26 states.

9.18 Adapting State services to an application

The state service examples show the typical actions that must be performed in response to the 26 I²C state codes. If one or more of the four I²C operating modes are not used, the associated state services can be omitted, as long as care is taken that the those states can never occur.

In an application, it may be desirable to implement some kind of time-out during I²C operations, in order to trap an inoperative bus or a lost service routine.

10. Software example

10.1 Initialization routine

Example to initialize I²C Interface as a Slave and/or Master.

- 1. Load I2ADR with own Slave Address, enable general call recognition if needed.
- 2. Enable I²C interrupt.
- Write 0x44 to I2CONSET to set the I2EN and AA bits, enabling Slave functions. For Master only functions, write 0x40 to I2CONSET.

10.2 Start Master Transmit function

Begin a Master Transmit operation by setting up the buffer, pointer, and data count, then initiating a Start.

- Initialize Master data counter.
- 2. Set up the Slave Address to which data will be transmitted, and add the Write bit.
- 3. Write 0x20 to I2CONSET to set the STA bit.
- 4. Set up data to be transmitted in Master Transmit buffer.
- 5. Initialize the Master data counter to match the length of the message being sent.
- 6. Exit

10.3 Start Master Receive function

Begin a Master Receive operation by setting up the buffer, pointer, and data count, then initiating a Start.

Chapter 12: LPC21xx/22xx I²C interface

- 1. Initialize Master data counter.
- 2. Set up the Slave Address to which data will be transmitted, and add the Read bit.
- 3. Write 0x20 to I2CONSET to set the STA bit.
- 4. Set up the Master Receive buffer.
- 5. Initialize the Master data counter to match the length of the message to be received.
- 6. Exit

10.4 I²C interrupt routine

Determine the I²C state and which state routine will be used to handle it.

- 1. Read the I²C status from I2STA.
- 2. Use the status value to branch to one of 26 possible state routines.

10.5 Non mode specific States

10.6 State: 0x00

Bus Error. Enter not addressed Slave mode and release bus.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.7 Master States

State 08 and State 10 are for both Master Transmit and Master Receive modes. The R/W bit decides whether the next state is within Master Transmit mode or Master Receive mode.

10.8 State: 0x08

A Start condition has been transmitted. The Slave Address + R/W bit will be transmitted, an ACK bit will be received.

- 1. Write Slave Address with R/W bit to I2DAT.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Master Transmit mode data buffer.
- 5. Set up Master Receive mode data buffer.
- 6. Initialize Master data counter.
- 7. Exit

10.9 State: 0x10

A repeated Start condition has been transmitted. The Slave Address + R/W bit will be transmitted, an ACK bit will be received.

1. Write Slave Address with R/W bit to I2DAT.

Chapter 12: LPC21xx/22xx I²C interface

- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Master Transmit mode data buffer.
- 5. Set up Master Receive mode data buffer.
- 6. Initialize Master data counter.
- 7. Exit

10.10 Master Transmitter States

10.11 State: 0x18

Previous state was State 8 or State 10, Slave Address + Write has been transmitted, ACK has been received. The first data byte will be transmitted, an ACK bit will be received.

- 1. Load I2DAT with first data byte from Master Transmit buffer.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Increment Master Transmit buffer pointer.
- 5. Exit

10.12 State: 0x20

Slave Address + Write has been transmitted, NOT ACK has been received. A Stop condition will be transmitted.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.13 State: 0x28

Data has been transmitted, ACK has been received. If the transmitted data was the last data byte then transmit a Stop condition, otherwise transmit the next data byte.

- 1. Decrement the Master data counter, skip to step 5 if not the last data byte.
- 2. Write 0x14 to I2CONSET to set the STO and AA bits.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Exit
- 5. Load I2DAT with next data byte from Master Transmit buffer.
- 6. Write 0x04 to I2CONSET to set the AA bit.
- 7. Write 0x08 to I2CONCLR to clear the SI flag.
- 8. Increment Master Transmit buffer pointer
- 9. Exit

10.14 State: 0x30

UM10114 3

Data has been transmitted, NOT ACK received. A Stop condition will be transmitted.

© NXP B.V. 2008. All rights reserved.

Chapter 12: LPC21xx/22xx I²C interface

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.15 State: 0x38

Arbitration has been lost during Slave Address + Write or data. The bus has been released and not addressed Slave mode is entered. A new Start condition will be transmitted when the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.16 Master Receive States

10.17 State: 0x40

Previous state was State 08 or State 10. Slave Address + Read has been transmitted, ACK has been received. Data will be

received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.18 State: 0x48

Slave Address + Read has been transmitted, NOT ACK has been received. A Stop condition will be transmitted.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.19 State: 0x50

Data has been received, ACK has been returned. Data will be read from I2DAT. Additional data will be received. If this is the last data byte then NOT ACK will be returned, otherwise ACK will be returned.

- 1. Read data byte from I2DAT into Master Receive buffer.
- 2. Decrement the Master data counter, skip to step 5 if not the last data byte.
- 3. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 4. Exit
- 5. Write 0x04 to I2CONSET to set the AA bit.
- 6. Write 0x08 to I2CONCLR to clear the SI flag.
- 7. Increment Master Receive buffer pointer

Chapter 12: LPC21xx/22xx I²C interface

8. Exit

10.20 State: 0x58

Data has been received, NOT ACK has been returned. Data will be read from I2DAT. A Stop condition will be transmitted.

- 1. Read data byte from I2DAT into Master Receive buffer.
- 2. Write 0x14 to I2CONSET to set the STO and AA bits.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Exit

10.21 Slave Receiver States

10.22 State: 0x60

Own Slave Address + Write has been received, ACK has been returned. Data will be received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

10.23 State: 0x68

Arbitration has been lost in Slave Address and R/W bit as bus Master. Own Slave Address + Write has been received, ACK has been returned. Data will be received and ACK will be returned. STA is set to restart Master mode after the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit.

10.24 State: 0x70

General call has been received, ACK has been returned. Data will be received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

Chapter 12: LPC21xx/22xx I²C interface

10.25 State: 0x78

Arbitration has been lost in Slave Address + R/W bit as bus Master. General call has been received and ACK has been returned. Data will be received and ACK returned. STA is set to restart Master mode after the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

10.26 State: 0x80

Previously addressed with own Slave Address. Data has been received and ACK has been returned. Additional data will be read.

- 1. Read data byte from I2DAT into the Slave Receive buffer.
- 2. Decrement the Slave data counter, skip to step 5 if not the last data byte.
- 3. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 4. Exit.
- 5. Write 0x04 to I2CONSET to set the AA bit.
- 6. Write 0x08 to I2CONCLR to clear the SI flag.
- 7. Increment Slave Receive buffer pointer.
- 8. Exit

10.27 State: 0x88

Previously addressed with own Slave Address. Data has been received and NOT ACK has been returned. Received data will not be saved. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.28 State: 0x90

Previously addressed with general call. Data has been received, ACK has been returned. Received data will be saved. Only the first data byte will be received with ACK. Additional data will be received with NOT ACK.

- 1. Read data byte from I2DAT into the Slave Receive buffer.
- 2. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 3. Exit

Chapter 12: LPC21xx/22xx I²C interface

10.29 State: 0x98

Previously addressed with general call. Data has been received, NOT ACK has been returned. Received data will not be saved. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.30 State: 0xA0

A Stop condition or repeated Start has been received, while still addressed as a Slave. Data will not be saved. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

10.31 Slave Transmitter States

10.32 State: 0xA8

Own Slave Address + Read has been received, ACK has been returned. Data will be transmitted, ACK bit will be received.

- 1. Load I2DAT from Slave Transmit buffer with first data byte.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Slave Transmit mode data buffer.
- 5. Increment Slave Transmit buffer pointer.
- 6. Exit

10.33 State: 0xB0

Arbitration lost in Slave Address and R/W bit as bus Master. Own Slave Address + Read has been received, ACK has been returned. Data will be transmitted, ACK bit will be received. STA is set to restart Master mode after the bus is free again.

- 1. Load I2DAT from Slave Transmit buffer with first data byte.
- 2. Write 0x24 to I2CONSET to set the STA and AA bits.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Slave Transmit mode data buffer.
- 5. Increment Slave Transmit buffer pointer.
- 6. Exit

10.34 State: 0xB8

Data has been transmitted, ACK has been received. Data will be transmitted, ACK bit will be received.

Chapter 12: LPC21xx/22xx I2C interface

- 1. Load I2DAT from Slave Transmit buffer with data byte.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Increment Slave Transmit buffer pointer.
- 5. Exit

10.35 State: 0xC0

Data has been transmitted, NOT ACK has been received. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit.

10.36 State: 0xC8

The last data byte has been transmitted, ACK has been received. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

Chapter 13: LPC21xx/22xx SPI

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

All LPC21xx and all LPC22xx have by default two SPI interfaces SPI0 and SPI1.

Remark: For enhanced parts only, the SPI1 interface can be selected as an SSP interface using the same pins as SPI1 (see Section 14–1).

Table 191. LPC21xx/22xx SPI configurations

Part	SPI data transfer width (see <u>Table 13–195</u>)	SSEL pin usable as GPIO (see Table 13–193)	SSP interface selectable for SPI1
no suffix and	/00 parts		
LPC2109	8 bit, fixed	no	no
LPC2119	8 bit, fixed	no	no
LPC2129	8 bit, fixed	no	no
LPC2114	8 bit, fixed	no	no
LPC2124	8 bit, fixed	no	no
LPC2194	8 bit, fixed	no	no
LPC2210	8 bit, fixed	no	no
LPC2220	8 bit, fixed	yes	no
LPC2212	8 bit, fixed	no	no
LPC2214	8 bit, fixed	no	no
LPC2290	8 bit, fixed	no	no
LPC2292	8 bit, fixed	no	no
LPC2294	8 bit, fixed	no	no
/01 parts			
LPC2109	8 to 16 bit	yes	yes
LPC2119	8 to 16 bit	yes	yes
LPC2129	8 to 16 bit	yes	yes
LPC2114	8 to 16 bit	yes	yes
LPC2124	8 to 16 bit	yes	yes
LPC2194	8 to 16 bit	yes	yes
LPC2210	8 bit, fixed	yes	yes
LPC2212	8 to 16 bit	yes	yes
LPC2214	8 to 16 bit	yes	yes
LPC2290	8 bit, fixed	yes	yes
LPC2292	8 to 16 bit	yes	yes
LPC2294	8 to 16 bit	yes	yes

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

Chapter 13: LPC21xx/22xx SPI

2. Features

- Two complete and independent SPI controllers
- · Compliant with Serial Peripheral Interface (SPI) specification
- · Synchronous, serial, and full duplex communication
- · Combined SPI master and slave
- Maximum data bit rate of one eighth of the input clock rate
- 8 bit only or 8 to 16 bit per transfer

3. Description

3.1 SPI overview


SPI 0 and SPI1 are full duplex serial interfaces. They can handle multiple masters and slaves being connected to a given bus. Only a single master and a single slave can communicate on the interface during a given data transfer. During a data transfer the master always sends a byte of data to the slave, and the slave always sends a byte of data to the master.

3.2 SPI data transfers

<u>Figure 13–49</u> is a timing diagram that illustrates the four different data transfer formats that are available with the SPI. This timing diagram illustrates a single 8 bit data transfer. The first thing you should notice in this timing diagram is that it is divided into three horizontal parts. The first part describes the SCK and SSEL signals. The second part describes the MOSI and MISO signals when the CPHA variable is 0. The third part describes the MOSI and MISO signals when the CPHA variable is 1.

In the first part of the timing diagram, note two points. First, the SPI is illustrated with CPOL set to both 0 and 1. The second point to note is the activation and de-activation of the SSEL signal. When CPHA = 0, the SSEL signal will always go inactive between data transfers. This is not guaranteed when CPHA = 1 (the signal can remain active).

Chapter 13: LPC21xx/22xx SPI

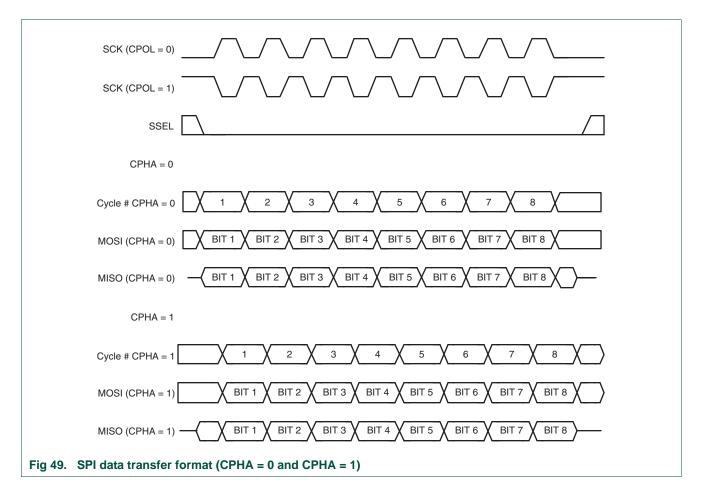

The data and clock phase relationships are summarized in Table 13-192. This table summarizes the following for each setting of CPOL and CPHA.

- When the first data bit is driven
- When all other data bits are driven
- · When data is sampled

Table 192. SPI data to clock phase relationship

CPOL and CPHA settings	First data driven	Other data driven	Data sampled
CPOL = 0, $CPHA = 0$	Prior to first SCK rising edge	SCK falling edge	SCK rising edge
CPOL = 0, CPHA = 1	First SCK rising edge	SCK rising edge	SCK falling edge
CPOL = 1, CPHA = 0	Prior to first SCK falling edge	SCK rising edge	SCK falling edge
CPOL = 1, CPHA = 1	First SCK falling edge	SCK falling edge	SCK rising edge

The definition of when an 8 bit transfer starts and stops is dependent on whether a device is a master or a slave, and the setting of the CPHA variable.

When a device is a master, the start of a transfer is indicated by the master having a byte of data that is ready to be transmitted. At this point, the master can activate the clock, and begin the transfer. The transfer ends when the last clock cycle of the transfer is complete.

Chapter 13: LPC21xx/22xx SPI

When a device is a slave, and CPHA is set to 0, the transfer starts when the SSEL signal goes active, and ends when SSEL goes inactive. When a device is a slave, and CPHA is set to 1, the transfer starts on the first clock edge when the slave is selected, and ends on the last clock edge where data is sampled.

3.3 SPI peripheral details

3.3.1 General information

There are four registers that control the SPI peripheral. They are described in detail in <u>Section 13–5 "Register description" on page 214</u>.

The SPI control register contains a number of programmable bits used to control the function of the SPI block. The settings for this register must be set up prior to a given data transfer taking place.

The SPI status register contains read only bits that are used to monitor the status of the SPI interface, including normal functions, and exception conditions. The primary purpose of this register is to detect completion of a data transfer. This is indicated by the SPIF bit. The remaining bits in the register are exception condition indicators. These exceptions will be described later in this section.

The SPI data register is used to provide the transmit and receive data bytes. An internal shift register in the SPI block logic is used for the actual transmission and reception of the serial data. Data is written to the SPI data register for the transmit case. There is no buffer between the data register and the internal shift register. A write to the data register goes directly into the internal shift register. Therefore, data should only be written to this register when a transmit is not currently in progress. Read data is buffered. When a transfer is complete, the receive data is transferred to a single byte data buffer, where it is later read. A read of the SPI data register returns the value of the read data buffer.

The SPI clock counter register controls the clock rate when the SPI block is in master mode. This needs to be set prior to a transfer taking place, when the SPI block is a master. This register has no function when the SPI block is a slave.

The I/Os for this implementation of SPI are standard CMOS I/Os. The open drain SPI option is not implemented in this design. When a device is set up to be a slave, its I/Os are only active when it is selected by the SSEL signal being active.

3.3.2 Master operation

The following sequence describes how to process a data transfer with the SPI block when it is set up as the master. This process assumes that any prior data transfer has already completed.

- 1. Set the SPI clock counter register to the desired clock rate.
- 2. Set the SPI control register to the desired settings.
- 3. Write the data to transmitted to the SPI data register. This write starts the SPI data transfer.
- 4. Wait for the SPIF bit in the SPI status register to be set to 1. The SPIF bit will be set after the last cycle of the SPI data transfer.
- Read the SPI status register.

Chapter 13: LPC21xx/22xx SPI

- 6. Read the received data from the SPI data register (optional).
- 7. Go to step 3 if more data is required to transmit.

Note: A read or write of the SPI data register is required in order to clear the SPIF status bit. Therefore, if the optional read of the SPI data register does not take place, a write to this register is required in order to clear the SPIF status bit.

3.3.3 Slave operation

The following sequence describes how to process a data transfer with the SPI block when it is set up as slave. This process assumes that any prior data transfer has already completed. It is required that the system clock driving the SPI logic be at least 8X faster than the SPI.

- 1. Set the SPI control register to the desired settings.
- 2. Write the data to transmitted to the SPI data register (optional). Note that this can only be done when a slave SPI transfer is not in progress.
- 3. Wait for the SPIF bit in the SPI status register to be set to 1. The SPIF bit will be set after the last sampling clock edge of the SPI data transfer.
- 4. Read the SPI status register.
- 5. Read the received data from the SPI data register (optional).
- 6. Go to step 2 if more data is required to transmit.

Note: A read or write of the SPI data register is required in order to clear the SPIF status bit. Therefore, at least one of the optional reads or writes of the SPI data register must take place, in order to clear the SPIF status bit.

3.3.4 Exception conditions

3.3.4.1 Read overrun

A read overrun occurs when the SPI block internal read buffer contains data that has not been read by the processor, and a new transfer has completed. The read buffer containing valid data is indicated by the SPIF bit in the status register being active. When a transfer completes, the SPI block needs to move the received data to the read buffer. If the SPIF bit is active (the read buffer is full), the new receive data will be lost, and the read overrun (ROVR) bit in the status register will be activated.

3.3.4.2 Write collision

As stated previously, there is no write buffer between the SPI block bus interface, and the internal shift register. As a result, data must not be written to the SPI data register when a SPI data transfer is currently in progress. The time frame where data cannot be written to the SPI data register is from when the transfer starts, until after the status register has been read when the SPIF status is active. If the SPI data register is written in this time frame, the write data will be lost, and the write collision (WCOL) bit in the status register will be activated.

Chapter 13: LPC21xx/22xx SPI

3.3.4.3 Mode fault

The SSEL signal must always be inactive when the SPI block is a master. If the SSEL signal goes active, when the SPI block is a master, this indicates another master has selected the device to be a slave. This condition is known as a mode fault. When a mode fault is detected, the mode fault (MODF) bit in the status register will be activated, the SPI signal drivers will be de-activated, and the SPI mode will be changed to be a slave.

3.3.4.4 Slave abort

A slave transfer is considered to be aborted, if the SSEL signal goes inactive before the transfer is complete. In the event of a slave abort, the transmit and receive data for the transfer that was in progress are lost, and the slave abort (ABRT) bit in the status register will be activated.

4. Pin description

Table 193. SPI pin description

Pin name	Туре	Pin description
SCK0/ SCK1	Input/ Output	Serial Clock. The SPI is a clock signal used to synchronize the transfer of data across the SPI interface. The SPI is always driven by the master and received by the slave. The clock is programmable to be active high or active low. The SPI is only active during a data transfer. Any other time, it is either in its inactive state, or tri-stated.
SSELO/ SSEL1	Input	Slave Select. The SPI slave select signal is an active low signal that indicates which slave is currently selected to participate in a data transfer. Each slave has its own unique slave select signal input. The SSEL must be low before data transactions begin and normally stays low for the duration of the transaction. If the SSEL signal goes high any time during a data transfer, the transfer is considered to be aborted. In this event, the slave returns to idle, and any data that was received is thrown away. There are no other indications of this exception. This signal is not directly driven by the master. It could be driven by a simple general purpose I/O under software control. Remark: Flashless LPC22xx and all legacy parts (/00 and no suffix) configured to operate as a SPI master MUST select SSEL functionality on an appropriate pin and have HIGH level on this pin in order to act as a master.
		For all other LPC21xx and LPC22xx parts, the SSEL pin can be used for a different function when the SPI interface is only used in Master mode. For example, the pin hosting the SSEL function can be configured as an output digital GPIO pin and can be used to select one of the SPI slaves.
MISO0/ MISO1	Input/ Output	Master In Slave Out. The MISO signal is a unidirectional signal used to transfer serial data from the slave to the master. When a device is a slave, serial data is output on this signal. When a device is a master, serial data is input on this signal. When a slave device is not selected, the slave drives the signal high impedance.
MOSI0/ MOSI1	Input/ Output	Master Out Slave In. The MOSI signal is a unidirectional signal used to transfer serial data from the master to the slave. When a device is a master, serial data is output on this signal. When a device is a slave, serial data is input on this signal.

5. Register description

The SPI contains 5 registers as shown in <u>Table 13–194</u>. All registers are byte, half word and word accessible.

Chapter 13: LPC21xx/22xx SPI

Table 194. SPI register map

Name	Description	Access	Reset value ^[1]	SPI0 Address & name	SPI1 Address & name
SPCR	SPI Control Register. This register controls the operation of the SPI.	R/W	0x0000	0xE002 0000 S0SPCR	0xE003 0000 S1SPCR
SPSR	SPI Status Register. This register shows the status of the SPI.	RO	0x00	0xE002 0004 S0SPSR	0xE003 0004 S1SPSR
SPDR	SPI Data Register. This bi-directional register provides the transmit and receive data for the SPI. Transmit data is provided to the SPI by writing to this register. Data received by the SPI can be read from this register.	R/W	0x0000	0xE002 0008 S0SPDR	0xE003 0008 S1SPDR
SPCCR	SPI Clock Counter Register. This register controls the frequency of a master's SCK.	R/W	0x00	0xE002 000C S0SPCCR	0xE003 000C S1SPCCR
SPINT	SPI Interrupt Flag. This register contains the interrupt flag for the SPI interface.	R/W	0x00	0xE002 001C S0SPINT	0xE003 001C S1SPINT

^[1] Reset Value refers to the data stored in used bits only. It does not include the content of reserved bits.

5.1 SPI Control Register (S0SPCR - 0xE002 0000 and S1SPCR - 0xE003 0000)

The SPCR register controls the operation of the SPI as per the configuration bits setting.

Table 195. SPI Control Register (S0SPCR - address 0xE002 0000 and S1SPCR - address 0xE003 0000) bit description

Bit	Symbol	Value	Description	Reset value		
1:0	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		
2	BitEnable ^[1]	0	The SPI controller sends and receives 8 bits of data per transfer.	0		
		1	The SPI controller sends and receives the number of bits selected by bits 11:8.			
3	СРНА	0	Clock phase control determines the relationship between the data and the clock on SPI transfers, and controls when a slave transfer is defined as starting and ending.			
			Data is sampled on the first clock edge of SCK. A transfer starts and ends with activation and deactivation of the SSEL signal.			
		1	Data is sampled on the second clock edge of the SCK. A transfer starts with the first clock edge, and ends with the last sampling edge when the SSEL signal is active.			
4	CPOL	0	Clock polarity control.	0		
			SCK is active high.			
		1	SCK is active low.			

Chapter 13: LPC21xx/22xx SPI

Table 195. SPI Control Register (S0SPCR - address 0xE002 0000 and S1SPCR - address 0xE003 0000) bit description

Bit	Symbol	Value	Description	Reset value
5	MSTR	0	Master mode select.	0
			The SPI operates in Slave mode.	
		1	The SPI operates in Master mode.	
6	LSBF	0	LSB First controls which direction each byte is shifted when transferred.	0
			SPI data is transferred MSB (bit 7) first.	
		1	SPI data is transferred LSB (bit 0) first.	
7	SPIE	0	Serial peripheral interrupt enable.	0
		SPI interrupts are inhibited.		
		1	A hardware interrupt is generated each time the SPIF or MODF bits are activated.	
11:8	BITS[1]		When bit 2 of this register is 1, this field controls the number of bits per transfer:	0000
		1000	8 bits per transfer	
		1001	9 bits per transfer	
		1010	10 bits per transfer	
		1011	11 bits per transfer	
		1100	12 bits per transfer	
		1101	13 bits per transfer	
		1110	14 bits per transfer	
		1111	15 bits per transfer	
		0000	16 bits per transfer	
15:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] See Table 13–191 for data transfer width allowed.

5.2 SPI Status Register (S0SPSR - 0xE002 0004 and S1SPSR - 0xE003 0004)

The SPSR register controls the operation of the SPI as per the configuration bits setting.

Table 196. SPI Status Register (S0SPSR - address 0xE002 0004 and S1SPSR - address 0xE003 0004) bit description

Bit	Symbol	Description	Reset value
2:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	ABRT	Slave abort. When 1, this bit indicates that a slave abort has occurred. This bit is cleared by reading this register.	0
4	MODF	Mode fault. when 1, this bit indicates that a Mode fault error has occurred. This bit is cleared by reading this register, then writing the SPI control register.	0

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 13: LPC21xx/22xx SPI

Table 196. SPI Status Register (S0SPSR - address 0xE002 0004 and S1SPSR - address 0xE003 0004) bit description

Bit	Symbol	Description	Reset value
5	ROVR	Read overrun. When 1, this bit indicates that a read overrun has occurred. This bit is cleared by reading this register.	0
6	WCOL	Write collision. When 1, this bit indicates that a write collision has occurred. This bit is cleared by reading this register, then accessing the SPI data register.	0
7	SPIF	SPI transfer complete flag. When 1, this bit indicates when a SPI data transfer is complete. When a master, this bit is set at the end of the last cycle of the transfer. When a slave, this bit is set on the last data sampling edge of the SCK. This bit is cleared by first reading this register, then accessing the SPI data register. Note: This is not the SPI interrupt flag. This flag is found in the SPINT register.	0

5.3 SPI Data Register (S0SPDR - 0xE002 0008, S1SPDR - 0xE003 0008)

This bi-directional data register provides the transmit and receive data for the SPI. Transmit data is provided to the SPI by writing to this register. Data received by the SPI can be read from this register. When a master, a write to this register will start a SPI data transfer. Writes to this register will be blocked from when a data transfer starts to when the SPIF status bit is set, and the status register has not been read.

Table 197. SPI Data Register (S0SPDR - address 0xE002 0008, S1SPDR - address 0xE003 0008) bit description

Bit	Symbol	Description	Reset value
15:0	Data	SPI Bi-directional data port.	0

5.4 SPI Clock Counter Register (S0SPCCR - 0xE002 000C and S1SPCCR - 0xE003 000C)

This register controls the frequency of a master's SCK. The register indicates the number of SPI peripheral clock cycles that make up an SPI clock.

In Master mode, this register must be an even number greater than or equal to 8. Violations of this can result in unpredictable behavior. The SPI SCK rate may be calculated as: PCLK / SnSPCCR value. The PCLK rate is CCLK /APB divider rate as determined by the APBDIV register contents (see Table 6–76).

In Slave mode, the SPI clock rate provided by the master must not exceed 1/8 of the peripheral clock. The content of the SOSPCCR register is not relevant.

Table 198. SPI Clock Counter Register (S0SPCCR - address 0xE002 000C and S1SPCCR - address 0xE003 000C) bit description

Bit	Symbol	Description	Reset value
7:0	Counter	SPI Clock counter setting.	0x00

5.5 SPI Interrupt Register (S0SPINT - 0xE002 001C and S1SPINT - 0xE003 001C)

This register contains the interrupt flag for the SPI interface.


Chapter 13: LPC21xx/22xx SPI

Table 199. SPI Interrupt Register (S0SPINT - address 0xE002 001C and S1SPINT - address 0xE003 001C) bit description

Bit	Symbol	Description	Reset value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:1	SPI Interrupt	SPI interrupt flag. Set by the SPI interface to generate an interrupt. Cleared by writing a 1 to this bit.	0
		Note: This bit will be set once when SPIE = 1 and at least one of SPIF and MODF bits changes from 0 to 1. However, only when the SPI Interrupt bit is set and SPI Interrupt is enabled in the VIC, SPI based interrupt can be processed by interrupt handling software.	

6. Architecture

The block diagram of the SPI solution implemented in SPI0 and SPI1 interface is shown in the Figure 13–50.

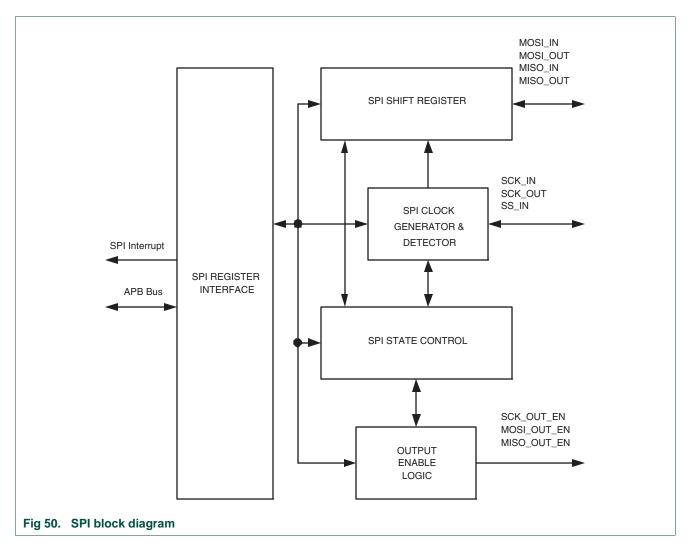

UM10114

Chapter 14: LPC21xx/22xx SSP interface

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The SSP interface is available on the following parts:

- LPC2109/01, LPC2119/01, LPC2129/01
- LPC2114/01, LPC2124/01
- LPC2194/01
- LPC2210/01, LPC2220
- LPC2212/01, LPC2214/01
- LPC2292/01, LPC2292/01

The SSP interface shares its pins with the SPI1 interface. To select the SSP peripheral, select the PCSSP bit in the PCONP register (Section 6–10.3). Note that the default interface on Reset is the SPI1 interface.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- Compatible with Motorola SPI, 4-wire TI SSI, and National Semiconductor Microwire buses
- Synchronous serial communication
- Master or slave operation
- 8-frame FIFOs for both transmit and receive
- 4 to 16 bit frame

3. Description

The SSP is a Synchronous Serial Port (SSP) controller capable of operation on an SPI, 4-wire SSI, or Microwire bus. It can interact with multiple masters and slaves on the bus. Only a single master and a single slave can communicate on the bus during a given data transfer. Data transfers are in principle full duplex, with frames of 4 to 16 bits of data flowing from the master to the slave and from the slave to the master. In practice it is often the case that only one of these data flows carries meaningful data.

While the SSP and SPI1 peripherals share the same physical pins, it is not possible to have both of these two peripherals active at the same time. Bit 10 (PSPI1) and bit 21 (PSSP) residing in the <u>Section 6–10.3</u> control the activity of the SPI1 and SSP module respectively. The corresponding peripheral is enabled when its control bit is 1, and it is disabled when the control bit is 0. After power-on reset, SPI1 is enabled, maintaining the backward compatibility with other NXP LPC2000 microcontrollers. Any attempt to write 1 to PSPI1 and PSSP bits at the same time will result in PSPI = 1 and PSSP = 0.

Chapter 14: LPC21xx/22xx SSP interface

To switch on the fly from SPI1 to SSP and back, first disable the active peripheral's interrupt(s), both in the peripheral's and VIC's registers. Next, clear all pending interrupt flags (if any set). Only then, the currently enabled peripheral can be turned off in the PCONP register. After this, the other serial interface can be enabled.

It is important to disable the currently used peripheral by clearing its bit in the PCONP register only at the very end of the peripheral's shut-down procedure. Otherwise, having 0 in a bit in PCONP will disable all clocks from coming into the peripheral controlled by that bit. Then, reading from the peripheral's registers will not yield valid data and write and/or modify access will be banned, i.e. no content can be changed. Consequently, if any of the interrupt triggering flags are left active in the peripheral's register(s) when the peripheral is disabled via the PCONP, the invoked ISR may not be able to successfully service pending interrupt, and the same interrupt may keep overloading the microcontroller even though its peripheral is disabled.

Table 200. SSP pin descriptions


Pin	Type	Interface	e pin nan	ne/function	Pin description
name	Type	SPI	SSI	Microwire	Pin description
SCK1	I/O	SCK	CLK	SK	Serial Clock. SCK/CLK/SK is a clock signal used to synchronize the transfer of data. It is driven by the master and received by the slave. When SPI interface is used the clock is programmable to be active high or active low, otherwise it is always active high. SCK1 only switches during a data transfer. Any other time, the SSP either holds it in its inactive state, or does not drive it (leaves it in high impedance state).
SSEL1	I/O	SSEL	FS	CS	Slave Select/Frame Sync/Chip Select. When the SSP is a bus master, it drives this signal from shortly before the start of serial data, to shortly after the end of serial data, to signify a data transfer as appropriate for the selected bus and mode. When the SSP is a bus slave, this signal qualifies the presence of data from the Master, according to the protocol in use. When there is just one bus master and one bus slave, the Frame Sync or Slave Select signal from the Master can be connected directly to the slave's corresponding input. When there is more than one slave on the bus, further qualification of their Frame Select/Slave Select inputs will typically be necessary to prevent more than one slave from responding to a transfer.
MISO1	I/O	MISO	DR(M) DX(S)	SI(M) SO(S)	Master In Slave Out. The MISO signal transfers serial data from the slave to the master. When the SSP is a slave, serial data is output on this signal. When the SSP is a master, it clocks in serial data from this signal. When the SSP is a slave and is not selected by SSEL, it does not drive this signal (leaves it in high impedance state).
MOSI1	I/O	MOSI	DX(M) DR(S)	SO(M) SI(S)	Master Out Slave In. The MOSI signal transfers serial data from the master to the slave. When the SSP is a master, it outputs serial data on this signal. When the SSP is a slave, it clocks in serial data from this signal.

Chapter 14: LPC21xx/22xx SSP interface

4. Bus description

4.1 Texas Instruments synchronous serial frame format

<u>Figure 14–51</u> shows the 4-wire Texas Instruments synchronous serial frame format supported by the SSP module.

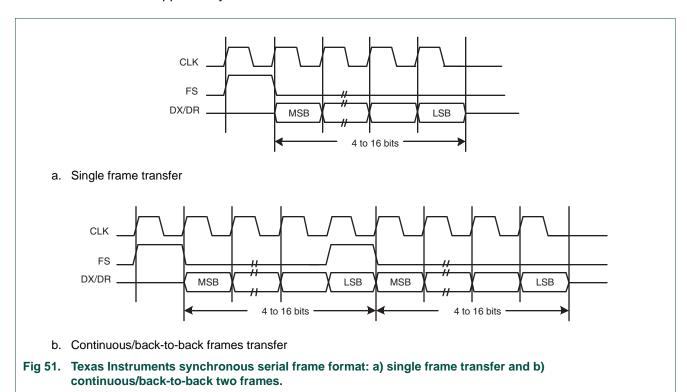

For device configured as a master in this mode, CLK and FS are forced LOW, and the transmit data line DX is tristated whenever the SSP is idle. Once the bottom entry of the transmit FIFO contains data, FS is pulsed HIGH for one CLK period. The value to be transmitted is also transferred from the transmit FIFO to the serial shift register of the transmit logic. On the next rising edge of CLK, the MSB of the 4 to 16-bit data frame is shifted out on the DX pin. Likewise, the MSB of the received data is shifted onto the DR pin by the off-chip serial slave device.

Both the SSP and the off-chip serial slave device then clock each data bit into their serial shifter on the falling edge of each CLK. The received data is transferred from the serial shifter to the receive FIFO on the first rising edge of CLK after the LSB has been latched.

4.2 SPI frame format

The SPI interface is a four-wire interface where the SSEL signal behaves as a slave select. The main feature of the SPI format is that the inactive state and phase of the SCK signal are programmable through the CPOL and CPHA bits within the SSPCR0 control register.

Chapter 14: LPC21xx/22xx SSP interface


4.2.1 Clock Polarity (CPOL) and Phase (CPHA) Control

When the CPOL clock polarity control bit is LOW, it produces a steady state low value on the SCK pin. If the CPOL clock polarity control bit is HIGH, a steady state high value is placed on the CLK pin when data is not being transferred.

The CPHA control bit selects the clock edge that captures data and allows it to change state. It has the most impact on the first bit transmitted by either allowing or not allowing a clock transition before the first data capture edge. When the CPHA phase control bit is LOW, data is captured on the first clock edge transition. If the CPHA clock phase control bit is HIGH, data is captured on the second clock edge transition.

4.2.2 SPI Format with CPOL = 0,CPHA = 0

Single and continuous transmission signal sequences for SPI format with CPOL = 0, CPHA = 0 are shown in Figure 14–52.

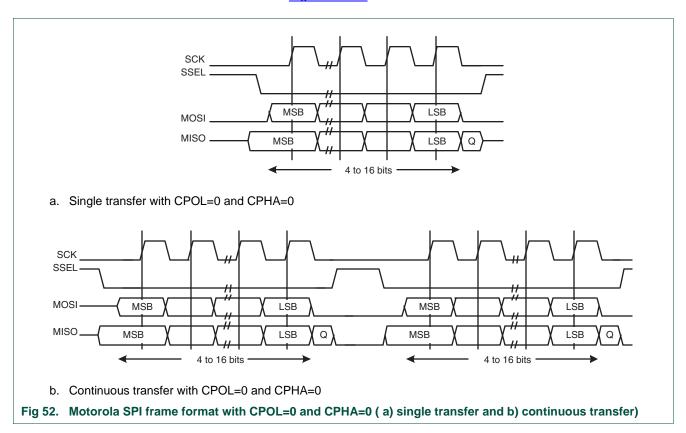

In this configuration, during idle periods:

- The CLK signal is forced LOW
- SSEL is forced HIGH
- The transmit MOSI/MISO pad is in high impedance

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. This causes slave data to be enabled onto the MISO input line of the master. Master's MOSI is enabled.

Chapter 14: LPC21xx/22xx SSP interface

One half SCK period later, valid master data is transferred to the MOSI pin. Now that both the master and slave data have been set, the SCK master clock pin goes HIGH after one further half SCK period.


The data is now captured on the rising and propagated on the falling edges of the SCK signal.

In the case of a single word transmission, after all bits of the data word have been transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.

However, in the case of continuous back-to-back transmissions, the SSEL signal must be pulsed HIGH between each data word transfer. This is because the slave select pin freezes the data in its serial peripheral register and does not allow it to be altered if the CPHA bit is logic zero. Therefore the master device must raise the SSEL pin of the slave device between each data transfer to enable the serial peripheral data write. On completion of the continuous transfer, the SSEL pin is returned to its idle state one SCK period after the last bit has been captured.

4.2.3 SPI format with CPOL = 0,CPHA = 1

The transfer signal sequence for SPI format with CPOL = 0, CPHA = 1 is shown in Figure 14-53, which covers both single and continuous transfers.

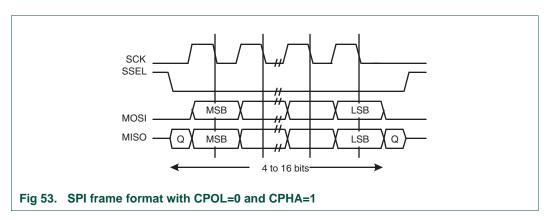

In this configuration, during idle periods:

- The CLK signal is forced LOW
- SSEL is forced HIGH
- The transmit MOSI/MISO pad is in high impedance

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. Master's MOSI pin is enabled. After a further one half SCK period, both master and slave valid data is enabled onto their respective transmission lines. At the same time, the SCK is enabled with a rising edge transition.

Data is then captured on the falling edges and propagated on the rising edges of the SCK signal.


In the case of a single word transfer, after all bits have been transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.

Chapter 14: LPC21xx/22xx SSP interface

For continuous back-to-back transfers, the SSEL pin is held LOW between successive data words and termination is the same as that of the single word transfer.

4.2.4 SPI format with CPOL = 1,CPHA = 0

Single and continuous transmission signal sequences for SPI format with CPOL=1, CPHA=0 are shown in Figure 14–54.

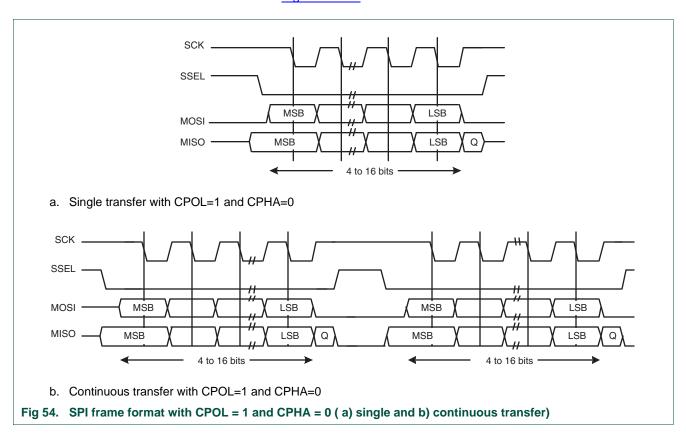

In this configuration, during idle periods:

- The CLK signal is forced HIGH
- · SSEL is forced HIGH
- The transmit MOSI/MISO pad is in high impedance

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW, which causes slave data to be immediately transferred onto the MISO line of the master. Master's MOSI pin is enabled.

One half period later, valid master data is transferred to the MOSI line. Now that both the master and slave data have been set, the SCK master clock pin becomes LOW after one further half SCK period. This means that data is captured on the falling edges and be propagated on the rising edges of the SCK signal.


In the case of a single word transmission, after all bits of the data word are transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.

Chapter 14: LPC21xx/22xx SSP interface

However, in the case of continuous back-to-back transmissions, the SSEL signal must be pulsed HIGH between each data word transfer. This is because the slave select pin freezes the data in its serial peripheral register and does not allow it to be altered if the CPHA bit is logic zero. Therefore the master device must raise the SSEL pin of the slave device between each data transfer to enable the serial peripheral data write. On completion of the continuous transfer, the SSEL pin is returned to its idle state one SCK period after the last bit has been captured.

4.2.5 SPI format with CPOL = 1,CPHA = 1

The transfer signal sequence for SPI format with CPOL = 1, CPHA = 1 is shown in Figure 14-55, which covers both single and continuous transfers.

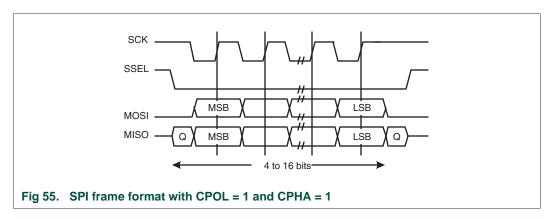

In this configuration, during idle periods:

- The CLK signal is forced HIGH
- SSEL is forced HIGH
- The transmit MOSI/MISO pad is in high impedance


If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. Master's MOSI is enabled. After a further one half SCK period, both master and slave data are enabled onto their respective transmission lines. At the same time, the SCK is enabled with a falling edge transition. Data is then captured on the rising edges and propagated on the falling edges of the SCK signal.

After all bits have been transferred, in the case of a single word transmission, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured. For continuous back-to-back transmissions, the SSEL pins remains in its active LOW state, until the final bit of the last word has been captured, and then returns to its idle state as described above. In general, for continuous back-to-back transfers the SSEL pin is held LOW between successive data words and termination is the same as that of the single word transfer.

4.3 Semiconductor Microwire frame format

<u>Figure 14–56</u> shows the Microwire frame format for a single frame. Figure 44 shows the same format when back-to-back frames are transmitted.

Chapter 14: LPC21xx/22xx SSP interface

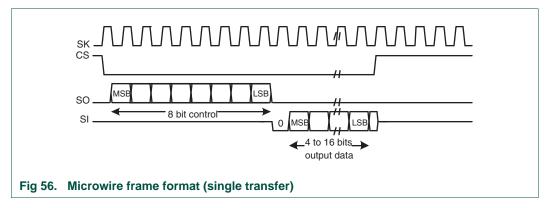

Microwire format is very similar to SPI format, except that transmission is half-duplex instead of full-duplex, using a master-slave message passing technique. Each serial transmission begins with an 8-bit control word that is transmitted from the SSP to the off-chip slave device. During this transmission, no incoming data is received by the SSP. After the message has been sent, the off-chip slave decodes it and, after waiting one serial clock after the last bit of the 8-bit control message has been sent, responds with the required data. The returned data is 4 to 16 bits in length, making the total frame length anywhere from 13 to 25 bits.

In this configuration, during idle periods:


- The SK signal is forced LOW
- · CS is forced HIGH
- The transmit data line SO is arbitrarily forced LOW

A transmission is triggered by writing a control byte to the transmit FIFO. The falling edge of CS causes the value contained in the bottom entry of the transmit FIFO to be transferred to the serial shift register of the transmit logic, and the MSB of the 8-bit control frame to be shifted out onto the SO pin. CS remains LOW for the duration of the frame transmission. The SI pin remains tristated during this transmission.

The off-chip serial slave device latches each control bit into its serial shifter on the rising edge of each SK. After the last bit is latched by the slave device, the control byte is decoded during a one clock wait-state, and the slave responds by transmitting data back to the SSP. Each bit is driven onto SI line on the falling edge of SK. The SSP in turn latches each bit on the rising edge of SK. At the end of the frame, for single transfers, the CS signal is pulled HIGH one clock period after the last bit has been latched in the receive serial shifter, that causes the data to be transferred to the receive FIFO.

Note: The off-chip slave device can tristate the receive line either on the falling edge of SK after the LSB has been latched by the receive shiftier, or when the CS pin goes HIGH.


For continuous transfers, data transmission begins and ends in the same manner as a single transfer. However, the CS line is continuously asserted (held LOW) and transmission of data occurs back to back. The control byte of the next frame follows directly after the LSB of the received data from the current frame. Each of the received values is transferred from the receive shifter on the falling edge SK, after the LSB of the frame has been latched into the SSP.

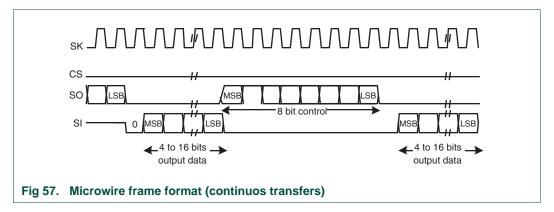

4.3.1 Setup and hold time requirements on CS with respect to SK in Microwire mode

In the Microwire mode, the SSP slave samples the first bit of receive data on the rising edge of SK after CS has gone LOW. Masters that drive a free-running SK must ensure that the CS signal has sufficient setup and hold margins with respect to the rising edge of SK.

<u>Figure 14–58</u> illustrates these setup and hold time requirements. With respect to the SK rising edge on which the first bit of receive data is to be sampled by the SSP slave, CS must have a setup of at least two times the period of SK on which the SSP operates. With respect to the SK rising edge previous to this edge, CS must have a hold of at least one SK period.

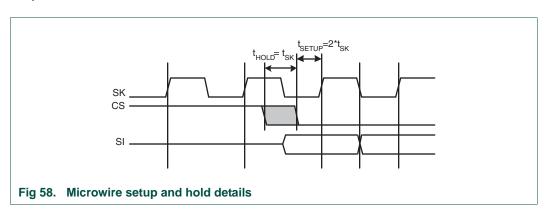

5. Register description

The SSP contains 9 registers as shown in <u>Table 14–201</u>. All registers are byte, half word and word accessible.

Chapter 14: LPC21xx/22xx SSP interface

Table 201. SSP Registers

Name	Description	Access	Reset value[1]	Address
SSPCR0	Control Register 0. Selects the serial clock rate, bus type, and data size.	R/W	0x0000	0xE005 C000
SSPCR1	Control Register 1. Selects master/slave and other modes.	R/W	0x00	0xE005 C004
SSPDR	Data Register. Writes fill the transmit FIFO, and reads empty the receive FIFO.	R/W	0x0000	0xE005 C008
SSPSR	Status Register	RO	0x03	0xE005 C00C
SSPCPSR	Clock Prescale Register	R/W	0x00	0xE005 C010
SSPIMSC	Interrupt Mask Set and Clear Register	R/W	0x00	0xE005 C014
SSPRIS	Raw Interrupt Status Register	R/W	0x08	0xE005 C018
SSPMIS	Masked Interrupt Status Register	RO	0x00	0xE005 C01C
SSPICR	SSPICR Interrupt Clear Register	WO	NA	0xE005 C020

^[1] Reset Value refers to the data stored in used bits only. It does not include reserved bits' content.

5.1 SSP Control Register 0 (SSPCR0 - 0xE005 C000)

This register controls the basic operation of the SSP controller.

Table 202: SSP Control Register 0 (SSPCR0 - address 0xE005 C000) bit description

Bit	Symbol	Value	Description	Reset value
3:0	DSS		Data Size Select. This field controls the number of bits transferred in each frame. Values 0000-0010 are not supported and should not be used.	0000
		0011	4 bit transfer	
		0100	5 bit transfer	
		0101	6 bit transfer	
		0110	7 bit transfer	
		0111	8 bit transfer	
		1000	9 bit transfer	
		1001	10 bit transfer	
		1010	11 bit transfer	
		1011	12 bit transfer	
		1100	13 bit transfer	
		1101	14 bit transfer	
		1110	15 bit transfer	
		1111	16 bit transfer	
5:4	FRF		Frame Format.	00
		00	SPI	
		01	SSI	
		10	Microwire	
		11	This combination is not supported and should not be used.	

Chapter 14: LPC21xx/22xx SSP interface

Table 202: SSP Control Register 0 (SSPCR0 - address 0xE005 C000) bit description

Bit	Symbol	Value	Description	Reset value	
6	CPOL	0	Clock Out Polarity. This bit is only used in SPI mode.	0	
			SSP controller captures serial data on the first clock transition of the frame, that is, the transition away from the inter-frame state of the clock line.		
		1	SSP controller captures serial data on the second clock transition of the frame, that is, the transition back to the inter-frame state of the clock line.		
7	СРНА	СРНА	0	Clock Out Phase. This bit is only used in SPI mode.	0
		1	SSP controller maintains the bus clock high between frames.		
15:8	SCR		Serial Clock Rate. The number of prescaler-output clocks per bit on the bus, minus one. Given that CPSDVR is the prescale divider, and the VPB clock PCLK clocks the prescaler, the bit frequency is PCLK / (CPSDVSR * [SCR+1]).	0x00	

5.2 SSP Control Register 1 (SSPCR1 - 0xE005 C004)

This register controls certain aspects of the operation of the SSP controller.

Table 203: SSP Control Register 1 (SSPCR1 - address 0xE005 C004) bit description

Bit	Symbol	Value	Description	Reset Value		
0	LBM	0	Loop Back Mode.	0		
			During normal operation.			
		1	Serial input is taken from the serial output (MOSI or MISO) rather than the serial input pin (MISO or MOSI respectively).			
1	SSE	0	SSP Enable.	0		
			The SSP controller is disabled.			
		1	The SSP controller will interact with other devices on the serial bus. Software should write the appropriate control information to the other SSP registers and interrupt controller registers, before setting this bit.			
2	MS	MS	MS	0	Master/Slave Mode. This bit can only be written when the SSE bit is 0.	0
			The SSP controller acts as a master on the bus, driving the SCLK, MOSI, and SSEL lines and receiving the MISO line.			
		1	The SSP controller acts as a slave on the bus, driving MISO line and receiving SCLK, MOSI, and SSEL lines.			
3	SOD		Slave Output Disable. This bit is relevant only in slave mode (MS = 1). If it is 1, this blocks this SSP controller from driving the transmit data line (MISO).	0		
7:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		

Chapter 14: LPC21xx/22xx SSP interface

5.3 SSP Data Register (SSPDR - 0xE005 C008)

Software can write data to be transmitted to this register, and read data that has been received.

Table 204: SSP Data Register (SSPDR - address 0xE005 C008) bit description

Bit	Symbol	Description	Reset value
15:0	DATA	Write: software can write data to be sent in a future frame to this register whenever the TNF bit in the Status register is 1, indicating that the Tx FIFO is not full. If the Tx FIFO was previously empty and the SSP controller is not busy on the bus, transmission of the data will begin immediately. Otherwise the data written to this register will be sent as soon as all previous data has been sent (and received). If the data length is less than 16 bits, software must right-justify the data written to this register.	0
		Read: software can read data from this register whenever the RNE bit in the Status register is 1, indicating that the Rx FIFO is not empty. When software reads this register, the SSP controller returns data from the least recent frame in the Rx FIFO. If the data length is less than 16 bits, the data is right-justified in this field with higher order bits filled with 0s.	

5.4 SSP Status Register (SSPSR - 0xE005 C00C)

This read-only register reflects the current status of the SSP controller.

Table 205: SSP Status Register (SSPSR - address 0xE005 C00C) bit description

Bit	Symbol	Description	Reset value
0	TFE	Transmit FIFO Empty. This bit is 1 is the Transmit FIFO is empty, 0 if not.	1
1	TNF	Transmit FIFO Not Full. This bit is 0 if the Tx FIFO is full, 1 if not.	1
2	RNE	Receive FIFO Not Empty. This bit is 0 if the Receive FIFO is empty, 1 if not.	0
3	RFF	Receive FIFO Full. This bit is 1 if the Receive FIFO is full, 0 if not.	0
4	BSY	Busy. This bit is 0 if the SSP controller is idle, or 1 if it is currently sending/receiving a frame and/or the Tx FIFO is not empty.	0
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.5 SSP Clock Prescale Register (SSPCPSR - 0xE005 C010)

This register controls the factor by which the Prescaler divides the APB clock PCLK to yield the prescaler clock that is, in turn, divided by the SCR factor in SSPCR0, to determine the bit clock.

Table 206: SSP Clock Prescale Register (SSPCPSR - address 0xE005 C010) bit description

Bit	Symbol	Description	Reset value
7:0	CPSDVSR	This even value between 2 and 254, by which PCLK is divided to yield the prescaler output clock. Bit 0 always reads as 0.	0

Important: the SSPCPSR value must be properly initialized or the SSP controller will not be able to transmit data correctly.

Chapter 14: LPC21xx/22xx SSP interface

In Slave mode, the SSP clock rate provided by the master must not exceed 1/12 of the peripheral clock. The content of the SSPCPSR register is not relevant.

In master mode, $CPSDVSR_{min} = 2$ or larger (even numbers only).

5.6 SSP Interrupt Mask Set/Clear Register (SSPIMSC - 0xE005 C014)

This register controls whether each of the four possible interrupt conditions in the SSP controller are enabled. Note that ARM uses the word "masked" in the opposite sense from classic computer terminology, in which "masked" meant "disabled". ARM uses the word "masked" to mean "enabled". To avoid confusion we will not use the word "masked".

Table 207: SSP Interrupt Mask Set/Clear Register (SSPIMSC - address 0xE005 CF014) bit description

Bit	Symbol	Description	Reset value
0	RORIM	Software should set this bit to enable interrupt when a Receive Overrun occurs, that is, when the Rx FIFO is full and another frame is completely received. The ARM spec implies that the preceding frame data is overwritten by the new frame data when this occurs.	0
1	RTIM	Software should set this bit to enable interrupt when a Receive Timeout condition occurs. A Receive Timeout occurs when the Rx FIFO is not empty, and no new data has been received, nor has data been read from the FIFO, for 32 bit times.	0
2	RXIM	Software should set this bit to enable interrupt when the Rx FIFO is at least half full.	0
3	TXIM	Software should set this bit to enable interrupt when the Tx FIFO is at least half empty.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.7 SSP Raw Interrupt Status Register (SSPRIS - 0xE005 C018)

This read-only register contains a 1 for each interrupt condition that is asserted, regardless of whether or not the interrupt is enabled in the SSPIMSC.

Table 208: SSP Raw Interrupt Status Register (SSPRIS - address 0xE005 C018) bit description

Bit	Symbol	Description	Reset value
0	RORRIS	This bit is 1 if another frame was completely received while the RxFIFO was full. The ARM spec implies that the preceding frame data is overwritten by the new frame data when this occurs.	0
1	RTRIS	This bit is 1 if when there is a Receive Timeout condition. Note: A Receive Timeout can be negated if further data is received.	0
2	RXRIS	This bit is 1 if the Rx FIFO is at least half full.	0
3	TXRIS	This bit is 1 if the Tx FIFO is at least half empty.	1
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 14: LPC21xx/22xx SSP interface

5.8 SSP Masked Interrupt Register (SSPMIS - 0xE005 C01C)

This read-only register contains a 1 for each interrupt condition that is asserted and enabled in the SSPIMSC. When an SSP interrupt occurs, the interrupt service routine should read this register to determine the cause(s) of the interrupt.

Table 209: SSP Masked Interrupt Status Register (SSPMIS -address 0xE005 C01C) bit description

Bit	Symbol	Description	Reset value
0	RORMIS	This bit is 1 if another frame was completely received while the RxFIFO was full, and this interrupt is enabled.	0
1	RTMIS	This bit is 1 when there is a Receive Timeout condition and this interrupt is enabled. Note: A Receive Timeout can be negated if further data is received.	0
2	RXMIS	This bit is 1 if the Rx FIFO is at least half full, and this interrupt is enabled.	0
3	TXMIS	This bit is 1 if the Tx FIFO is at least half empty, and this interrupt is enabled.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.9 SSP Interrupt Clear Register (SSPICR - 0xE005 C020)

Software can write one or more one(s) to this write-only register, to clear the corresponding interrupt condition(s) in the SSP controller. Note that the other two interrupt conditions can be cleared by writing or reading the appropriate FIFO, or disabled by clearing the corresponding bit in SSPIMSC.

Table 210: SSP interrupt Clear Register (SSPICR - address 0xE005 C020) bit description

Bit	Symbol	Description	Reset value
0	RORIC	Writing a 1 to this bit clears the "frame was received when RxFIFO was full" interrupt.	Undefined
1	RTIC	Writing a 1 to this bit clears the Receive Timeout interrupt.	Undefined
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

UM10114

Chapter 15: LPC21xx/22xx Timer 0/1

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

Remark: External event counting on the capture inputs can be selected for LPC21xx/01, LPC22xx/01, and LPC2220 parts only. External event counting uses the TnCTCTR registers. All other features of the counter/timer block are identical for all LPC21xx and LPC22xx parts.

Table 211. LPC21xx/22xx part-specific registers for external event counting

Part	T0CTCTR/T1CTCR registers	Part	T0CTCTR/T1CTCR registers
no suffix and	/00 parts	/01 parts	
LPC2109	n/a	LPC2109	Section 15–6.3
LPC2119	n/a	LPC2119	Section 15–6.3
LPC2129	n/a	LPC2129	Section 15–6.3
LPC2114	n/a	LPC2114	Section 15–6.3
LPC2124	n/a	LPC2124	Section 15–6.3
LPC2194	n/a	LPC2194	Section 15–6.3
LPC2210	n/a	LPC2210	Section 15–6.3
LPC2220	Section 15–6.3	LPC2212	Section 15–6.3
LPC2212	n/a	LPC2214	Section 15–6.3
LPC2214	n/a	LPC2290	Section 15–6.3
LPC2290	n/a	LPC2292	Section 15–6.3
LPC2292	n/a	LPC2294	Section 15–6.3
LPC2294	n/a		

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- A 32-bit Timer/Counter with a programmable 32-bit Prescaler.
- Counter or Timer operation
- External Event Counting capabilities.
- Up to four 32-bit capture channels per timer, that can take a snapshot of the timer
 value when an input signal transitions. A capture event may also optionally generate
 an interrupt.
- Four 32-bit match registers that allow:
 - Continuous operation with optional interrupt generation on match.
 - Stop timer on match with optional interrupt generation.
 - Reset timer on match with optional interrupt generation.
- Up to four external outputs corresponding to match registers, with the following capabilities:
 - Set low on match.

Chapter 15: LPC21xx/22xx Timer 0/1

- Set high on match.
- Toggle on match.
- Do nothing on match.

3. Applications

- Interval Timer for counting internal events.
- Pulse Width Demodulator via Capture inputs.
- Free running timer.
- External Event/Clock counter.

4. Description

The Timer/Counter is designed to count cycles of the peripheral clock (PCLK) or an externally-supplied clock, and can optionally generate interrupts or perform other actions at specified timer values, based on four match registers. It also includes four capture inputs to trap the timer value when an input signal transitions, optionally generating an interrupt.

5. Pin description

<u>Table 15–212</u> gives a brief summary of each of the Timer/Counter related pins.

Chapter 15: LPC21xx/22xx Timer 0/1

Table 212. Timer/Counter pin description

Pin	Туре	Description
CAP0.30 CAP1.30	Input	Capture Signals- A transition on a capture pin can be configured to load one of the Capture Registers with the value in the Timer Counter and optionally generate an interrupt. Capture functionality can be selected from a number of pins. When more than one pin is selected for a Capture input on a single TIMER0/1 channel, the pin with the lowest Port number is used. If for example pins 30 (P0.6) and 46 (P0.16) are selected for CAP0.2, only pin 30 will be used by TIMER0 to perform CAP0.2 function.
		Here is the list of all CAPTURE signals, together with pins on where they can be selected:
		 CAP0.0 (3 pins): P0.2, P0.22 and P0.30
		 CAP0.1 (2 pins): P0.4 and P0.27
		 CAP0.2 (3 pin): P0.6, P0.16 and P0.28
		• CAP0.3 (1 pin): P0.29
		• CAP1.0 (1 pin): P0.10
		• CAP1.1 (1 pin): P0.11
		 CAP1.2 (2 pins): P0.17 and P0.19
		 CAP1.3 (2 pins): P0.18 and P0.21
		Timer/Counter block can select a capture signal as a clock source instead of the PCLK derived clock. For more details see Section 15–6.3 "Count Control Register (CTCR, TIMER0: T0CTCR - 0xE000 4070 and TIMER1: T1TCR - 0xE000 8070)" on page 238.
MAT0.30 MAT1.30	Output	External Match Output 0/1- When a match register 0/1 (MR3:0) equals the timer counter (TC) this output can either toggle, go low, go high, or do nothing. The External Match Register (EMR) controls the functionality of this output. Match Output functionality can be selected on a number of pins in parallel. It is also possible for example, to have 2 pins selected at the same time so that they provide MAT1.3 function in parallel.
		Here is the list of all MATCH signals, together with pins on where they can be selected:
		 MAT0.0 (2 pins): P0.3 and P0.22
		 MAT0.1 (2 pins): P0.5 and P0.27
		 MAT0.2 (2 pin): P0.16 and P0.28
		 MAT0.3 (1 pin): P0.29
		• MAT1.0 (1 pin): P0.12
		• MAT1.1 (1 pin): P0.13
		 MAT1.2 (2 pins): P0.17 and P0.19
		 MAT1.3 (2 pins): P0.18 and P0.20

6. Register description

Each Timer/Counter contains the registers shown in $\underline{\text{Table 15--213}}$. More detailed descriptions follow.

Chapter 15: LPC21xx/22xx Timer 0/1

Table 213. TIMER/COUNTER0 and TIMER/COUNTER1 register map

Generic Name	Description	Access	Reset value ^[1]	TIMER/ COUNTER0 Address & Name	TIMER/ COUNTER1 Address & Name
IR	Interrupt Register. The IR can be written to clear interrupts. The IR can be read to identify which of eight possible interrupt sources are pending.	R/W	0	0xE000 4000 T0IR	0xE000 8000 T1IR
TCR	Timer Control Register. The TCR is used to control the Timer Counter functions. The Timer Counter can be disabled or reset through the TCR.	R/W	0	0xE000 4004 T0TCR	0xE000 8004 T1TCR
TC	Timer Counter. The 32-bit TC is incremented every PR+1 cycles of PCLK. The TC is controlled through the TCR.	R/W	0	0xE000 4008 T0TC	0xE000 8008 T1TC
PR	Prescale Register. The Prescale Counter (below) is equal to this value, the next clock increments the TC and clears the PC.	R/W	0	0xE000 400C T0PR	0xE000 800C T1PR
PC	Prescale Counter. The 32-bit PC is a counter which is incremented to the value stored in PR. When the value in PR is reached, the TC is incremented and the PC is cleared. The PC is observable and controllable through the bus interface.	R/W	0	0xE000 4010 T0PC	0xE000 8010 T1PC
MCR	Match Control Register. The MCR is used to control if an interrupt is generated and if the TC is reset when a Match occurs.	R/W	0	0xE0004014 T0MCR	0xE000 8014 T1MCR
MR0	Match Register 0. MR0 can be enabled through the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt every time MR0 matches the TC.	R/W	0	0xE000 4018 T0MR0	0xE000 8018 T1MR0
MR1	Match Register 1. See MR0 description.	R/W	0	0xE000 401C T0MR1	0xE000 801C T1MR1
MR2	Match Register 2. See MR0 description.	R/W	0	0xE000 4020 T0MR2	0xE000 8020 T1MR2
MR3	Match Register 3. See MR0 description.	R/W	0	0xE000 4024 T0MR3	0xE000 8024 T1MR3
CCR	Capture Control Register. The CCR controls which edges of the capture inputs are used to load the Capture Registers and whether or not an interrupt is generated when a capture takes place.	R/W	0	0xE000 4028 T0CCR	0xE000 8028 T1CCR
CR0	Capture Register 0. CR0 is loaded with the value of TC when there is an event on the CAPn.0(CAP0.0 or CAP1.0 respectively) input.	RO	0	0xE000 402C T0CR0	0xE000 802C T1CR0
CR1	Capture Register 1. See CR0 description.	RO	0	0xE000 4030 T0CR1	0xE000 8030 T1CR1
CR2	Capture Register 2. See CR0 description.	RO	0	0xE000 4034 T0CR2	0xE000 8034 T1CR2

Chapter 15: LPC21xx/22xx Timer 0/1

Table 213. TIMER/COUNTER0 and TIMER/COUNTER1 register map

Generic Name	Description	Access	Reset value ^[1]	TIMER/ COUNTER0 Address & Name	TIMER/ COUNTER1 Address & Name
CR3	Capture Register 3. See CR0 description.	RO	0	0xE000 4038 T0CR3	0xE000 8038 T1CR3
EMR	External Match Register. The EMR controls the external match pins MATn.0-3 (MAT0.0-3 and MAT1.0-3 respectively).	R/W	0	0xE000 403C T0EMR	0xE000 803C T1EMR
CTCR	Count Control Register. The CTCR selects between Timer and Counter mode, and in Counter mode selects the signal and edge(s) for counting.	R/W	0	0xE000 4070 T0CTCR	0xE000 8070 T1CTCR

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

6.1 Interrupt Register (IR, TIMER0: T0IR - 0xE000 4000 and TIMER1: T1IR - 0xE000 8000)

The Interrupt Register consists of four bits for the match interrupts and four bits for the capture interrupts. If an interrupt is generated then the corresponding bit in the IR will be high. Otherwise, the bit will be low. Writing a logic one to the corresponding IR bit will reset the interrupt. Writing a zero has no effect.

Table 214: Interrupt Register (IR, TIMER0: T0IR - address 0xE000 4000 and TIMER1: T1IR - address 0xE000 8000) bit description

Bit	Symbol	Description	Reset value
0	MR0 Interrupt	Interrupt flag for match channel 0.	0
1	MR1 Interrupt	Interrupt flag for match channel 1.	0
2	MR2 Interrupt	Interrupt flag for match channel 2.	0
3	MR3 Interrupt	Interrupt flag for match channel 3.	0
4	CR0 Interrupt	Interrupt flag for capture channel 0 event.	0
5	CR1 Interrupt	Interrupt flag for capture channel 1 event.	0
6	CR2 Interrupt	Interrupt flag for capture channel 2 event.	0
7	CR3 Interrupt	Interrupt flag for capture channel 3 event.	0

6.2 Timer Control Register (TCR, TIMER0: T0TCR - 0xE000 4004 and TIMER1: T1TCR - 0xE000 8004)

The Timer Control Register (TCR) is used to control the operation of the Timer/Counter.

Chapter 15: LPC21xx/22xx Timer 0/1

Table 215: Timer Control Register (TCR, TIMER0: T0TCR - address 0xE000 4004 and TIMER1: T1TCR - address 0xE000 8004) bit description

Bit	Symbol	Description	Reset value
0	Counter Enable	When one, the Timer Counter and Prescale Counter are enabled for counting. When zero, the counters are disabled.	0
1	Counter Reset	When one, the Timer Counter and the Prescale Counter are synchronously reset on the next positive edge of PCLK. The counters remain reset until TCR[1] is returned to zero.	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.3 Count Control Register (CTCR, TIMER0: T0CTCR - 0xE000 4070 and TIMER1: T1TCR - 0xE000 8070)

Remark: This register is available for LPC21xx/01, LPC22xx/01, and LPC2220 only.

The Count Control Register (CTCR) is used to select between Timer and Counter mode, and in Counter mode to select the pin and edge(s) for counting.

When Counter Mode is chosen as a mode of operation, the CAP input (selected by the CTCR bits 3:2) is sampled on every rising edge of the PCLK clock. After comparing two consecutive samples of this CAP input, one of the following four events is recognized: rising edge, falling edge, either of edges or no changes in the level of the selected CAP input. Only if the identified event corresponds to the one selected by bits 1:0 in the CTCR register, the Timer Counter register will be incremented.

Effective processing of the externally supplied clock to the counter has some limitations. Since two successive rising edges of the PCLK clock are used to identify only one edge on the CAP selected input, the frequency of the CAP input can not exceed one half of the PCLK clock. Consequently, duration of the high/low levels on the same CAP input in this case can not be shorter than 1/PCLK.

Table 216: Count Control Register (CTCR, TIMER0: T0CTCR - address 0xE000 4070 and TIMER1: T1TCR - address 0xE000 8070) bit description

Bit	Symbol	Value	Description	Reset value
1:0	Counter/ Timer Mode		This field selects which rising PCLK edges can increment Timer's Prescale Counter (PC), or clear PC and increment Timer Counter (TC).	00
		00	Timer Mode: every rising PCLK edge	
		01	Counter Mode: TC is incremented on rising edges on the CAP input selected by bits 3:2.	
		10	Counter Mode: TC is incremented on falling edges on the CAP input selected by bits 3:2.	
		11	Counter Mode: TC is incremented on both edges on the CAP input selected by bits 3:2.	

Chapter 15: LPC21xx/22xx Timer 0/1

Table 216: Count Control Register (CTCR, TIMER0: T0CTCR - address 0xE000 4070 and TIMER1: T1TCR - address 0xE000 8070) bit description

Bit	Symbol	Value	Description	Reset value
3:2	Count Input		When bits 1:0 in this register are not 00, these bits select which CAP pin is sampled for clocking:	00
	Select	00	CAPn.0 (CAP0.0 for TIMER0 and CAP1.0 for TIMER1)	
		01	CAPn.1 (CAP0.1 for TIMER0 and CAP1.1 for TIMER1)	
		10	CAPn.2 (CAP0.2 for TIMER0 and CAP1.2 for TIMER1)	
		11	CAPn.3 (CAP0.3 for TIMER0 and CAP1.3 for TIMER1)	
			Note: If Counter mode is selected for a particular CAPn input in the TnCTCR, the 3 bits for that input in the Capture Control Register (TnCCR) must be programmed as 000. However, capture and/or interrupt can be selected for the other 3 CAPn inputs in the same timer.	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.4 Timer Counter (TC, TIMER0: T0TC - 0xE000 4008 and TIMER1: T1TC - 0xE000 8008)

The 32-bit Timer Counter is incremented when the Prescale Counter reaches its terminal count. Unless it is reset before reaching its upper limit, the TC will count up through the value 0xFFFF FFFF and then wrap back to the value 0x0000 0000. This event does not cause an interrupt, but a Match register can be used to detect an overflow if needed.

6.5 Prescale Register (PR, TIMER0: T0PR - 0xE000 400C and TIMER1: T1PR - 0xE000 800C)

The 32-bit Prescale Register specifies the maximum value for the Prescale Counter.

6.6 Prescale Counter Register (PC, TIMER0: T0PC - 0xE000 4010 and TIMER1: T1PC - 0xE000 8010)

The 32-bit Prescale Counter controls division of PCLK by some constant value before it is applied to the Timer Counter. This allows control of the relationship of the resolution of the timer versus the maximum time before the timer overflows. The Prescale Counter is incremented on every PCLK. When it reaches the value stored in the Prescale Register, the Timer Counter is incremented and the Prescale Counter is reset on the next PCLK. This causes the TC to increment on every PCLK when PR = 0, every 2 PCLKs when PR = 1, etc.

6.7 Match Registers (MR0 - MR3)

The Match register values are continuously compared to the Timer Counter value. When the two values are equal, actions can be triggered automatically. The action possibilities are to generate an interrupt, reset the Timer Counter, or stop the timer. Actions are controlled by the settings in the MCR register.

Chapter 15: LPC21xx/22xx Timer 0/1

6.8 Match Control Register (MCR, TIMER0: T0MCR - 0xE000 4014 and TIMER1: T1MCR - 0xE000 8014)

The Match Control Register is used to control what operations are performed when one of the Match Registers matches the Timer Counter. The function of each of the bits is shown in <u>Table 15–217</u>.

Table 217: Match Control Register (MCR, TIMER0: T0MCR - address 0xE000 4014 and TIMER1: T1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description	
0	MR0I	1	Interrupt on MR0: an interrupt is generated when MR0 matches the value in the TC.	0
		0	This interrupt is disabled	
1	MR0R	1	Reset on MR0: the TC will be reset if MR0 matches it.	0
		0	Feature disabled.	
2	MR0S	1	Stop on MR0: the TC and PC will be stopped and TCR[0] will be set to 0 if MR0 matches the TC.	0
		0	Feature disabled.	
3	MR1I	1	Interrupt on MR1: an interrupt is generated when MR1 matches the value in the TC.	0
		0	This interrupt is disabled	
4	MR1R	1	Reset on MR1: the TC will be reset if MR1 matches it.	0
		0	Feature disabled.	
5	MR1S	1	Stop on MR1: the TC and PC will be stopped and TCR[0] will be set to 0 if MR1 matches the TC.	0
		0	Feature disabled.	
6	MR2I	1	Interrupt on MR2: an interrupt is generated when MR2 matches the value in the TC.	0
		0	This interrupt is disabled	
7	MR2R	R2R 1 Reset on MR2: the TC will be reset if MR2 matches it.	Reset on MR2: the TC will be reset if MR2 matches it.	0
		0	Feature disabled.	
8	MR2S	1	Stop on MR2: the TC and PC will be stopped and TCR[0] will be set to 0 if MR2 matches the TC.	0
		0	Feature disabled.	
9	MR3I	1	Interrupt on MR3: an interrupt is generated when MR3 matches the value in the TC.	0
		0	This interrupt is disabled	
10	MR3R	1	Reset on MR3: the TC will be reset if MR3 matches it.	0
		0	Feature disabled.	
11	MR3S	1	Stop on MR3: the TC and PC will be stopped and TCR[0] will be set to 0 if MR3 matches the TC.	0
		0	Feature disabled.	
15:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 15: LPC21xx/22xx Timer 0/1

6.9 Capture Registers (CR0 - CR3)

Each Capture register is associated with a device pin and may be loaded with the Timer Counter value when a specified event occurs on that pin. The settings in the Capture Control Register register determine whether the capture function is enabled, and whether a capture event happens on the rising edge of the associated pin, the falling edge, or on both edges.

6.10 Capture Control Register (CCR, TIMER0: T0CCR - 0xE000 4028 and TIMER1: T1CCR - 0xE000 8028)

The Capture Control Register is used to control whether one of the four Capture Registers is loaded with the value in the Timer Counter when the capture event occurs, and whether an interrupt is generated by the capture event. Setting both the rising and falling bits at the same time is a valid configuration, resulting in a capture event for both edges. In the description below, "n" represents the Timer number, 0 or 1.

Table 218: Capture Control Register (CCR, TIMER0: T0CCR - address 0xE000 4028 and TIMER1: T1CCR - address 0xE000 8028) bit description

Bit	Symbol	Value	Description	Reset value
0	CAP0RE	1	Capture on CAPn.0 rising edge: a sequence of 0 then 1 on CAPn.0 will cause CR0 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
1	CAP0FE	1	Capture on CAPn.0 falling edge: a sequence of 1 then 0 on CAPn.0 will cause CR0 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
2	CAP0I	1	Interrupt on CAPn.0 event: a CR0 load due to a CAPn.0 event will generate an interrupt.	0
		0	This feature is disabled.	
3	CAP1RE	1	Capture on CAPn.1 rising edge: a sequence of 0 then 1 on CAPn.1 will cause CR1 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
4	CAP1FE	1	Capture on CAPn.1 falling edge: a sequence of 1 then 0 on CAPn.1 will cause CR1 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
5	CAP1I	Interrupt on CAPn.1 event: a CR1 load due to a CAPn.1 event will generate interrupt.		0
		0	This feature is disabled.	
6	CAP2RE	1	Capture on CAPn.2 rising edge: A sequence of 0 then 1 on CAPn.2 will cause CR2 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
7	CAP2FE	1	Capture on CAPn.2 falling edge: a sequence of 1 then 0 on CAPn.2 will cause CR2 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
8	CAP2I	1	Interrupt on CAPn.2 event: a CR2 load due to a CAPn.2 event will generate an interrupt.	0
		0	This feature is disabled.	

Chapter 15: LPC21xx/22xx Timer 0/1

Table 218: Capture Control Register (CCR, TIMER0: T0CCR - address 0xE000 4028 and TIMER1: T1CCR - address 0xE000 8028) bit description

Bit	Symbol	Value	Description	Reset value
9	CAP3RE	1	Capture on CAPn.3 rising edge: a sequence of 0 then 1 on CAPn.3 will cause CR3 to be loaded with the contents of TC.	0
		0	This feature is disabled.	
10	CAP3FE	CAP3FE 1 Capture on CAPn.3 falling edge: a sequence of 1 then 0 on CAPn.3 will cause CR3 be loaded with the contents of TC		0
		0	This feature is disabled.	
11	CAP3I	1	Interrupt on CAPn.3 event: a CR3 load due to a CAPn.3 event will generate an interrupt.	0
	0 This feature is d		This feature is disabled.	
15:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

6.11 External Match Register (EMR, TIMER0: T0EMR - 0xE000 403C; and TIMER1: T1EMR - 0xE000 803C)

The External Match Register provides both control and status of the external match pins MAT(0-3). Bits EM3:0 can be written only when Timer is disabled (bit 1 in Timer Control Register is 0). Only under this condition an initial output level on MAT pin(s) can be set. Once the Timer is enabled, EM3:0 can be changed only by Timer's activities specified by the EMC bits.

Table 219: External Match Register (EMR, TIMER0: T0EMR - address 0xE000 403C and TIMER1: T1EMR - address0xE000 803C) bit description

Bit	Symbol	Description	Reset value
0	EM0	External Match 0. This bit reflects the state of output MAT0.0/MAT1.0, whether or not this output is connected to its pin. When a match occurs between the TC and MR0, this output of the timer can either toggle, go low, go high, or do nothing. Bits EMR[5:4] control the functionality of this output.	0
1	EM1	External Match 1. This bit reflects the state of output MAT0.1/MAT1.1, whether or not this output is connected to its pin. When a match occurs between the TC and MR1, this output of the timer can either toggle, go low, go high, or do nothing. Bits EMR[7:6] control the functionality of this output.	0
2	EM2	External Match 2. This bit reflects the state of output MAT0.2/MAT1.2, whether or not this output is connected to its pin. When a match occurs between the TC and MR2, this output of the timer can either toggle, go low, go high, or do nothing. Bits EMR[9:8] control the functionality of this output.	0
3	EM3	External Match 3. This bit reflects the state of output MAT0.3/MAT1.3, whether or not this output is connected to its pin. When a match occurs between the TC and MR3, this output of the timer can either toggle, go low, go high, or do nothing. Bits EMR[11:10] control the functionality of this output.	0
5:4	EMC0	External Match Control 0. Determines the functionality of External Match 0. <u>Table 15–220</u> shows the encoding of these bits.	00
7:6	EMC1	External Match Control 1. Determines the functionality of External Match 1. <u>Table 15–220</u> shows the encoding of these bits.	00

Chapter 15: LPC21xx/22xx Timer 0/1

Table 219: External Match Register (EMR, TIMER0: T0EMR - address 0xE000 403C and TIMER1: T1EMR - address0xE000 803C) bit description

Bit	Symbol	Description	Reset value
9:8	EMC2	External Match Control 2. Determines the functionality of External Match 2. <u>Table 15–220</u> shows the encoding of these bits.	00
11:10	EMC3	External Match Control 3. Determines the functionality of External Match 3. <u>Table 15–220</u> shows the encoding of these bits.	00
15:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA


Table 220. External match control

EMR[11:10], EMR[9:8], EMR[7:6], or EMR[5:4]	Function
00	Do Nothing.
01	Clear the corresponding External Match bit/output to 0 (MATn.m pin is LOW if pinned out).
10	Set the corresponding External Match bit/output to 1 (MATn.m pin is HIGH if pinned out).
11	Toggle the corresponding External Match bit/output.

7. Example timer operation

<u>Figure 15–59</u> shows a timer configured to reset the count and generate an interrupt on match. The prescaler is set to 2 and the match register set to 6. At the end of the timer cycle where the match occurs, the timer count is reset. This gives a full length cycle to the match value. The interrupt indicating that a match occurred is generated in the next clock after the timer reached the match value.


<u>Figure 15–60</u> shows a timer configured to stop and generate an interrupt on match. The prescaler is again set to 2 and the match register set to 6. In the next clock after the timer reaches the match value, the timer enable bit in TCR is cleared, and the interrupt indicating that a match occurred is generated.

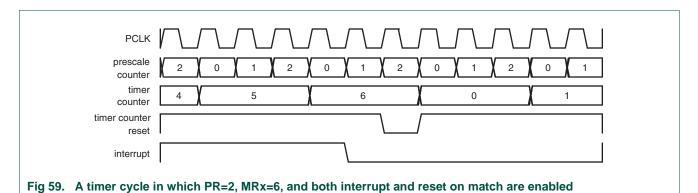

UM10114_3

© NXP B.V. 2008. All rights reserved.


Chapter 15: LPC21xx/22xx Timer 0/1

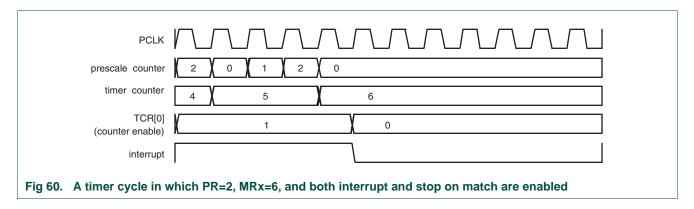

8. Architecture

The block diagram for TIMER/COUNTER0 and TIMER/COUNTER1 is shown in Figure 15–61.

Chapter 15: LPC21xx/22xx Timer 0/1

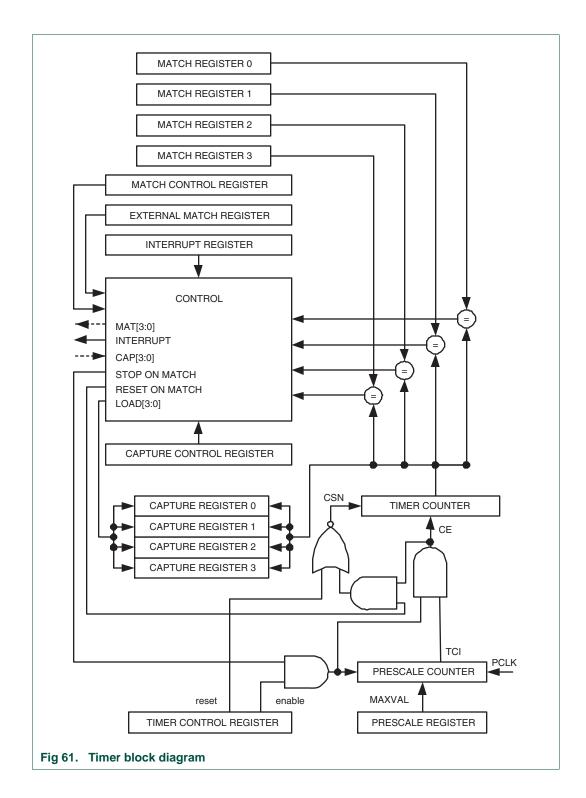

UM10114

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The PWM controller is identical for all LPC21xx and LPC22xx parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- Seven match registers allow up to 6 single edge controlled or 3 double edge controlled PWM outputs, or a mix of both types. The match registers also allow:
 - Continuous operation with optional interrupt generation on match.
 - Stop timer on match with optional interrupt generation.
 - Reset timer on match with optional interrupt generation.
- An external output for each match register with the following capabilities:
 - Set low on match.
 - Set high on match.
 - Toggle on match.
 - Do nothing on match.
- Supports single edge controlled and/or double edge controlled PWM outputs. Single
 edge controlled PWM outputs all go high at the beginning of each cycle unless the
 output is a constant low. Double edge controlled PWM outputs can have either edge
 occur at any position within a cycle. This allows for both positive going and negative
 going pulses.
- Pulse period and width can be any number of timer counts. This allows complete
 flexibility in the trade-off between resolution and repetition rate. All PWM outputs will
 occur at the same repetition rate.
- Double edge controlled PWM outputs can be programmed to be either positive going or negative going pulses.
- Match register updates are synchronized with pulse outputs to prevent generation of erroneous pulses. Software must "release" new match values before they can become effective.
- May be used as a standard timer if the PWM mode is not enabled.
- A 32-bit Timer/Counter with a programmable 32-bit Prescaler.

3. Description

The PWM is based on the standard Timer block and inherits all of its features, although only the PWM function is pinned out on the LPC21xx/LPC22xx. The Timer is designed to count cycles of the peripheral clock (PCLK) and optionally generate interrupts or perform other actions when specified timer values occur, based on seven match registers. It also

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

includes four capture inputs to save the timer value when an input signal transitions, and optionally generate an interrupt when those events occur. The PWM function is in addition to these features, and is based on match register events.

The ability to separately control rising and falling edge locations allows the PWM to be used for more applications. For instance, multi-phase motor control typically requires three non-overlapping PWM outputs with individual control of all three pulse widths and positions.


Two match registers can be used to provide a single edge controlled PWM output. One match register (PWMMR0) controls the PWM cycle rate, by resetting the count upon match. The other match register controls the PWM edge position. Additional single edge controlled PWM outputs require only one match register each, since the repetition rate is the same for all PWM outputs. Multiple single edge controlled PWM outputs will all have a rising edge at the beginning of each PWM cycle, when an PWMMR0 match occurs.

Three match registers can be used to provide a PWM output with both edges controlled. Again, the PWMMR0 match register controls the PWM cycle rate. The other match registers control the two PWM edge positions. Additional double edge controlled PWM outputs require only two match registers each, since the repetition rate is the same for all PWM outputs.

With double edge controlled PWM outputs, specific match registers control the rising and falling edge of the output. This allows both positive going PWM pulses (when the rising edge occurs prior to the falling edge), and negative going PWM pulses (when the falling edge occurs prior to the rising edge).

<u>Figure 16–62</u> shows the block diagram of the PWM. The portions that have been added to the standard timer block are on the right hand side and at the top of the diagram.


Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

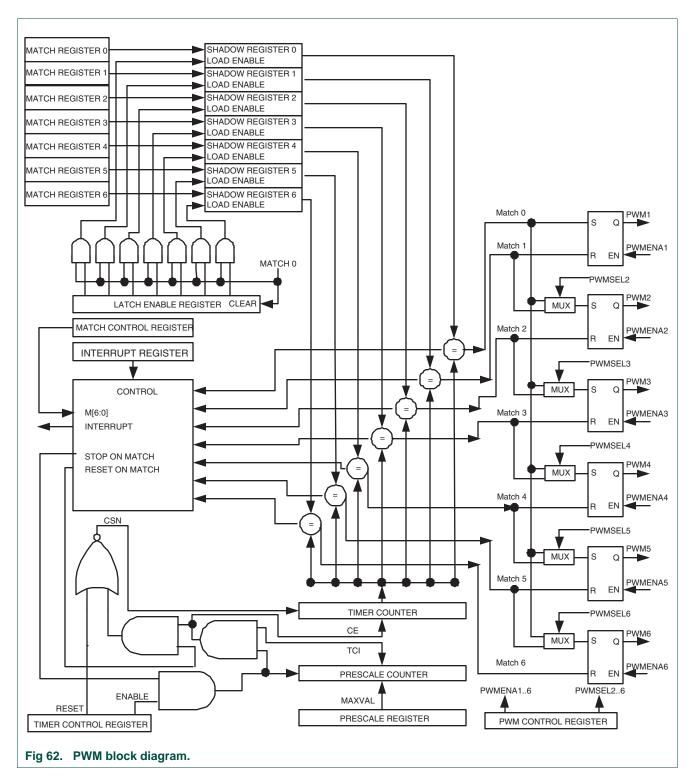

A sample of how PWM values relate to waveform outputs is shown in <u>Figure 16–63</u>. PWM output logic is shown in <u>Figure 16–62</u> that allows selection of either single or double edge controlled PWM outputs via the multiplexers controlled by the PWMSELn bits. The match register selections for various PWM outputs is shown in <u>Table 16–221</u>. This

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

implementation supports up to N-1 single edge PWM outputs or (N-1)/2 double edge PWM outputs, where N is the number of match registers that are implemented. PWM types can be mixed if desired.

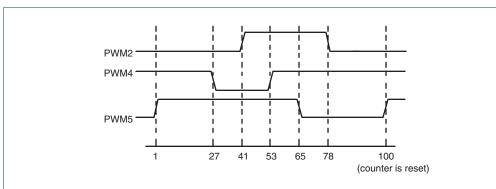

The waveforms below show a single PWM cycle and demonstrate PWM outputs under the following conditions:

The timer is configured for PWM mode (counter resets to one).

Match 0 is configured to reset the timer/counter when a match event occurs.

All PWM related Match registers are configured for toggle on match.

Control bits PWMSEL2 and PWMSEL4 are set.

The Match register values are as follows:

MR0 = 100 (PWM rate)

MR1 = 41, MR2 = 78 (PWM2 output)

MR3 = 53, MR\$ = 27 (PWM4 output)

MR5 = 65 (PWM5 output)

Fig 63. Sample PWM waveforms

Table 221. Set and reset inputs for PWM Flip-Flops

PWM Channel	Single edge PWM (PWMSELn = 0)		Double edge PWM (PWMSELn = 1)		
	Set by	Reset by	Set by	Reset by	
1	Match 0	Match 1	Match 0 ¹¹	Match 1 ¹¹	
2	Match 0	Match 2	Match 1	Match 2	
3	Match 0	Match 3	Match 2[2]	Match 3 ²	
4	Match 0	Match 4	Match 3	Match 4	
5	Match 0	Match 5	Match 4 ²	Match 5 ²	
6	Match 0	Match 6	Match 5	Match 6	

^[1] Identical to single edge mode in this case since Match 0 is the neighboring match register. Essentially, PWM1 cannot be a double edged output.

3.1 Rules for Single Edge Controlled PWM Outputs

1. All single edge controlled PWM outputs go high at the beginning of a PWM cycle unless their match value is equal to 0.

^[2] It is generally not advantageous to use PWM channels 3 and 5 for double edge PWM outputs because it would reduce the number of double edge PWM outputs that are possible. Using PWM 2, PWM4, and PWM6 for double edge PWM outputs provides the most pairings.

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

2. Each PWM output will go low when its match value is reached. If no match occurs (i.e. the match value is greater than the PWM rate), the PWM output remains continuously high.

3.2 Rules for Double Edge Controlled PWM Outputs

Five rules are used to determine the next value of a PWM output when a new cycle is about to begin:

- 1. The match values for the **next** PWM cycle are used at the end of a PWM cycle (a time point which is coincident with the beginning of the next PWM cycle), except as noted in rule 3.
- 2. A match value equal to 0 or the current PWM rate (the same as the Match channel 0 value) have the same effect, except as noted in rule 3. For example, a request for a falling edge at the beginning of the PWM cycle has the same effect as a request for a falling edge at the end of a PWM cycle.
- 3. When match values are changing, if one of the "old" match values is equal to the PWM rate, it is used again once if the neither of the new match values are equal to 0 or the PWM rate, and there was no old match value equal to 0.
- 4. If both a set and a clear of a PWM output are requested at the same time, clear takes precedence. This can occur when the set and clear match values are the same as in, or when the set or clear value equals 0 and the other value equals the PWM rate.
- 5. If a match value is out of range (i.e. greater than the PWM rate value), no match event occurs and that match channel has no effect on the output. This means that the PWM output will remain always in one state, allowing always low, always high, or "no change" outputs.

4. Pin description

Table 16–222 gives a brief summary of each of PWM related pins.

Table 222. Pin summary

Pin	Туре	Description
PWM1	Output	Output from PWM channel 1.
PWM2	Output	Output from PWM channel 2.
PWM3	Output	Output from PWM channel 3.
PWM4	Output	Output from PWM channel 4.
PWM5	Output	Output from PWM channel 5.
PWM6	Output	Output from PWM channel 6.

5. Register description

The PWM function adds new registers and registers bits as shown in <u>Table 16–223</u> below.

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

Table 223. Pulse Width Modulator Register Map

Name	Description	Access	Reset value[1]	Address
PWMIR	PWM Interrupt Register. The PWMIR can be written to clear interrupts. The PWMIR can be read to identify which of the possible interrupt sources are pending.	R/W	0	0xE001 4000
PWMTCR	PWM Timer Control Register. The PWMTCR is used to control the Timer Counter functions. The Timer Counter can be disabled or reset through the PWMTCR.	R/W	0	0xE001 4004
PWMTC	PWM Timer Counter. The 32-bit TC is incremented every PWMPR+1 cycles of PCLK. The PWMTC is controlled through the PWMTCR.	R/W	0	0xE001 4008
PWMPR	PWM Prescale Register. The PWMTC is incremented every PWMPR+1 cycles of PCLK.	R/W	0	0xE001 400C
PWMPC	PWM Prescale Counter. The 32-bit PC is a counter which is incremented to the value stored in PR. When the value in PWMPR is reached, the PWMTC is incremented. The PWMTC is observable and controllable through the bus interface.	R/W	0	0xE001 4010
PWMMCR	PWM Match Control Register. The PWMMCR is used to control if an interrupt is generated and if the PWMTC is reset when a Match occurs.	R/W	0	0xE001 4014
PWMMR0	PWM Match Register 0. PWMMR0 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR0 and the PWMTC sets all PWM outputs that are in single-edge mode, and sets PWM1 if it is in double-edge mode.	R/W	0	0xE001 4018
PWMMR1	PWM Match Register 1. PWMMR1 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR1 and the PWMTC clears PWM1 in either single-edge mode or double-edge mode, and sets PWM2 if it is in double-edge mode.	R/W	0	0xE001 401C
PWMMR2	PWM Match Register 2. PWMMR2 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR2 and the PWMTC clears PWM2 in either single-edge mode or double-edge mode, and sets PWM3 if it is in double-edge mode.	R/W	0	0xE001 4020

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

Table 223. Pulse Width Modulator Register Map

Name	Description	Access	Reset value[1]	Address
PWMMR3	PWM Match Register 3. PWMMR3 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR3 and the PWMTC clears PWM3 in either single-edge mode or double-edge mode, and sets PWM4 if it is in double-edge mode.	R/W	0	0xE001 4024
PWMMR4	PWM Match Register 4. PWMMR4 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR4 and the PWMTC clears PWM4 in either single-edge mode or double-edge mode, and sets PWM5 if it is in double-edge mode.	R/W	0	0xE001 4040
PWMMR5	PWM Match Register 5. PWMMR5 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR5 and the PWMTC clears PWM5 in either single-edge mode or double-edge mode, and sets PWM6 if it is in double-edge mode.	R/W	0	0xE001 4044
PWMMR6	PWM Match Register 6. PWMMR6 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR6 and the PWMTC clears PWM6 in either single-edge mode or double-edge mode.	R/W	0	0xE001 4048
PWMPCR	PWM Control Register. Enables PWM outputs and selects PWM channel types as either single-edge or double-edge controlled.	R/W	0	0xE001 404C
PWMLER	PWM Latch Enable Register. Enables use of new PWM match values.	R/W	0	0xE001 4050

^[1] Reset Value refers to the data stored in used bits only. It does not include reserved bits content.

5.1 PWM Interrupt Register (PWMIR - 0xE001 4000)

The PWM Interrupt Register consists bits described in (<u>Table 16–224</u>). If an interrupt is generated then the corresponding bit in the PWMIR will be high. Otherwise, the bit will be low. Writing a logic one to the corresponding IR bit will reset the interrupt. Writing a zero has no effect.

Table 224: PWM Interrupt Register (PWMIR - address 0xE001 4000) bit description

Bit	Symbol	Description	Reset value
0	PWMMR0 Interrupt	Interrupt flag for PWM match channel 0.	0
1	PWMMR1 Interrupt	Interrupt flag for PWM match channel 1.	0
2	PWMMR2 Interrupt	Interrupt flag for PWM match channel 2.	0

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

Table 224: PWM Interrupt Register (PWMIR - address 0xE001 4000) bit description

Bit	Symbol	Description	Reset value
3	PWMMR3 Interrupt	Interrupt flag for PWM match channel 3.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0000
8	PWMMR4 Interrupt	Interrupt flag for PWM match channel 4.	0
9	PWMMR5 Interrupt	Interrupt flag for PWM match channel 5.	0
10	PWMMR6 Interrupt	Interrupt flag for PWM match channel 6.	0
15:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.2 PWM Timer Control Register (PWMTCR - 0xE001 4004)

The PWM Timer Control Register (PWMTCR) is used to control the operation of the PWM Timer Counter. The function of each of the bits is shown in Table 16–225.

Table 225: PWM Timer Control Register (PWMTCR - address 0xE001 4004) bit description

Bit	Symbol	Value	Description	Reset Value	
0 Counter Enable		1	The PWM Timer Counter and PWM Prescale Counter are enabled for counting.	0	
		0	The counters are disabled.		
1 Counter Reset		1	The PWM Timer Counter and the PWM Prescale Counter are synchronously reset on the next positive edge of PCLK. The counters remain reset until this bit is returned to zero.	0	
		0	Clear reset.		
2	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
3	PWM Enable	1	PWM mode is enabled (counter resets to 1). PWM mode causes the shadow registers to operate in connection with the Match registers. A program write to a Match register will not have an effect on the Match result until the corresponding bit in PWMLER has been set, followed by the occurrence of a PWM Match 0 event. Note that the PWM Match register that determines the PWM rate (PWM Match Register 0 - MR0) must be set up prior to the PWM being enabled. Otherwise a Match event will not occur to cause shadow register contents to become effective.	0	
		0	Timer mode is enabled (counter resets to 0).		
7:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

5.3 PWM Timer Counter (PWMTC - 0xE001 4008)

The 32-bit PWM Timer Counter is incremented when the Prescale Counter reaches its terminal count. Unless it is reset before reaching its upper limit, the PWMTC will count up through the value 0xFFFF FFFF and then wrap back to the value 0x0000 0000. This event does not cause an interrupt, but a Match register can be used to detect an overflow if needed.

5.4 PWM Prescale Register (PWMPR - 0xE001 400C)

The 32-bit PWM Prescale Register specifies the maximum value for the PWM Prescale Counter.

5.5 PWM Prescale Counter Register (PWMPC - 0xE001 4010)

The 32-bit PWM Prescale Counter controls division of PCLK by some constant value before it is applied to the PWM Timer Counter. This allows control of the relationship of the resolution of the timer versus the maximum time before the timer overflows. The PWM Prescale Counter is incremented on every PCLK. When it reaches the value stored in the PWM Prescale Register, the PWM Timer Counter is incremented and the PWM Prescale Counter is reset on the next PCLK. This causes the PWM TC to increment on every PCLK when PWMPR = 0, every 2 PCLKs when PWMPR = 1, etc.

5.6 PWM Match Registers (PWMMR0 - PWMMR6)

The 32-bit PWM Match register values are continuously compared to the PWM Timer Counter value. When the two values are equal, actions can be triggered automatically. The action possibilities are to generate an interrupt, reset the PWM Timer Counter, or stop the timer. Actions are controlled by the settings in the PWMMCR register.

5.7 PWM Match Control Register (PWMMCR - 0xE001 4014)

The PWM Match Control Register is used to control what operations are performed when one of the PWM Match Registers matches the PWM Timer Counter. The function of each of the bits is shown in Table 16–226.

Table 226: Match Control Register (MCR, TIMER0: T0MCR - address 0xE000 4014 and TIMER1: T1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description	Reset Value
0 PWMMR0I		1	Interrupt on PWMMR0: an interrupt is generated when PWMMR0 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	
1	1 PWMMR0R		Reset on PWMMR0: the PWMTC will be reset if PWMMR0 matches it.	0
		0	This feature is disabled.	
2 PWMMR0S		1	Stop on PWMMR0: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR0 matches the PWMTC.	0
		0	This feature is disabled	

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

Table 226: Match Control Register (MCR, TIMER0: T0MCR - address 0xE000 4014 and TIMER1: T1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description		
3	PWMMR1I	1	Interrupt on PWMMR1: an interrupt is generated when PWMMR1 matches the value in the PWMTC.	0	
		0	This interrupt is disabled.		
4	PWMMR1R	1	Reset on PWMMR1: the PWMTC will be reset if PWMMR1 matches it.	0	
		0	This feature is disabled.		
5 PWMMR1S		1	Stop on PWMMR1: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR1 matches the PWMTC.	0	
		0	This feature is disabled.		
6	PWMMR2I	1	Interrupt on PWMMR2: an interrupt is generated when PWMMR2 matches the value in the PWMTC.	0	
		0	This interrupt is disabled.		
7	PWMMR2R 1 Reset on PWMMR2: the PWMTC will be reset if PWMMR2 matches it.		0		
		0	This feature is disabled.		
8	PWMMR2S	Stop on PWMMR2: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR2 matches the PWMTC.		0	
		0	This feature is disabled		
9	9 PWMMR3I	1	Interrupt on PWMMR3: an interrupt is generated when PWMMR3 matches the value in the PWMTC.	0	
		0	This interrupt is disabled.		
10	PWMMR3R	1	Reset on PWMMR3: the PWMTC will be reset if PWMMR3 matches it.	0	
		0	This feature is disabled		
11	PWMMR3S	1	Stop on PWMMR3: The PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR3 matches the PWMTC.	0	
		0	This feature is disabled		
12	PWMMR4I	1	Interrupt on PWMMR4: An interrupt is generated when PWMMR4 matches the value in the PWMTC.	0	
		0	This interrupt is disabled.		
13	PWMMR4R	1	Reset on PWMMR4: the PWMTC will be reset if PWMMR4 matches it.	0	
		0	This feature is disabled.		
14	PWMMR4S	1	Stop on PWMMR4: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR4 matches the PWMTC.	0	
		0	This feature is disabled		
15	PWMMR5I	1	Interrupt on PWMMR5: An interrupt is generated when PWMMR5 matches the value in the PWMTC.	0	
		0	This interrupt is disabled.		

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

Table 226: Match Control Register (MCR, TIMER0: T0MCR - address 0xE000 4014 and TIMER1: T1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description	Reset Value	
16	PWMMR5R	1	Reset on PWMMR5: the PWMTC will be reset if PWMMR5 matches it.	0	
		0	This feature is disabled.		
17 PWMMR5S		1	Stop on PWMMR5: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR5 matches the PWMTC.	0	
		0	This feature is disabled		
18	PWMMR6I	1	Interrupt on PWMMR6: an interrupt is generated when PWMMR6 matches the value in the PWMTC.	0	
		0	This interrupt is disabled.		
19	PWMMR6R	1	Reset on PWMMR6: the PWMTC will be reset if PWMMR6 matches it.	0	
		0	This feature is disabled.		
20	PWMMR6S	1	Stop on PWMMR6: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR6 matches the PWMTC.	0 b	
		0	This feature is disabled		
31:21	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

5.8 PWM Control Register (PWMPCR - 0xE001 404C)

The PWM Control Register is used to enable and select the type of each PWM channel. The function of each of the bits are shown in Table 16–227.

Table 227: PWM Control Register (PWMPCR - address 0xE001 404C) bit description

Bit	Symbol	Valu e	Description	Reset Value	
1:0	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
2	PWMSEL2	1	Selects double edge controlled mode for the PWM2 output.	0	
		0	Selects single edge controlled mode for PWM2.		
3	PWMSEL3	1	Selects double edge controlled mode for the PWM3 output.	. 0	
		0	Selects single edge controlled mode for PWM3.		
4	PWMSEL4	1	Selects double edge controlled mode for the PWM4 output.	0	
		0	Selects single edge controlled mode for PWM4.		
5	5 PWMSEL5		Selects double edge controlled mode for the PWM5 output.	0	
		0	Selects single edge controlled mode for PWM5.		
6	PWMSEL6	1	Selects double edge controlled mode for the PWM6 output.	0	
		0	Selects single edge controlled mode for PWM6.		
8:7	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
9	PWMENA1	1	The PWM1 output enabled.	0	
		0	The PWM1 output disabled.		

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

Table 227: PWM Control Register (PWMPCR - address 0xE001 404C) bit description

Bit	Symbol	Valu e	Description	Reset Value
10	PWMENA2	1	The PWM2 output enabled.	0
		0	The PWM2 output disabled.	
11	11 PWMENA3		The PWM3 output enabled.	0
		0	The PWM3 output disabled.	
12	12 PWMENA4		The PWM4 output enabled.	0
		0	The PWM4 output disabled.	
13	PWMENA5	1	The PWM5 output enabled.	0
		0	The PWM5 output disabled.	
14	PWMENA6	1	The PWM6 output enabled.	0
		0	The PWM6 output disabled.	
15	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.9 PWM Latch Enable Register (PWMLER - 0xE001 4050)

The PWM Latch Enable Register is used to control the update of the PWM Match registers when they are used for PWM generation. When software writes to the location of a PWM Match register while the Timer is in PWM mode, the value is held in a shadow register. When a PWM Match 0 event occurs (normally also resetting the timer in PWM mode), the contents of shadow registers will be transferred to the actual Match registers if the corresponding bit in the Latch Enable Register has been set. At that point, the new values will take effect and determine the course of the next PWM cycle. Once the transfer of new values has taken place, all bits of the LER are automatically cleared. Until the corresponding bit in the PWMLER is set and a PWM Match 0 event occurs, any value written to the PWM Match registers has no effect on PWM operation.

For example, if PWM2 is configured for double edge operation and is currently running, a typical sequence of events for changing the timing would be:

- Write a new value to the PWM Match1 register.
- Write a new value to the PWM Match2 register.
- Write to the PWMLER, setting bits 1 and 2 at the same time.
- The altered values will become effective at the next reset of the timer (when a PWM Match 0 event occurs).

The order of writing the two PWM Match registers is not important, since neither value will be used until after the write to PWMLER. This insures that both values go into effect at the same time, if that is required. A single value may be altered in the same way if needed.

The function of each of the bits in the PWMLER is shown in Table 16–228.

Chapter 16: LPC21xx/22xx Pulse Width Modulator (PWM)

Table 228: PWM Latch Enable Register (PWMLER - address 0xE001 4050) bit description

Bit	Symbol	Description	Reset value
0	Enable PWM Match 0 Latch	Writing a one to this bit allows the last value written to the PWM Match 0 register to be become effective when the timer is next reset by a PWM Match event. Section 16–5.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
1	Enable PWM Match 1 Latch	Writing a one to this bit allows the last value written to the PWM Match 1 register to be become effective when the timer is next reset by a PWM Match event. Section 16–5.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
2	Enable PWM Match 2 Latch	Writing a one to this bit allows the last value written to the PWM Match 2 register to be become effective when the timer is next reset by a PWM Match event. See Section 16–5.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
3	Enable PWM Match 3 Latch	Writing a one to this bit allows the last value written to the PWM Match 3 register to be become effective when the timer is next reset by a PWM Match event. See Section 16–5.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
4	Enable PWM Match 4 Latch	Writing a one to this bit allows the last value written to the PWM Match 4 register to be become effective when the timer is next reset by a PWM Match event. See Section 16–5.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
5	Enable PWM Match 5 Latch	Writing a one to this bit allows the last value written to the PWM Match 5 register to be become effective when the timer is next reset by a PWM Match event. See Section 16–5.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
6	Enable PWM Match 6 Latch	Writing a one to this bit allows the last value written to the PWM Match 6 register to be become effective when the timer is next reset by a PWM Match event. See Section 16–5.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

UM10114

Chapter 17: LPC21xx/22xx WatchDog Timer (WDT)

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The WDT is identical for all LPC21xx and LPC22xx parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- Internally resets chip if not periodically reloaded.
- Debug mode.
- Enabled by software but requires a hardware reset or a watchdog reset/interrupt to be disabled.
- Incorrect/Incomplete feed sequence causes reset/interrupt if enabled.
- Flag to indicate Watchdog reset.
- Programmable 32-bit timer with internal pre-scaler.
- Selectable time period from (T_{PCLK} x 256 x 4) to (T_{PCLK} x 2³² x 4) in multiples of T_{PCLK} x 4.

3. Applications

The purpose of the watchdog is to reset the microcontroller within a reasonable amount of time if it enters an erroneous state. When enabled, the watchdog will generate a system reset if the user program fails to "feed" (or reload) the watchdog within a predetermined amount of time.

For interaction of the on-chip watchdog and other peripherals, especially the reset and boot-up procedures, please read Section 6–11 of this document.

4. Description

The watchdog consists of a divide by 4 fixed pre-scaler and a 32-bit counter. The clock is fed to the timer via a pre-scaler. The timer decrements when clocked. The minimum value from which the counter decrements is 0xFF. Setting a value lower than 0xFF causes 0xFF to be loaded in the counter. Hence the minimum watchdog interval is ($T_{PCLK} \times 256 \times 4$) and the maximum watchdog interval is ($T_{PCLK} \times 2^{32} \times 4$) in multiples of ($T_{PCLK} \times 4$). The watchdog should be used in the following manner:

- Set the watchdog timer constant reload value in WDTC register.
- Setup mode in WDMOD register.
- Start the watchdog by writing 0xAA followed by 0x55 to the WDFEED register.
- Watchdog should be fed again before the watchdog counter underflows to prevent reset/interrupt.

Chapter 17: LPC21xx/22xx WatchDog Timer (WDT)

When the Watchdog counter underflows, the program counter will start from 0x0000 0000 as in the case of external reset. The Watchdog Time-Out Flag (WDTOF) can be examined to determine if the watchdog has caused the reset condition. The WDTOF flag must be cleared by software.

5. Register description

The watchdog contains 4 registers as shown in Table 17–229 below.

Table 229. Watchdog register map

Name	Description	Access	Reset value[1]	Address
WDMOD	Watchdog Mode register. This register contains the basic mode and status of the Watchdog Timer.	R/W	0	0xE000 0000
WDTC	Watchdog Timer Constant register. This register determines the time-out value.	R/W	0xFF	0xE000 0004
WDFEED	Watchdog Feed sequence register. Writing 0xAA followed by 0x55 to this register reloads the Watchdog timer to its preset value.	WO	NA	0xE000 0008
WDTV	Watchdog Timer Value register. This register reads out the current value of the Watchdog timer.	RO	0xFF	0xE000 000C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

5.1 Watchdog Mode register (WDMOD - 0xE000 0000)

The WDMOD register controls the operation of the watchdog as per the combination of WDEN and RESET bits.

Table 230. Watchdog operating modes selection

WDEN	WDRESET	Mode of Operation	
0	X (0 or 1)	Debug/Operate without the watchdog running.	
1	0	Watchdog Interrupt Mode: debug with the Watchdog interrupt but no WDRESET enabled.	
		When this mode is selected, a watchdog counter underflow will set the WDINT flag and the watchdog interrupt request will be generated.	
1	1	Watchdog Reset Mode: operate with the watchdog interrupt and WDRESET enabled.	
		When this mode is selected, a watchdog counter underflow will reset the microcontroller. While the watchdog interrupt is also enabled in this case (WDEN = 1) it will not be recognized since the watchdog reset will clear the WDINT flag.	

Once the **WDEN** and/or **WDRESET** bits are set they can not be cleared by software. Both flags are cleared by an external reset or a watchdog timer underflow.

WDTOF The Watchdog Time-Out Flag is set when the watchdog times out. This flag is cleared by software.

WDINT The Watchdog Interrupt Flag is set when the watchdog times out. This flag is cleared when any reset occurs. Once the watchdog interrupt is serviced, it can be disabled in the VIC or the watchdog interrupt request will be generated indefinitely.

Chapter 17: LPC21xx/22xx WatchDog Timer (WDT)

Table 231: Watchdog Mode register (WDMOD - address 0xE000 0000) bit description

Bit	Symbol	Description	Reset value
0	WDEN	WDEN Watchdog interrupt Enable bit (Set Only).	0
1	WDRESET	WDRESET Watchdog Reset Enable bit (Set Only).	0
2	WDTOF	WDTOF Watchdog Time-Out Flag.	0 (Only after external reset)
3	WDINT	WDINT Watchdog interrupt Flag (Read Only).	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.2 Watchdog Timer Constant register (WDTC - 0xE000 0004)

The WDTC register determines the time-out value. Every time a feed sequence occurs the WDTC content is reloaded in to the watchdog timer. It's a 32-bit register with 8 LSB set to 1 on reset. Writing values below 0xFF will cause 0xFF to be loaded to the WDTC. Thus the minimum time-out interval is $T_{PCLK} \times 256 \times 4$.

Table 232: Watchdog Timer Constant register (WDTC - address 0xE000 0004) bit description

Bit	Symbol	Description	Reset value
31:0	Count	Watchdog time-out interval.	0x0000 00FF

5.3 Watchdog Feed register (WDFEED - 0xE000 0008)

Writing 0xAA followed by 0x55 to this register will reload the watchdog timer to the WDTC value. This operation will also start the watchdog if it is enabled via the WDMOD register. Setting the WDEN bit in the WDMOD register is not sufficient to enable the watchdog. A valid feed sequence must first be completed before the Watchdog is capable of generating an interrupt/reset. Until then, the watchdog will ignore feed errors. Once 0xAA is written to the WDFEED register the next operation in the Watchdog register space must be a **WRITE** (0x55) to the WDFFED register otherwise the watchdog is triggered. The interrupt/reset will be generated during the second PCLK following an incorrect access to a watchdog timer register during a feed sequence.

Remark: Interrupts must be disabled during the feed sequence. An abort condition will occur if an interrupt happens during the feed sequence.

Table 233: Watchdog Feed register (WDFEED - address 0xE000 0008) bit description

Bit	Symbol	Description	Reset value
7:0	Feed	Feed value should be 0xAA followed by 0x55.	NA

5.4 Watchdog Timer Value register (WDTV - 0xE000 000C)

The WDTV register is used to read the current value of watchdog timer.

Table 234: Watchdog Timer Value register (WDTV - address 0xE000 000C) bit description

Bit	Symbol	Description	Reset value
31:0	Count	Counter timer value.	0x0000 00FF

Chapter 17: LPC21xx/22xx WatchDog Timer (WDT)

6. Block diagram

The block diagram of the Watchdog is shown below in the Figure 17–64.

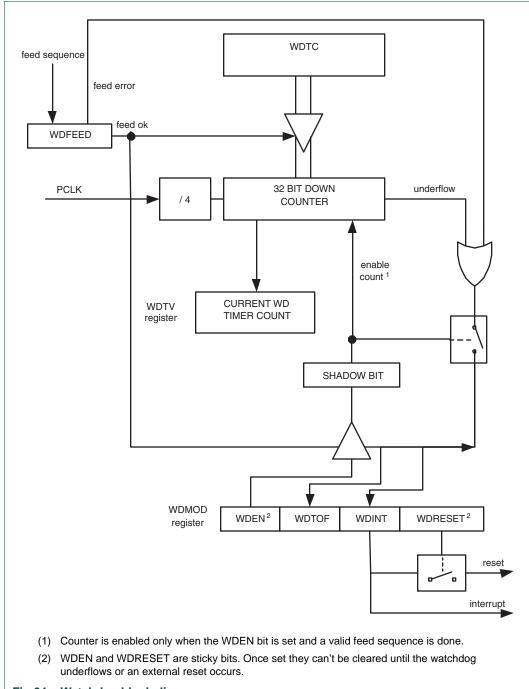


Fig 64. Watchdog block diagram

UM10114

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The RTC is identical for all LPC21xx and LPC22xx parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features


- Measures the passage of time to maintain a calendar and clock.
- Ultra low power design to support battery powered systems.
- Provides Seconds, Minutes, Hours, Day of Month, Month, Year, Day of Week, and Day of Year.
- Programmable reference clock divider allows adjustment of the RTC to match various crystal frequencies.

3. Description

The Real Time Clock (RTC) is designed to provide a set of counters to measure time during system power on and off operation. The RTC has been designed to use little power in power down mode, making it suitable for battery powered systems where the CPU is not running continuously (sleep mode).

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

4. Architecture

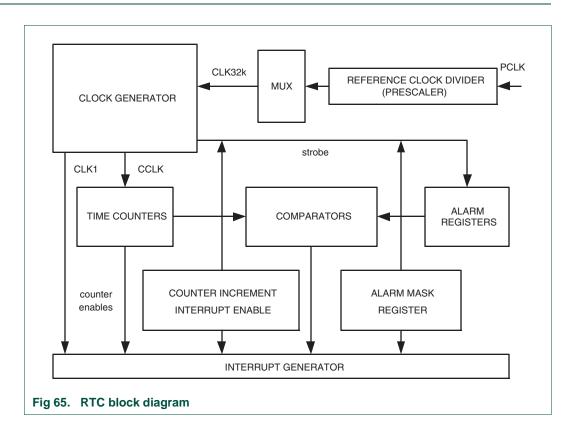

5. Register description

The RTC includes a number of registers. The address space is split into four sections by functionality. The first eight addresses are the Miscellaneous Register Group (Section 18–5.2). The second set of eight locations are the Time Counter Group (Section 18–5.12). The third set of eight locations contain the Alarm Register Group (Section 18–5.14). The remaining registers control the Reference Clock Divider.

The Real Time Clock includes the register shown in <u>Table 18–235</u>. Detailed descriptions of the registers follow.

Table 235. Real Time Clock (RTC) register map

Name	Size	Description	Access	Reset value[1]	Address
ILR	2	Interrupt Location Register	R/W	*	0xE002 4000
CTC	15	Clock Tick Counter	RO	*	0xE002 4004
CCR	4	Clock Control Register	R/W	*	0xE002 4008
CIIR	8	Counter Increment Interrupt Register	R/W	*	0xE002 400C
AMR	8	Alarm Mask Register	R/W	*	0xE002 4010
CTIME0	32	Consolidated Time Register 0	RO	*	0xE002 4014
CTIME1	32	Consolidated Time Register 1	RO	*	0xE002 4018
CTIME2	32	Consolidated Time Register 2	RO	*	0xE002 401C

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

Table 235. Real Time Clock (RTC) register map

Name	Size	Description	Access	Reset value[1]	Address
SEC	6	Seconds Counter	R/W	*	0xE002 4020
MIN	6	Minutes Register	R/W	*	0xE002 4024
HOUR	5	Hours Register	R/W	*	0xE002 4028
DOM	5	Day of Month Register	R/W	*	0xE002 402C
DOW	3	Day of Week Register	R/W	*	0xE002 4030
DOY	9	Day of Year Register	R/W	*	0xE002 4034
MONTH	4	Months Register	R/W	*	0xE002 4038
YEAR	12	Years Register	R/W	*	0xE002 403C
ALSEC	6	Alarm value for Seconds	R/W	*	0xE002 4060
ALMIN	6	Alarm value for Minutes	R/W	*	0xE002 4064
ALHOUR	5	Alarm value for Seconds	R/W	*	0xE002 4068
ALDOM	5	Alarm value for Day of Month	R/W	*	0xE002 406C
ALDOW	3	Alarm value for Day of Week	R/W	*	0xE002 4070
ALDOY	9	Alarm value for Day of Year	R/W	*	0xE002 4074
ALMON	4	Alarm value for Months	R/W	*	0xE002 4078
ALYEAR	12	Alarm value for Year	R/W	*	0xE002 407C
PREINT	13	Prescaler value, integer portion	R/W	0	0xE002 4080
PREFRAC	15	Prescaler value, fractional portion	R/W	0	0xE002 4084

^[1] Registers in the RTC other than those that are part of the Prescaler are not affected by chip Reset. These registers must be initialized by software if the RTC is enabled. Reset value reflects the data stored in used bits only. It does not include reserved bits content.

5.1 RTC interrupts

Interrupt generation is controlled through the Interrupt Location Register (ILR), Counter Increment Interrupt Register (CIIR), the alarm registers, and the Alarm Mask Register (AMR). Interrupts are generated only by the transition into the interrupt state. The ILR separately enables CIIR and AMR interrupts. Each bit in CIIR corresponds to one of the time counters. If CIIR is enabled for a particular counter, then every time the counter is incremented an interrupt is generated. The alarm registers allow the user to specify a date and time for an interrupt to be generated. The AMR provides a mechanism to mask alarm compares. If all non-masked alarm registers match the value in their corresponding time counter, then an interrupt is generated.

5.2 Miscellaneous register group

<u>Table 18–236</u> summarizes the registers located from 0 to 7 of A[6:2]. More detailed descriptions follow.

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

Table 236. Miscellaneous registers

Name	Size	Description	Access	Address
ILR	2	Interrupt Location. Reading this location indicates the source of an interrupt. Writing a one to the appropriate bit at this location clears the associated interrupt.	R/W	0xE002 4000
CTC	15	Clock Tick Counter. Value from the clock divider.	RO	0xE002 4004
CCR	4	Clock Control Register. Controls the function of the clock divider.	R/W	0xE002 4008
CIIR	8	Counter Increment Interrupt. Selects which counters will generate an interrupt when they are incremented.	R/W	0xE002 400C
AMR	8	Alarm Mask Register. Controls which of the alarm registers are masked.	R/W	0xE002 4010
CTIME0	32	Consolidated Time Register 0	RO	0xE002 4014
CTIME1	32	Consolidated Time Register 1	RO	0xE002 4018
CTIME2	32	Consolidated Time Register 2	RO	0xE002 401C

5.3 Interrupt Location Register (ILR - 0xE002 4000)

The Interrupt Location Register is a 2-bit register that specifies which blocks are generating an interrupt (see <u>Table 18–237</u>). Writing a one to the appropriate bit clears the corresponding interrupt. Writing a zero has no effect. This allows the programmer to read this register and write back the same value to clear only the interrupt that is detected by the read.

Table 237: Interrupt Location Register (ILR - address 0xE002 4000) bit description

Bit	Symbol	Description	Reset value
0	RTCCIF	When one, the Counter Increment Interrupt block generated an interrupt. Writing a one to this bit location clears the counter increment interrupt.	NA
1	RTCALF	When one, the alarm registers generated an interrupt. Writing a one to this bit location clears the alarm interrupt.	NA
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.4 Clock Tick Counter Register (CTCR - 0xE002 4004)

The Clock Tick Counter is read only. It can be reset to zero through the Clock Control Register (CCR). The CTC consists of the bits of the clock divider counter.

Table 238: Clock Tick Counter Register (CTCR - address 0xE002 4004) bit description

Bit	Symbol	Description	Reset value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:1	Clock Tick Counter	Prior to the Seconds counter, the CTC counts 32,768 clocks per second. Due to the RTC Prescaler, these 32,768 time increments may not all be of the same duration. Refer to the Section 18–7 "Reference clock divider (prescaler)" on page 271 for details.	NA

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

5.5 Clock Control Register (CCR - 0xE002 4008)

The clock register is a 5-bit register that controls the operation of the clock divide circuit. Each bit of the clock register is described in Table 18–239.

Table 239: Clock Control Register (CCR - address 0xE002 4008) bit description

Bit	Symbol	Description	Reset value
0	CLKEN	Clock Enable. When this bit is a one the time counters are enabled. When it is a zero, they are disabled so that they may be initialized.	NA
1	CTCRST	CTC Reset. When one, the elements in the Clock Tick Counter are reset. The elements remain reset until CCR[1] is changed to zero.	NA
3:2	CTTEST	Test Enable. These bits should always be zero during normal operation.	NA
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.6 Counter Increment Interrupt Register (CIIR - 0xE002 400C)

The Counter Increment Interrupt Register (CIIR) gives the ability to generate an interrupt every time a counter is incremented. This interrupt remains valid until cleared by writing a one to bit zero of the Interrupt Location Register (ILR[0]).

Table 240: Counter Increment Interrupt Register (CIIR - address 0xE002 400C) bit description

Bit	Symbol	Description	Reset value
0	IMSEC	When 1, an increment of the Second value generates an interrupt.	NA
1	IMMIN	When 1, an increment of the Minute value generates an interrupt.	NA
2	IMHOUR	When 1, an increment of the Hour value generates an interrupt.	NA
3	IMDOM	When 1, an increment of the Day of Month value generates an interrupt.	NA
4	IMDOW	When 1, an increment of the Day of Week value generates an interrupt.	NA
5	IMDOY	When 1, an increment of the Day of Year value generates an interrupt.	NA
6	IMMON	When 1, an increment of the Month value generates an interrupt.	NA
7	IMYEAR	When 1, an increment of the Year value generates an interrupt.	NA

5.7 Alarm Mask Register (AMR - 0xE002 4010)

The Alarm Mask Register (AMR) allows the user to mask any of the alarm registers.

Table 18–241 shows the relationship between the bits in the AMR and the alarms. For the alarm function, every non-masked alarm register must match the corresponding time counter for an interrupt to be generated. The interrupt is generated only when the counter comparison first changes from no match to match. The interrupt is removed when a one is written to the appropriate bit of the Interrupt Location Register (ILR). If all mask bits are set, then the alarm is disabled.

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

Table 241: Alarm Mask Register (AMR - address 0xE002 4010) bit description

Bit	Symbol	Description	Reset value
0	AMRSEC	When 1, the Second value is not compared for the alarm.	NA
1	AMRMIN	When 1, the Minutes value is not compared for the alarm.	NA
2	AMRHOUR	When 1, the Hour value is not compared for the alarm.	NA
3	AMRDOM	When 1, the Day of Month value is not compared for the alarm.	NA
4	AMRDOW	When 1, the Day of Week value is not compared for the alarm.	NA
5	AMRDOY	When 1, the Day of Year value is not compared for the alarm.	NA
6	AMRMON	When 1, the Month value is not compared for the alarm.	NA
7	AMRYEAR	When 1, the Year value is not compared for the alarm.	NA

5.8 Consolidated time registers

The values of the Time Counters can optionally be read in a consolidated format which allows the programmer to read all time counters with only three read operations. The various registers are packed into 32-bit values as shown in <u>Table 18–242</u>, <u>Table 18–243</u>, and <u>Table 18–244</u>. The least significant bit of each register is read back at bit 0, 8, 16, or 24.

The Consolidated Time Registers are read only. To write new values to the Time Counters, the Time Counter addresses should be used.

5.9 Consolidated Time register 0 (CTIME0 - 0xE002 4014)

The Consolidated Time Register 0 contains the low order time values: Seconds, Minutes, Hours, and Day of Week.

Table 242: Consolidated Time register 0 (CTIME0 - address 0xE002 4014) bit description

Bit	Symbol	Description	Reset
Dit	Oyillb01	Description	value
5:0	Seconds	Seconds value in the range of 0 to 59	NA
7:6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
13:8	Minutes	Minutes value in the range of 0 to 59	NA
15:14	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
20:16	Hours	Hours value in the range of 0 to 23	NA
23:21	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
26:24	Day Of Week	Day of week value in the range of 0 to 6	NA
31:27	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
	· · · · · · · · · · · · · · · · · · ·		

5.10 Consolidated Time register 1 (CTIME1 - 0xE002 4018)

The Consolidate Time register 1 contains the Day of Month, Month, and Year values.

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

Table 243: Consolidated Time register 1 (CTIME1 - address 0xE002 4018) bit description

Bit	Symbol	Description	Reset value
4:0	Day of Month	Day of month value in the range of 1 to 28, 29, 30, or 31 (depending on the month and whether it is a leap year).	NA
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:8	Month	Month value in the range of 1 to 12.	NA
15:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
27:16	Year	Year value in the range of 0 to 4095.	NA
31:28	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.11 Consolidated Time register 2 (CTIME2 - 0xE002 401C)

The Consolidate Time register 2 contains just the Day of Year value.

Table 244: Consolidated Time register 2 (CTIME2 - address 0xE002 401C) bit description

Bit	Symbol	Description	Reset value
11:0	Day of Year	Day of year value in the range of 1 to 365 (366 for leap years).	NA
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.12 Time counter group

The time value consists of the eight counters shown in <u>Table 18–245</u> and <u>Table 18–246</u>. These counters can be read or written at the locations shown in <u>Table 18–246</u>.

Table 245. Time counter relationships and values

Counter	Size	Enabled by	Minimum value	Maximum value
Second	6	Clk1 (see Figure 18–65)	0	59
Minute	6	Second	0	59
Hour	5	Minute	0	23
Day of Month	5	Hour	1	28, 29, 30 or 31
Day of Week	3	Hour	0	6
Day of Year	9	Hour	1	365 or 366 (for leap year)
Month	4	Day of Month	1	12
Year	12	Month or day of Year	0	4095

Table 246. Time counter registers

Name	Size	Description	Access	Address
SEC	6	Seconds value in the range of 0 to 59	R/W	0xE002 4020
MIN	6	Minutes value in the range of 0 to 59	R/W	0xE002 4024
HOUR	5	Hours value in the range of 0 to 23	R/W	0xE002 4028

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

Table 246. 1	Γime	counter	registers
--------------	------	---------	-----------

Name	Size	Description	Access	Address
DOM	5	Day of month value in the range of 1 to 28, 29, 30, or 31 (depending on the month and whether it is a leap year).[1]	R/W	0xE002 402C
DOW	3	Day of week value in the range of 0 to 6[1]	R/W	0xE002 4030
DOY	9	Day of year value in the range of 1 to 365 (366 for leap years)[1]	R/W	0xE002 4034
MONTH	4	Month value in the range of 1 to 12	R/W	0xE002 4038
YEAR	12	Year value in the range of 0 to 4095	R/W	0xE002 403C

^[1] These values are simply incremented at the appropriate intervals and reset at the defined overflow point. They are not calculated and must be correctly initialized in order to be meaningful.

5.13 Leap year calculation

The RTC does a simple bit comparison to see if the two lowest order bits of the year counter are zero. If true, then the RTC considers that year a leap year. The RTC considers all years evenly divisible by 4 as leap years. This algorithm is accurate from the year 1901 through the year 2099, but fails for the year 2100, which is not a leap year. The only effect of leap year on the RTC is to alter the length of the month of February for the month, day of month, and year counters.

5.14 Alarm register group

The alarm registers are shown in <u>Table 18–247</u>. The values in these registers are compared with the time counters. If all the unmasked (See <u>Section 18–5.7 "Alarm Mask Register (AMR - 0xE002 4010)" on page 267</u>) alarm registers match their corresponding time counters then an interrupt is generated. The interrupt is cleared when a one is written to bit one of the Interrupt Location Register (ILR[1]).

Table 247. Alarm registers

Name	Size	Description	Access	Address
ALSEC	6	Alarm value for Seconds	R/W	0xE002 4060
ALMIN	6	Alarm value for Minutes	R/W	0xE002 4064
ALHOUR	5	Alarm value for Hours	R/W	0xE002 4068
ALDOM	5	Alarm value for Day of Month	R/W	0xE002 406C
ALDOW	3	Alarm value for Day of Week	R/W	0xE002 4070
ALDOY	9	Alarm value for Day of Year	R/W	0xE002 4074
ALMON	4	Alarm value for Months	R/W	0xE002 4078
ALYEAR	12	Alarm value for Years	R/W	0xE002 407C

6. RTC usage notes

Since the RTC operates from the APB clock (PCLK), any interruption of that clock will cause the time to drift away from the time value it would have provided otherwise. The variance could be to actual clock time if the RTC was initialized to that, or simply an error in elapsed time since the RTC was activated.

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

No provision is made in the LPC21xx/LPC22xx to retain RTC status upon power loss, or to maintain time incrementation if the clock source is lost, interrupted, or altered. Loss of chip power will result in complete loss of all RTC register contents. Entry to Power Down mode will cause a lapse in the time update. Altering the RTC timebase during system operation (by reconfiguring the PLL, the APB timer, or the RTC prescaler) will result in some form of accumulated time error.

7. Reference clock divider (prescaler)

The reference clock divider (hereafter referred to as the prescaler) allows generation of a 32.768 kHz reference clock from any peripheral clock frequency greater than or equal to 65.536 kHz ($2 \times 32.768 \text{ kHz}$). This permits the RTC to always run at the proper rate regardless of the peripheral clock rate. Basically, the Prescaler divides the peripheral clock (PCLK) by a value which contains both an integer portion and a fractional portion. The result is not a continuous output at a constant frequency, some clock periods will be one PCLK longer than others. However, the overall result can always be 32,768 counts per second.

The reference clock divider consists of a 13-bit integer counter and a 15-bit fractional counter. The reasons for these counter sizes are as follows:

- 1. For frequencies that are expected to be supported by the LPC21xx/LPC22xx, a 13-bit integer counter is required. This can be calculated as 160 MHz divided by 32,768 minus 1 = 4881 with a remainder of 26,624. Thirteen bits are needed to hold the value 4881, but actually supports frequencies up to 268.4 MHz (32,768 × 8192).
- 2. The remainder value could be as large as 32,767, which requires 15 bits.

Table 248. Reference clock divider registers

Name	Size	Description	Access	Address
PREINT	13	Prescale Value, integer portion	R/W	0xE002 4080
PREFRAC	15	Prescale Value, fractional portion	R/W	0xE002 4084

7.1 Prescaler Integer register (PREINT - 0xE002 4080)

This is the integer portion of the prescale value, calculated as:

PREINT = int (PCLK / 32768) – 1. The value of PREINT must be greater than or equal to 1.

Table 249: Prescaler Integer register (PREINT - address 0xE002 4080) bit description

Bit	Symbol	Description	Reset value
12:0	Prescaler Integer	Contains the integer portion of the RTC prescaler value.	0
15:13	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

7.2 Prescaler Fraction register (PREFRAC - 0xE002 4084)

This is the fractional portion of the prescale value, and may be calculated as:

 $PREFRAC = PCLK - ((PREINT + 1) \times 32768).$

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

Table 250: Prescaler Integer register (PREFRAC - address 0xE002 4084) bit description

Bit	Symbol	Description	Reset value
14:0	Prescaler Fraction	Contains the integer portion of the RTC prescaler value.	0
15	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

7.3 Example of prescaler usage

In a simplistic case, the PCLK frequency is 65.537 kHz. So:

```
PREINT = int (PCLK / 32768) - 1 = 1 and
PREFRAC = PCLK - ([PREINT + 1] \times 32768) = 1
```

With this prescaler setting, exactly 32,768 clocks per second will be provided to the RTC by counting 2 PCLKs 32,767 times, and 3 PCLKs once.


In a more realistic case, the PCLK frequency is 10 MHz. Then,

```
PREINT = int (PCLK / 32768) - 1 = 304 and PREFRAC = PCLK - ([PREINT + 1] \times 32768) = 5,760.
```

In this case, 5,760 of the prescaler output clocks will be 306 (305 + 1) PCLKs long, the rest will be 305 PCLKs long.

In a similar manner, any PCLK rate greater than 65.536 kHz (as long as it is an even number of cycles per second) may be turned into a 32 kHz reference clock for the RTC. The only caveat is that if PREFRAC does not contain a zero, then not all of the 32,768 per second clocks are of the same length. Some of the clocks are one PCLK longer than others. While the longer pulses are distributed as evenly as possible among the remaining pulses, this "jitter" could possibly be of concern in an application that wishes to observe the contents of the Clock Tick Counter (CTC) directly(Section 18–5.4 "Clock Tick Counter Register (CTCR - 0xE002 4004)" on page 266).

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

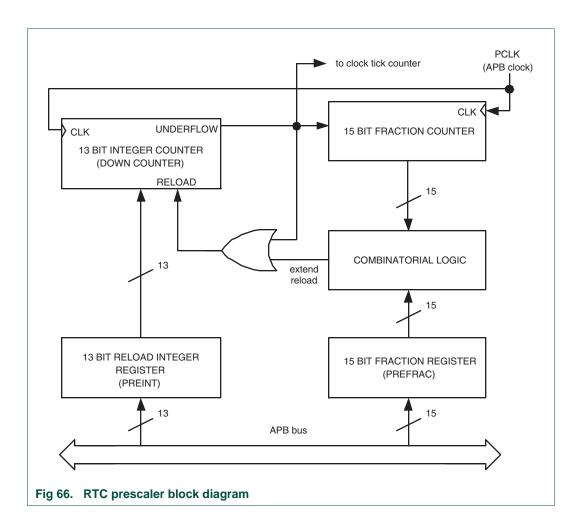

7.4 Prescaler operation

The Prescaler block labelled "Combination Logic" in Figure 18–66 determines when the decrement of the 13-bit PREINT counter is extended by one PCLK. In order to both insert the correct number of longer cycles, and to distribute them evenly, the combinatorial Logic associates each bit in PREFRAC with a combination in the 15-bit Fraction Counter. These associations are shown in the following Table 18–251.

For example, if PREFRAC bit 14 is a one (representing the fraction 1/2), then half of the cycles counted by the 13-bit counter need to be longer. When there is a 1 in the LSB of the Fraction Counter, the logic causes every alternate count (whenever the LSB of the Fraction Counter=1) to be extended by one PCLK, evenly distributing the pulse widths. Similarly, a one in PREFRAC bit 13 (representing the fraction 1/4) will cause every fourth cycle (whenever the two LSBs of the Fraction Counter=10) counted by the 13-bit counter to be longer.

Chapter 18: LPC21xx/22xx Real-Time Clock (RTC)

Table 251. Prescaler cases where the Integer Counter reload value is incremented

Fraction Counter	PR	EFR	AC	Bit											
	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-
100	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-
1000	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-
1 0000	-	-	-	-	1	-	-	-	-	-	-	-	-	-	-
10 0000	-	-	-	-	-	1	-	-	-	-	-	-	-	-	-
100 0000	-	-	-	-	-	-	1	-	-	-	-	-	-	-	-
1000 0000	-	-	-	-	-	-	-	1	-	-	-	-	-	-	-
1 0000 0000	-	-	-	-	-	-	-	-	1	-	-	-	-	-	-
10 0000 0000	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
100 0000 0000	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-
1000 0000 0000	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-
1 0000 0000 0000	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-
-10 0000 0000 0000	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-
100 0000 0000 0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1

UM10114

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The following chapter only applies to parts with CAN controllers. The register descriptions are given for the full set of CAN controllers. The LPC21xx and LPC22xx have different CAN configurations depending on part number and version. Table <u>Table 19–252</u> contains a list of all LPC21xx and LPC22xx parts with CAN interfaces, the number of CAN controllers, their register base addresses, and the pins for each part.

Remark: /01 devices contain an updated CAN controller with improved interrupt behavior in Full-CAN mode. Care should be taken when using the global CAN filter look-up table (LUT) because the numbering of CAN interfaces in the LUT is different for /01 devices (see Section 19–9):

- no suffix and /00: CAN interfaces are numbered 1 to n (n = 2 or 4 CAN interfaces) in the global CAN filter LUT.
- /01: CAN interfaces are numbered **0** to **n-1** in the global CAN filter LUT.

Table 252. CAN interfaces, pins, and register base addresses

Part	CAN interfaces	Pins	CANn register base addresses used (Section 19–6)			
			CAN1 registers	CAN2 registers	CAN3 registers	CAN4 registers
no suffix an	nd /01					
LPC2109	1	RD1; TD1	0xE004 4000	-	-	-
LPC2119	2	RD2/1; TD2/1	0xE004 4000	0xE004 8000	-	-
LPC2129	2	RD2/1; TD2/1	0xE004 4000	0xE004 8000	-	-
LPC2194	4	RD4:1; TD4:1	0xE004 4000	0xE004 8000	0xE004 C000	0xE005 0000
LPC2290	2	RD2/1; TD2/1	0xE004 4000	0xE004 8000	-	-
LPC2292	2	RD2/1; TD2/1	0xE004 4000	0xE004 8000	-	-
LPC2294	4	RD4:1; TD4:1	0xE004 4000	0xE004 8000	0xE004 C000	0xE005 0000
/01 parts						
LPC2109	1	RD1; TD1	0xE004 4000	-	-	-
LPC2119	2	RD2/1; TD2/1	0xE004 4000	0xE004 8000	-	-
LPC2129	2	RD2/1; TD2/1	0xE004 4000	0xE004 8000	-	-
LPC2194	4	RD4:1; TD4:1	0xE004 4000	0xE004 8000	0xE004 C000	0xE005 0000
LPC2290	2	RD2/1; TD2/1	0xE004 4000	0xE004 8000	-	-
LPC2292	2	RD2/1; TD2/1	0xE004 4000	0xE004 8000	-	-
LPC2294	4	RD4:1; TD4:1	0xE004 4000	0xE004 8000	0xE004 C000	0xE005 0000
2. 02201	•	, 10	CALCO : 1000	CALCO : 0000	0A200 : 0000	0.2000 0000

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

2. CAN controllers

The Controller Area Network (CAN) is a serial communications protocol which efficiently supports distributed real-time control with a very high level of security. Its domain of application ranges from high speed networks to low cost multiplex wiring.

The CAN block is intended to support multiple CAN buses simultaneously, allowing the device to be used as a gateway, switch, or router among a number of CAN buses in industrial or automotive applications.

Each CAN Controller has a register structure similar to the NXP SJA1000 and the PeliCAN Library block, but the 8 bit registers of those devices have been combined in 32 bit words to allow simultaneous access in the ARM environment. The main operational difference is that the recognition of received Identifiers, known in CAN terminology as Acceptance Filtering, has been removed from the CAN controllers and centralized in a global Acceptance Filter. This Acceptance Filter is described after the CAN Controllers in Section 19–10 to Section 19–12.

3. Features

- One, two, or four CAN controllers and buses.
- Data rates to 1 Mbits/second on each bus.
- 32 bit register and RAM access.
- Compatible with CAN specification 2.0B, ISO 11898-1.
- Global Acceptance Filter recognizes 11 and 29 bit Rx Identifiers for all CAN buses.
- Acceptance Filter can provide FullCAN-style automatic reception for selected Standard Identifiers.

4. Pin description

Table 253. CAN Pin descriptions

Pin Name	Туре	Description
RD4/3/2/1	Inputs	Serial Input: from CAN transceivers.
TD4/3/2/1	Outputs	Serial Outputs: to CAN transceivers.

5. Memory map of the CAN block

The CAN Controllers and Acceptance Filter occupy a number of APB slots, as follows:

Table 254. Memory map of the CAN block

Address Range	Used for
0xE003 8000 - 0xE003 87FF	Acceptance Filter RAM
0xE003 C000 - 0xE003 C017	Acceptance Filter Registers
0xE004 0000 - 0xE004 000B	Central CAN Registers
0xE004 4000 - 0xE004 405F	CAN Controller 1 Registers

UM10114 3 © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 254. Memory map of the CAN block

Address Range	Used for
0xE004 8000 - 0xE004 805F	CAN Controller 2 Registers
0xE004 C000 - 0xE004 C05F	CAN Controller 3 Registers
0xE005 0000 - 0xE005 005F	CAN Controller 4 Registers

6. CAN controller registers

The CAN block implements the registers shown in $\underline{\text{Table }19-255}$ and $\underline{\text{Table }19-256}$. More detailed descriptions follow.

Table 255. CAN acceptance filter and central CAN registers

Name	Description	Access	Reset Value	Address
AFMR	Acceptance Filter Register	R/W	1	0xE003 C000
SFF_sa	Standard Frame Individual Start Address Register	R/W	0	0xE003 C004
SFF_GRP_sa	Standard Frame Group Start Address Register	R/W	0	0xE003 C008
EFF_sa	Extended Frame Start Address Register	R/W	0	0xE003 C00C
EFF_GRP_sa	Extended Frame Group Start Address Register	R/W	0	0xE003 C010
ENDofTable	End of AF Tables register	R/W	0	0xE003 C014
LUTerrAd	LUT Error Address register	RO	0	0xE003 C018
LUTerr	LUT Error Register	RO	0	0xE003 C01C
CANTxSR	CAN Central Transmit Status Register	RO	0x003F 3F00	0xE004 0000
CANRxSR	CAN Central Receive Status Register	RO	0	0xE004 0004
CANMSR	CAN Central Miscellaneous Register	RO	0	0xE004 0008

Table 256. CAN1, CAN2, CAN3, CAN4 controller register map

Generic	Description	Access	CAN1	CAN2	CAN3	CAN4
Register Name			Address & Name	Address & Name	Address & Name	Address & Name
CANMOD	Controls the operating mode of	R/W	0xE004 4000	0xE004 8000	0xE004 C000	0xE005 0000
	the CAN Controller.		C1MOD	C2MOD	C3MOD	C4MOD
CANCMR	Command bits that affect the	WO	0xE004 4004	0xE004 8004	0xE004 C004	0xE005 0004
	state of the CAN Controller		C1CMR	C2CMR	C3CMR	C4CMR
CANGSR	Global Controller Status and	RO[1]	0xE004 4008	0xE004 8008	0xE004 C008	0xE005 0008
	Error Counters		C1GSR	C2GSR	C3GSR	C4GSR
CANICR	Interrupt status, Arbitration Lost Capture, Error Code Capture	RO	0xE004 400C	0xE004 800C	0xE004 C00C	0xE005 000C
			C1ICR	C2ICR	C3ICR	C4ICR
CANIER	Interrupt Enable	R/W	0xE004 4010	0xE004 8010	0xE004 C010	0xE005 0010
			C1IER	C2IER	C3IER	C4IER
CANBTR	Bus Timing	R/W[2]	0xE004 4014	0xE004 8014	0xE004 C014	0xE005 0014
			C1BTR	C2BTR	C3BTR	C4BTR
CANEWL	Error Warning Limit	R/W[2]	0xE004 4018	0xE004 8018	0xE004 C018	0xE005 0018
			C1EWL	C2EWL	C3EWL	C4EWL

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 256. CAN1, CAN2, CAN3, CAN4 controller register map

Generic Register Name	Description	Access	CAN1 Address & Name	CAN2 Address & Name	CAN3 Address & Name	CAN4 Address & Name
CANSR	Status Register	RO	0xE004 401C C1SR	0xE004 801C C2SR	0xE004 C01C C3SR	0xE005 001C C4SR
CANRFS	Receive frame status	R/W[2]	0xE004 4020 C1RFS	0xE004 8020 C2RFS	0xE004 C020 C3RFS	0xE005 0020 C4RFS
CANRID	Received Identifier	R/W[2]	0xE004 4024 C1RID	0xE004 8024 C2RID	0xE004 C024 C3RID	0xE005 0024 C4RID
CANRDA	Received data bytes 1-4	R/W ²	0xE004 4028 C1RDA	0xE004 8028 C2RDA	0xE004 C028 C3RDA	0xE005 0028 C4RDA
CANRDB	Received data bytes 5-8	R/W[2]	0xE004 402C C1RDB	0xE004 802C C2RDB	0xE004 C02C C3RDB	0xE005 002C C4RDB
CANTFI1	Transmit frame info (1)	R/W	0xE004 4030 C1TFI1	0xE004 8030 C2TFI1	0xE004 C030 C3TFI1	0xE005 0030 C4TFI1
CANTID1	Transmit Identifier (1)	R/W	0xE004 4034 C1TID1	0xE004 8034 C2TID1	0xE004 C034 C3TID1	0xE005 0034 C4TID1
CANTDA1	Transmit data bytes 1-4 (1)	R/W	0xE004 4038 C1TDA1	0xE004 8038 C2TDA1	0xE004 C038 C3TDA1	0xE005 0038 C4TDA1
CANTDB1	Transmit data bytes 5-8 (1)	R/W	0xE004 403C C1TDB1	0xE004 803C C2TDB1	0xE004 C03C C3TDB1	0xE005 003C C4TDB1
CANTFI2	Transmit frame info (2)	R/W	0xE004 4040 C1TFI2	0xE004 8040 C2TFI2	0xE004 C040 C3TFI2	0xE005 0040 C4TFI2
CANTID2	Transmit Identifier (2)	R/W	0xE004 4044 C1TID2	0xE004 8044 C2TID2	0xE004 C044 C3TID2	0xE005 0044 C4TID2
CANTDA2	Transmit data bytes 1-4 (2)	R/W	0xE004 4048 C1TDA2	0xE004 8048 C2TDA2	0xE004 C048 C3TDA2	0xE005 0048 C4TDA2
CANTDB2	Transmit data bytes 5-8 (2)	R/W	0xE004 404C C1TDB2	0xE004 804C C2TDB2	0xE004 C04C C3TDB2	0xE005 004C C4TDB2
CANTFI3	Transmit frame info (3)	R/W	0xE004 4050 C1TFI3	0xE004 8050 C2TFI3	0xE004 C050 C3TFI3	0xE005 0050 C4TFI3
CANTID3	Transmit Identifier (3)	R/W	0xE004 4054 C1TID3	0xE004 8054 C2TID3	0xE004 C054 C3TID3	0xE005 0054 C4TID3
CANTDA3	Transmit data bytes 1-4 (3)	R/W	0xE004 4058 C1TDA3	0xE004 8058 C2TDA3	0xE004 C058 C3TDA3	0xE005 0058 C4TDA3
CANTDB3	Transmit data bytes 5-8 (3)	R/W	0xE004 405C C1TDB3	0xE004 805C C2TDB3	0xE004 C05C C3TDB3	0xE005 005C C4TDB3

^[1] The error counters can only be written when RM in CANMOD is 1.

In the following register tables, the column "Reset Value" shows how a hardware reset affects each bit or field, while the column "RM Set" indicates how each bit or field is affected if software sets the RM bit, or RM is set because of a Bus-Off condition. Note that

^[2] These registers can only be written when RM in CANMOD is 1.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

while hardware reset sets RM, in this case the setting noted in the "Reset Value" column prevails over that shown in the "RM Set" column, in the few bits where they differ. In both columns, X indicates the bit or field is unchanged.

6.1 Mode Register (MOD: CAN1MOD - 0xE004 4000, CAN2MOD - 0xE004 8000, CAN3MOD - 0x004 C000, CAN4MOD - 0x005 0000)

This register controls the basic operating mode of the CAN Controller. Bits not listed read as 0 and should be written as 0. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 257. Mode register (MOD: CAN1MOD - address 0xE004 4000, CAN2MOD - address 0xE004 8000, CAN3MOD - address 0x004 C000, CAN4MOD - address 0x005 0000) bit description

Bit	Symbol	Value	Function	Reset Value	RM Set
0	RM	0	The CAN Controller operates, and certain registers can not be written.	1	1
		1	Reset Mode - CAN operation is disabled, and writable registers can be written.		
1	LOM	0	The CAN controller acknowledges a successfully-received message on its CAN.	0	Х
		1	Listen Only Mode - the controller gives no acknowledgment on CAN, even if a message is successfully received. Messages cannot be sent, and the controller operates in "error passive" mode. This mode is intended for software bit rate detection and "hot plugging".		
2	STM	0	A transmitted message must be acknowledged to be considered successful.	0	х
		1	Self Test Mode - the controller will consider a Tx message successful if there is no acknowledgment. Use this state in conjunction with the SRR bit in CANCMR.		
3	TPM	0	The priority of the 3 Transmit Buffers depends on their CAN IDs.	0	Х
		1	The priority of the 3 Transmit Buffers depends on their Tx Priority fields.		
4	SM	0	Normal operation	0	0
		1	Sleep Mode - the CAN controller sleeps if it is not requesting an interrupt, and there is no bus activity. See the Sleep Mode description Section 19–7.2 on page 291.		
5	RPM	0	RX and TX pins are LOW for a dominant bit.	0	0
		1	Reverse Polarity Mode - RX pins are High for a dominant bit.		
6	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
7	TM	0	Normal operation	0	0
		1	Test Mode. The state of the RX pin is clocked onto the TX pin.		

Note 1: The LOM and STM bits can only be written if the RM bit is 1 prior to the write operation.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

6.2 Command Register (CMR: CAN1CMR- 0xE004 4004, CAN2CMR - 0xE004 8004, CAN3CMR - 0x004 C004, CAN4CMR - 0x005 0004)

Writing to this write-only register initiates an action. Bits not listed should be written as 0. Reading this register yields zeroes. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 258. Command register (CMR: CAN1CMR- address 0xE004 4004, CAN2CMR - address 0xE004 8004, CAN3CMR - address 0x004 C004, CAN4CMR - address 0x005 0004) bit description

Bit	Symbol	Function	Reset Value	
0	TR	1: Transmission Request the message, previously written to the CANTFI, CANTID, and optionally the CANTDA and CANTDB registers, is queued for transmission.	0	0
1	AT	1: Abort Transmission if not already in progress, a pending Transmission Request is cancelled. If this bit and TR are set in the same write operation, frame transmission is attempted once, and no retransmission is attempted if an error is flagged nor if arbitration is lost.	0	0
2	RRB	1: Release Receive Buffer the information in the CANRFS, CANRID, and if applicable the CANRDA and CANRDB registers is released, and becomes eligible for replacement by the next received frame. If the next received frame is not available, writing this command clears the RBS bit in CANSR.3	0	0
3	CDO	1: Clear Data Overrun The Data Overrun bit in CANSR is cleared.	0	0
4	SRR	1: Self Reception Request the message, previously written to the CANTFS, CANTID, and optionally the CANTDA and CANTDB registers, is queued for transmission. This differs from the TR bit above in that the receiver is not disabled during the transmission, so that it receives the message if its Identifier is recognized by the Acceptance Filter.	0	0
5	STB1	1: Select Tx Buffer 1 for transmission	0	0
6	STB2	1: Select Tx Buffer 2 for transmission	0	0
7	STB3	1: Select Tx Buffer 3 for transmission	0	0

6.3 Global Status Register (GSR: CAN1GSR - 0xE004 0008, CAN2GSR - 0xE004 8008, CAN3GSR - 0xE004 C008, CAN4GSR 0xE005 0008)

This register is read-only, except that the Error Counters can be written when the RM bit in the CANMOD register is 1. Bits not listed read as 0 and should be written as 0. See Table 19–256 for details on specific CAN channel register address.

<u>UM10114_3</u> © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 259. Global Status Register (GSR: CAN1GSR - address 0xE004 0008, CAN2GSR - address 0xE004 8008, CAN3GSR - address 0xE004 C008, CAN4GSR address 0xE005 0008) bit description

Bit	Symbol	Value	Function	Reset Value	RM Set
0	RBS	1	Receive Buffer Status a received message is available in the CANRFS, CANRID, and if applicable the CANRDA and CANRDB registers. This bit is cleared by the Release Receive Buffer command in CANCMR, if no subsequent received message is available.	0	0
1	DOS	0	No data overrun has occurred since the last Clear Data Overrun command was written to CANCMR (or since Reset).	0	0
		1	Data Overrun Status a message was lost because the preceding message to this CAN controller was not read and released quickly enough.		
2	TBS	0	As least one previously-queued message for this CAN controller has not yet been sent, and therefore software should not write to the CANTFI, CANTID, CANTDA, nor CANTDB registers of that (those) Tx buffer(s).	1	X
		1	Transmit Buffer Status no transmit message is pending for this CAN controller (in any of the 3 Tx buffers), and software may write to any of the CANTFI, CANTID, CANTDA, and CANTDB registers.		
3	TCS	0	At least one requested transmission has not been successfully completed.	1	0
		1	Transmit Complete Status all requested transmission(s) has (have) been successfully completed.		
4	RS	1	Receive Status: the CAN controller is receiving a message.	0	0
5	TS	1	Transmit Status: The CAN controller is sending a message	0	0
6	ES	1	Error Status: one or both of the Transmit and Receive Error Counters has reached the limit set in the Error Warning Limit register.	0	0
7	BS	1	Bus Status: the CAN controller is currently prohibited from bus activity because the Transmit Error Counter reached its limiting value of 255.	0	0
15:8	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
23:16	RXERR	-	The current value of the Rx Error Counter.	0	Χ
31:24	TXERR	-	The current value of the Tx Error Counter.	0	Χ

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

6.4 Interrupt and Capture Register (ICR: CAN1ICR- 0xE004 400C, CAN2ICR - 0xE004 800C, CAN3ICR - 0xE004 C00C, CAN4ICR - 0xE005 000C)

Bits in this register indicate information about events on the CAN bus. This register is read-only. Bits not listed read as 0 and should be written as 0. Bits 1-9 clear when they are read. See <u>Table 19–256</u> for details on specific CAN channel register address. Bits 16-23 are captured when a bus error occurs. At the same time, if the BEIE bit in CANIER is 1, the BEI bit in this register is set, and a CAN interrupt can occur.

Bits 24-31 are captured when CAN arbitration is lost. At the same time, if the ALIE bit in CANIER is 1, the ALI bit in this register is set, and a CAN interrupt can occur. Once either of these bytes is captured, its value will remain the same until it is read, at which time it is released to capture a new value.

The clearing of bits 1-9 and the releasing of bits 16-23 and 24-31 all occur on any read from CANICR, regardless of whether part or all of the register is read. This means that software should always read CANICR as a word, and process and deal with all bits of the register as appropriate for the application.

Table 260. Interrupt and Capture register (ICR: CR: CAN1ICR- address 0xE004 400C, CAN2ICR - 0xE004 address 800C, CAN3ICR - address 0xE004 C00C, CAN4ICR - address 0xE005 000C) bit description

Bit	Symbol	Value	Function	Reset Value	RM Set
0	RI	1	Receive Interrupt this bit is set whenever the RBS bit in CANSR and the RIE bit in CANIER are both 1, indicating that a received message is available.=.	0	0
1	TI1	1	Transmit Interrupt 1 this bit is set when the TBS1 bit in CANSR goes from 0 to 1, indicating that Transmit buffer 1 is available, and the TIE1 bit in CANIER is 1.	0	0
2	Ei	1	Error Warning Interrupt this bit is set on every change (set or clear) of the Error Status or Bus Status bit in CANSR, if the EIE bit in CAN is 1 at the time of the change.	0	X
3	DOI	1	Data Overrun Interrupt this bit is set when the DOS bit in CANSR goes from 0 to 1, if the DOIE bit in CANIE is 1.	0	0
4	WUI	1	Wake-Up Interrupt: this bit is set if the CAN controller is sleeping and bus activity is detected, if the WUIE bit in CANIE is 1.	0	0
5	EPI	1	Error Passive Interrupt this bit is set if the EPIE bit in CANIE is 1, and the CAN controller switches between Error Passive and Error Active mode in either direction.	0	0
6	ALI	1	Arbitration Lost Interrupt this bit is set if the ALIE bit in CANIE is 1, and the CAN controller loses arbitration while attempting to transmit.	0	0
7	BEI	1	Bus Error Interrupt this bit is set if the BEIE bit in CANIE is 1, and the CAN controller detects an error on the bus.	0	X
8	IDI	1	ID Ready Interrupt this bit is set if the IDIE bit in CANIE is 1, and a CAN Identifier has been received.	0	0

UM10114 3 © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 260. Interrupt and Capture register (ICR: CR: CAN1ICR- address 0xE004 400C, CAN2ICR - 0xE004 address 800C, CAN3ICR - address 0xE004 C00C, CAN4ICR - address 0xE005 000C) bit description

Bit	Symbol	Value	Function	Reset Value	
9	TI2	1	Transmit Interrupt 2 this bit is set when the TBS2 bit in CANSR goes from 0 to 1, indicating that Transmit buffer 2 is available, and the TIE2 bit in CANIER is 1.	0	0
10	TI3	1	Transmit Interrupt 3 this bit is set when the TBS3 bit in CANSR goes from 0 to 1, indicating that Transmit buffer 3 is available, and the TIE3 bit in CANIER is 1.	0	0
15:11	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
20:16	ERRBIT		Error Code Capture: when the CAN controller detects a bus error, the location of the error within the frame is captured in this field. The value reflects an internal state variable, and as a result is not very linear:	0	X
		00010	ID28:21		
		00011	Start of Frame		
		00100	SRTR bit		
		00101	IDE bit		
		00110	ID20:18		
		00111	ID17:13		
		01000	CRC		
		01001	Res.Bit 0		
		01010	Data field		
		01011	DLC		
		01100	RTR bit		
		01101	Res.Bit 1		
		01110	ID4:0		
		01111	ID12:5		
		10001	Active Error flag		
		10010	Intermission		
		10011	Dominant OK bits		
		10110	Passive error flag		
		10111	Error delimiter		
		11000	CRC delimiter		
		11001	Ack slot		
		11010	End of Frame		
		11011	Ack delimiter		
		11100	Overload flag		
21	ERRDIR		When the CAN controller detects a bus error, the direction of the current bit is captured in this bit.	0	X
		0	Transmitting		
		1	Receiving		

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 260. Interrupt and Capture register (ICR: CR: CAN1ICR- address 0xE004 400C, CAN2ICR - 0xE004 address 800C, CAN3ICR - address 0xE004 C00C, CAN4ICR - address 0xE005 000C) bit description

Bit	Symbol	Value	Function	Reset Value	
23;22	ERRC		When the CAN controller detects a bus error, the type of error is captured in this field:	0	Χ
		00	Bit error		
		01	Form error		
		10	Stuff error		
		11	Other error		
28:24	ALCBIT	-	Each time arbitration is lost while trying to send on the CAN, the bit number within the frame is captured into this field. 0 indicates arbitration loss in the first (MS) bit of the Identifier 31 indicates loss in the RTR bit of an extended frame. After this byte is read, the ALI bit is cleared and a new Arbitration Lost interrupt can occur.	0	X
31:29	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

6.5 Interrupt Enable Register (IER: CAN1IER - 0xE004 4010, CAN2IER 0xE004 8010, CAN3IER - 0xE004 C010, CAN4IER - 0xE005 0010)

This read/write register controls whether various events on the CAN controller will result in an interrupt. Bits 7:0 in this register correspond 1-to-1 with bits 7:0 in the CANICR register. See Table 19–256 for details on specific CAN channel register address.

Table 261. Interrupt Enable register (IER: CAN1IER - address 0xE004 4010, CAN2IER - address 0xE004 8010, CAN3IER - address 0xE004 C010, CAN4IER - address 0xE005 0010) bit description

Bit	Symbol	Function	Reset Value	RM Set
0	RIE	Receiver Interrupt Enable.	0	Χ
1	TIE1	Transmit Interrupt Enable (1).	0	Χ
2	EIE	Error Warning Interrupt Enable.	0	Χ
3	DOIE	Data Overrun Interrupt Enable.	0	Χ
4	WUIE	Wake-Up Interrupt Enable.	0	Χ
5	EPIE	Error Passive Interrupt Enable.	0	Χ
6	ALIE	Arbitration Lost Interrupt Enable.	0	Χ
7	BEIE	Bus Error Interrupt Enable.	0	Χ
8	IDIE	ID Ready Interrupt Enable.	0	Χ
9	TIE2	Transmit Interrupt Enable (2).	0	Χ
10	TIE3	Transmit Interrupt Enable (3).	0	Χ
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

6.6 Bus Timing Register (BTR: CAN1BTR - 0xE004 4014, CAN2BTR - 0xE004 8014, CAN3BTR - 0xE004 C014, CAN4BTR - 0xE005 0014)

This register controls how various CAN timings are derived from the VPB clock. It can be read at any time, but can only be written if the RM bit in CANmod is 1. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 262. Bus Timing Register (BTR: CAN1BTR - address 0xE004 4014, CAN2BTR - address 0xE004 8014, CAN3BTR - address 0xE004 C014, CAN4BTR - address 0xE005 0014) bit description

Bit	Symbol	Value	Function	Reset Value	
9:0	BRP		Baud Rate Prescaler. The VPB clock is divided by (this value plus one) to produce the CAN clock.	0	Χ
13:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
15:14	SJW		The Synchronization Jump Width is (this value plus one) CAN clocks.	0	Χ
19:16	TESG1		The delay from the nominal Sync point to the sample point is (this value plus one) CAN clocks.	1100	X
22:20	TESG2		The delay from the sample point to the next nominal sync point is (this value plus one) CAN clocks. The nominal CAN bit time is (this value plus the value in TSEG1 plus 3) CAN clocks.	001	X
23	SAM	0	The bus is sampled once (recommended for high speed buses)	0	X
		1	The bus is sampled 3 times (recommended for low to medium speed buses)		
31:24	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

6.7 Error Warning Limit Register (EWL: CAN1EWL - 0xE004 4018, CAN2EWL - 0xE004 8018, CAN3EWL - 0xE004 C018, CAN4EWL - 0xE005 0018)

This register sets a limit on Tx or Rx errors at which an interrupt can occur. It can be read at any time, but can only be written if the RM bit in CANmod is 1. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 263. Error Warning Limit register (EWL: CAN1EWL - address 0xE004 4018, CAN2EWL - address 0xE004 8018, CAN3EWL - address 0xE004 C018, CAN4EWL - address 0xE005 0018) bit description

Bit	Symbol	Function	Reset Value	RM Set
7:0	EWL	During CAN operation, this value is compared to both the Tx and Rx Error Counters. If either of these counter matches this value, the Error Status (ES) bit in CANSR is set.	$96_{10} = 0x60$	Χ

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

6.8 Status Register (SR - CAN1SR 0xE004 401C, CAN2SR - 0xE004 801C, CAN3SR - 0xE004 C01C, CAN4SR - 0xE005 001C)

This register contains three status bytes, in which the bits not related to transmission are identical to the corresponding bits in the Global Status Register, while those relating to transmission reflect the status of each of the 3 Tx Buffers. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 264. Status Register (SR - CAN1SR 0xE004 401C, CAN2SR - 0xE004 801C, CAN3SR - 0xE004 C01C, CAN4SR - 0xE005 001C) bit description

Bit	Symbol	Value	Function	Reset Value	
0, 8, 16	RBS		These bits are identical to the RSB bit in the GSR.	0	0
1, 9, 17	DOS		These bits are identical to the DOS bit in the GSR.	0	0
2, 10, 18	TBS1, TBS2, TBS3	0	Software should not write to any of the CANTFI, CANTID, CANTDA, and CANTDB registers for this Tx Buffer.	1	X
		1	Software may write a message into the CANTFI, CANTID, CANTDA, and CANTDB registers for this Tx Buffer.		
3, 11, 19	TCS1, TCS2, TCS3	0	The previously requested transmission for this Tx Buffer is not complete.	1	0
		1	The previously requested transmission for this Tx Buffer has been successfully completed.		
4, 12, 20	RS		These bits are identical to the RS bit in the GSR.	0	0
5, 13, 21	TS1, TS2, TS3	1	The CAN Controller is transmitting a message from this Tx Buffer.	0	0
6, 14, 22	ES		These bits are identical to the ES bit in the GSR.	0	0
7, 15, 23	BS		These bits are identical to the BS bit in the GSR.	0	0
31:24	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

6.9 Receive Frame Status register (RFS - CAN1RFS - 0xE004 4020, CAN2RFS - 0xE004 8020, CAN3RFS - 0xE004 C020, CAN4RFS - 0xE005 0020)

This register defines the characteristics of the current received message. It is read-only in normal operation, but can be written for testing purposes if the RM bit in CANMOD is 1. See Table 19–256 for details on specific CAN channel register address.

<u>UM10114_3</u> © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 265. Receive Frame Status register (RFS - CAN1RFS - address 0xE004 4020, CAN2RFS - address 0xE004 8020, CAN3RFS - address 0xE004 C020, CAN4RFS - address 0xE005 0020) bit description

Bit	Symbol	Function	Reset Value	
9:0	ID Index	If the BP bit (below) is 0, this value is the zero-based number of the Lookup Table RAM entry at which the Acceptance Filter matched the received Identifier. Disabled entries in the Standard tables are included in this numbering, but will not be matched. See Section 19–11 "Examples of acceptance filter tables and ID index values" on page 299 for examples of ID Index values.	0	X
10	BP	If this bit is 1, the current message was received in AF Bypass mode, and the ID Index field (above) is meaningless.	0	Х
15:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
19:16	DLC	The field contains the Data Length Code (DLC) field of the current received message. When RTR = 0, this is related to the number of data bytes available in the CANRDA and CANRDB registers as follows:	0	X
		0000-0111 = 0 to 7 bytes1000-1111 = 8 bytes		
		With RTR = 1, this value indicates the number of data bytes requested to be sent back, with the same encoding.		
29:20	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
30	RTR	This bit contains the Remote Transmission Request bit of the current received message. 0 indicates a Data Frame, in which (if DLC is non-zero) data can be read from the CANRDA and possibly the CANRDB registers. 1 indicates a Remote frame, in which case the DLC value identifies the number of data bytes requested to be sent using the same Identifier.	0	X
31	FF	A 0 in this bit indicates that the current received message included an 11 bit Identifier, while a 1 indicates a 29 bit Identifier. This affects the contents of the CANid register described below.	0	X

6.10 Receive Identifier register (RID - CAN1RID - 0xE004 4024, CAN2RID - 0xE004 8024, CAN3RID - 0xE004 C024, CAN4RID - 0xE005 0024)

This register contains the Identifier field of the current received message. It is read-only in normal operation, but can be written for testing purposes if the RM bit in CANmod is 1. It has two different formats depending on the FF bit in CANRFS. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 266. Receive Identifier register when FF = 0 (RID: CAN1RID - address 0xE004 4024, CAN2RID - address 0xE004 8024, CAN3RID - address 0xE004 C024, CAN4RID - address 0xE005 0024) bit description

Bit	Symbol	Function	Reset Value	RM Set
10:0	ID	The 11 bit Identifier field of the current received message. In CAN 2.0A, these bits are called ID10-0, while in CAN 2.0B they're called ID29-18.	0	X
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 267. Receive Identifier register when FF = 1

Bit	Symbol	Function	Reset Value	RM Set
28:0	ID	The 29 bit Identifier field of the current received message. In CAN 2.0B these bits are called ID29-0.	0	X
31:29	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

6.11 Receive Data register A (RDA: CAN1RDA - 0xE004 4028, CAN2RDA - 0xE004 8028, CAN3RDA - 0xE004 C028, CAN4RDA - 0xE005 0028)

This register contains the first 1-4 Data bytes of the current received message. It is read-only in normal operation, but can be written for testing purposes if the RM bit in CANMOD is 1. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 268. Receive Data register A (RDA: CAN1RDA - address 0xE004 4028, CAN2RDA - address 0xE004 8028, CAN3RDA - address 0xE004 C028, CAN4RDA - address 0xE005 0028) bit description

Bit	Symbol	Function	Reset Value	
7:0	Data 1	If the DLC field in CANRFS >= 0001, this contains the first Data byte of the current received message.	0	Χ
15:8	Data 2	If the DLC field in CANRFS >= 0010, this contains the first Data byte of the current received message.	0	X
23:16	Data 3	If the DLC field in CANRFS >= 0011, this contains the first Data byte of the current received message.	0	X
31:24	Data 4	If the DLC field in CANRFS >= 0100, this contains the first Data byte of the current received message.	0	X

6.12 Receive Data register B (RDB: CAN1RDB - 0xE004 402C, CAN2RDB - 0xE004 802C, CAN3RDB - 0xE004 C02C, CAN4RDB - 0xE005 002C)

This register contains the 5th through 8th Data bytes of the current received message. It is read-only in normal operation, but can be written for testing purposes if the RM bit in CANMOD is 1. See Table 19–256 for details on specific CAN channel register address.

Table 269. Receive Data register B (RDB: CAN1RDB - address 0xE004 402C, CAN2RDB - address 0xE004 802C, CAN3RDB - address 0xE004 C02C, CAN4RDB - address 0xE005 002C) bit description

Bit	Symbol	Function	Reset Value	
7:0	Data 5	If the DLC field in CANRFS >= 0101, this contains the first Data byte of the current received message.	0	Χ
15:8	Data 6	If the DLC field in CANRFS >= 0110, this contains the first Data byte of the current received message.	0	Χ
23:16	Data 7	If the DLC field in CANRFS >= 0111, this contains the first Data byte of the current received message.	0	X
31:24	Data 8	If the DLC field in CANRFS >= 1000, this contains the first Data byte of the current received message.	0	X

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

6.13 Transmit Frame Information register (TFI1, 2, 3 - CAN1TF1n - 0xE004 4030, 40, 50; CAN2TFIn - 0xE004 8030, 40, 50; CAN3TFIn - 0xE004 C030, 40, 50; CAN4TFIn - 0xE005 0030, 40, 50)

When the corresponding TBS bit in CANSR is 1, software can write to one of these registers to define the format of the next transmit message for that Tx buffer. Bits not listed read as 0 and should be written as 0. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 270. Transmit Frame Information register (TFI1, 2, 3 - CAN1TF1n - addresses 0xE004 4030, 40, 50; CAN2TFIn - addresses 0xE004 8030, 40, 50; CAN3TFIn - addresses 0xE004 C030, 40, 50; CAN4TFIn - addresses 0xE005 0030, 40, 50) bit description

Bit	Symbol	Function	Reset Value	
7:0	PRIO	If the TPM bit in the CANMOD register is 1, enabled Tx Buffers contend for the right to send their messages based on this field. The lowest binary value has priority.		
15:8	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
19:16	DLC	This value is sent in the DLC field of the next transmit message. In addition, if RTR = 0, this value controls the number of Data bytes sent in the next transmit message, from the CANTDA and CANTDB registers:	0	X
		0000-0111 = 0-7 bytes 1xxx = 8 bytes		
29:20	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
30	RTR	This value is sent in the RTR bit of the next transmit message. If this bit is 0, the number of data bytes called out by the DLC field are sent from the CANTDA and CANTDB registers. If it's 1, a Remote Frame is sent, containing a request for that number of bytes.	0	X
31	FF	If this bit is 0, the next transmit message will be sent with an 11 bit Identifier, while if it's 1, the message will be sent with a 29 bit Identifier.	0	X

6.14 Transmit Identifier register (TID1, 2, 3 - CAN1TIDn - 0xE004 4034, 44, 54; CAN2TIDn - 0xE004 8034, 44, 54; CAN3TIDn - 0xE004 C034, 44, 54; CAN4TIDn - 0xE005 0034, 44, 54)

When the corresponding TBS bit in CANSR is 1, software can write to one of these registers to define the Identifier field of the next transmit message. Bits not listed read as 0 and should be written as 0. The register assumes two different formats depending on the FF bit in CANTFI. See <u>Table 19–256</u> for details on specific CAN channel register address.

<u>UM10114_3</u> © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 271. Transfer Identifier register when FF=0 (TID1, 2, 3: CAN1TIDn - addresses 0xE004 4034, 44, 54; CAN2TIDn - addresses 0xE004 8034, 44, 54; CAN3TIDn - addresses 0xE004 C034, 44, 54; CAN4TIDn - addresses 0xE005 0034, 44, 54) bit description

Bit	Symbol	Function	Reset Value	
10:0	ID	The 11 bit Identifier to be sent in the next transmit message.	0	Χ
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

Table 272. Transfer Identifier register when FF = 1

Bit	Symbol	Function	Reset Value	
28:0	ID	The 29 bit Identifier to be sent in the next transmit message.	0	Χ
31:29	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

6.15 Transmit Data register A (TDA1, 2, 3: CAN1TDAn - 0xE004 4038, 48, 58; CAN2TDAn - 0xE004 8038, 48, 58; CAN3TDAn - 0xE004 C038, 48, 58; CAN4TDAn - 0xE005 0038, 48, 58)

When the corresponding TBS bit in CANSR is 1, software can write to one of these registers to define the first 1-4 data bytes of the next transmit message. See <u>Table 19–256</u> for details on specific CAN channel register address.

Table 273. Transmit Data register A (TDA1, 2, 3: CAN1TDAn - addresses 0xE004 4038, 48, 58; CAN2TDAn - addresses 0xE004 8038, 48, 58; CAN3TDAn - addresses 0xE004 C038, 48, 58; CAN4TDAn - addresses 0xE005 0038, 48, 58) bit description

Bit	Symbol	Function	Reset Value	RM Set
7:0	Data 1	If RTR = 0 and DLC \geq 0001 in the corresponding CANTFI, this byte is sent as the first Data byte of the next transmit message.	0	Χ
15;8	Data 2	If RTR = 0 and DLC \geq 0010 in the corresponding CANTFI, this byte is sent as the 2nd Data byte of the next transmit message.	0	Х
23:16	Data 3	If RTR = 0 and DLC >= 0011 in the corresponding CANTFI, this byte is sent as the 3rd Data byte of the next transmit message.	0	X
31:24	Data 4	If RTR = 0 and DLC \geq 0100 in the corresponding CANTFI, this byte is sent as the 4th Data byte of the next transmit message.	0	Х

6.16 Transmit Data Register B (TDB1, 2, 3: CAN1TDBn - 0xE004 403C, 4C, 5C; CAN2TDBn - 0xE004 803C, 4C, 5C; CAN3TDBn - 0xE004 C03C, 4C, 5C; CAN4TDBn - 0xE005 003C, 4C, 5C)

When the corresponding TBS bit in CANSR is 1, software can write to one of these registers to define the 5th through 8th data bytes of the next transmit message. See <u>Table 19–256</u> for details on specific CAN channel register address.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

Table 274. Transmit Data register B (TDB1, 2, 3: CAN1TDBn - addresses 0xE004 403C, 4C, 5C; CAN2TDBn - addresses 0xE004 803C, 4C, 5C; CAN3TDBn - addresses 0xE004 C03C, 4C, 5C; CAN4TDBn - addresses 0xE005 003C, 4C, 5C) bit description

Bit	Symbol	Function	Reset Value	RM Set
7:0	Data 5	If RTR = 0 and DLC \geq 0101 in the corresponding CANTFI, this byte is sent as the 5th Data byte of the next transmit message.	0	Х
15;8	Data 6	If RTR = 0 and DLC $>=$ 0110 in the corresponding CANTFI, this byte is sent as the 6th Data byte of the next transmit message.	0	X
23:16	Data 7	If RTR = 0 and DLC $>=$ 0111 in the corresponding CANTFI, this byte is sent as the 7th Data byte of the next transmit message.	0	X
31:24	Data 8	If RTR = 0 and DLC >= 1000 in the corresponding CANTFI, this byte is sent as the 8th Data byte of the next transmit message.	0	X

7. CAN controller operation

7.1 Error handling

The CAN Controllers count and handle transmit and receive errors as specified in CAN Spec 2.0B. The Transmit and Receive Error Counters are incremented for each detected error and are decremented when operation is error-free. If the Transmit Error counter contains 255 and another error occurs, the CAN Controller is forced into a state called Bus-Off. In this state, the following register bits are set: BS in CANSR, BEI and EI in CANIR if these are enabled, and RM in CANMOD. RM resets and disables much of the CAN Controller. Also at this time the Transmit Error Counter is set to 127 and the Receive Error Counter is cleared. Software must next clear the RM bit. Thereafter the Transmit Error Counter will count down 128 occurrences of the Bus Free condition (11 consecutive recessive bits). Software can monitor this countdown by reading the Tx Error Counter. When this countdown is complete, the CAN Controller clears BS and ES in CANSR, and sets EI in CANSR if EIE in IER is 1.

The Tx and Rx error counters can be written if RM in CANMOD is 1. Writing 255 to the Tx Error Counter forces the CAN Controller to Bus-Off state. If Bus-Off (BS in CANSR) is 1, writing any value 0 through 254 to the Tx Error Counter clears Bus-Off. When software clears RM in CANMOD thereafter, only one Bus Free condition (11 consecutive recessive bits) is needed before operation resumes.

7.2 Sleep mode

The CAN Controller will enter Sleep mode if the SM bit in the CAN Mode register is 1, no CAN interrupt is pending, and there is no activity on the CAN bus. Software can only set SM when RM in the CAN Mode register is 0; it can also set the WUIE bit in the CAN Interrupt Enable register to enable an interrupt on any wake-up condition.

The CAN Controller wakes up (and sets WUI in the CAN Interrupt register if WUIE in the CAN Interrupt Enable register is 1) in response to a) a dominant bit on the CAN bus, or b) software clearing SM in the CAN Mode register. A sleeping CAN Controller, that wakes up in response to bus activity, is not able to receive an initial message, until after it detects Bus_Free (11 consecutive recessive bits). If an interrupt is pending or the CAN bus is active when software sets SM, the wakeup is immediate.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

7.3 Interrupts

Each CAN Controller produces 3 interrupt requests, Receive, Transmit, and "other status". The Transmit interrupt is the OR of the Transmit interrupts from the three Tx Buffers. Each Receive and Transmit interrupt request from each controller is assigned its own channel in the Vectored Interrupt Controller (VIC), and can have its own interrupt service routine. The "other status" interrupts from all of the CAN controllers, and the Acceptance Filter LUTerr condition, are ORed into one VIC channel.

7.4 Transmit priority

If the TPM bit in the CANMOD register is 0, multiple enabled Tx Buffers contend for the right to send their messages based on the value of their CAN Identifier (TID). If TPM is 1, they contend based on the PRIO fields in bits 7:0 of their CANTFS registers. In both cases the smallest binary value has priority. If two (or three) transmit-enabled buffers have the same smallest value, the lowest-numbered buffer sends first.

The CAN controller selects among multiple enabled Tx Buffers dynamically, just before it sends each message.

8. Centralized CAN registers

Three read-only registers group the bits in the Status registers of the CAN controllers for common accessibility. If devices with more or fewer CAN controllers are defined, the number of bits used in the active bytes will change correspondingly. Each defined byte of the following registers contains one particular status bit from each of the CAN controllers in its LS bits.

8.1 Central Transmit Status Register (CANTxSR - 0xE004 0000)

Table 275. Central Transit Status Register (CANTxSR - address 0xE004 0000) bit description

Bit	Symbol	Description	Reset Value
3:0	TS4:1	1: the CAN controller CAN4:1 is sending a message (same as TS in the CANGSR).	0
		Remark: Bits are available if the respective CAN controller is implemented and reserved otherwise (see <u>Table 19–252</u>).	
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:8	TBS4:1	1: For CAN controllers CAN4:1 all 3 Tx Buffers are available to the CPU (same as TBS in CANGSR).	All 1
		Remark: Bits are available if the respective CAN controller is implemented and reserved otherwise (see <u>Table 19–252</u>).	
15:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
19:16	TCS4:1	1: For CAN controllers CAN4:1, all requested transmissions have been completed successfully (same as TCS in CANGSR).	All 1
		Remark: Bits are available if the respective CAN controller is implemented and reserved otherwise (see Table 19-252).	
31:20	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

UM10114 3 © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

8.2 Central Receive Status Register (CANRxSR - 0xE004 0004)

Table 276. Central Receive Status register (CANRxSR - address 0xE004 0004) bit description

Bit	Symbol	Description	Reset Value
3:0	RS4:1	1: the CAN controller CAN4:1 is receiving a message (same as RS in CANGSR).	0
		Remark: Bits are available if the respective CAN controller is implemented and reserved otherwise (see <u>Table 19–252</u>).	
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:8	RBS4:1	1: a received message is available in the CAN controller CAN4:1 (same as RBS in CANGSR).	0
		Remark: Bits are available if the respective CAN controller is implemented and reserved otherwise (see <u>Table 19–252</u>).	
15:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
19:16	DOS4:1	1: a message was lost because the preceding message to this CAN controller was not read out quickly enough (same as DOS in CANGSR).	0
		Remark: Bits are available if the respective CAN controller CAN4:1 is implemented and reserved otherwise (see <u>Table 19–252</u>).	
31:20	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

8.3 Central Miscellaneous Status Register (CANMSR - 0xE004 0008)

Table 277. Central Miscellaneous Status Register (CANMSR - address 0xE004 0008) bit description

	·			
Bit	Symbol	Description	Reset Value	
3:0	ES4:1	1: For CAN controller CAN4:1, one or both of the Tx and Rx Error Counters has reached the limit set in the EWL register (same as ES in CANGSR).	0	
		Remark: Bits are available if the respective CAN controller CAN4:1 is implemented and reserved otherwise (see <u>Table 19–252</u>).		
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	
11:8	BS4:1	1: the CAN controller CAN4:1is currently involved in bus activities (same as BS in CANGSR).	0	
		Remark: Bits are available if the respective CAN controller CAN4:1 is implemented and reserved otherwise (see <u>Table 19–252</u>).		
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

9. Global acceptance filter


This block provides lookup for received Identifiers (called Acceptance Filtering in CAN terminology) for all the CAN Controllers. It includes a 512 x 32 (2 kbyte) RAM in which software maintains one to five tables of Identifiers. This RAM can contain up to 1024 Standard Identifiers or 512 Extended Identifiers, or a mixture of both types.

UM10114_3 © NXP B.V. 2008. All rights reserved.


Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

If Standard (11 bit) Identifiers are used in the application, at least one of 3 tables in Acceptance Filter RAM must not be empty. If the optional "fullCAN mode" is enabled, the first table contains Standard identifiers for which reception is to be handled in this mode. The next table contains individual Standard Identifiers and the third contains ranges of Standard Identifiers, for which messages are to be received via the CAN Controllers. The tables of fullCAN and individual Standard Identifiers must be arranged in ascending numerical order, one per halfword, two per word. Since each CAN bus has its own address map, each entry also contains the number of the CAN Controller to which it applies. The numbering of CAN controllers depends on the CAN peripheral implemented:

On no-suffix and /00 devices, the CAN controllers are numbered 1 to n (n = 2 or 4) in the LUT tables . However, on /01 devices, the CAN controllers are numbered 0 to n-1 in the LUT tables (see Figure 19–67 to Figure 19–69).

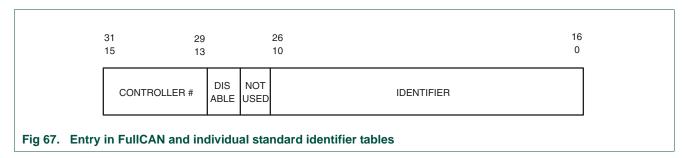


The table of Standard Identifier Ranges contains paired upper and lower (inclusive) bounds, one pair per word. These must also be arranged in ascending numerical order.

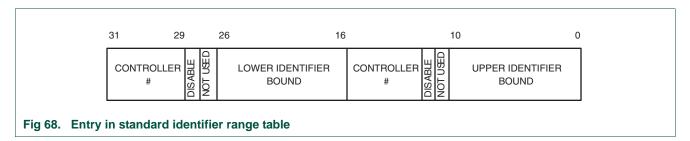

The disable bits in Standard entries provide a means to turn response, to particular CAN Identifiers or ranges of Identifiers, on and off dynamically. When the Acceptance Filter function is enabled, only the disable bits in Acceptance Filter RAM can be changed by software. Response to a range of Standard addresses can be enabled by writing 32 zero bits to its word in RAM, and turned off by writing 32 one bits (0xFFFF FFFF) to its word in RAM. Only the disable bits are actually changed. Disabled entries must maintain the ascending sequence of Identifiers.

If Extended (29 bit) Identifiers are used in the application, at least one of the other two tables in Acceptance Filter RAM must not be empty, one for individual Extended Identifiers and one for ranges of Extended Identifiers. The table of individual Extended Identifiers must be arranged in ascending numerical order.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

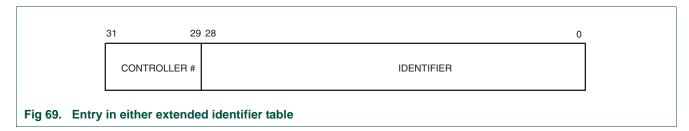

The table of ranges of Extended Identifiers must contain an even number of entries, of the same form as in the individual Extended Identifier table. Like the Individual Extended table, the Extended Range must be arranged in ascending numerical order. The first and second (3rd and 4th ...) entries in the table are implicitly paired as an inclusive range of Extended addresses, such that any received address that falls in the inclusive range is received (accepted). Software must maintain the table to consist of such word pairs.

There is no facility to receive messages to Extended identifiers using the fullCAN method.

Five address registers point to the boundaries between the tables in Acceptance Filter RAM: fullCAN Standard addresses, Standard Individual addresses, Standard address ranges, Extended Individual addresses, and Extended address ranges. These tables must be consecutive in memory. The start of each of the latter four tables is implicitly the end of the preceding table. The end of the Extended range table is given in an End of Tables register. If the start address of a table equals the start of the next table or the End Of Tables register, that table is empty.

When the Receive side of a CAN controller has received a complete Identifier, it signals the Acceptance Filter of this fact. The Acceptance Filter responds to this signal, and reads the Controller number, the size of the Identifier, and the Identifier itself from the Controller. It then proceeds to search its RAM to determine whether the message should be received or ignored.

If fullCAN mode is enabled and the CAN controller signals that the current message contains a Standard identifier, the Acceptance Filter first searches the table of identifiers for which reception is to be done in fullCAN mode. Otherwise, or if the AF doesn't find a match in the fullCAN table, it searches its individual Identifier table for the size of Identifier signalled by the CAN controller. If it finds an equal match, the AF signals the CAN controller to retain the message, and provides it with an ID Index value to store in its Receive Frame Status register.

If the Acceptance Filter does not find a match in the appropriate individual Identifier table, it then searches the Identifier Range table for the size of Identifier signalled by the CAN controller. If the AF finds a match to a range in the table, it similarly signals the CAN controller to retain the message, and provides it with an ID Index value to store in its Receive Frame Status register. If the Acceptance Filter does not find a match in either the individual or Range table for the size of Identifier received, it signals the CAN controller to discard/ignore the received message.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

10. Acceptance filter registers

10.1 Acceptance Filter Mode Register (AFMR - 0xE003 C000)

Table 278. Acceptance Filter Mode Register (AFMR - address 0xE003 C000) bit description

Bit	Symbol	Valu e	Description	Reset Value
0	AccOff	1	if AccBP is 0, the Acceptance Filter is not operational. All Rx messages on all CAN buses are ignored.	1
1	AccBP	1	All Rx messages are accepted on enabled CAN controllers. Software must set this bit before modifying the contents of any of the registers described below, and before modifying the contents of Lookup Table RAM in any way other than setting or clearing Disable bits in Standard Identifier entries. When both this bit and AccOff are 0, the Acceptance filter operates to screen received CAN Identifiers.	0
2	eFCAN	0	Software must read all messages for all enabled IDs on all enabled CAN buses, from the receiving CAN controllers.	0
		1	The Acceptance Filter itself will take care of receiving and storing messages for selected Standard ID values on selected CAN buses. See Section 19–12 "Fullcan mode" on page 300.	
31:3	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

10.2 Standard Frame Individual Start Address register (SFF_sa - 0xE003 C004)

Table 279. Standard Frame Individual Start Address register (SFF_sa - address 0xE003 C004) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
10:2	SFF_sa	The start address of the table of individual Standard Identifiers in AF Lookup RAM. If the table is empty, write the same value in this register and the SFF_GRP_sa register described below. For compatibility with possible future devices, please write zeroes in bits 31:11 and 1:0 of this register. If the eFCAN bit in the AFMR is 1, this value also indicates the size of the table of Standard IDs which the Acceptance Filter will search and (if found) automatically store received messages in Acceptance Filter RAM.	0
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

10.3 Standard Frame Group Start Address Register (SFF_GRP_sa - 0xE003 C008)

Table 280. Standard Frame Group Start Address register (SFF_GRP_sa - address 0xE003 C008) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:2	SFF_GRP_sa	The start address of the table of grouped Standard Identifiers in AF Lookup RAM. If the table is empty, write the same value in this register and the EFF_sa register described below. The largest value that should be written to this register is 0x800, when only the Standard Individual table is used, and the last word (address 0x7FC) in AF Lookup Table RAM is used.	0
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

10.4 Extended Frame Start Address Register (EFF_sa - 0xE003 C00C)

Table 281. Extended Frame Start Address register (EFF_sa - address 0xE003 C00C) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
10:2	EFF_sa	The start address of the table of individual Extended Identifiers in AF Lookup RAM. If the table is empty, write the same value in this register and the EFF_GRP_sa register described below. The largest value that should be written to this register is 0x800, when both Extended Tables are empty and the last word (address 0x7FC) in AF Lookup Table RAM is used.	0
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

10.5 Extended Frame Group Start Address Register (EFF_GRP_sa - 0xE003 C010)

Table 282. Extended Frame Group Start Address register (EFF_GRP_sa - address 0xE003 C010) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:2	Eff_GRP_sa	The start address of the table of grouped Extended Identifiers in AF Lookup RAM. If the table is empty, write the same value in this register and the ENDofTable register described below. The largest value that should be written to this register is 0x800, when this table is empty and the last word (address 0x7FC) in AF Lookup Table RAM is used.	0
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

10.6 End of AF Tables register (ENDofTable - 0xE003 C014)

Table 283. End of AF Tables register (ENDofTable - address 0xE003 C014) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:2	EndofTable	The address above the last active address in the last active AF table. If the eFCAN bit in the AFMR is 0, the largest value that should be written to this register is 0x800, which allows the last word (address 0x7FC) in AF Lookup Table RAM to be used. If the eFCAN bit in the AFMR is 1, this value marks the start of the area of Acceptance Filter RAM, into which the Acceptance Filter will automatically receive messages for selected IDs on selected CAN buses. In this case, the maximum value that should be written to this register is 0x800 minus 6 times the value in SFF_sa. This allows 12 bytes of message storage between this address and the end of Acceptance Filter RAM, for each Standard ID that is specified between the start of Acceptance Filter RAM, and the next active AF table.	0
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

10.7 LUT Error Address register (LUTerrAd - 0xE003 C018)

Table 284. LUT Error Address register (LUTerrAd - address 0xE003 C018) bit description

Bit	Symbol	Description	Reset Value
1:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
10:2	LUTerrAd	It the LUT Error bit (below) is 1, this read-only field contains the address in AF Lookup Table RAM, at which the Acceptance Filter encountered an error in the content of the tables.	0
31:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

10.8 LUT Error register (LUTerr - 0xE003 C01C)

Table 285. LUT Error register (LUTerr - address 0xE003 C01C) bit description

Bit	Symbol	Description	Reset Value
0	LUTerr	This read-only bit is set to 1 if the Acceptance Filter encounters an error in the content of the tables in AF RAM. It is cleared when software reads the LUTerrAd register. This condition is ORed with the "other CAN" interrupts from the CAN controllers, to produce the request for a VIC interrupt channel.	0
31:1	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

11. Examples of acceptance filter tables and ID index values

Suppose that the five Acceptance Filter address registers contain the values shown in the third column below. In this case each table contains the decimal number of words and entries shown in the next two columns, and the ID Index field of the CANRFS register can return the decimal values shown in the rightmost column, for CAN messages whose Identifiers match the entries in that table.


Table 286. Example of acceptance filter tables and ID index values

Table	Register	Value	# Words	# Entries	ID Indexes
Standard Individual	SFF_sa	0x040	8 ₁₀	16 ₁₀	0-15 ₁₀
Standard Group	SFF_GRP_sa	0x060	4 ₁₀	4 ₁₀	16-19 ₁₀
Extended Individual	EFF_sa	0x070	8 ₁₀	16 ₁₀	20-55 ₁₀
Extended Group	EFF_GRP_sa	0x100	8 ₁₀	16 ₁₀	56-57 ₁₀
	ENDofTable	0x110			

<u>Figure 19–70</u> below is a more detailed and graphic example of the address registers, table layout, and ID Index values. It shows:

- A Standard Individual table starting at the start of Acceptance Filter RAM and containing 26 Identifiers, followed by:
- A Standard Group table containing 12 ranges of Identifiers, followed by:
- An Extended Individual table containing 3 Identifiers, followed by:
- An Extended Group table containing 2 ranges of Identifiers.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

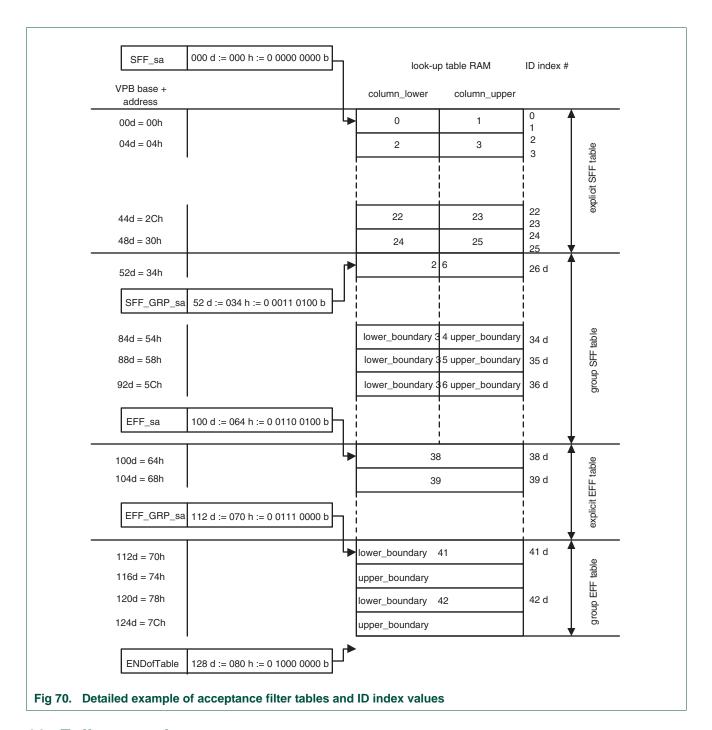

12. Fullcan mode

When fullCAN mode is enabled, the Acceptance Filter itself takes care of receiving and storing messages for selected Standard ID values on selected CAN buses, in the style of "FullCAN" controllers.

In order to set this bit and use this mode, two other conditions must be met with respect to the contents of Acceptance Filter RAM and the pointers into it:

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

- The Standard Frame Individual Start Address Register (SFF_sa) must be greater than
 or equal to the number of IDs for which automatic receive storage is to be done, times
 two. SFF_sa must be rounded up to a multiple of 4 if necessary.
- The EndOfTable register must be less than or equal to 0x800 minus 6 times the SFF_sa value, to allow 12 bytes of message storage for each ID for which automatic receive storage will be done.

When these conditions are met and eFCAN is set:


- The area between the start of Acceptance Filter RAM and the SFF_sa address, is used for a table of individual Standard IDs and CAN Controller/bus identification, sorted in ascending order and in the same format as in the Individual Standard ID table (see Figure 19–67 "Entry in FullCAN and individual standard identifier tables" on page 294). Entries can be marked as "disabled" as in the other Standard tables. If there are an odd number of "FullCAN" ID's, at least one entry in this table must be so marked.
- The first (SFF_sa)/2 IDindex values are assigned to these automatically-stored ID's.
 That is, IDindex values stored in the Rx Frame Status Register, for IDs not handled in
 this way, are increased by (SFF_sa)/2 compared to the values they would have when
 eFCAN is 0.
- When a Standard ID is received, the Acceptance Filter searches this table before the Standard Individual and Group tables.
- When a message is received for a controller and ID in this table, the Acceptance filter reads the received message out of the CAN controller and stores it in Acceptance Filter RAM, starting at (EndOfTable) + its IDindex*12.
- The format of such messages is shown in Table 19–287.

Table 287. Format of automatically stored Rx message

Address	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	F F		000	00			SE	M	000	00			DL	С			000	000				ID										
+4	Rx	Da	ta 4						Rx	Da	ta 3						Rx	Dat	a 2						Rx	Da	ata 1	1				
+8	Rx	Da	ta 8						Rx	Da	ta 7						Rx	Dat	a 6						Rx	Da	ata (5				

The FF, RTR, and DLC fields are as described in <u>Table 19–265</u>. Hardware sets the SEM field to 01 when it begins to update a message, and to 11 when it finishes doing so. Software should clear SEM to 00 as part of accessing a message. Software must access the three words in a message in a particular way to ensure that they are all from the same received message. <u>Figure 19–71</u> below shows how software should use the SEM field to ensure this.

Chapter 19: LPC21xx/22xx CAN controller and acceptance filter

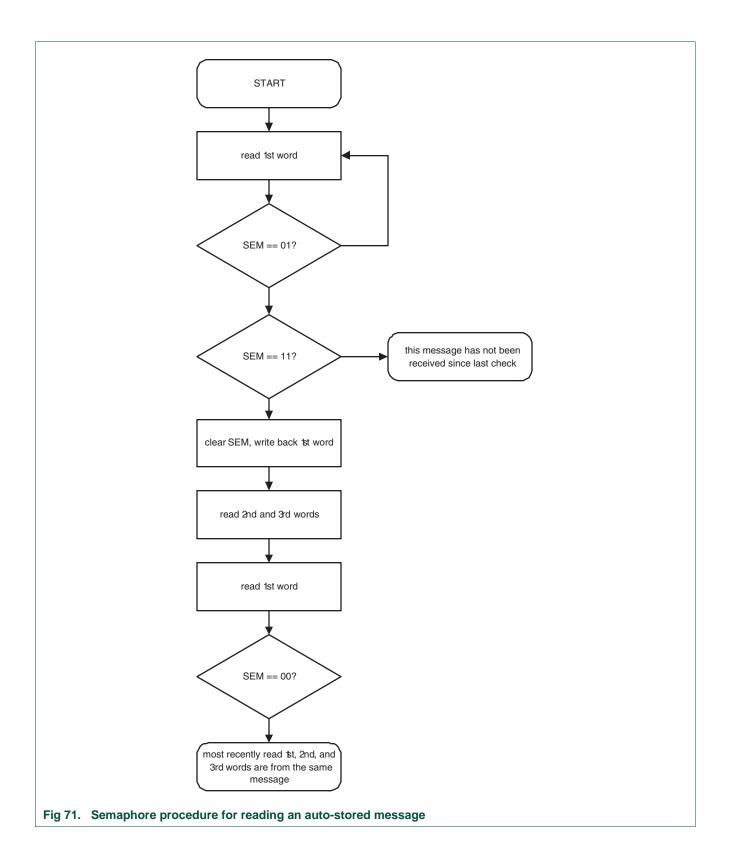

UM10114

Chapter 20: LPC21xx/22xx Analog-to-Digital Converter (ADC)

Rev. 03 — 2 April 2008

User manual

303 of 386

1. How to read this chapter

User manual

Remark: The LPC21xx and LPC22xx contain different ADC features depending on part number and version. The registers and their addresses that are available in select parts only are shown in Table 20-288. All other register descriptions are identical for all LPC21xx/LPC22xx parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1-2 "How to read this manual".

Table 288. LPC21xx/22xx part-specific registers

Part	ADC channels	ADC status	Interrupt on conversion completed	Dedicated result registers
no suffix a	and /00 par	ts		
LPC2109	4	not available	not available	not available
LPC2119	4	not available	not available	not available
LPC2129	4	not available	not available	not available
LPC2114	4	not available	not available	not available
LPC2124	4	not available	not available	not available
LPC2194	4	not available	not available	not available
LPC2210	8	not available	not available	not available
LPC2220	8	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20-295
LPC2212	8	not available	not available	not available
LPC2214	8	not available	not available	not available
LPC2290	8	not available	not available	not available
LPC2292	8	not available	not available	not available
LPC2294	8	not available	not available	not available
/01 parts				
LPC2109	4	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2119	4	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2129	4	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2114	4	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2124	4	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2194	4	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2210	8	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2212	8	ADSTAT <u>Table 20–293</u>	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2214	8	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2290	8	ADSTAT <u>Table 20–293</u>	ADINTEN Table 20–294	ADDRn Table 20–295
LPC2292	8	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20-295
LPC2294	8	ADSTAT Table 20–293	ADINTEN Table 20–294	ADDRn Table 20–295

Chapter 20: LPC21xx/22xx Analog-to-Digital Converter (ADC)

2. **Features**

- 10 bit successive approximation analog to digital converter
- Input multiplexing among 4 pins or 8 pins
- Power-down mode
- Measurement range 0 V to V_{DDA}
- 10 bit conversion time ≥ 2.44 µs (400,000 conversions per second)
- · Burst conversion mode for single or multiple inputs
- Optional conversion on transition on input pin or Timer Match signal
- Dedicated result register to reduce interrupt overhead for every analog pin (see Table 20-288)

Description 3.

Basic clocking for the ADC is provided by the APB clock. A programmable divider is included in each converter to scale this clock to the 4.5 MHz (max) clock needed by the successive approximation process. A fully accurate conversion requires 11 of these clocks.

Pin description

Table 20–289 gives a brief summary of each of ADC related pins.

Table 289. ADC pin description

Pin	Туре	Description
AIN3:0, AIN7:4	Input	Analog Inputs. The ADC cell can measure the voltage on any of these input signals. Note that these analog inputs are always connected to their pins, even if the Pin function Select register assigns them to port pins. A simple self-test of the ADC can be done by driving these pins as port outputs.
		Warning: While the ADC pins are specified as 5 V tolerant (see Section 7–2 and Section 7–3), the analog multiplexing in the ADC block is not. More than 3.3 V (V_{DDA}) +10 % should not be applied to any pin that is selected as an ADC input, otherwise the ADC reading is incorrect. If for example AIN0 and AIN1 are used as the ADC inputs and voltage on AIN0 = 4.5 V while AIN1 = 2.5 V, an excessive voltage on the AIN0 can cause an incorrect reading of the AIN1, although the AIN1 input voltage is within the right range.
		If the ADC is not used in an application then the pins associated with ADC inputs can be used as 5 V tolerant digital IO pins.
V _{DDA} , V _{SSA}	Power	Analog Power and Ground. These should be nominally the same voltages as V_{DD} and V_{SS} , but should be isolated to minimize noise and error. The V_{DDA} pin provides the voltage reference level for the A/D converter.

Remark: When the ADC is not used, the V_{DDA} pin must be connected to the power supply V_{DD(3V3)}, and pin V_{SSA} must be grounded. These pins should **not** be left floating.

Register description 5.

The ADC registers are shown in Table 20–290.

Chapter 20: LPC21xx/22xx Analog-to-Digital Converter (ADC)

Table 290. ADC registers

Name	Description	Access	Reset value ^[1]	Address
ADCR	ADC Control Register. The ADCR register must be written to select the operating mode before ADC conversion can occur.	R/W	0x0000 0001	0xE003 4000
ADGDR	ADC Global Data Register. This register contains the ADC's DONE bit and the result of the most recent ADC conversion.	R/W	NA	0xE003 4004
ADSTAT	ADC Status Register. This register contains DONE and OVERRUN flags for all of the ADC channels, as well as the ADC interrupt flag.	RO	0x0000 0000	0xE003 4030
ADINTEN	ADC Interrupt Enable Register. This register contains enable bits that allow the DONE flag of each ADC channel to be included or excluded from contributing to the generation of an ADC interrupt.	R/W	0x0000 0100	0xE003 400C
ADDR0	ADC Channel 0 Data Register. This register contains the result of the most recent conversion completed on channel 0.	RO	NA	0xE003 4010
ADDR1	ADC Channel 1 Data Register. This register contains the result of the most recent conversion completed on channel 1.	RO	NA	0xE003 4014
ADDR2	ADC Channel 2 Data Register. This register contains the result of the most recent conversion completed on channel 2.	RO	NA	0xE003 4018
ADDR3	ADC Channel 3 Data Register. This register contains the result of the most recent conversion completed on channel 3.	RO	NA	0xE003 401C
ADDR4	ADC Channel 4 Data Register. This register contains the result of the most recent conversion completed on channel 4.	RO	NA	0xE003 4020
ADDR5	ADC Channel 5 Data Register. This register contains the result of the most recent conversion completed on channel 5.	RO	NA	0xE003 4024
ADDR6	ADC Channel 6 Data Register. This register contains the result of the most recent conversion completed on channel 6.	RO	NA	0xE003 4028
ADDR7	ADC Channel 7 Data Register. This register contains the result of the most recent conversion completed on channel 7.	RO	NA	0xE003 402C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 20: LPC21xx/22xx Analog-to-Digital Converter (ADC)

5.1 ADC Control Register (ADCR - 0xE003 4000)

Table 291. ADC Control Register (ADCR - address 0xE003 4000) bit description

Bit	Symbol	Value	Description	Reset value
7:0	SEL		Selects which of the ADC pins is (are) to be sampled and converted. Bit 0 selects Pin AIN0, and bit 7 selects pin AIN7. In software-controlled mode, only one of these bits should be 1. In hardware scan mode, any value containing 1 to 8 ones is allowed. All zeroes is equivalent to 0x01.	0x01
15:8	CLKDIV		The APB clock (PCLK) is divided by (this value plus one) to produce the clock for the ADC, which should be less than or equal to 4.5 MHz. Typically, software should program the smallest value in this field that yields a clock of 4.5 MHz or slightly less, but in certain cases (such as a high-impedance analog source) a slower clock may be desirable.	0
16	BURST	1	The AD converter does repeated conversions at the rate selected by the CLKS field, scanning (if necessary) through the pins selected by 1s in the SEL field. The first conversion after the start corresponds to the least-significant 1 in the SEL field, then higher numbered 1-bits (pins) if applicable. Repeated conversions can be terminated by clearing this bit, but the conversion that's in progress when this bit is cleared will be completed.	0
			Important: START bits must be 000 when BURST = 1 or conversions will not start.	
		0	Conversions are software controlled and require 11 clocks.	
19:17	CLKS		This field selects the number of clocks used for each conversion in Burst mode, and the number of bits of accuracy of the result in the RESULT bits of ADDR, between 11 clocks (10 bits) and 4 clocks (3 bits).	000
		000	11 clocks / 10 bits	
		001	10 clocks / 9bits	
		010	9 clocks / 8 bits	
		011	8 clocks / 7 bits	
		100	7 clocks / 6 bits	
		101	6 clocks / 5 bits	
		110	5 clocks / 4 bits	
		111	4 clocks / 3 bits	
20	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
21	PDN	1	The ADC is operational.	0
		0	The ADC is in power-down mode.	
23:22	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 20: LPC21xx/22xx Analog-to-Digital Converter (ADC)

Table 291. ADC Control Register (ADCR - address 0xE003 4000) bit description

Bit	Symbol	Value	Description	Rese value	
26:24 STA	START		When the BURST bit is 0, these bits control whether and when an ADC conversion is started:	0	
		000	No start (this value should be used when clearing PDN to 0).		
		001	Start conversion now.		
		010	Start conversion when the edge selected by bit 27 occurs on P0.16/EINT0/MAT0.2/CAP0.2 pin.		
		011	Start conversion when the edge selected by bit 27 occurs on P0.22/CAP0.0/MAT0.0 pin.		
		100	Start conversion when the edge selected by bit 27 occurs on MAT0.1.		
		101	Start conversion when the edge selected by bit 27 occurs on MAT0.3.		
		110	Start conversion when the edge selected by bit 27 occurs on MAT1.0.		
		111	Start conversion when the edge selected by bit 27 occurs on MAT1.1.		
27	EDGE		This bit is significant only when the START field contains 010-111. In these cases:	0	
		1	Start conversion on a falling edge on the selected CAP/MAT signal.		
		0	Start conversion on a rising edge on the selected CAP/MAT signal.		
31:28	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

5.2 ADC Global Data Register (ADGDR - 0xE003 4004)

Table 292. ADC Global Data Register (ADGDR - address 0xE003 4004) bit description

Bit	Symbol	Description	Reset value
5:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:6	RESULT	When DONE is 1, this field contains a binary fraction representing the voltage on the Ain pin selected by the SEL field, divided by the voltage on the V_{DDA} pin (V/V _{REF}). Zero in the field indicates that the voltage on the Ain pin was less than, equal to, or close to that on V_{SSA} , while 0x3FF indicates that the voltage on Ain was close to, equal to, or greater than that on V_{REF} .	NA
23:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
26:24	CHN	These bits contain the channel from which the RESULT bits were converted (e.g. 000 identifies channel 0, 001 channel 1).	NA
29:27	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
30	OVERUN	This bit is 1 in burst mode if the results of one or more conversions was (were) lost and overwritten before the conversion that produced the result in the RESULT bits. This bit is cleared by reading this register.	0
31	DONE	This bit is set to 1 when an ADC conversion completes. It is cleared when this register is read and when the ADCR is written. If the ADCR is written while a conversion is still in progress, this bit is set and a new conversion is started.	0

Chapter 20: LPC21xx/22xx Analog-to-Digital Converter (ADC)

5.3 ADC Status Register (ADSTAT - 0xE003 4004)

The ADC Status register allows checking the status of all ADC channels simultaneously. The DONE and OVERRUN flags appearing in the ADDRn register for each ADC channel are mirrored in ADSTAT. The interrupt flag (the logical OR of all DONE flags) is also found in ADSTAT.

Table 293. ADC Status Register (ADSTAT - address 0xE003 4004) bit description

Bit	Symbol	Description	Reset value
0	DONE0	This bit mirrors the DONE status flag from the result register for ADC channel 0.	0
1	DONE1	This bit mirrors the DONE status flag from the result register for ADC channel 1.	0
2	DONE2	This bit mirrors the DONE status flag from the result register for ADC channel 2.	0
3	DONE3	This bit mirrors the DONE status flag from the result register for ADC channel 3.	0
4	DONE4	This bit mirrors the DONE status flag from the result register for ADC channel 4.	0
5	DONE5	This bit mirrors the DONE status flag from the result register for ADC channel 5.	0
6	DONE6	This bit mirrors the DONE status flag from the result register for ADC channel 6.	0
7	DONE7	This bit mirrors the DONE status flag from the result register for ADC channel 7.	0
8	OVERRUN0	This bit mirrors the OVERRRUN status flag from the result register for ADC channel 0.	0
9	OVERRUN1	This bit mirrors the OVERRRUN status flag from the result register for ADC channel 1.	0
10	OVERRUN2	This bit mirrors the OVERRRUN status flag from the result register for ADC channel 2.	0
11	OVERRUN3	This bit mirrors the OVERRRUN status flag from the result register for ADC channel 3.	0
12	OVERRUN4	This bit mirrors the OVERRRUN status flag from the result register for ADC channel 4.	0
13	OVERRUN5	This bit mirrors the OVERRRUN status flag from the result register for ADC channel 5.	0
14	OVERRUN6	This bit mirrors the OVERRRUN status flag from the result register for ADC channel 6.	0
15	OVERRUN7	This bit mirrors the OVERRRUN status flag from the result register for ADC channel 7.	0
16	ADINT	This bit is the ADC interrupt flag. It is one when any of the individual ADC channel Done flags is asserted and enabled to contribute to the ADC interrupt via the ADINTEN register.	0
31:17	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.4 ADC Interrupt Enable Register (ADINTEN - 0xE003 400C)

This register allows control over which ADC channels generate an interrupt when a conversion is complete. For example, it may be desirable to use some ADC channels to monitor sensors by continuously performing conversions on them. The most recent results are read by the application program whenever they are needed. In this case, an interrupt is not desirable at the end of each conversion for some ADC channels.

Table 294. ADC Interrupt Enable Register (ADINTEN - address 0xE003 400C) bit description

Bit	Symbol	Value	Description	Reset value
0	ADINTEN0	0	Completion of a conversion on ADC channel 0 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 0 will generate an interrupt.	
1	ADINTEN1	0	Completion of a conversion on ADC channel 1 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 1 will generate an interrupt.	
2	ADINTEN2	0	Completion of a conversion on ADC channel 2 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 2 will generate an interrupt.	

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 20: LPC21xx/22xx Analog-to-Digital Converter (ADC)

Table 294. ADC Interrupt Enable Register (ADINTEN - address 0xE003 400C) bit description

Bit	Symbol	Value	Description	Reset value
3	ADINTEN3	0	Completion of a conversion on ADC channel 3 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 3 will generate an interrupt.	
4	ADINTEN4	0	Completion of a conversion on ADC channel 4 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 4 will generate an interrupt.	
5	ADINTEN5	0	Completion of a conversion on ADC channel 5 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 5 will generate an interrupt.	
6	ADINTEN6	0	Completion of a conversion on ADC channel 6 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 6 will generate an interrupt.	
7	ADINTEN7	0	Completion of a conversion on ADC channel 7 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 7 will generate an interrupt.	
8	8 ADGINTEN		Only the individual ADC channels enabled by ADINTEN7:0 will generate interrupts.	1
		1	Only the global DONE flag in ADDR is enabled to generate an interrupt.	
31:9	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

5.5 ADC Data Registers (ADDR0 to ADDR7- 0xE003 4010 to 0xE003 402C)

The ADC Data Register hold the result when an ADC conversion is complete, and also include the flags that indicate when a conversion has been completed and when a conversion overrun has occurred.

Table 295. ADC Data Registers (ADDR0 to ADDR7 - 0xE003 4010 to 0xE003 402C) bit description

Bit	Symbol	Description	Reset value
5:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:6	RESULT	When DONE is 1, this field contains a binary fraction representing the voltage on the AIN pin, divided by the voltage on the V_{REF} pin (V/ V_{REF}). Zero in the field indicates that the voltage on the AIN pin was less than, equal to, or close to that on V_{SSA} , while 0x3FF indicates that the voltage on AIN was close to, equal to, or greater than that on V_{REF} .	NA
29:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
30	OVERRUN	This bit is 1 in burst mode if the results of one or more conversions was (were) lost and overwritten before the conversion that produced the result in the RESULT bits. This bit is cleared by reading this register.	
31	DONE	This bit is set to 1 when an ADC conversion completes. It is cleared when this register is read.	NA

6. Operation

6.1 Hardware-triggered conversion

If the BURST bit in the ADCR is 0 and the START field contains 010-111, the ADC will start a conversion when a transition occurs on a selected pin or Timer Match signal. The choices include conversion on a specified edge of any of 4 Match signals, or conversion

Chapter 20: LPC21xx/22xx Analog-to-Digital Converter (ADC)

on a specified edge of either of 2 Capture/Match pins. The pin state from the selected pad or the selected Match signal, XORed with ADCR bit 27, is used in the edge detection logic.

6.2 Interrupts

An interrupt request is asserted to the Vectored Interrupt Controller (VIC) when the DONE bit is 1. Software can use the Interrupt Enable bit for the ADC in the VIC to control whether this assertion results in an interrupt. DONE is negated when the ADDR is read.

6.3 Accuracy vs. digital receiver

The AIN function must be selected in corresponding Pin Select register (see Section 8–6) in order to get accurate voltage readings on the monitored pin. For a pin hosting an ADC input, it is not possible to have a have a digital function selected and yet get valid ADC readings. An inside circuit disconnects ADC hardware from the associated pin whenever a digital function is selected on that pin.

UM10114

Chapter 21: LPC21xx/22xx Flash memory controller

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

Read this chapter for LPC21xx and LPC2xx parts with on-chip flash memory.

Table 296. LPC21xx and LPC22xx flash memory options

Part	Flash size
no suffix, /00, and /01 parts	
LPC2109	64 kB
LPC2119	128 kB
LPC2129	256 kB
LPC2114	128 kB
LPC2124	256 kB
LPC2194	256 kB
LPC2210	flashless, see Section 22-1
LPC2220	flashless, see Section 22-1
LPC2212	128 kB
LPC2214	256 kB
LPC2290	flashless, see Section 22–1
LPC2292	256 kB
LPC2294	256 kB

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Flash boot loader

The flash boot loader controls initial operation after reset and also provides the means to accomplish programming of the flash memory. This could be initial programming of a blank device, erasure and re-programming of a previously programmed device, or programming of the Flash memory by the application program in a running system.

3. Features

- In-System Programming: In-System programming (ISP) means programming or reprogramming the on-chip flash memory using the boot loader software and a serial port. This can be done when the part resides in the end-user board.
- In Application Programming: In-Application (IAP) programming means performing erase and write operation on the on-chip flash memory, as directed by the end-user application code.

Chapter 21: LPC21xx/22xx Flash memory controller

4. Applications

The flash boot loader provides both In-System and In-Application programming interfaces for programming the on-chip flash memory.

5. Description


The flash boot loader code is executed every time the part is powered on or reset. The loader can execute the ISP command handler or the user application code. A LOW level after reset at the P0.14 pin is considered as an external hardware request to start the ISP command handler. Assuming that a proper signal is present on XTAL1 pin when the rising edge on RESET pin is generated, it may take up to 3 ms before P0.14 is sampled and the decision on whether to continue with user code or ISP handler is made. If P0.14 is sampled low and the watchdog overflow flag is set, the external hardware request to start the ISP command handler is ignored. If there is no request for the ISP command handler execution (P0.14 is sampled HIGH after reset), a search is made for a valid user program. If a valid user program is found then the execution control is transferred to it. If a valid user program is not found, the auto-baud routine is invoked.

Pin P0.14, which is used as hardware request for ISP, requires special attention. Since P0.14 is in high impedance mode after reset, it is important that the user provides external hardware (a pull-up resistor or other device) to put the pin in a defined state. Otherwise unintended entry into ISP mode may occur.

5.1 Memory map after any reset

The boot block is 8 kB in size and resides in the top portion (starting from 0x0001 E000 for devices with 128 kB flash and from 0x0003 E000 for devices with 256 kB flash) of the on-chip flash memory. After any reset the entire boot block is also mapped to the top of the on-chip memory space. i.e. the boot block is also visible in the memory region starting from the address 0x7FFF E000. The flash boot loader is designed to run from this memory area, but both the ISP and IAP software use parts of the on-chip RAM. The RAM usage is described later in this chapter. The interrupt vectors residing in the boot block of the on-chip flash memory also become active after reset, i.e., the bottom 64 bytes of the boot block are also visible in the memory region starting from the address 0x0000 0000. The reset vector contains a jump instruction to the entry point of the flash boot loader software.

Chapter 21: LPC21xx/22xx Flash memory controller

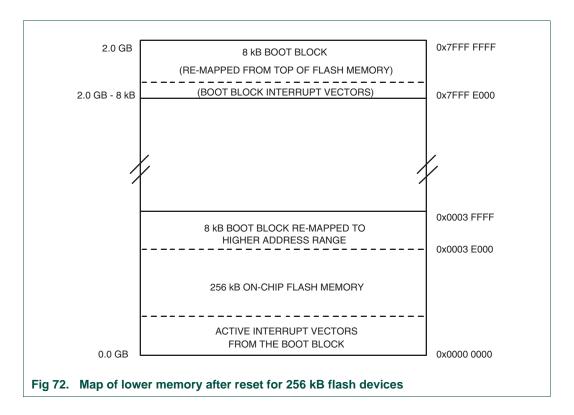

5.2 Criterion for valid user code

The reserved ARM interrupt vector location (0x0000 0014) should contain the 2's complement of the check-sum of the remaining interrupt vectors. This causes the checksum of all of the vectors together to be 0. The boot loader code disables the overlaying of the interrupt vectors from the boot block, then checksums the interrupt vectors in sector 0 of the flash. If the signatures match then the execution control is transferred to the user code by loading the program counter with 0x0000 0000. Hence the user flash reset vector should contain a jump instruction to the entry point of the user application code.

If the signature is not valid, the auto-baud routine synchronizes with the host via serial port 0. The host should send a '?' (0x3F) as a synchronization character and wait for a response. The host side serial port settings should be 8 data bits, 1 stop bit and no parity. The auto-baud routine measures the bit time of the received synchronization character in terms of its own frequency and programs the baud rate generator of the serial port. It also sends an ASCII string ("Synchronized<CR><LF>") to the Host. In response to this host should send the same string ("Synchronized<CR><LF>"). The auto-baud routine looks at the received characters to verify synchronization. If synchronization is verified then "OK<CR><LF>" string is sent to the host. Host should respond by sending the crystal frequency (in kHz) at which the part is running. For example, if the part is running at 10 MHz, the response from the host should be "10000<CR><LF>". "OK<CR><LF>" string is sent to the host after receiving the crystal frequency. If synchronization is not verified then the auto-baud routine waits again for a synchronization character. For auto-baud to work correctly, the crystal frequency should be greater than or equal to 10 MHz. The on-chip PLL is not used by the boot code.

Chapter 21: LPC21xx/22xx Flash memory controller

Once the crystal frequency is received the part is initialized and the ISP command handler is invoked. For safety reasons an "Unlock" command is required before executing the commands resulting in flash erase/write operations and the "Go" command. The rest of the commands can be executed without the unlock command. The Unlock command is required to be executed once per ISP session. The Unlock command is explained in Section 21–9 "ISP commands" on page 321.

5.3 Communication protocol

All ISP commands should be sent as single ASCII strings. Strings should be terminated with Carriage Return (CR) and/or Line Feed (LF) control characters. Extra <CR> and <LF> characters are ignored. All ISP responses are sent as <CR><LF> terminated ASCII strings. Data is sent and received in UU-encoded format.

5.4 ISP command format

"Command Parameter_0 Parameter_1 ... Parameter_n<CR><LF>" "Data" (Data only for Write commands)

5.5 ISP response format

"Return_Code<CR><LF>Response_0<CR><LF>Response_1<CR><LF>...
Response_n<CR><LF>" "Data" (Data only for Read commands)

5.6 ISP data format

The data stream is in UU-encode format. The UU-encode algorithm converts 3 bytes of binary data in to 4 bytes of printable ASCII character set. It is more efficient than Hex format which converts 1 byte of binary data in to 2 bytes of ASCII hex. The sender should send the check-sum after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. The receiver should compare it with the check-sum of the received bytes. If the check-sum matches then the receiver should respond with "OK<CR><LF>" to continue further transmission. If the check-sum does not match the receiver should respond with "RESEND<CR><LF>". In response the sender should retransmit the bytes.

5.7 ISP flow control

A software XON/XOFF flow control scheme is used to prevent data loss due to buffer overrun. When the data arrives rapidly, the ASCII control character DC3 (stop) is sent to stop the flow of data. Data flow is resumed by sending the ASCII control character DC1 (start). The host should also support the same flow control scheme.

5.8 ISP command abort

Commands can be aborted by sending the ASCII control character "ESC". This feature is not documented as a command under "ISP Commands" section. Once the escape code is received the ISP command handler waits for a new command.

5.9 Interrupts during ISP

The boot block interrupt vectors located in the boot block of the flash are active after any reset.

Chapter 21: LPC21xx/22xx Flash memory controller

5.10 Interrupts during IAP

The on-chip flash memory is not accessible during erase/write operations. When the user application code starts executing the interrupt vectors from the user flash area are active. The user should either disable interrupts, or ensure that user interrupt vectors are active in RAM and that the interrupt handlers reside in RAM, before making a flash erase/write IAP call. The IAP code does not use or disable interrupts.

5.11 RAM used by ISP command handler

ISP commands use on-chip RAM from $0x4000\ 0120$ to $0x4000\ 01FF$. The user could use this area, but the contents may be lost upon reset. Flash programming commands use the top 32 bytes of on-chip RAM. The stack is located at RAM top -32. The maximum stack usage is 256 bytes and it grows downwards.

5.12 RAM used by IAP command handler


Flash programming commands use the top 32 bytes of on-chip RAM. The maximum stack usage in the user allocated stack space is 128 bytes and it grows downwards.

5.13 RAM used by RealMonitor

The RealMonitor uses on-chip RAM from 0x4000 0040 to 0x4000 011F. he user could use this area if RealMonitor based debug is not required. The Flash boot loader does not initialize the stack for RealMonitor.

Chapter 21: LPC21xx/22xx Flash memory controller

5.14 Boot process flowchart

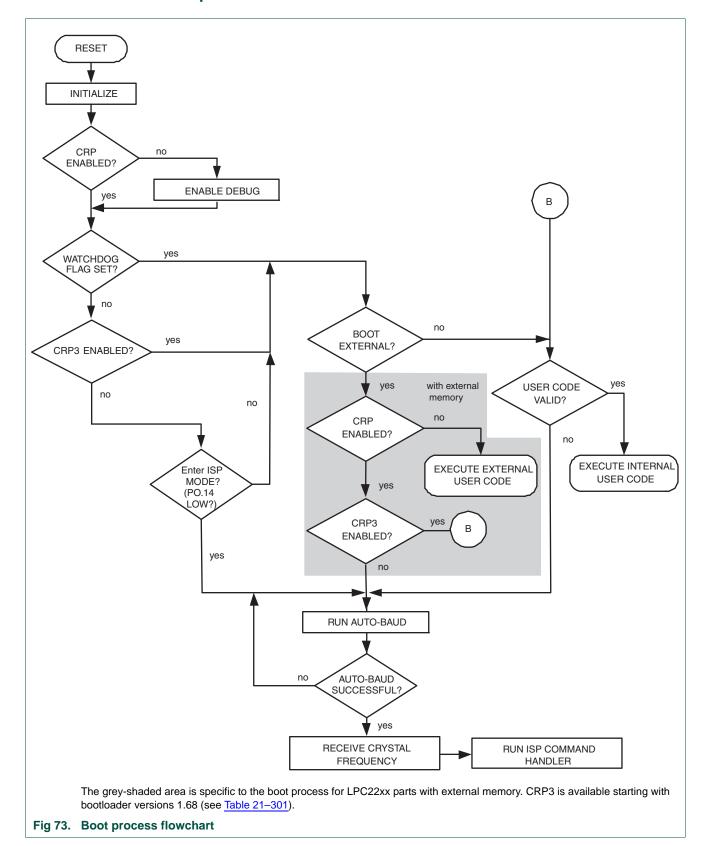

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 21: LPC21xx/22xx Flash memory controller

6. Sector numbers

Some IAP and ISP commands operate on "sectors" and specify sector numbers. The following table indicates the correspondence between sector numbers and memory addresses for LPC21xx/LPC22xx devices containing 64 kB, 128 kB, or 256 kB of flash respectively. IAP, ISP, and RealMonitor routines are located in the boot block. The boot block is present at the top of each flash memory. Because of the boot block, only 56 kB of 64 kB, 120 kB of the 128 kB, and 248 kB of the 256 kB flash devices are available for user code. ISP and IAP commands do not allow write/erase/go operation on the boot block.

Table 297. Flash sectors

Sector Number	Sector Size [kB] 64 kB flash	Address Range	Sector Size [kB] 128 kB flash	Address Range	Sector Size [kB] 256 kB flash	Address Range
0	8	0x0000 0000 - 0x0000 1FFF	8	0x0000 0000 - 0x0000 1FFF	8	0x0000 0000 - 0x0000 1FFF
1	8	0x0000 2000 - 0x0000 3FFF	8	0x0000 2000 - 0x0000 3FFF	8	0x0000 2000 - 0x0000 3FFF
2	8	0x0000 4000 - 0x0000 5FFF	8	0x0000 4000 - 0x0000 5FFF	8	0x0000 4000 - 0x0000 5FFF
3	8	0x0000 6000 - 0x0000 7FFF	8	0x0000 6000 - 0x0000 7FFF	8	0x0000 6000 - 0x0000 7FFF
4	8	0x0000 8000 - 0x0000 9FFF	8	0x0000 8000 - 0x0000 9FFF	8	0x0000 8000 - 0x0000 9FFF
5	8	0x0000 A000 - 0x0000 BFFF	8	0x0000 A000 - 0x0000 BFFF	8	0x0000 A000 - 0x0000 BFFF
6	8	0x0000 C000 - 0x0000 DFFF	8	0x0000 C000 - 0x0000 DFFF	8	0x0000 C000 - 0x0000 DFFF
7	8	0x0000 E000 - 0x0000 FFFF	8	0x0000 E000 - 0x0000 FFFF	8	0x0000 E000 - 0x0000 FFFF
8	8	0x0001 0000 - 0x0000 1FFF	8	0x0001 0000 - 0x0000 1FFF	64	0x0001 0000 - 0x0001 FFFF
9			8	0x0001 2000 - 0x0001 3FFF	64	0x0002 0000 - 0x0001 FFFF
10 (0x0A)			8	0x0001 4000 - 0x0001 5FFF	8	0x0003 0000 - 0x0003 1FFF
11 (0x0B)			8	0x0001 6000 - 0x0001 7FFF	8	0x0003 2000 - 0x0003 3FFF
12 (0x0C)			8	0x0001 8000 - 0x0001 9FFF	8	0x0003 4000 - 0x0003 5FFF
13 (0x0D)			8	0x0001 A000 - 0x0001 BFFF	8	0x0003 6000 - 0x0003 7FFF
14 (0x0E)			8	0x0001 C000 - 0x0001 DFFF	8	0x0003 8000 - 0x0003 9FFF
15 (0x0F)			8	0x0001 E000 - 0x0001 FFFF	8	0x0003 A000 - 0x0003 BFFF
16 (0x10)			-	-	8	0x0003 C000 - 0x0003 DFFF
17 (0x11)			-	-	8	0x0003 E000 - 0x0003 FFFF
<u>UM10114_3</u>						© NXP B.V. 2008. All rights reserved.

Chapter 21: LPC21xx/22xx Flash memory controller

7. Flash content protection mechanism

The LPC21xx/LPC22xx is equipped with the Error Correction Code (ECC) capable flash memory. The purpose of an error correction module is twofold. Firstly, it decodes data words read from the memory into output data words. Secondly, it encodes data words to be written to the memory. The error correction capability consists of single bit error correction with Hamming code.

The operation of ECC is transparent to the running application. The ECC content itself is stored in a flash memory not accessible by user's code to either read from it or write into it on its own. A byte of ECC corresponds to every consecutive 128 bits of the user accessible Flash. Consequently, Flash bytes from 0x0000 0000 to 0x0000 000F are protected by the first ECC byte, Flash bytes from 0x0000 0010 to 0x0000 001F are protected by the second ECC byte, etc.

Whenever the CPU requests a read from Flash, both 128 bits of raw data containing the specified memory location and the matching ECC byte are evaluated. If the ECC mechanism detects a single error in the fetched data, a correction will be applied before data are provided to the CPU. When a write request into the user's Flash is made, write of user specified content is accompanied by a matching ECC value calculated and stored in the ECC memory.

When a sector of user's Flash memory is erased, corresponding ECC bytes are also erased. Once an ECC byte is written, it can not be updated unless it is erased first. Therefore, for the implemented ECC mechanism to perform properly, data must be written into the flash memory in groups of 16 bytes (or multiples of 16), aligned as described above.

8. Code Read Protection (CRP)

Code Read Protection is a mechanism that allows user to enable different levels of security in the system so that access to the on-chip Flash and use of the ISP can be restricted. When needed, CRP is invoked by programming a specific pattern in Flash location at 0x0000 01FC. IAP commands are not affected by the code read protection.

Important: any CRP change becomes effective only after reset.

Chapter 21: LPC21xx/22xx Flash memory controller

Table 298. Code Read Protection levels

Name	Pattern programmed in 0x000001FC	Description
CRP1	0x12345678	Access to chip via the JTAG pins is disabled. This mode allows partial Flash update using the following ISP commands and restrictions:
		 Write to RAM command can not access RAM below 0x40000200
		 Copy RAM to Flash command can not write to Sector 0
		 Erase command can erase Sector 0 only when all sectors are selected for erase
		Compare command is disabled
		This mode is useful when CRP is required and Flash field updates are needed but all sectors can not be erased. Since compare command is disabled in case of partial updates the secondary loader should implement checksum mechanism to verify the integrity of the Flash.
CRP2	0x87654321	Access to chip via the JTAG pins is disabled. The following ISP commands are disabled: • Read Memory
		Write to RAM
		• Go
		Copy RAM to Flash
		• Compare
		When CRP2 is enabled the ISP erase command only allows erasure of all user sectors.
CRP3	0x43218765	Access to chip via the JTAG pins is disabled. ISP entry by pulling P0.14 LOW is disabled if a valid user code is present in Flash sector 0.
		This mode effectively disables ISP override using P0.14 pin. It is up to the user's application to provide Flash update mechanism using IAP calls if necessary.
		Caution: If CRP3 is selected, no future factory testing can be performed on the device.

Table 299. Code Read Protection hardware/software interaction

CRP option	User Code Valid	P0.14 pin at reset	JTAG enabled	enter ISP mode	partial Flash update in ISP mode
No	No	Χ	Yes	Yes	Yes
No	Yes	High	Yes	No	NA
No	Yes	Low	Yes	Yes	Yes
CRP1	Yes	High	No	No	NA
CRP1	Yes	Low	No	Yes	Yes
CRP2	Yes	High	No	No	NA
CRP2	Yes	Low	No	Yes	No
CRP3	Yes	Х	No	No	NA
CRP1	No	Х	No	Yes	Yes
CRP2	No	Х	No	Yes	No
CRP3	No	Х	No	Yes	No

Chapter 21: LPC21xx/22xx Flash memory controller

In case a CRP mode is enabled and access to the chip is allowed via the ISP, an unsupported or restricted ISP command will be terminated with return code CODE_READ_PROTECTION_ENABLED.

8.1 Bootloader options

The levels of code read protection implemented depend on the boot loader code version. The following options can be selected by the user in various revisions of the bootloader code (see Table 21–300).

Table 300. Code read protection options for different bootloader revisions

Option 1 (CRP1)	Option 2 (CRP2)	Option 3 (CRP 3)	Option 4 (bootloader code rev. 1.65 only)
JTAG access is blocked. Supports partial flash updates. • ISP commands allowed: Echo; Set Baud; Erase (except sector 0, must erase all to erase sector 0); Blank Check (fail returns value 0 at location 0); Prepare Sector; Unlock; Read Part ID; Read Boot code version; Write to RAM (addresses above 0x4000 0200); Copy RAM to Flash (except sector 0)	 ISP commands allowed: Echo; Set Baud; Erase (all sectors only); Blank Check (fail returns value 0 at location 0); Prepare Sector; Unlock; Read Part ID; Read Boot code version. ISP commands not allowed: Write to RAM; Read Memory; Copy RAM to Flash; Go; Compare. 	JTAG access is blocked. No ISP commands are allowed when P0.14 is pulled LOW and a valid user program is present in flash sector 0.	 ISP commands allowed: Erase (all sectors only); Prepare Sector; Unlock. ISP commands not allowed: Echo; Set Baud; Blank Check (fail returns value 0 at location 0); Write to RAM; Read Memory; Copy RAM to Flash; Go; Compare; Read Part ID; Read Boot code version.
• ISP commands not allowed: Write to RAM below address 0x4000 0200; Read Memory; Copy RAM to Flash (write to sector 0); Erase sector 0; Go; Compare.			

<u>Table 21–301</u> shows which code read protection options can be selected for any implemented boot loader revision. Note that parts with boot loader revisions \leq 1.60 do not allow code read protection.

Table 301. Bootloader revisions

Revision	Applicable to parts	Pattern programmed @ location 0x1FC:		
		0x1234 5678	0x8765 4321	0x4321 8765
1.69	/00; no suffix	option 1	option 2	option 3
1.68	/01	option 1	option 2	option 3
1.65	/00; no suffix	-	option 2	option 4
1.64 to 1.61	/00; no suffix	-	option 2	-
1.6 and lower	/00; no suffix	-	-	-

Chapter 21: LPC21xx/22xx Flash memory controller

9. ISP commands

The following commands are accepted by the ISP command handler. Detailed status codes are supported for each command. The command handler sends the return code INVALID_COMMAND when an undefined command is received. Commands and return codes are in ASCII format.

CMD_SUCCESS is sent by ISP command handler only when received ISP command has been completely executed and the new ISP command can be given by the host. Exceptions from this rule are "Set Baud Rate", "Write to RAM", "Read Memory", and "Go" commands.

Table 302. ISP command summary

ISP Command	Usage	Described in
Unlock	U <unlock code=""></unlock>	Table 21-303
Set Baud Rate	B <baud rate=""> <stop bit=""></stop></baud>	Table 21-304
Echo	A <setting></setting>	Table 21-306
Write to RAM	W <start address=""> <number bytes="" of=""></number></start>	Table 21-307
Read Memory	R <address> <number bytes="" of=""></number></address>	Table 21-308
Prepare sector(s) for write operation	P <start number="" sector=""> <end number="" sector=""></end></start>	Table 21–309
Copy RAM to Flash	C <flash address=""> <ram address=""> <number bytes="" of=""></number></ram></flash>	Table 21-310
Go	G <address> <mode></mode></address>	Table 21-311
Erase sector(s)	E <start number="" sector=""> <end number="" sector=""></end></start>	Table 21-312
Blank check sector(s)	I <start number="" sector=""> <end number="" sector=""></end></start>	Table 21-313
Read Part ID	J	Table 21-314
Read Boot code version	К	Table 21-316
Compare	M <address1> <address2> <number bytes="" of=""></number></address2></address1>	Table 21-317

9.1 Unlock <unlock code>

Table 303. ISP Unlock command

Command	U
Input	Unlock code: 23130 ₁₀
Return Code	CMD_SUCCESS
	INVALID_CODE
	PARAM_ERROR
Description	This command is used to unlock flash Write, Erase, and Go commands.
Example	"U 23130 <cr><lf>" unlocks the flash Write/Erase & Go commands.</lf></cr>

Chapter 21: LPC21xx/22xx Flash memory controller

9.2 Set Baud Rate <baud rate> <stop bit>

Table 304. ISP Set Baud Rate command

Command	В
Input	Baud Rate: 9600 19200 38400 57600 115200 230400
	Stop bit: 1 2
Return Code	CMD_SUCCESS
	INVALID_BAUD_RATE
	INVALID_STOP_BIT
	PARAM_ERROR
Description	This command is used to change the baud rate. The new baud rate is effective after the command handler sends the CMD_SUCCESS return code.
Example	"B 57600 1 <cr><lf>" sets the serial port to baud rate 57600 bps and 1 stop bit.</lf></cr>

Table 305. Correlation between possible ISP baudrates and external crystal frequency (in MHz)

ISP Baudrate .vs. External Crystal Frequency	9600	19200	38400	57600	115200	230400
10.0000	+	+	+			
11.0592	+	+		+		
12.2880	+	+	+			
14.7456	+	+	+	+	+	+
15.3600	+					
18.4320	+	+		+		
19.6608	+	+	+			
24.5760	+	+	+			
25.0000	+	+	+			

9.3 Echo <setting>

Table 306. ISP Echo command

Command	A
Input	Setting: ON = 1 OFF = 0
Return Code	CMD_SUCCESS PARAM_ERROR
Description	The default setting for echo command is ON. When ON the ISP command handler sends the received serial data back to the host.
Example	"A 0 <cr><lf>" turns echo off.</lf></cr>

9.4 Write to RAM <start address> <number of bytes>

The host should send the data only after receiving the CMD_SUCCESS return code. The host should send the check-sum after transmitting 20 UU-encoded lines. The checksum is generated by adding raw data (before UU-encoding) bytes and is reset after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. When the data fits in less then 20 UU-encoded lines then the check-sum should be of the actual number of bytes sent. The

Chapter 21: LPC21xx/22xx Flash memory controller

ISP command handler compares it with the check-sum of the received bytes. If the check-sum matches, the ISP command handler responds with "OK<CR><LF>" to continue further transmission. If the check-sum does not match, the ISP command handler responds with "RESEND<CR><LF>". In response the host should retransmit the bytes.

Table 307. ISP Write to RAM command

Command	W
Input	Start Address: RAM address where data bytes are to be written. This address should be a word boundary.
	Number of Bytes: Number of bytes to be written. Count should be a multiple of 4
Return Code	CMD_SUCCESS
	ADDR_ERROR (Address not on word boundary)
	ADDR_NOT_MAPPED
	COUNT_ERROR (Byte count is not multiple of 4)
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to download data to RAM. Data should be in UU-encoded format. This command is blocked when code read protection is enabled.
Example	"W 1073742336 4 <cr><lf>" writes 4 bytes of data to address 0x4000 0200.</lf></cr>

9.5 Read memory <address> <no. of bytes>

The data stream is followed by the command success return code. The check-sum is sent after transmitting 20 UU-encoded lines. The checksum is generated by adding raw data (before UU-encoding) bytes and is reset after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. When the data fits in less then 20 UU-encoded lines then the check-sum is of actual number of bytes sent. The host should compare it with the checksum of the received bytes. If the check-sum matches then the host should respond with "OK<CR><LF>" to continue further transmission. If the check-sum does not match then the host should respond with "RESEND<CR><LF>". In response the ISP command handler sends the data again.

Table 308. ISP Read memory command

Command	R
Input	Start Address: Address from where data bytes are to be read. This address should be a word boundary.
	Number of Bytes: Number of bytes to be read. Count should be a multiple of 4.
Return Code	CMD_SUCCESS followed by <actual (uu-encoded)="" data=""> </actual>
	ADDR_ERROR (Address not on word boundary)
	ADDR_NOT_MAPPED
	COUNT_ERROR (Byte count is not a multiple of 4)
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to read data from RAM or Flash memory. This command is blocked when code read protection is enabled.
Example	"R 1073741824 4 <cr><lf>" reads 4 bytes of data from address 0x4000 0000.</lf></cr>

Chapter 21: LPC21xx/22xx Flash memory controller

9.6 Prepare sector(s) for write operation <start sector number> <end sector number>

This command makes flash write/erase operation a two step process.

Table 309. ISP Prepare sector(s) for write operation command

"Erase Sector(s)" command causes relevant sectors to be protected again. The		• • • • • • • • • • • • • • • • • • • •
End Sector Number: Should be greater than or equal to start sector number. Return Code	Command	P
Return Code CMD_SUCCESS BUSY INVALID_SECTOR PARAM_ERROR Description This command must be executed before executing "Copy RAM to Flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" o "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.	Input	Start Sector Number
BUSY INVALID_SECTOR PARAM_ERROR Description This command must be executed before executing "Copy RAM to Flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" o "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.		End Sector Number: Should be greater than or equal to start sector number.
INVALID_SECTOR PARAM_ERROR Description This command must be executed before executing "Copy RAM to Flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" o "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.	Return Code	CMD_SUCCESS
Description This command must be executed before executing "Copy RAM to Flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" o "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.		BUSY
Description This command must be executed before executing "Copy RAM to Flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" o "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.		INVALID_SECTOR
"Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" o "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.		PARAM_ERROR
Example "P 0 0 <cr><lf>" prepares the flash sector 0.</lf></cr>	Description	"Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" or "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use
	Example	"P 0 0 <cr><lf>" prepares the flash sector 0.</lf></cr>

9.7 Copy RAM to Flash <Flash address> <RAM address> <no of bytes>

Table 310. ISP Copy command

Command	C
Input	Flash Address(DST): Destination Flash address where data bytes are to be written. The destination address should be a 256 byte boundary.
	RAM Address(SRC): Source RAM address from where data bytes are to be read
	Number of Bytes: Number of bytes to be written. Should be 256 512 1024 4096.
Return Code	CMD_SUCCESS
	SRC_ADDR_ERROR (Address not on word boundary)
	DST_ADDR_ERROR (Address not on correct boundary)
	SRC_ADDR_NOT_MAPPED
	DST_ADDR_NOT_MAPPED
	COUNT_ERROR (Byte count is not 256 512 1024 4096)
	SECTOR_NOT_PREPARED_FOR WRITE_OPERATION
	BUSY
	CMD_LOCKED
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to program the flash memory. The "Prepare Sector(s) for Write Operation" command should precede this command. The affected sectors ar automatically protected again once the copy command is successfully executed. The boot block cannot be written by this command. This command is blocked whe code read protection is enabled.
Example	"C 0 1073774592 512 <cr><lf>" copies 512 bytes from the RAM address 0x4000 8000 to the flash address 0.</lf></cr>

Chapter 21: LPC21xx/22xx Flash memory controller

9.8 Go <address> <mode>

Table 311. ISP Go command

Command	G
Input	Address: Flash or RAM address from which the code execution is to be started. This address should be on a word boundary.
	Mode: T (Execute program in Thumb Mode) A (Execute program in ARM mode).
Return Code	CMD_SUCCESS
	ADDR_ERROR
	ADDR_NOT_MAPPED
	CMD_LOCKED
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to execute a program residing in RAM or Flash memory. It may not be possible to return to the ISP command handler once this command is successfully executed. This command is blocked when code read protection is enabled.
Example	"G 0 A <cr><lf>" branches to address 0x0000 0000 in ARM mode.</lf></cr>

9.9 Erase sector(s) <start sector number> <end sector number>

Table 312. ISP Erase sector command

Command	E	
Input	Start Sector Number	
	End Sector Number: Should be greater than or equal to start sector number.	
Return Code	CMD_SUCCESS	
	BUSY	
	INVALID_SECTOR	
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION	
	CMD_LOCKED	
	PARAM_ERROR	
	CODE_READ_PROTECTION_ENABLED	
Description	This command is used to erase one or more sector(s) of on-chip Flash memory. The boot block can not be erased using this command. This command only allows erasure of all user sectors when the code read protection is enabled.	
Example	"E 2 3 <cr><lf>" erases the flash sectors 2 and 3.</lf></cr>	

Chapter 21: LPC21xx/22xx Flash memory controller

9.10 Blank check sector(s) < sector number > < end sector number >

Table 313. ISP Blank check sector command

Command	I	
Input	Start Sector Number:	
	End Sector Number: Should be greater than or equal to start sector number.	
Return Code	CMD_SUCCESS	
	SECTOR_NOT_BLANK (followed by <offset blank="" first="" location="" non="" of="" the="" word=""> <contents blank="" location="" non="" of="" word="">) </contents></offset>	
	INVALID_SECTOR	
	PARAM_ERROR	
Description	This command is used to blank check one or more sectors of on-chip Flash memory.	
	Blank check on sector 0 always fails as first 64 bytes are re-mapped to flash boot block.	
Example	"I 2 3 <cr><lf>" blank checks the flash sectors 2 and 3.</lf></cr>	

9.11 Read Part Identification number

Table 314. ISP Read Part Identification number command

Command	J
Input	None.
Return Code	CMD_SUCCESS followed by part identification number in ASCII (see Table 21–315).
Description	This command is used to read the part identification number.

Table 315. LPC21xx/22xx Part identification numbers

Device	ASCII/dec coding	Hex coding
LPC2109	33685249	0x0201 FF01
LPC2119	33685266	0x0201 FF12
LPC2129	33685267	0x0201 FF13
LPC2114	16908050	0x0101 FF12
LPC2124	16908051	0x0101 FF13
LPC2194	50462483	0x0301 FF13
LPC2292	67239699	0x0401 FF13
LPC2294	84016915	0x0501 FF13

9.12 Read Boot code version number

Table 316. ISP Read Boot code version number command

Command	К
Input	None
Return Code	CMD_SUCCESS followed by 2 bytes of boot code version number in ASCII format. It is to be interpreted as yte1(Major)>. byte0(Minor)>.
Description	This command is used to read the boot code version number.

Chapter 21: LPC21xx/22xx Flash memory controller

9.13 Compare <address1> <address2> <no of bytes>

Table 317. ISP Compare command

Command	M	
Input	Address1 (DST): Starting Flash or RAM address of data bytes to be compared. This address should be a word boundary.	
	Address2 (SRC): Starting Flash or RAM address of data bytes to be compared. This address should be a word boundary.	
	Number of Bytes: Number of bytes to be compared; should be a multiple of 4.	
Return Code	CMD_SUCCESS (Source and destination data are equal)	
	COMPARE_ERROR (Followed by the offset of first mismatch)	
	COUNT_ERROR (Byte count is not a multiple of 4)	
	ADDR_ERROR	
	ADDR_NOT_MAPPED	
	PARAM_ERROR	
Description	This command is used to compare the memory contents at two locations.	
	Compare result may not be correct when source or destination address contains any of the first 64 bytes starting from address zero. First 64 bytes are re-mapped to flash boot sector	
Example	"M 8192 1073741824 4 <cr><lf>" compares 4 bytes from the RAM address 0x4000 0000 to the 4 bytes from the flash address 0x2000.</lf></cr>	

9.14 ISP Return codes

Table 318. ISP Return codes Summary

Return Code	Mnemonic	Description
0	CMD_SUCCESS	Command is executed successfully. Sent by ISP handler only when command given by the host has been completely and successfully executed.
1	INVALID_COMMAND	Invalid command.
2	SRC_ADDR_ERROR	Source address is not on word boundary.
3	DST_ADDR_ERROR	Destination address is not on a correct boundary.
4	SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken in to consideration where applicable.
5	DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken in to consideration where applicable.
6	COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
7	INVALID_SECTOR	Sector number is invalid or end sector number is greater than start sector number.
8	SECTOR_NOT_BLANK	Sector is not blank.
9	SECTOR_NOT_PREPARED_FOR_ WRITE_OPERATION	Command to prepare sector for write operation was not executed.
10	COMPARE_ERROR	Source and destination data not equal.
11	BUSY	Flash programming hardware interface is busy.

Chapter 21: LPC21xx/22xx Flash memory controller

Table 318. ISP Return codes Summary

Return Code	Mnemonic	Description
12	PARAM_ERROR	Insufficient number of parameters or invalid parameter.
13	ADDR_ERROR	Address is not on word boundary.
14	ADDR_NOT_MAPPED	Address is not mapped in the memory map. Count value is taken in to consideration where applicable.
15	CMD_LOCKED	Command is locked.
16	INVALID_CODE	Unlock code is invalid.
17	INVALID_BAUD_RATE	Invalid baud rate setting.
18	INVALID_STOP_BIT	Invalid stop bit setting.
19	CODE_READ_PROTECTION_ ENABLED	Code read protection enabled.

10. IAP commands

For in application programming the IAP routine should be called with a word pointer in register r0 pointing to memory (RAM) containing command code and parameters. Result of the IAP command is returned in the result table pointed to by register r1. The user can reuse the command table for result by passing the same pointer in registers r0 and r1. The parameter table should be big enough to hold all the results in case if number of results are more than number of parameters. Parameter passing is illustrated in the Figure 21-74. The number of parameters and results vary according to the IAP command. The maximum number of parameters is 5, passed to the "Copy RAM to FLASH" command. The maximum number of results is 2, returned by the "Blankcheck sector(s)" command. The command handler sends the status code INVALID_COMMAND when an undefined command is received. The IAP routine resides at 0x7FFF FFF0 location and it is thumb code.

The IAP function could be called in the following way using C.

Define the IAP location entry point. Since the 0th bit of the IAP location is set there will be a change to Thumb instruction set when the program counter branches to this address.

```
#define IAP_LOCATION 0x7fffffff1
```

Define data structure or pointers to pass IAP command table and result table to the IAP function:

```
unsigned long command[5];
unsigned long result[3];

or

unsigned long * command;
unsigned long * result;
command=(unsigned long *) 0x......
result= (unsigned long *) 0x.....
```

Define pointer to function type, which takes two parameters and returns void. Note the IAP returns the result with the base address of the table residing in R1.

Chapter 21: LPC21xx/22xx Flash memory controller

```
typedef void (*IAP)(unsigned int [],unsigned int[]);
IAP iap_entry;
```

Setting function pointer:

```
iap_entry=(IAP) IAP_LOCATION;
```

Whenever you wish to call IAP you could use the following statement.

```
iap_entry (command, result);
```

The IAP call could be simplified further by using the symbol definition file feature supported by ARM Linker in ADS (ARM Developer Suite). You could also call the IAP routine using assembly code.

The following symbol definitions can be used to link IAP routine and user application:

```
#<SYMDEFS># ARM Linker, ADS1.2 [Build 826]: Last Updated: Wed May 08 16:12:23 2002
0x7fffff90 T rm_init_entry
0x7fffffa0 A rm_undef_handler
0x7fffffb0 A rm_prefetchabort_handler
0x7fffffc0 A rm_dataabort_handler
0x7fffffd0 A rm_irqhandler
0x7fffffe0 A rm_irqhandler
0x7ffffffo T iap_entry
```


As per the ARM specification (The ARM Thumb Procedure Call Standard SWS ESPC 0002 A-05) up to 4 parameters can be passed in the r0, r1, r2 and r3 registers respectively. Additional parameters are passed on the stack. Up to 4 parameters can be returned in the r0, r1, r2 and r3 registers respectively. Additional parameters are returned indirectly via memory. Some of the IAP calls require more than 4 parameters. If the ARM suggested scheme is used for the parameter passing/returning then it might create problems due to difference in the C compiler implementation from different vendors. The suggested parameter passing scheme reduces such risk.

The flash memory is not accessible during a write or erase operation. IAP commands, which results in a flash write/erase operation, use 32 bytes of space in the top portion of the on-chip RAM for execution. The user program should not use this space if IAP flash programming is permitted in the application.

Table 319. IAP command summary

IAP Command	Command Code	Described in
Prepare sector(s) for write operation	50 ₁₀	<u>Table 21–320</u>
Copy RAM to Flash	51 ₁₀	Table 21–321
Erase sector(s)	52 ₁₀	Table 21–322
Blank check sector(s)	53 ₁₀	Table 21–323
Read Part ID	54 ₁₀	Table 21–324
Read Boot code version	55 ₁₀	Table 21–325
Compare	56 ₁₀	<u>Table 21–326</u>

Chapter 21: LPC21xx/22xx Flash memory controller

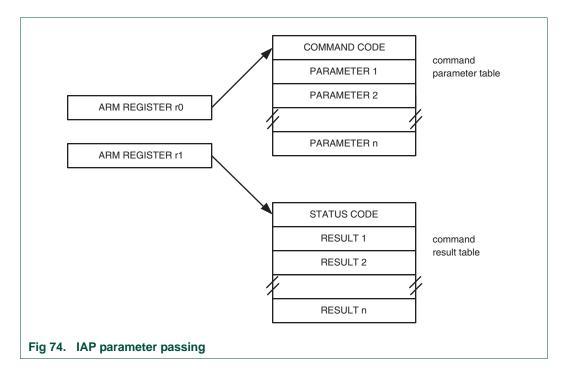

10.1 Prepare sector(s) for write operation

This command makes flash write/erase operation a two step process.

Table 320. IAP Prepare sector(s) for write operation command

Command	Prepare sector(s) for write operation	
Input	Command code: 50	
	Param0: Start Sector Number	
	Param1: End Sector Number (should be greater than or equal to start sector number).	
Return Code	CMD_SUCCESS	
	BUSY	
	INVALID_SECTOR	
Result	None	
Description	This command must be executed before executing "Copy RAM to Flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" or "Erase Sector(s)" command causes relevant sectors to be protected again. The boot sector can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.	

Chapter 21: LPC21xx/22xx Flash memory controller

10.2 Copy RAM to Flash

Table 321. IAP Copy RAM to Flash command

Command	Copy RAM to Flash	
Input	Command code: 51	
	Param0(DST): Destination Flash address where data bytes are to be written. This address should be a 256 byte boundary.	
	Param1(SRC): Source RAM address from which data bytes are to be read. This address should be a word boundary.	
	Param2: Number of bytes to be written. Should be 256 512 1024 4096.	
	Param3: System Clock Frequency (CCLK) in kHz.	
Return Code	CMD_SUCCESS	
	SRC_ADDR_ERROR (Address not a word boundary)	
	DST_ADDR_ERROR (Address not on correct boundary)	
	SRC_ADDR_NOT_MAPPED	
	DST_ADDR_NOT_MAPPED	
	COUNT_ERROR (Byte count is not 256 512 1024 4096)	
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION	
	BUSY	
Result	None	
Description	This command is used to program the flash memory. The affected sectors should be prepared first by calling "Prepare Sector for Write Operation" command. The affected sectors are automatically protected again once the copy command is successfully executed. The boot sector can not be written by this command.	

10.3 Erase sector(s)

Table 322. IAP Erase sector(s) command

Command	Erase Sector(s)
Input	Command code: 52
	Param0: Start Sector Number
	Param1: End Sector Number (should be greater than or equal to start sector number).
	Param2: System Clock Frequency (CCLK) in kHz.
Return Code	CMD_SUCCESS
	BUSY
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION
	INVALID_SECTOR
Result	None
Description	This command is used to erase a sector or multiple sectors of on-chip Flash memory. The boot sector can not be erased by this command. To erase a single sector use the same "Start" and "End" sector numbers.

Chapter 21: LPC21xx/22xx Flash memory controller

10.4 Blank check sector(s)

Table 323. IAP Blank check sector(s) command

Command	Blank check sector(s)
Input	Command code: 53
	Param0: Start Sector Number
	Param1: End Sector Number (should be greater than or equal to start sector number).
Return Code	CMD_SUCCESS
	BUSY
	SECTOR_NOT_BLANK
	INVALID_SECTOR
Result	Result0: Offset of the first non blank word location if the Status Code is SECTOR_NOT_BLANK.
	Result1: Contents of non blank word location.
Description	This command is used to blank check a sector or multiple sectors of on-chip Flash memory. To blank check a single sector use the same "Start" and "End" sector numbers.

10.5 Read Part Identification number

Table 324. IAP Read Part Identification command

Command	Read part identification number
Input	Command code: 54
	Parameters: None
Return Code	CMD_SUCCESS
Result	Result0: Part Identification Number (see <u>Table 21–315 "LPC21xx/22xx Part</u> identification numbers" on page 326 for details)
Description	This command is used to read the part identification number.

10.6 Read Boot code version number

Table 325. IAP Read Boot code version number command

Command	Read boot code version number
Input	Command code: 55
	Parameters: None
Return Code	CMD_SUCCESS
Result	Result0: 2 bytes of boot code version number in ASCII format. It is to be interpreted as hyte1(Major)>. byte0(Minor)>
Description	This command is used to read the boot code version number.

Chapter 21: LPC21xx/22xx Flash memory controller

10.7 Compare <address1> <address2> <no of bytes>

Table 326. IAP Compare command

Command	Compare			
Input	Command code: 56			
	Param0(DST): Starting Flash or RAM address of data bytes to be compared. This address should be a word boundary.			
	Param1(SRC): Starting Flash or RAM address of data bytes to be compared. This address should be a word boundary.			
	Param2: Number of bytes to be compared; should be a multiple of 4.			
Return Code	CMD_SUCCESS			
	COMPARE_ERROR			
	COUNT_ERROR (Byte count is not a multiple of 4)			
	ADDR_ERROR			
	ADDR_NOT_MAPPED			
Result	Result0: Offset of the first mismatch if the Status Code is COMPARE_ERROR.			
Description	This command is used to compare the memory contents at two locations.			
	The result may not be correct when the source or destination includes any of the first 64 bytes starting from address zero. The first 64 bytes can be re-mapped to RAM.			

10.8 IAP Status codes

Table 327. IAP Status codes Summary

Status Code	Mnemonic	Description
0	CMD_SUCCESS	Command is executed successfully.
1	INVALID_COMMAND	Invalid command.
2	SRC_ADDR_ERROR	Source address is not on a word boundary.
3	DST_ADDR_ERROR	Destination address is not on a correct boundary.
4	SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken in to consideration where applicable.
5	DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken in to consideration where applicable.
6	COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
7	INVALID_SECTOR	Sector number is invalid.
8	SECTOR_NOT_BLANK	Sector is not blank.
9	SECTOR_NOT_PREPARED_ FOR_WRITE_OPERATION	Command to prepare sector for write operation was not executed.
10	COMPARE_ERROR	Source and destination data is not same.
11	BUSY	Flash programming hardware interface is busy.

Chapter 21: LPC21xx/22xx Flash memory controller

11. JTAG Flash programming interface

Debug tools can write parts of the flash image to the RAM and then execute the IAP call "Copy RAM to Flash" repeatedly with proper offset.

UM10114

Chapter 22: LPC21xx/22xx On-chip serial bootloader for LPC2210/20/90

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The on-chip serial bootloader controls the boot process for flashless LPC21xx/LPC22xx parts. Read this chapter for flashless parts

- LPC2210, LPC2210/01, LPC2220
- LPC2290, LPC2290/01

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Description

The bootloader is designed as a tool that enables the user to load system specific application for further programming of in system available off-chip Flash and/or RAM resources. The bootloader itself does not contain any external memory programming algorithms. The bootloader implemented in flashless LPC21xx/LPC22xx supports a limited set of commands dedicated to code download and its execution from on-chip RAM only. UART0 is the sole serial channel the boot loader can use for data download. Although a fractional divider is available in the UART0, it is not used by the on-chip serial bootloader.

The serial boot loader code is executed every time the part is powered on or reset occurs. The loader executes the initial portion of the ISP command handler and pin P0.14 is sampled in software. Assuming that a proper signal is present on XTAL1 pin when the rising edge on RESET pin is generated, it may take up to 3 ms before P0.14 is sampled and the decision on whether to continue with user code or ISP handler is made.

If there is no request for the ISP command handler execution (P0.14 was HIGH after a reset), the external memory bank 0 configuration register will be programmed with the requested boot memory data width (8, 16 or 32 bit wide, based on BOOT pins at reset, see Section 8-6.5). The interrupt vectors will be mapped from the external memory bank 0, and code residing in the external boot memory bank 0 will be executed.

A LOW level after reset at the P0.14 pin is considered as the external hardware request to start the ISP command handler.

If P0.14 is sampled LOW and the watchdog overflow flag is not set, the part will continue with executing ISP handler code, which starts with the auto-bauding procedure.

If P0.14 is sampled LOW and the watchdog overflow flag is set, the external hardware request to start the ISP command handler is ignored, and external code is executed as in case when P0.14 is HIGH after reset.

Pin P0.14 that is used as hardware request for ISP requires special attention. Since P0.14 is in high impedance mode after reset, it is important that the user provides external hardware (a pull-up resistor or other device) to put the pin in a defined state. Otherwise unintended entry into ISP mode may occur.


Chapter 22: LPC21xx/22xx On-chip serial bootloader for

The boot loader flow-chart is shown in Figure 22-76.

3. Memory map after reset

The boot loader resides in an on-chip ROM sector of 8 kB in size. After any reset this entire boot sector is mapped and is also visible in the memory region starting from the address 0x7FFF E000. The serial boot loader is designed to run from this memory area and it uses parts of the on-chip RAM. The RAM usage is described later in this chapter. In addition to the above mentioned remapping, the bottom 64 bytes of the ROM boot sector are also visible in the memory region starting from the address 0x0000 0000, i.e. the interrupt vectors of the part are mapped to those from the ROM boot sector. Consequently, the reset vector contains a jump instruction to the entry point of the serial boot loader software.

However, if the ISP handler was not invoked by P0.14, the interrupt vectors residing in the boot sector of the off-chip memory (bank 0) will become active and the bottom 64 bytes of the external boot sector will become visible in the memory region starting from the address 0x0000 0000.

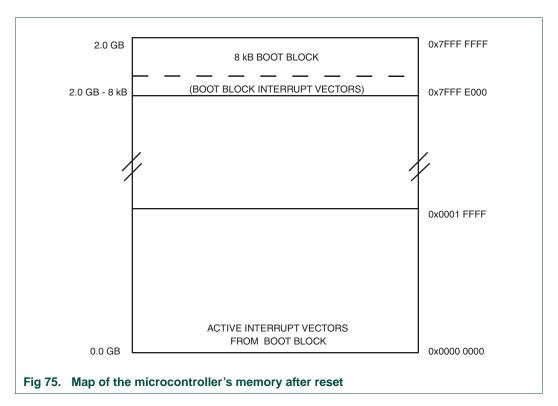

If ISP handler was requested via P0.14, the auto-baud routine synchronizes with the host via serial port 0. The host should send a synchronization character('?') and wait for a response. The host side serial port settings should be 8 data bits, 1 stop bit and no parity. The auto-baud routine measures the bit time of the received synchronization character in terms of its own frequency and programs the baud rate generator of the serial port. It also sends an ASCII string ("Synchronized<CR><LF>") to the host. In response to this the host should send the received string ("Synchronized<CR><LF>"). The auto-baud routine looks at the received characters to verify synchronization. If synchronization is verified then "OK<CR><LF>" string is sent to the host. The host should respond by sending the crystal

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

frequency (in kHz) at which the part is running. For example if the part is running at 10 MHz a valid response from the host should be "10000<CR><LF>". "OK<CR><LF>" string is sent to the host after receiving the crystal frequency. If synchronization is not verified then the auto-baud routine waits again for a synchronization character. For auto-baud to work correctly, the crystal frequency should be greater than or equal to 10 MHz. The on-chip PLL is not used by the boot code.

Once the crystal frequency is received the part is initialized and the ISP command handler is invoked. For safety reasons an "Unlock" command is required before executing the "Go" command. The rest of the commands can be executed without the unlock command. The "Unlock" command is required to be executed once per ISP session. Unlock command is explained in the "ISP Commands" section.

4. Communication protocol

All ISP commands should be sent as single ASCII strings. Strings should be terminated with Carriage Return (CR) and/or Line Feed (LF) control characters. Extra <CR> and <LF> characters are ignored. All ISP responses are sent as <CR><LF> terminated ASCII strings. Data is sent and received in UU-encoded format.

5. ISP command format

"Command Parameter_0 Parameter_1 ... Parameter_n<CR><LF>" "Data" (Data only for Write commands).

6. ISP response format

"Return_Code<CR><LF>Response_0<CR><LF>Response_1<CR><LF>...
Response_n<CR><LF>" "Data" (Data only for Read commands).

7. ISP data format

The data stream is in UU-encode format. The UU-encode algorithm converts 3 bytes of binary data in to 4 bytes of printable ASCII character set. It is more efficient than Hex format, which converts 1 byte of binary data in to 2 bytes of ASCII hex. The sender should send the check-sum after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters (bytes)) i.e. it can hold 45 data bytes. The receiver should compare it with the check-sum of the received bytes. If the check-sum matches then the receiver should respond with "OK<CR><LF>" to continue further transmission. If the check-sum does not match the receiver should respond with "RESEND<CR><LF>". In response the sender should retransmit the bytes.

A description of UU-encode is available at wotsit.org.

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

8. ISP flow control

A software XON/XOFF flow control scheme is used to prevent data loss due to buffer overrun. When the data arrives rapidly, the ASCII control character DC3 (stop) is sent to stop the flow of data. Data flow is resumed by sending the ASCII control character DC1 (start). The host should also support the same flow control scheme.

9. ISP command abort

Commands can be aborted by sending the ASCII control character "ESC". This feature is not documented as a command under "ISP Commands" section. Once the escape code is received the ISP command handler waits for a new command.

10. Interrupts during ISP

The boot block interrupt vectors located in the ROM boot sector are active after any reset. For details on mapping interrupt vectors see Table 2–20.

11. Interrupts during IAP

IAP calls can be interrupted and an adequate interrupt service routine can be executed if interrupts are enabled. For details on how the address for interrupt service routine will be determined see Table 2–20. The IAP code itself does not use or disable interrupts.

12. RAM used by ISP command handler

ISP commands use on-chip RAM from 0x4000 0120 to 0x4000 01FF. The user could use this area, but the contents may be lost upon reset. The ROM boot loader also uses the top 32 bytes of on-chip RAM. The stack is located at RAM top - 32. The maximum stack usage is 256 bytes and it grows downwards.

13. RAM used by IAP command handler


IAP commands use top 32 bytes of on-chip RAM. The maximum stack usage in the user allocated stack space is 128 bytes and it grows downwards.

14. RAM used by RealMonitor

The RealMonitor uses on-chip RAM from 0x4000 0040 to 0x4000 011F. The user could use this area if RealMonitor based debug is not required. The serial boot loader does not initialize the stack for the RealMonitor.

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

15. Boot process flowchart

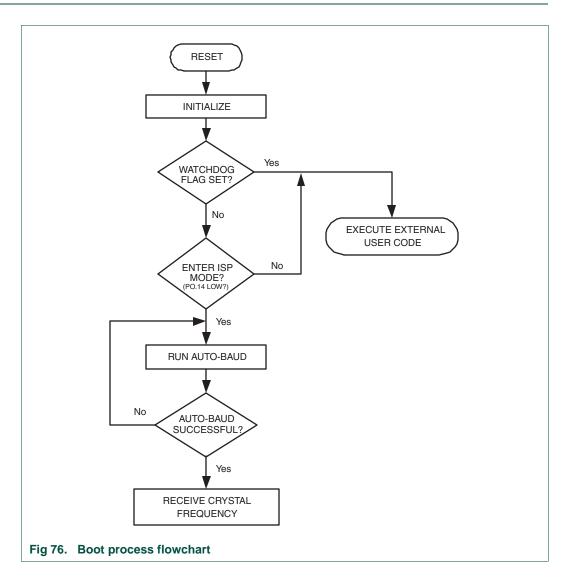

16. ISP commands

The following commands are accepted by the ISP command handler. Detailed return codes are supported for each command. The command handler sends the return code INVALID_COMMAND when an undefined command is received. Commands and return codes are in ASCII format.

CMD_SUCCESS is sent by ISP command handler only when received ISP command has been completely executed and the new ISP command can be given by the host. Exceptions from this rule are "Set Baud Rate", "Write to RAM", "Read Memory", and "Go" commands.

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

Table 328. ISP Command Summary

ISP Command	Usage	Described in
Unlock	U <unlock code=""></unlock>	Table 22–329
Set Baud Rate	B <baud rate=""> <stop bit=""></stop></baud>	Table 22–330
Echo	A <setting></setting>	Table 22–332
Write to RAM	W <start address=""> <number bytes="" of=""></number></start>	Table 22–333
Read Memory	R <address> <number bytes="" of=""></number></address>	Table 22–334
Go	G <address> <mode></mode></address>	Table 22–335
Read Part ID	J	Table 22–336
Read Boot code version	К	Table 22–338
Compare	M <address1> <address2> <number bytes="" of=""></number></address2></address1>	Table 22–339

16.1 Unlock < Unlock code>

Table 329. ISP Unlock command description

Command	U
Input	Unlock code: 23130
Return Code	CMD_SUCCESS INVALID_CODE PARAM_ERROR
Description	This command is used to unlock Go command.
Example	"U 23130 <cr><lf>" unlocks the Go command.</lf></cr>

16.2 Set Baud Rate <Baud Rate> <stop bit>

Table 330. ISP Set Baud Rate command description

Command	В
Input	Baud Rate: 9600 19200 38400 57600 115200 230400 Stop bit: 1 2
Return Code	CMD_SUCCESS INVALID_BAUD_RATE INVALID_STOP_BIT PARAM_ERROR
Description	This command is used to change the baud rate. The new baud rate is effective after the command handler sends the CMD_SUCCESS return code.
Example	"B 57600 1 <cr><lf>" sets the serial port to baud rate 57600 bps and 1 stop bit.</lf></cr>

Table 331. Correlation between possible ISP baudrates and external crystal frequency (in MHz)

ISP Baudrate .vs. external crystal frequency	9600	19200	38400	57600	115200	230400
10.0000	+	+	+			
11.0592	+	+		+		
12.2880	+	+	+			
14.7456	+	+	+	+	+	+
15.3600	+					

UM10114_3 © NXP B.V. 2008. All rights reserved.

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

Table 331. Correlation between possible ISP baudrates and external crystal frequency (in MHz)

ISP Baudrate .vs. external crystal frequency	9600	19200	38400	57600	115200	230400
18.4320	+	+		+		
19.6608	+	+	+			
24.5760	+	+	+			
25.0000	+	+	+			

16.3 Echo <setting>

Table 332. ISP Echo command description

Command	A
Input	Setting: ON = 1 OFF = 0
Return Code	CMD_SUCCESS PARAM_ERROR
Description	The default setting for echo command is ON. When ON the ISP command handler sends the received serial data back to the host.
Example	"A 0 <cr><lf>" turns echo off.</lf></cr>

16.4 Write to RAM <start address> <number of bytes>

The host should send the data only after receiving the CMD_SUCCESS return code. The host should send the check-sum after transmitting 20 UU-encoded lines. The checksum is generated by adding raw data (before UU-encoding) bytes and is reset after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters (bytes)) i.e. it can hold 45 data bytes. When the data fits in less then 20 UU-encoded lines then the check-sum should be of actual number of bytes sent. The ISP command handler compares it with the check-sum of the received bytes. If the check-sum matches then the ISP command handler responds with "OK<CR><LF>" to continue further transmission. If the check-sum does not match then the ISP command handler responds with "RESEND<CR><LF>". In response the host should retransmit the bytes.

Table 333. ISP Write to RAM command description

Command	W	
Input	Start Address: RAM address (on-chip only) where data bytes are to be written. This address should be a word boundary. Number of bytes: Number of bytes to be written. Count should be a multiple of 4.	
Return Code	CMD_SUCCESS ADDR_ERROR (Address not a word boundary) ADDR_NOT_MAPPED COUNT_ERROR (Byte count is not multiple of 4) PARAM_ERROR	
Description	This command is used to download data to RAM. The data should be in UU-encoded format.	
Example	"W 10737442336 4 <cr><lf>" writes 4 bytes of data to address 0x4000 0200.</lf></cr>	

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

16.5 Read Memory <address> <number of bytes>

The data stream is followed by the command success return code. The check-sum is sent after transmitting 20 UU-encoded lines. The checksum is generated by adding raw data (before UU-encoding) bytes and is reset after transmitting 20 UUencoded lines. The length of any UU-encoded line should not exceed 61 characters (bytes) i.e. it can hold 45 data bytes. When the data fits in less then 20 UU-encoded lines then the check-sum is of actual number of bytes sent. The host should compare it with the check-sum of the received bytes. If the check-sum matches then the host should respond with "OK<CR><LF>" to continue further transmission. If the check-sum does not match then the host should respond with "RESEND<CR><LF>". In response the ISP command handler sends the data again.

Table 334. ISP Read Memory command description

Command	R	
Input	Start Address: Address (on or off-chip) where data bytes are to be read. This address should be a word boundary. Number of bytes: Number of bytes to be read. Count should be a multiple of 4.	
Return Code	CMD_SUCCESS (followed by <actual (uu-encoded)="" data=""> ADDR_ERROR (Address not on word boundary) ADDR_NOT_MAPPED COUNT_ERROR (Byte count is not multiple of 4) PARAM_ERROR</actual>	
Description	This command is used to read data from on or off-chip memory.	
Example	"R 1073741824 4 <cr><lf>" reads 4 bytes of data from address 0x4000 0000.</lf></cr>	

16.6 Go <address> <Mode>

Table 335. ISP Go command description

Command	G
Input	Address: RAM address (on-chip only) from which the code execution is to be started. This address should be on a word boundary. Mode: T (Execute program in Thumb Mode) A (Execute program in ARM Mode)
Return Code	CMD_SUCCESS ADDR_ERROR ADDR_NOT_MAPPED CMD_LOCKED PARAM_ERROR
Description	This command is used to execute (call) a program residing in RAM (on-chip only). It may not be possible to return to ISP command handler once this command is successfully executed. If executed code has ended with return instruction, ISP handler will resume with execution.
Example	"G 1073742336 A <cr><lf>" branches to address 0x4000 0200 in ARM Mode.</lf></cr>

16.7 Read Part ID

Table 336. ISP Read Part ID command description

Command	J
Input	None

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

Table 336. ISP Read Part ID command description

Command	J
Return Code	CMD_SUCCESS followed by part identification number in ASCII format.
Description	This command is used to read the part identification number.
Example	"J <cr><lf>"</lf></cr>

Table 337. LPC22xx Part identification numbers

Device	ASCII/dec coding	Hex coding
LPC2210	50462482	0x0301 FF12
LPC2210/01	50462482	0x0301 FF12
LPC2220 Rev -	50462482	0x0301 FF12
LPC2220 Rev B	50462482	0x0301 FF12
LPC2220 Rev C	50262514	0x0301 FF32
LPC2290	50462482	0x0301 FF12
LPC2290/01 Rev B	50262514	0x0301 FF12
LPC2290/01 Rev C	50262514	0x0301 FF32

16.8 Read Boot code version

Table 338. ISP Read Boot Code version command description

Command	К
Input	None
Return Code	CMD_SUCCESS followed by 2 bytes of boot code version number in ASCII format. It is to be interpreted as byte1(Major)>. byte0(Minor)>
Description	This command is used to read the boot code version number.
Example	"K <cr><lf>"</lf></cr>

16.9 Compare <address1> <address2> <number of bytes>

Table 339. ISP Compare command description

Command	M
Input	Address1(DST): Starting Address (on or off-chip) from where data bytes are to be compared. This address should be word boundary. Address2(SRC): Starting Address (on or off-chip) from where data bytes are to be compared. This address should be word boundary.
	Number of Bytes: Number of bytes to be compared. Count should be a multiple of 4.
Return Code	CMD_SUCCESS (Source and destination data is same) COMPARE_ERROR (Followed by the offset of first mismatch) COUNT_ERROR (Byte count is not multiple of 4) ADDR_ERROR ADDR_NOT_MAPPED PARAM_ERROR

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

Table 339. ISP Compare command description

Command	M	
Description	This command is used to compare the memory contents (on or off-chip) at two locations.	
Example	"M 1073742336 1073741824 4 <cr><lf>" compares 4 bytes from the on-chip RAM address 0x4000 0000 to the 4 bytes from the on-chip RAM address 0x4000 0200.</lf></cr>	
	Compare result may not be correct when source or destination address contains any of the first 64 bytes starting from address zero. After any reset the first 64 bytes are re-mapped to on-chip ROM boot sector.	

16.10 ISP Return Codes Summary

Table 340. ISP Return Codes Summary

CMD_SUCCESS Command is executed successfully. Sent by handler only when command given by the handler only when completely and successfully executed in Invalid command. SRC_ADDR_ERROR Destination address is not on a correct bour Count value is taken in to consideration when applicable. Destination address is not mapped in the mapped in the mapped in the mapped in the mapped given applicable. COUNT_ERROR Byte count is not multiple of 4 or is not a pervalue. COMPARE_ERROR Source and destination data not equal. BUSY Flash programming hardware interface is by Insufficient number of parameters or invalid parameter. ADDR_ERROR Address is not on word boundary. Address is not mapped in the memory m	
SRC_ADDR_ERROR Destination address is not on word boundary. SRC_ADDR_ERROR Destination address is not on a correct boundary. SRC_ADDR_NOT_MAPPED Source address is not mapped in the memory Count value is taken in to consideration where applicable. Destination address is not mapped in the ma	ost has
Destination address is not on a correct bount of the service of th	
SRC_ADDR_NOT_MAPPED Source address is not mapped in the memory Count value is taken in to consideration who applicable. DST_ADDR_NOT_MAPPED Destination address is not mapped in the m map. Count value is taken in to consideration where applicable. COUNT_ERROR Byte count is not multiple of 4 or is not a pervalue. COMPARE_ERROR Source and destination data not equal. BUSY Flash programming hardware interface is be linsufficient number of parameters or invalid parameter. ADDR_ERROR Address is not on word boundary. Address is not mapped in the memory map.	
Count value is taken in to consideration who applicable. DST_ADDR_NOT_MAPPED Destination address is not mapped in the map. Count value is taken in to consideration where applicable. COUNT_ERROR Byte count is not multiple of 4 or is not a pervalue. COMPARE_ERROR Source and destination data not equal. BUSY Flash programming hardware interface is been longered. PARAM_ERROR Insufficient number of parameters or invalid parameter. ADDR_ERROR Address is not on word boundary. Address is not mapped in the memory map.	ndary.
map. Count value is taken in to consideration where applicable. 6 COUNT_ERROR Byte count is not multiple of 4 or is not a pervalue. 10 COMPARE_ERROR Source and destination data not equal. 11 BUSY Flash programming hardware interface is but 12 PARAM_ERROR Insufficient number of parameters or invalid parameter. 13 ADDR_ERROR Address is not on word boundary. 14 ADDR_NOT_MAPPED Address is not mapped in the memory map.	
value. 10 COMPARE_ERROR Source and destination data not equal. 11 BUSY Flash programming hardware interface is but 12 PARAM_ERROR Insufficient number of parameters or invalid parameter. 13 ADDR_ERROR Address is not on word boundary. 14 ADDR_NOT_MAPPED Address is not mapped in the memory map.	•
11 BUSY Flash programming hardware interface is but 12 PARAM_ERROR Insufficient number of parameters or invalid parameter. 13 ADDR_ERROR Address is not on word boundary. 14 ADDR_NOT_MAPPED Address is not mapped in the memory map.	mitted
12 PARAM_ERROR Insufficient number of parameters or invalid parameter. 13 ADDR_ERROR Address is not on word boundary. 14 ADDR_NOT_MAPPED Address is not mapped in the memory map.	
parameter. 13 ADDR_ERROR Address is not on word boundary. 14 ADDR_NOT_MAPPED Address is not mapped in the memory map.	ısy.
14 ADDR_NOT_MAPPED Address is not mapped in the memory map.	
15 CMD_LOCKED Command is locked.	
16 INVALID_CODE Unlock code is invalid.	
17 INVALID_BAUD_RATE Invalid baud rate setting.	
18 INVALID_STOP_BIT Invalid stop bit setting.	

17. IAP Commands

For in application programming the IAP routine should be called with a word pointer in register r0 pointing to memory (RAM) containing command code and parameters. Result of the IAP command is returned in the result table pointed to by register r1. The user can reuse the command table for result by passing the same pointer in registers r0 and r1. The

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

parameter table should be big enough to hold all the results in case if number of results are more than number of parameters. Parameter passing is illustrated in Figure 22–77. The number of parameters and results vary according to the IAP command. The maximum number of parameters is 3, passed to the "Compare" command. The maximum number of results is 1, returned in case of every of three available IAP commands. The command handler sends the status code INVALID_COMMAND when an undefined command is received. The IAP routine resides at 0x7FFF FFF0 location and it is thumb code.

The IAP function could be called in the following way using C.

Define the IAP location entry point. Since the 0th bit of the IAP location is set there will be a change to Thumb instruction set when the program counter branches to this address.

```
#define IAP LOCATION 0x7ffffff1
```

Define data or pointers to pass IAP command table and result table to the IAP function

```
unsigned long command[5];
unsigned long result[2];

or

unsigned long * command;
unsigned long * result;
command=(unsigned long *) 0x......
result= (unsigned long *) 0x.....
```

Define pointer to function type, which takes two parameters and returns void. Note the IAP returns the result with the base address of the table residing in R1.

```
typedef void (*IAP)(unsigned int [],unsigned int[]);
IAP iap_entry;
```

Setting function pointer

```
iap_entry=(IAP) IAP_LOCATION;
```

Whenever you wish to call IAP you could use the following statement.

```
iap_entry (command, result);
```

The IAP call could be simplified further by using the symbol definition file feature supported by ARM Linker in ADS (ARM Developer Suite). You could also call the IAP routine using assembly code.

The following symbol definitions can be used to link IAP routine and user application.


```
#<SYMDEFS># ARM Linker, ADS1.2 [Build 826]: Last Updated: Wed May 08 16:12:23 2002
0x7fffff90 T rm_init_entry
0x7fffffa0 A rm_undef_handler
0x7fffffb0 A rm_prefetchabort_handler
0x7fffffc0 A rm_dataabort_handler
0x7fffffd0 A rm_irqhandler
0x7fffffe0 A rm_irqhandler
0x7ffffff0 T iap_entry
```

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

As per the ARM specification (The ARM Thumb Procedure Call Standard SWS ESPC 0002 A-05) up to 4 parameters can be passed in the r0, r1, r2 and r3 registers respectively. Additional parameters are passed on the stack. Up to 4 parameters can be returned in the r0, r1, r2 and r3 registers respectively. Additional parameters are returned indirectly via memory. If the ARM suggested scheme is used for the parameter passing/returning then it might create problems due to difference in the C compiler implementation from different vendors. The suggested parameter passing scheme reduces such risk.

Table 341. IAP Command Summary

ISP Command	Command code	Described in
Read Part ID	54	<u>Table 22–342</u>
Read Boot code version	55	<u>Table 22–343</u>
Compare	56	Table 22–344

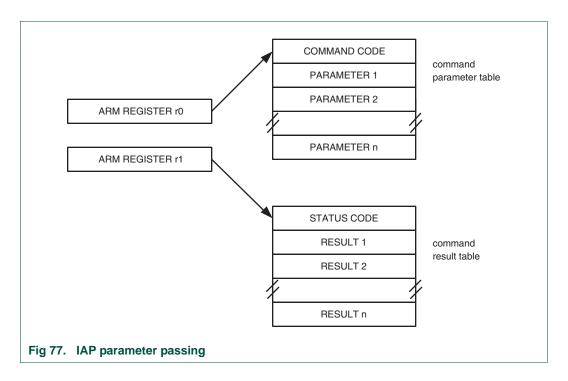

17.1 Read Part ID

Table 342. IAP Read Part ID command description

Command	Read part ID	
Input	Command Code 54 Parameters: None	
Status Code	CMD_SUCCESS	
Result	Result0: Part Identification Number	
Description	This command is used to read the part identification number.	

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

17.2 Read Boot code version

Table 343. IAP Read Boot Code version command description

Command	Read boot code version	
Input	Command Code 55 Parameters: None	
Status Code	CMD_SUCCESS	
Result	Result0: 2 bytes of boot code version number. It is to be interpreted as byte1(Major)>. byte0(Minor)>	
Description	This command is used to read the boot code version number.	

17.3 Compare

Table 344. IAP Compare command description

Command	Compare		
Input	Command Code 56 Param0(DST): Starting address (on or off-chip) from where data bytes are to be compared. This address should be a word boundary. Param1(SRC): Starting address (on or off-chip) from where data bytes are to be compared. This address should be a word boundary. Param2: Number of bytes to be compared. Count should be in multiple of 4.		
Status Code	CMD_SUCCESS COMPARE_ERROR COUNT_ERROR (Byte count is not multiple of 4) ADDR_ERROR ADDR_NOT_MAPPED		
Result	Result0: Offset of the first mismatch if the Status Code is COMPARE_ERROR.		
Description	This command is used to compare the memory contents at two locations.		
	Compare result may not be correct when source or destination address contains any of the first 64 bytes starting from address zero. After any reset the first 64 bytes are remapped to on-chip ROM boot sector.		

17.4 IAP Status Codes Summary

Table 345. IAP Status Codes Summary

Status Code	Mnemonic	Description
0	CMD_SUCCESS	Command is executed successfully.
1	INVALID_COMMAND	Invalid command.
2	SRC_ADDR_ERROR	Source address is not on a word boundary.
3	DST_ADDR_ERROR	Destination address is not on a correct boundary.
4	SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken in to consideration where applicable.
5	DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken in to consideration where applicable.

Chapter 22: LPC21xx/22xx On-chip serial bootloader for

Table 345. IAP Status Codes Summary

Status Code	Mnemonic	Description
6	COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
10	COMPARE_ERROR	Source and destination data is not same.
11	BUSY	Flash programming hardware interface is busy.

18. JTAG external memory programming interface

Debug tools can write parts of the flash image to the on-chip RAM and then execute pre-loaded application dedicated to external flash programming repeatedly with proper offset.

UM10114

Chapter 23: LPC21xx/22xx Embedded ICE controller

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The Embedded ICE controller is identical for all LPC21xx and LPC22xx parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- No target resources are required by the software debugger in order to start the debugging session.
- Allows the software debugger to talk via a JTAG (Joint Test Action Group) port directly to the core.
- Inserts instructions directly in to the ARM7TDMI-S core.
- The ARM7TDMI-S core or the System state can be examined, saved or changed depending on the type of instruction inserted.
- Allows instructions to execute at a slow debug speed or at a fast system speed.

3. Applications

The EmbeddedICE logic provides on-chip debug support. The debugging of the target system requires a host computer running the debugger software and an EmbeddedICE protocol convertor. EmbeddedICE protocol convertor converts the Remote Debug Protocol commands to the JTAG data needed to access the ARM7TDMI-S core present on the target system.

4. Description

The ARM7TDMI-S Debug Architecture uses the existing JTAG¹ port as a method of accessing the core. The scan chains that are around the core for production test are reused in the debug state to capture information from the databus and to insert new information into the core or the memory. There are two JTAG-style scan chains within the ARM7TDMI-S. A JTAG-style Test Access Port Controller controls the scan chains. In addition to the scan chains, the debug architecture uses EmbeddedICE logic which resides on chip with the ARM7TDMI-S core. The EmbeddedICE has its own scan chain that is used to insert watchpoints and breakpoints for the ARM7TDMI-S core. The EmbeddedICE logic consists of two real time watchpoint registers, together with a control and status register. One or both of the watchpoint registers can be programmed to halt the ARM7TDMI-S core. Execution is halted when a match occurs between the values programmed into the EmbeddedICE logic and the values currently appearing on the address bus, databus and some control signals. Any bit can be masked so that its value

^{1.}For more details refer to IEEE Standard 1149.1 - 1990 Standard Test Access Port and Boundary Scan Architecture.

Chapter 23: LPC21xx/22xx Embedded ICE controller

does not affect the comparison. Either watchpoint register can be configured as a watchpoint (i.e. on a data access) or a break point (i.e. on an instruction fetch). The watchpoints and breakpoints can be combined such that:

- The conditions on both watchpoints must be satisfied before the ARM7TDMI core is stopped. The CHAIN functionality requires two consecutive conditions to be satisfied before the core is halted. An example of this would be to set the first breakpoint to trigger on an access to a peripheral and the second to trigger on the code segment that performs the task switching. Therefore when the breakpoints trigger the information regarding which task has switched out will be ready for examination.
- The watchpoints can be configured such that a range of addresses are enabled for the watchpoints to be active. The RANGE function allows the breakpoints to be combined such that a breakpoint is to occur if an access occurs in the bottom 256 bytes of memory but not in the bottom 32 bytes.

The ARM7TDMI-S core has a Debug Communication Channel function in-built. The debug communication channel allows a program running on the target to communicate with the host debugger or another separate host without stopping the program flow or even entering the debug state. The debug communication channel is accessed as a co-processor 14 by the program running on the ARM7TDMI-S core. The debug communication channel allows the JTAG port to be used for sending and receiving data without affecting the normal program flow. The debug communication channel data and control registers are mapped in to addresses in the EmbeddedICE logic.

5. Pin description

Table 346. EmbeddedICE Pin Description

Pin name	Type	Description	
TMS	Input	Test Mode Select. The TMS pin selects the next state in the TAP state machine.	
TCK	Input	Test Clock. This allows shifting of the data in, on the TMS and TDI pins. It is a positive edge triggered clock with the TMS and TCK signals that define the internal state of the device.	
		Remark: This clock must be slower than $\frac{1}{6}$ of the CPU clock (CCLK) for the JTAG interface to operate.	
TDI	Input	Test Data In. This is the serial data input for the shift register.	
TDO	Output	Test Data Output. This is the serial data output from the shift register. Data is shifted out of the device on the negative edge of the TCK signal.	
nTRST	Input	Test Reset. The nTRST pin can be used to reset the test logic within the EmbeddedICE logic.	
RTCK	Output	Returned Test Clock. Extra signal added to the JTAG port. Required for designs based on ARM7TDMI-S processor core. Multi-ICE (Development system from ARM) uses this signal to maintain synchronization with targets having slow or widely varying clock frequency. For details refer to "Multi-ICE System Design considerations Application Note 72 (ARM DAI 0072A)".	

Chapter 23: LPC21xx/22xx Embedded ICE controller

Reset state of multiplexed pins

The pins above are multiplexed with P1.31-26. To have them come up as a Debug port, connect a weak bias resistor (4.7-10 k Ω depending on the external JTAG circuitry) between V_{SS} and the P1.26/RTCK pin. To have them come up as GPIO pins, do not connect a bias resistor and ensure that any external driver connected to P1.26/RTCK is either driving high, or is in high-impedance state, during Reset.

7. Register description

The EmbeddedICE logic contains 16 registers as shown in <u>Table 23–347</u>. below. The ARM7TDMI-S debug architecture is described in detail in "ARM7TDMI-S (rev 4) Technical Reference Manual" (ARM DDI 0234A) published by ARM Limited and is available via Internet.


Table 347. EmbeddedICE Logic registers

Width	Description	Address
6	Force debug state, disable interrupts	00000
5	Status of debug	00001
32	Debug communication control register	00100
32	Debug communication data register	00101
32	Holds watchpoint 0 address value	01000
32	Holds watchpoint 0 address mask	01001
32	Holds watchpoint 0 data value	01010
32	Holds watchpoint 0 data mask	01011
9	Holds watchpoint 0 control value	01100
8	Holds watchpoint 0 control mask	01101
32	Holds watchpoint 1 address value	10000
32	Holds watchpoint 1 address mask	10001
32	Holds watchpoint 1 data value	10010
32	Holds watchpoint 1 data mask	10011
9	Holds watchpoint 1 control value	10100
8	Holds watchpoint 1 control mask	10101
	6 5 32 32 32 32 32 32 9 8 32 32 32 32 32 32	Force debug state, disable interrupts Status of debug Debug communication control register Debug communication data register Holds watchpoint 0 address value Holds watchpoint 0 address mask Holds watchpoint 0 data value Holds watchpoint 0 data mask Holds watchpoint 0 control value Holds watchpoint 0 control mask Holds watchpoint 1 address value Holds watchpoint 1 address mask Holds watchpoint 1 data value Holds watchpoint 1 data value Holds watchpoint 1 data mask Holds watchpoint 1 data mask Holds watchpoint 1 control value

8. Block diagram

The block diagram of the debug environment is shown below in Figure 23–78.

Chapter 23: LPC21xx/22xx Embedded ICE controller

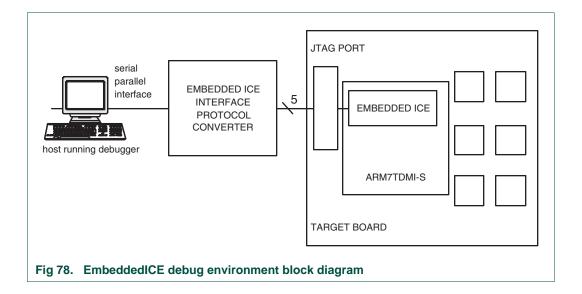

UM10114

Chapter 24: LPC21xx/22xx Embedded Trace Module (ETM)

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The ETM is identical for all LPC21xx and LPC22xx parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- Closely track the instructions that the ARM core is executing.
- One external trigger input
- 10 pin interface
- All registers are programmed through JTAG interface.
- Does not consume power when trace is not being used.
- THUMB instruction set support

3. Applications

As the microcontroller has significant amounts of on-chip memories, it is not possible to determine how the processor core is operating simply by observing the external pins. The ETM provides real-time trace capability for deeply embedded processor cores. It outputs information about processor execution to a trace port. A software debugger allows configuration of the ETM using a JTAG interface and displays the trace information that has been captured, in a format that a user can easily understand.

4. Description

The ETM is connected directly to the ARM core and not to the main AMBA system bus. It compresses the trace information and exports it through a narrow trace port. An external Trace Port Analyzer captures the trace information under software debugger control. Trace port can broadcast the Instruction trace information. Instruction trace (or PC trace) shows the flow of execution of the processor and provides a list of all the instructions that were executed. Instruction trace is significantly compressed by only broadcasting branch addresses as well as a set of status signals that indicate the pipeline status on a cycle by cycle basis. Trace information generation can be controlled by selecting the trigger resource. Trigger resources include address comparators, counters and sequencers. Since trace information is compressed the software debugger requires a static image of the code being executed. Self-modifying code can not be traced because of this restriction.

4.1 ETM configuration

The following standard configuration is selected for the ETM macrocell.

Chapter 24: LPC21xx/22xx Embedded Trace Module (ETM)

Table 348. ETM configuration

-	o u[4]
Resource number/type	Small ¹¹
Pairs of address comparators	1
Data Comparators	0 (Data tracing is not supported)
Memory Map Decoders	4
Counters	1
Sequencer Present	No
External Inputs	2
External Outputs	0
FIFOFULL Present	Yes (Not wired)
FIFO depth	10 bytes
Trace Packet Width	4/8

^[1] For details refer to ARM documentation "Embedded Trace Macrocell Specification (ARM IHI 0014E)".

5. Pin description

Table 349. ETM Pin Description

Pin Name	Type	Description
TRACECLK	Output	Trace Clock. The trace clock signal provides the clock for the trace port. PIPESTAT[2:0], TRACESYNC, and TRACEPKT[3:0] signals are referenced to the rising edge of the trace clock. This clock is not generated by the ETM block. It is to be derived from the system clock. The clock should be balanced to provide sufficient hold time for the trace data signals. Half rate clocking mode is supported. Trace data signals should be shifted by a clock phase from TRACECLK. Refer to Figure 3.14 page 3.26 and figure 3.15 page 3.27 in " <i>ETMT Technical Reference Manual</i> " (<i>ARM DDI 0158B</i>), for example circuits that implements both half-rateclocking and shifting of the trace data with respect to the clock. For TRACECLK timings refer to section 5.2 on page 5-13 in "Embedded Trace Macrocell Specification" (ARM IHI 0014E).
PIPESTAT[2:0]	Output	Pipe Line status. The pipeline status signals provide a cycle-by-cycle indication of what is happening in the execution stage of the processor pipeline.
TRACESYNC	Output	Trace synchronization. The trace sync signal is used to indicate the first packet of a group of trace packets and is asserted HIGH only for the first packet of any branch address.
TRACEPKT[3:0]	Output	Trace Packet. The trace packet signals are used to output packaged address and data information related to the pipeline status. All packets are eight bits in length. A packet is output over two cycles. In the first cycle, Packet[3:0] is output and in the second cycle, Packet[7:4] is output.
EXTIN[0]	Input	External Trigger Input

Chapter 24: LPC21xx/22xx Embedded Trace Module (ETM)

6. Reset state of multiplexed pins

On the LPC21xx/LPC22xx, the ETM pin functions are multiplexed with P1.25-16. To have these pins come as a Trace port, connect a weak bias resistor (4.7 k Ω) between the P1.20/TRACESYNC pin and V_{SS}. To have them come up as port pins, do not connect a bias resistor to P1.20/TRACESYNC, and ensure that any external driver connected to P1.20/TRACESYNC is either driving high, or is in high-impedance state, during Reset.

7. Register description

The ETM contains 29 registers as shown in <u>Table 24–350</u> below. They are described in detail in the ARM IHI 0014E document published by ARM Limited, which is available via the Internet.

Table 350. ETM Registers

Name	Description	Access	Register encoding
ETM Control	Controls the general operation of the ETM.	R/W	000 0000
ETM Configuration Code	Allows a debugger to read the number of each type of resource.	RO	000 0001
Trigger Event	Holds the controlling event.	WO	000 0010
Memory Map Decode Control	Eight-bit register, used to statically configure the memory map decoder.	WO	000 0011
ETM Status	Holds the pending overflow status bit.	RO	000 0100
System Configuration	Holds the configuration information using the SYSOPT bus.	RO	000 0101
Trace Enable Control 3	Holds the trace on/off addresses.	WO	000 0110
Trace Enable Control 2	Holds the address of the comparison.	WO	000 0111
Trace Enable Event	Holds the enabling event.	WO	000 1000
Trace Enable Control 1	Holds the include and exclude regions.	WO	000 1001
FIFOFULL Region	Holds the include and exclude regions.	WO	000 1010
FIFOFULL Level	Holds the level below which the FIFO is considered full.	WO	000 1011
ViewData event	Holds the enabling event.	WO	000 1100
ViewData Control 1	Holds the include/exclude regions.	WO	000 1101
ViewData Control 2	Holds the include/exclude regions.	WO	000 1110
ViewData Control 3	Holds the include/exclude regions.	WO	000 1111
Address Comparator 1 to 16	Holds the address of the comparison.	WO	001 xxxx
Address Access Type 1 to 16	Holds the type of access and the size.	WO	010 xxxx
Reserved	-	-	000 xxxx
Reserved	-	-	100 xxxx
Initial Counter Value 1 to 4	Holds the initial value of the counter.	WO	101 00xx
Counter Enable 1 to 4	Holds the counter clock enable control and event.	WO	101 01xx
Counter reload 1 to 4	Holds the counter reload event.	WO	101 10xx
Counter Value 1 to 4	Holds the current counter value.	RO	101 11xx


Chapter 24: LPC21xx/22xx Embedded Trace Module (ETM)

Table 350. ETM Registers

Name	Description	Access	Register encoding
Sequencer State and Control	Holds the next state triggering events.	-	110 00xx
External Output 1 to 4	Holds the controlling events for each output.	WO	110 10xx
Reserved	-	-	110 11xx
Reserved	-	-	111 0xxx
Reserved	-	-	111 1xxx

8. Block diagram

The block diagram of the ETM debug environment is shown below in Figure 24–79.

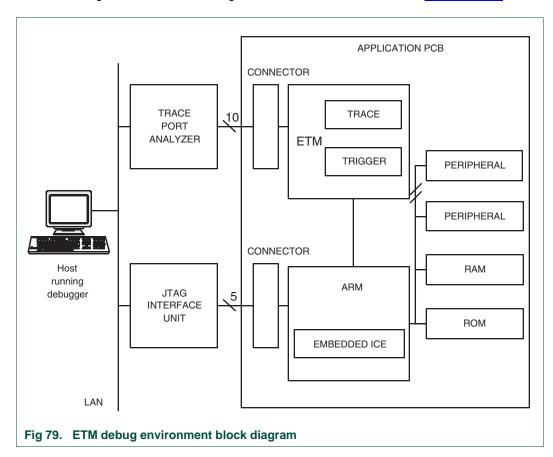

UM10114

Chapter 25: LPC21xx/22xx RealMonitor

Rev. 03 — 2 April 2008

User manual

1. How to read this chapter

The RealMonitor is identical for all LPC21xx and LPC22xx parts.

For an overview of how LPC21xx and LPC22xx parts and versions are described in this manual, see Section 1–2 "How to read this manual".

2. Features

- Allows user to establish a debug session to a currently running system without halting or resetting the system.
- Allows user time-critical interrupt code to continue executing while other user application code is being debugged.

3. Applications

Real time debugging.

4. Description

RealMonitor is a lightweight debug monitor that allows interrupts to be serviced while user debug their foreground application. It communicates with the host using the DCC (Debug Communications Channel), which is present in the EmbeddedICE logic. RealMonitor provides advantages over the traditional methods for debugging applications in ARM systems. The traditional methods include:

- Angel (a target-based debug monitor)
- Multi-ICE or other JTAG unit and EmbeddedICE logic (a hardware-based debug solution).

Although both of these methods provide robust debugging environments, neither is suitable as a lightweight real-time monitor.

Angel is designed to load and debug independent applications that can run in a variety of modes, and communicate with the debug host using a variety of connections (such as a serial port or ethernet). Angel is required to save and restore full processor context, and the occurrence of interrupts can be delayed as a result. Angel, as a fully functional target-based debugger, is therefore too heavyweight to perform as a real-time monitor.


Multi-ICE is a hardware debug solution that operates using the EmbeddedICE unit that is built into most ARM processors. To perform debug tasks such as accessing memory or the processor registers, Multi-ICE must place the core into a debug state. While the processor is in this state, which can be millions of cycles, normal program execution is suspended, and interrupts cannot be serviced.

Chapter 25: LPC21xx/22xx RealMonitor

RealMonitor combines features and mechanisms from both Angel and Multi-ICE to provide the services and functions that are required. In particular, it contains both the Multi-ICE communication mechanisms (the DCC using JTAG), and Angel-like support for processor context saving and restoring. RealMonitor is pre-programmed in the on-chip ROM memory (boot sector). When enabled It allows user to observe and debug while parts of application continue to run. Refer to Section 25-5 "How To Enable RealMonitor" on page 360 for details.

4.1 RealMonitor Components

As shown in Figure 25–80, RealMonitor is split in to two functional components:

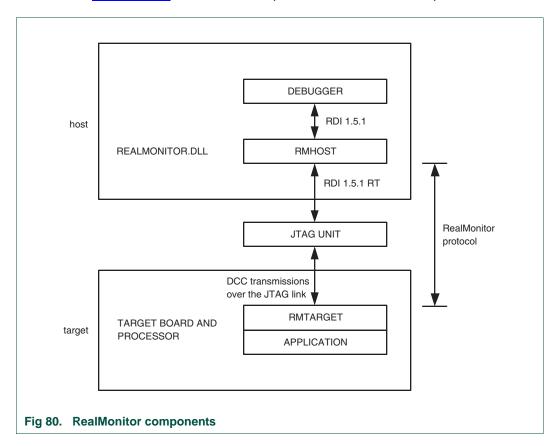

4.2 RMHost

This is located between a debugger and a JTAG unit. The RMHost controller, RealMonitor.dll, converts generic Remote Debug Interface (RDI) requests from the debugger into DCC-only RDI messages for the JTAG unit. For complete details on debugging a RealMonitor-integrated application from the host, see the ARM RMHost User Guide (ARM DUI 0137A).


4.3 RMTarget

This is pre-programmed in the on-chip ROM memory (boot sector), and runs on the target hardware. It uses the EmbeddedICE logic, and communicates with the host using the DCC. For more details on RMTarget functionality, see the RealMonitor Target Integration Guide (ARM DUI 0142A).

Chapter 25: LPC21xx/22xx RealMonitor

4.4 How RealMonitor works

In general terms, the RealMonitor operates as a state machine, as shown in Figure 25–81. RealMonitor switches between running and stopped states, in response to packets received by the host, or due to asynchronous events on the target. RMTarget supports the triggering of only one breakpoint, watchpoint, stop, or semihosting SWI at a time. There is no provision to allow nested events to be saved and restored. So, for example, if user application has stopped at one breakpoint, and another breakpoint occurs in an IRQ handler, RealMonitor enters a panic state. No debugging can be performed after RealMonitor enters this state.

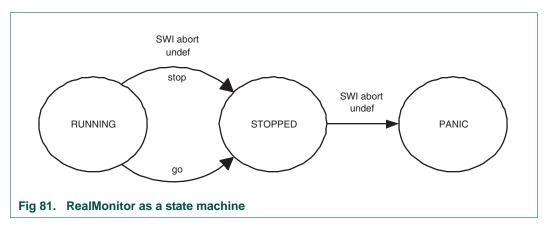

A debugger such as the ARM eXtended Debugger (AXD) or other RealMonitor aware debugger, that runs on a host computer, can connect to the target to send commands and receive data. This communication between host and target is illustrated in Figure 25–80.

The target component of RealMonitor, RMTarget, communicates with the host component, RMHost, using the Debug Communications Channel (DCC), which is a reliable link whose data is carried over the JTAG connection.

While user application is running, RMTarget typically uses IRQs generated by the DCC. This means that if user application also wants to use IRQs, it must pass any DCC-generated interrupts to RealMonitor.

To allow nonstop debugging, the EmbeddedICE-RT logic in the processor generates a Prefetch Abort exception when a breakpoint is reached, or a Data Abort exception when a watchpoint is hit. These exceptions are handled by the RealMonitor exception handlers that inform the user, by way of the debugger, of the event. This allows user application to continue running without stopping the processor. RealMonitor considers user application to consist of two parts:

- A foreground application running continuously, typically in User, System, or SVC mode
- A background application containing interrupt and exception handlers that are triggered by certain events in user system, including:
 - IRQs or FIQs
 - Data and Prefetch aborts caused by user foreground application. This indicates an
 error in the application being debugged. In both cases the host is notified and the
 user application is stopped.

Chapter 25: LPC21xx/22xx RealMonitor

 Undef exception caused by the undefined instructions in user foreground application. This indicates an error in the application being debugged. RealMonitor stops the user application until a "Go" packet is received from the host.

When one of these exceptions occur that is not handled by user application, the following happens:

- RealMonitor enters a loop, polling the DCC. If the DCC read buffer is full, control is passed to rm_ReceiveData() (RealMonitor internal function). If the DCC write buffer is free, control is passed to rm_TransmitData() (RealMonitor internal function). If there is nothing else to do, the function returns to the caller. The ordering of the above comparisons gives reads from the DCC a higher priority than writes to the communications link.
- RealMonitor stops the foreground application. Both IRQs and FIQs continue to be serviced if they were enabled by the application at the time the foreground application was stopped.

5. How To Enable RealMonitor

The following steps must be performed to enable RealMonitor. A code example which implements all the steps can be found at the end of this section.

5.1 Adding stacks

User must ensure that stacks are set up within application for each of the processor modes used by RealMonitor. For each mode, RealMonitor requires a fixed number of words of stack space. User must therefore allow sufficient stack space for both RealMonitor and application.

RealMonitor has the following stack requirements:

Table 351. RealMonitor stack requirement

Processor mode	RealMonitor stack usage (bytes)
Undef	48
Prefetch Abort	16
Data Abort	16
IRQ	8

5.2 IRQ mode

A stack for this mode is always required. RealMonitor uses two words on entry to its interrupt handler. These are freed before nested interrupts are enabled.

5.3 Undef mode

A stack for this mode is always required. RealMonitor uses 12 words while processing an undefined instruction exception.

5.4 SVC mode

RealMonitor makes no use of this stack.

Chapter 25: LPC21xx/22xx RealMonitor

5.5 Prefetch Abort mode

RealMonitor uses four words on entry to its Prefetch abort interrupt handler.

5.6 Data Abort mode

RealMonitor uses four words on entry to its data abort interrupt handler.

5.7 User/System mode

RealMonitor makes no use of this stack.

5.8 FIQ mode

RealMonitor makes no use of this stack.

5.9 Handling exceptions

This section describes the importance of sharing exception handlers between RealMonitor and user application.


5.10 RealMonitor exception handling

To function properly, RealMonitor must be able to intercept certain interrupts and exceptions. Figure 25–82 illustrates how exceptions can be claimed by RealMonitor itself, or shared between RealMonitor and application. If user application requires the exception sharing, they must provide function (such as app_IRQDispatch ()). Depending on the nature of the exception, this handler can either:

- Pass control to the RealMonitor processing routine, such as rm_irqhandler2().
- Claim the exception for the application itself, such as app_IRQHandler ().

In a simple case where an application has no exception handlers of its own, the application can install the RealMonitor low-level exception handlers directly into the vector table of the processor. Although the IRQ handler must get the address of the Vectored Interrupt Controller. The easiest way to do this is to write a branch instruction (<address>) into the vector table, where the target of the branch is the start address of the relevant RealMonitor exception handler.

Chapter 25: LPC21xx/22xx RealMonitor

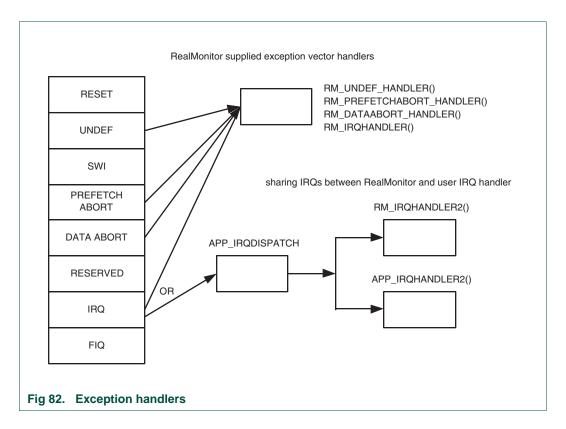

5.11 RMTarget initialization

While the processor is in a privileged mode, and IRQs are disabled, user must include a line of code within the start-up sequence of application to call rm_init_entry().

5.12 Code Example

The following example shows how to setup stack, VIC, initialize RealMonitor and share non vectored interrupts:

```
IMPORT rm_init_entry
IMPORT rm_prefetchabort_handler
IMPORT rm_dataabort_handler
IMPORT rm_irqhandler2
IMPORT rm_undef_handler
IMPORT User_Entry ;Entry point of user application.
CODE32
ENTRY
;Define exception table. Instruct linker to place code at address 0x0000 0000
AREA exception_table, CODE

LDR pc, Reset_Address
LDR pc, Undefined_Address
LDR pc, SWI_Address
LDR pc, Prefetch_Address
LDR pc, Abort_Address
```

Chapter 25: LPC21xx/22xx RealMonitor

```
NOP; Insert User code valid signature here.
    LDR pc, [pc, #-0xFF0] ;Load IRQ vector from VIC
    LDR PC, FIQ Address
Reset Address
                   DCD __init
                                      ;Reset Entry point
Undefined_Address DCD rm_undef_handler ; Provided by RealMonitor
                   DCD 0
SWI Address
                                      ;User can put address of SWI handler here
Prefetch_Address
                   DCD rm_prefetchabort_handler ; Provided by RealMonitor
                 DCD rm_dataabort_handler
                                               ; Provided by RealMonitor
Abort Address
                                      ;User can put address of FIO handler here
FIQ Address
                  DCD 0
AREA init code, CODE
ram_end EQU 0x4000xxxx; Top of on-chip RAM.
, /**********************
; ^{\star} Set up the stack pointers for various processor modes. Stack grows
; * downwards.
LDR r2, =ram_end; Get top of RAM
    MRS r0, CPSR ; Save current processor mode
    ; Initialize the Undef mode stack for RealMonitor use
    BIC r1, r0, #0x1f
    ORR r1, r1, #0x1b
    MSR CPSR_c, r1
    ; Keep top 32 bytes for programming routines.
    ; Refer to On-chip Serial Bootloader chapter
    SUB sp,r2,\#0x1F
    ; Initialize the Abort mode stack for RealMonitor
    BIC r1, r0, #0x1f
    ORR r1, r1, #0x17
    MSR CPSR_c, r1
     ; Keep 64 bytes for Undef mode stack
    SUB sp,r2,\#0x5F
    ; Initialize the IRQ mode stack for RealMonitor and User
    BIC r1, r0, #0x1f
    ORR r1, r1, #0x12
    MSR CPSR_c, r1
    ; Keep 32 bytes for Abort mode stack
    SUB sp,r2,\#0x7F
    ; Return to the original mode.
    MSR CPSR_c, r0
    ; Initialize the stack for user application
     ; Keep 256 bytes for IRQ mode stack
```

SUB sp, r2, #0x17F

Chapter 25: LPC21xx/22xx RealMonitor

```
; /*********************
; * Setup Vectored Interrupt controller. DCC Rx and Tx interrupts
; * generate Non Vectored IRQ request. rm init entry is aware
; ^{\star} of the VIC and it enables the DBGCommRX and DBGCommTx interrupts.
; * Default vector address register is programmed with the address of
; * Non vectored app_irqDispatch mentioned in this example. User can setup
; * Vectored IROs or FIOs here.
VICBaseAddr
                    EQU 0xFFFFF000 ; VIC Base address
    VICDefVectAddrOffset EQU 0x34
    LDR r0, =VICBaseAddr
    LDR r1, =app_irqDispatch
    STR r1, [r0, #VICDefVectAddrOffset]
    BL rm_init_entry ; Initialize RealMonitor
    ; enable FIO and IRO in ARM Processor
    MRS r1, CPSR ; get the CPSR
    BIC r1, r1, #0xC0 ; enable IRQs and FIQs
    MSR CPSR c, r1 ; update the CPSR
, /*********************
; * Get the address of the User entry point.
LDR lr, =User Entry
    MOV pc, lr
. /**********************
; * Non vectored irg handler (app irgDispatch)
AREA app_irqDispatch, CODE
VICVectAddrOffset EOU 0x30
app_irqDispatch
    ; enable interrupt nesting
    STMFD sp!, {r12,r14}
    MRS r12, spsr
                         ;Save SPSR in to r12
    MSR cpsr_c,0x1F
                          ;Re-enable IRQ, go to system mode
;User should insert code here if non vectored Interrupt sharing is
; required. Each non vectored shared irg handler must return to
; the interrupted instruction by using the following code.
                                   ;Disable irg, move to IRQ mode
    MSR cpsr c, #0x52
    MSR spsr, r12
                                   ;Restore SPSR from r12
    STMFD sp!, {r0}
   LDR r0, =VICBaseAddr
   STR r1, [r0, #VICVectAddrOffset]
                                  ;Acknowledge Non Vectored irq has finished
   LDMFD sp!, {r12,r14,r0}
                                   ;Restore registers
   SUBS pc, r14, #4
                                  ;Return to the interrupted instruction
    ; user interrupt did not happen so call rm irghandler2. This handler
```

Chapter 25: LPC21xx/22xx RealMonitor

```
; is not aware of the VIC interrupt priority hardware so trick
;rm_irghandler2 to return here
STMFD sp!, {ip,pc}
LDR pc, rm_irghandler2
;rm_irqhandler2 returns here
MSR cpsr_c, #0x52
                                     ; Disable irg, move to IRQ mode
MSR spsr, r12
                                     ;Restore SPSR from r12
STMFD sp!, {r0}
LDR r0, =VICBaseAddr
STR r1, [r0, #VICVectAddrOffset]
                                     ;Acknowledge Non Vectored irq has finished
LDMFD sp!, {r12,r14,r0}
                                     ;Restore registers
SUBS pc, r14, #4
                                     ; Return to the interrupted instruction
END
```

6. RealMonitor Build Options

RealMonitor was built with the following options:

RM_OPT_DATALOGGING=FALSE

This option enables or disables support for any target-to-host packets sent on a non RealMonitor (third-party) channel.

RM_OPT_STOPSTART=TRUE

This option enables or disables support for all stop and start debugging features.

RM_OPT_SOFTBREAKPOINT=TRUE

This option enables or disables support for software breakpoints.

RM OPT HARDBREAKPOINT=TRUE

Enabled for cores with EmbeddedICE-RT. This device uses ARM-7TDMI-S Rev 4 with EmbeddedICE-RT.

RM_OPT_HARDWATCHPOINT=TRUE

Enabled for cores with EmbeddedICE-RT. This device uses ARM-7TDMI-S Rev 4 with EmbeddedICE-RT.

RM_OPT_SEMIHOSTING=FALSE

This option enables or disables support for SWI semi-hosting. Semi-hosting provides code running on an ARM target use of facilities on a host computer that is running an ARM debugger. Examples of such facilities include the keyboard input, screen output, and disk I/O.

RM OPT SAVE FIQ REGISTERS=TRUE

This option determines whether the FIQ-mode registers are saved into the registers block when RealMonitor stops.

Chapter 25: LPC21xx/22xx RealMonitor

RM_OPT_READBYTES=TRUE

RM_OPT_WRITEBYTES=TRUE

RM_OPT_READHALFWORDS=TRUE

RM_OPT_WRITEHALFWORDS=TRUE

RM_OPT_READWORDS=TRUE

RM OPT WRITEWORDS=TRUE

Enables/Disables support for 8/16/32 bit read/write.

RM_OPT_EXECUTECODE=FALSE

Enables/Disables support for executing code from "execute code" buffer. The code must be downloaded first.

RM OPT GETPC=TRUE

This option enables or disables support for the RealMonitor GetPC packet. Useful in code profiling when real monitor is used in interrupt mode.

RM_EXECUTECODE_SIZE=NA

"execute code" buffer size. Also refer to RM_OPT_EXECUTECODE option.

RM OPT GATHER STATISTICS=FALSE

This option enables or disables the code for gathering statistics about the internal operation of RealMonitor.

RM DEBUG=FALSE

This option enables or disables additional debugging and error-checking code in RealMonitor.

RM_OPT_BUILDIDENTIFIER=FALSE

This option determines whether a build identifier is built into the capabilities table of RMTarget. Capabilities table is stored in ROM.

RM_OPT_SDM_INFO=FALSE

SDM gives additional information about application board and processor to debug tools.

RM_OPT_MEMORYMAP=FALSE

This option determines whether a memory map of the board is built into the target and made available through the capabilities table

RM_OPT_USE_INTERRUPTS=TRUE

This option specifies whether RMTarget is built for interrupt-driven mode or polled mode.

RM_FIFOSIZE=NA

Chapter 25: LPC21xx/22xx RealMonitor

This option specifies the size, in words, of the data logging FIFO buffer.

CHAIN_VECTORS=FALSE

This option allows RMTarget to support vector chaining through μHAL (ARM HW abstraction API).

UM10114 Chapter 26: Supplementary information Rev. 03 — 2 April 2008

User manual

1. Abbreviations

Table 352. Acronym list

Acronym	Description
ADC	Analog-to-Digital Converter
AMBA	Advanced Microcontroller Bus Architecture
APB	Advanced Peripheral Bus
CAN	Controller Area Network
CISC	Complex Instruction Set Computer
FIFO	First In, First Out
GPIO	General Purpose Input/Output
I/O	Input/Output
JTAG	Joint Test Action Group
PLL	Phase-Locked Loop
PWM	Pulse Width Modulator
RISC	Reduced Instruction Set Computer
SPI	Serial Peripheral Interface
SRAM	Static Random Access Memory
SSI	Synchronous Serial Interface
SSP	Synchronous Serial Port
TTL	Transistor-Transistor Logic
UART	Universal Asynchronous Receiver/Transmitter

Chapter 26: Supplementary information

2. Legal information

2.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

2.2 Disclaimers

General — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in medical, military, aircraft, space or life support equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors accepts no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

2.3 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

I²C-bus — logo is a trademark of NXP B.V.

Chapter 26: Supplementary information

3. Tables

Table 1.	LPC21xx and LPC22xx legacy/enhanced parts		address 0xFFFF F008) bit description 46
T 0	overview	Table 41.	Interrupt Enable Register (VICINtEnable -
Table 2.	LPC2109/2119/2129 Ordering information5	T 1 1 40	address 0xFFFF F010) bit description 47
Table 3.	LPC2109/2119/2129 Ordering options6	Table 42.	Software Interrupt Clear Register (VICIntEnClear
Table 4.	LPC 2114/2124 Ordering information 6	T-1-1- 40	- address 0xFFFF F014) bit description 47
Table 5.	LPC2114/2124 Ordering options	Table 43.	Interrupt Select Register (VICIntSelect - address
Table 6.	LPC2194 Ordering information	T-1-1- 44	0xFFFF F00C) bit description
Table 7.	LPC2194 Ordering options	Table 44.	IRQ Status Register (VICIRQStatus - address
Table 8.	LPC2210/2220 Ordering information	Toble 45	0xFFFF F000) bit description
Table 9.	LPC2210/2220 Ordering options	Table 45.	FIQ Status Register (VICFIQStatus - address
	LPC2212/2214 Ordering information 8	Toble 46	0xFFFF F004) bit description
	LPC2212/2214 Ordering options	Table 46.	Vector Control registers (VICVectCntl0-15 -
	LPC2290 Ordering information	Toblo 47	addresses 0xFFFF F200-23C) bit description . 48
	LPC2290 Ordering options9	Table 47.	Vector Address registers (VICVectAddr0-15 -
	LPC2292/2294 Ordering information 9	Table 49	addresses 0xFFFF F100-13C) bit description . 48
	LPC2292/2294 Ordering options	Table 40.	Default Vector Address register (VICDefVectAddr
	LPC21xx/22xx part-specific configuration 12	Toble 40	- address 0xFFFF F034) bit description49
Table 17.	LPC21xx and LPC22xx memory and peripheral	Table 49.	Vector Address register (VICVectAddr - address
Toble 10	configuration	Toble FO	0xFFFF F030) bit description
	APM expertises and base addresses	Table 50.	Protection Enable register (VICProtection -
	ARM exception vector locations	Toble F1	address 0xFFFF F020) bit description 49
Table 20.	LPC21xx and LPC22xx memory mapping	Table 51.	Connection of interrupt sources to the Vectored
Toble 24	modes	Toble F2	Interrupt Controller
Table 21.	MAM responses to program accesses of various		LPC21xx/22xx part-specific register bits 57
Table 00	types		Pin summary
Table 22.	MAM responses to data accesses of various		Summary of system control registers 59
Table 00	types	Table 55.	Recommended values for C _{X1/X2} in oscillation
	Summary of MAM registers		mode (crystal and external components
Table 24.	MAM Control Register (MAMCR - address	T	parameters)
T.I. 05	0xE01F C000) bit description		External interrupt registers
Table 25.	MAM Timing register (MAMTIM - address	Table 57.	External Interrupt Flag register (EXTINT - address
T.I. 00	0xE01F C004) bit description	T	0xE01F C140) bit description
	Suggestions for MAM timing selection	Table 58.	Interrupt Wakeup register (INTWAKE - address
	Address ranges of the external memory banks 32	T	0xE01F C144) bit description
	External Memory Controller pin description32	Table 59.	External Interrupt Mode register (EXTMODE -
	External Memory Controller register map 32	T 11 00	address 0xE01F C148) bit description64
Table 30.	Bank Configuration Registers 0-3 (BCFG0-3 -	Table 60.	External Interrupt Polarity register (EXTPOLAR -
	0xFFE0 0000 to 0xFFE0 000C) address	T 11 04	address 0xE01F C14C) bit description 65
T	description	Table 61.	System Control and Status flags register (SCS -
	Default memory widths at reset	T	address 0xE01F C1A0) bit description 67
	External memory and system requirements 39	Table 62.	Memory Mapping control register (MEMMAP -
	LPC21xx/22xx part-specific interrupts	T.I. 00	address 0xE01F C040) bit description68
	VIC register map		PLL registers70
Table 35.	Software Interrupt Register (VICSoftInt - address	Table 64.	PLL Control register (PLLCON - address
T	0xFFFF F018) bit allocation	T	0xE01F C080) bit description71
Table 36.	Software Interrupt Register (VICSoftInt - address	Table 65.	PLL Configuration register (PLLCFG - address
T	0xFFFF F018) bit description	T	0xE01F C084) bit description
Table 37.	Software Interrupt Clear Register	Table 66.	PLL Status register (PLLSTAT - address
	(VICSoftIntClear - 0xFFFF F01C)45		0xE01F C088) bit description
Table 38.	Software Interrupt Clear Register		PLL Control bit combinations73
	(VICSoftIntClear - address 0xFFFF F01C) bit	Table 68.	PLL Feed register (PLLFEED - address
-	allocation46	-	0xE01F C08C) bit description
rable 39.	Software Interrupt Clear Register		Elements determining PLL's frequency 73
	(VICSoftIntClear - address 0xFFFF F01C) bit		PLL Divider values
T 1 1 12	description		PLL Multiplier values
rable 40.	Raw Interrupt Status Register (VICRawIntr -	Table 72.	Power control registers
LIM10114 2			© NVD B V 2009. All rights recoved

Table	73.	Power Control register (PCON - address	0xE002 8034) bit description
Table	74.	0xE01F COCO) bit description	Table 107.Fast GPIO port 0 output Set register (FIO0SET - address 0x3FFF C018) bit description 119
		address 0xE01F C0C4) bit description77	Table 108. Fast GPIO port 1 output Set register (FIO1SET -
		APB divider register map	address 0x3FFF C038) bit description 119
lable		APB Divider register (APBDIV - address 0xE01F C100) bit description	Table 109. Fast GPIO port 0 output Set byte and half-word accessible register description
Table		LPC21xx part-specific pin configurations 64-pin	Table 110. Fast GPIO port 1 output Set byte and half-word
		packages	accessible register description
rable	78.	LPC22xx part-specific pin configurations 144-pin	Table 111. GPIO port 0 output Clear register 0 (IO0CLR -
		packages	address 0xE002 800C) bit description 120
		LPC21xx Pin description (64-pin packages)86	Table 112. GPIO port 1 output Clear register 1 (IO1CLR -
		LPC22xx Ball allocation91	address 0xE002 801C) bit description 120
		LPC22xx Pin description (144 pin packages) .93	Table 113. GPIO port 2 output Clear register 2 (IO2CLR -
Table	82.	CAN configuration in the LPC21xx/22xx pin	address 0xE002 802C) bit description 120
		connect registers101	Table 114. GPIO port 3 output Clear register 3 (IO3CLR -
Table	83.	Pin select registers for 64-pin (LPC21xx) and	address 0xE002 803C) bit description 121
		144-pin (LPC22xx) configurations	Table 115. Fast GPIO port 0 output Clear register 0
Table	84.	Pin function Select register bits	(FIO0CLR - address 0x3FFF C01C) bit
Table	85.	Pin connect block register map103	description
Table	86.	Pin function Select register 0 (PINSEL0 - address	Table 116. Fast GPIO port 1 output Clear register 1
		0xE002 C000) bit description)103	(FIO1CLR - address 0x3FFF C03C) bit
Table	87.	Pin function Select register 1 (PINSEL1 - address	description
		0xE002 C004) bit description105	Table 117. Fast GPIO port 0 output Clear byte and half-word
Table	88.	Pin function Select register 2 (PINSEL2 -	accessible register description121
		0xE002 C014) bit description107	Table 118. Fast GPIO port 1 output Clear byte and half-word
Table		Pin function Select register 2 (PINSEL2 -	accessible register description121
		0xE002 C014) bit description107	Table 119. GPIO port 0 Pin value register (IO0PIN - address
Table	90.	Boot control on BOOT1:0	0xE002 8000) bit description
Table	91.	GPIO features	Table 120.GPIO port 1 Pin value register (IO1PIN - address
		GPIO pin description113	0xE002 8010) bit description
Table	93.	GPIO register map (legacy APB accessible	Table 121.GPIO port 2 Pin value register (IO2PIN - address
		registers)115	0xE002 8020) bit description
Table	94.	GPIO register map (local bus accessible registers	Table 122.GPIO port 3 Pin value register (IO3PIN - address
		- enhanced GPIO features)115	0xE002 8030) bit description
Table	95.	GPIO port 0 Direction register (IO0DIR - address	Table 123. Fast GPIO port 0 Pin value register (FIO0PIN -
		0xE002 8008) bit description	address 0x3FFF C014) bit description123
Table		GPIO port 1 Direction register (IO1DIR - address	Table 124. Fast GPIO port 1 Pin value register (FIO1PIN -
		0xE002 8018) bit description	address 0x3FFF C034) bit description123
Table		GPIO port 2 Direction register (IO2DIR - address	Table 125. Fast GPIO port 0 Pin value byte and half-word
		0xE002 8028) bit description	accessible register description123
Table		GPIO port 3 Direction register (IO3DIR - address	Table 126. Fast GPIO port 1 Pin value byte and half-word
		0xE002 8038) bit description	accessible register description124
Table	99.	Fast GPIO port 0 Direction register (FIO0DIR -	Table 127. Fast GPIO port 0 Mask register (FIO0MASK -
		address 0x3FFF C000) bit description 117	address 0x3FFF C010) bit description 124
Table	100.	.Fast GPIO port 1 Direction register (FIO1DIR -	Table 128.Fast GPIO port 1 Mask register (FIO1MASK -
		address 0x3FFF C020) bit description 117	address 0x3FFF C030) bit description 124
Table	101.	.Fast GPIO port 0 Direction control byte and	Table 129. Fast GPIO port 0 Mask byte and half-word
		half-word accessible register description 117	accessible register description125
Table	102.	.Fast GPIO port 1 Direction control byte and	Table 130.Fast GPIO port 1 Mask byte and half-word
		half-word accessible register description 118	accessible register description125
Table		.GPIO port 0 output Set register (IO0SET - address	Table 131.LPC21xx/22xx part-specific registers 129
		0xE002 8004 bit description	Table 132:UART0 pin description
Table		.GPIO port 1 output Set register (IO1SET - address	Table 133.UART0 register map
		0xE002 8014) bit description	Table 134:UART0 Receiver Buffer Register (U0RBR -
ıable		.GPIO port 2 output Set register (IO2SET - address	address 0xE000 C000, when DLAB = 0, Read
-		0xE002 8024) bit description	Only) bit description
ıable	106	.GPIO port 3 output Set register (IO3SET - address	Table 135:UART0 Transmit Holding Register (U0THR -

address 0xE000 C000, when DLAB = 0, Write	Table 162.UART1 Line Control Register (U1LCR - address
Only) bit description	0xE001 000C) bit description
address 0xE000 C000, when DLAB = 1) bit description	address 0xE001 0010) bit description 161 Table 164.Modem status interrupt generation 163
Table 137:UART0 Divisor Latch MSB register (U0DLM -	Table 165.UART1 Line Status Register (U1LSR - address
address 0xE000 C004, when DLAB = 1) bit	0xE001 0014, read only) bit description 164
description133	Table 166. UART1 Modem Status Register (U1MSR -
Table 138:UARTn Fractional Divider Register (U0FDR -	address 0xE001 0018) bit description 165
address 0xE000 C028, U2FDR - 0xE007 8028,	Table 167.UART1 Scratch Pad Register (U1SCR - address
U3FDR - 0xE007 C028) bit description 133	0xE001 0014) bit description 165
Table 139. Fractional Divider setting look-up table 136	Table 168. Auto-baud Control Register (U1ACR -
Table 140.UART0 Interrupt Enable Register (U0IER -	0xE001 0020) bit description 166
address 0xE000 C004, when DLAB = 0) bit	Table 169.UART1 Transmit Enable Register (U1TER -
description137	address 0xE001 0030) bit description 169
Table 141:UART0 Interrupt Identification Register (U0IIR -	Table 170.I ² C Pin Description
address 0xE000 C008, read only)	Table 171.I2CCONSET used to configure Master mode 173
bit description	Table 172.12CONSET used to configure Slave mode 174
Table 142:UART0 interrupt handling	Table 173.1 ² C register map
Table 143:UART0 FIFO Control Register (U0FCR - address	Table 174.I ² C Control Set register (I2CONSET - address
0xE000 C008) bit description	0xE001 C000) bit description
Table 144:UART0 Line Control Register (U0LCR - address 0xE000 C00C) bit description140	Table 175.1 ² C Control Set register (I2CONCLR - address
Table 145:UART0 Line Status Register (U0LSR - address	0xE001 C018) bit description182 Table 176.I ² C Status register (I2STAT - address 0xE001) bit
0xE000 C014, read only) bit description141	description
Table 146:UART0 Scratch Pad Register (U0SCR - address	Table 177.I ² C Data register (I2DAT - address 0xE001 C008)
0xE000 C01C) bit description142	bit description
Table 147:Auto-baud Control Register (U0ACR -	Table 178.I ² C Slave Address register (I2ADR - address
0xE000 C020) bit description	0xE001 C00C) bit description 183
Table 148:UART0 Transmit Enable Register (U0TER -	Table 179.I ² C SCL High Duty Cycle register (I2SCLH -
address 0xE000 C030) bit description 146	address 0xE001 C010) bit description 183
Table 149.LPC21xx/22xx part-specific registers 148	Table 180.I ² C SCL Low Duty Cycle register (I2SCLL -
Table 150.UART1 pin description	address 0xE001 C014) bit description 184
Table 151.UART1 register map151	Table 181. Example I ² C clock rates
Table 152.UART1 Receiver Buffer Register (U1RBR -	Table 182. Abbreviations used to describe an I ² C
address 0xE001 0000, when DLAB = 0 Read	operation
Only) bit description	Table 183.I2CONSET used to initialize Master Transmitter
Table 153.UART1 Transmitter Holding Register (U1THR - address 0xE001 0000, when DLAB = 0 Write	mode
Only) bit description	Table 184.12CADR usage in Slave Receiver mode 186 Table 185.12CONSET used to initialize Slave Receiver mode
Table 154: UART1 Divisor Latch LSB register (U1DLL -	186
address 0xE001 C000, when DLAB = 1) bit	Table 186.Master Transmitter mode192
description153	Table 187. Master Receiver mode
Table 155:UART0 Divisor Latch MSB register (U1DLM -	Table 188. Slave Receiver mode
address 0xE001 C004, when DLAB = 1) bit	Table 189. Slave Transmitter mode 196
description	Table 190. Miscellaneous States
Table 156.UART1 Fractional Divider Register (U1FDR -	Table 191.LPC21xx/22xx SPI configurations 209
address 0xE001 0028) bit description 153	Table 192.SPI data to clock phase relationship 211
Table 157. Fractional Divider setting look-up table 156	Table 193.SPI pin description214
Table 158.UART1 Interrupt Enable Register (U1IER -	Table 194.SPI register map
address 0xE001 0004, when DLAB = 0) bit	Table 195.SPI Control Register (S0SPCR - address
description	0xE002 0000 and S1SPCR - address
Table 159.UART1 Interrupt Identification Register (U1IIR -	0xE003 0000) bit description
address 0xE001 0008, read only) bit	Table 196.SPI Status Register (S0SPSR - address
description	0xE002 0004 and S1SPSR - address 0xE003 0004) bit description
Table 161.UART1 FIFO Control Register (U1FCR - address	Table 197.SPI Data Register (S0SPDR - address
0xE001 0008) bit description160	0xE002 0008, S1SPDR - address 0xE003 0008)
	•

bit description	Table 225:PWM Timer Control Register (PWMTCR -
Table 198.SPI Clock Counter Register (S0SPCCR - address	address 0xE001 4004) bit description 253
0xE002 000C and S1SPCCR - address	Table 226: Match Control Register (MCR, TIMER0: T0MCR -
0xE003 000C) bit description	address 0xE000 4014 and TIMER1: T1MCR -
Table 199.SPI Interrupt Register (S0SPINT - address	address 0xE000 8014) bit description 254
0xE002 001C and S1SPINT - address	Table 227:PWM Control Register (PWMPCR - address
0xE003 001C) bit description	0xE001 404C) bit description
Table 200. SSP pin descriptions	Table 228: PWM Latch Enable Register (PWMLER - address
Table 201.SSP Registers228	0xE001 4050) bit description
Table 202:SSP Control Register 0 (SSPCR0 - address	Table 229. Watchdog register map
0xE005 C000) bit description	Table 230. Watchdog operating modes selection 260
Table 203:SSP Control Register 1 (SSPCR1 - address	Table 231:Watchdog Mode register (WDMOD - address
0xE005 C004) bit description	0xE000 0000) bit description 261
Table 204:SSP Data Register (SSPDR - address	Table 232: Watchdog Timer Constant register (WDTC -
0xE005 C008) bit description	address 0xE000 0004) bit description 261
Table 205:SSP Status Register (SSPSR - address	Table 233: Watchdog Feed register (WDFEED - address
0xE005 C00C) bit description230	0xE000 0008) bit description 261
Table 206:SSP Clock Prescale Register (SSPCPSR -	Table 234: Watchdog Timer Value register (WDTV - address
address 0xE005 C010) bit description 230	0xE000 000C) bit description261
Table 207:SSP Interrupt Mask Set/Clear Register	Table 235.Real Time Clock (RTC) register map 264
(SSPIMSC - address 0xE005 CF014) bit	Table 236. Miscellaneous registers
· · · · · · · · · · · · · · · · · · ·	Table 237:Interrupt Location Register (ILR - address
description	• • • • • • • • • • • • • • • • • • • •
Table 208:SSP Raw Interrupt Status Register (SSPRIS -	0xE002 4000) bit description
address 0xE005 C018) bit description231	Table 238:Clock Tick Counter Register (CTCR - address
Table 209:SSP Masked Interrupt Status Register (SSPMIS	0xE002 4004) bit description
-address 0xE005 C01C) bit description 232	Table 239:Clock Control Register (CCR - address
Table 210:SSP interrupt Clear Register (SSPICR - address	0xE002 4008) bit description 267
0xE005 C020) bit description	Table 240: Counter Increment Interrupt Register (CIIR -
Table 211. LPC21xx/22xx part-specific registers for external	address 0xE002 400C) bit description 267
event counting233	Table 241: Alarm Mask Register (AMR - address
Table 212. Timer/Counter pin description	0xE002 4010) bit description 268
Table 213.TIMER/COUNTER0 and TIMER/COUNTER1	Table 242: Consolidated Time register 0 (CTIME0 - address
register map	0xE002 4014) bit description 268
Table 214:Interrupt Register (IR, TIMER0: T0IR - address	Table 243: Consolidated Time register 1 (CTIME1 - address
0xE000 4000 and TIMER1: T1IR - address	0xE002 4018) bit description 269
0xE000 8000) bit description	Table 244: Consolidated Time register 2 (CTIME2 - address
Table 215:Timer Control Register (TCR, TIMER0: T0TCR -	0xE002 401C) bit description269
address 0xE000 4004 and TIMER1: T1TCR -	Table 245. Time counter relationships and values 269
address 0xE000 8004) bit description 238	Table 246. Time counter registers
Table 216:Count Control Register (CTCR, TIMER0:	Table 247. Alarm registers
TOCTCR - address 0xE000 4070 and TIMER1:	
	Table 248. Reference clock divider registers
T1TCR - address 0xE000 8070) bit	Table 249: Prescaler Integer register (PREINT - address
description	0xE002 4080) bit description
Table 217: Match Control Register (MCR, TIMER0: TOMCR -	Table 250: Prescaler Integer register (PREFRAC - address
address 0xE000 4014 and TIMER1: T1MCR -	0xE002 4084) bit description
address 0xE000 8014) bit description 240	Table 251. Prescaler cases where the Integer Counter reload
Table 218: Capture Control Register (CCR, TIMER0: T0CCR	value is incremented 274
- address 0xE000 4028 and TIMER1: T1CCR -	Table 252.CAN interfaces, pins, and register base
address 0xE000 8028) bit description241	addresses
Table 219: External Match Register (EMR, TIMER0: T0EMR	Table 253.CAN Pin descriptions276
- address 0xE000 403C and TIMER1: T1EMR -	Table 254. Memory map of the CAN block 276
address0xE000 803C) bit description242	Table 255.CAN acceptance filter and central CAN
Table 220.External match control	registers
Table 221. Set and reset inputs for PWM Flip-Flops 249	Table 256.CAN1, CAN2, CAN3, CAN4 controller register
Table 222. Pin summary	map277
Table 223. Pulse Width Modulator Register Map	Table 257. Mode register (MOD: CAN1MOD - address
Table 224:PWM Interrupt Register (PWMIR - address	0xE004 4000, CAN2MOD - address
0xE001 4000) bit description252	0xE004 8000, CAN3MOD - address 0x004 C000,
UNLOUT TOOU) DIE GESCHPHOIT	0x200+ 0000, 0ANOMOD - addices 0x004 0000,

	CAN4MOD - address 0x005 0000) bit	CAN2TFIn - addresses 0xE004 8030, 40, 50;
	description	CAN3TFIn - addresses 0xE004 C030, 40, 50;
Table 258.	.Command register (CMR: CAN1CMR- address	CAN4TFIn - addresses 0xE005 0030, 40, 50) bit
	0xE004 4004, CAN2CMR - address	description
	0xE004 8004, CAN3CMR - address 0x004 C004,	Table 271. Transfer Identifier register when FF=0 (TID1, 2, 3:
	CAN4CMR - address 0x005 0004) bit	CAN1TIDn - addresses 0xE004 4034, 44, 54;
	description280	CAN2TIDn - addresses 0xE004 8034, 44, 54;
Table 250		
Table 259.	. Global Status Register (GSR: CAN1GSR -	CAN3TIDn - addresses 0xE004 C034, 44, 54;
	address 0xE004 0008, CAN2GSR - address	CAN4TIDn - addresses 0xE005 0034, 44, 54) bit
	0xE004 8008, CAN3GSR - address 0xE004	description
	C008, CAN4GSR address 0xE005 0008) bit	Table 272. Transfer Identifier register when FF = 1 290
	description	Table 273. Transmit Data register A (TDA1, 2, 3: CAN1TDAn
Table 260.	Interrupt and Capture register (ICR: CR:	- addresses 0xE004 4038, 48, 58; CAN2TDAn -
	CAN1ICR- address 0xE004 400C, CAN2ICR -	addresses 0xE004 8038, 48, 58; CAN3TDAn -
	0xE004 address 800C, CAN3ICR - address	addresses 0xE004 C038, 48, 58; CAN4TDAn -
	0xE004 C00C, CAN4ICR - address 0xE005	addresses 0xE005 0038, 48, 58) bit
	000C) bit description282	description
Table 261		Table 274. Transmit Data register B (TDB1, 2, 3: CAN1TDBn
Table 201.	Interrupt Enable register (IER: CAN1IER -	
	address 0xE004 4010, CAN2IER - address	- addresses 0xE004 403C, 4C, 5C; CAN2TDBn -
	0xE004 8010, CAN3IER - address 0xE004 C010,	addresses 0xE004 803C, 4C, 5C; CAN3TDBn -
	CAN4IER - address 0xE005 0010) bit	addresses 0xE004 C03C, 4C, 5C; CAN4TDBn -
	description	addresses 0xE005 003C, 4C, 5C) bit
Table 262.	. Bus Timing Register (BTR: CAN1BTR - address	description
	0xE004 4014, CAN2BTR - address 0xE004 8014,	Table 275.Central Transit Status Register (CANTxSR -
	CAN3BTR - address 0xE004 C014, CAN4BTR -	address 0xE004 0000) bit description 292
	address 0xE005 0014) bit description 285	Table 276. Central Receive Status register (CANRxSR -
Table 263	Error Warning Limit register (EWL: CAN1EWL -	address 0xE004 0004) bit description 293
Table 200.	address 0xE004 4018, CAN2EWL - address	Table 277. Central Miscellaneous Status Register (CANMSR
	0xE004 8018, CAN3EWL - address 0xE004	- address 0xE004 0008) bit description 293
	C018, CAN4EWL - address 0xE005 0018) bit	Table 278. Acceptance Filter Mode Register (AFMR -
	description	address 0xE003 C000) bit description 296
Table 264.	. Status Register (SR - CAN1SR 0xE004 401C,	Table 279. Standard Frame Individual Start Address register
	CAN2SR - 0xE004 801C, CAN3SR - 0xE004	(SFF_sa - address 0xE003 C004) bit
	C01C, CAN4SR - 0xE005 001C) bit	description
	description	Table 280. Standard Frame Group Start Address register
Table 265.	.Receive Frame Status register (RFS - CAN1RFS	(SFF_GRP_sa - address 0xE003 C008) bit
	- address 0xE004 4020, CAN2RFS - address	description
	0xE004 8020, CAN3RFS - address 0xE004 C020,	Table 281. Extended Frame Start Address register (EFF_sa -
	CAN4RFS - address 0xE005 0020) bit	address 0xE003 C00C) bit description 297
T.I. 000	description	Table 282. Extended Frame Group Start Address register
Table 266.	Receive Identifier register when FF = 0 (RID:	(EFF_GRP_sa - address 0xE003 C010) bit
	CAN1RID - address 0xE004 4024, CAN2RID -	description
	address 0xE004 8024, CAN3RID - address	Table 283. End of AF Tables register (ENDofTable - address
	0xE004 C024, CAN4RID - address 0xE005 0024)	0xE003 C014) bit description298
	bit description	Table 284.LUT Error Address register (LUTerrAd - address
Table 267.	Receive Identifier register when FF = 1 288	0xE003 C018) bit description298
	Receive Data register A (RDA: CAN1RDA -	Table 285.LUT Error register (LUTerr - address
14510 200.	address 0xE004 4028, CAN2RDA - address	0xE003 C01C) bit description 298
	0xE004 8028, CAN3RDA - address 0xE004	Table 286. Example of acceptance filter tables and ID index
	C028, CAN4RDA - address 0xE005 0028) bit	values299
	description288	Table 287. Format of automatically stored Rx message . 301
Table 269.	.Receive Data register B (RDB: CAN1RDB -	Table 288.LPC21xx/22xx part-specific registers303
	address 0xE004 402C, CAN2RDB - address	Table 289.ADC pin description
	0xE004 802C, CAN3RDB - address 0xE004	Table 290.ADC registers
	C02C, CAN4RDB - address 0xE005 002C) bit	Table 291.ADC Control Register (ADCR - address
	description	0xE003 4000) bit description 306
Table 270	Transmit Frame Information register (TFI1, 2, 3 -	Table 292.ADC Global Data Register (ADGDR - address
	CAN1TF1n - addresses 0xE004 4030, 40, 50;	0xE003 4004) bit description

Table	293	.ADC Status Register (ADSTAT - address 0xE003 4004) bit description	308
Table	294	.ADC Interrupt Enable Register (ADINTEN -	
		address 0xE003 400C) bit description	
Table	295.	.ADC Data Registers (ADDR0 to ADDR7 - 0xE0	
		4010 to 0xE003 402C) bit description	
		.LPC21xx and LPC22xx flash memory options	
		.Flash sectors	
Table	298.	.Code Read Protection levels	319
Table	299	.Code Read Protection hardware/software	
		interaction	319
Table	300	.Code read protection options for different	
		bootloader revisions	320
Table	301.	.Bootloader revisions	320
		.ISP command summary	
Table	303	.ISP Unlock command	321
		.ISP Set Baud Rate command	
		Correlation between possible ISP baudrates a	
Table	000.	external crystal frequency (in MHz)	
Table	306	.ISP Echo command	
		.ISP Write to RAM command	
		.ISP Read memory command	323
rable	309.	.ISP Prepare sector(s) for write operation command	224
Tabla	240		
		.ISP Copy command	
		ISP Go command	
		.ISP Erase sector command	
		.ISP Blank check sector command	326
Table	314.	.ISP Read Part Identification number	
		command	
		.LPC21xx/22xx Part identification numbers	326
Table	316	.ISP Read Boot code version number	
		command	326
Table	317	.ISP Compare command	327
Table	318.	.ISP Return codes Summary	327
Table	319	.IAP command summary	329
		.IAP Prepare sector(s) for write operation	
		command	330
Table	321.	.IAP Copy RAM to Flash command	
		.IAP Erase sector(s) command	
		.IAP Blank check sector(s) command	
		.IAP Read Part Identification command	
		.IAP Read Boot code version number	002
iabio	020	command	332
Table	326	.IAP Compare command	
		.IAP Status codes Summary	
		.ISP Command Summary	
		.ISP Unlock command description	
		ISP Set Baud Rate command description	
lable	331.	.Correlation between possible ISP baudrates a	
		external crystal frequency (in MHz)	
		.ISP Echo command description	
		.ISP Write to RAM command description	
		.ISP Read Memory command description	
		.ISP Go command description	
		.ISP Read Part ID command description	
Table	337	.LPC22xx Part identification numbers	343
Table	338	.ISP Read Boot Code version command	

description	13
Table 339.ISP Compare command description34	13
Table 340.ISP Return Codes Summary 34	14
Table 341.IAP Command Summary 34	1 6
Table 342.IAP Read Part ID command description 34	16
Table 343.IAP Read Boot Code version command	
description	17
Table 344.IAP Compare command description34	17
Table 345.IAP Status Codes Summary34	17
Table 346.EmbeddedICE Pin Description35	50
Table 347.EmbeddedICE Logic registers	51
Table 348.ETM configuration	54
Table 349.ETM Pin Description35	54
Table 350.ETM Registers	55
Table 351.RealMonitor stack requirement	60
Table 352. Acronym list	86

Chapter 26: Supplementary information

4. Figures

Fig 1. Fig 2.	LPC21xx and LPC22xx block diagram	Fig 41.	Arbitration procedure
Fig 3. Fig 4.	Peripheral memory map	Fig 42.	Format and States in the Master Transmitter mode
Fig 5.	Map of lower memory is showing re-mapped and re-mappable areas for a part with on-chip flash	Fig 43.	Format and States in the Master Receiver mode
	memory23	Fig 44	Format and States in the Slave Receiver mode 190
Fig 6.	Simplified block diagram of the Memory Accelerator Module (MAM)	-	Format and States in the Slave Transmitter mode . 191
Fig 7.	32 bit bank external memory interfaces (BGFGx Bits MW = 10)	Fig 46.	Simultaneous repeated START conditions from two masters
Fig 8.	16 bit bank external memory interfaces (BCFGx bits MW = 01)		Forced access to a busy I ² C-bus
Fig 9.	8 bit bank external memory interface (BCFGx bits MW = 00 and RBLE = 0)		level on SDA
Fig 10.	External memory read access (WST1 = 0 and WST1 = 1 examples)	J	(CPHA = 0 and CPHA = 1)
Fig 11.	External memory write access (WST2 = 0 and WST2 = 1 examples)		Texas Instruments synchronous serial frame format: a) single frame transfer and b)
Fig 12.	External burst memory read access (WST1 = 0 and WST1 = 1 examples)	Fia 52.	continuous/back-to-back two frames
Fig 13.	Block diagram of the Vectored Interrupt Controller	J	CPHA=0 (a) single transfer and b) continuous transfer)222
Fig 14.	Oscillator modes and models: a) slave mode of	Fig 53.	SPI frame format with CPOL=0 and CPHA=1 223
_	operation, b) oscillation mode of operation, c)	Fig 54.	SPI frame format with CPOL = 1 and CPHA = 0 (a)
	external crystal model used for C _{X1} / _{X2}		single and b) continuous transfer)224
	evaluation60	Fig 55.	SPI frame format with CPOL = 1 and CPHA = 1225
Fig 15.	F _{OSC} selection algorithm		Microwire frame format (single transfer) 226
	External interrupt logic		Microwire frame format (continuos transfers) 227
	PLL block diagram		Microwire setup and hold details227
	Startup sequence diagram79	Fig 59.	A timer cycle in which PR=2, MRx=6, and both
	Reset block diagram including the wakeup timer.80		interrupt and reset on match are enabled 243
	APB divider connections	Fig 60.	A timer cycle in which PR=2, MRx=6, and both
Fig 21.	LPC21xx pin configuration	F : 04	interrupt and stop on match are enabled 244
F: 00	(LQFP64 pin package)85		Timer block diagram
	LQFP144 pinning		PWM block diagram
-	TFBGA144 pinning		Sample PWM waveforms
Fig 24.	Illustration of the fast and slow GPIO access and	-	Watchdog block diagram
	output showing 3.5 x increase of the pin output		RTC block diagram
Eig 25	frequency		RTC prescaler block diagram
•	Autobaud a) mode 0 and b) mode 1 waveform145	rig or.	Entry in FullCAN and individual standard identifier tables
	UARTO block diagram	Fig 68	Entry in standard identifier range table 294
	Algorithm for setting UART dividers155	-	Entry in either extended identifier table 295
	Auto-RTS functional timing		Detailed example of acceptance filter tables and ID
	Auto-CTS functional timing	1 lg 70.	index values
	Autobaud a) mode 0 and b) mode 1 waveform .168	Fig 71	Semaphore procedure for reading an auto-stored
	UART1 block diagram	1 19 7 1.	message
	I ² C-bus Configuration	Fig 72.	Map of lower memory after reset for 256 kB flash
	Format in the Master Transmitter mode 173	g	devices
-	Format of Master Receiver mode	Fig 73.	Boot process flowchart
	A Master Receiver switches to Master Transmitter		IAP parameter passing
J	after sending Repeated START174		Map of the microcontroller's memory after reset 336
Fig 37.	Format of Slave Receiver mode	-	Boot process flowchart
	Format of Slave Transmitter mode		IAP parameter passing
	I ² C serial interface block diagram 177		EmbeddedICE debug environment block
-	-	-	-

	diagram	352
Fig 79.	ETM debug environment block diagram	356
Fig 80.	RealMonitor components	358
Fig 81.	RealMonitor as a state machine	359
Fig 82.	Exception handlers	362

Chapter 26: Supplementary information

5. Contents

1	Introduction 3	4.4	LPC2210/2220	7
2	How to read this manual	4.5	LPC2210/2220	
		4.6	LPC2290	
3	Features	4.7	LPC2292/2294	
3.1	Legacy features common to all LPC21xx and LPC22xx parts	5	Block diagram	1
3.2	Enhanced features 5	6	Architectural overview	
4	Ordering options	7	ARM7TDMI-S processor	
- 4.1	LPC2109/2119/21295	8	On-chip flash memory system	
4.2	LPC2114/2124 6	9	On-chip Static RAM (SRAM)	
4.3	LPC2194 7	Ū	Circinp Gaussian (Gramm).	•
Cha	pter 2: LPC21xx/22xx Memory map			
1	How to read this chapter	3.1	Memory map concepts and operating modes 2	<u>'</u> 1
2	Memory maps 17	3.2	Memory re-mapping	
3	LPC21xx and LPC22xx memory re-mapping and	4	Prefetch Abort and Data Abort Exceptions . 2	3
	boot block		·	
Cha	pter 3: LPC21xx/22xx Memory Accelerator N	/lodule	(MAM)	
1	How to read this chapter	6	MAM configuration 2	9
2	Introduction	7	Register description 2	
3	Operation	8	MAM Control Register	
4	MAM blocks		(MAMCR - 0xE01F C000)	9
4.1	Flash memory bank	9	MAM Timing register	
4.2	Instruction latches and data latches 27		(MAMTIM - 0xE01F C004) 2	9
4.3	Flash programming Issues 27	10	MAM usage notes	0
5	MAM operating modes			
Cha	pter 4: LPC21xx/22xx External Memory Con	troller	(EMC)	
1	How to read this chapter	5.2.1	Accesses to memory banks constructed from 8-bi	it
2	Features		or non byte-partitioned memory devices 3	4
3	Description	5.2.2	Accesses to memory banks constructed from 16	
4	Pin description		or 32 bit memory devices	
5	Register description	6	External memory interface 3	5
5.1	Bank Configuration Registers 0-3 (BCFG0-3 -	7	Typical bus sequences	7
	0xFFE0 0000 to 0xFFE0 000C)	8	External memory selection 3	9
5.2	Read Byte Lane Control (RBLE) 34			
Cha	pter 5: LPC21xx/22xx Vectored Interrupt Co	ntrolle	r (VIC)	
1	How to read this chapter 41	5.3	Raw Interrupt Status Register (VICRawIntr -	
2	Features		0xFFFF F008) 4	6
3	Description 42	5.4	Interrupt Enable Register (VICIntEnable -	
4	Register description 43	<i></i>	0xFFFF F010)	
	VIC registers 45	5.5	Interrupt Enable Clear Register (VICIntEnClear - 0xFFFF F014) 4	
	VIC registers			
5 5.1	Software Interrupt register (VICSoftInt -	5.6		•
5 5.1	Software Interrupt register (VICSoftInt - 0xFFFF F018)45	5.6	Interrupt Select Register (VICIntSelect - 0xFFFF F00C)	
5	Software Interrupt register (VICSoftInt -	5.6 5.7	Interrupt Select Register (VICIntSelect -	

User manual

5.8	FIQ Status Register (VICFIQStatus -	6	Interrupt sources
	0xFFFF F004)	7	Spurious interrupts 52
5.9	Vector Control registers 0-15 (VICvectCntl0-15 -	7.1	Details and case studies on spurious
5.40	0xFFFF F200-23C)		interrupts
5.10	Vector Address registers 0-15 (VICVectAddr0-15 -	7.1.1	Workaround
E 11	0xFFFF F100-13C)	7.1.1.1	Solution 1: Test for an IRQ received during a write
5.11	Default Vector Address register (VICDefVectAddr - 0xFFFF F034) 48		to disable IRQs
5.12	Vector Address register (VICVectAddr -	7.1.1.2	Solution 2: Disable IRQs and FIQs using separate
5.12	0xFFFF F030)	7440	writes to the CPSR
5.13	Protection Enable register (VICProtection -	7.1.1.3	
00	0xFFFF F020)	•	IRQ handler 55
O l		8	VIC usage notes 55
Cnapi	er 6: LPC21xx/22xx System control		
1	How to read this chapter 57	9.2	PLL Control register
2	Summary of system control block functions 58		(PLLCON - 0xE01F C080)
3	Pin description	9.3	PLL Configuration register (PLLCFG -
4	Register description 59	0.4	0xE01F C084)
5	Crystal oscillator	9.4	PLL Status register
6	External interrupt inputs	0.5	(PLLSTAT - 0xE01F C088)
6.1	Register description	9.5 9.6	PLL Interrupt 72 PLL Modes 72
6.2	External Interrupt Flag register (EXTINT -	9.7	PLL Feed register (PLLFEED - 0xE01F C08C) 73
0.2	0xE01F C140) 62	9.8	PLL and Power-down mode
6.3	External interrupt Wakeup register (EXTWAKE -	9.9	PLL frequency calculation
0.0	0xE01F C144)	9.10	Procedure for determining PLL settings 74
6.4	External Interrupt Mode register (EXTMODE -	9.11	PLL configuring examples
	0xE01F C148) 64	10	Power control
6.5	External Interrupt Polarity register (EXTPOLAR -	10.1	Register description
	0xE01F C14C) 65	10.2	Power Control register
6.6	Multiple external interrupt pins 66		(PCON - 0xE01F COCO)
7	Other system controls 67	10.3	Power Control for Peripherals register (PCONP -
7.1	System Control and Status flags register (SCS -		0xE01F COC4)
	0xE01F C1A0) 67	10.4	Power control usage notes 77
8	Memory mapping control 68	11	Reset 78
8.1	Memory Mapping control register (MEMMAP -	12	APB divider 80
	0xE01F C040)	12.1	Register description 81
8.2	Memory mapping control usage notes 69	12.2	APB divider register (APBDIV - 0xE01F C100) 81
9	Phase Locked Loop (PLL) 69	13	Wakeup timer 82
9.1	Register description 69	14	Code security vs. debugging
		14	Code Security vs. debugging
Chapi	er 7: LPC21xx/22xx Pin configuration		
1	How to read this chapter 84	3	Pin configuration for 144-pin packages 90
2	Pin configuration for 64-pin packages 85		
Chapt	er 8: LPC21xx/22xx Pin connect block		
1	How to read this chapter 101	6.2	Pin function Select register 1 (PINSEL1 -
2	Features		0xE002 C004)
3	Applications	6.3	LPC21xx Pin function Select register 2 (PINSEL2
4	Description		- 0xE002 C014)
	Pin function Select register values 102	6.4	LPC22xx Pin function Select register 2 (PINSEL2
5		0.5	- 0xE002 C014)
6	Register description	6.5	Boot control for LPC22xx parts
6.1	Pin function Select register 0 (PINSEL0 - 0xE002 C000)		
	0xL002 C000)103		
UM10114_3			© NXP B.V. 2008. All rights reserved.

Chapter 9: LPC21xx/22xx General Purpose I/O (GPIO) controll	er
---	----

-			
1	How to read this chapter 111	5.4	GPIO port Pin value register IOPIN (IO0PIN -
2	Features		0xE002 8000, IO1PIN - 0xE002 8010, IO2PIN -
3	Applications		0xE002 8020, IO3PIN - 0xE002 8030, FIO0PIN -
4	Pin description		0x3FFF C014, FIO1PIN - 0x3FFF C034) 122
5	Register description	5.5	Fast GPIO port Mask register
5.1	GPIO port Direction register IODIR (IO0DIR -		FIOMASK(FIO0MASK - 0x3FFF C010,
J. I	0xE002 8008, IO1DIR - 0xE002 8018, IO2DIR -		FIO1MASK - 0x3FFF C030) 124
	0xE002 8028, IO3DIR - 0xE002 8038, FIO0DIR -	6	GPIO usage notes
	0x3FFF C000, FIO1DIR - 0x3FFF C020) 116	6.1	Example 1: sequential accesses to IOSET and
5.2	GPIO port output Set register IOSET (IOSET -		IOCLR affecting the same GPIO pin/bit 125
5.2	0xE002 8004, IO1SET - 0xE002 8014, IO2SET -	6.2	Example 2: an immediate output of 0s and 1s on
	0xE002 8024, IO3SET - 0xE002 8034, IO3SET -		a GPIO port
	0x3FFF C018, FIO1SET - 0x3FFF C038) 118	6.3	Writing to IOSET/IOCLR .vs. IOPIN 126
5.3	GPIO port output Clear register IOCLR (IO0CLR -	6.4	Output signal frequency considerations when
5.5	0xE002 800C, IO1CLR - 0xE002 801C, IO2CLR -		using the legacy and enhanced GPIO
	0xE002 802C, IO3CLR - 0xE002 803C, FIO0CLR		registers
	- 0x3FFF C01C, FIO1CLR - 0x3FFF C03C). 120		
	- 0x3111 C010, 1101CER - 0x3111 C03C). 120		
Chapt	er 10: LPC21xx/22xx Universal Asynchron	nous Re	ceiver/Transmitter 0 (UART0)
1	How to read this chapter	4.5	UART0 Interrupt Enable Register (U0IER -
2	Features		0xE000 C004, when DLAB = 0)
3	Pin description	4.6	UART0 Interrupt Identification Register (U0IIR -
4	Register description		0xE000 C008, Read Only)
4 .1		4.7	UART0 FIFO Control Register (U0FCR -
4.1	UARTO Receiver Buffer register (U0RBR -		0xE000 C008)
4.2	0xE000 C000, when DLAB = 0, Read Only). 132	4.8	UART0 Line Control Register (U0LCR -
4.2	UARTO Transmit Holding Register (U0THR -		0xE000 C00C)
12	0xE000 C000, when DLAB = 0, Write Only). 132	4.9	UART0 Line Status Register (U0LSR -
4.3	UART0 Divisor Latch registers (U0DLL - 0xE000 C000 and U0DLM - 0xE000 C004, when		0xE000 C014, Read Only) 141
		4.10	UART0 Scratch Pad Register (U0SCR -
4.4	DLAB = 1)		0xE000 C01C)
4.4	0xE000 C028)	4.11	UART0 Auto-baud Control Register (U0ACR -
4.4.1	Baudrate calculation		0xE000 C020)
4.4.1.1	Example 1: PCLK = 14.7456 MHz, BR = 9600	4.11.1	Auto-baud
4.4.1.1	136	4.11.2	Auto-baud modes
1112	Example 2: PCLK = 12 MHz, BR = 115200 . 136	4.12	UART0 Transmit Enable Register (U0TER -
4.4.1.2	Example 2. FGEN = 12 WHZ, BN = 115200 . 150		0xE000 C030)
		5	Architecture
Chapt	er 11: LPC21xx/22xx Universal Asynchror	nous Re	ceiver/Transmitter 1 (UART1)
1	How to read this chapter148	4.4.1	Baudrate calculation
2	Features	4.4.1.1	Example 1: PCLK = 14.7456 MHz,
3	Pin description		BR = 9600 Bd
	•	4.4.1.2	Example 2: PCLK = 12 MHz,
4	Register description		BR = 115200 Bd
4.1	UART1 Receiver Buffer Register (U1RBR -	4.5	UART1 Interrupt Enable Register (U1IER -
	0xE001 0000, when DLAB = 0 Read Only) . 152		0xE001 0004, when DLAB = 0) 156
4.2	UART1 Transmitter Holding Register (U1THR -	4.6	UART1 Interrupt Identification Register (U1IIR -
	0xE001 0000, when DLAB = 0 Write Only) . 152		0xE001 0008, Read Only)
4.3	UART1 Divisor Latch registers 0 and 1 (U1DLL -	4.7	UART1 FIFO Control Register (U1FCR -
	0xE001 0000 and U1DLM - 0xE001 0004, when		0xE001 0008)
	DLAB = 1)	4.8	UART1 Line Control Register (U1LCR -
4.4	UART1 Fractional Divider Register (U1FDR -		0xE001 000C)
	0xE001 0028)		,

4.9	UART1 Modem Control Register (U1MCR -	164	4.12	UART1 Scratch Pad Register (U1SCR -	165
101	0xE001 0010)		4.40	0xE001 001C)	
4.9.1	Auto-flow control		4.13	UART1 Auto-baud Control Register (U1ACR	
4.9.1.1	Auto-RTS		4.4.4	,	166
4.9.1.2	Auto-CTS	162	4.14		166
4.10	UART1 Line Status Register (U1LSR -	100	4.15		167
	0xE001 0014, Read Only)	163	4.16	UART1 Transmit Enable Register (U1TER -	400
4.11	UART1 Modem Status Register (U1MSR -			,	168
	0xE001 0018)	165	5	Architecture	169
Chapt	er 12: LPC21xx/22xx I ² C interface				
1	How to read this chapter	171	9.9	Simultaneous repeated START conditions fro	
2	Features	171		two masters	
3	Applications	171	9.10		198
4	Description		9.11		198
5	Pin description		9.12	I ² C-bus obstructed by a low level on SCL or	400
			0.40		199
6	I ² C operating modes		9.13		
6.1	Master Transmitter mode		9.14		200
6.2	Master Receiver mode		9.15	Initialization	
6.3	Slave Receiver mode		9.16	•	201
6.4	Slave Transmitter mode		9.17		201
7	I ² C Implementation and operation		9.18	1 0	201
7.1	Input filters and output stages		10	•	201
7.2	Address Register, I2ADDR		10.1		201
7.3	Comparator		10.2		201
7.4	Shift register, I2DAT		10.3		201
7.5	Arbitration and synchronization logic 1		10.4	I ² C interrupt routine	
7.6	Serial clock generator		10.5	Non mode specific States	
7.7	Timing and control		10.6	State: 0x00	
7.8	Control register, I2CONSET and I2CONCLR		10.7	Master States	
7.9	Status decoder and Status register		10.8	State: 0x08	
8	Register description	180	10.9	State: 0x10	
8.1	I ² C Control Set register (I2CONSET -		10.10	Master Transmitter States	
	0xE001 C000)	180	10.11 10.12	State: 0x18	
8.2	I ² C Control Clear register (I2CONCLR -		-	State: 0x20	
	/	182	10.13 10.14	State: 0x26	
8.3	I ² C Status register (I2STAT - 0xE001 C004).		10.14	State: 0x38	
8.4	I ² C Data register (I2DAT - 0xE001 C008) 1	183	10.15	Master Receive States	
8.5	I ² C Slave Address register (I2ADR -		10.10		204
0.0	0xE001 C00C)	183	10.17	State: 0x48	204
8.6	I ² C SCL High duty cycle register (I2SCLH -		10.10		204
0.7	0xE001 C010)	183	10.20		
8.7	I ² C SCL Low duty cycle register (I2SCLL -	104	10.21		205
8.8	0xE001 C014)		10.22		205
0.0			10.23		205
_	cycle		10.24		205
9	Details of I ² C operating modes		10.25		206
9.1	Master Transmitter mode		10.26		206
9.2	Master Receiver mode		10.27		206
9.3	Slave Receiver mode		10.28		206
9.4	Slave Transmitter mode		10.29		207
9.5	Miscellaneous States		10.30		207
9.6	12STAT = 0xF8		10.31		207
9.7	12STAT = 0x00		10.32	State: 0xA8	207
9.8	Some special cases	198	10.33	State: 0xB0	207

10.34 10.35	State: 0xB8 2 State: 0xC0 2		10.36	State: 0xC8	208
Chapt	er 13: LPC21xx/22xx SPI				
1	How to read this chapter 2		4	Pin description	
2	Features	210	5	Register description	214
3	Description	210	5.1	SPI Control Register (S0SPCR - 0xE002 000	10
3.1	SPI overview			,	215
3.2	SPI data transfers	210	5.2	SPI Status Register (S0SPSR - 0xE002 0004	and
3.3	SPI peripheral details 2	212		S1SPSR - 0xE003 0004)	216
3.3.1	General information 2	212	5.3	SPI Data Register (S0SPDR - 0xE002 0008,	
3.3.2	Master operation 2	212		S1SPDR - 0xE003 0008)	217
3.3.3	Slave operation		5.4	SPI Clock Counter Register (S0SPCCR -	
3.3.4	Exception conditions			0xE002 000C and S1SPCCR -	047
3.3.4.1	Read overrun 2			0xE003 000C)	
3.3.4.2	Write collision		5.5	SPI Interrupt Register (S0SPINT - 0xE002 00	
3.3.4.3	Mode fault		_	and S1SPINT - 0xE003 001C)	
3.3.4.4	Slave abort	214	6	Architecture	218
Chapt	er 14: LPC21xx/22xx SSP interface				
1	How to read this chapter 2	19	5.1	SSP Control Register 0	
2	Features	19		(SSPCR0 - 0xE005 C000)	228
3	Description	19	5.2	SSP Control Register 1	
4	Bus description			(
- 4.1	Texas Instruments synchronous serial frame	.2 1	5.3	SSP Data Register (SSPDR - 0xE005 C008)	230
4.1	format	21	5.4	SSP Status Register	
4.2	SPI frame format			(,	230
4.2.1	Clock Polarity (CPOL) and Phase (CPHA)	1	5.5	SSP Clock Prescale Register (SSPCPSR -	
1.2.1	Control	22		0xE005 C010)	230
4.2.2	SPI Format with CPOL = 0,CPHA = 0 2		5.6	SSP Interrupt Mask Set/Clear Register	004
4.2.3	SPI format with CPOL = 0,CPHA = 1 2		<i>-</i> -	,	231
4.2.4	SPI format with CPOL = 1,CPHA = 0 2		5.7	SSP Raw Interrupt Status Register (SSPRIS	
4.2.5	SPI format with CPOL = 1,CPHA = 1 2		F 0	0xE005 C018)	231
4.3	Semiconductor Microwire frame format 2		5.8	SSP Masked Interrupt Register (SSPMIS - 0xE005 C01C)	232
4.3.1	Setup and hold time requirements on CS with		5.9	SSP Interrupt Clear Register (SSPICR -	232
	respect to SK in Microwire mode 2	27	5.5	0xE005 C020)	232
5	Register description 2	27		0.2003 0.020)	232
Chapt	er 15: LPC21xx/22xx Timer 0/1				
1	How to read this chapter	233	6.4	Timer Counter (TC, TIMER0: T0TC -	-
2	Features			0xE000 4008 and TIMER1: T1TC -	
					239
3	Applications		6.5	Prescale Register (PR, TIMER0: T0PR -	
4	Description 2			0xE000 400C and TIMER1:	
5	Pin description 2			T1PR - 0xE000 800C)	239
6	Register description 2	235	6.6	Prescale Counter Register (PC, TIMER0: T0F	PC -
6.1	Interrupt Register (IR, TIMER0: T0IR -			0xE000 4010 and TIMER1: T1PC -	
	0xE000 4000 and TIMER1: T1IR - 0xE000 800	00)		,	239
	237		6.7	Match Registers (MR0 - MR3)	
6.2	Timer Control Register (TCR, TIMER0: T0TCR	-	6.8	Match Control Register (MCR, TIMER0: T0M0	CR -
	0xE000 4004 and TIMER1: T1TCR -			0xE000 4014 and TIMER1: T1MCR -	_
	0xE000 8004)	237		,	240
6.3	Count Control Register (CTCR, TIMER0:		6.9	Capture Registers (CR0 - CR3)	241
	T0CTCR - 0xE000 4070 and TIMER1: T1TCR				
	0xE000 8070)	30			

6.10	Capture Control Register (CCR, TIMER0: T00 - 0xE000 4028 and TIMER1: T1CCR - 0xE000 8028)		6.11 7 8	External Match Register (EMR, TIMER0: T0E - 0xE000 403C; and TIMER1: T1EMR - 0xE000 803C)	242 243
Chap	oter 16: LPC21xx/22xx Pulse Width Mo	dulat	or (PW	/M)	
1 2	How to read this chapter		5.3	PWM Timer Counter (PWMTC - 0xE001 4008)	254
3 3.1	Description	246	5.4	PWM Prescale Register (PWMPR - 0xE001 400C)	254
3.2	Outputs	249	5.5	PWM Prescale Counter Register (PWMPC - 0xE001 4010)	254
	Outputs		5.6	PWM Match Registers (PWMMR0 - PWMMR6)	254
4 5 5.1	Pin description Register description PWM Interrupt Register (PWMIR -		5.7	PWM Match Control Register (PWMMCR - 0xE001 4014)	254
5.2	0xE001 4000)	252	5.8 5.9	PWM Control Register (PWMPCR - 0xE001 404C)	256
0.2	0xE001 4004)	253	5.9	0xE001 4050)	257
Chap	oter 17: LPC21xx/22xx WatchDog Time	er (WI	DT)		
1	How to read this chapter		5.2	Watchdog Timer Constant register (WDTC - 0xE000 0004)	261
2 3	Applications		5.3	Watchdog Feed register (WDFEED - 0xE000 0008)	261
4 5	Description		5.4	Watchdog Timer Value register (WDTV - 0xE000 000C)	
5.1	Watchdog Mode register (WDMOD - 0xE000 0000)		6	Block diagram	
Chap	oter 18: LPC21xx/22xx Real-Time Cloc	k (RT	C)		
1 2	How to read this chapter		5.9	Consolidated Time register 0 (CTIME0 - 0xE002 4014)	268
3	Description	263	5.10	Consolidated Time register 1 (CTIME1 - 0xE002 4018)	268
4 5	Architecture	264	5.11	Consolidated Time register 2 (CTIME2 - 0xE002 401C)	269
5.1 5.2	RTC interrupts		5.12 5.13	Time counter group	
5.3	Interrupt Location Register (ILR -		5.14	Alarm register group	
5.4	0xE002 4000)	266	6	RTC usage notes	270
5.4		266	7	Reference clock divider (prescaler)	271
5.5 5.6	Clock Control Register (CCR - 0xE002 4008) Counter Increment Interrupt Register (CIIR -		7.1	Prescaler Integer register (PREINT - 0xE002 4080)	271
5.7	0xE002 400C)		7.2	Prescaler Fraction register (PREFRAC - 0xE002 4084)	271
5.8	Consolidated time registers		7.3 7.4	Example of prescaler usage Prescaler operation	272 273
Chap	oter 19: LPC21xx/22xx CAN controller	and a	accepta	ance filter	
1	How to read this chapter		4	Pin description	
2	CAN controllers		5	Memory map of the CAN block	
3	Features	276	6	CAN controller registers	277

6.1	Mode Register (MOD: CAN1MOD - 0xE004 4000, CAN2MOD - 0xE004 8000, CAN3MOD - 0x004 C000, CAN4MOD - 0x005 0000) 279	6.14	Transmit Identifier register (TID1, 2, 3 - CAN1TIDn - 0xE004 4034, 44, 54; CAN2TIDn - 0xE004 8034, 44, 54; CAN3TIDn - 0xE004 C034,
6.2	Command Register (CMR: CAN1CMR-		44, 54; CAN4TIDn - 0xE005 0034, 44, 54) . 289
	0xE004 4004, CAN2CMR - 0xE004 8004,	6.15	Transmit Data register A (TDA1, 2, 3: CAN1TDAn
	CAN3CMR - 0x004 C004, CAN4CMR - 0x005		- 0xE004 4038, 48, 58; CAN2TDAn -
	0004)		0xE004 8038, 48, 58; CAN3TDAn - 0xE004 C038,
6.3	Global Status Register (GSR: CAN1GSR -		48, 58; CAN4TDAn - 0xE005 0038, 48, 58). 290
	0xE004 0008, CAN2GSR - 0xE004 8008,	6.16	Transmit Data Register B (TDB1, 2, 3: CAN1TDBn
	CAN3GSR - 0xE004 C008, CAN4GSR 0xE005		- 0xE004 403C, 4C, 5C; CAN2TDBn -
C 4	0008)		0xE004 803C, 4C, 5C; CAN3TDBn - 0xE004
6.4	Interrupt and Capture Register (ICR: CAN1ICR- 0xE004 400C, CAN2ICR - 0xE004 800C,		C03C, 4C, 5C; CAN4TDBn - 0xE005 003C, 4C, 5C)290
	CAN3ICR - 0xE004 C00C, CAN4ICR - 0xE005	7	•
	000C)	7	CAN controller operation
6.5	Interrupt Enable Register (IER: CAN1IER -	7.1 7.2	Error handling
0.0	0xE004 4010, CAN2IER 0xE004 8010, CAN3IER	7.2 7.3	Sleep mode 291 Interrupts 292
	- 0xE004 C010, CAN4IER - 0xE005 0010) 284	7.3 7.4	Transmit priority
6.6	Bus Timing Register (BTR: CAN1BTR -		
	0xE004 4014, CAN2BTR - 0xE004 8014,	8	Central Transmit Status Position (CANTYSP
	CAN3BTR - 0xE004 C014, CAN4BTR - 0xE005	8.1	Central Transmit Status Register (CANTxSR - 0xE004 0000)
	0014)	8.2	Central Receive Status Register (CANRxSR -
6.7	Error Warning Limit Register (EWL: CAN1EWL -	0.2	0xE004 0004)
	0xE004 4018, CAN2EWL - 0xE004 8018,	8.3	Central Miscellaneous Status Register (CANMSR
	CAN3EWL - 0xE004 C018, CAN4EWL - 0xE005		- 0xE004 0008)
6.8	0018)	9	Global acceptance filter 293
0.0	CAN2SR - 0xE004 801C, CAN3SR - 0xE004	10	Acceptance filter registers 296
	C01C, CAN4SR - 0xE005 001C) 286	10.1	Acceptance Filter Mode Register (AFMR -
6.9	Receive Frame Status register (RFS - CAN1RFS		0xE003 C000)
	- 0xE004 4020, CAN2RFS - 0xE004 8020,	10.2	Standard Frame Individual Start Address register
	CAN3RFS - 0xE004 C020, CAN4RFS - 0xE005		(SFF_sa - 0xE003 C004)
	0020)	10.3	Standard Frame Group Start Address Register
6.10	Receive Identifier register (RID - CAN1RID -		(SFF_GRP_sa - 0xE003 C008)
	0xE004 4024, CAN2RID - 0xE004 8024,	10.4	Extended Frame Start Address Register (EFF_sa
	CAN3RID - 0xE004 C024, CAN4RID - 0xE005	10.5	- 0xE003 C00C)
6.11	0024)	10.5	Extended Frame Group Start Address Register (EFF_GRP_sa - 0xE003 C010) 297
0.11	0xE004 4028, CAN2RDA - 0xE004 8028,	10.6	End of AF Tables register (ENDofTable -
	CAN3RDA - 0xE004 C028, CAN4RDA - 0xE005	10.0	0xE003 C014)
	0028)	10.7	LUT Error Address register (LUTerrAd -
6.12	Receive Data register B (RDB: CAN1RDB -		0xE003 C018)
	0xE004 402C, CAN2RDB - 0xE004 802C,	10.8	LUT Error register (LUTerr - 0xE003 C01C) 298
	CAN3RDB - 0xE004 C02C, CAN4RDB - 0xE005	11	Examples of acceptance filter tables and ID
	002C)		index values 299
6.13	Transmit Frame Information register (TFI1, 2, 3 -	12	Fullcan mode
	CAN1TF1n - 0xE004 4030, 40, 50; CAN2TFIn -		
	0xE004 8030, 40, 50; CAN3TFIn - 0xE004 C030,		
	40, 50; CAN4TFIn - 0xE005 0030, 40, 50) 289		
Chap	ter 20: LPC21xx/22xx Analog-to-Digital Co	nverter	(ADC)
1	How to read this chapter 303	5.1	ADC Control Register (ADCR -
2	Features		0xE003 4000)
3	Description	5.2	ADC Global Data Register (ADGDR -
4	Pin description		0xE003 4004)
5	Register description	5.3	ADC Status Register (ADSTAT -
-			0xE003 4004)

5.4	ADC Interrupt Enable Register (ADINTEN - 0xE003 400C)	308	6 6.1	Operation	
5.5	ADC Data Registers (ADDR0 to ADDR7-		6.2	Interrupts	310
	0xE003 4010 to 0xE003 402C)	309	6.3	Accuracy vs. digital receiver	310
Chap	ter 21: LPC21xx/22xx Flash memory o	contro	ller		
1	How to read this chapter	311	9.4	Write to RAM <start address=""></start>	
2	Flash boot loader	311		<number bytes="" of=""></number>	
3	Features	311	9.5	Read memory <address> <no. bytes="" of=""></no.></address>	
4	Applications	312	9.6	Prepare sector(s) for write operation <start se<="" td=""><td></td></start>	
5	Description		9.7	number> <end number="" sector=""></end>	324
5.1	Memory map after any reset		9.7	Copy RAM to Flash <flash address=""> <ram address=""> <no bytes="" of=""></no></ram></flash>	324
5.2	Criterion for valid user code		9.8	Go <address> <mode></mode></address>	
5.3	Communication protocol		9.9	Erase sector(s) <start number="" sector=""> <end< td=""><td>323</td></end<></start>	323
5.4	ISP command format		3.3	sector number>	325
5.5	ISP response format		9.10	Blank check sector(s) <sector number=""> <end< td=""><td></td></end<></sector>	
5.6	ISP data format		0.10	sector number>	
5.7	ISP flow control	314	9.11	Read Part Identification number	326
5.8	ISP command abort	314	9.12	Read Boot code version number	
5.9	Interrupts during ISP	314	9.13	Compare <address1> <address2></address2></address1>	
5.10	Interrupts during IAP	315		<no bytes="" of=""></no>	327
5.11	RAM used by ISP command handler		9.14	ISP Return codes	
5.12	RAM used by IAP command handler		10	IAP commands	328
5.13	RAM used by RealMonitor		10.1	Prepare sector(s) for write operation	
5.14	Boot process flowchart	316	10.2	Copy RAM to Flash	
6	Sector numbers	317	10.3	Erase sector(s)	
7	Flash content protection mechanism	318	10.4	Blank check sector(s)	
8	Code Read Protection (CRP)	318	10.5	Read Part Identification number	
8.1	Bootloader options		10.6	Read Boot code version number	
9	ISP commands		10.7	Compare <address1> <address2></address2></address1>	
9.1	Unlock <unlock code=""></unlock>			<no bytes="" of=""></no>	333
9.2	Set Baud Rate <baud rate=""> <stop bit=""></stop></baud>		10.8	IAP Status codes	333
9.3	Echo <setting></setting>		11	JTAG Flash programming interface	334
Chap	oter 22: LPC21xx/22xx On-chip serial k		ader fo	or LPC2210/20/90	
1	How to read this chapter	335	16.2	Set Baud Rate <baud rate=""> <stop bit=""></stop></baud>	340
2	Description		16.3	Echo <setting></setting>	341
3	Memory map after reset		16.4	Write to RAM <start address=""></start>	
				<number bytes="" of=""></number>	341
4	Communication protocol		16.5	Read Memory <address> <number bytes="" of=""></number></address>	342
5	ISP command format		16.6	Go <address> <mode></mode></address>	342
6	ISP response format	337	16.7	Read Part ID	
7	ISP data format	337	16.8	Read Boot code version	
8	ISP flow control	338	16.9	Compare <address1> <address2> <number< td=""><td></td></number<></address2></address1>	
9	ISP command abort	338		bytes>	343
10	Interrupts during ISP		16.10	ISP Return Codes Summary	
11			17	IAP Commands	
	Interrupts during IAP		17.1	Read Part ID	
12	RAM used by ISP command handler		17.2	Read Boot code version	
13	RAM used by IAP command handler		17.3	Compare	
14	RAM used by RealMonitor		17.4	IAP Status Codes Summary	347
15	Boot process flowchart		18	JTAG external memory programming	c · -
16	ISP commands	339		interface	348
16.1	Unlock <unlock code=""></unlock>	340			

Chapter 26: Supplementary information

Cha	Chapter 23: LPC21xx/22xx Embedded ICE controller						
1	How to read this chapter 349	5	Pin description	350			
2	Features	6	Reset state of multiplexed pins	351			
3	Applications	7	Register description	351			
4	Description	8	Block diagram	351			
Cha	pter 24: LPC21xx/22xx Embedded Trace Mo	dule (E	ЕТМ)				
1	How to read this chapter 353	5	Pin description	354			
2	Features	6	Reset state of multiplexed pins	355			
3	Applications	7	Register description	355			
4	Description	8	Block diagram	356			
4.1	ETM configuration						
Cha	pter 25: LPC21xx/22xx RealMonitor						
1	How to read this chapter 357	5.3	Undef mode				
2	Features	5.4	SVC mode				
3	Applications	5.5	Prefetch Abort mode				
4	Description	5.6 5.7	Data Abort mode	361 361			
4.1	RealMonitor Components	5.7 5.8	FIQ mode	361			
4.2	RMHost	5.9	Handling exceptions	361			
4.3	RMTarget	5.10	RealMonitor exception handling				
4.4	How RealMonitor works	5.11	RMTarget initialization	362			
5	How To Enable RealMonitor	5.12	Code Example	362			
5.1	Adding stacks	6	RealMonitor Build Options	365			
5.2	IRQ mode						
Cha	pter 26: Supplementary information						
1	Abbreviations	3	Tables	370			
2	Legal information 369	4	Figures	376			
2.1	Definitions	5	Contents	378			
2.2	Disclaimers						
2.3	Trademarks						

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.



Date of release: 2 April 2008
Document identifier: UM10114_3