# Learning Tidy3D

Yankun (Alex) Meng



#### **Lecture Outline**

• Introduction to Tidy3D


#### Introduction

FDTD method allows you to compute the evolution of electromagnetic field in the *time domain*.

Given some device  $\epsilon(\vec{r})$  and an incident field or current source  $\vec{J}(\vec{r},t)$ , internally, FDTD solves these maxwell's equations:

$$\nabla \times \vec{E}(\vec{r}, t) = -\mu_0 \frac{\vec{H}(\vec{r}, t)}{dt} \tag{1}$$

$$abla imes ec{H}(ec{r},t) = \epsilon(ec{r})\epsilon_0 rac{dec{E}(ec{r},t)}{dt} + ec{J}(ec{r},t)$$

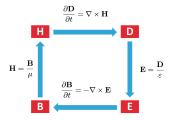



Field Update

## Starting Tidy3D

These software packages should be imported everytime you start a tidy3D project:

```
import tidy3d as td # Main package
import tidy3d.web as web # Used to run the simulation
import matplotlib.pyplot as plt # Used for plotting results
import numpy as np # Used for numerical calculations
```



#### **Before Simulation**

Before the simulation, we have to define some key parameters of the electromagnetic waves that we will use across the simulation:

```
1 lambda_range = (1.1, 1.6)  # wavelength range (μm)
2 freqs = (td.C_0 / lambda_range[1], td.C_0 / lambda_range[0])  # frequency range
3 freq0 = np.mean(freqs)  # center frequency
4 lda0 = td.C_0 / freq0  # center wavelength
5 bandwidth = 0.38  # normalized bandwidth
6 freqw = bandwidth * (freqs[1] - freqs[0]) # bandwidth in Hz
```

**Note:** All numbers in tidy3d are in **microns** ( $\mu m$ )

#### **Basic Workflow**

Here's how to simulate something:

```
1 # Defining a simulation
2 simulation1 = td.Simulation(
3  # inputs
4 )
```

The most basic way of running the simulation is using the *web* object we imported from tidy3d:

```
1 # Running a simulation
2 sim1_data = web.run(simulation1, task_name='any-unique-name', path='data/descriptive-name.
```

Simulation data is stored as an HDF5 file at the file path you specify.



## Simulation Inputs

The 7 required inputs are:

- 1. Computational Domain Size
- 2. Grid Specifications (Discretization size)
- 3. Structures
- 4. Sources
- 5. Monitors
- 6. Run time
- 7. Boundary Condition Specification

We will introduce these 7 parameters by simulating a huygen's metasurface



## 1 Computational Domain Size

Size in x, y, and z directions.

```
1 p = 0.666 #nm → Periodicity
2 Lx, Ly, Lz = p, p, 2 * lda0
3 sim_size = [Lx, Ly, Lz]
4 
5 # Defining a simulation
6 simulation1 = td.Simulation(
7 # A square computational domain
8 size = sim_size
9 )
```



## 2 Grid Specifications

Specifications for the simulation grid along each of the three directions.

```
1 # Define Grid size
2 spec = td.GridSpec.auto(min_steps_per_wvl=40, wavelength=lda0)
3
4 # Defining a simulation
5 simulation1 = td.Simulation(
6  # A square computational domain
7  size = (x, y, z),
8  grid_spec=spec,
9
10 )
```

• Typically, the size of a unit cell is  $\frac{\lambda}{20}$ 



td.GridSpec contains many functions to help define the grid, the most commonly used are:

```
1 td.GridSpec.uniform(dl=grid_size)
2 td.GridSpec.auto(min_steps_per_wvl=40, wavelength=lda0)
```

- uniform Use the same Uniform 1D grid along each of the three directions.
  - **dl** (float) Grid size for uniform grid generation.
- **auto** Use the same non-uniform grid along each of the three directions.
  - min\_steps\_per\_wvl(ConstrainedFloatValue = 10.0) Minimal number of steps per wavelength in each medium.
  - wavelength (float) Wavelength to use for the step size and for dispersive media epsilon.



#### 3 Structures

td.Structure is the meat of the simulation. It defines a physical object that interacts with the electromagnetic fields. The structures field is a tuple of Structure objects that you create.

```
1 # set up simulation
2 sim = td.Simulation(
3     size=sim_size,
4     grid_spec=spec,
5     structures=[superstrate, substrate, cylinder],
```



```
1 # set up simulation
2 td.Structure(
3 # inputs
4 )
```

A structure needs two inputs at least: – **geometry** (td.Box, td.Cylinder, td.Sphere, td.TriangleMesh (STL file), etc.) – **medium** Mediums define the optical properties of the materials within the simulation. (e.g. td.Medium)



According to the paper on huygen's metasurface, I defined these four structures:

```
t = 2 # thickness of the substrate # THIS SHOULD BE CHANGED TO INFINITE
  substrate = td.Structure(
      geometry=td.Box(
          center=(0,0,-t/2),
          size=(td.inf,td.inf,t)
      medium=td.Medium(permittivity=1.45**2, name='oxide'),
      name='substrate'
8
9
  superstrate = td.Structure(
      geometry=td.Box(
          center=(0,0,t/2),
          size=(td.inf,td.inf,t)
      medium=td.Medium(permittivity=1.4**2, name='glass'),
      name='superstrate'
8)
  polymer = td.Structure(
      geometry=td.Box(
          center=(0,0,0),
          size=(td.inf,td.inf,2*t)
      medium=td.Medium(permittivity=1.66**2, name='polymer'),
      name='polymer'
8)
  # construct the silicon resonator
```

#### 4 Sources

Tuple of electric current sources injecting fields into the simulation. Common ones are:

**Plane Wave** – Uniform current distribution on an infinite extent plane. (Doc)

```
pulse = GaussianPulse(freq0=200e12, fwidth=20e12)
pw_source = PlaneWave(size=(inf,0,inf), source_time=pulse, pol_angle=0.1, direction='+')
```

**Point Dipole** - Uniform current source with a zero size. (Doc)

```
pulse = td.GaussianPulse(freq0=200e12, fwidth=20e12)
pt_dipole = td.PointDipole(center=(1,2,3), source_time=pulse, polarization='Ex')
```

See documentation for Other Sources

#### In this case, I defined one plane wave source:

## 5 Monitors

Tuple of monitors in the simulation. Note: monitor names are used to access data after simulation is run.

See Other monitors



## 6 Run time

Total electromagnetic evolution time in seconds.



## 7 Boundary Condition Specification

Specification of boundary conditions along each dimension. If None, PML boundary conditions are applied on all sides.



#### Bonus: Symmetry

Tuple of integers defining reflection symmetry across a plane bisecting the simulation domain normal to the x-, y-, and z-axis at the simulation center of each axis, respectively. Each element can be o (no symmetry), 1 (even, i.e. 'PMC' symmetry) or -1 (odd, i.e. 'PEC' symmetry). Note that the vectorial nature of the fields must be taken into account to correctly determine the symmetry value.

Symmetry can be used to greatly reduce the computational cost ->

