
Low Profile Hard Tonneau Cover Installation Manual

Accessories Inventory

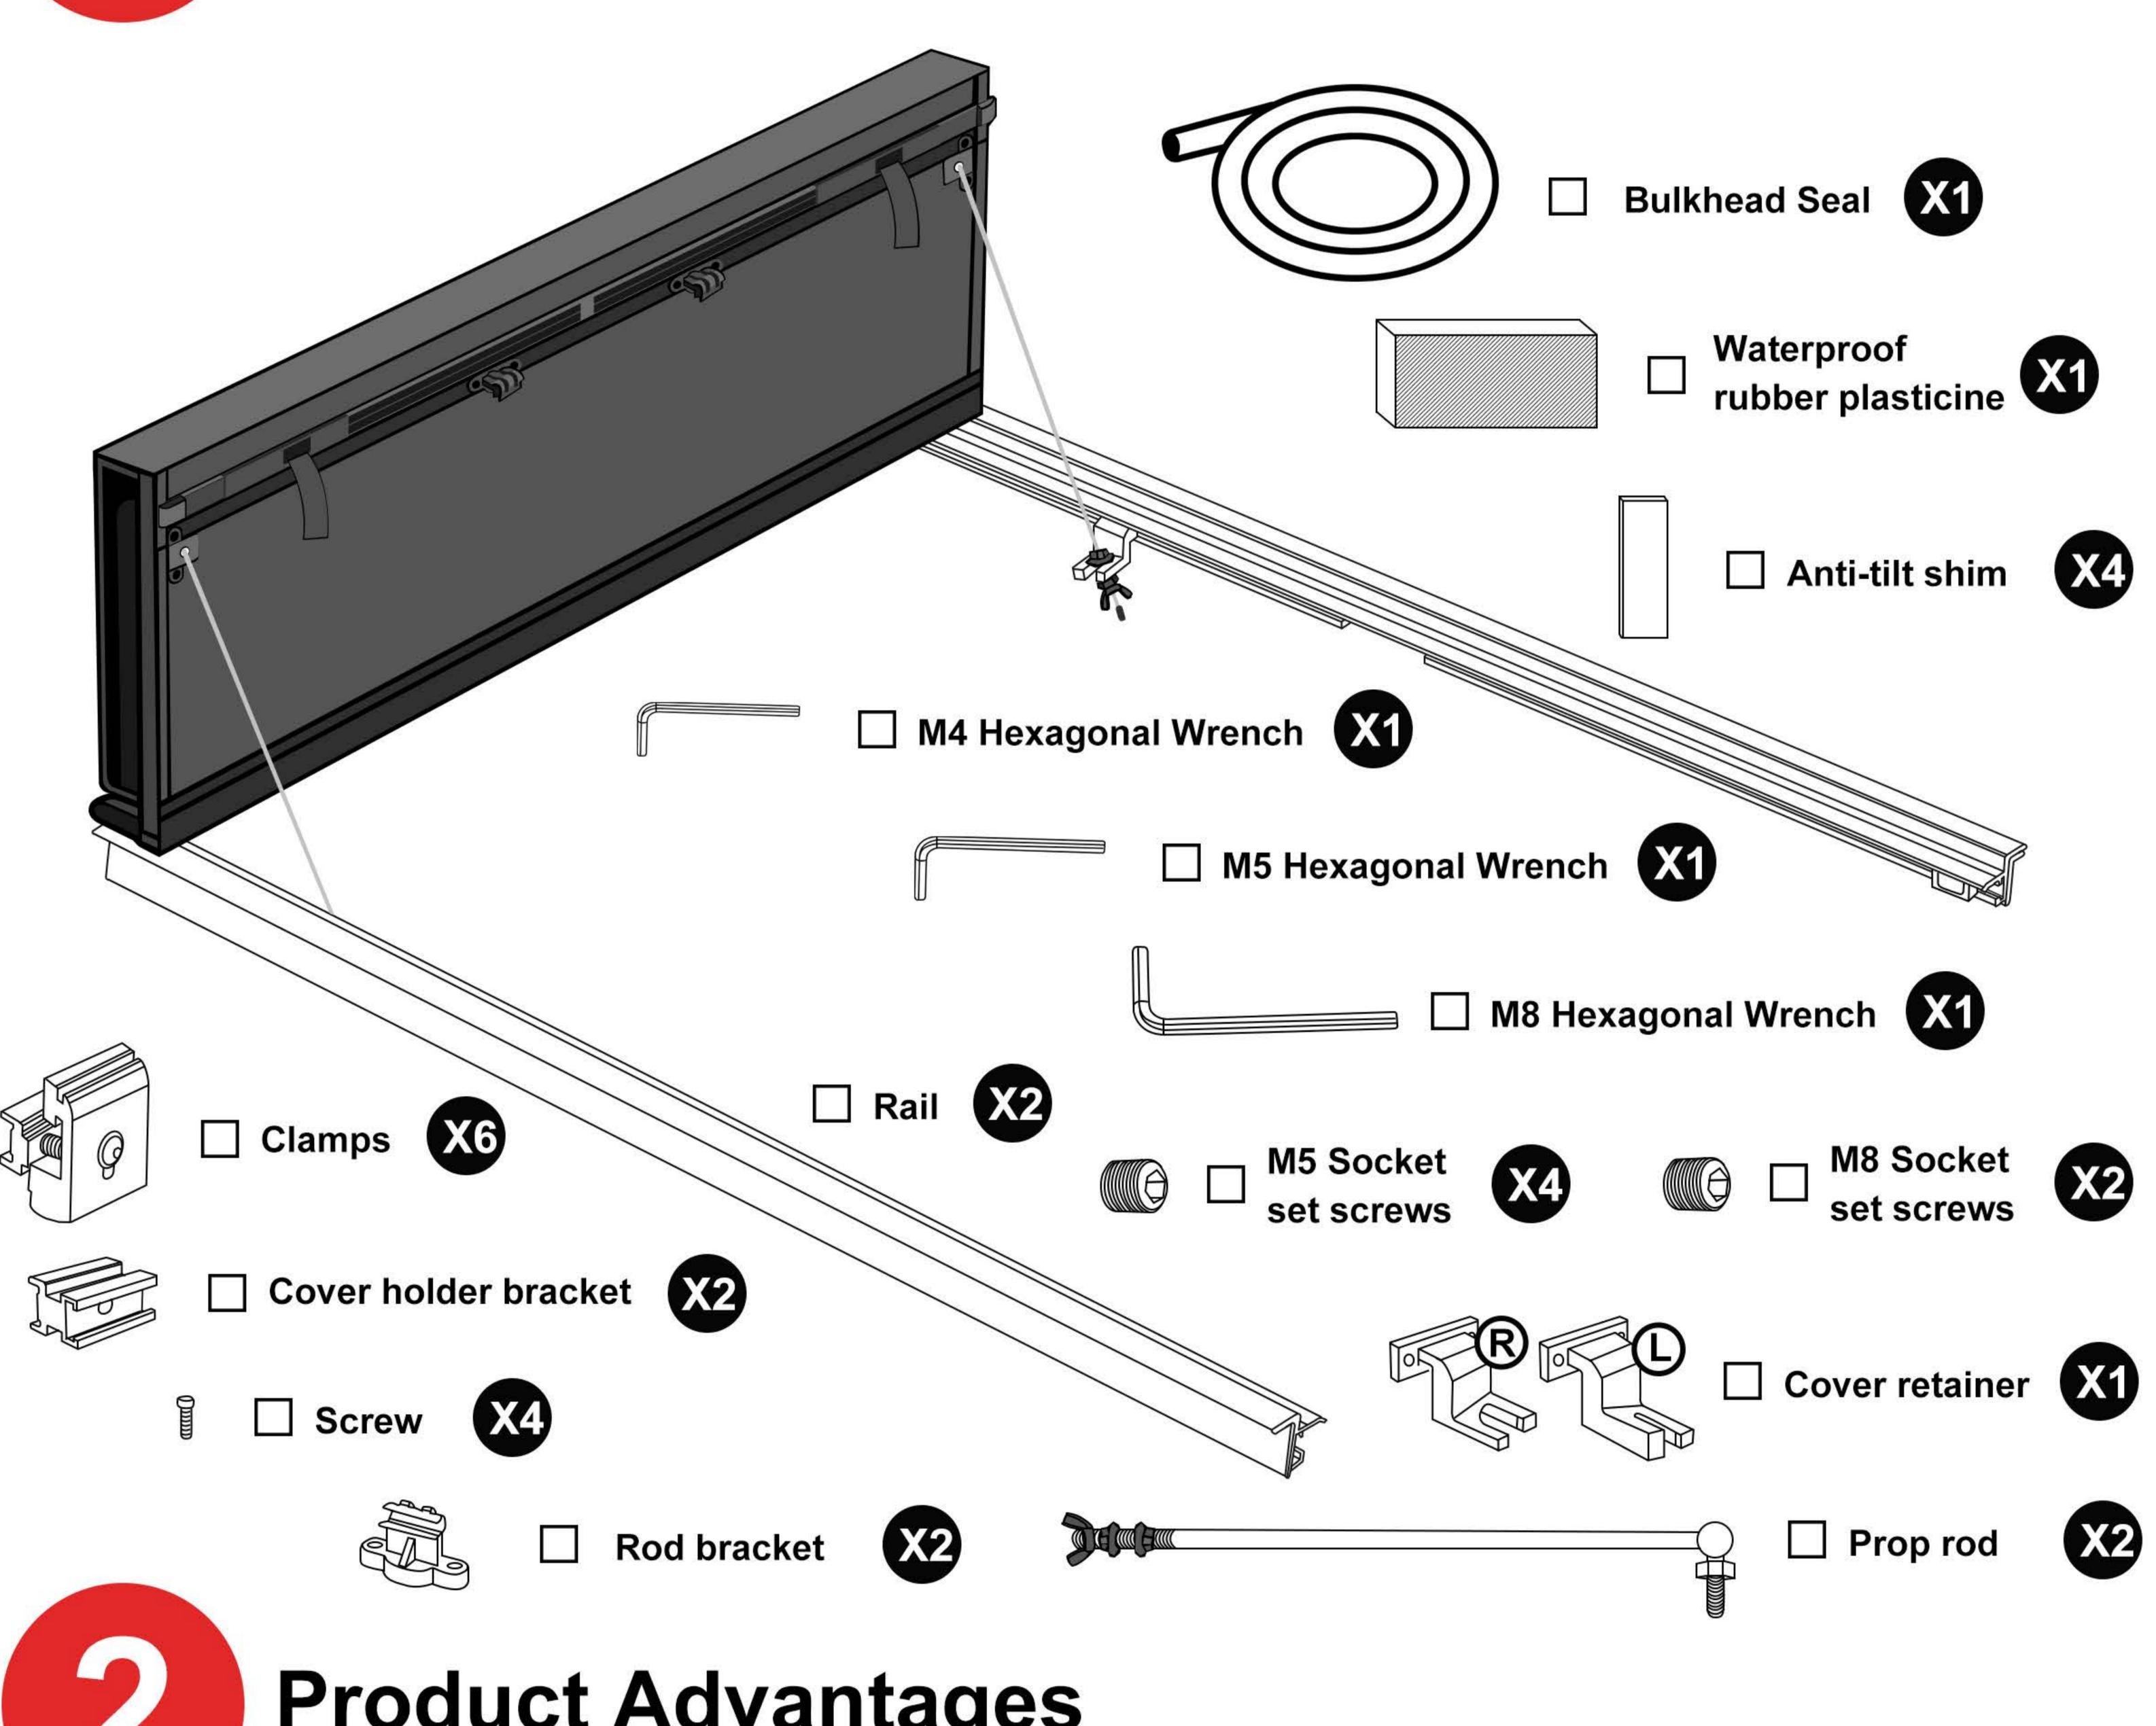


Product Advantages

Our Tonneau Cover Is Made of Several Durable Materials, Such as FRP Panels Aircraft-grade alloy aluminum and High Performance Structural Sealant Etc.


We Offer Matched Tonneau Cover For Dozens Of Car Models, Fit For The Truck Bed Perfectly.


3 Installation

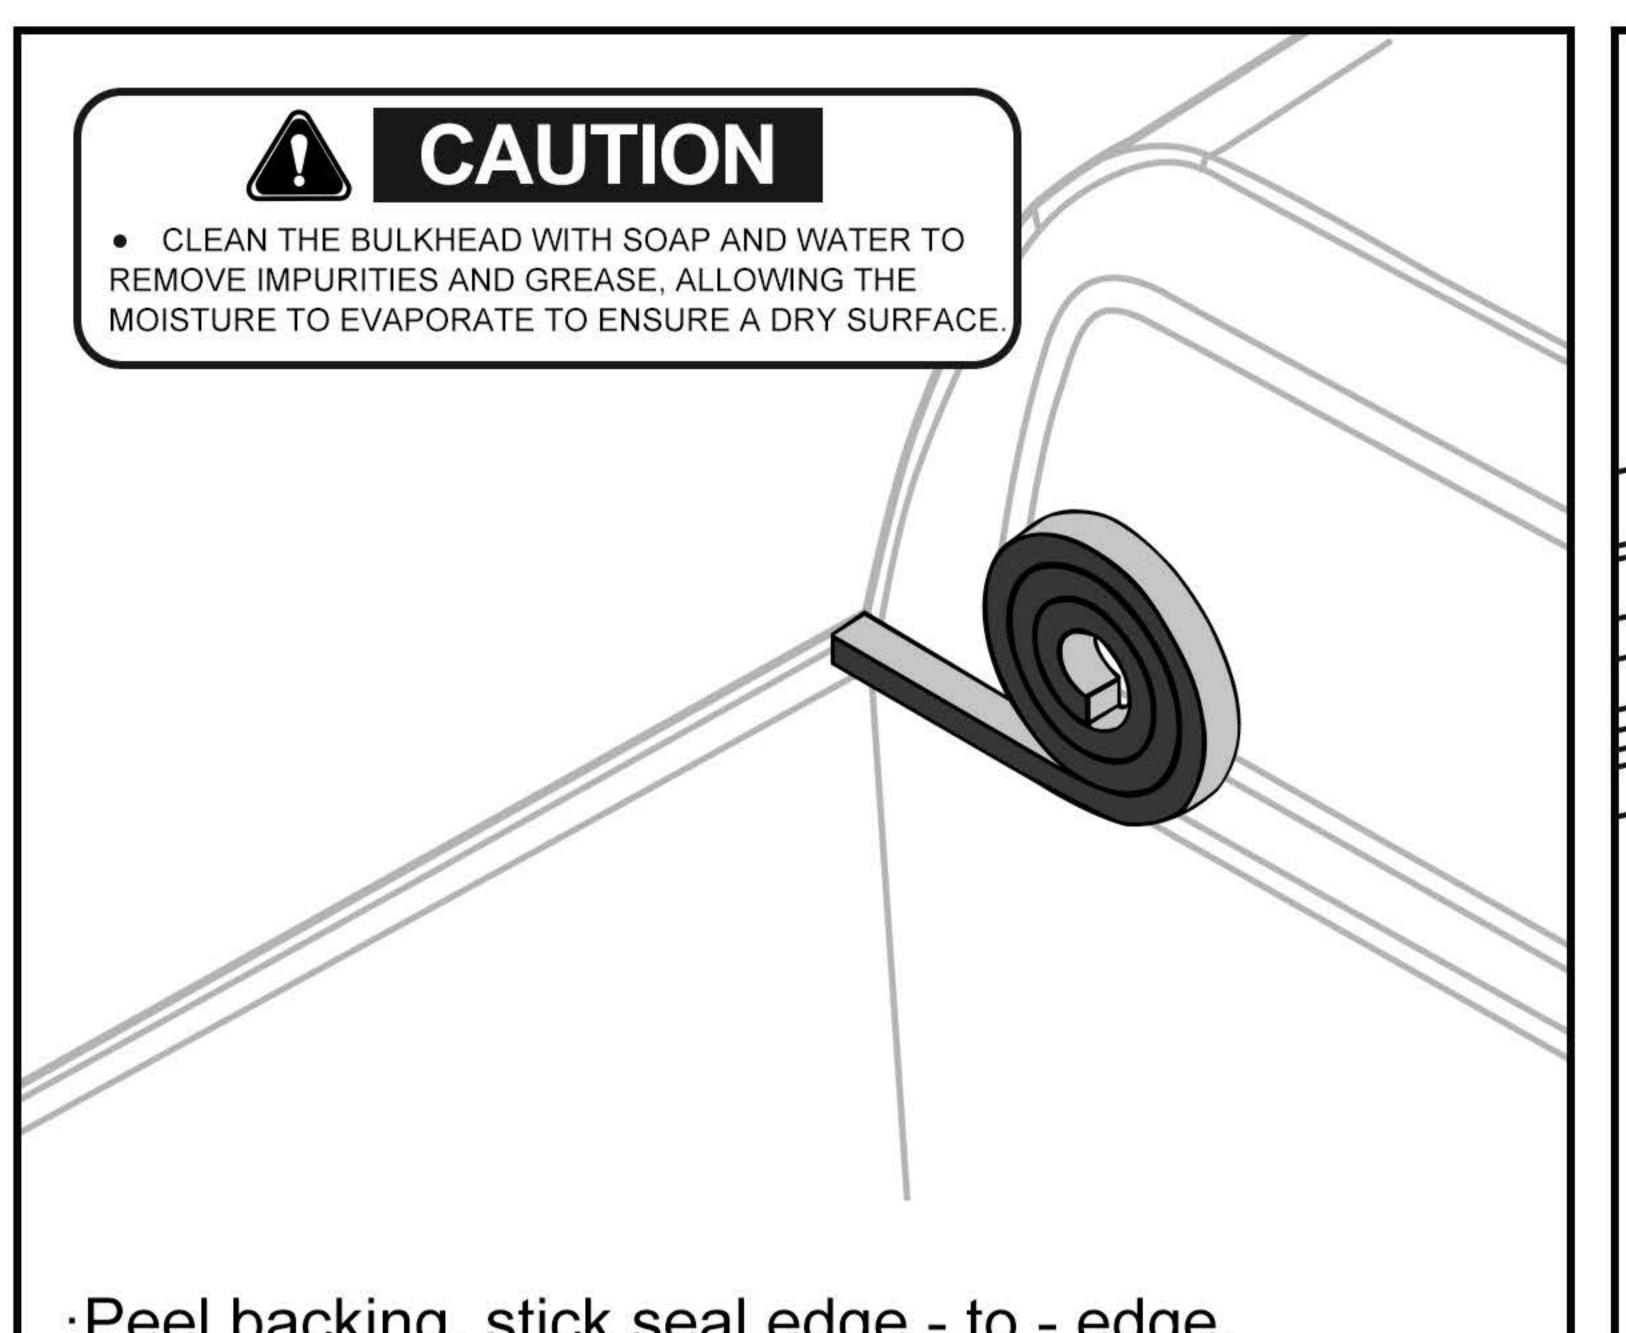


- Peel backing, stick seal edge to edge.
- ·Cut off excess with scissors or utility knife.
- ·Press evenly for adhesion.
- ·Skip seal if truck has plastic bed liner.


Put each part into the track through the notch in the middle and slide to both sides.

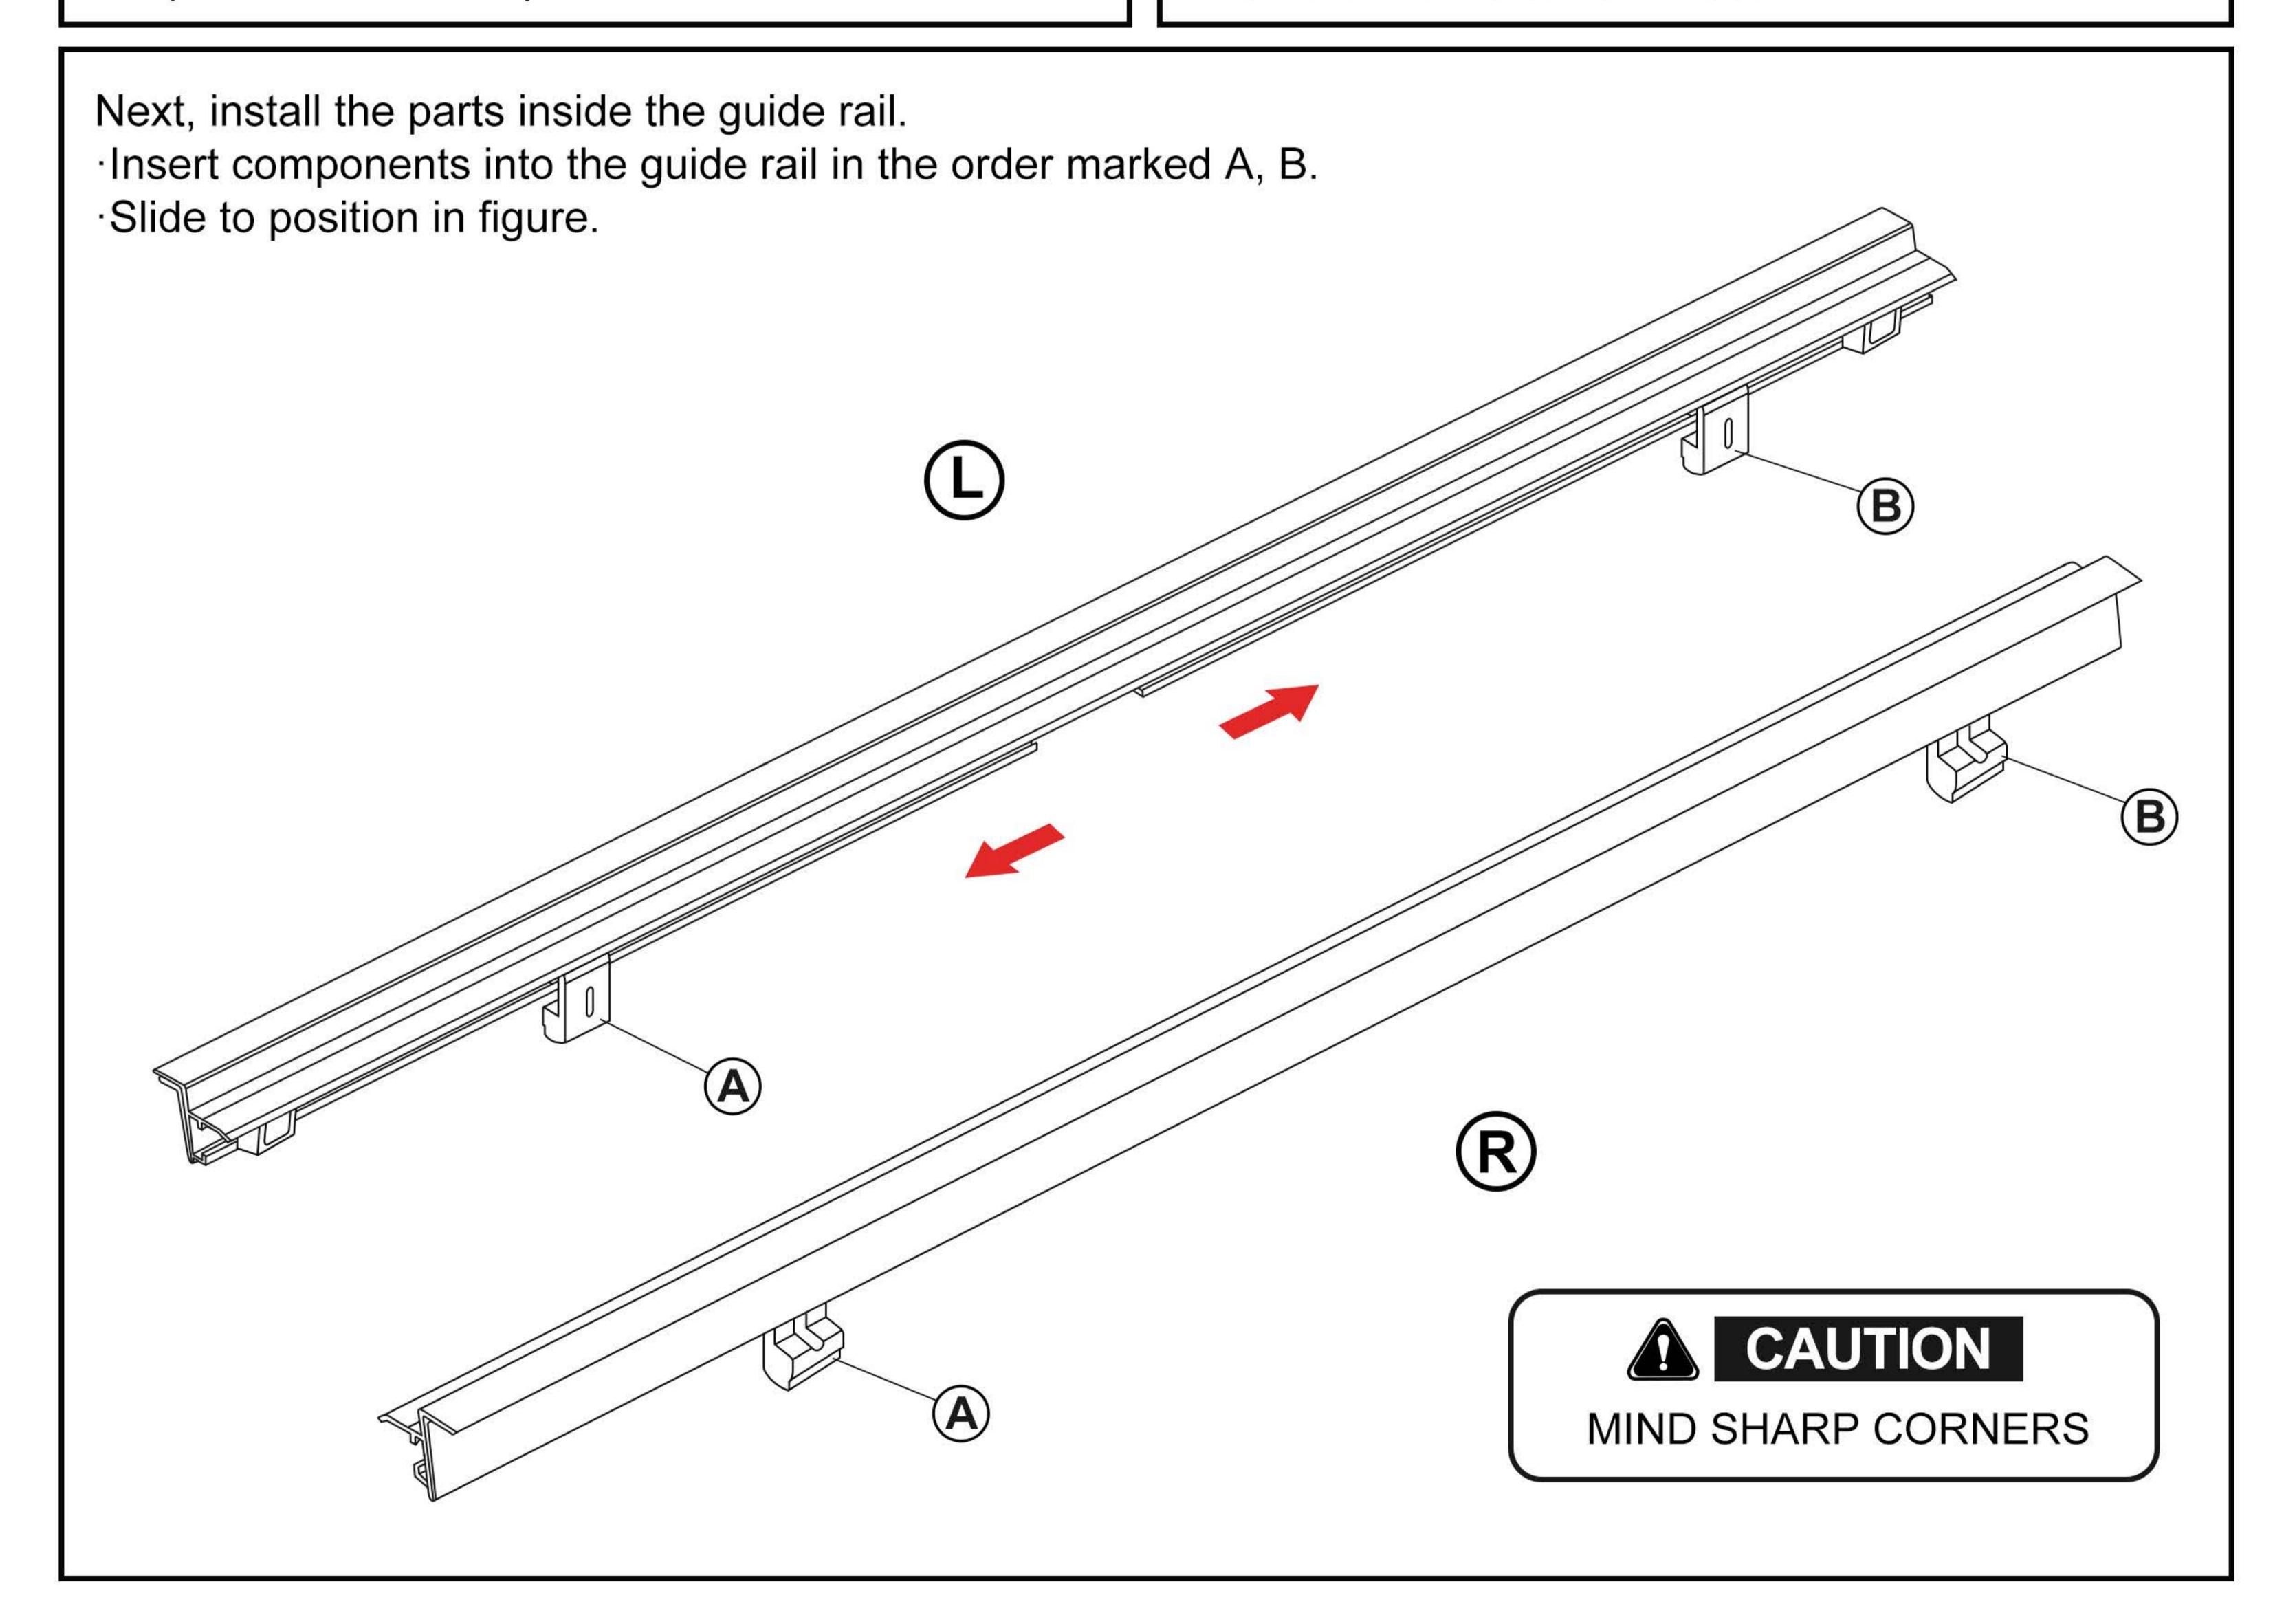


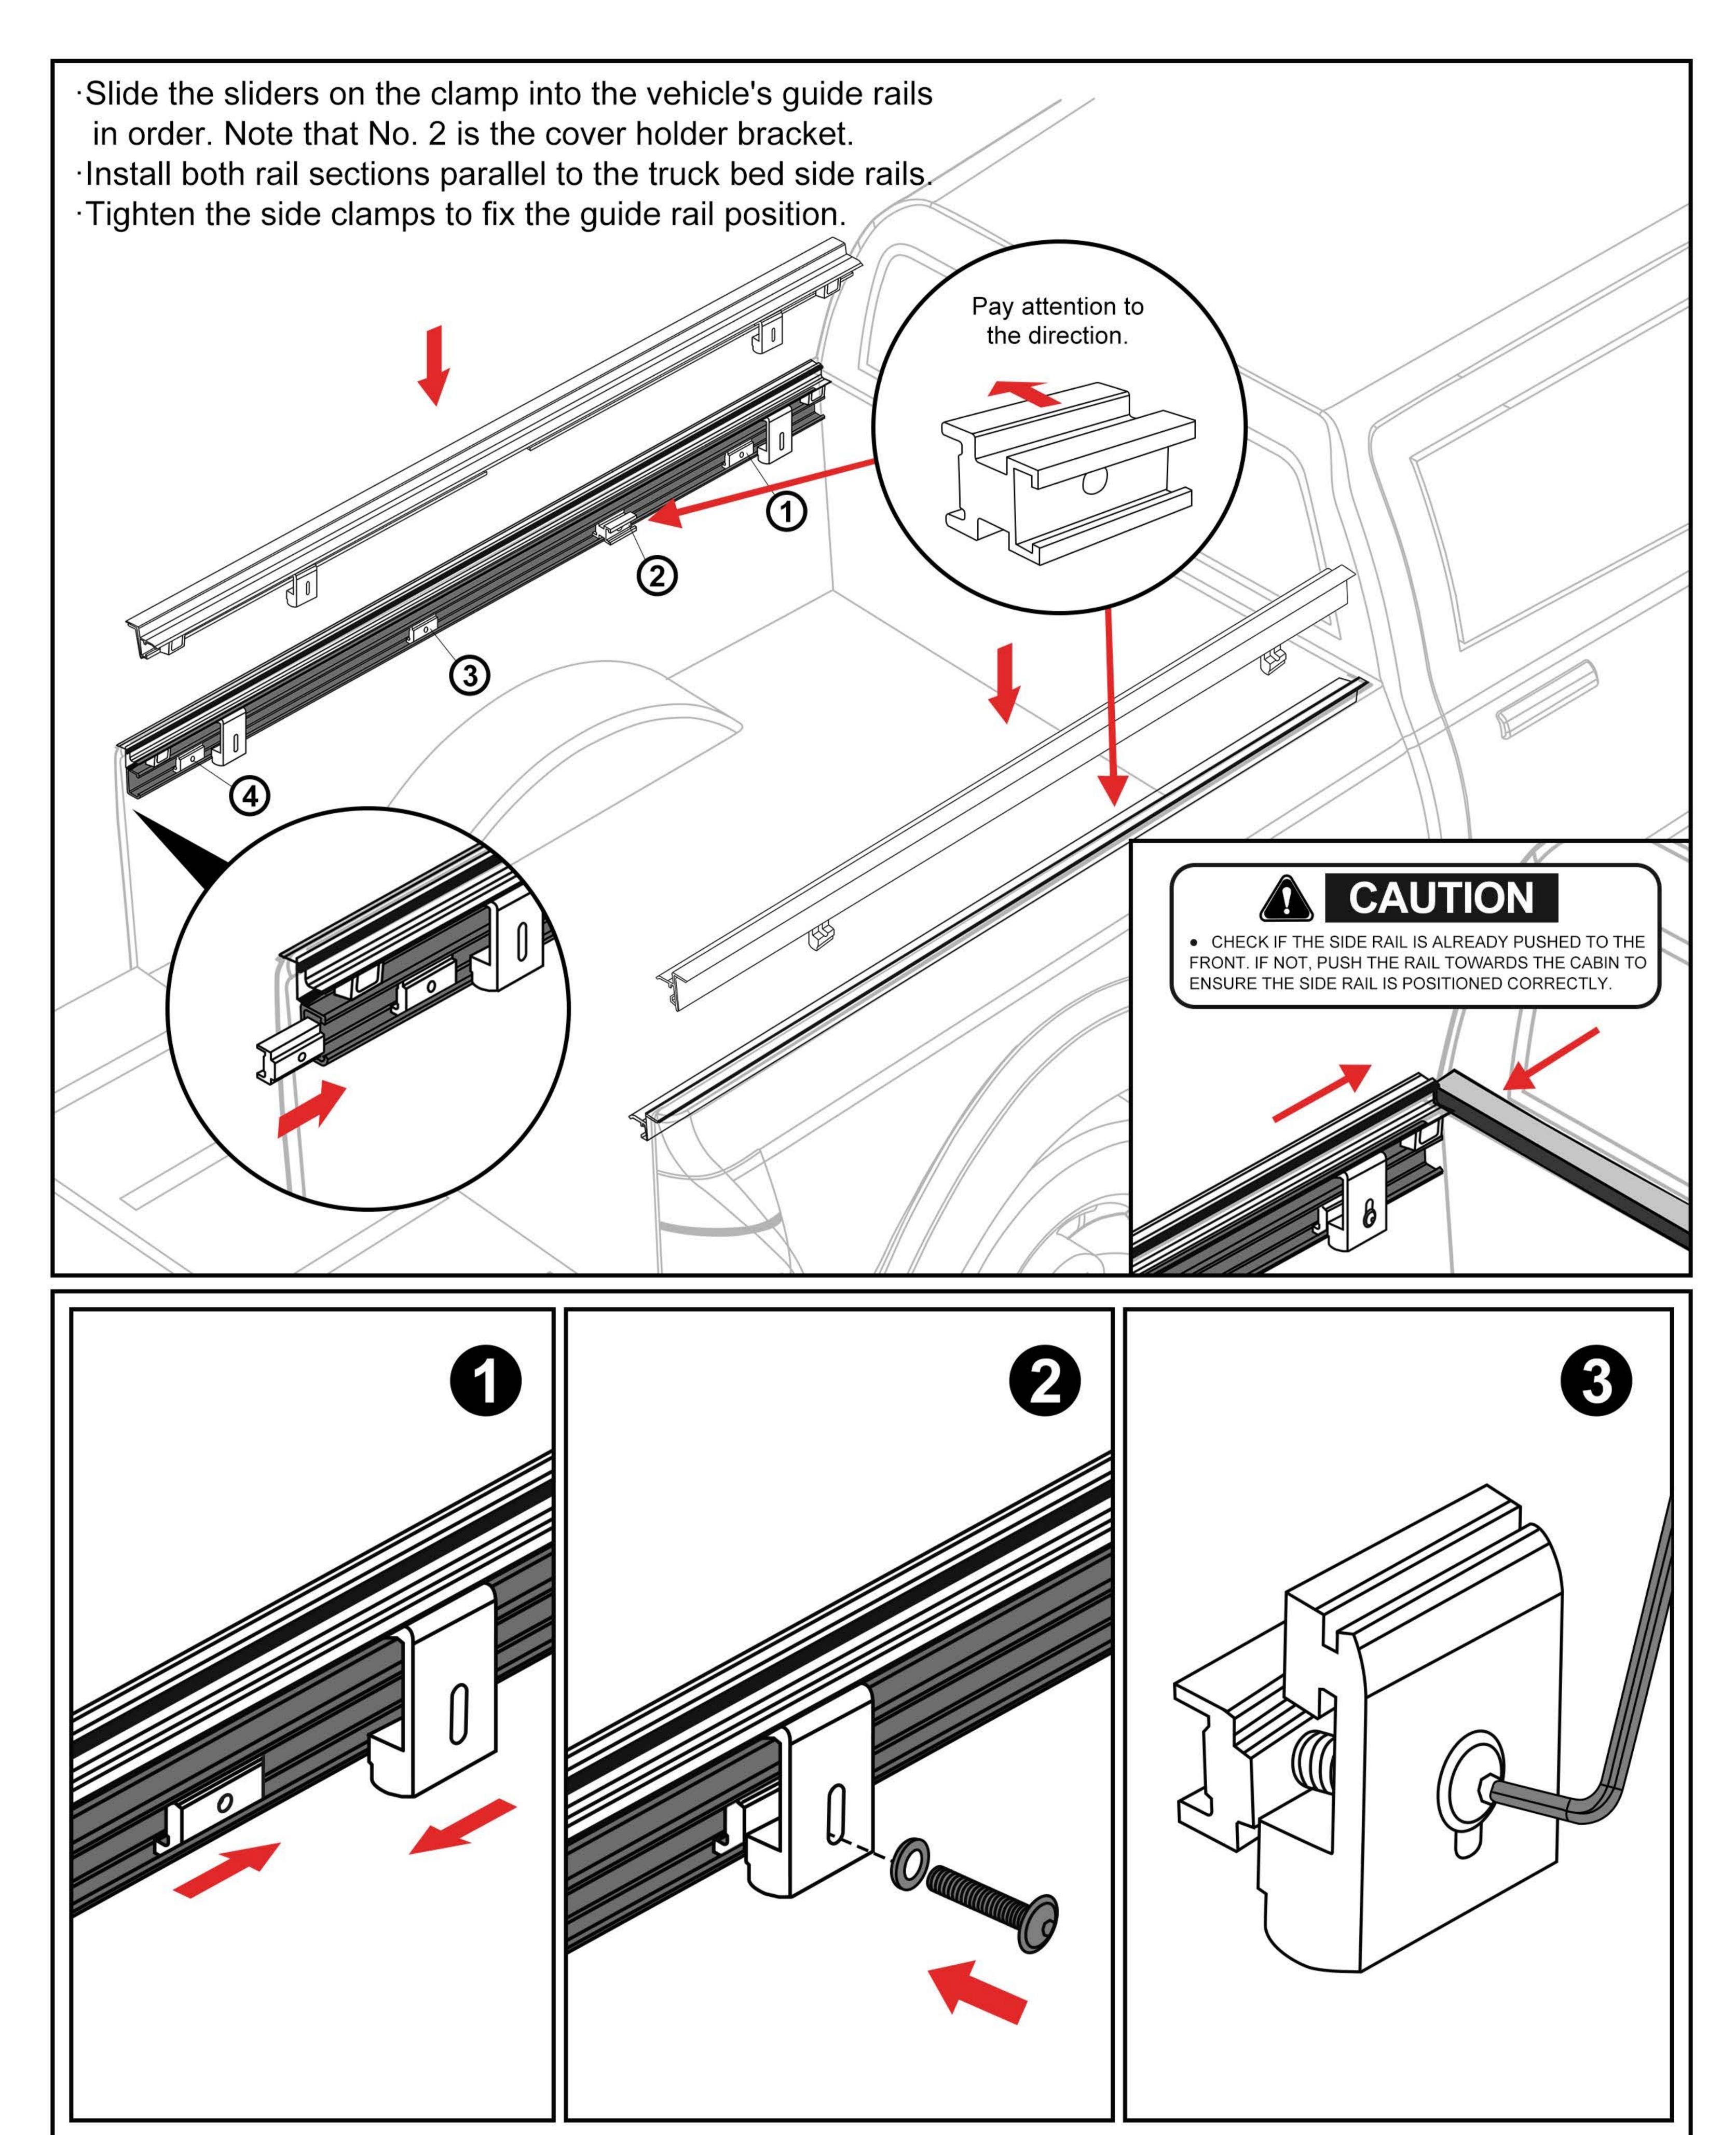



Remove the positioning block from the Clamps, slide it into the guide rail of the hopper, and move it to the position shown in the picture above. Then, connect the fixture with bolts and tighten it to secure the position.

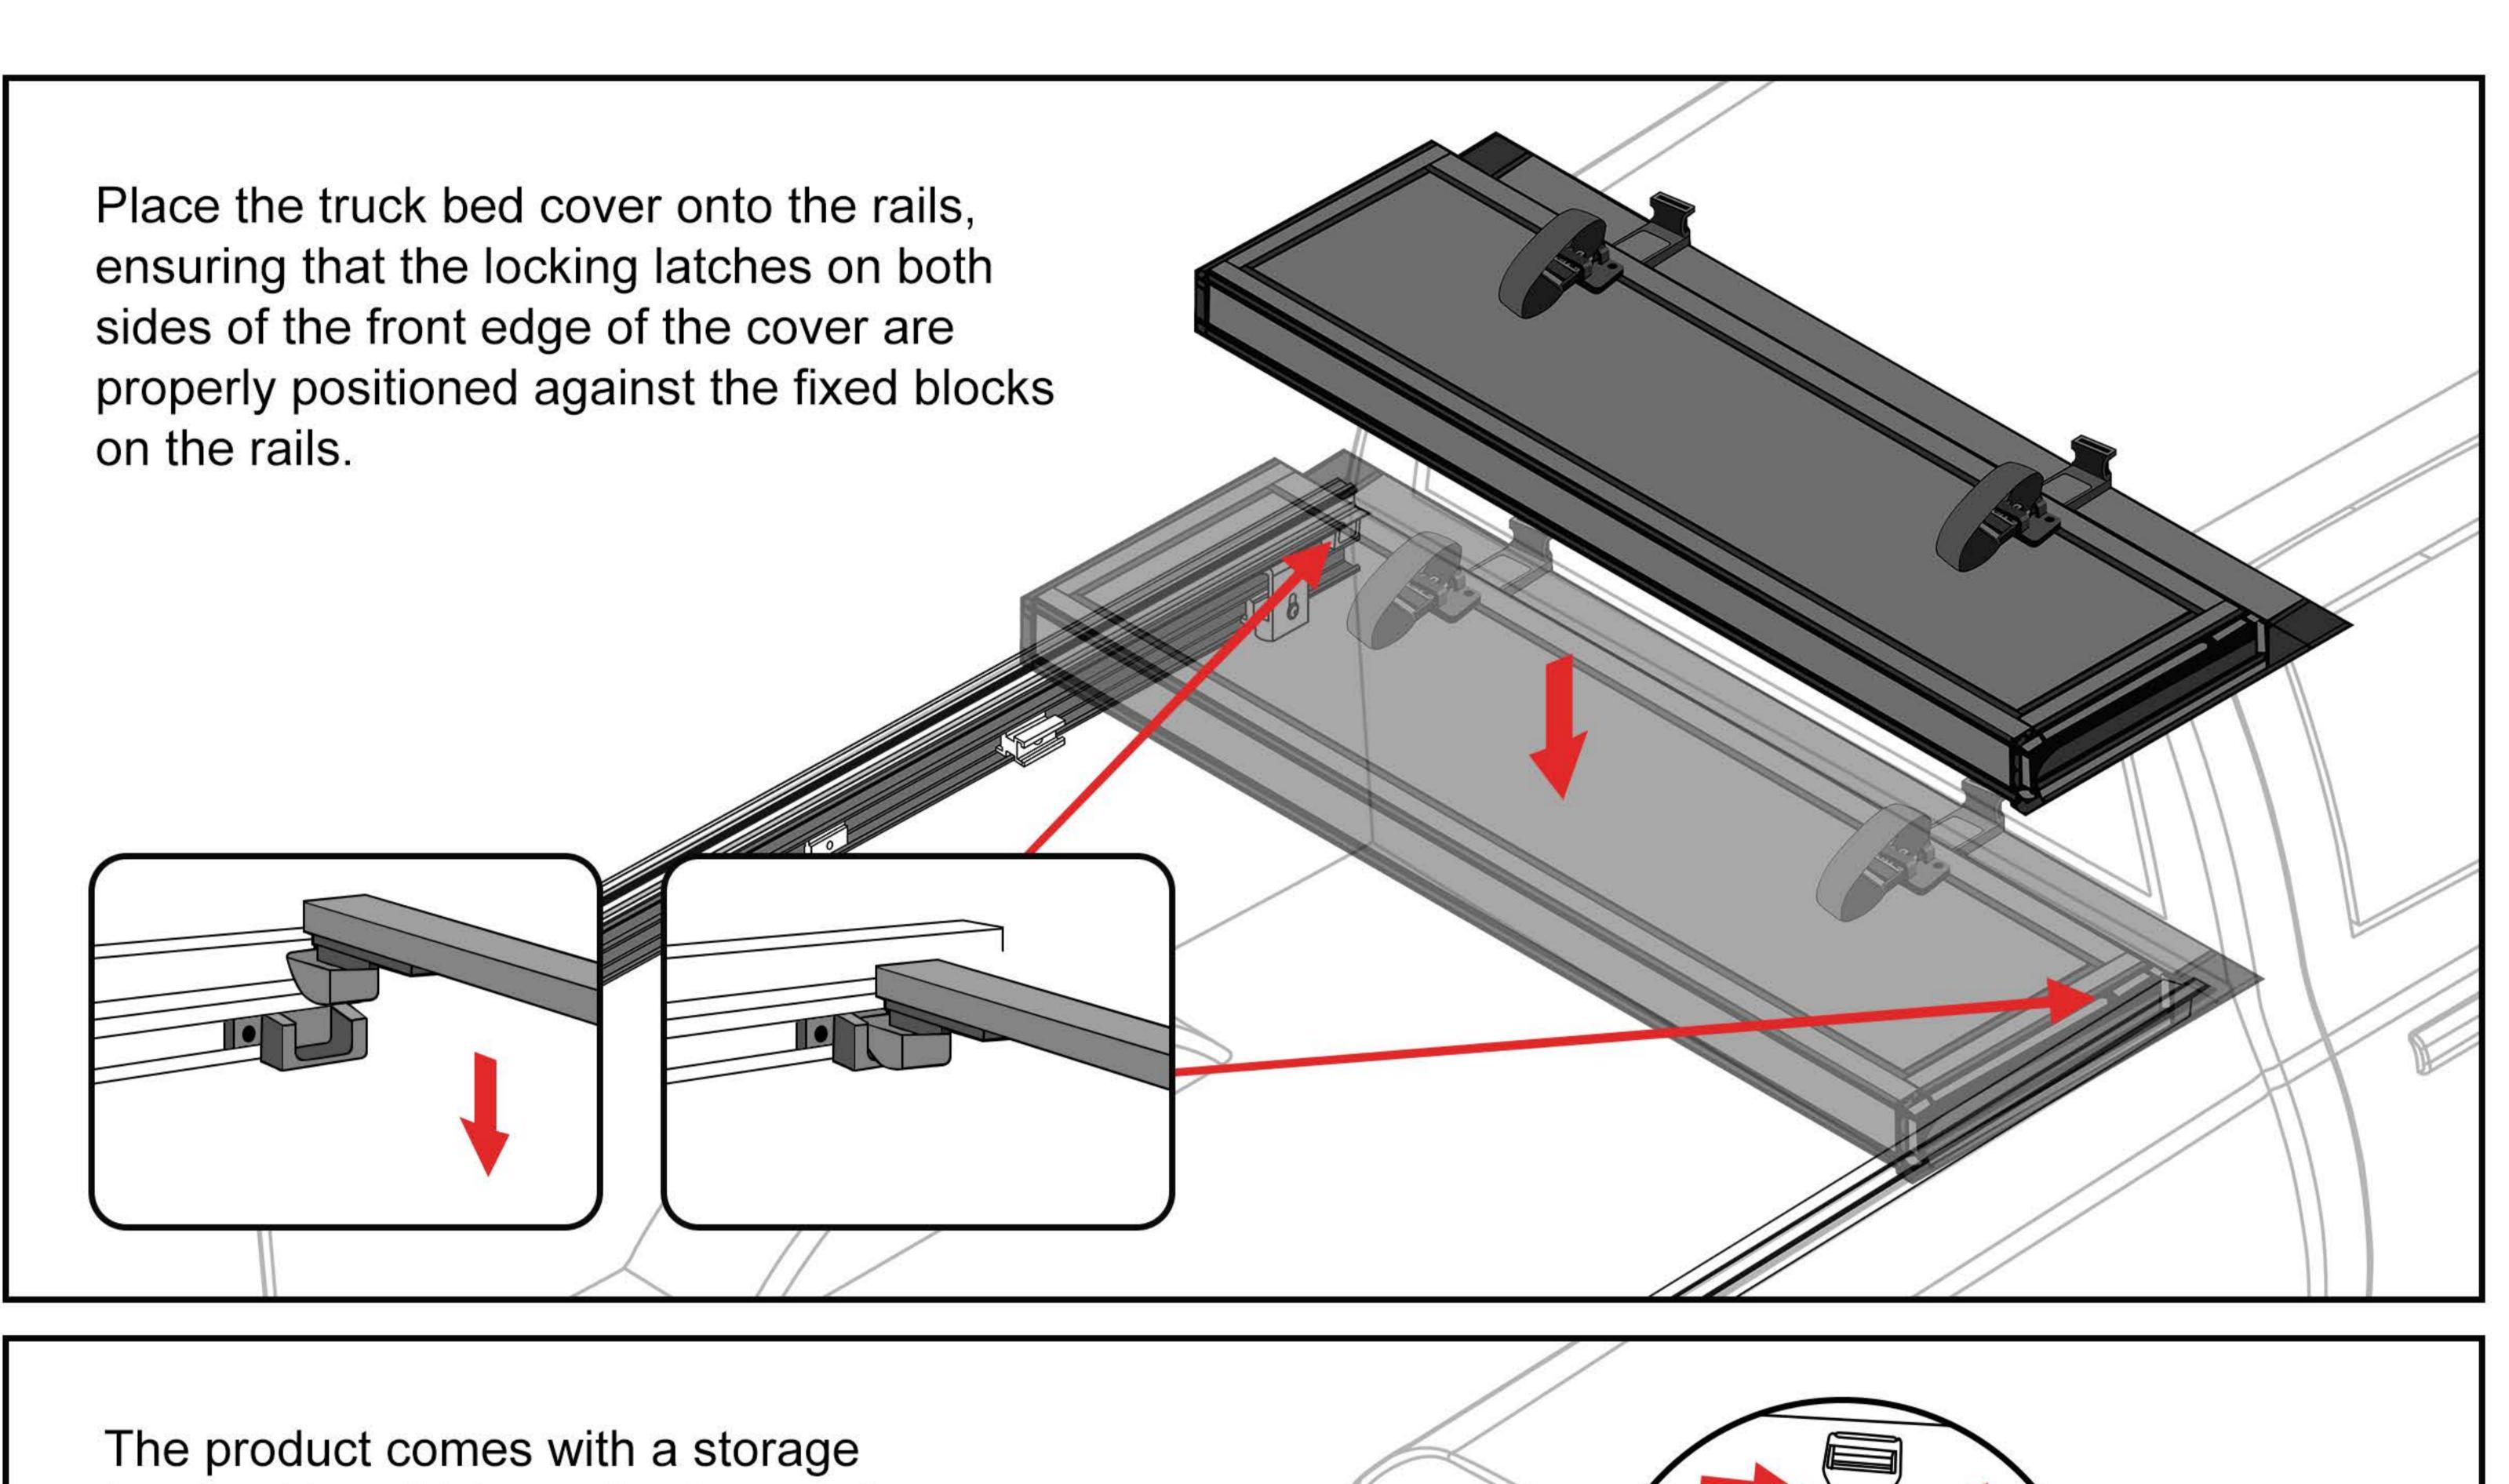


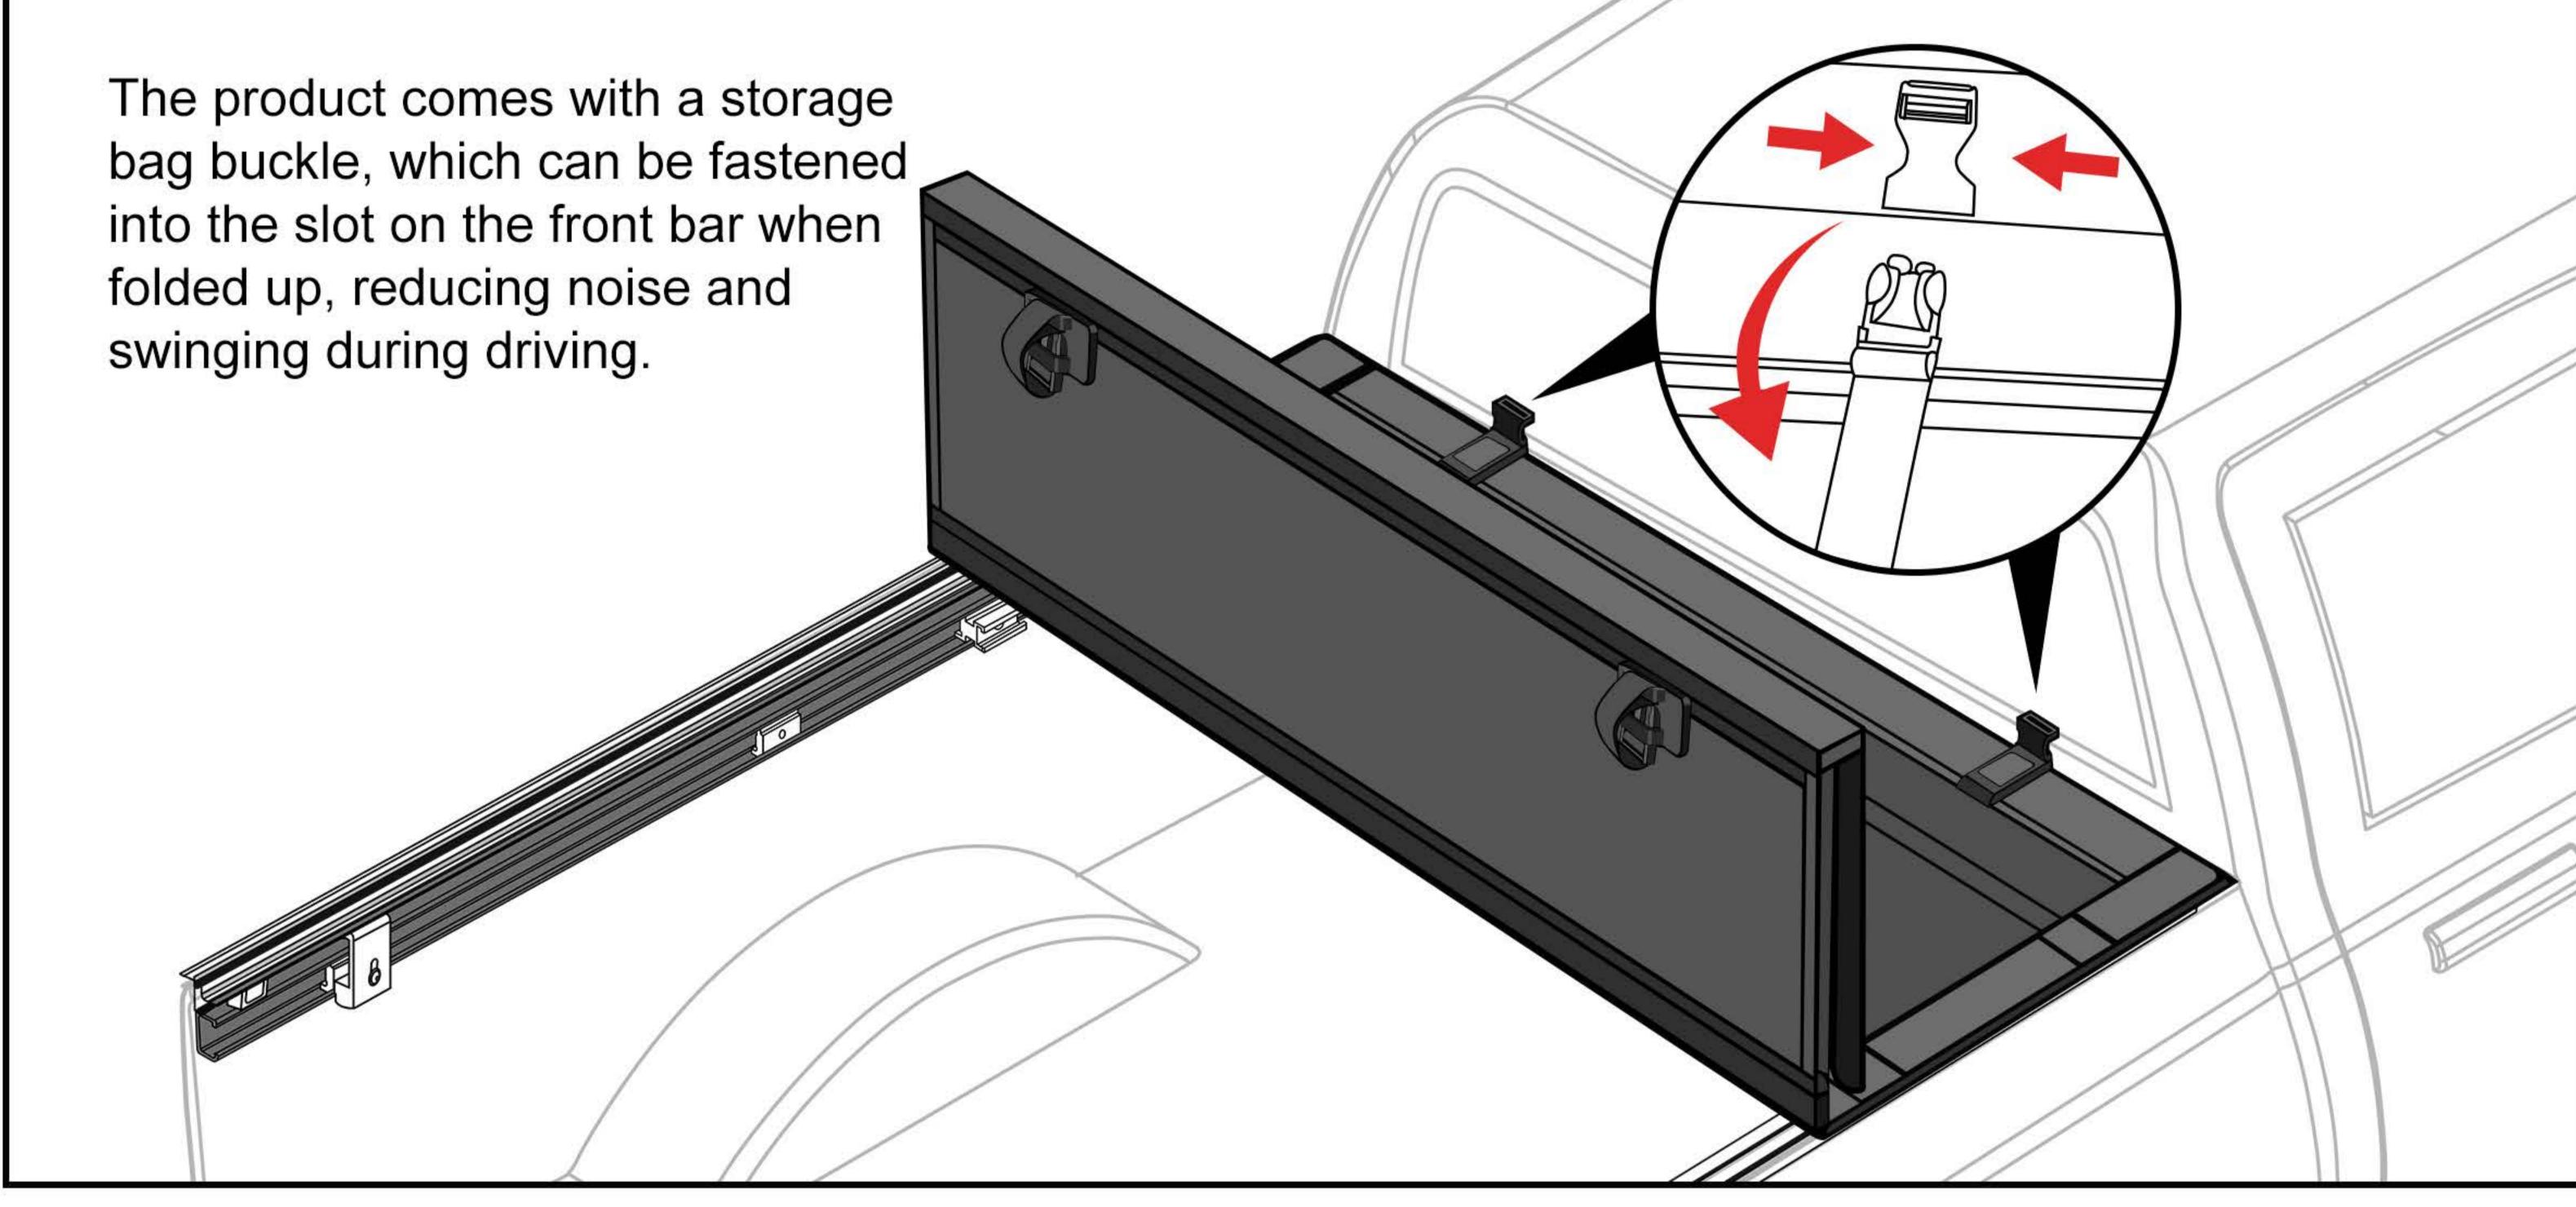


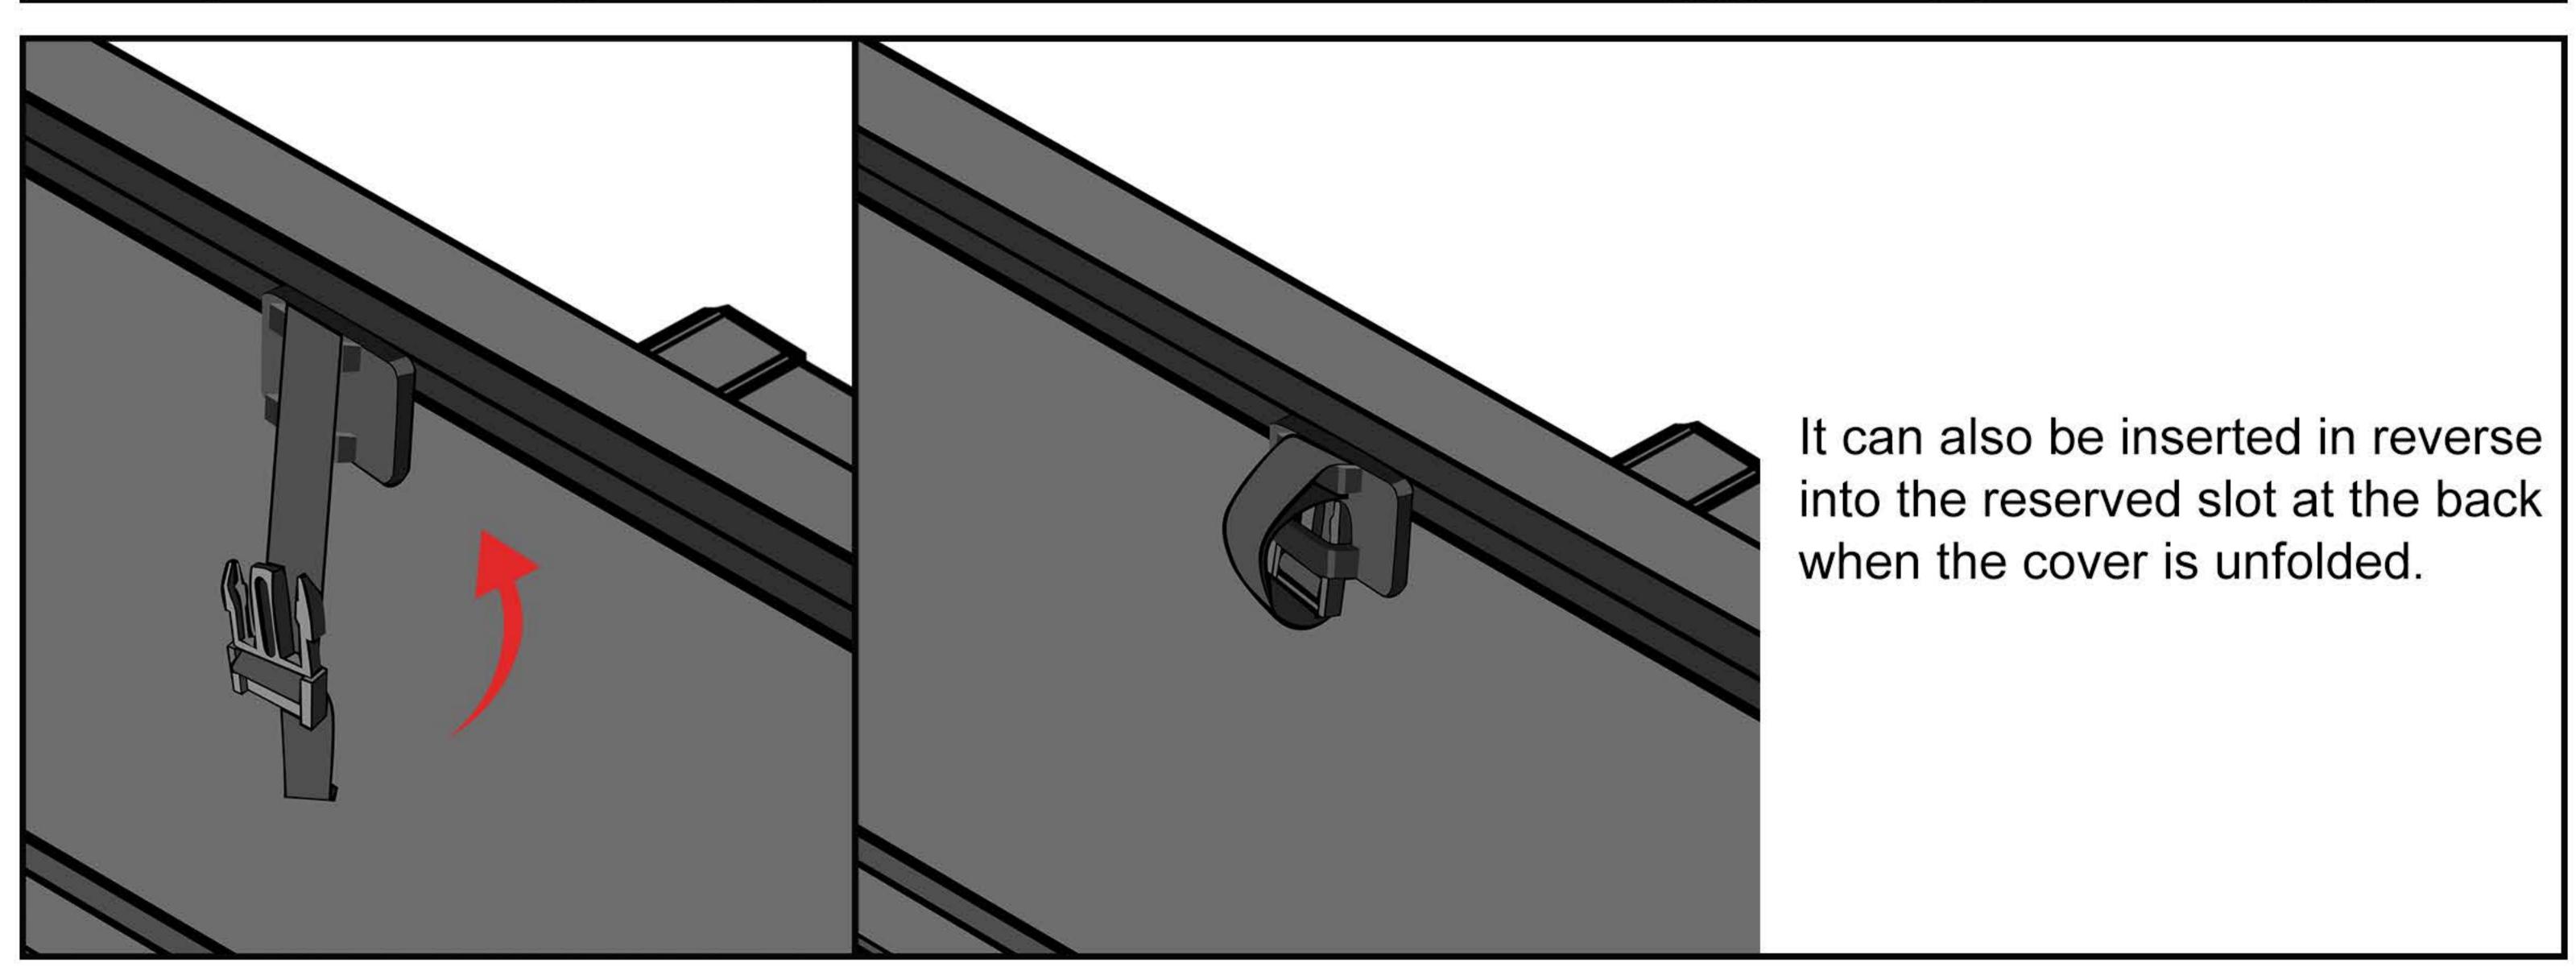


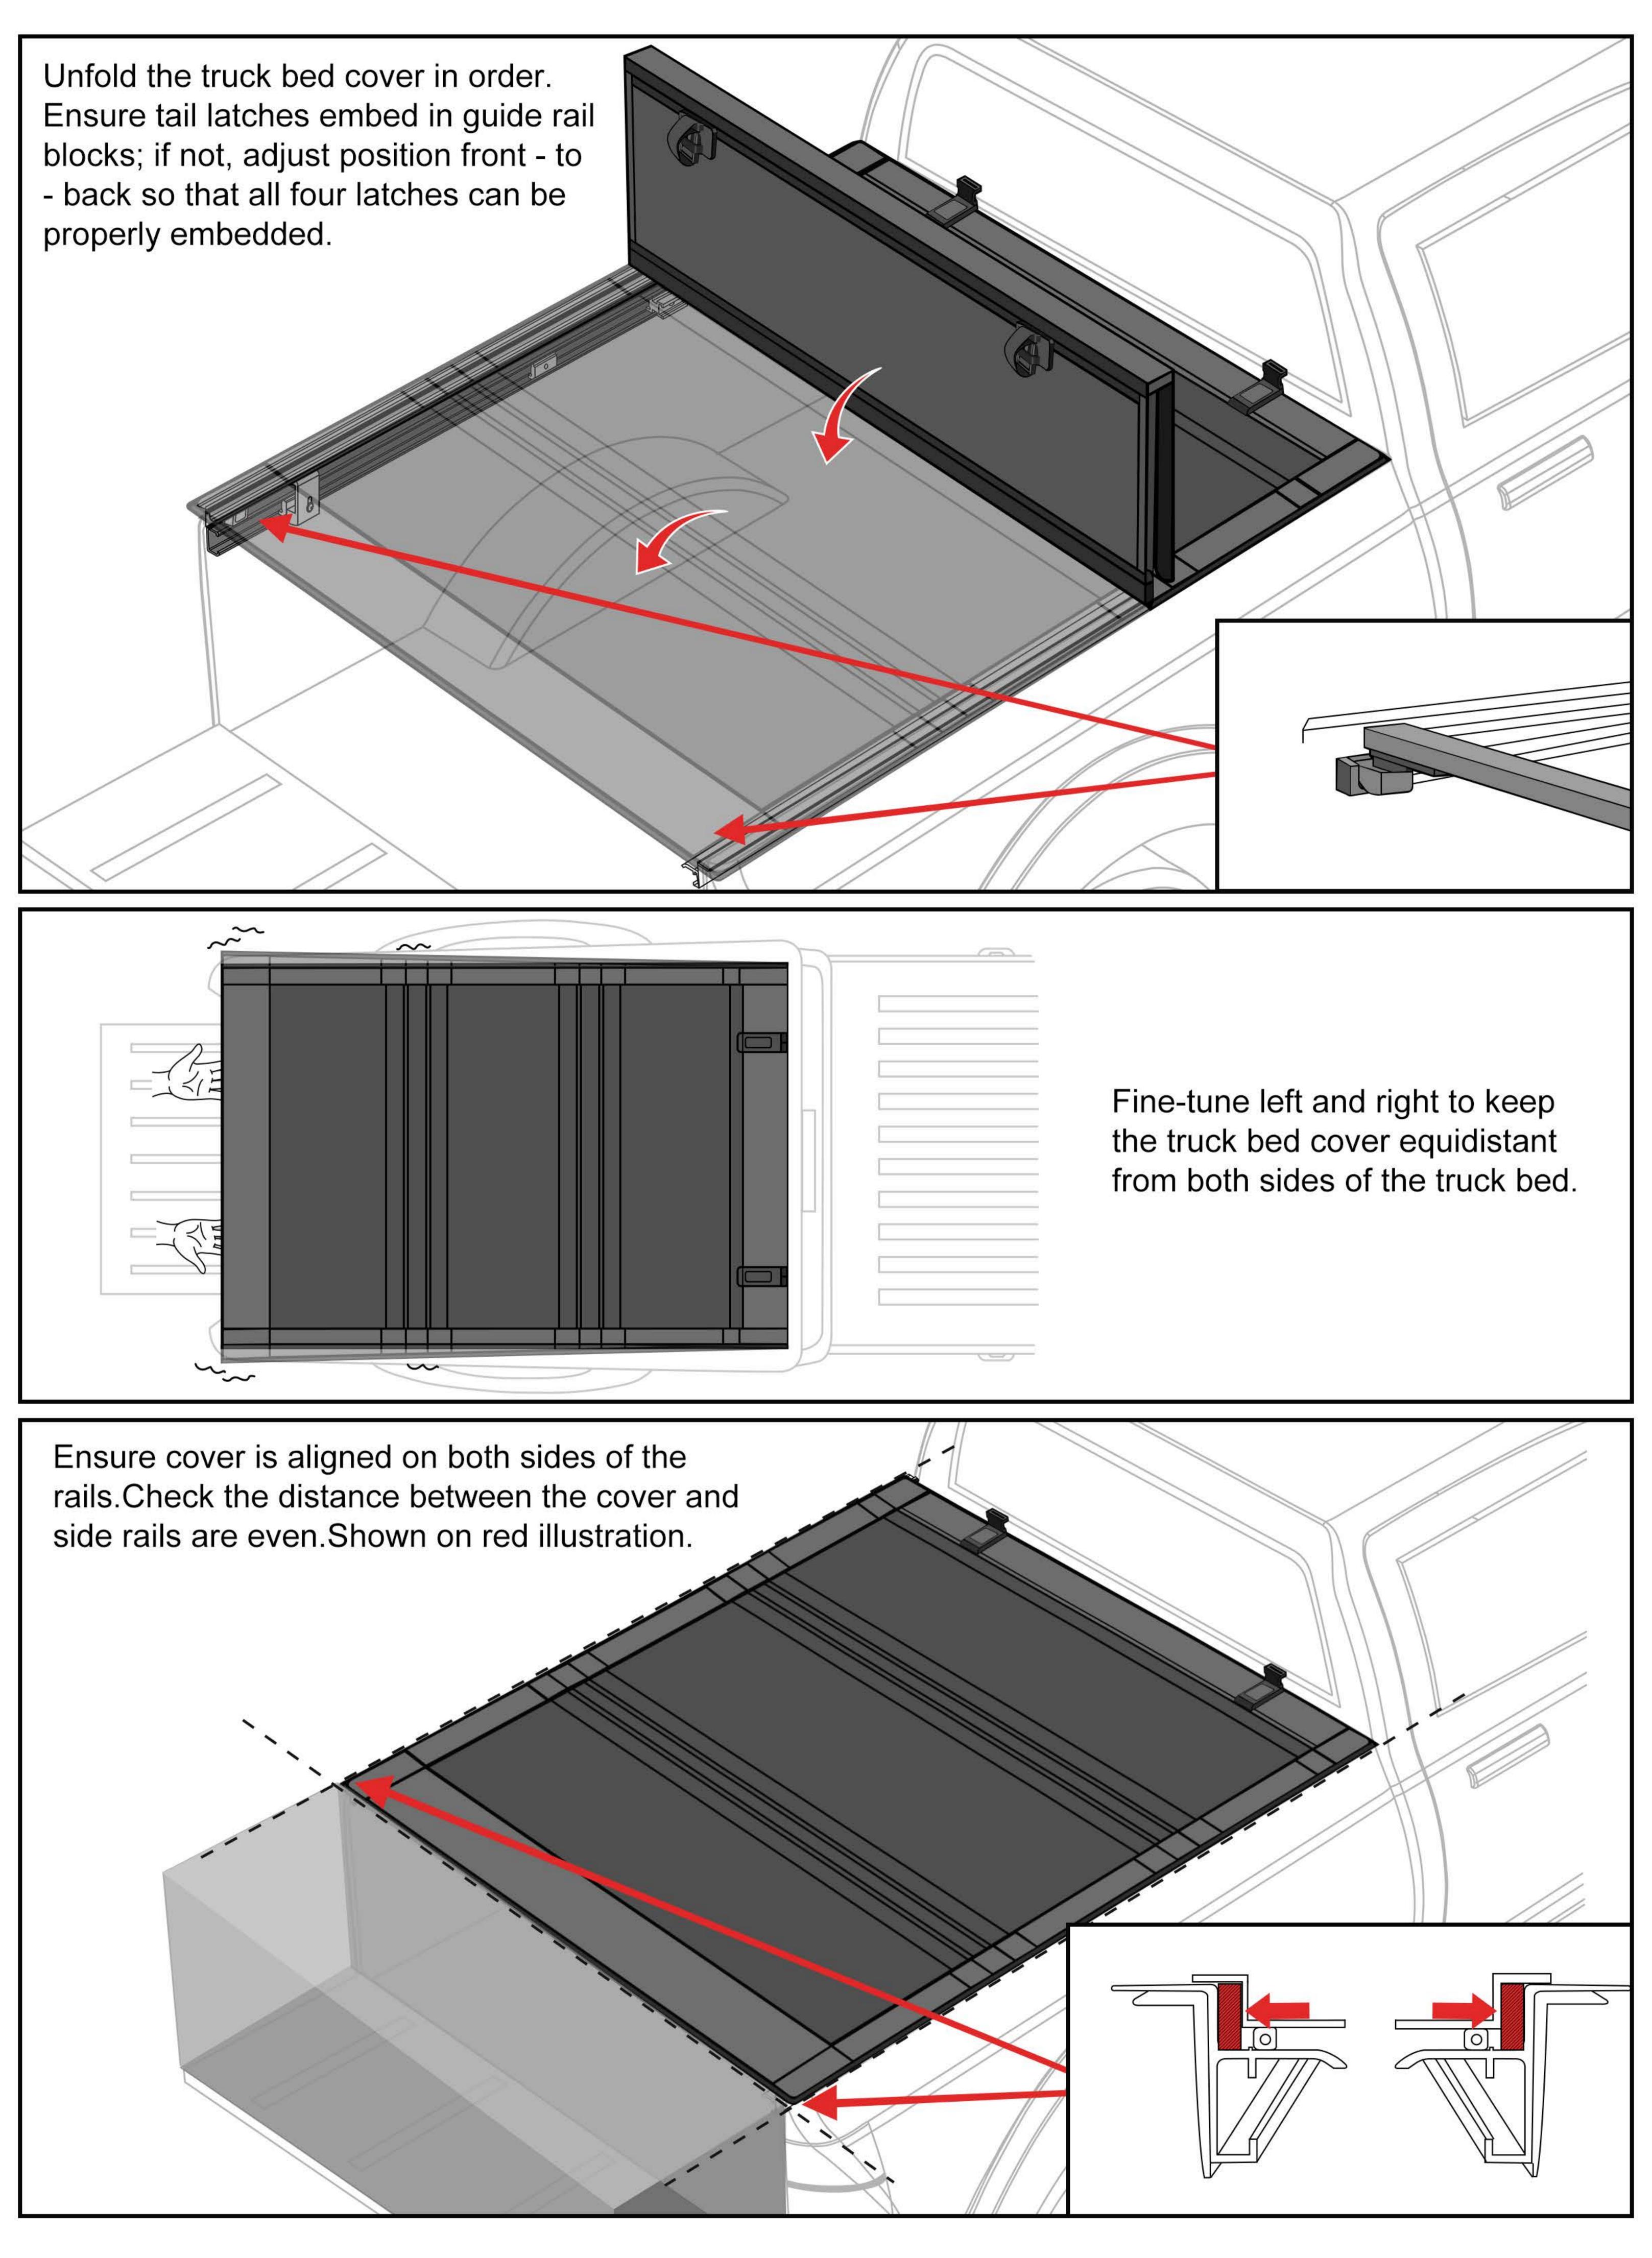


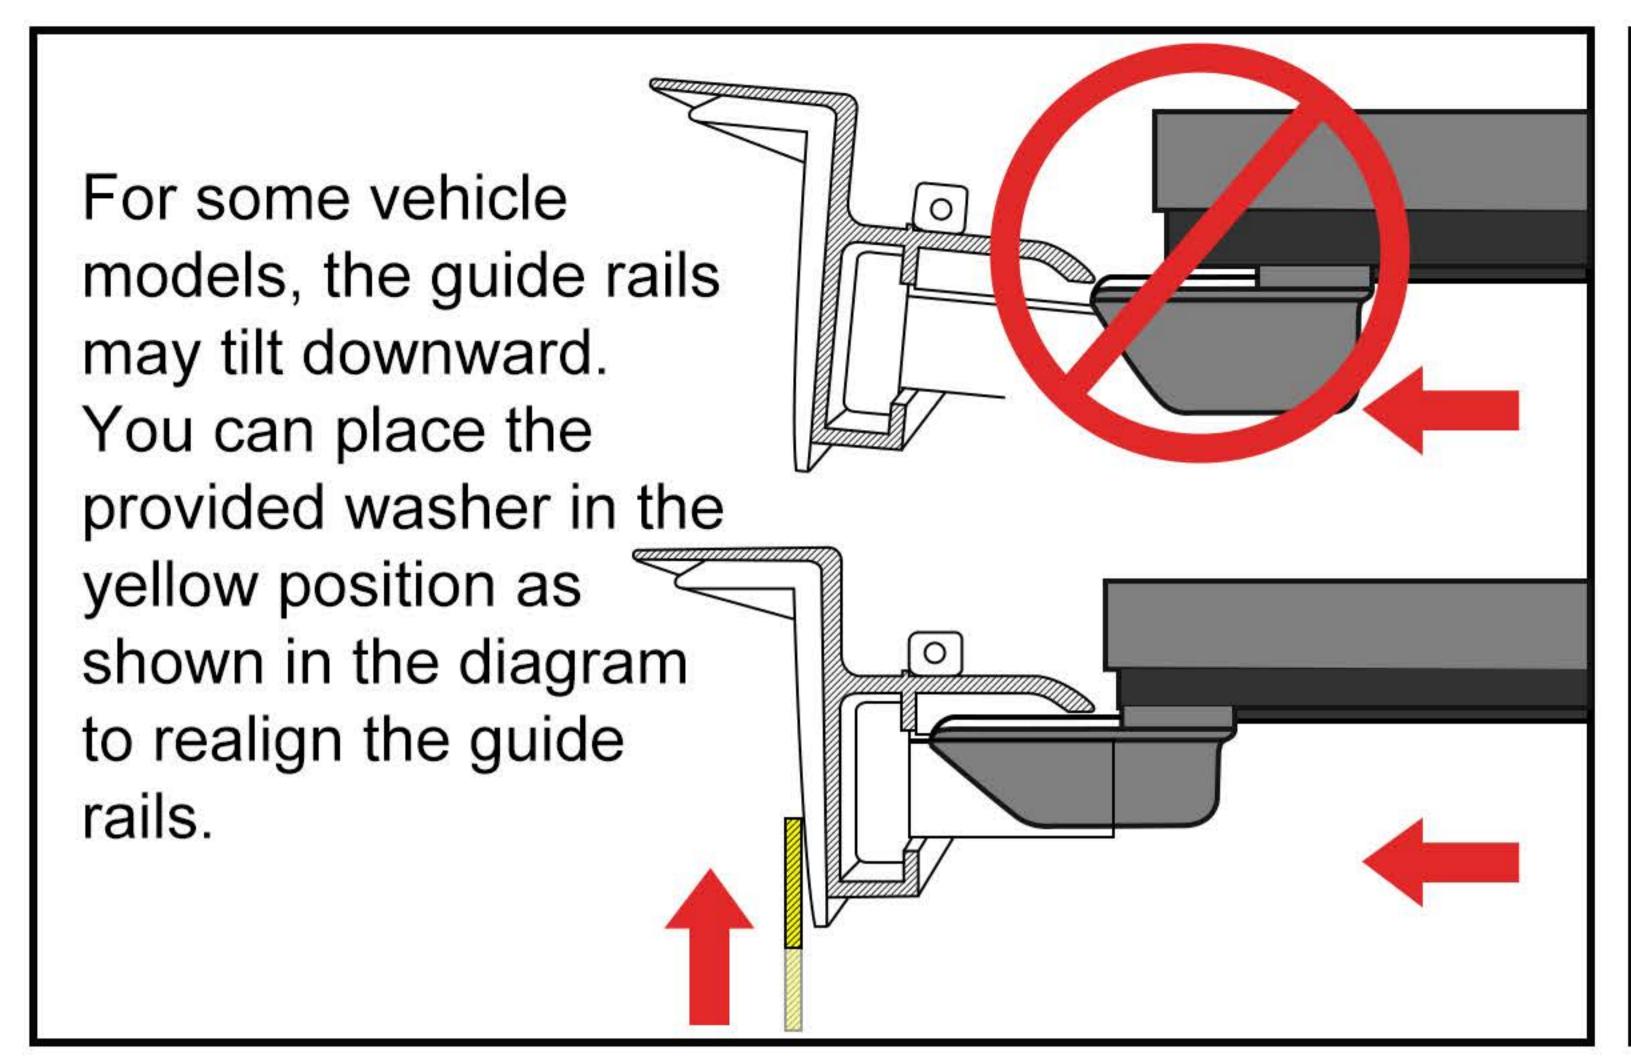


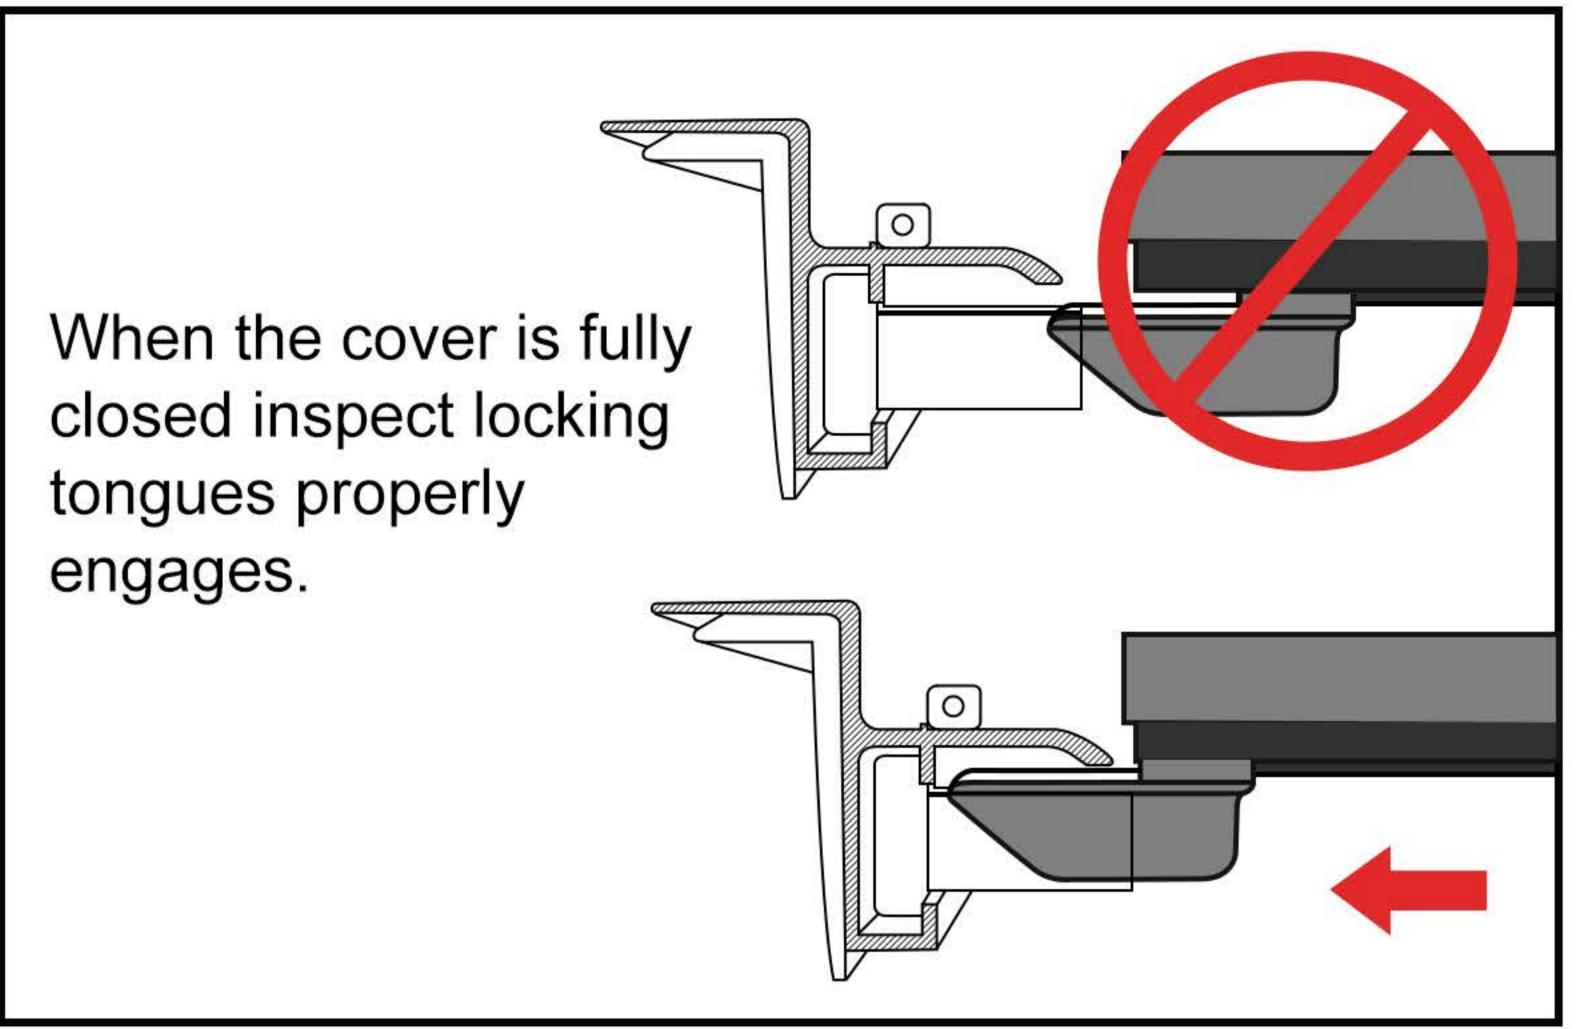


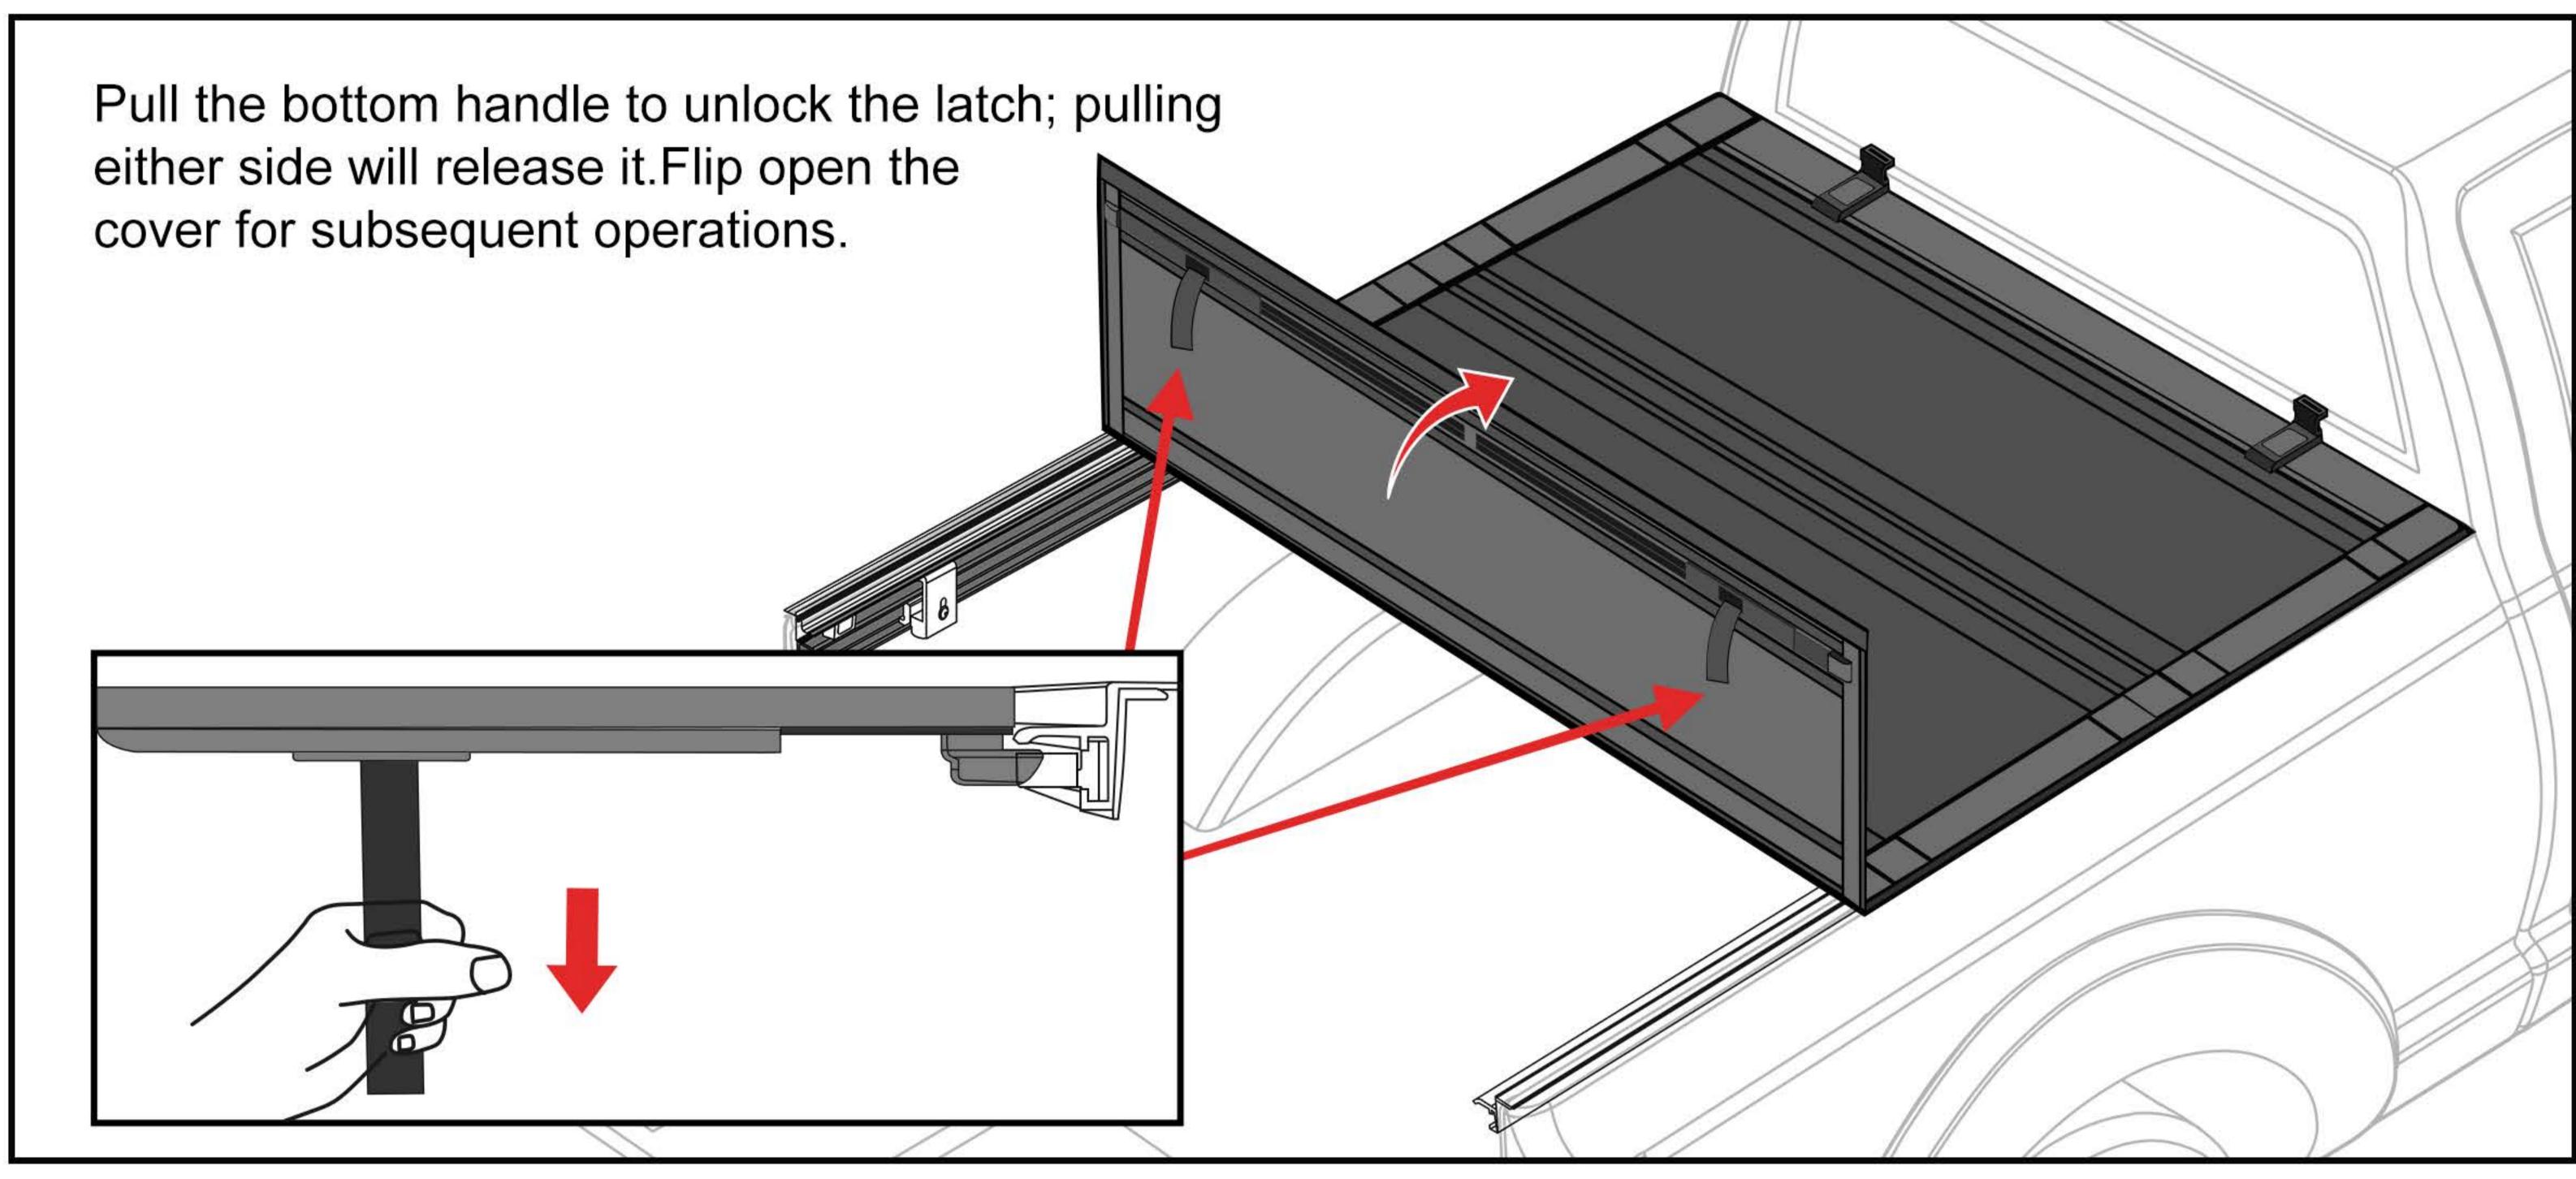

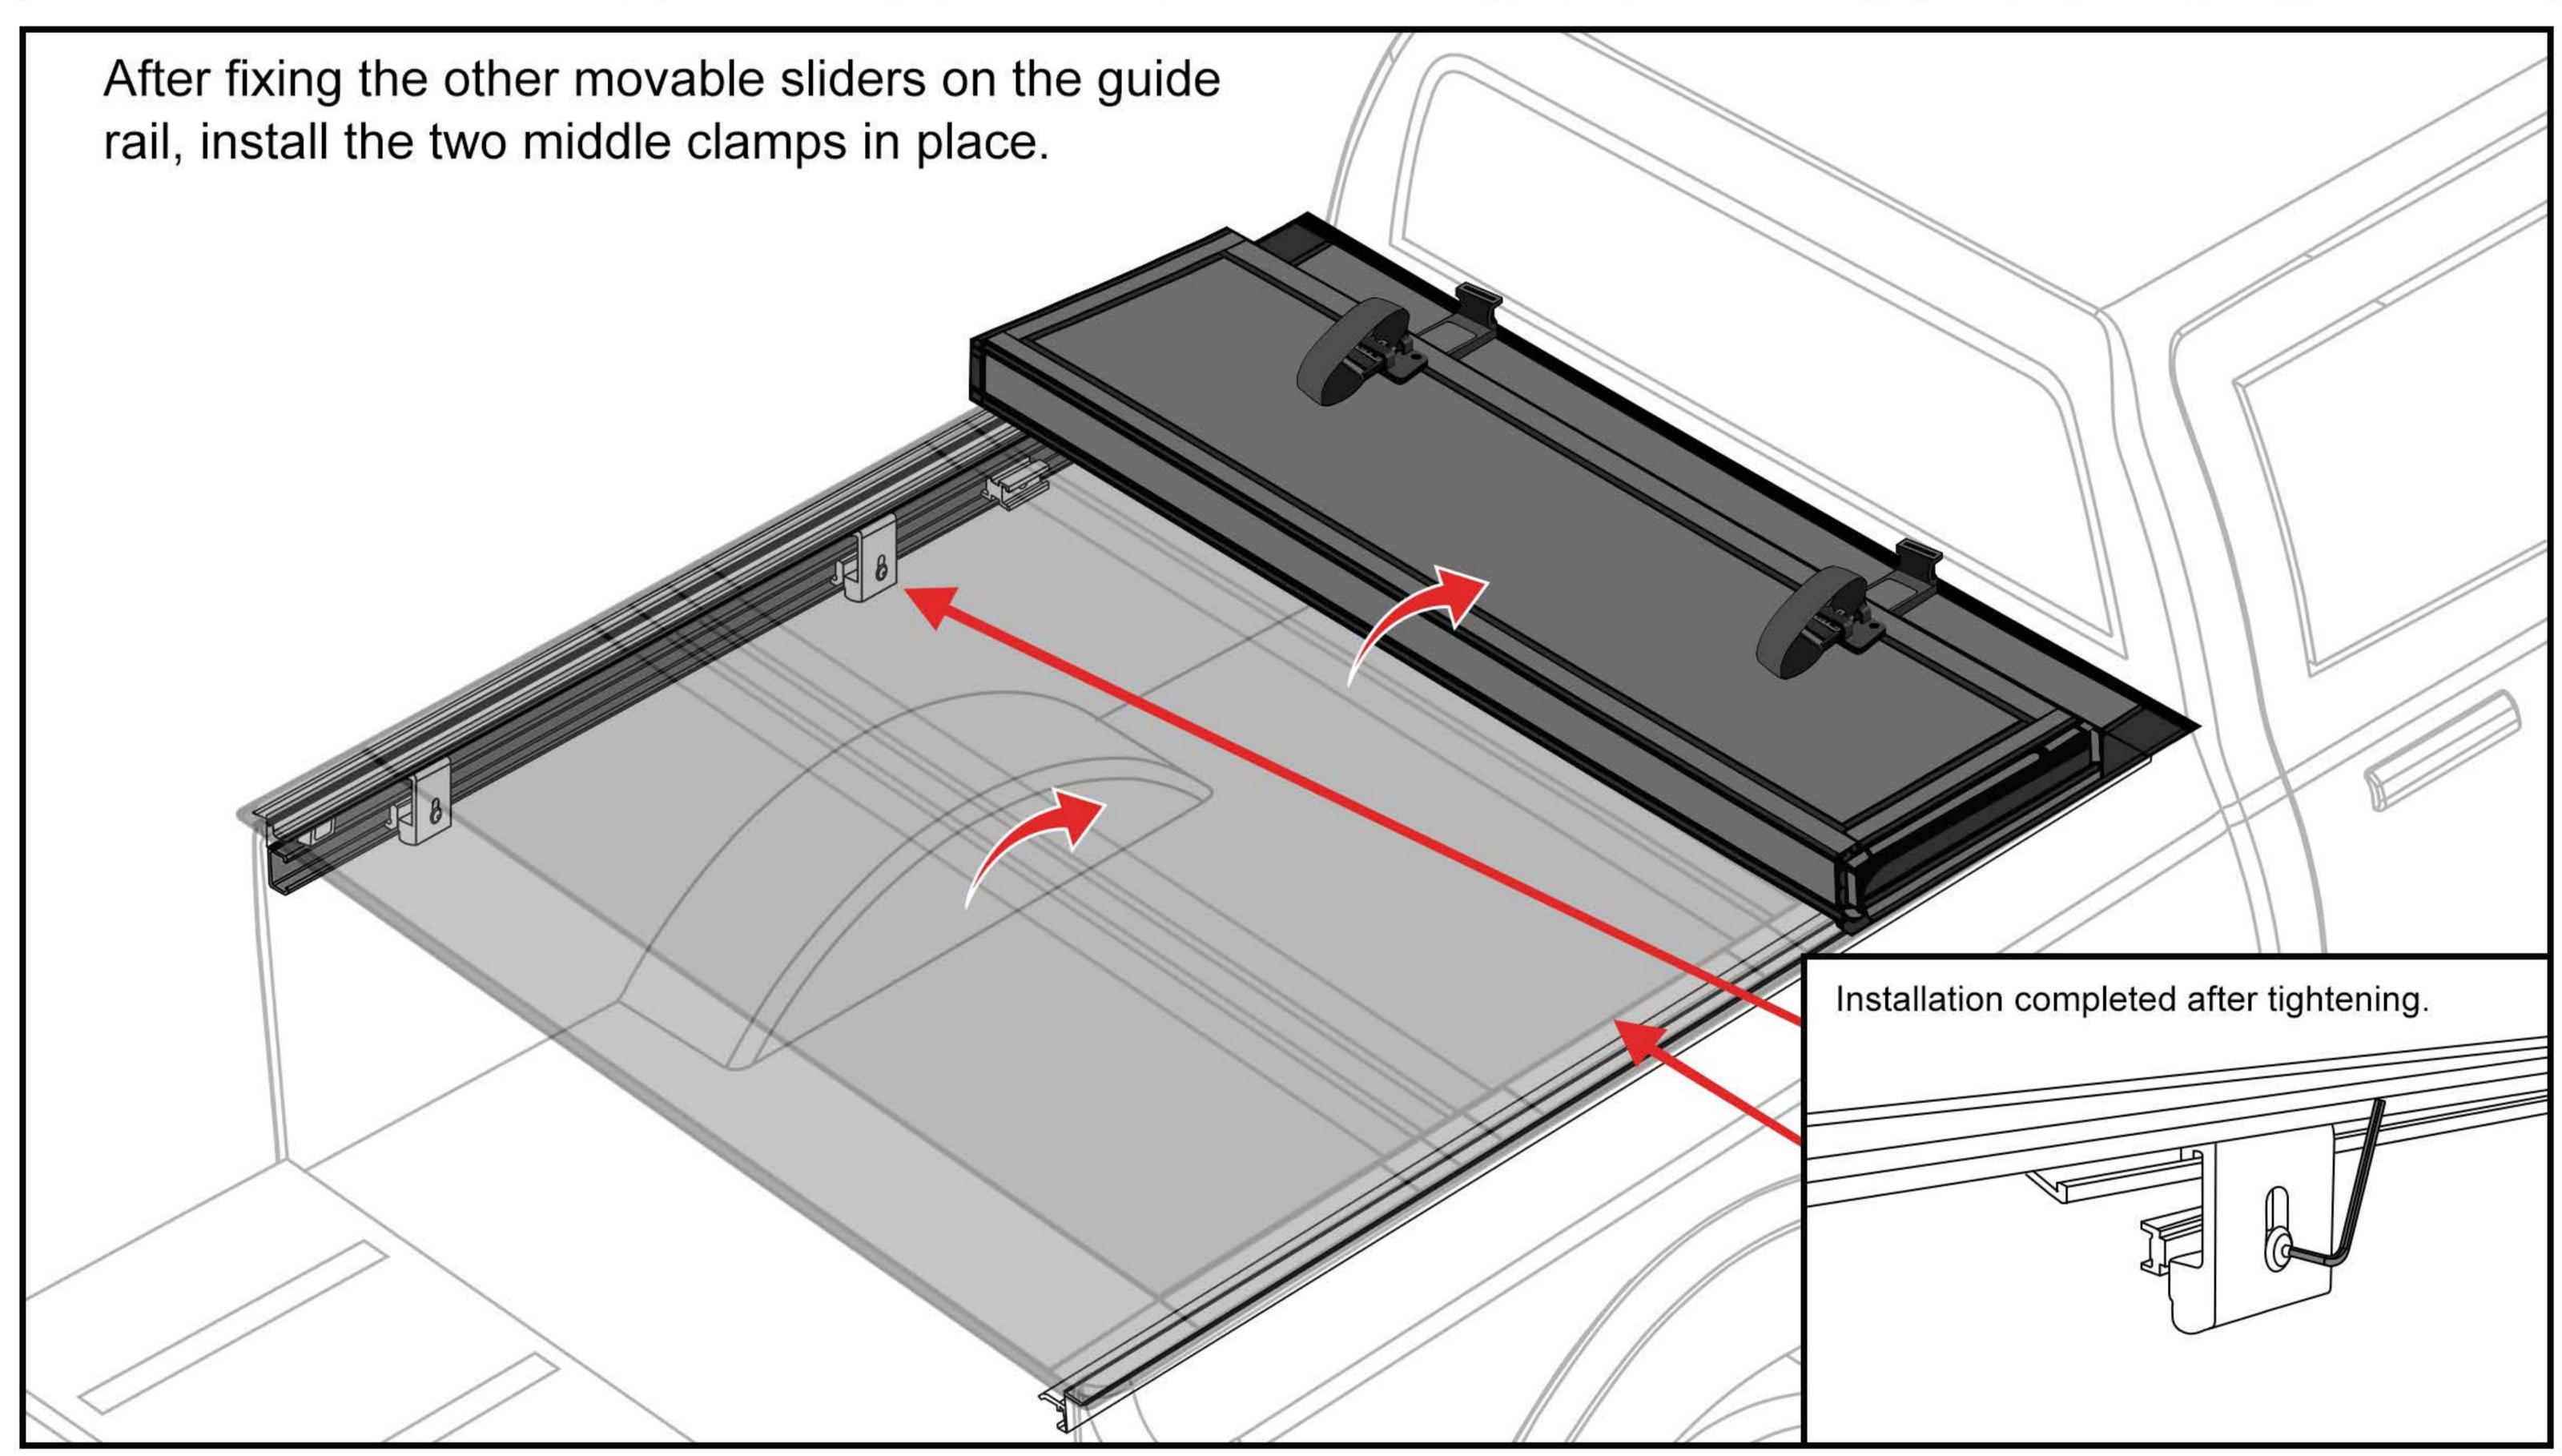


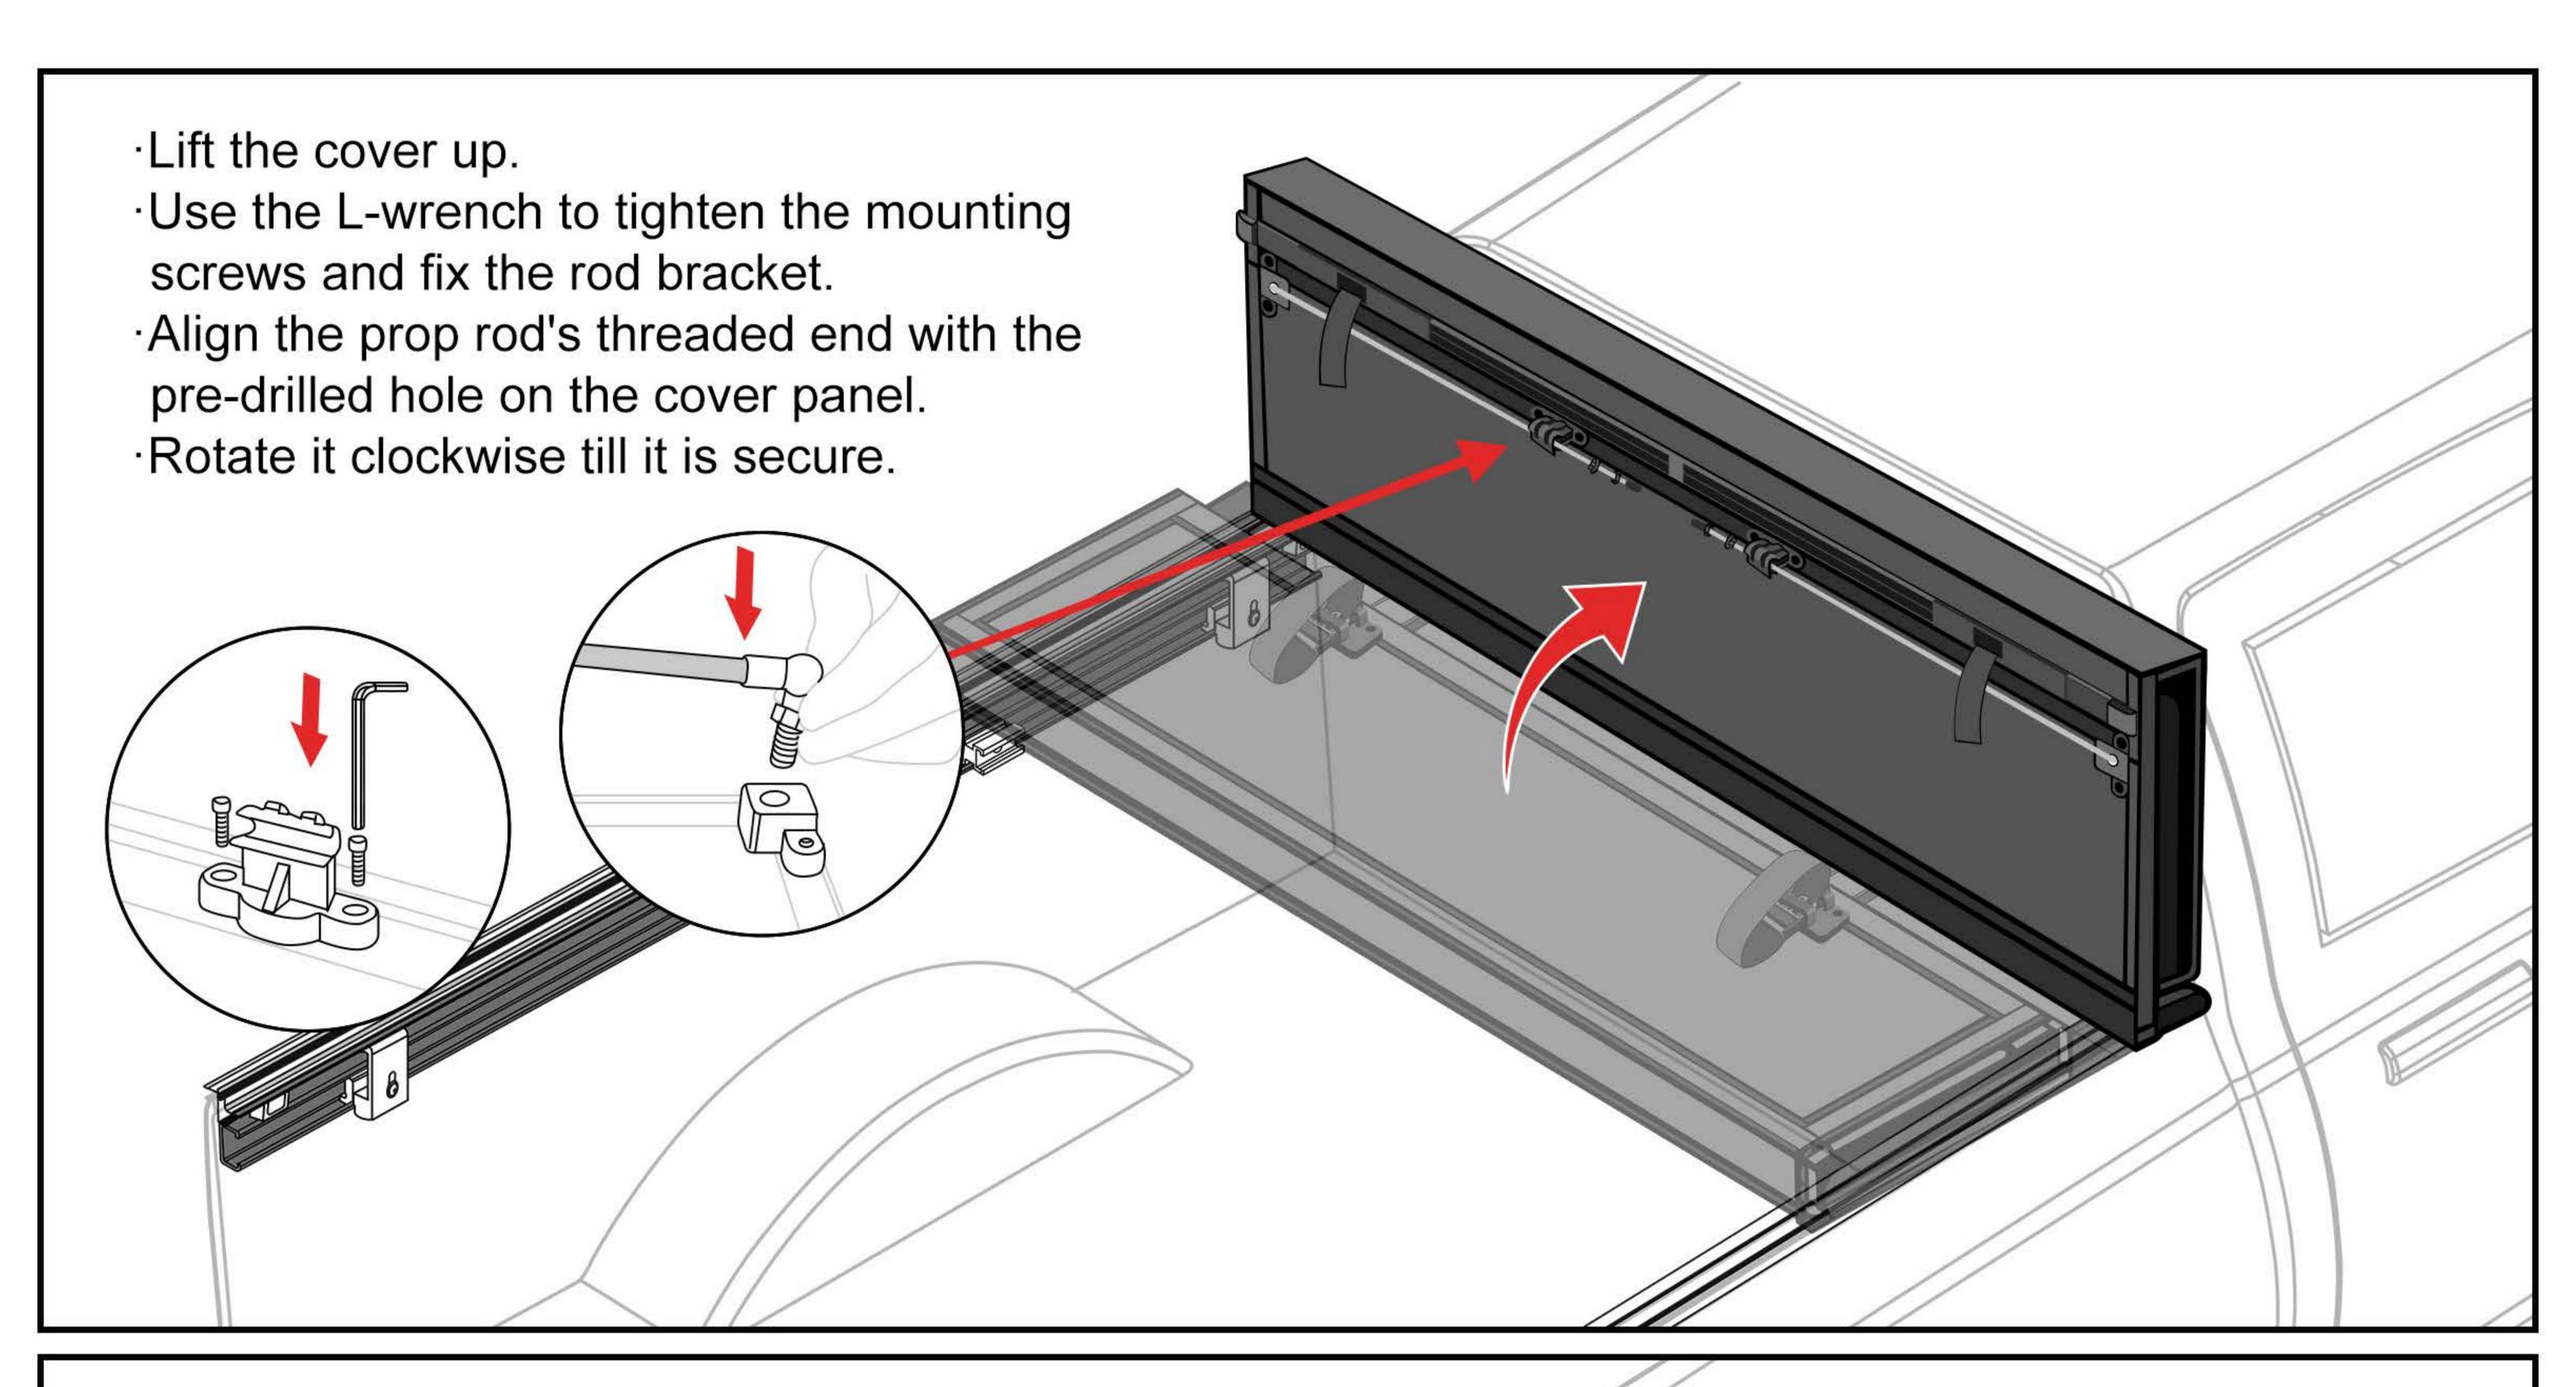

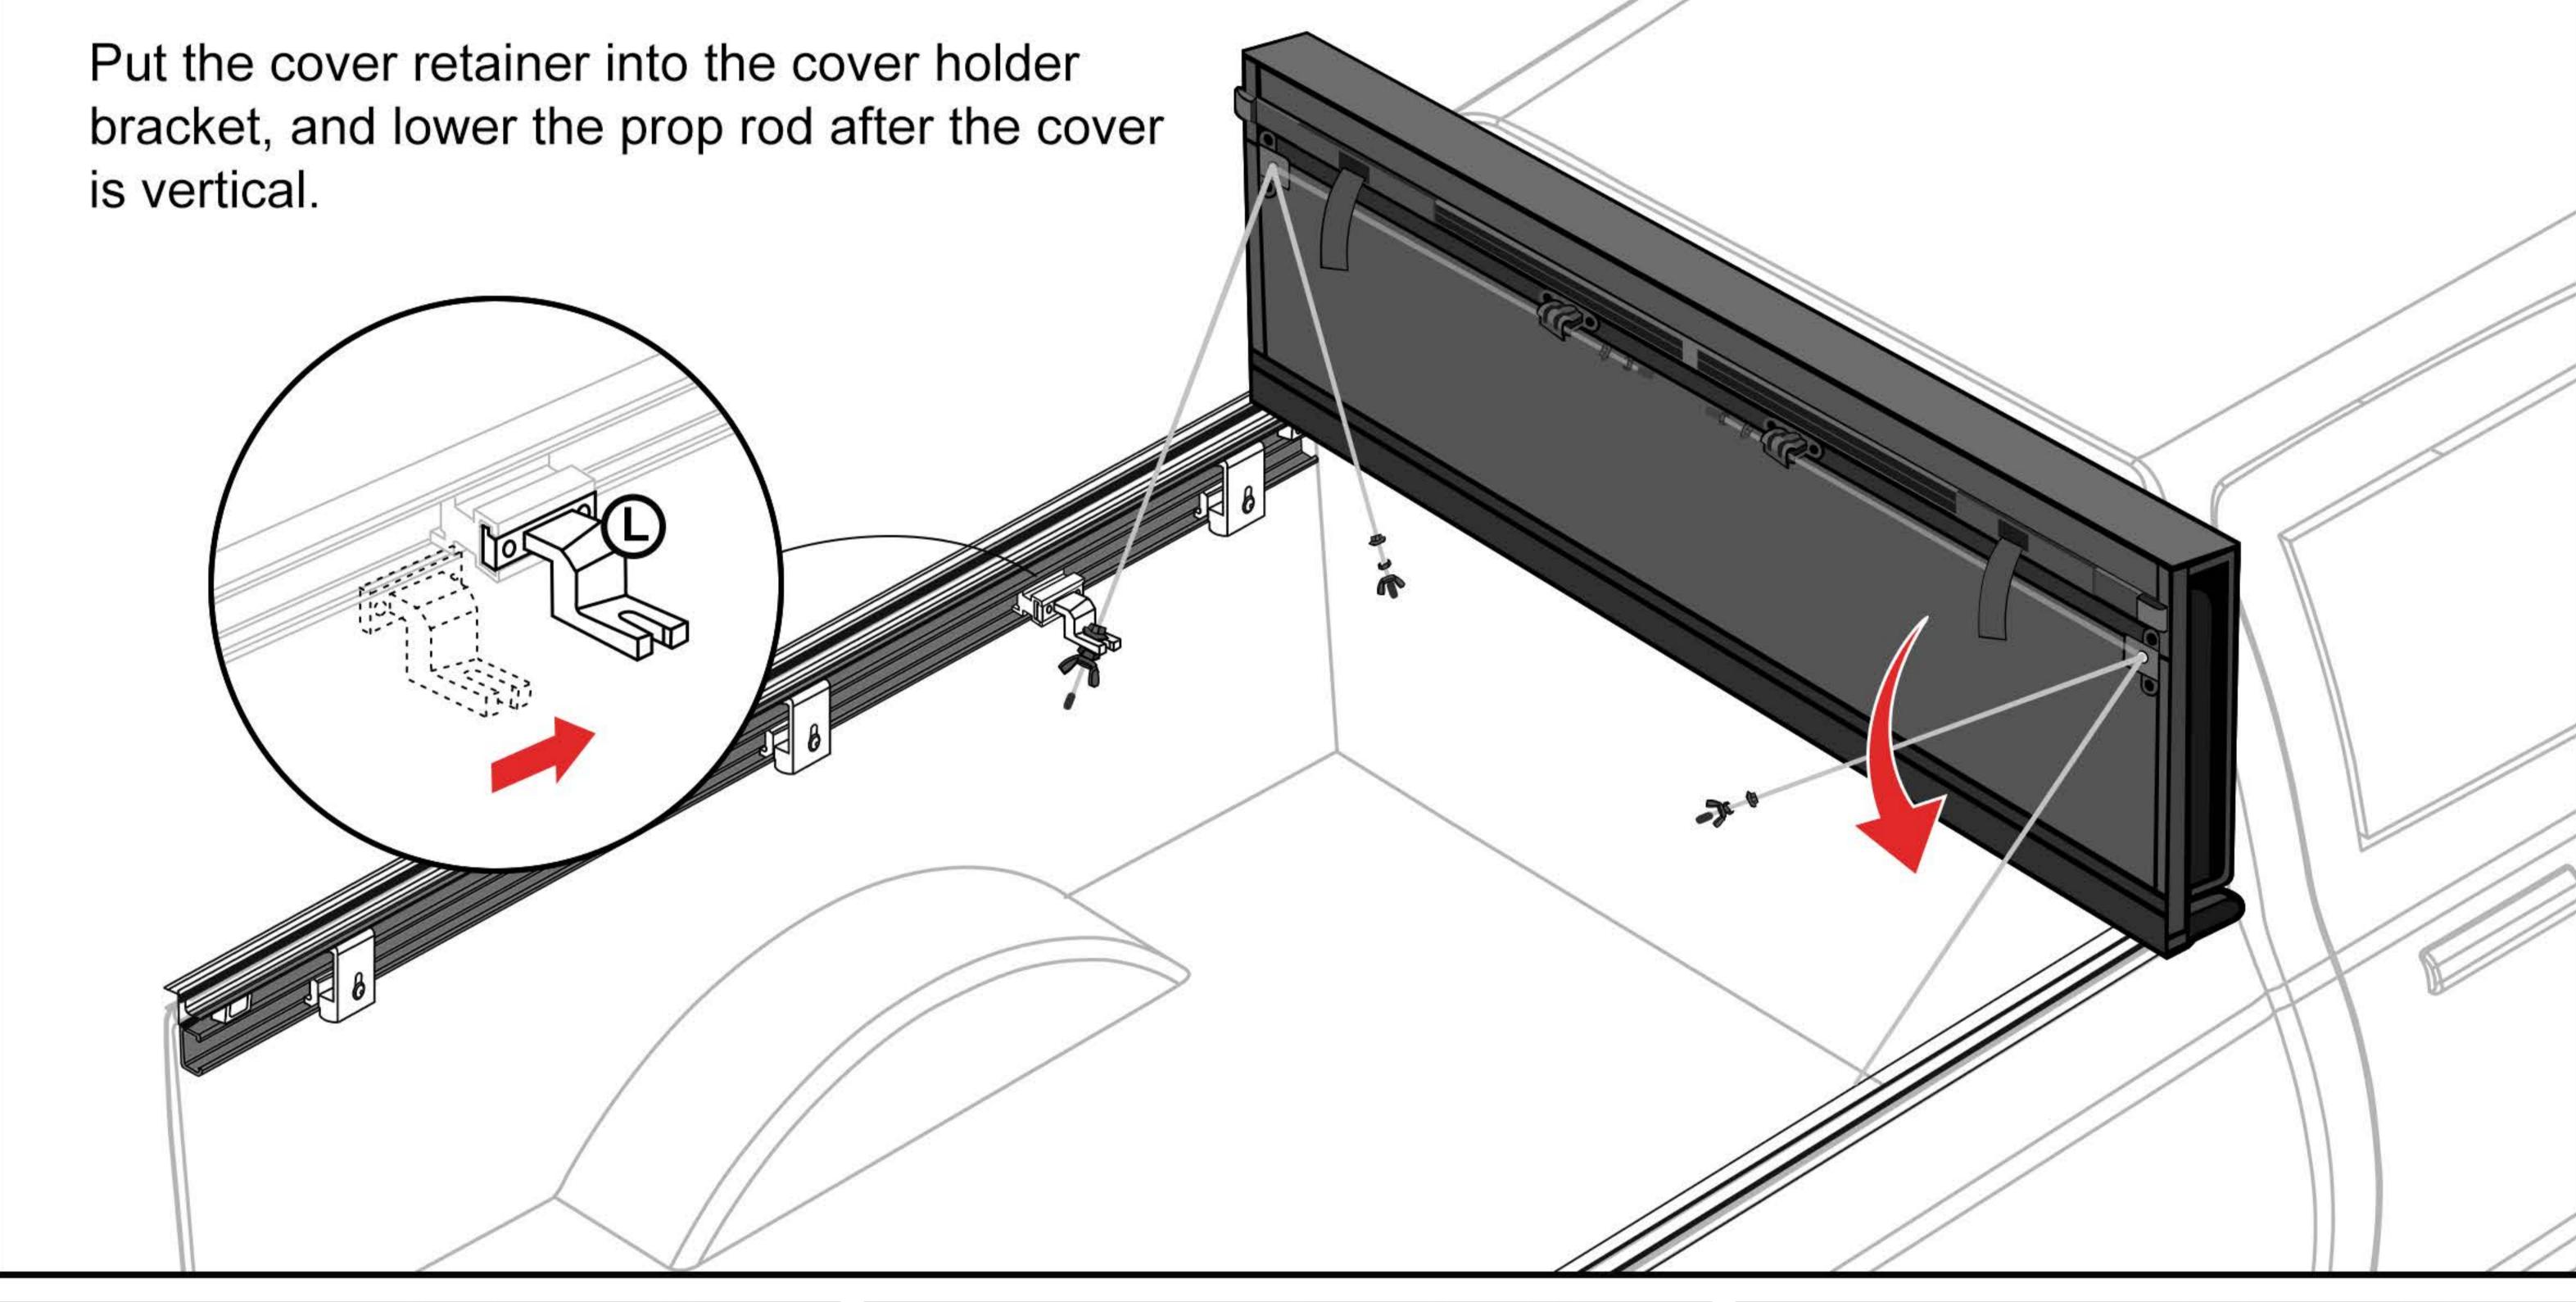


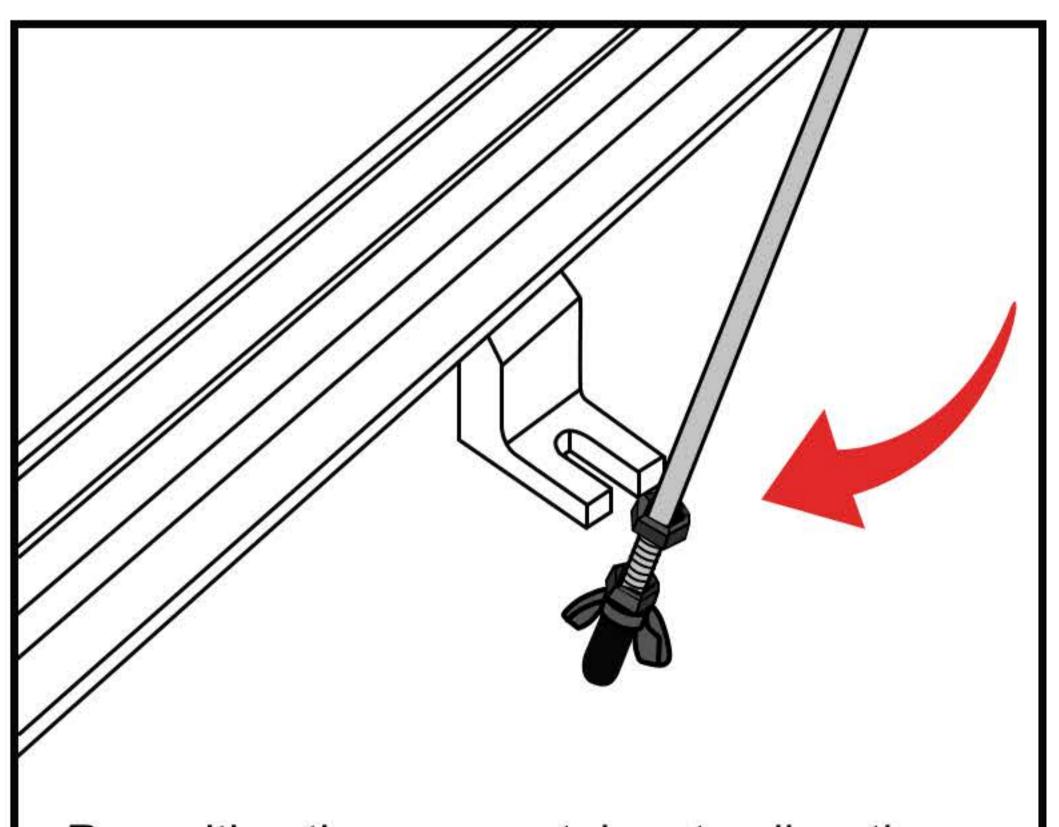


Reposition the cover retainer to allow the prop rod on the cover to fit into its groove.

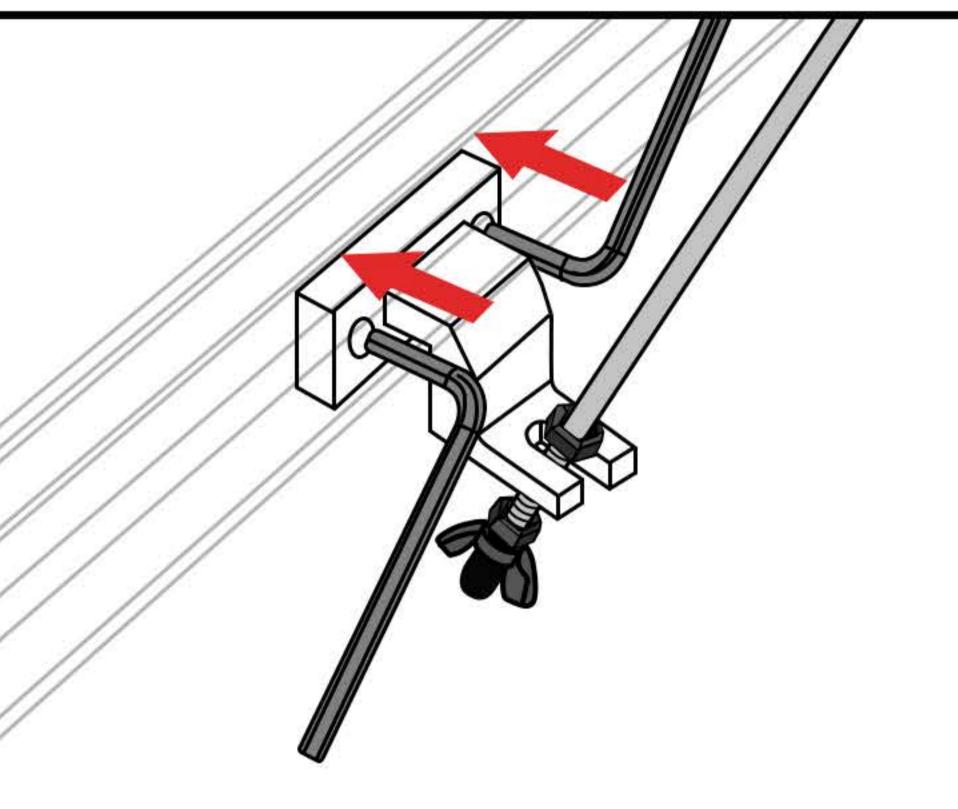


After confirming the position, firmly tighten the screws on both sides of the cover retainer and the bracket itself.

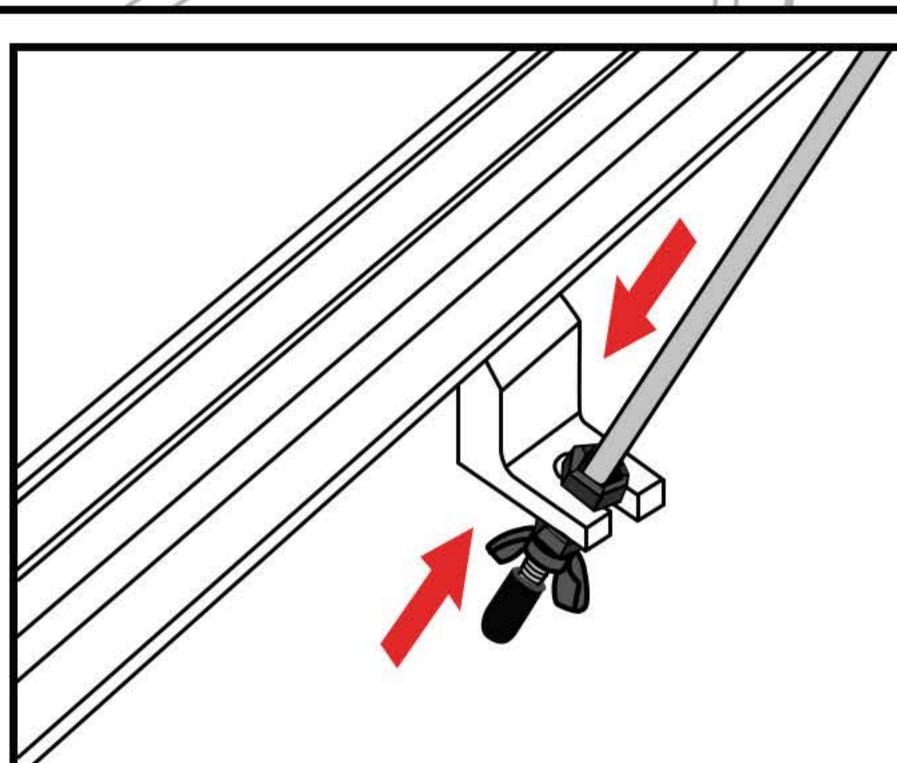

Finally, tighten the two screws on the strut rod and fix the position of the clamp to complete the installation.

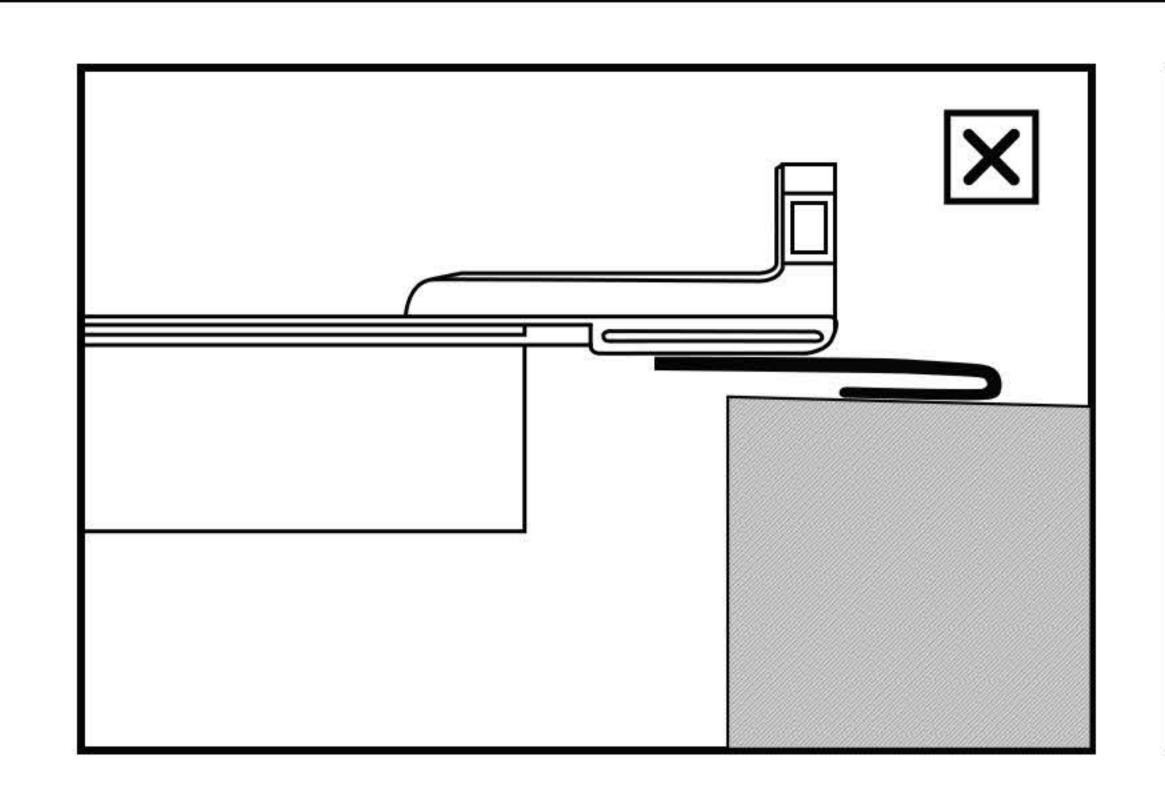

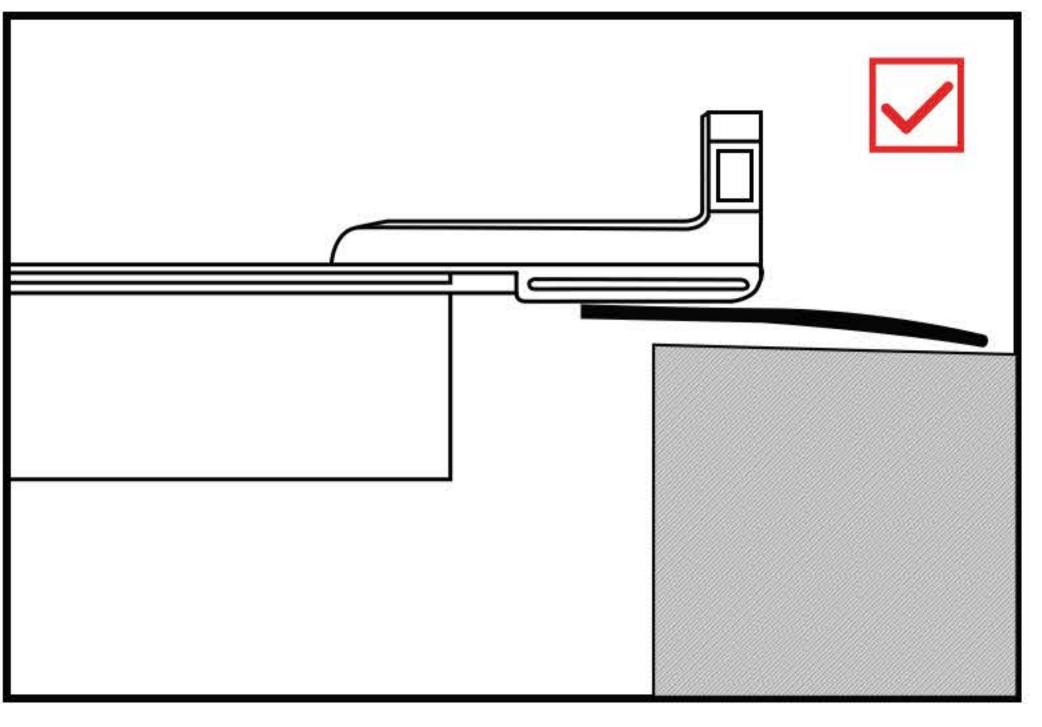

During the initial installation process, the sealed long blades may bend. Pull the blades out to adhere to the cabin wall to enhance waterproofing.

CAUTION Rough road surfaces can cause high-frequency vibrations, leading to the need for adjustments in the position of the truck cover. Regularly check if your truck cover is in the correct position within the truck bed, and inspect all connectors and fastening blocks to ensure they are functioning properly.



Care & Safety Guide

CARE & CLEANING

- Use mild car soap and water only
- Do NOT use pressure washers, abrasive cleaners, or chemicals
- If exposed to harsh substances (e.g., oils, solvents):
 - → Rinse immediately with baking soda solution (1:10 water)

INSTALLATION & INSPECTION

After Installation

- Check and tighten all clamps, latches, and side rails within 7 days Regular Checks
- Every 2 weeks under normal conditions
- Every week for off-road, frequent, or high-vibration use Clearance
- Maintain ¼" (6mm) clearance around hinges and latches

BEFORE DRIVING

- Ensure all anchor points are fully secured
- Clear off snow, ice, or debris before opening
- Do NOT tow with the cover installed—remove it first

CARGO & USAGE WARNINGS

- · No stacking or tying cargo on the cover
- No passengers or pets under a closed cover
- No exposure to chemicals over 48 hrs without rinsing
- Use OEM parts only No drilling or tape

ENVIRONMENTAL LIMITS

- Designed to resist weather Not 100% waterproof
- Use only between: -20°F (-29°C) to 120°F (49°C)
- If stuck due to ice or debris:
- → Use lukewarm water, do not force open

WARRANTY & LIABILITY

Limited Warranty

- Covers factory specs at shipping only
- No guarantees on:Durability / Fit for specific use / Environmental resistance User Responsibility
- Damage caused by:
- Improper use or overloading / Unauthorized mods / Accidents, weather, chemical exposure
- *Product codes = tech specs only, not performance guarantees*

LEGAL NOTICE

- Governed by state law where purchased
- Manufacturer may update this document without notice
- English version is legally binding