## Education Examples for Constitutive Material Behavior

## Yuan Feng

## $10. \ \mathrm{February}, \ 2017$

## Contents

1	Chapter Summary and Highlights	2
2	Elastic Solid Constitutive Examples  2.1 Linear Elastic Constitutive Examples	7
3	Elastic Plastic Solid Constitutive Examples  3.1 Elastic Perfectly Plastic Constitutive Examples	11 15
4	Elastic Single Solid Finite Element Examples 4.1 Linear Elastic, Solid Examples	<b>21</b> 21
5	Elastic-Plastic Single Solid Finite Element Examples  5.1 Elastic Perfectly Plastic, Cyclic Loading, Pure Shear Solid Examples	25 26 27 28 29 30 30
6	Stiffness Reduction and Damping Curves Modeling 6.1 Pisano Material Model (To Be Added)	

## 1 Chapter Summary and Highlights

In the Chapter, the mechanical behaviors of elastoplastic materials is tested. The purpose is to simulate the simplest material points or the simplest solid brick for the sake of education.

Section.2 and Section.3 are testing one material point directly.

Section.4 and Section.5 are testing the material (Gauss Points) through the 8-node solid brick element.

Distinct yield surfaces are tested, including von-Mises and Drucker-Prager yield surfaces with associative and non-associative plastic flow.

Likewise, various hardening rules are simulated, including isotropic hardening, kinematic hardening, Armstrong-Frederick hardening, and multi-yield-surface hardening.

### 2 Elastic Solid Constitutive Examples

#### 2.1 Linear Elastic Constitutive Examples

#### Pure Shear, Monotonic Loading

Material Parameters:

```
model name "test";
   add material # 1 type linear_elastic_isotropic_3d
      mass_density = 2E3 * kg/m^3
3
      elastic_modulus = 2E7 * Pa
      poisson_ratio= 0.25 ;
5
   simulate constitutive testing strain control pure shear use material # 1
6
      confinement_strain = 0.001
      strain_increment_size = 0.0001
      maximum_strain = 0.01
      number_of_increment = 100;
10
   bye;
11
```

Material Response:

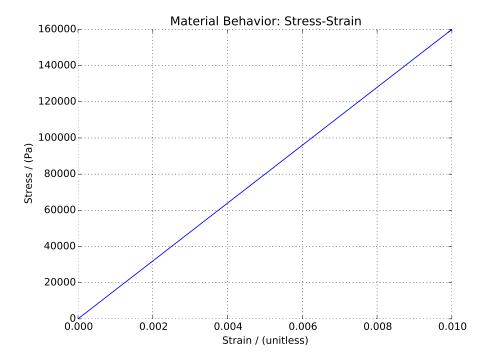


Figure 1: Linear Elastic Pure Shear Monotomic Loading

#### Pure Shear, Cyclic Loading

Material Parameters:

```
model name "test";
   add material # 1 type linear_elastic_isotropic_3d
2
      mass_density = 2E3 * kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio= 0.25 ;
5
   simulate constitutive testing strain control pure shear use material # 1
      confinement_strain = 0.001
      strain_increment_size = 0.0001
      maximum_strain = 0.01
9
      number_of_increment = 500;
10
   bye;
11
```

#### Material Response:

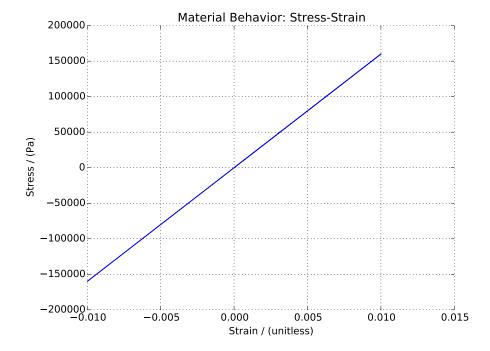


Figure 2: Linear Elastic Pure Shear Cyclic Loading

#### Uniaxial Strain, Monotonic Loading

Material Parameters:

```
model name "test";
   add material # 1 type linear_elastic_isotropic_3d
2
      mass_density = 2E3 * kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio= 0.0 ;
5
   simulate constitutive testing strain control uniaxial loading use material # 1
      confinement_strain = 0.001
      strain_increment_size = 0.0001
      maximum_strain = 0.01
9
      number_of_increment = 100;
10
   bye;
11
```

#### Material Response:

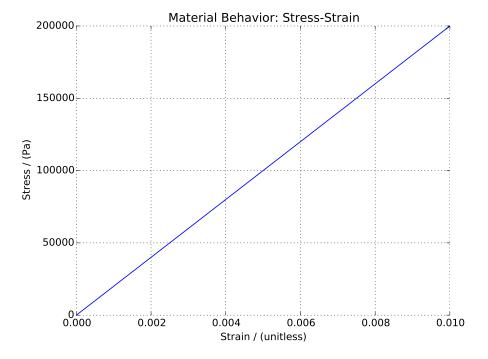


Figure 3: Linear Elastic Uniaxial Monotonic Loading

#### Uniaxial Strain, Cyclic Loading

Material Parameters:

```
model name "test";
   add material # 1 type linear_elastic_isotropic_3d
2
      mass_density = 2E3 * kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio= 0.25 ;
5
   simulate constitutive testing strain control pure shear use material # 1
      confinement_strain = 0.001
      strain_increment_size = 0.0001
      maximum_strain = 0.01
9
      number_of_increment = 500;
10
   bye;
11
```

#### Material Response:

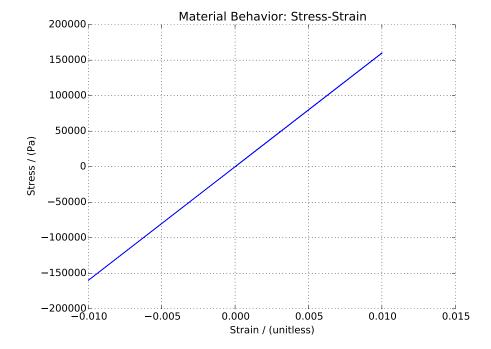


Figure 4: Linear Elastic Uniaxial Cyclic Loading

#### 2.2 Nonlinear Elastic Constitutive Examples

#### Triaxial Uniform Pressure, Monotonic Loading

The Duncan-Chang nonlinear elastic materials:

$$E = E_0 - \kappa * p \tag{1}$$

where  $E_0$  is the initial elastic modulus, parameter  $\kappa$  is a material constant, and p is the pressure p, where the compressive pressure is defined as positive in Real ESSI.

Material Parameters:

```
model name "test";
1
2
   add material # 1 type Duncan_Chang_nonlinear_elastic_isotropic_3d_LT
      mass_density = 2E3 * kg/m^3
3
      initial_elastic_modulus = 3E5 * Pa
4
      poisson_ratio= 0.15
      kappa = 60000;
6
   simulate constitutive testing strain control triaxial uniform loading use material # 1
      strain_increment_size = 0.000001
8
      maximum_strain = 0.001
      number_of_increment = 1000;
10
11
   bye;
```

#### Material Response:

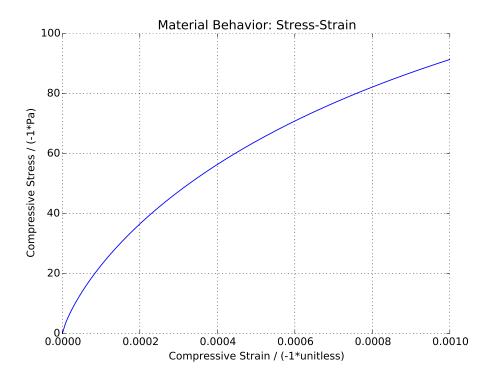


Figure 5: Results of Duncan-Chang Nonlinear Elastic Monotonic Loading

#### 2.3 Nonlinear Elastic Constitutive Examples

#### Triaxial Uniform Pressure, Cyclic Loading

Material Parameters:

```
model name "test";
   add material # 1 type Duncan_Chang_nonlinear_elastic_isotropic_3d_LT
2
      mass_density = 2E3 * kg/m^3
3
      initial_elastic_modulus = 3E5 * Pa
4
      poisson_ratio= 0.15
5
      kappa = 60000;
6
   simulate constitutive testing strain control triaxial uniform loading use material # 1
      strain_increment_size = 0.000001
8
      maximum_strain = 0.001
9
      number_of_increment = 2000;
10
   bye;
11
```

#### Material Response:

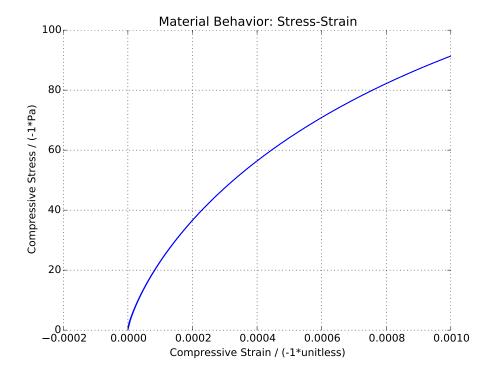


Figure 6: Results of Duncan-Chang Nonlinear Elastic Cyclic Loading

### 3 Elastic Plastic Solid Constitutive Examples

#### 3.1 Elastic Perfectly Plastic Constitutive Examples

#### **Pure Shear**

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
      poisson_ratio=0.25
5
      von_mises_radius = 1E5*Pa
6
      kinematic_hardening_rate = 0.0 *Pa
      isotropic_hardening_rate = 0.0*Pa ;
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
12
   simulate constitutive testing strain control uniaxial loading use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 500;
^{17}
   bye;
18
```

#### Material Response:

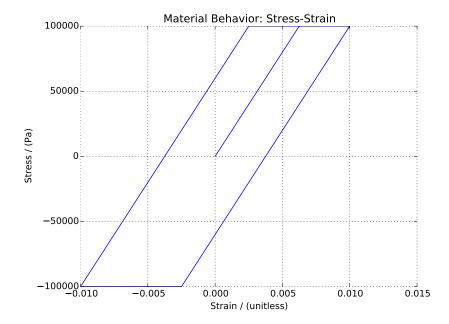


Figure 7: Perfectly Plastic Pure Shear Cyclic Loading

#### Uniaxial Strain

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
      poisson_ratio=0.25
5
      von_mises_radius = 1E5*Pa
      kinematic_hardening_rate = 0.0 *Pa
      isotropic_hardening_rate = 0.0*Pa ;
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
^{12}
   simulate constitutive testing strain control uniaxial loading use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 500;
17
   bye;
18
```

#### Material Response:

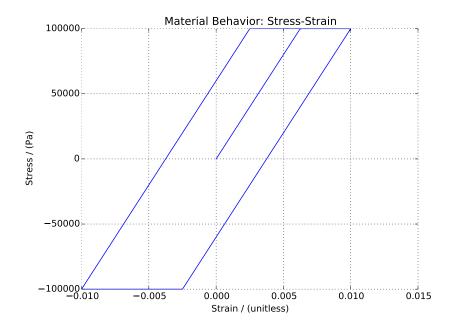


Figure 8: Perfectly Plastic Uniaxial Cyclic Loading

#### 3.2 Elastic Plastic, Isotropic Hardening, Constitutive Examples

#### Pure Shear, Monotonic Loading

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio=0.25
5
      von_mises_radius = 1E5*Pa
6
      kinematic_hardening_rate = 0.0*Pa
      isotropic_hardening_rate = 2E6 *Pa ;
8
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
12
   simulate constitutive testing strain control pure shear use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 99;
17
18
   bye;
```

#### Material Response:

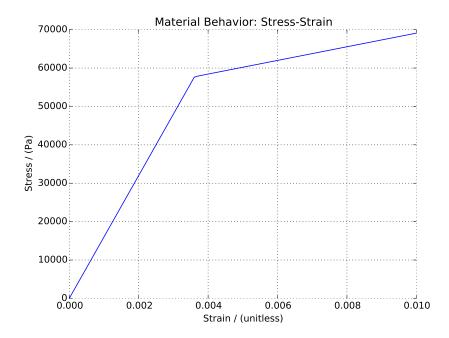


Figure 9: Isotropic Hardening Pure Shear Monotonic Loading

#### Pure Shear, Cyclic Loading

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio=0.25
5
      von_mises_radius = 1E5*Pa
      kinematic_hardening_rate = 0.0*Pa
      isotropic_hardening_rate = 2E6 *Pa ;
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
^{12}
   simulate constitutive testing strain control pure shear use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 499;
17
   bye;
18
```

#### Material Response:

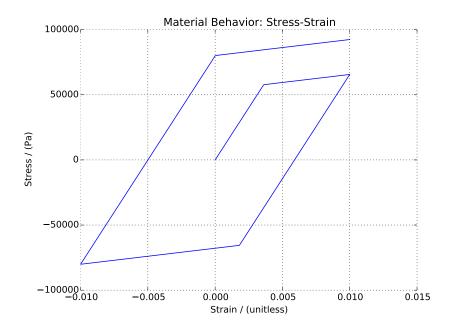


Figure 10: Isotropic Hardening Pure Shear Cyclic Loading

#### Uniaxial Strain, Monotonic Loading

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio=0.25
5
      von_mises_radius = 5E4*Pa
      kinematic_hardening_rate = 0.0*Pa
      isotropic_hardening_rate = 2E6 *Pa ;
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
^{12}
   simulate constitutive testing strain control uniaxial loading use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 99;
17
   bye;
18
```

#### Material Response:

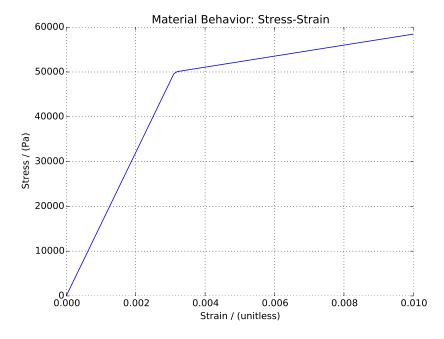


Figure 11: Isotropic Hardening Uniaxial Monotonic Loading

#### Uniaxial Strain, Cyclic Loading

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio=0.25
5
      von_mises_radius = 5E4*Pa
      kinematic_hardening_rate = 0.0*Pa
      isotropic_hardening_rate = 2E6 *Pa ;
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
^{12}
   simulate constitutive testing strain control uniaxial loading use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 499;
17
   bye;
18
```

#### Material Response:

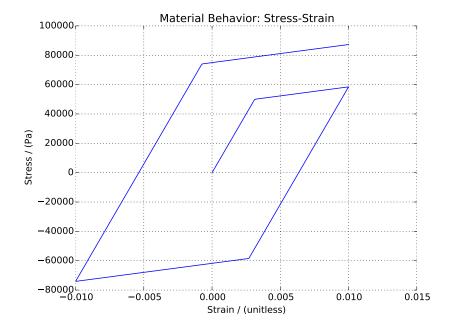


Figure 12: Isotropic Hardening Uniaxial Cyclic Loading

#### 3.3 Elastic Plastic, Kinematic Hardening, Constitutive Examples

#### Pure Shear, Monotonic Loading

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio=0.25
5
      von_mises_radius = 1E5*Pa
6
      kinematic_hardening_rate = 2E6*Pa
      isotropic_hardening_rate = 0.0*Pa ;
8
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
12
   simulate constitutive testing strain control pure shear use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 99;
17
18
   bye;
```

#### Material Response:

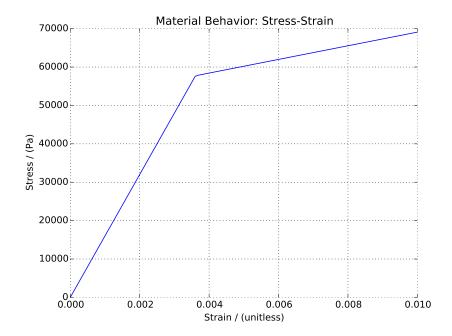


Figure 13: Kinematic Hardening Monotonic Cyclic Loading

#### Pure Shear, Cyclic Loading

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio=0.25
5
      von_mises_radius = 1E5*Pa
      kinematic_hardening_rate = 2E6*Pa
      isotropic_hardening_rate = 0.0*Pa ;
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
^{12}
   simulate constitutive testing strain control pure shear use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 499;
17
   bye;
18
```

#### Material Response:

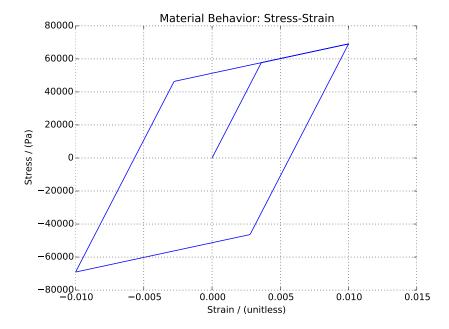


Figure 14: Kinematic Hardening Pure Shear Cyclic Loading

#### Uniaxial Strain, Monotonic Loading

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio=0.25
5
      von_mises_radius = 5E4*Pa
      kinematic_hardening_rate = 2E6*Pa
      isotropic_hardening_rate = 0.0*Pa ;
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
^{12}
   simulate constitutive testing strain control uniaxial loading use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 99;
17
   bye;
18
```

#### Material Response:

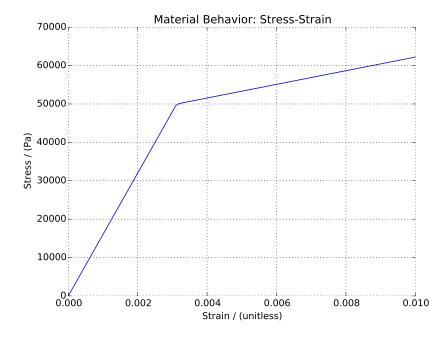


Figure 15: Kinematic Hardening Uniaxial Monotonic Loading

#### Uniaxial Strain, Cyclic Loading

Material Parameters:

```
model name "test";
   add material # 1 type VonMises
2
      mass_density = 2E3*kg/m^3
3
      elastic_modulus = 2E7 * Pa
4
      poisson_ratio=0.25
5
      von_mises_radius = 5E4*Pa
      kinematic_hardening_rate = 2E6*Pa
      isotropic_hardening_rate = 0.0*Pa ;
   define NDMaterial constitutive integration algorithm Backward_Euler
9
      yield_function_relative_tolerance = 1E-2
10
      stress_relative_tolerance = 1E-3
11
      maximum_iterations = 30;
^{12}
   simulate constitutive testing strain control uniaxial loading use material # 1
13
      confinement_strain = 0.001
14
      strain_increment_size = 0.0001
15
      maximum_strain = 0.01
16
      number_of_increment = 499;
17
   bye;
18
```

#### Material Response:

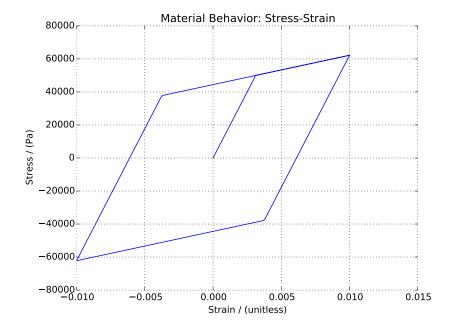


Figure 16: Kinematic Hardening Uniaxial Cyclic Loading

#### 3.4 Elastic Plastic, Multiple Yield Surface, von-Mises, Constitutive Examples

#### Pure Shear, Monotonic Loading

Material Parameters:

```
model name "test";
   add material # 1 type vonMisesMultipleYieldSurface
2
      mass_density = 0.0*kg/m^3
3
      elastic_modulus = 35175 * Pa
4
      poisson_ratio = 0.15
5
      total_number_of_yield_surface = 15
6
      radiuses_of_yield_surface_file = "radiuses_of_yield_surface.txt"
      hardening_parameters_of_yield_surface_file = "hardening_parameters_of_yield_surface.txt" ;
8
   incr_size = 0.0000001;
9
   max_strain= 0.001 ;
10
   num_of_increm = max_strain/incr_size -1;
11
   simulate constitutive testing strain control pure shear use material # 1
12
      confinement_strain = 0.0
13
      strain_increment_size = incr_size
14
      maximum_strain = max_strain
15
      number_of_increment = num_of_increm;
16
   bye;
17
```

#### Material Response:

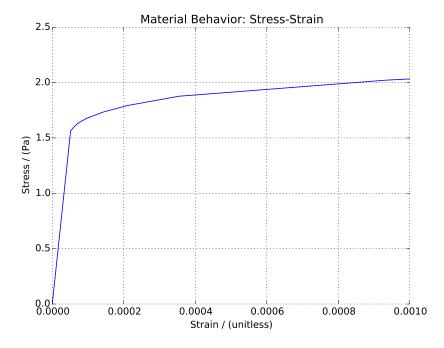


Figure 17: Multiple Yield Surface Pure Shear Monotonic Loading

#### Pure Shear, Cyclic Loading

Material Parameters:

```
model name "test";
   add material # 1 type vonMisesMultipleYieldSurface
2
      mass_density = 0.0*kg/m^3
3
      elastic_modulus = 35175 * Pa
4
      poisson_ratio = 0.15
5
      total_number_of_yield_surface = 15
      radiuses_of_yield_surface =
      "2.7 2.74 2.8 2.82 2.85 2.9 3.0 3.1 3.25 3.5 4.2 5.3 6.5 7.5 10.0 12.65"
      hardening_parameters_of_yield_surface =
9
      "5500 4000 2700 2400 1890 1300 915 600 254 167 79 65.4 23 2.2 1.2";
10
   incr_size = 0.0000001;
11
   max_strain= 0.001 ;
^{12}
   num_of_increm = 5* max_strain/incr_size ;
13
   simulate constitutive testing strain control pure shear use material # 1
14
      confinement_strain = 0.0
15
      strain_increment_size = incr_size
16
      maximum_strain = max_strain
17
      number_of_increment = num_of_increm;
18
   bye;
19
```

#### Material Response:

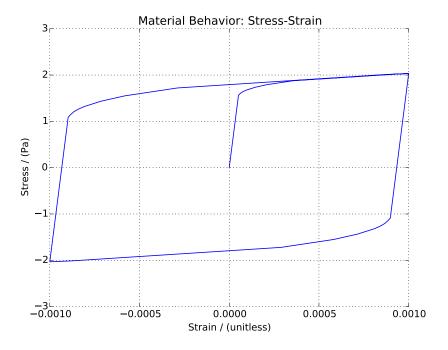


Figure 18: Multiple Yield Surface Pure Shear Cyclic Loading

## 4 Elastic Single Solid Finite Finite Element Examples

#### 4.1 Linear Elastic, Solid Examples

#### Pure Shear, Monotonic Loading

Model Description:

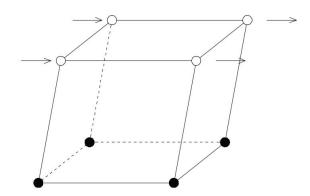


Figure 19: Diagram Linear Elastic Solid Pure Shear Monotonic Loading

#### Material Response at Gauss Point:

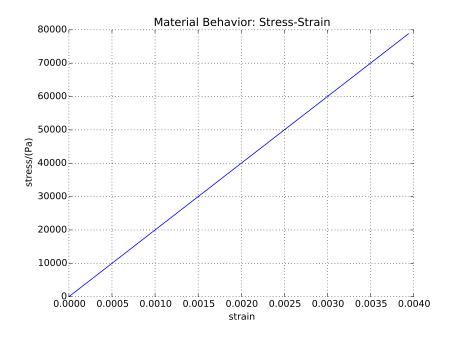


Figure 20: Results of Linear Elastic Solid Pure Shear Monotonic Loading

#### Pure Shear, Cyclic Loading

Model Description:

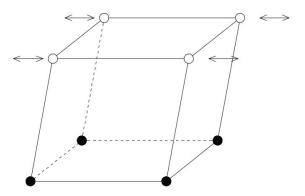


Figure 21: Diagram Linear Elastic Solid Pure Shear Cyclic Loading

#### Material Response at Gauss Point:

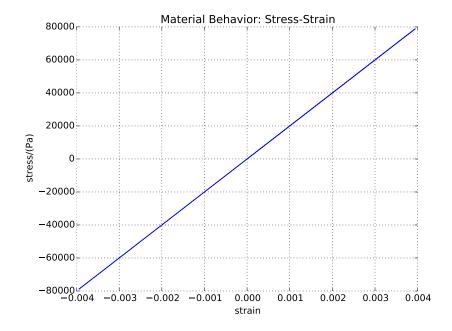


Figure 22: Results of Linear Elastic Solid Pure Shear Cyclic Loading

#### Uniaxial Strain, Monotonic Loading

Model Description:

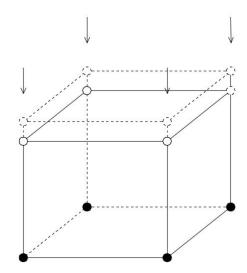


Figure 23: Diagram Linear Elastic Uniaxial Strain Solid Monotonic Loading

#### Material Response at Gauss Point:

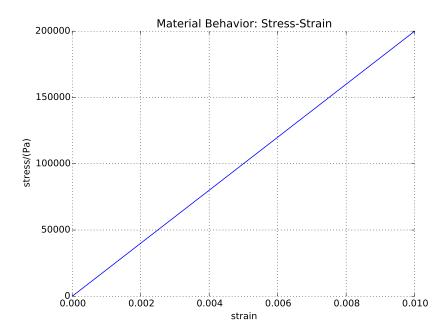


Figure 24: Results of Linear Elastic Pure Shear Cyclic Loading

#### Uniaxial Strain, Cyclic Loading

Model Description:

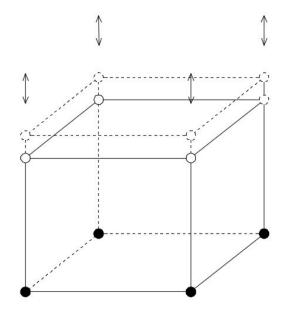


Figure 25: Linear Elastic Uniaxial Strain Cyclic Loading

#### Material Response at Gauss Point:

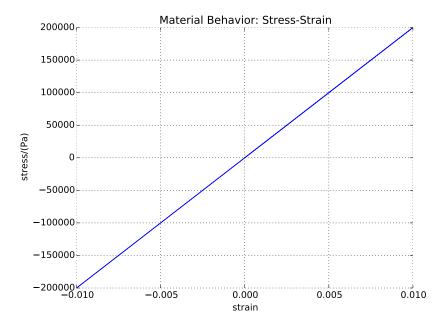


Figure 26: Results of Linear Elastic Pure Shear Cyclic Loading

## 5 Elastic-Plastic Single Solid Finite Element Examples

# 5.1 Elastic Perfectly Plastic, Cyclic Loading, Pure Shear Solid Examples Model Description:

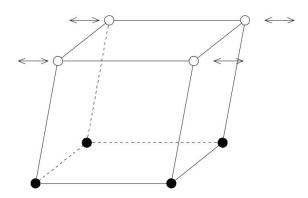


Figure 27: Perfectly Plastic Pure Shear Cyclic Loading

Material Response at Gauss Point:

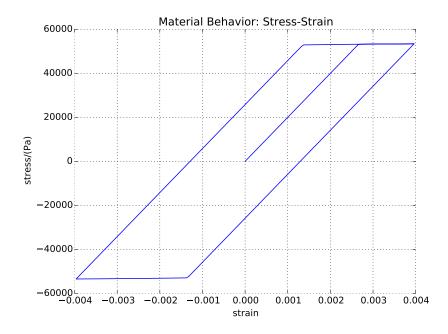


Figure 28: Results of Linear Elastic Pure Shear Cyclic Loading

#### 5.1.1 von Mises Yield Function, Isotropic Hardening

#### Model Description:

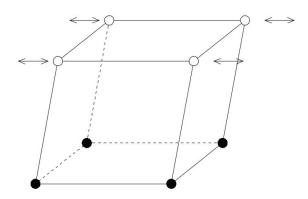


Figure 29: Linear Elastic Pure Shear Cyclic Loading

#### Material Response at Gauss Point:

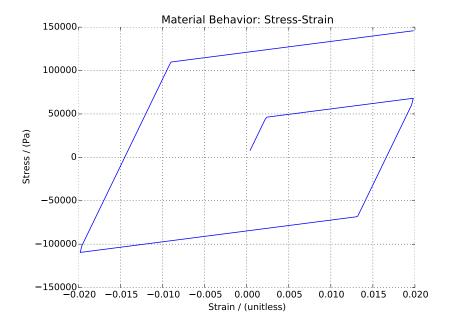


Figure 30: Linear Elastic Pure Shear Cyclic Loading

#### 5.1.2 von Mises Yield Function, Kinematic Hardening

#### Model Description:

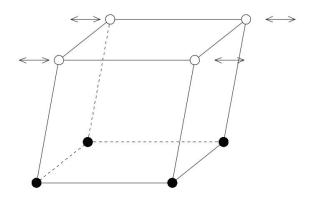


Figure 31: von Mises Pure Shear Cyclic Loading

#### Material Response at Gauss Point:

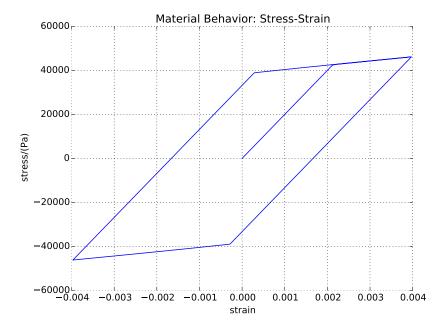


Figure 32: Results of von Mises Pure Shear Cyclic Loading

## 5.1.3 Drucker Prager Yield Function, von Mises Plastic Potential Function, Perfectly Plastic Hardening Rule

Model Description:

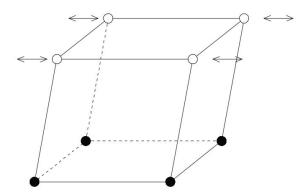


Figure 33: Diagram of Non-associative Drucker Prager Pure Shear Cyclic Loading

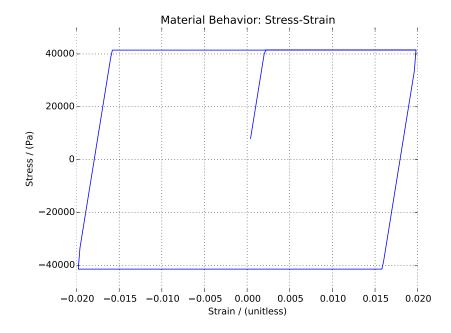


Figure 34: Results of Drucker Prager Pure Shear Cyclic Loading

## 5.1.4 Drucker Prager Yield Function, Drucker Prager Plastic Potential Function, Perfectly Plastic Hardening Rule

Model Description:

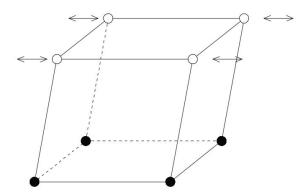


Figure 35: Associative Drucker Prager Pure Shear Cyclic Loading

Material Response at Gauss Point:

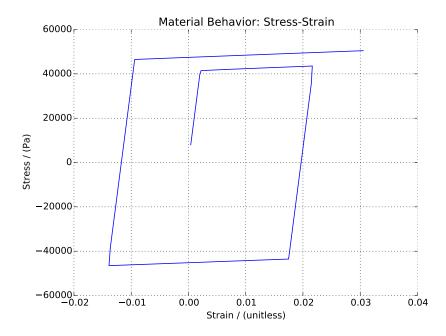


Figure 36: Results of Associative Drucker Prager Pure Shear Cyclic Loading

- 5.2 Elastic Plastic, Cam Clay Model, Various Stress Paths (To Be Added)
- 5.3 Elastic Plastic, SaniSand Models, Pure Shear Solid Examples (To Be Added)
- 6 Stiffness Reduction and Damping Curves Modeling
- 6.1 Pisano Material Model (To Be Added)

## 6.2 Drucker Prager with Armstrong Frederick Nonlinear Kinematic Hardening Material Model

Model Description:

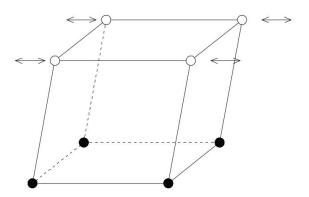


Figure 37: Diagram of Drucker-Prager Armstrong-Frederick Pure Shear Cyclic Loading

Material Response at Gauss Point:

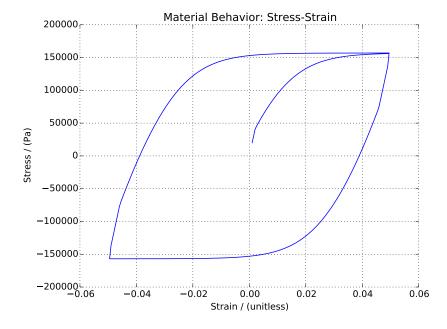


Figure 38: Result of Drucker-Prager Armstrong-Frederick Pure Shear Cyclic Loading