

D I G I T A L TEMPERATURE CONTROLLER

Upgraded Digital Temperature Controller with Various Functions, Easy-to-Use & Multiple Inputs

TTM-000W SERIES

FEATURES

Self-Tuning PID (Heating / Cooling)

The most appropriate PID constant is automatically computed for the controlled objects. PID constant is computed by performing the tuning, or when the hunting occurs.

Blind Function

From the various existing parameters, only the required parameters can be indicated or set.

Simplified Timer Function

ON/OFF setting control is available after some certain interval. Function of ON/OFF alarm output is independently usable.

Priority Display

Demanding parameter screens are monitored and set up under operational mode screen. (max. 9 points)

Multiple Inputs

Thermocouple / R.T.D. (Pt100 & JPt100) are selectable by front key.

External Standard

Conforms to "UL", "cUL" and "CE" markings (except TTM-002W) and compliant to "IP66"equivalent.

The 6 substances restricted by the RoHS directives are not used.

Compact Size

Compactly made with the depth of only 77mm (002W is 95mm).

Manual Control (Balanceless & Bumpless)

Manual output function is applicable for versatile applications of instrumentation systems.

Sampling Cycle: 250mS

Communication Function (RS-485: TOHO Protocol / MODBUS)

The communication distance is extended up to 500 m, and max. of 31 units of controllers can be connected to a single computer at a time. Centralized supervision is available for collection of the whole data and alterration of setting values at remote location.

Digital PV Filter

A filtering is possible with a software for abrupt alteration of input value.

PID with Overshoot Control Function

A PID control is available to control the overshoot which occurs when the control is just starting.

Further, in order to improve the controllability, PID algorithm of TTM-200 series had been introduced.

DI Function


The following functions are switchable:

- ① SV / SV2
- ② RUN / READY
- 3 AUTO (RUN) / Manual
- Normal / Reverse Action
- ⑤ AT (Auto-Tuning) Start
- 6 Normal (SV2) / Reverse Action (SV)
- 7 TIMER Start / Reset

Others


- ① CT Input (w/ Input Monitor)
- ② Shift setting of OFF position during the ON / OFF control (for both Output 1 & 2).
- 3 Heating / Cooling Control (w/ PID Control Function on Cooling Side).
- **4** Ramp Function

FRONT PANEL

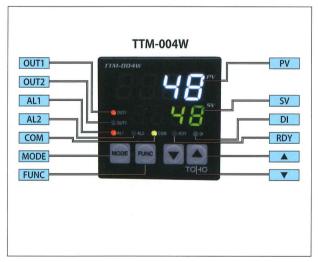

AL1	Output monitor for contact output 1
AL2	Output monitor for contact output 2
OUT1	Output monitor for output 1
OUT2	Output monitor for output 2
RDY	Light up in "READY" condition
COM	Light up when the communication function (option) is working (It blinks during the communication)
MODE	Mode key for shifting display
DI	Light up when DI (option) is functioning
FUNC	This key executes the set functions. ① Digit shifting key (digit being selected will blink) ② AT key ③ RUN / READY key ④ TIMER Start / Reset
PV	Indication of measured value & character display (Alarm, PID, etc.)
SV	Indication of set value, manipulation volume, timer remaining time
•	Up / Down key for alteration of the set values - Press continuously for 1 sec. to 10 sec. : 1 digit / 100ms 10 sec. to 20 sec. : 10 digits / 100ms over 20 sec. : 100 digits / 100ms.

OPERATION FLOW

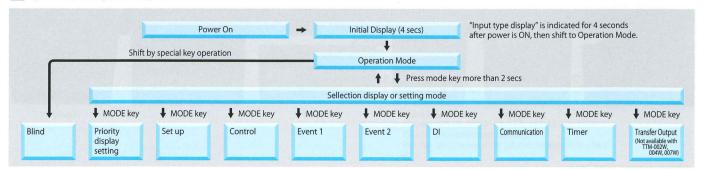



■ STANDARD SPECIFICATIONS

Input Type	Thermocouple	K, J, T, R, N, S, B (Input Resistanc	e: 1M Ω)		Thermocouple /		
	R.T.D.			ow 10 Ω (per wire) and 3 wires have all	R.T.D. Input, Current / Voltage Input are switchabl		
	Current / Voltage	4 - 20mADC (Input Resistance 2: (Measured Current Appx. 2mA)	with the front key.				
Indication	PV Character	4-digits White 10mm height (7.	6mm height for TTM-002\	W, 14mm height for TTM-006W / 009W)			
	SV Set Value	4-digist Green 8mm height (5.25					
	Various Function	and the same to be a first to the same to be a perfect to proper to the same better to the same of the perfect to the same of		DI), COM for TTM-002W is at 1st decimal	diate of disciplin		
Control Method	PID	Proportional band (P1)			aigit of aisplay,		
Control Metriod	Auto-Tuning			the setting limiter span			
	Self-Tuning			nes (magnification over the proportiona			
		Integral Time (I) 0 to 3600 sec. (Integral Control Action becomes OFF at 0).					
		Derivative Time (D) 0 to 3600 sec. (Derivative Action becomes OFF at 0).					
		Proportional Cycle (T1, T2) 1 to 120 sec. Dead Band (DB) Temp. Input -100.0 to +100.0 or -100 to +100(°C)					
		Dead Band (DB)					
	0111000		Analogue Input		0 to 1000 (digit) (Decimal point is at designated place)		
	ON / OFF	Control Sensitivity (C1, C2)	Temp. Input	0 to 999 or 0.0 to 999.9(°C)			
		Constant of Constant State (Work Const	Analogue Input	0 to 9999 (digit) (Decimal point is at de	signated place)		
	OFF point of Output 1 & 2	Position Setting	Temp. Input	-199 to 999 or -199.9 to 999.9(°C)			
				-1999 to 9999 (digit) (Decimal point is			
Control Output	Relay Contact	250VAC, 3A (Resistance Load) 1a	contact (On heating / coo	oling operation, output 2 is 250VAC, 2.44	(Load Resistance) 1a contact		
	SSR Drive Voltage	0 to 12VDC (Load Resistance: 60	0 Ω or more)				
	Current	4 to 20mADC (Load Resistance: E	Below 600 Ω)				
Sampling Time		0.25 sec. (Output change cycle is	also the same)				
Setting and	Thermocouple	± (0.3% + 1-digit) of input value	or ± 2°C , whichever is b	igger (Ambient Temp.: 23°C± 10°C)			
Indication Accuracy		However -99 to 0° C: ± 3° C -210 to -100 $^{\circ}$ C: ± 4° C Thermocouple B under 400 $^{\circ}$ C is not regulated.					
riccuracy	R.T.D.	± (0.3% + T-digit) of input value	or \pm 0.9°C , whichever is	bigger (Ambient Temp.: 23°C± 10°C)			
	Current (4-20mA),	± (0.3% + 1-digit) of setting valu	ue limiter span (Ambient T	emp.: 23°C± 10°C)			
Man	Voltage (0 - 5VDC, 1 - 5VDC)	FERRALL	Transfer American	NAME OF TAXABLE PARTY.			
Memory Element		EEPROM					
Input Voltage				dz ∗ For transfer output models, 24V A			
Weight	100	TTM-002W / 004W: below 180gms., TTM-005W / 006W: below 300gms., TTM-007W: below 250gms., TTM-009W: below 380gms					
Power Consumption		10VA (264VAC), 6VA (24VAC), 4W (24VDC) Instruction Manual & mounting attachment (TTM-002W, 004W), metal mounting bracket (TTM-005W, 006W, 007W, 009W)					
Accessories	12-10-10-10-10-10-10-10-10-10-10-10-10-10-	Carlot day of a contract of the contract of th		04W), metal mounting bracket (TTM-00	5W, 006W, 007W, 009W)		
Suitable Operatin	Activities the second second	0 to 50°C , 20 to 90% RH (no cond	densation)				
Suitable Storage I		-25°C to 70°C , 5 to 95% RH (no ic	the representation of the first				
Functions	Manipulated Variable Limiter (ML1, MH1, ML2, MH2)	0.0 (-10.0) to 100.0 (110.0)% Valu	ues indicated in () are fo	r current / voltage models.			
	Set Limiter (SLL, SLH)	See "Input & Scale Range Table".					
	Selectable Control Mode(CNT)	Auto-Tuning PID Type A (Normal Self-Tuning PID (Normal / Reverse	/ Reverse Action), Auto-To e Action), ON / OFF (Norm	uning PID Type B (Normal / Reverse Actional / Reverse Action)	on),		
	PV Correction 0-point Setting (PVS)	Thermocouple / R.T.D.: -199 to 99 Current / Voltage (Decimal point	99 or -199.9 to 999.9 (°C) at designated position): -	1999 to 9999 (digit)			
	PV Correction Gain Setting	0.50 to 2.00 (tímes)					
	Input Filter	0.0 to 99.9 (sec.)					
	Manual Reset (PBB)	0.0 to 100.0%, -100.0 to +100.0 (heating / cooling) of proportional band.					
	Timer Operation Mode (TMM)	0 min. 00 sec. to 59 min. 59 sec. 0 hr. 00 min. to 99 hrs. 59 min. Accuracy: ± (1.5%+0.5 sec.) of the set time.					
	Decimal Point Shift (DP)	Indication after the decimal point Yes / No					
	Manual Control	Manual control is possible (Balanceless / Bumpless)					
	RUN / READY	RUN / READY is switchable	7-11				
	Blind Function	A non-indication is possible for any unnecessary parameter screen.					
	Auto-Tuning (AT) Coefficient		Control of the Contro	A series to the series of the			
	FUNC Key	Selectable from "Digit Shift", "AT"					
	Priority Display	Selected parameter screen can be	the second secon	Secretary and the secretary an			
	Lock Function (LOC)	4-modes (OFF, ALL, Operation Mo					
	Self-Checking Function			all and a fact of the state of	n Watchdog Timer		
	Ramp Function	EEPROM Data Check (Err0), A/D Converter Operation Check (Err1), Auto-Tuning Check (Err2), Built-In Watchdog Timer Operation: When the SV is changed, it sets the SV changes per minute.					
		When the SV is changed, it sets the SV changes per minute. The setting can be done individually for SV & SV2 respectively. *SV2 is available when option DI is selected. Setting Range: 0.0 to 999.9 The ramp function is disabled by 0.0 setting. Setting Unit: 0.1°C /min. (thermocouple / R.T.D. input model)					
	AND THE STREET		V setting unit (analogue i				
	6 substances as restricted by the RoHS Directives are	Lead: Below 1,000 ppm Mercury: Below 1,000 ppm					
	not used.	Cadmium: Below 100 ppm Hexad Chrome: Below 1,000 ppm Polybrominated Biphenyl (PBB): B Polybrominated Diphenyl Ethers (elow 1,000 ppm				

■ ADDITIONAL FUNCTIONS (Option)

Contact Output 1 (AL 1) Contact Output 2 (AL2 or OUT2)	Function: PV event contact output (8 modes), Special functions (3 modes), additional functions (3 modes) Setting Range: Thermocouple / R.T.D: -199.9 to 999.9 or -1999 to 3276 (°C)
DI	Function: SV / SV2 switchable (OFF: SV2), Auto / Manual switchable (OFF: Manual), RUN / READY switchable (OFF: READY), Normal / Reverse action switchable (OFF: Normal), Normal action (SV2) / Reverse action (SV2) switchable (OFF: Normal SV2), Timer Start / Reset (OFF: counting) Input Specifications: Min. input time: 500mS, OFF voltage: 6VDC max., ON current: 6mA max., permissible resistance value between terminals: ON = 333 Ω max., OFF = 500k Ω min.
CT Input	Setting Range: 1 to 30A AC, Accuracy: ±5% (setting resolution 1A)of FS, Detection of wire malfunction: when the ON time of OUT1 is above 300mS. Welding detection: when the OFF time of OUT1 is above 300mS.
Heating & Cooling	Refer to "Use of Control Output"
Communication	(1) Communication Standard : RS-485 conformable (2) Communication Method : Protocol: TOHO protocol / MODBUS Multi-drop system (1:31 stations) Direction of Information: Semi-duplex Synchronous method: Asynchronous Transfer code: TOHO protocol ASCII (BCC is excluded) MODBUS RTU / ASCII Interface: Two-wire system Communication speed: 1200 / 2400 / 4800 / 9600 / 19200 BPS Character: Start bit 1 bit fixed Stop bit 1/2 bit Data length - TOHO Protocol 7/8 bit - MODBUS RTU 8 bit - MODBUS RTU 8 bit - MODBUS ASCII 7 bit None / odd no. / even no. BCC check (The error check will be done by CRC for MODBUS RTU, LRC for MODBUS ASCII) Address - TOHO Protocol 1 to 99 - MODBUS RTU and ASCII 1 to 247 Response delay time: 0 to 250mS (3) Isolation: Isolated from power circuit and CPU circuit.
Transfer Output	FUNCTION: PV (Measured Value) Output, SV (Set Value) Output, MV (OUT1 Manipulated Variable) Output Output Accuracy FS ± 0.3% (ambient temp. 23 ± 10°C) 0 to 10mV DC, 0 to 1V, 0 to 5V, 1 to 5V, 0 to 10V, 4 to 20mA Normal / Reverse switchable

INPUT and SCALE RANGE (Thermocouples & R.T.D. are switchable freely)

The second second second second		Set Range		Display Range	
Thermocouple		No decimal point	w/ decimal point	No decimal point	w/ decimal point
К	°C	-200 to 1372	-199.9 to 990.0	-210 to 1382	-199.9 to 999.9
J	°C	-200 to 850	-199.9 to 850.0	-210 to 860	-199.9 to 860.0
R	°C	0 to 1700		-10 to 1710	
T	"C	-200 to 400	-199.9 to 400.0	-210 to 410	-199.9 to 410.0
N	"C	-200 to 1300	-199.9 to 990.0	-210 to 1310	-199.9 to 999.9
5	°C	0 to 1700		-10 to 1710	-
В	°C	0 to 1800		-20 to 1820	
	-	0.001000			

all plants		Set Range		Display Range	
R.T.D.	No decimal point w/ decimal point No decimal po		No decimal point	w/ decimal point	
Pt100 (JIS/IEC)	"C	-199 to 500	-199.9 to 500.0	-199 to 530	-199.9 to 520.0
JPt100 (JIS)	"C	-199 to 500	-199.9 to 500.0	-199 to 510	-199.9 to 520.0

Current /	nt / Set Range		Display Range	
Voltage		No decimal point	w/ decimal point	Display Kange
			-199.9 to 999.0	Appy 296 of SV law limit setting
0 to 5V	V	-1999 to 9999	-19.99 to 99.99	Appx2% of SV low limit setting (SLL) to appx. +12% of SV high limit setting (SLH) within the set range.
			-1.999 to 9.999	setting (SLH) within the set range.
	5V V -1999 to 9999		-199.9 to 999.0	Appr. 1394 of SV low limit setting
1 to 5V		V -1999 to 9999	-19.99 to 99.99	Appx12% of SV low limit setting (SLL) to appx. +12% of SV high limit setting (SLH) within the set range.
			-1.999 to 9.999	setting (SLH) within the set range.
	220mA mA -1999 to 9999		-199.9 to 999.0	Appr. 13% of SV low limit setting
4 to 20mA			-19.99 to 99.99	Appx12% of SV low limit setting (SLL) to appx. +12% of SV high limi- setting (SLH) within the set range.
		-1.999 to 9.999 setting (SLH) within		setting (SLH) within the set range.

■ CONTACT OUPUT MODE

Kinds of Specialized Functions

0	None
1	PV Abnormal Contact Output
2	Heater Abnormal Contact Output
3	PV Abnormal Contact Output + Heater Abnormal Contact Output

Additional Functions

0	None	
1	Contact Output Hold	
2	Standby Sequence	
3	Contact Output Hold + Standby Sequence	


0.1 only the kinds of specialized functions are 0.

Kinds of PV Event Function


0	None
1	Deviation Upper / Lower Limit Contact Output
2	Deviation Upper Limit Contact Output
3	Deviation Lower Limit Contact Output
4	Deviation Upper / Lower Limit Range Contact Output
5	Absolute Value Upper / Lower Limit Contact Output
5	Absolute Value Upper Limit Contact Output
7	Absolute Value Lower Limit Contact Output
8	Absolute Value Upper / Lower Limit Range Contact Output

WIRING


TTM-002W when makig DI with open collector output, terminal #11 is "+ (plus)".

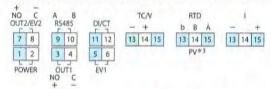


TTM-004W when makig DI with open collector output, terminal #9 is "+ (plus)".

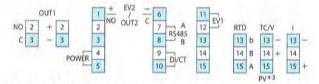

TTM-005W/006W/009W when makig DI with open collector output, terminal #11 is "+ (plus)".

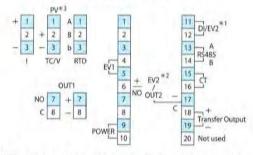

TTM-007W when making DI with open collector output, terminal #8 is "+ (plus)".

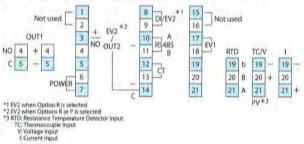

TERMINALS

Communication	Connect correctly the terminal of T/R (A) and T/R (B). (Use converter for connection other than RS-485)
Relay Output	C; Common, NO: Normal Open
SSR Drive Output	Connect directly to + & - input of SSR
EV1, 2	The polarity of normal open & normal close is switchable.
ст	Connect designated current transformer (heater abnormal contact output detector) directly.
R.T.D. Input	Connect carefully to terminals A, B, b.
Thermocouple Input	Watch for the polarity + & - when making connection.

*When OUT2 is "P", connect directly to INPUT + & - at SSR side.

*Watch for the polarity of transfer output + & - when making connection.



■ TIMER OPERATION MODE

Start Mode


1	Auto-Start :(ON Delay)
г	Manual Start :(ON Delay)
3	Event Star :(ON Delay)
4	Auto-Start :(OFF Delay)
5	Manual Start :(OFF Delay)
5	Event Start :(OFF Delay)
7	SV Start :(OFF Delay)

OFF Delay: After the time's up, either the control stops or the event output becomes OFF. ON Delay: After the time's up, either the control starts or the event output becomes ON. *Output is selectable either main control output or event output

■ TIMER OUTPUT SETTING

1	Timer Disuse	
2	Control Output	
3	Event 1 Output	

DIMENSIONS

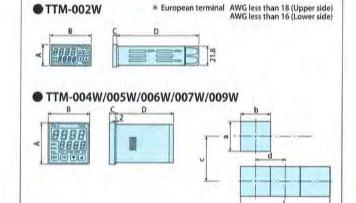



External Dimension & Panel Cutout Dimension

Model	a	b	c	d	A	В	C	D	L
TTM-002W	22.2 03	45 +0.6	60	48	24	48	3.5	96.5	(B × N-2.5)
TTM-004W	45+0.0	45 000	60	48	48	48	6	77	(B × N-3).0
TTM-005W	92:0.9	45 :0.0	120	48	96	48	6,5	76.5	(B × N-3)*¹
TTM-006W	45 40.6	92 40.4	48	120	48	96	6.5	76.5	(A × N-3)
TTM-007W	68+0.6	68 40.6	90	72	72	72	8.5	77	(B × N-3).
TTM-009W	92 40,6	92 40.6	120	96	96	96	9	77	(B × N-3)*

- When attaching several units, kindly refer to "L" column in the above table.
- ** When the crimped terminal will be used to attach several units, make sure the terminals will not touch each other.
- # TTM-006W cannot be connected in crosswise direction. The "L" column above applies to vertical attachment dimensions.

PANEL INSTALLATION

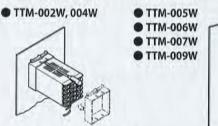


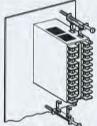

In the case of wiring a unit with options, and when connecting the wires to the center terminals, please connect wires directly to the terminal as much as possible. If crimped terminals are used, make sure they don't touch other terminals.

■ FUNCTIONAL DESCRIPTION

Self-Tuning PID

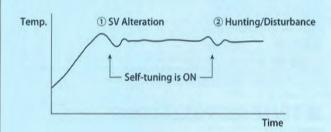

Blind Function

Mode Display Blind Setting



Parameter Display Blind Setting

1		2		3		35	36	
_	P	_ /	(MODE)	- d	MODE	_Nod	MODE _ LOE MODE	,
	on	00		00	100000000000000000000000000000000000000	on	on	,


The screen of your choice can be made not to appear (blinded) by the key operation. However, please note that when the SV setting value screen is blinded, the SV will not show, only the Measured Value (PV) will be shown during the normal indication.

Timer Function

1. In the case of Bread Oven


 Place the dough in to the oven, and press the start key of the timer.
 While the set time of the timer is in effect, the temperature will be controlled by the heaters, etc.

When the timer count ends, the control will stop automatically. (The function is used to stop the control when the timer count ends)

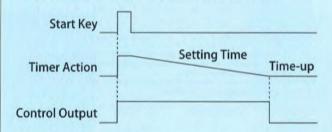


- 2. In case the control needs to start after the peripheral equipment are readied for the packaging machines and industrial machines

 The timer starts to count the moment the power is turned ON
- While the set time of the timer is in effect, the control output is put on hold.
 When the timer count ends, the control starts automatically.
- (The function is used to start the control when the timer count ends)

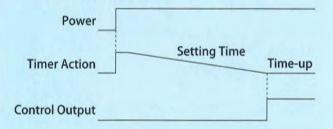


Communication Function

Example of connection with the Personal Computer By the connection as shown below, centralized monitoring would be possible with the use of PC.

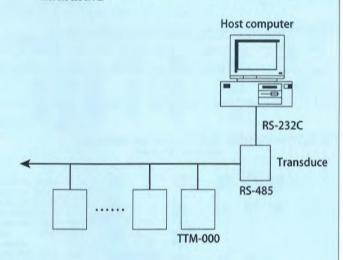

Digital PV Filter


This is a function to realize the CR Filter Effect with software by means of primary delay operation on the measured value (PV). The Filter Effect can be set by time constant (t). (The time constant refers to a time the PV value reaches to appx. 63% when the input changes in a step-wise)

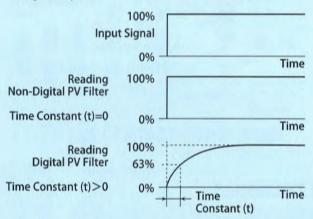

Use of Digital PV Filter

- Removal of High-Frequency Noise: The effect of the noise is lessened when the electrical noise is added during the input process.
- 2) The response can be delayed in the event of abrupt input change.

PID with Overshoot Suppressive Function

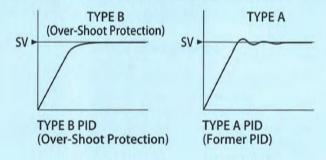




AUTO (RUN) / MANUAL CONTROL

The AUTO & Manual Control can be switched with the front key, DI or by the communication. Manual operation is a function which enables the setting / generation of output of the control output (manipulated variable) at will regardless of the deviation condition.

The system can be operated manually when there is a need to make a validation of the final control element such as valves or heaters during the sytem test run, or when

normal control cannot be done due to faulty sensors.

When switching over the AUTO / Manual reciprocally, sudden changes in the control output is suppressed. Furthermore, the Balanceless / Bumpless functions are available to hold the damages to peripheral devices due to sudden changes or harmful effect to the control system so the control can be done at ease.

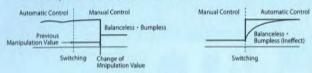

BALANCELESS · BUMPLESS

Ramp Function


When SV (Set Value) is changed, this function provides a slope to its changes.

The actual action is performed in such a way that dummy SV is gradually changed towards the new set value, and the control is performed over the dummy set value.

A variation of SV per minute is set.


When the characteristics of the item to be controlled does not allow a sudden change of the control result, or when the change rate (slope) of the control result is important, the ramp function becomes very effective

However, since this funcion changes only the SV, if great effect is expected on PV (measured value), expected result may not be obtained.

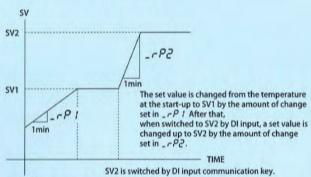


OFF-Point Position Shifting of ON / OFF Control

When the OFF-Point Position Shifting value is set to 0, the OFF-Point is at the set value

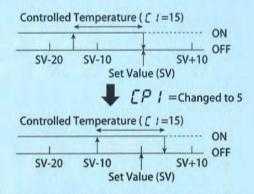


Above diagram shows the case the OFF-Point Position Shifting is set at (+5). The actual set value does not have changes with above, but as ON / OFF position, it moved to upper side by (+5). When position is moved to minus side, the OFF-Point moves in opposite direction to above diagram.

Heating / Cooling (Low Cost Type)

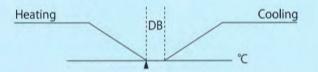

^{*} When the SV2 option is selected, the above is possible to operate.

■ ORDERING INFORMATION (Model Configuration)

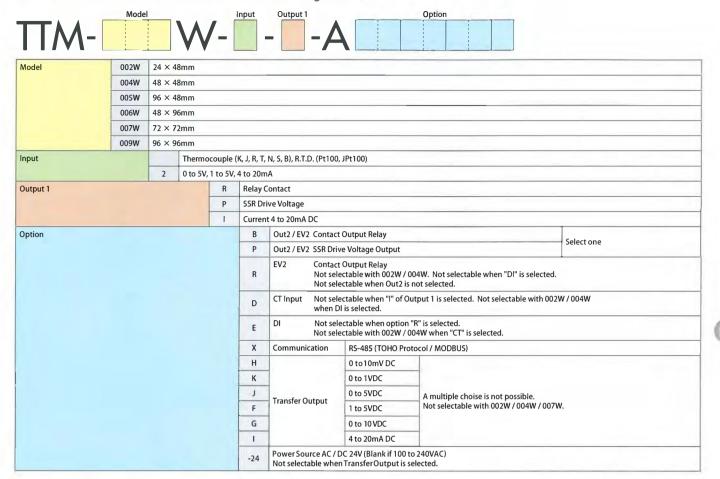













Size

TTM-002W 24 × 48mm TTM-004W 48 × 48mm TTM-005W 96 × 48mm TTM-006W 48 × 96mm TTM-007W 72 × 72mm TTM-009W 96 × 96mm

TTM-006W

TTM-007W

TTM-005W

TTM-009W