# 机器人技术与实践


#### A/P ZHOU, Chunlin (周春琳)

Institute of Cyber-system and Control

College of Control Science and Engineering, Zhejiang University


Email: c\_zhou@zju.edu.cn


## 3. FORWARD KINEMATICS I

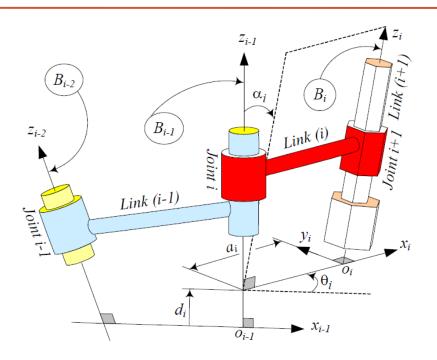

## 3.1 Position & Orientation

The position of the reference point P on a end-effector of a manipulator can be represented by a position vector,  $\overrightarrow{OP}$ .



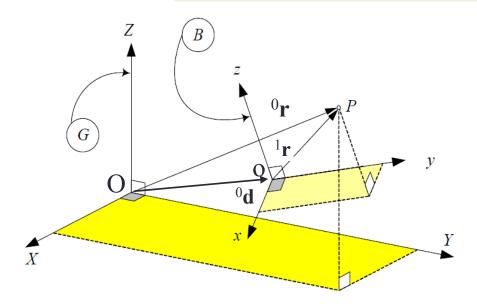

$${}^{0}\mathbf{r} = \begin{bmatrix} X \\ Y \\ Z \end{bmatrix}, \qquad {}^{1}\mathbf{r} = \begin{bmatrix} x \\ y \\ z \end{bmatrix}$$

$$\begin{bmatrix} X \\ Y \\ Z \end{bmatrix} = \begin{bmatrix} r_{11} & r_{12} & r_{13} \\ r_{21} & r_{22} & r_{23} \\ r_{31} & r_{32} & r_{33} \end{bmatrix} \begin{bmatrix} x \\ y \\ z \end{bmatrix} + \begin{bmatrix} d_x \\ d_y \\ d_z \end{bmatrix}$$

where  ${}^{0}\mathbf{d}$  is a vector in the global frame 0;  ${}^{0}R_{1}$  is a matrix transforming a vector in the local frame 1 into frame 0.

# **Homogeneous Transformation**

Position of P: 
$$\overrightarrow{OP} = {}^{0}\mathbf{r} = {}^{0}\mathbf{d} + {}^{0}R_{1}{}^{1}\mathbf{r}$$

$$\bigcirc$$

$$\begin{bmatrix} {}^{0}\mathbf{r} \\ 1 \end{bmatrix} = \begin{bmatrix} {}^{0}R_{1} & {}^{0}\mathbf{d} \\ \mathbf{0}_{1\times3} & 1 \end{bmatrix} \begin{bmatrix} {}^{1}\mathbf{r} \\ 1 \end{bmatrix} = {}^{0}T_{1} \begin{bmatrix} {}^{1}\mathbf{r} \\ 1 \end{bmatrix}$$

Homogeneous Transformation Matrix

$${}^{0}T_{1} = \begin{bmatrix} r_{11} & r_{12} & r_{13} & d_{X} \\ r_{21} & r_{22} & r_{23} & d_{X} \\ r_{31} & r_{32} & r_{33} & d_{X} \\ \hline 0 & 0 & 0 & 1 \end{bmatrix}$$
 representation. The appended element  $c$  is a scale factor and 
$$\mathbf{r} = \begin{bmatrix} x \\ y \\ z \end{bmatrix} \begin{bmatrix} cr \\ c \end{bmatrix} = \begin{bmatrix} cx \\ cy \\ cz \\ c \end{bmatrix} = \begin{bmatrix} r_{1} \\ r_{2} \\ r_{3} \\ c \end{bmatrix}$$
 If  $c \neq 0$ , homogeneous coordinates always represent the same vector as  $c$  varies.

Note: Representation of an *n*-element vector by an (*n*+1) element vector is called homogeneous

$$\mathbf{r} = \begin{bmatrix} x \\ y \\ z \end{bmatrix} \quad \begin{bmatrix} cr \\ c \end{bmatrix} = \begin{bmatrix} cx \\ cy \\ cz \\ c \end{bmatrix} = \begin{bmatrix} r_1 \\ r_2 \\ r_3 \\ c \end{bmatrix}$$

Homogeneous coordinates

# **Homogeneous Transformation**

Position of P: 
$$\overrightarrow{OP} = {}^{0}\mathbf{r} = {}^{0}\mathbf{d} + {}^{0}R_{1} {}^{1}\mathbf{r}$$

$$\begin{bmatrix} {}^{0}\mathbf{r} \\ 1 \end{bmatrix} = \begin{bmatrix} {}^{0}R_{1} & {}^{0}\mathbf{d} \\ \mathbf{0}_{1\times 3} & 1 \end{bmatrix} \begin{bmatrix} {}^{1}\mathbf{r} \\ 1 \end{bmatrix} = {}^{0}T_{1} \begin{bmatrix} {}^{1}\mathbf{r} \\ 1 \end{bmatrix}$$

The homogeneous transformation matrix relates coordinates in 1 and 0. It represents both pose and position information by two basic transformations:

> Rotation transformation

$${}^{0}T_{1} = \begin{bmatrix} {}^{0}R_{1} & \mathbf{0}_{3\times1} \\ \mathbf{0}_{1\times3} & 1 \end{bmatrix} \qquad {}^{0}T_{1} = \begin{bmatrix} \mathbf{I}_{3\times3} & {}^{1}\mathbf{d} \\ \mathbf{0}_{1\times3} & 1 \end{bmatrix}$$

**Translation** transformation

$${}^{0}T_{1} = \begin{bmatrix} \mathbf{I}_{3\times3} & {}^{1}\mathbf{d} \\ \mathbf{0}_{1\times3} & 1 \end{bmatrix}$$

### **Successive Transformation**

✓ The final global position of a point P in a rigid body B with position vector  $\mathbf{r}$ , after a sequence of transformation  $T_1$ ,  $T_2$ ,  $T_3$ , ...,  $T_n$  about the global axes can be found by

$${}^{1}\mathbf{r} = {}^{1}R_{2} {}^{2}\mathbf{r} + {}^{1}\mathbf{d}_{2}$$


$${}^{0}\mathbf{r} = {}^{0}R_{1} {}^{1}\mathbf{r} + {}^{0}\mathbf{d}_{1}$$

$$= {}^{0}R_{1} ({}^{1}R_{2} {}^{2}\mathbf{r} + {}^{1}\mathbf{d}_{2}) + {}^{0}\mathbf{d}_{1}$$

$$= ({}^{0}R_{1} {}^{1}R_{2}) {}^{2}\mathbf{r} + ({}^{0}R_{1} {}^{1}\mathbf{d}_{2} + {}^{0}\mathbf{d}_{1})$$

$$= {}^{0}R_{2} {}^{2}\mathbf{r} + {}^{0}\mathbf{d}_{2}$$

$${}^{0}R_{2} = {}^{0}R_{1}^{-1}R_{2}$$
 ${}^{0}\mathbf{d}_{2} = {}^{0}R_{1}^{-1}\mathbf{d}_{2} + {}^{0}\mathbf{d}_{1}$ 

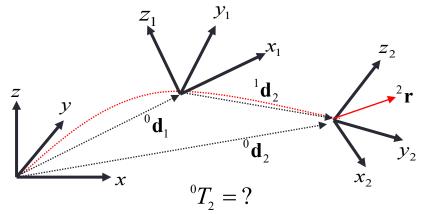

$${}^{0}\mathbf{r} = {}^{0}T_{n}{}^{n}\mathbf{r}$$

where 
$${}^{0}T_{n} = {}^{0}T_{1}{}^{1}T_{2}...{}^{n-1}T_{n}$$

## EX 3-1-1

Find the position & pose of a rigid body B in G after B turns  $\alpha$  about X-axis, translates a along X-axis, translates d along Z-axis and turns  $\theta$  about Z-axis.


$$T = T_{Z,\theta} T_{Z,d} T_{X,a} T_{X,\alpha} I_{4\times 4}$$

$$= \begin{bmatrix} c\theta & -s\theta & 0 & 0 \\ s\theta & c\theta & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & d \\ 0 & 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} 1 & 0 & 0 & a \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & c\alpha & s & 0 \\ 0 & s\alpha & c\alpha & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

### EX 3-1-2


$${}^{0}T_{i} = ?$$
  ${}^{i-1}T_{i} = ?$   ${}^{j}T_{i} = ?$ 

Usg properties of transformation matrix

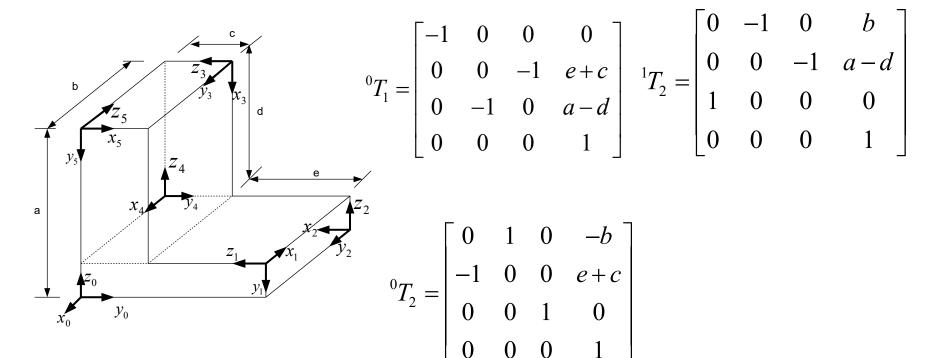

### **Inverse Homogeneous Transformation**

✓ The advantage of simplicity to work with homogeneous transformation
matrices come with the penalty of loss the orthogonality property.

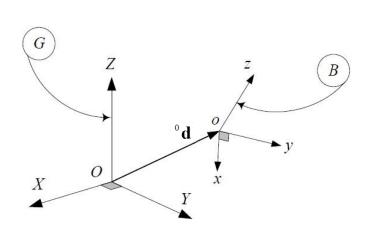


$${}^{0}T_{1} = \begin{bmatrix} {}^{0}R_{1} & {}^{0}\mathbf{d} \\ \mathbf{0}_{1\times3} & 1 \end{bmatrix}$$


$${}^{o}T_{1}^{-1} = {}^{1}T_{0} = \begin{bmatrix} {}^{0}R_{1}^{T} & -{}^{0}R_{1}^{T} {}^{0}\mathbf{d} \\ \mathbf{0}_{1\times 3} & 1 \end{bmatrix} \neq {}^{o}T_{1}^{T}$$

 $-{}^{0}R_{1}^{T}{}^{0}\mathbf{d}$  is a vector denoting  $\overrightarrow{oO}$  and is represented in B

## **EX 3-1-3**

The figure depicts an R||R||P (SCARA) robot with a global coordinate frame  $G(OXY\ Z)$  attached to the base link along with the coordinate frames  $B_1(o_1x_1y_1z_1)$  and  $B_2(o_2x_2y_2z_2)$  attached to link (1) and the tip of link (3). Find pose and position of the end-effector.

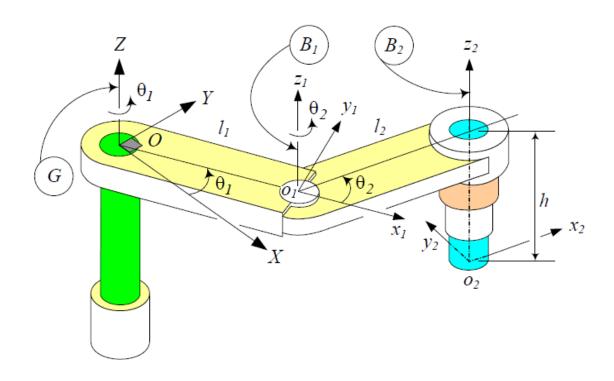

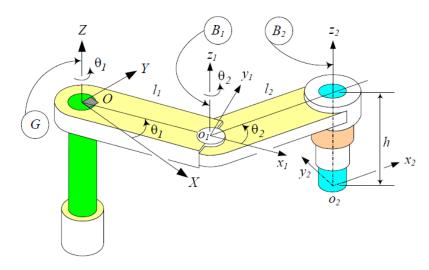

1. The T matrix mapping points in B2 to B1 is

$$^{B_1}T_{B_2} = \begin{bmatrix} \cos\theta_2 & -\sin\theta_2 & 0 & l_2\cos\theta_2\\ \sin\theta_2 & \cos\theta_2 & 0 & l_2\sin\theta_2\\ 0 & 0 & 1 & -h\\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$GT_{B_1} = \begin{bmatrix} \cos \theta_1 & -\sin \theta_1 & 0 & l_1 \cos \theta_1 \\ \sin \theta_1 & \cos \theta_1 & 0 & l_1 \sin \theta_1 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

3. The T matrix mapping points in  $B_2$  to G is

$$= \begin{bmatrix} c (\theta_1 + \theta_2) & -s (\theta_1 + \theta_2) & 0 \\ s (\theta_1 + \theta_2) & c (\theta_1 + \theta_2) & 0 \\ 0 & 0 & 1 \\ \hline 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} l_1 c \theta_1 + l_2 c (\theta_1 + \theta_2) \\ l_1 s \theta_1 + l_2 s (\theta_1 + \theta_2) \\ -h \\ \hline 1 \end{bmatrix}$$
 to  $B1$  is 
$$\begin{bmatrix} \text{Pose (RPY)} & \text{position} \\ (0, 0, \theta_1 + \theta_2) & \begin{bmatrix} l_1 c \theta_1 + l_2 c (\theta_1 + \theta_2) \\ l_1 s \theta_1 + l_2 c (\theta_1 + \theta_2) \\ l_1 s \theta_1 + l_2 s (\theta_1 + \theta_2) \\ -h \\ 1 \end{bmatrix}$$


The origin of B2 can also be found by

2. The *T* matrix mapping points in 
$$B_1$$
 to *G*:
$$G_{\mathbf{r}_2} = \begin{bmatrix} \cos \theta_1 & -\sin \theta_1 & 0 & l_1 \cos \theta_1 \\ \sin \theta_1 & \cos \theta_1 & 0 & l_1 \sin \theta_1 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$= \begin{bmatrix} l_1 \cos \theta_1 + l_2 \cos (\theta_1 + \theta_2) \\ l_1 \sin \theta_1 + l_2 \sin (\theta_1 + \theta_2) \\ -h \\ 1 \end{bmatrix}$$

## EX 3-1-4

Find the homogeneous transformation matrix for a rotation about an axis not through origin of coordinate frame.

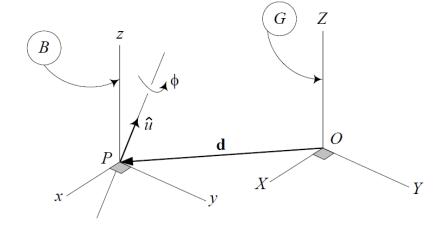

Rotation about **u** is equivalent to

- 1. Translate **u** to make it through the origin
- 2. Rotate about the translated **u**
- 3. Translate rotated quantities back

$$T = T(\mathbf{d})T_{\mathbf{u}}(\varphi)T(-\mathbf{d})$$

$$= \begin{bmatrix} I & \mathbf{d} \\ \mathbf{0} & 1 \end{bmatrix} \begin{bmatrix} R_{\mathbf{u}}(\varphi) & 0 \\ \mathbf{0} & 1 \end{bmatrix} \begin{bmatrix} I & -\mathbf{d} \\ \mathbf{0} & 1 \end{bmatrix}$$

$$= \begin{bmatrix} R_{\mathbf{u}}(\varphi) & (I - R_{\mathbf{u}}(\varphi))\mathbf{d} \\ \mathbf{0} & 1 \end{bmatrix}$$

## **Code Session**

Ch3\_1.m

# 3.2 Denavit-Hartenberg Method

- ✓ Serial articulated robot (a robotic arm) has diversified structure, which brings complexity to the control of robot.
- ✓ It is necessary develop a generic method to define the geometry of a robotic arm in order to control different arms usg the unified method.
- ✓ One of the most useful methods uses the so called Denavit-Hartenberg notations that can describe the structure of a robotic arm in a generic manner.









### **Notations of Links**


- ✓ A robot with *n* joints will have *n* movable links and 1 ground fixed link;
- ✓ Numbering of links starts from 0 for the grounded base link to 1 for the first link of the robot, and increases sequentially up to *n* for the end-effector link;
- ✓ The link i is connected to its lower link i-1 at its proximal end by joint i and is
  connected to its upper link i+1 at its distal end by joint i+1;

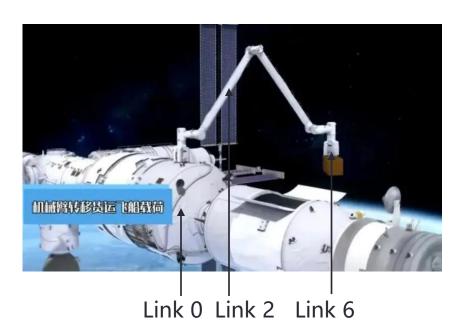

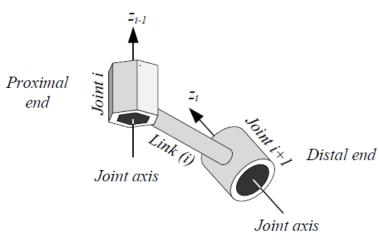

# **Denavit-Hartenberg Parameters**

- ✓ Solving the forward kinematics problem is a process to find T between link i and link i-1 if their relative motions are given;
- ✓ The pose and position of the link *i* with respect to link *i*-1 are decided by two aspects: the **rotation** and the **geometries of mechanical parts**;

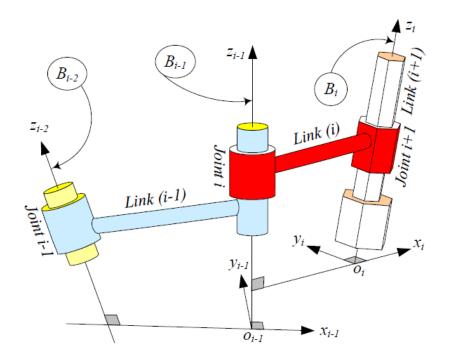

#### **■** Rotation

1. Relative rotation angle  $\theta$ 


#### Geometries of mechanical parts

- 2. Distance of links
- 3. Twist of links
- 4. Offset of links

### **DH Parameters**

✓ The process using the 4 geometric parameters to determine *T* is known as **Denavit-Hartenberg (DH) method** 

#### **Step 1: Setup coordinate frames**

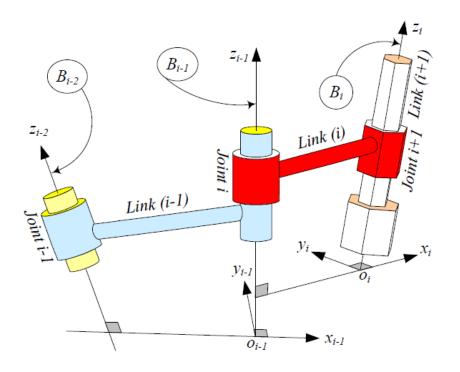


#### z-axis

- aligned with the axis of the distal
   end joint of the ith link
- or aligned with the translation direction for a prismatic joint
- both directions are applicable

#### **Step 1: Setup coordinate frames**

#### Origin o<sub>i</sub>

• intersect point of the common normal between the  $z_{i-1}$  and  $z_i$  axes with  $z_i$ 

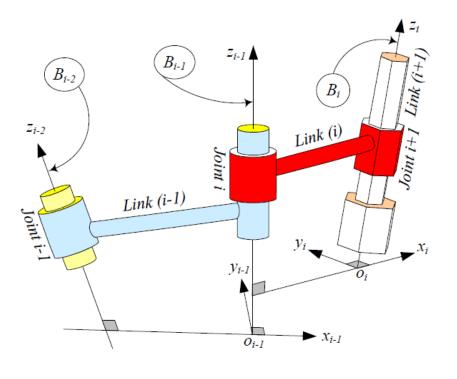

#### x<sub>i</sub>-axis

 along the common normal between the z<sub>i-1</sub> and z<sub>i</sub> axes, pointing from the z<sub>i-1</sub> to the z<sub>i</sub>—axis

$$x_i = \pm \left( z_{i-1} \times z_i \right)$$

 if two z-axes are parallel, collinear with that of the previous joints

$$y_i = z_i \times x_i$$

#### **Step 2: Identify DH parameters**


- **1. Joint distance**  $d_i$ : distance between  $x_{i-1}$  and  $x_i$  axes along the  $z_{i-1}$ -axis.
- **2.** Joint angle  $\theta_i$ : rotation of the  $x_{i-1}$ -axis about the  $z_{i-1}$ -axis to become parallel to the  $x_i$ -axis
- 3. Link length  $a_i$ : distance between  $z_{i-1}$  and  $z_i$  axes along the  $x_i$ -axis
- **4.** Link twist  $\alpha_i$ : rotation of  $z_{i-1}$ -axis about  $x_i$ -axis to be parallel to  $z_i$ -axis

#### **Joint parameters**

 $\theta_i$   $d_i$ 


#### **Link parameters**

 $a_i \quad \alpha_i$ 

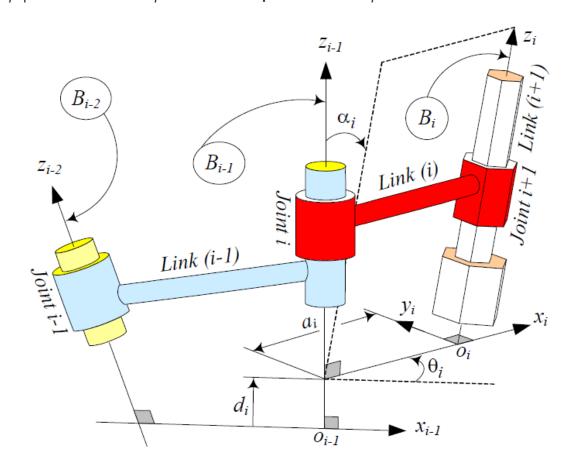


## Ex 3-2-1

Fill in the table of DH parameters (type I) for the 3R robotic arm

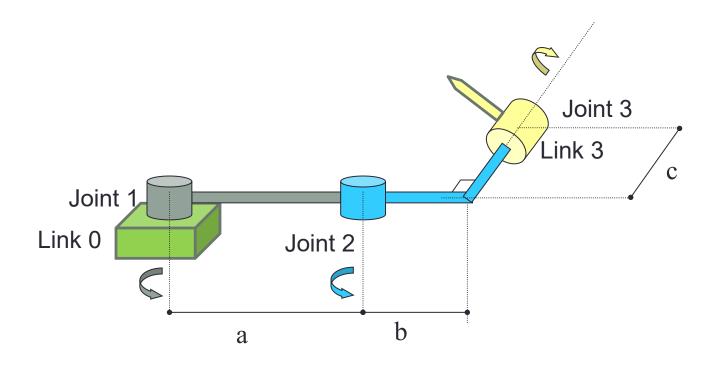

## Ex 3-2-1

#### Find the forward kinematics solution.

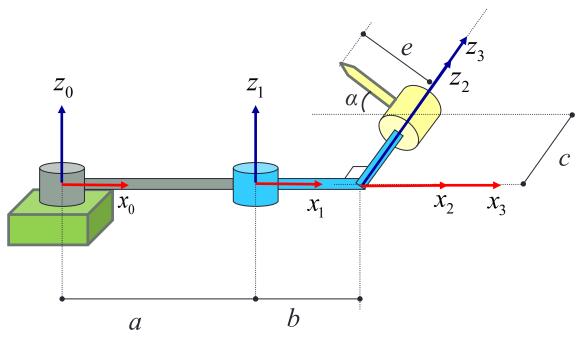


Frame No.	$a_i$	$\alpha_i$	$d_i$	$ heta_i$
1	а	0	0	$\theta_1$
2	b	-90°	0	$ heta_2$
3	0	0	0	$ heta_3$

## Notes on DH parameters


- The configuration of a robot at which all the joint variables are zero is called the home configuration or rest position, which is the reference for all motions of a robot.
- 2. The DH coordinate frames are not unique because the direction of  $z_i$ -axes are arbitrary, and x-axis will be arbitrary if  $z_{i-1}$  and  $z_i$  intersects.
- 3. The direction  $x_i$  is to set a more convenient reference frame when most of the joint parameters are zero.
- 4. The best rest position is where it makes as many axes parallel to each other and coplanar as possible.

# Ex 3-2-2 Fill in the table of DH parameters for the PUMA200 robot

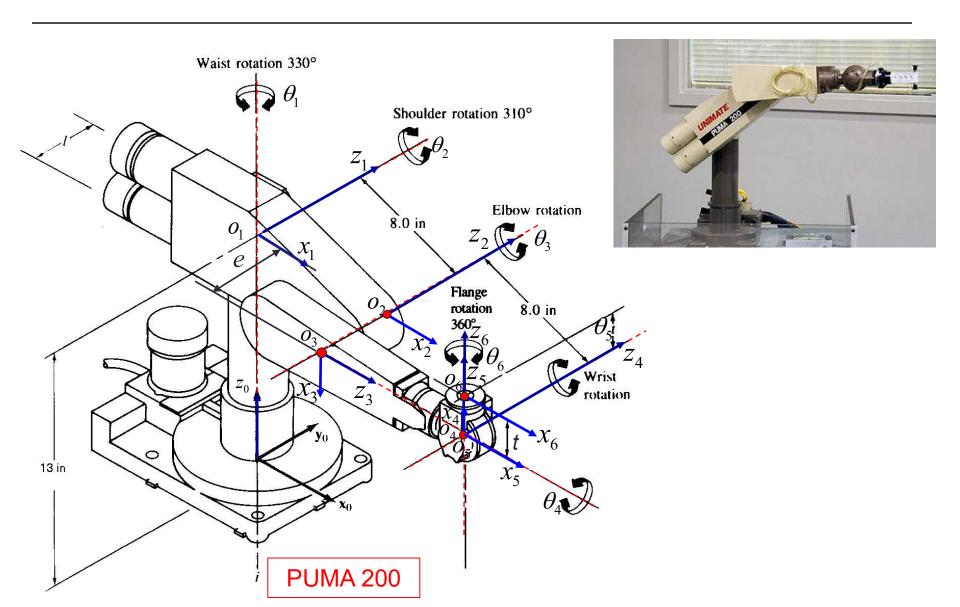

## Ex 3-2-2

### Fill in the table of DH parameters for the PUMA200 robot

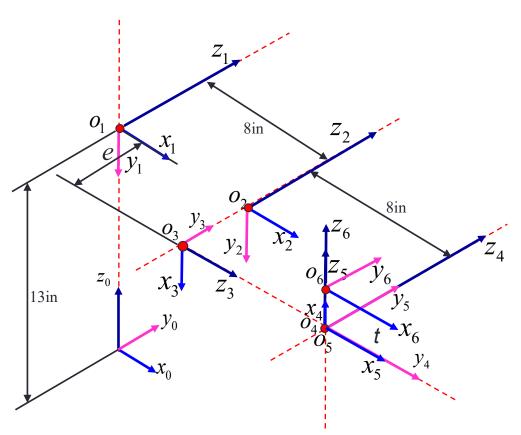

✓ The DH coordinate frames are not unique.



No.	$a_i$	$\alpha_i$	$d_i$	$ heta_i$
1	0	-90°	13	$\theta_1$
2	8	0	0	$ heta_2$
3	0	90°	<b>-</b> е	$\theta_{3}(90^{\circ})$
4	0	90°	8	$\theta_4(180^{\circ})$
5	0	90°	0	$\theta_{5}(90^{\circ})$
6	0	0	t	$\theta_6$

## **Code Session**

#### No code