# Notes for ECE 46300 - Introduction To Computer Communication Networks

Zeke Ulrich

October 6, 2025

# Contents

Course Description 2
Computer Networks 3
Packets 5
Circuit Switching 5
Packet Switching 5
Packet Headers 6
Internet Architecture 7
Name and Addressing 7
Destination discovery 7
Forwarding 7
Routing 7
Reliability 8
Application Multiplexing 8
Modularity 8
Sockets 10
Connection 10
Network Performance Metrics 12
Bandwidth and Throughput 12
Latency 12
OSI Model 14
Physical 14
Data Link 14
Network 23
Transport 25

Application

25

## Course Description

An introduction to the design and implementation of computer communication networks. The focus is on the concepts and the fundamental design principles that have contributed to the global Internet success. Topics include: digital transmission and multiplexing, protocols, MAC layer design (Ethernet/802.11), LAN interconnects and switching, congestion/flow/error control, routing, addressing, performance evaluation, internetworking (Internet) including TCP/IP, HTTP, DNS etc. This course will include one or more programming projects.

## Computer Networks

The high-level question this course will answer is "how do computers reliably communicate?"

The answer is through computer networks, a group of interconnected nodes or computing devices that exchange data and resources with each other.

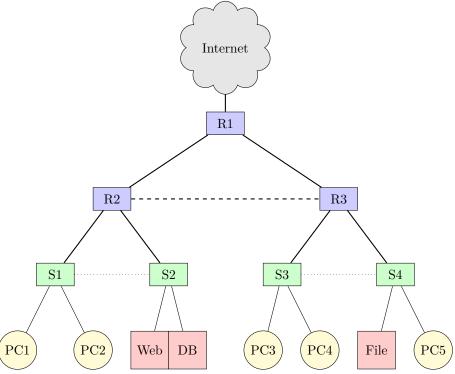


Figure 1: Computer Network

A computer network enables communication between users and their devices.

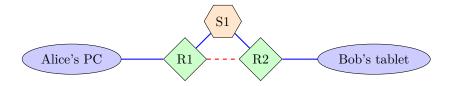


Figure 2: Simple Network

The first stop that most home devices take in connecting to other devices is the router. From there, the router can route data and find a path for Alice's PC to get to Bob's tablet. The core of any network is routers, which figure out the best way to get data from one device to another device.

This process can get complex, with cell tower connections, different ISPs, different edge devices, and more. Let's abstract the important elements of the network.

- Links: carry data from one endpoint to another
- End hosts: sitting at the edge of a network. Generate and receive data.
- Routers: forward data through the network.

Any network can be abstracted as a connection of links, end hosts, and routers. We can thus represent any computer network as a graph, in the mathematical sense, and apply all our graph algorithms to it.

A communication link can either be full or half duplex. In a half duplex, a link can carry data in only one direction at a time. In a full duplex, data transmission is bidirectional. If a link bandwidth is B, then a full-duplex link can carry B in both directions simultaneously.

In this class, all links are assumed to be full duplex unless otherwise stated.

## Packets

In our abstraction of routers, we leave the problem of finding a path from end hosts unanswered. Since we can represent a computer network as a graph, a shortest-path algorithm like Dijkstra's is a relatively simple way to find a good path between Alice and Bob.

We wish to answer the question "how do users access shared network resources?" Assume no coordination between users and assume users initiate access.

There are two ways to answer this:

- Reserving resources (circuit switching).
- On-demand (packet switching)

#### Circuit Switching

The idea at the core of this method is that if Alice wants to communicate with Bob, then they reserve a path through the network to do that. The reserved path is called a *circuit*. They then send data along the reserved path.

A pro of circuit switching is that users are guaranteed to have a path through the network. No queuing, no waiting. The routers along the path also don't need to make any decisions in real time. They know the path in advance.

A con is that a resource could be reserved but not used. When users don't coordinate, circuit switching leads to very inefficient use of resources. Another con is that circuits need to be set up and torn down. Imagine the overhead of old telephone networks, where workers had to manually connect telephone wires from one caller to another.

In classical circuit switching, all the resources along the path are reserved for a single circuit and there is no path sharing amongst multiple circuits. In virtual circuit switching, each circuit reserves a subset of resources along its path. It's still reservation based, but two or more circuits can share a same resource (e.g. if two users want to send data that takes up half the bandwidth of a connection, they can both send it at once).

#### Packet Switching

To overcome the shortcomings of circuit switching, packet switching was invented. The way this works is data is broken into small units called *packets*. You send packets over the network whenever you have them and trust the routers to figure out the path your packets take on the fly.

Each packet needs to have metadata that describes things like the destination of the packets, the order of the packets, and so on.

A pro of packet switching is that we have much better resource utilization. Also, there's no overhead of circuit setup and teardown.

A con of packet switching is that there's no guarantee that a given user will have the resources to send their data. Now we also have overhead from the packet headers, and routers now need to process packet headers and find paths on the fly.

Although both have advantages and disadvantages, modern networks almost exclusively use packet switching and unless otherwise specified all networks in this class are assumed to be packet switched.

## Packet Headers

Packet headers require, at least, the following:

- Destination address, used by network to send packet to destination
- Destination port, used by network stack at the destination for application multiplexing
- Source address, used by network to send packet back to source
- Source port, used by network stack at the source for application multiplexing

We'll learn more about the OSI model in a later section, but for now suffice to say that each layer has its own header that it stacks onto and strips from user data, starting with the application layer attaching its own header to user data, to the transport layer sticking a header on, and so on. As the package travels from host to destination the layers get added, and then stripped off in the order they were added.

## Internet Architecture

We need to solve these problems:

- Name and addressing: identifiers for network nodes
- Destination discovery: finding the destination address
- Forwarding: sending received data to the next hop (neighbor)
- Routing: finding the path from source to destination
- Reliability: handling failures, packet drops, packet corruption
- Application multiplexing: delivering data from multiple host applications to the network and vice versa

## Name and Addressing

Name is the human-readable name for each node (e.g., URL www.google.com). Address is where node is located (e.g., IP address 172.21.4.110).

## Destination discovery

When you go to a web page, you type the name in your browser. You need to get the address still. The way names are resolved into addresses is via the Domain Name System (DNS), a set of global servers that maintain the mappings between host names and addresses. When you type a URL, the browser contacts a DNS server to get the address.

## *Forwarding*

A router has many ports. Each port in a router acts as both input and output, i.e., you can both send and receive packets on each port simultaneously. When a packet arrives at a router, the router looks at the destination address in the header. Based on destination address, the router consults the routing table, determines the right output port, and sends the packet to that port's queue. For each output port in parallel, when the port is free, the router picks a packet from the corresponding output queue in some order (e.g. FIFO) and sends the packet over the output port.

#### Routing

How do a network of routers collectively find a path between each source and destination host? The answer is a routing protocol, a distributed algorithm that runs independently at each router.

#### Reliability

The goal of reliability is to ensure every packet sent will eventually reach the destination uncorrupted. Unfortunately, routers can drop packets or packets can get corrupted. The idea behind all reliability protocols is after sending data, await an ACK from the destination. If ACK was received, everything is good! If not, resend the data.

## Application Multiplexing

Each app that communicates over a network needs some subset of basic functionalities, like a reliability protocol. We could ask each app developer to implement the protocol themselves, but this is burdensome on the developer and prone to errors. Instead, on modern computers, there is a common OS service that handles packing data into packets, creating packet headers, and handling ACKs.

Typically, each host has a program running inside the OS called "host network stack". In addition to the responsibilities above it also handles getting data from the network and sending it to the right application.

When an app wants to access the network, it opens a *socket* which is associated with a *port*. A socket is an OS mechanism that connects applications to the network stack. A port is a number that specifies a particular socket. The port number is used by the OS for app multiplexing to direct incoming packets to the right applications.

## Modularity

The internet is inherently hierarchical. There are big networks at high levels, e.g. AT&T, which connect smaller networks at a lower hierarchy e.g. Purdue. We break the task of sending data into five layers, known as the *Open Systems Interconnect* (OSI) model.

- 1. Physical: bits sent over a physical connection. Involves signal processing, analog-to-digital conversions, etc.
- 2. Data Link: "best-effort" data delivery within a local network. Involves naming, addressing, destination discovery, routing, forwarding
- 3. Network: "best-effort" data delivery between networks. Involves naming, addressing, destination discovery, routing, forwarding
- 4. Transport: reliable end-to-end data delivery. Involves reliability and application multiplexing.
- 5. Application: network service to users or applications. Involves read/write data from applications, encrypt/decrypt, etc.

Each layer only talks with the layers directly above and below.

Where should these subtasks be implemented?

## Sockets

A *socket* is an OS mechanism for inter-process communication. It allows two processes or applications on the same (loopback) or different machines to communicate with each other. The communication path goes through the network stack of machines running the processes.

The socket interface sits between the application and transport layer. It has send and recieve buffers for each app, which apps access via send() and recieve(). Each application is attached to a socket that has a unique port number and send-recieve buffers.

## Connection

A connection is identified with a 5-tuple:

- Local IP address
- Remote IP address
- · Local port
- Remote port
- Transport protocol type

These 5 things in combination make a connection. A local and remote socket make a connection.

Creating a socket is the first step in socket programming. Use the <code>socket()</code> system call, which returns a file descriptor. This is interesting, because it abstracts the difficulties of sending data over a network to the same process as writing to a file.

There are three things needed to open a socket, which is done with a call like int fd = socket(int family, int type, int protocol)

- family: protocol family used for communication. E.g. AF\_INET.
- type: defines the communications semantics used. There are two
  popular choices, SOCK\_STREAM which is reliable, and SOCK\_DGRAM
  which is unreliable.
- protocol: specifies a particular transport protocol. Setting to 0 will choose the default protocol implemented in the OS. E.g. TCP, UDP.

SOCK\_DGRAM is connectionless, i.e. no handshake required before sending data. This is a packet or *datagram* abstraction. SOCK\_DGRAM offers unreliable communication in the sense that there is no promise that every packet is delivered. For datagram abstraction, any data sent with send() just has a UDP header slapped on and that's sent off as a packet. Whatever transport layer on the other side just strips off the UDP header and forwards the payload to the recieving app.

Any address that begins with 127. is on the local machine, i.e. on loopback.

SOCK\_STREAM is connection-oriented, i.e. explicit handshake happens before data is sent. This is a byte stream abstraction. SOCK\_STREAM offers reliable communication, which means that all the data reaches its destination reliably and in-order. For bytestream abstraction, there is a buffer. Bytes sent are stored in the buffer. The TCP protocol decides how many bytes go into packet.

In either case, excess bytes are dropped if the receive buffer is full. In the datagram case nothing is done. In the bytestream case, the sender is notified and presumably resends the bytes.

In the datagram abstraction, if the sending app makes five send calls, the receiving app should make five receive calls. Nothing similar is promised in the bytestream abstraction.

Note that the actual data going over the network is packets, regardless of if a byte stream abstraction or datagram abstraction is used. The abstraction is just for programming convenience.

A recap of important function calls:

- socket(): creates a socket
- bind(): bind socket to an address <IP, port>
- connect(): initiate connection to server
- listen(): listen for and queue incoming client connections
- accept(): accept incoming client connections
- send(): send data over a connected socket (TCP)
- recv(): receive data from a connected socket (TCP)
- sendto(): send data to a specific address (UDP)
- recvfrom(): receive data and sender's address (UDP)
- close(): close the socket and release resources

## Network Performance Metrics

When evaluating if a network is good or bad, there are two key metrics: bandwidth or throughput and delay or latency. A good network should have high bandwidth/throughput and low delay.

## Bandwidth and Throughput

Bandwidth is the max number of bits that can sent through a network per unit time, typically measured in bits per second (bps). Bandwidth is a property of the physical network components. For instance, a copper cable may have a bandwidth of 500 Mbps or a fiber optic cable may have a bandwidth of 100 Gbps.

Throughput measures the bandwidth utilization of a network. It's also measured in bits per second.

$$0 \le \text{throughput} \le \text{bandwidth}$$
 (1)

Throughput is a function of the mechanisms used to communicate over the physical network. Network throughput can be lower than network bandwidth due to inefficiencies of communication mechanism, but a good network will make throughput as high as possible.

#### Latency

Suppose you are sending a series of bits from point A to B. Delay or latency is the total time between first bit leaving point A and last bit reaching point B. It is measured in units of time, typically seconds or milliseconds. Note that, in a packet-switched network, the entire packet must be received by the router. This "store-and-forward" model introduces delays. An alternative with smaller delay is "cut-through", where the router begins processing as soon as the destination address is received. The tradeoff is that routers can't check for packet corruption, since it necessarily requires the entire packet.

We represent delays with a timing diagram, as in Figure 3. There are different delays when packet routing:

- Transmission Delay: Packet Size / Link Bandwidth
- Propagation Delay: Link Length / Link Propagation Speed
- Queuing Delay: Sum of Transmission Delay for all packets ahead in the queue
- Processing Delay: Depends upon the router hardware processing speed, nature of processing, etc.

Internet for outer space is currently an area of research. Latency can be minutes, hours, or days in such a case.

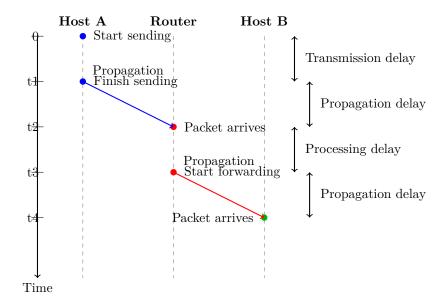


Figure 3: Timing Diagram

The total delay for a single packet going over 2 hops in a store-and-forward packet-switched network is

$$2(TD + PD) + QD + PrD \tag{2}$$

For M hops (M-1 routers) the end-to-end delay is

$$M(TD+PD) + (M-1)(QD+PrD)$$
(3)

For a store-and-forward model with N packets over 1 hop, the time from 1st bit leaving A to last bit of last packet reaching B is

$$N \times TD + PD \tag{4}$$

For a store-and-forward model sending N packets over M hops, the total end-to-end delay is

$$M \times (TD + PD) + (M - 1) \times (QD + PrD) + (N - 1) \times TD \quad (5)$$

Queuing occurs at the router when the packet arrival rate exceeds the packet drain rate.

## OSI Model

The Open Systems Interconnection (OSI) model describes communications from the physical implementation of transmitting bits across a transmission medium to the highest-level representation of data of a distributed application. Each layer has well-defined functions and semantics and serves a class of functionality to the layer above it and is served by the layer below it.

## *Physical*

The realm of electrical and computer engineers. Deals with converting between digital and analog signals or electrical and optical signals. Beyond the purview of this course.

#### Data Link

The data link layer runs on top of the physical layer. It transfers data between nodes on a network segment across the physical layer. Whereas the internet as a whole runs on a global standard (IP) to allow subnetworks to communicate, the data link layer allows autonomy within each local area network (LAN). Each LAN can run its own network protocol for communication within LAN, e.g., Ethernet, Wi-Fi, 5G, CSMA, Sonet, etc. The data link layers handles addressing, destination discovery, forwarding, and routing within a local network. We will study data link layer mechanisms in the context of the most popular data link layer protocol called "Ethernet" Ethernet is an example of a wired data link layer protocol, i.e., nodes are connected using physical cables

MAC Addresses All network devices are connected to the network via a "Network Interface" or "Port". A network interface can be "physical" (wired or wireless), such as an actual connection on a server in some closet, or it can be "virtual", i.e., a piece of software emulating a network interface. Each network interface, physical or virtual, has a Media Access Control (MAC) address. MAC addresses are 48 bits or 6 bytes long and typically represented in hexadecimal format, e.g., ab:00:05:2c:e4:34. MAC address of each interface within a given network must be unique, but MAC addresses are not necessarily globally unique.

There are three ways to transmit information from a sender to a recipient:

• Unicast: one-to-one transmission

• Multicast: many-to-many transmission

Another very popular data link layer protocol is Wi-Fi, which is an example of a wireless data link layer protocol. Wi-Fi is not covered in this class

#### • Broadcast: one-to-all transmission

Naive implementations of broadcast might have the sender send its packet to every of the N-1 hosts in the network, but a more efficient implementation is to send the packet to the router and have it send it out to everyone else. A special destination MAC address of ff:ff:ff:ff:ff:ff is used to indicate a broadcast packet.

To see the list of interfaces on your computer, run the following command in the terminal: ifconfig (mac/Linux) or ipconfig (Windows).

In Ethernet, the Ethernet data (payload) and header is carried in an "Ethernet Frame". The structure of an Ethernet frame is as follows: All Ethernet packets start with a "Preamble" - 7 bytes of alternating 1s and 0s used for clock synchronization between sender and receiver. This is followed by the Start Frame Delimiter (SFD), the one byte 10101011, then the destination MAX address, 6 bytes, and then the source MAC address, 6 bytes. These are followed by the Ethernet type, 2 bytes, which specifies the protocol carried in the payload of the packet (e.g. IP), and finally the data itself. The data has a minimum size of 46 bytes and a maximum size specified by the Maximum Transmission Unit (MTU), which is configurable. Everything is capped off with a Frame Check Sequence (FCS) of four bytes, used for bit error correction and detection, and an Inter Packet Gap (IPG), which is minimum 12 bytes of all 0s.

ARP The Address Resolution Protocol (ARP) is used to get the MAC address of a destination host within the same local network as the source host. It assumes you know the IP address of the destination host. Each host maintains a local table called ARP table which stores a mapping between an IP address and MAC address, as in Figure 4. Run arp -a on mac/Linux to view the table, If the entry is found in the table, done! Else run ARP to get the MAC address.

The ARP protocol has three stages. Say a host needs the MAC address of some machine that it has the IP address of. The host broadcasts an Ethernet frame with an ARP request. The structure of an ARP request is as follows:

- 1. Hardware type
- 2. Protocol type
- 3. Hardware size
- 4. Protocol size
- 5. Opcode
- 6. Sender MAC

```
C:\WINDOWS\system32>arp -a
Interface: 10.0.0.9 --- 0x4
                       Physical Address
 Internet Address
                                              Type
 10.0.0.1
                       10-56-11-c8-6a-9a
                                              dynamic
 10.0.0.48
                       be-c5-bb-0a-ed-f8
                                              dynamic
 10.0.0.57
                       7c-d5-66-42-6a-24
                                              dynamic
 10.0.0.88
                        f0-00-00-8f-f8-ae
                                              dynamic
 10.0.0.96
                       1c-4d-66-26-e2-f7
                                              dynamic
                       00-04-7d-0d-d7-67
 10.0.0.126
                                              dynamic
 10.0.0.138
                        34-17-eb-dd-7b-a8
                                              dynamic
 10.0.0.139
                       08-12-a5-be-d2-e7
                                              dynamic
 10.0.0.153
                        7a-aa-ab-0b-c3-fa
                                              dynamic
 10.0.0.162
                        f8-7b-8c-aa-a5-60
                                              dynamic
  10.0.0.185
                        00-04-7d-0e-1c-82
                                              dynamic
  10.0.0.186
                        e0-37-17-ea-11-5e
                                              dynamic
                        fa-7b-8c-aa-cf-0c
  10.0.0.202
                                              dynamic
                       00-04-7d-0d-d7-b1
 10.0.0.204
                                              dynamic
 10.0.0.209
                        fa-7b-8c-aa-cf-0e
                                              dynamic
                        fa-7b-8c-aa-cf-0e
 10.0.0.210
                                              dynamic
                       00-04-7d-3b-92-e6
 10.0.0.220
                                              dynamic
 10.0.0.226
                       84-c5-a6-25-5c-e2
                                              dynamic
 10.0.0.242
                       e4-58-e7-09-4d-ae
                                              dynamic
                       74-75-48-bc-ad-dc
 10.0.0.244
                                              dynamic
 10.0.0.250
                       fa-7b-8c-a6-b7-be
                                              dynamic
 10.0.0.251
                       fa-7b-8c-a6-b7-bc
                                              dynamic
                                              static
 10.0.0.255
                        ff-ff-ff-ff-ff
 169.254.185.26
                       e0-37-17-ea-11-5e
                                              dynamic
                       01-00-5e-00-00-02
                                              static
 224.0.0.2
  224.0.0.22
                       01-00-5e-00-00-16
                                              static
  224.0.0.251
                       01-00-5e-00-00-fb
                                              static
 224.0.0.252
                       01-00-5e-00-00-fc
                                              static
 239.255.255.250
                       01-00-5e-7f-ff-fa
                                              static
 255.255.255.255
                       ff-ff-ff-ff-ff
                                              static
:\WINDOWS\system32>
```

Figure 4: ARP Table

- 7. Target MAC (all 0s)
- 8. Target IP

Everyone on a local network gets the request. If the target IP matches the host IP, it sends an ARP reply packet.

The structure of an ARP reply is

- 1. Hardware type
- 2. Protocol type
- 3. Hardware size
- 4. Protocol size
- 5. Opcode
- 6. Sender MAC
- 7. Sender IP
- 8. Target MAC
- 9. Target IP

On getting the ARP reply packet back, the originating host updates its ARP table with a new mapping from the target IP address to target MAC address.

There are two ways of connecting nodes.

- Shared medium: All nodes connected via single common medium, such as a wire or space itself in the case of wireless transmissions.
   Each packet sent over the shared medium is received by each host.
   On receiving a packet, a host checks destination MAC address and discards if it does not match host's MAC address
- Point-to-Point: Dedicated pairwise connections.

An issue with shared medium is that there can be collisions. The solutions are somewhat technology-dependent, so we will discuss the solution in the context of Broadcast Ethernet where the shared medium is a wire.

There are two classes of techniques:

- Reservation, including frequency division multiple access (FDMA) and time division multiple access (TDMA)
- On-demand, including random access

In FDMA, we divide the medium into frequencies. Each source is assigned a subset of frequencies and sends on its assigned frequency. With TDMA, divide time into time slots. Each source is assigned a subset of time slots and sends on its assigned time slot. The benefit of these strategies is that we avoid collision. However, if source is idle, then its frequency/time slot is wasted. In FDMA, noise interference may cause disruption In TDMA, if source has data to send, can't send immediately, wait for its slot. TDMA also requires clocks of all hosts to be synchronized.

With random access, when a source has a packet to send, it sends it out. Unfortunately this leads to corruption when two packets collide. T

here are methods to detect mitigate corruption. One is to have the sender keep listening to the medium while transmitting. If sender senses collision (e.g., excess current on the wire), it aborts transmission and broadcasts a "Jam" signal. A Jam signal is a random 32-bit signal that ensures that all receiving nodes fail CRC checksum and discard the frame. The sender then waits for a random time and resends to avoid instantly colliding again.

Another method to mitigate corruption is Carrier Sense Multiple Access (CSMA). In CSMA, the sender listens to the shared medium before transmitting. If idle, it starts transmitting. If busy, it waits. This does not eliminate collision because of non-zero signal propagation delay.

Together this collision detection and CSMA are called CSMA/CD. CSMA listens to the medium and waits for it to be idle before transmitting. CD sends a Jam signal if a collision is detected. For retransmission, most implementations use random exponential backoff. After a packet collision, sender tries to re-transmit packet after a wait time. After k collisions for a packet, choose wait time randomly from  $\{0,...,2^k-1\}$  time slots. k resets to 0 after a packet transmission succeeds. This gives exponentially increasing wait time with each attempt, but also exponentially larger success probability with each attempt.

CSMA/CD does not scale to large number of hosts. It gets a higher collision rate, wastes more bandwidth re-transmitting the same packets, and has high and unpredictable delay due to variable back-off times. In practice, shared LANs don't have more than 1000 hosts Another issue is that CSMA/CD assumes hosts send packets intermittently. If everyone is sending steadily at all times there will be more collisions. In addition, for CD to work, the sender must be able to detect collision (if it happens) before it is finished transmitting the entire packet. If that's not true then the sender might have sent out multiple packets before receiving the Jam signal. On re-transmit, some receivers might receive duplicate packets. This imposes a constraint on the minimum packet

size or maximum network length. At high bandwidth, CSMA/CD requires either large min packet size (wasted bandwidth when less data to send!) or small network length.

So how do we overcome the scalability issue? With a point-to-point forwarding device, as in Figure 5. A point-to-point forwarding device

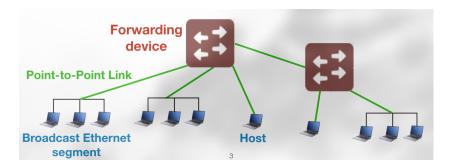


Figure 5: Forwarding Device

typically comprises multiple ports (or network interfaces). Each port connects to a single host or multiple hosts sharing a medium or some other forwarding device, using point-to-point links. It forwards packets received on one port out on some other port.

There are three layers for forwarding devices, although a given device can function at multiple layers:

- Layer 1: operates at Physical layer, i.e., forwards using physical layer packet header fields. Example: a Hub
- Layer 2: operates at Data Link layer, i.e., forwards using Data Link layer packet header fields (e.g., using destination MAC address). Example: a bridge or switch.
- operates at Network layer, i.e., forwards using Network layer packet header fields (e.g., using destination IP address). Example: a router.

Layer 1 A layer 1 device, the hub, is the simplest possible forwarding device. It broadcasts frame received on a given port to all other ports except the port the frame was received on. Physical layer headers contain no address information, so broadcast is the only option. Typically a hub connects multiple Broadcast Ethernet segments. and helps extend Broadcast Ethernet to larger distance by providing signal amplification and signal re-generation. Nobody really uses hubs these days because they just create bigger Ethernet segments, which still have collisions.

Layer 2 The simplest layer 2 device is a bridge. It understands MAC addresses and creates two half-duplex point-to-point connections

between its two ports. A generalized version of the bridge, the switch, is the most commonly used device. A switch is a multi-port bridge, i.e., has N>2 ports. It creates N half-duplex point-to-point connections (a matching) between input and output ports using a crossbar, which is just a bunch of wires going between input and output ports. A matching is a bipartite graph where every edge has a unique endpoint.

An algorithm called iSLIP decides the matching configuration. iSLIP looks at the current *demand*, i.e., for each input packet what is the output port. iSLIP then configures the crossbar to create the matching that satisfies the most demands. It repeats the above two steps iteratively till all demands are satisfied.

Ethernet running inside a switch is called "Switched Ethernet". Modern Ethernet LANs run Switched Ethernet instead of Broadcast Ethernet.

In switched ethernet, each switch maintains a "Forwarding Table" Which keeps track of which hosts are reachable via each output port. For the network in Figure 6, the forwarding table is given by the table below.

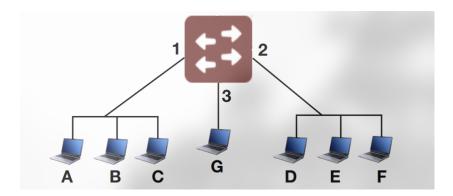


Figure 6: Switched Ethernet Network

Destination MAC Address	Output Port
A.mac	1
B.mac	1
C.mac	1
D.mac	2
E.mac	2
F.mac	2
G.mac	3

To populate the forwarding table, use the following algorithm. When a switch receives a frame on port p, it checks the source MAC address in the frame. Let it be s. The switch learns that host with MAC address s is reachable via port p, so it adds the entry  $\langle s, p \rangle$  to

its forwarding table. If a switch never receives a frame sourced from a host, it will never learn which port the host is reachable on.

Luckily, the Spanning Tree Protocol (STP) extends MAC learning to detect and remove loops from the graph. The task of STP is, given a network of switches and end hosts, to create a graph where vertices represent switches/hosts and edges represent links, then to remove all loops from the graph. The way STP accomplishes this is by, unsurprisingly, building a spanning tree, a subgraph that includes all vertices but no cycles. In a spanning tree there is exactly one path between vertex pairs, which means there will be no loops.

Unfortunately, no single switch has full view of the graph, so we need to build the spanning tree in a distributed manner. In STP, switches exchange messages to build the spanning tree. These messages are carried in special packets called *control packets*. These packets are distinct from normal Ethernet packets and have STP-specific info. Control packets in STP are only exchanged between directly connected neighbor switches and are never forwarded beyond that. Control packets are only used for STP and are not used for MAC learning and forwarding. STP has three steps:

- 1. Pick a root: pick the switch with the smallest MAC address.
- 2. Compute the smallest cost path to the root. For each switch, calculate the smallest cost path to the root. Where there are multiple smallest cost paths to the root, choose the path via neighbor switch with the smaller MAC address.
- 3. Make links not on any smallest cost path "inactive". For link A-B, if neither A nor B uses it on its smallest cost path, then it's "inactive". Switches do not forward any data packets on that link and ignore any received data packets on that link. However, continue to send

and receive control packets on "inactive" links to handle failures where they may need to be reactivated.

Each switch maintains a view  $(R, \cos(X, R), X, H)$ . R is the current root according to X.  $\cos(X, R)$  is the cost from X to R. H is the next hop neighbor via which X reaches R.

A control packet from neighbor X to Y carries X's current view,  $(R, \cos(X, R), X, H)$  where X is proposing R as root and advertising a cost of  $\cos(X, R)$  from X to R via neighbor switch H (next hop to root from X). The algorithm converges when no switch view changes on receipt of a control packet.

```
// propose this switch as root send (X, 0, X, X) to all neighbors 
// on recieve (R, \cos t(Y, R), Y, H) 
// from neighbor Y when control packet recieved 
if advertisement from current next hop to root 
if R < X 
view = (R, \cos t(X, Y) + \cos t(Y, R), X, Y) else 
// also update if same root, same cost, smaller MAC if smaller root or cost path advertised update
```

The protocol must react to failures and link cost changes in the network. Switches, including the root, can fail. Links can fail or their cost can change. Each switch X tracks the status of its current next hop H and link X-H. On detecting failure of X or X-H, X updates its view to (X,0,X,X). Each switch X periodically sends its view R, cost(X,R),X,H) to all its neighbors. This is needed for convergence under certain failure scenarios and makes STP robust to control packet corruption and loss.

The final Spanning Tree Protocol operates as follows: Initially, each switch proposes itself as the root, setting its view to (X,0,X,X) and sending a control packet (X,0,X,X) to all neighbors. Upon detecting a failure of its next hop (H) or the link X-H, switch X updates its view to (X,0,X,X) and advertises this new view to all neighbors. Each switch periodically sends its current view  $(R, \cos t(X,R),X,H)$  to all neighbors. When receiving a control packet  $(R, \cos t(Y,R),Y,H)$  from neighbor Y, switch X updates its view according to predefined cases (Case 0, 1, and 2). If X's view changes, it sends its new view in a control packet to all neighbors. Additionally, X checks the next hop of neighbor Y each time a control packet is received from Y. A link X-Y is made "inactive" if and only if the next hop of X is not Y and

the next hop of Y (H) is not X, at which point X stops forwarding data packets on that link, removes related entries from the forwarding table, and ignores data packets received on X-Y for MAC learning and forwarding. The algorithm converges when no switch updates its view upon receiving a control packet.

### Network

The network layer runs on top of runs on top of the "best-effort" local area delivery service data link layer. While the data link layer allows information to be relayed within a local network, the network layer connects different local networks. As with all layers, we must solve the problems of addressing, destination discovery, forwarding, and routing. The problems are the same, but the scale is different so the solutions must be different. The IP address replaces the MAC address, IP forwarding replaces MAC forwarding, network routing protocols (DV, LS, BGP) replace MAC learning with STP, and destination discovery with DNS replaces ARP.

As the most popular protocol with the data link layer is Ethernet, the most popular protocol with the network layer is *internet protocol* (IP).

While the MAC tells the identity of the host, the IP address tells the location of the host. The MAC address of a host does not change (in most cases), and so can provide host-based services such as allowing access to a network service to an authorized computer, regardless of the location of a computer. IP addresses allow reaching distant devices. IP address do this by constructing a hierarchy so that each router only needs to store the IP address of the networks immediately above and below it in the network hierarchy.

STP doesn't work as a routing protocol at the network since it finds the shortest path to the root and not the destinations. STP also has higher latency and wasted bandwidth. The pros of simplicity and quick convergence outweigh the cons of higher latency and wasted bandwidth for small networks, but not for large. With network routing protocols, each router finds the shortest path to each destination, and there is no root. The pros are better latency and better bandwidth utilization, but at the cost of higher complexity and taking longer to converge. The pros outweigh the cons for large networks.

ARP doesn't work for large networks because it requires broadcast requests to every host on the network. DNS requires dedicated infrastructure and extra mechanisms for fault tolerance, but doesn't require broadcasts, which is good for large networks.

IP is really the only protocol for the network layer. This is in stark contrast to every other layer, which have a proliferation. In this class we'll focus on IPv4 instead of the newer IPv6. In IPv4, IP addresses have 32 bits and are represented as X.X.X.X where X is an 8-bit decimal, e.g. 192.168.3.29.

Hosts within a subnet share the same subnet address prefix. So perhaps devices in the same subnet have IP addresses X.X.X.92, X.X.X.23, and X.X.X.01. Any hierarchy can be encoded in the IP address; perhaps the first  $n_0$  bits correspond to a given country, the next  $n_1$  to an internet provider in that country, the next  $n_2$  to an organization, the next  $n_3$  to a location, etc.

We use a subnet mask to extract the subnet address from the IP address. The subnet mask a 32 bit long series of 1s followed by a series of 0s. For example, 255.255.240.0 is 20 1s followed by 12 0s. The subnet address is the bitwise AND of the IP address and subnet mask. For the previous example, with an IP address of 192.168.3.29 the subnet address would be 192.168.3.29 & 255.255.240.0 = 192.168.0.0.

Under classful addressing, IP addresses are divided into a set of classes. Each class has n bits statically allocated for a subnet address and the remaining 32 - n bits are for the host identifier. Depending on the value of n, there are three popular classes.

- A: n = 8, MSB 0, 8 subnet bits, 24 host bits, 128 subnets,  $2^24$  hosts.
- B: n = 16, MSB 10, 16 subnet bits, 16 host bits, 16K subnets,  $2^16$  hosts.
- C: n = 24, MSB 110, 24 subnet bits, 8 host bits, 2M subnets,  $2^8$  hosts.

The issue with classful IP addressing is that the division of bits between subnet and host addresses are not flexible. So to support 129 subnets one should need only 8 bits for subnet address, but with classful IP addressing, one will need a B class address, which uses 16 bits for the subnet address, wasting 8 bits.

The more widely implemented method is called *Classless Inter-Domain Routing* (CIDR). CIDR allows a flexible number of bits to be allocated for the subnet address. In CIDR notation, a subnet address is represented as X.X.X.X/n. The first n bits are allocated for the subnet address, meaning the subnet can support  $2^{32-n}$  IP addresses. For example, the subnet address 128.32.0.0/11 can support  $2^21$  IP addresses in the range 128.32.0.0 to 128.63.255.255.

Hosts have two options for configuring their IP addresses. They can either do it manually and pick whatever IP address they want, or they can implement the *Dynamic Host Configuration Protocol* (DHCP) and have an IP automatically assigned to them. The way this works is that DHCP typically runs on the router and maintains a pool of allowed IP

addresses for a network, and when a host connects, the router assigns it an IP address.

There are public IP address, used for routing over the internet, and private IP addresses, for communication within a private network. Public IP addresses are assigned by the Internet Corporation for Assigned Names and Numbers (ICANN). ICANN allocates large IP blocks to regional internet registries, e.g. the middle East, Europe, central Asia. Each internet registry allocates address blocks to large internet service providers (ISPs) within that region. The ISP allocates addresses to individuals and smaller institutions. For instance, ICANN allocates some X.0.0.0/8 addresses to ARIN, which allocates one /8 address to AT&T, which allocates one /16 address to Purdue, which allocates one /24 address to ECE, which gives your computer an IP.

Hosts over the internet need a unique public IP address for correct routing, but there are only  $2^{32} \approx 4000000000$  unique IPv4 addresses. The number of modern devices would exhaust this very quickly if not for private IP addressing.

Private IP addresses can be used for communication only within a private network, and packets with private IP addresses as destinations are dropped by public internet routers. Hosts in different private networks can have the same private IP address, which helps with the problem of IPv4 address exhaustion. The reserved private IP address ranges are

- 10.0.0.0/8 (10.0.0.0 to 10.255.255.255)
- 172.16.0.0/12 (172.16.0.0 to 172.31.255.255)
- 192.168.0.0/16 (192.168.0.0 to 192.168.255.255)

Transport

Application