Quantization

To select root note of the scale, hold the button while turning the TONE knob. LEDs I through VII then symbolize notes of C major: C, D, ..., B. The # LED signalizes that the note is sharp.

To select the scale mode, hold the button while turning the DETUNE knob. LEDs I through VII then symbolize each of the modes. Selected mode affects the mood or character of the tune you are playing:

I Ionian (major) V Mixolydian
II Dorian VI Aeolian (minor)

II Phrygian VII Locrian

IV Lydian

Quantization of TONE' can be switched off by tapping the DETUNE CV input with a jack while holding the button.

Calibration

While inputs TONE and TONE' are following the 1V/oct standard, they may not be matching connected CV source device precisely. To calibrate each of these inputs follow this procedure:

- 1. While holding the button, connect jack to the input.
- 2. The left column of LEDs should light up.
- 3. Play the note C on the CV source and press the button.
- 4. Now the right column of LEDs should light up.
- 5. Play C one octave higher and press the button again.

Chords

This module allows playing chords of up to 5 factors, each of them affected by the detune.

In order to visualize selected chords, the LEDs are displaying their factors. For example, if the selected chord is basic fifth, LEDs I, III and V light up to signalize that first, third and fifth are playing. If this does not sound like anything to you, don't worry and just use your ears.

Furthermore, there are three different modes of playing chords. These can be accessed by holding the button while turning the CHORD knob:

- I Chords assorted set of 19 chords. Starting with single note, followed-up with fifth, seventh, ninth and ninth inversions.
- II Intervals not chords per-se. In this mode, the root note is accompanied by another note of interval between minus two octaves to plus two octaves.
- III Arpeggios four different chords that are incrementally built while the parameter is being increased. Starting with the root, adding second factor, third, ...

If the button is held while the chord CV is being plugged in, the input gets calibrated and then can used in 1V/oct mode, with each chord assigned to a white key.

Split Outputs

There are two audio outputs in the module: OUT and OUT'. When only one of these outputs is connected, it gets mixed with the unconnected one. When both outputs are connected, each plays different voices.

The content of these outputs depends on the playing lines. If the side line is playing, OUT plays the main line, controlled by TONE and OUT' is playing the side line, controlled by TONE'.

However, when the side line is not connected, OUT contains the root note of the main line, while OUT' contains the rest of the chord played by the main line.


Overdrive

Due to the headroom reserved for all 18 voices, output levels are quite weak. To compensate for that, digital overdrive can be enabled by tapping the WAVETABLE CV input with a jack while holding the button. Note that this has a negative effect on sound quality.

Reset

Calibration settings and all secondary parameters (wavetable bank, scale tonic, scale mode, chord mode) are stored between restarts of the module. To reset their values, hold the button while powering on the module.

MANUAL

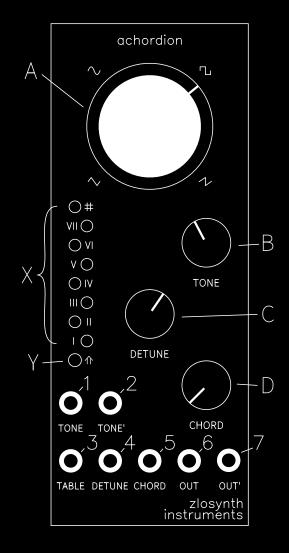

Wavetables

There are 37 wavetables, divided into 4 banks:

- II Harsh full and distorted sounds. These can get very saw. All of these are containing pure harmonics. I Perfect – classic waveforms: triangle, sine, square and
- III Soft cleaner sounds and bells. thick when played in rich chords.
- them provides a low-pass filter effect. half contains sums of sine functions, sliding through different sounds from clean to crazy noises. The upper of sine function multiplications providing variety of IV Sines – the bottom half of this bank is a sequence

turning the WAVETABLE knob. The bank can be selected by pressing the button while are gradual and very smooth, suitable for live modulation. The transitions between wavetables within a single bank

Detune

through four of these detune modes: played note and their detune. The knob/CV input scrolls input, and controls number of secondary voices per each This parameter is set through the DETUNE knob and CV

- playing. I Disabled, only primary tones of the selected chord are
- lower. This is a classic sub-octave. II The first factor of the chord is duplicated one octave
- unison. This produces slight movement or vibrato III Each tone in the chord is duplicated once with a
- very rich wall of sound and gets crazy with lot of IV Two sub-octaves per each factor. This can produce effect, depending on the amount of the detune.

higher it turns into a wild cacophony. making the sound moving and warm, when it is pushed ference in frequency is very small and produces "beats" – are being gradually detuned. In lower detunes, the dif-While moving through each of the modes, secondary voices

Controls, inputs and outputs

button is held down, this knob scrolls through banks. WAVETABLE (A) knob selects the wavetable. When the bellow them (Y) accesses alternative parameters. visualizing the currently selected parameter. The button On the left side, there is a column of LEDs (X) that are

tonic of the scale. When the button is held down, this knob is used to select TONE (B) knob selects root note that should be playing.

this knob controls the scale mode. and amount of detune. When the button is held down, DETUNE (C) knob controls spread of secondary voices

selects the mode in which chords are built. be playing. When the button is held down, this knob CHORD (D) knob selects the chord or interval that should

dard, between -5 and +5 V. controls octave offset. These inputs follow IV/oct stanrespectively. When TONE is connected, the TONE knob the root note that are playing on the main and side line, CV inputs TONE (1) and TONE' (2) used to control

the side line respectively. When only one is connected, bne niem 94t yelq (7) 'TUO bne (8) TUO stugtuo oibuA set through CV. All CV inputs span between -5 and +5 V. above. The value set by the knob is added to the value are controlling the same attributes as the knobs described CV inputs TABLE (3), DETUNE (4) and CHORD (5)

zəni ow T

the outputs are mixed together.

other attributes are shared. these lines can be controlled independently while all the The module has two lines, main and side. The tone of

the CHORD knob and CV input. CV input. This line can play a chord, controlled through The main line is controlled through the TONE knob and

main line, the side one is not playing chords. and is playing only when a jack is connected. Unlike the The side line is controlled through the TONE' CV input

> with this instrument, you can leverage it. on the other hand do understand basics of music theory, and all left for you to do is to use your intuition. If you don't despair, the module will do all the harmony maths of different scales. If you don't know any music theory, easily Jam with other musicians and explore characters lush pads and hellish walls of sound, it enables you to nor out of scale! Apart from playing anything between it is just a bunch of oscillators that never go out of tune Achordion allows you to do many things but in essence

Features

is used to make dialing of parameters easier. chain. Last but not least, a display consisting of 8 LEDs outputs, enabling to send each line to a different effect an independent 1V/oct input. There are also two separate lines can be played at the same time, each controlled by any scale can be played with white keys of the piano. Two to a configurable scale. 1V/oct inputs are quantized so arpeggios, and intervals. All playing tones are quantized selection of 18 standard chords (fifth, sevent and ninth), chords. Four modes of playing are available - single tone, voices, it allows to enable sub-octaves, duplicated tones or transitions between them. With up to 18 simultaneous contains a selection of 37 wavetables, offering smooth This module is based around wavetable synthesis, and

Installation

module must be mounted in an Eurorack case. on the side of the board marked with the white line. The 2x5 connector. The red stripe (-12V) must be connected Achordion is 10 HP wide. It is powered by +12V/-12V

Specs

24-P!£' 48 KHz Audio outputs 16-bit, 2 kHz CV inputs Input impedance 100 KD (Am T) V SI- ,(Am 88) V SI+ Power 78 mm Depth Width

10 Hb