#### Quantization

To select the scale's root note, hold the button while turning the TONE knob. LEDs I through VII then symbolize notes of C major: C, D, ..., B. The # LED signalizes that the note is sharp.

To select the scale's mode, hold the button while turning the DETUNE knob. LEDs I through VII then symbolize each of the modes. Selected mode affects the mood or character of the tune you are playing:

I Ionian (major) V Mixolydian II Dorian VI Aeolian (minor)

II Phrygian VII Locrian

IV Lydian

Quantization of TONE' can be switched off by tapping the DETUNE CV input with a jack while holding the button.

#### Calibration

While inputs TONE and TONE' follow the 1V/oct standard, they may not precisely match the connected CV source device. To calibrate each of these inputs, follow this procedure:

- 1. While holding the button, connect a jack to the input.
- 2. The left column of LEDs should light up.
- 3. Play note  ${\sf C}$  on the  ${\sf CV}$  source and press the button.
- 4. Now, the right column of LEDs should light up.
- 5. Play C one octave higher and press the button again.

### Chords

This module allows playing chords of up to 5 factors, each affected by the detune.

To visualize selected chords, the LEDs display their factors. For example, if the selected chord is basic fifth, LEDs I, III and V light up to signalize that the first, third and fifth are playing. If this does not sound like anything to you, don't worry and just use your ears.

Furthermore, there are three different modes of playing chords. These can be accessed by holding the button while turning the CHORD knob:

- I Chords an assorted set of 19 chords. Starting with a single note, followed up with fifth, seventh, ninth and ninth inversions.
- II Intervals not chords per se. In this mode, the root note is accompanied by another note of interval between minus two octaves to plus two octaves.
- III Arpeggios four different chords that are incrementally built while the parameter is being increased. Starting with the root, adding second factor, third, ...

If the button is held while the chord CV is being plugged in, the input gets calibrated and can be then used in 1V/oct mode, with each chord assigned to a white key.

# **Split Outputs**

There are two audio outputs in the module: OUT and OUT'. When only one of these outputs is connected, it gets mixed with the unconnected one. When both outputs are connected, each plays different voices.

The content of these outputs depends on the playing lines. If the side line is playing, OUT plays the main line, controlled by TONE and OUT' is playing the side line, controlled by TONE'.

However, when the side line is not connected, OUT contains the root note of the main line, while OUT' contains the rest of the chord played by the main line.


## Overdrive

Due to the headroom reserved for all 18 voices, output levels are quite weak. To compensate for that, digital overdrive can be enabled by tapping the WAVETABLE CV input with a jack while holding the button. Note that this harms sound quality.

#### Reset

Calibration settings and all secondary parameters (wavetable bank, scale tonic, scale mode, chord mode) are stored between restarts of the module. To reset their values, hold the button while powering on the module.

# MANUAL

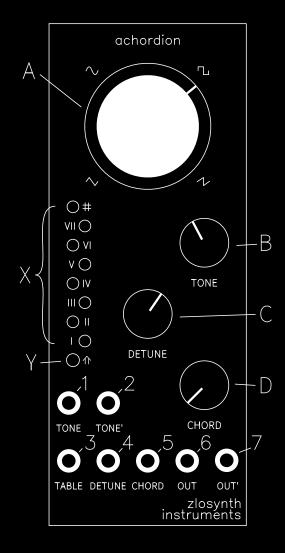

## Wavetables

There are 37 wavetables, divided into 4 banks:

- II Harsh full and distorted sounds. These can get very saw. All of these are based on pure harmonics. I Perfect – classic waveforms: triangle, sine, square and
- III Soft cleaner sounds and bells. thick when played in rich chords.
- provides a low-pass filter effect. contains sums of sine functions. Sliding through them sounds from clean to crazy noises. The upper half of sine function multiplications that provide various IV Sines – the bottom half of this bank is a sequence

turning the WAVETABLE knob. The bank can be selected by pressing the button while are gradual and smooth, suitable for live modulation. The transitions between wavetables within a single bank

#### Detune

through four of these detune modes: played note and their detune. The knob/CV input scrolls CV input. It controls the number of secondary voices per This parameter is set through the DETUNE knob and

- playing. I Disabled, only primary tones of the selected chord are
- lower. This is a classic sub-octave. II The first factor of the chord is duplicated one octave
- unison. This produces a slight movement or vibrato III Each tone in the chord is duplicated once with a
- very rich wall of sound and gets crazy with a lot of IV Two sub-octaves per each factor. This can produce a effect, depending on the detune amount.

it turns into a wild cacophony. the sound moving and warm. When it is pushed higher, in frequency is very small and produces "beats" - making being gradually detuned. In lower detunes, the difference While moving through each mode, secondary voices are

## Controls, inputs and outputs

button is held down, this knob scrolls through banks. WAVETABLE (A) knob selects the wavetable. When the below them (Y) accesses alternative parameters. visualize the currently selected parameter. The button On the left side, there is a column of LEDs (X) that

to select the scale's tonic. playing. When the button is held down, this knob is used TONE (B) knob selects the root note that should be

this knob controls the scale mode. and the amount of detune. When the button is held down, DETUNE (C) knob controls the spread of secondary voices

selects the mode in which chords are built. be playing. When the button is held down, this knob CHORD (D) knob selects the chord or interval that should

standard, between -5 and +5 V. controls octave offset. These inputs follow the 1V/octspectively. When TONE is connected, the TONE knob the root note playing on the main and the side line, re-CV inputs TONE (1) and TONE' (2) are used to control

the CV. All CV inputs span between -5 and +5 V. The value set by the knob is added to the value set through control the same attributes as the knobs described above. CV inputs TABLE (3), DETUNE (4) and CHORD (5)

the outputs are mixed. the side line, respectively. When only one is connected, Audio outputs OUT (6) and OUT' (7) play the main and

#### zənil owT

while all the other attributes are shared. The tone of these lines can be controlled independently The module has two lines, the main line and the side line.

the CHORD knob and CV input. CV input. This line can play a chord, controlled through The main line is controlled through the TONE knob and

main line, the side one is not playing chords. and is playing only when a jack is connected. Unlike the The side line is controlled through the TONE' CV input

> with this instrument, you can leverage it. the other hand, do understand the basics of music theory, all left for you to do is to use your intuition. If you, on despair, the module will do all the harmony maths, and different scales. If you don't know any music theory, don't easily Jam with other musicians and explore characters of lush pads and hellish walls of sound, it enables you to or out of scale! Apart from playing anything between it is just a bunch of oscillators that never go out of tune Achordion allows you to do many things, but in essence,

# Features

is used to make dialling of parameters easier. chain. Last but not least, a display consisting of 8 LEDs outputs, enabling to send each line to a different effect an independent 1V/oct input. There are also two separate lines can be played at the same time, each controlled by scale can be played with the white keys of the piano. Two configurable scale. 1V/oct inputs are quantized, so any gios, and intervals. All playing tones are quantized to a of 18 standard chords (fifth, seventh and ninth), arpeg-Four modes of playing are available - single tone, selection allows enabling sub-octaves, duplicated tones or chords. between them. With up to 18 simultaneous voices, it a selection of 37 wavetables, offering smooth transitions This module is based on wavetable synthesis and contains

## Installation

module must be mounted in a Eurorack case. on the side of the board marked with the white line. The 2x5 connector. The red stripe (-12V) must be connected Achordion is 10 HP wide. It is powered by a +12V/-12V

## Specs

24-P!£' 48 KHz Audio outputs 16-bit, 2 kHz CV inputs Input impedance 100 KD (Am T) V SI- ,(Am 88) V SI+ Power 78 mm Depth Width

10 Hb