

AN 818: Static Update Partial Reconfiguration Tutorial

for Intel® Stratix® 10 GX FPGA Development Board

Updated for Intel® Quartus® Prime Design Suite: **18.0**



Subscribe



Send Feedback

AN-818 | 2018.06.18

Latest document on the web: [PDF](#) | [HTML](#)



Contents

1. Static Update Partial Reconfiguration Tutorial for Intel® Stratix® 10 GX FPGA Development Board.....	3
1.1. Tutorial Requirements.....	3
1.2. Reference Design Overview.....	4
1.3. Static Update Region Overview.....	4
1.4. Download Reference Design Files.....	5
1.5. Reference Design Walkthrough.....	6
1.5.1. Step 1: Getting Started.....	6
1.5.2. Step 2: Create Design Partitions.....	7
1.5.3. Step 3: Allocate Placement and Routing Regions.....	8
1.5.4. Step 4: Define Personas.....	10
1.5.5. Step 5: Create Revisions.....	11
1.5.6. Step 6: Compile the Base Revision, Export Static and SUPR Regions.....	13
1.5.7. Step 7: Set Up PR Implementation Revisions.....	15
1.5.8. Step 8: Change the SUPR Logic.....	17
1.5.9. Step 9: Program the Board.....	18
1.5.10. Modifying the SUPR Partition.....	20
1.6. Static Update Partial Reconfiguration Tutorial Revision History.....	21



1. Static Update Partial Reconfiguration Tutorial for Intel® Stratix® 10 GX FPGA Development Board

This application note demonstrates static update partial reconfiguration (SUPR) on the Intel® Stratix® 10 GX FPGA development board.

Partial reconfiguration (PR) allows you to reconfigure a portion of an Intel FPGA dynamically, while the remaining FPGA continues to operate. PR implements multiple personas in a particular region in your design, without impacting operation in areas outside this region. This methodology provides the following advantages in systems in which multiple functions time-share the same FPGA resources:

- Allows run-time reconfiguration
- Increases design scalability
- Reduces system down-time
- Supports dynamic time-multiplexing functions in the design
- Lowers cost and power consumption by efficient use of board space

In traditional PR, any change to the static region requires recompilation of every persona. However, you can define a specialized SUPR region that allows change, without requiring the recompilation of personas. This technique is useful for a portion of a design that you may *possibly* want to change for risk mitigation, but that never requires runtime reconfiguration.

Note: The current version of the Intel Quartus® Prime Pro Edition software introduces a simplified compilation flow for partial reconfiguration.

1.1. Tutorial Requirements

This tutorial requires the following:

- Basic familiarity with the Intel Quartus Prime Pro Edition FPGA implementation flow and project files.
- [Intel Quartus Prime Pro Edition version 18.0](#), with Intel Stratix 10 device support.
- For FPGA implementation, a JTAG connection with the [Intel Stratix 10 GX FPGA development board](#).
- [Download Reference Design Files](#) on page 5.


Related Information

- [Partial Reconfiguration User Guide](#)
- [Partial Reconfiguration Tutorials](#)
- [Partial Reconfiguration Online Training](#)

1.2. Reference Design Overview

This reference design consists of one, 32-bit counter. At the board level, the design connects the clock to a 50MHz source, and then connects the output to four LEDs on the board. Selecting the output from the counter bits, in a specific sequence, causes the LEDs to blink at a specific frequency. The `top_counter` module is the SUPR region.


Figure 1. Flat Reference Design

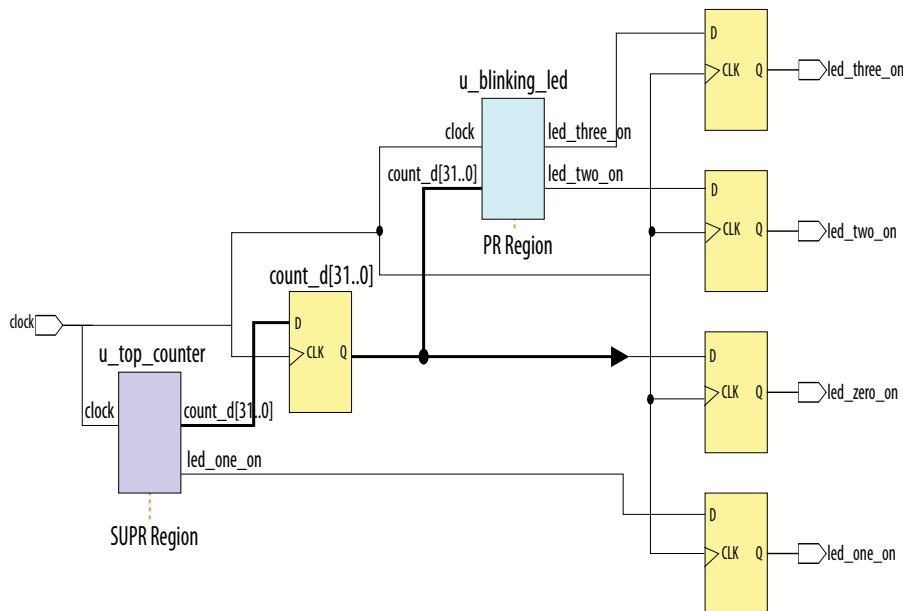

1.3. Static Update Region Overview

The following figure shows the block diagram for a PR design that includes a SUPR region. Block A is the Top static region. Block B is the SUPR region. Block C is the PR partition.

Figure 2. PR Design with SUPR Region

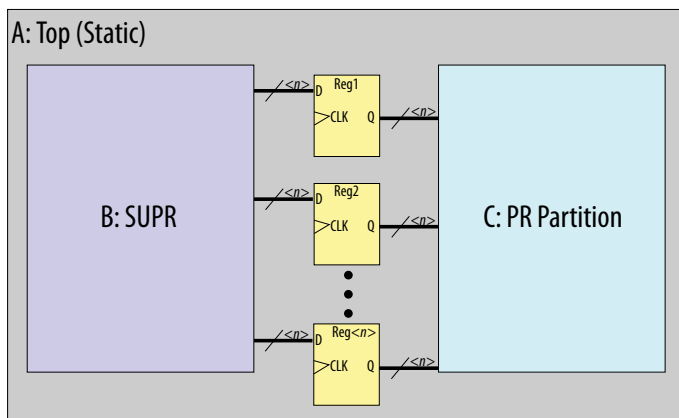



- A Top Static Region—contains design logic that does not change. Changing this region requires recompilation of all associated personas. The static region includes the portion of the design that does not change for any persona. This region can include periphery and core device resources. You must register all communication between the SUPR and PR partitions in the static region. This requirement helps to ensure timing closure for any personas, with respect to the static region.
- B SUPR Region—contains core-only logic that *may* possibly change for risk mitigation, but never requires runtime reconfiguration. The SUPR region has the same requirements and restrictions as the PR partition. The SUPR partition can contain only core resources. Therefore, the SUPR partition must be a child partition of the top-level root partition that contains the design periphery and clocks. Changing the SUPR region produces a SRAM Object File (.sof) that is compatible with all existing compiled Raw Binary File (.rbf) files for PR partition C.
- C PR Partition—contains arbitrary logic that you can reprogram at runtime with any design logic that fits and achieves timing closure during compilation.

1.4. Download Reference Design Files

The partial reconfiguration tutorial is available in the following location:

<https://github.com/intel/fpga-partial-reconfig>

To download the tutorial:

1. Click **Clone or download**.
2. Click **Download ZIP**. Unzip the fpga-partial-reconfig-master.zip file.
3. Navigate to the tutorials/s10_pcie_devkit_blinking_led_supr sub-folder to access the reference design.

The flat folder consists of the following files:

Table 1. Reference Design Files

File Name	Description
top.sv	Top-level file containing the flat implementation of the design. This module instantiates the blinking_led sub-partition and the top_counter module.
top_counter.sv	Top-level 32-bit counter that controls LED[1] directly. The registered output of the counter controls LED[0], and also powers LED[2] and LED[3] via the blinking_led module.
blinking_led.sdc	Defines the timing constraints for the project.
blinking_led.sv	In this tutorial, you convert this module into a parent PR partition. The module receives the registered output of top_counter module, which controls LED[2] and LED[3].
blinking_led.qpf	Intel Quartus Prime project file containing the list of all the revisions in the project.
blinking_led.qsf	Intel Quartus Prime settings file containing the assignments and settings for the project.


Note: The `supr` folder contains the complete set of files you create using this application note. Reference these files at any point during the walkthrough.

1.5. Reference Design Walkthrough

The following steps describe implementation of SUPR with a flat design:

- [Step 1: Getting Started](#) on page 6
- [Step 2: Create Design Partitions](#) on page 7
- [Step 3: Allocate Placement and Routing Regions](#) on page 8
- [Step 4: Define Personas](#) on page 10
- [Step 5: Create Revisions](#) on page 11
- [Step 6: Compile the Base Revision, Export Static and SUPR Regions](#) on page 13
- [Step 7: Set Up PR Implementation Revisions](#) on page 15
- [Step 8: Change the SUPR Logic](#) on page 17
- [Step 9: Program the Board](#) on page 18

Figure 3. SUPR Compilation Flow

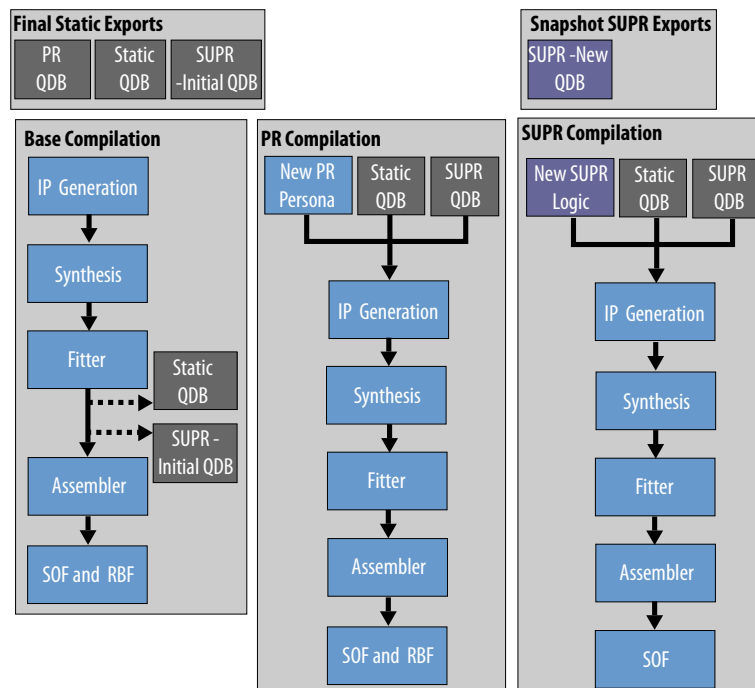

1.5.1. Step 1: Getting Started

To copy the reference design files to your working environment and compile the `blinking_led` flat design:




1. Before you begin, [Download Reference Design Files](#) on page 5.
2. Create the `s10_pcie_devkit_blinking_led_supr` directory in your working environment.
3. Copy the downloaded `tutorials/s10_pcie_devkit_blinking_led/flat` sub-folder to the `s10_pcie_devkit_blinking_led_supr` directory.
4. In the Intel Quartus Prime Pro Edition software, click **File** ► **Open Project** and open `/flat/bleading_led.qpf`.
5. To compile the base design, click **Processing** ► **Start Compilation**.

1.5.2. Step 2: Create Design Partitions

Create design partitions for each region that you want to partially reconfigure. You can create any number of independent partitions or PR regions in your project. Follow these steps to create design partitions for the `u_blinking_led` instance as the PR partition, and the `u_top_counter` instance as the SUPR region:

1. In the Project Navigator **Hierarchy** tab, right-click the `u_blinking_led` instance, and then click **Design Partition** ► **Set as Design Partition**.

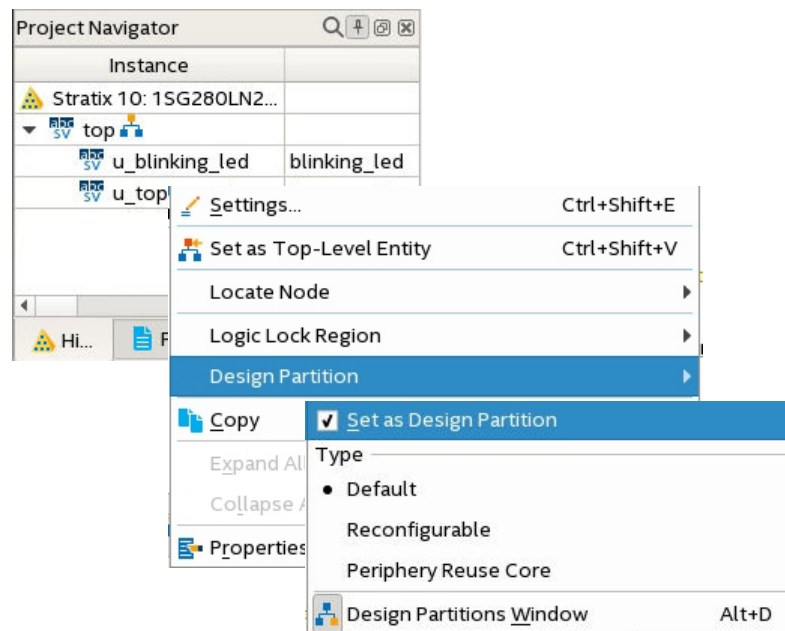

2. Right-click the `u_blinking_led` instance again, and then click **Design Partition** ► **Reconfigurable** under **Type**.
3. Repeat step 1 and 2 to create a partition for the `u_top_counter` instance.
4. Click **Assignments** ► **Design Partitions Window**. The window displays your design partitions.



Design Partitions Window							
Assignments View				Compilation View			
Partition Name	Hierarchy Path	Type	Preservation Level	Empty	Partition Database File	Entity Re-binding	Color
<<new>>							
root_partition							
blinking_led	u_blinking_led	Reconfigurable	Not Set	No			
top_counter	u_top_counter	Reconfigurable	Not Set	No			

5. Double-click the `blinking_led` **Partition Name** cell to rename it to `pr_partition`. Similarly, rename the `top_counter` partition to `supr_partition`.



Alternatively, adding the following lines to `blinking_led.qsf` creates these partitions:

```
set_instance_assignment -name PARTITION pr_partition \  
-to u_blinking_led  
set_instance_assignment -name PARTIAL_RECONFIGURATION_PARTITION ON \  
-to u_blinking_led  
set_instance_assignment -name PARTITION supr_partition \  
-to u_top_counter  
set_instance_assignment -name PARTIAL_RECONFIGURATION_PARTITION ON \  
-to u_top_counter
```

1.5.3. Step 3: Allocate Placement and Routing Regions

For every base revision that you create, the Compiler uses the PR partition region allocation to place the corresponding persona core in the reserved region. Follow these steps to locate and assign a PR region in the device floorplan for your base revision:


1. In the Project Navigator **Hierarchy** tab, right-click the `u_blinking_led` instance, and then click **Logic Lock Region > Create New Logic Lock Region**. The region appears in the Logic Lock Regions window.
2. Specify a region **Width** of 5 and **Height** of 5.
3. Specify the placement region coordinates for `u_blinking_led` in the **Origin** column. The origin corresponds to the lower-left corner of the region. Specify the **Origin** as `X184_Y420`. The Compiler automatically calculates the (`X2 Y2`) coordinates (top-right) for the placement region, based on the height and width you specify.
4. Enable the **Reserved** and **Core-Only** options for the region.
5. Double-click the **Routing Region** option. The **Logic Lock Routing Region Settings** dialog box appears.
6. For the **Routing Type**, select **Fixed with expansion**. This option automatically assigns an **Expansion length** of one.
7. Repeat the previous steps to allocate the following resources for the `u_top_counter` partition:
 - **Origin**—`X191_Y420`
 - **Height**—5
 - **Width**—5

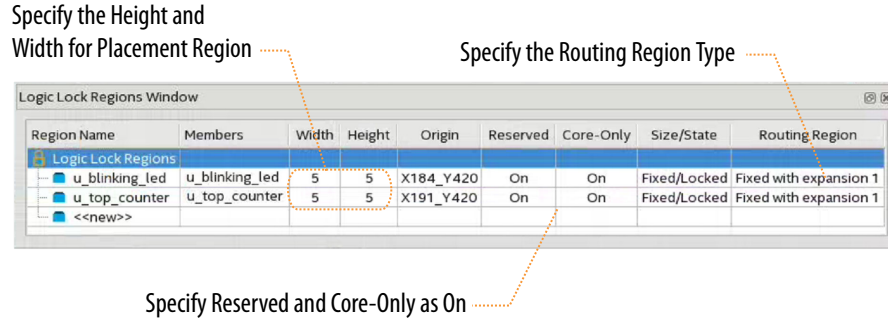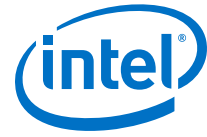

Note: The routing region must be larger than the placement region, to provide extra flexibility for the Compiler's routing stage, when the Compiler routes different personas.

8. Your placement region must enclose the `blinking_led` logic. To select the placement region by locating the node in Chip Planner, right-click the `u_blinking_led` region name in the Logic Lock Regions window, and then click **Locate Node ► Locate in Chip Planner**.
9. Under **Partition Reports**, double-click **Report Design Partitions**. The Chip Planner highlights and color codes the region.

Figure 4. Chip Planner Node Location for `blinking_led`

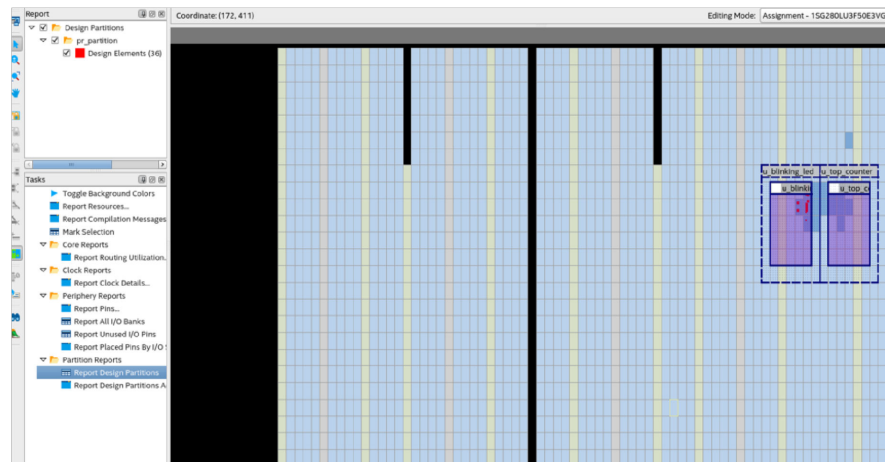

Alternatively, adding the following lines to `blinking_led.qsf` creates these regions:

```
set_instance_assignment -name PARTITION supr_partition -to u_top_counter
set_instance_assignment -name PARTIAL_RECONFIGURATION_PARTITION ON -to \
    u_top_counter

set_instance_assignment -name PLACE_REGION "X191 Y420 X195 Y424" -to \
    u_top_counter
set_instance_assignment -name RESERVE_PLACE_REGION ON -to u_top_counter
set_instance_assignment -name CORE_ONLY_PLACE_REGION ON -to u_top_counter
set_instance_assignment -name ROUTE_REGION "X190 Y419 X196 Y425" -to \
    u_top_counter

set_instance_assignment -name PARTITION pr_partition -to u_blinking_led
set_instance_assignment -name PARTIAL_RECONFIGURATION_PARTITION ON -to \
    u_blinking_led
set_instance_assignment -name RESERVE_PLACE_REGION_ON -to u_blinking_led
```



```
set_instance_assignment -name CORE_ONLY_PLACE_REGION ON -to \
    u_blinking_led
set_instance_assignment -name PLACE_REGION "X184 Y420 X188 Y424" \
    -to u_blinking_led
set_instance_assignment -name ROUTE_REGION "X183 Y419 X189 Y425" \
    -to u_blinking_led
```

1.5.4. Step 4: Define Personas

This reference design defines three separate personas for the single PR partition, and one SUPR persona for the SUPR region. Follow these steps to define and include these personas in your project. If using the Intel Quartus Prime Text Editor, disable **Add file to current project** when saving the files.

1. Create new `blinking_led_slow.sv`, `blinking_led_empty.sv`, and `top_counter_fast.sv` SystemVerilog files in your working directory. Confirm that `blinking_led.sv` is already present in the working directory.
2. Enter the following contents for the SystemVerilog files:

Table 2. Reference Design Personas SystemVerilog

File Name	Description	Code
<code>blinking_led_slow.sv</code>	LEDs blink slower	<pre>`timescale 1 ps / 1 ps `default_nettype none module blinking_led_slow (// clock input wire clock, input wire [31:0] counter, // Control signals for the LEDs output wire led_two_on, output wire led_three_on); localparam COUNTER_TAP = 27; reg led_two_on_r; reg led_three_on_r; assign led_two_on = led_two_on_r; assign led_three_on = led_three_on_r; always_ff @(posedge clock) begin led_two_on_r <= counter[COUNTER_TAP]; led_three_on_r <= counter[COUNTER_TAP]; end endmodule</pre>
<code>blinking_led_empty.sv</code>	LEDs stay ON	<pre>`timescale 1 ps / 1 ps `default_nettype none module blinking_led_empty(// clock input wire clock, input wire [31:0] counter, // Control signals for the LEDs output wire led_two_on, output wire led_three_on); // LED is active low assign led_two_on = 1'b0; assign led_three_on = 1'b0; endmodule</pre>
<code>top_counter_fast.sv</code>	Second SUPR persona	<pre>`timescale 1 ps / 1 ps `default_nettype none module top_counter_fast (</pre>

continued...



File Name	Description	Code
		<pre>// Control signals for the LEDs output wire led_one_on, output wire [31:0] count, // clock input wire clock); localparam COUNTER_TAP = 23; reg [31:0] count_d; assign count = count_d; assign led_one_on = count_d[COUNTER_TAP]; always_ff @(posedge clock) begin count_d <= count_d + 2; end endmodule</pre>

1.5.5. Step 5: Create Revisions

The PR design flow uses the project revisions feature in the Intel Quartus Prime software. Your initial design is the base revision, where you define the static region boundaries and reconfigurable regions on the FPGA.

From the base revision, you create additional revisions. These revisions contain the different implementations for the PR regions. However, all PR implementation revisions use the same top-level placement and routing results from the base revision.

To compile a PR design, you create a PR implementation revision for each persona. In addition, you must assign either the **Partial Reconfiguration - Base** or **Partial Reconfiguration - Persona Implementation** revision type for each of the revisions. The following table lists the revision name and the revision type for each of the revisions. The `impl_blinking_led_supr_new.qsf` revision is the SUPR persona implementation.


Table 3. Revision Names and Types

Revision Name	Revision Type
blinking_led.qsf	Partial Reconfiguration - Base
blinking_led_default.qsf	Partial Reconfiguration - Persona Implementation
blinking_led_slow.qsf	Partial Reconfiguration - Persona Implementation
blinking_led_empty.qsf	Partial Reconfiguration - Persona Implementation
impl_blinking_led_supr_new.qsf	Partial Reconfiguration - Persona Implementation

1.5.5.1. Setting the Base Revision

Follow these steps to set `blinking_led` as the base revision:

1. Click **Project ► Revisions**.
2. For **Revision Type**, select **Partial Reconfiguration - Base**.

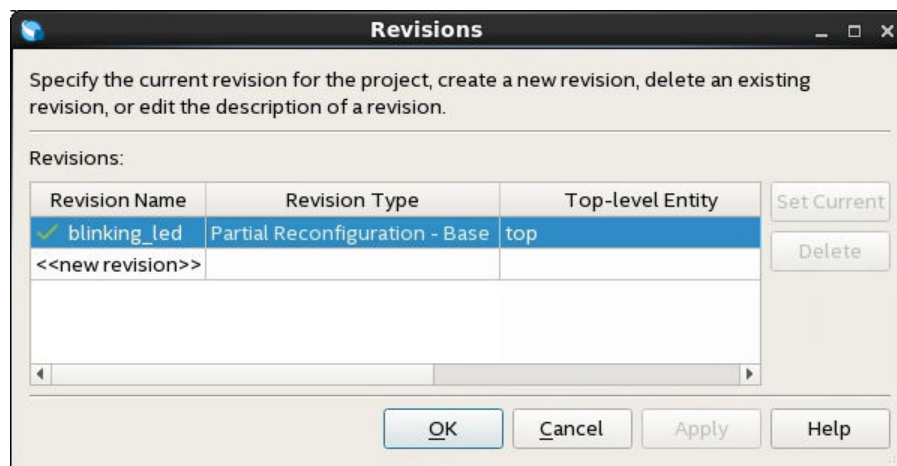


This step adds the following to the `blinking_led.qsf`:

```
##blinking_led.qsf
set_global_assignment -name REVISION_TYPE PR_BASE
```

1.5.5.2. Creating Implementation Revisions

Follow these steps to create the implementation revisions:

1. In the **Revisions** dialog box, double-click **<<new revision>>**.
2. In **Revision name**, specify `blinking_led_default` and select **blinking_led** for **Based on revision**.
3. For the **Revision type**, select **Partial Reconfiguration - Persona Implementation**.
4. Enable **This project uses a Partition Database (.qdb) file for the root partition**, but do not specify the **Root Partition Database file** at this point. You specify this file in [Step 7: Set Up PR Implementation Revisions](#) on page 15

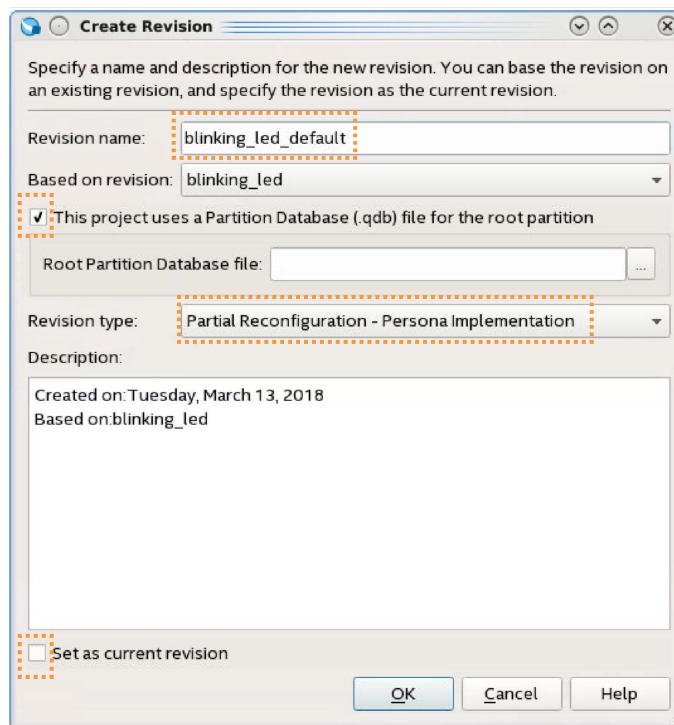

5. Disable the **Set as current revision** option.
6. Repeat steps 2 through 5 to set the **Revision type** for the other implementation revisions:

Revision Name	Revision Type	Based on Revision
blinking_led_slow.qsf	Partial Reconfiguration - Persona Implementation	blinking_led
blinking_led_empty.qsf	Partial Reconfiguration - Persona Implementation	blinking_led
impl_blinking_led_supr_new.qsf	Partial Reconfiguration - Persona Implementation	blinking_led

Each .qsf file now contains the following assignment:

```
set_global_assignment -name REVISION_TYPE PR_IMPL
```

1.5.6. Step 6: Compile the Base Revision, Export Static and SUPR Regions

Follow these steps to compile the base revision and export the static and SUPR regions for later use in implementation revisions for new PR personae:




1. Set `blinking_led` as the **Current Revision** if not already set.
2. To compile the `blinking_led` base revision, click **Processing** ► **Start Compilation**. Alternatively, you can use the following command to compile this revision:

```
quartus_sh --flow compile blinking_led -c blinking_led
```

3. To export the root partition, click **Project** ► **Export Design Partition**, and then specify the following options for the partition:

Option	Setting
Partition name	root_partition
Partition database file	<project>/blinking_led_static.qdb
Include entity-bound SDC files	Enable
Snapshot	Final

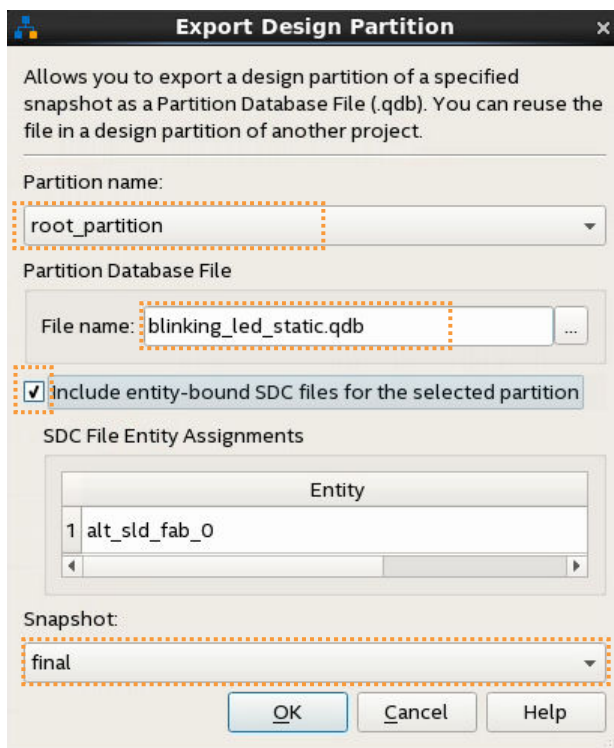


Alternatively, you can use the following command to export the root partition:

```
quartus_cdb -r blinking_led -c blinking_led --export_block \  
root_partition --snapshot final --file blinking_led_static.qdb \  
--include_sdc_entity_in_partition
```

4. To export the SUPR partition, click **Project** ► **Export Design Partition**, and then specify the following options:



Option	Setting
Partition name	supr_partition
Partition database file	<project>/blinking_led_supr_partition_final.qdb
Include entity-bound SDC files	Enable
Snapshot	Final

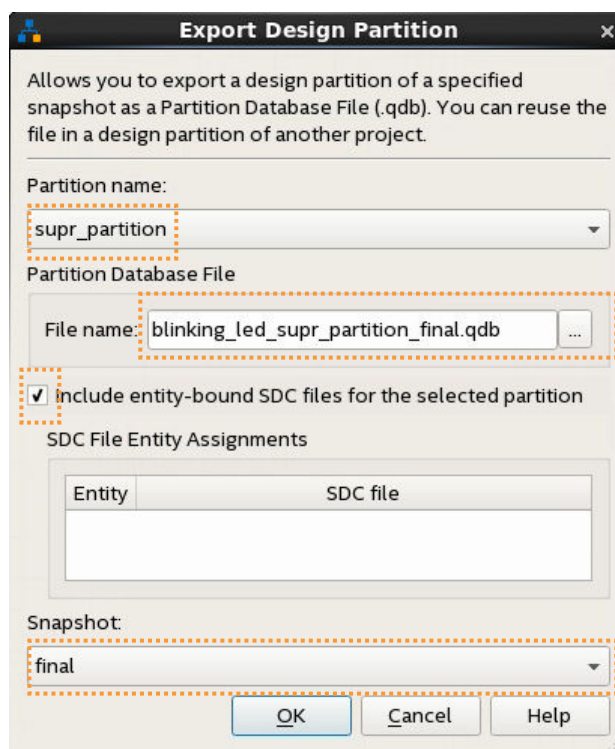


Alternatively, you can use the following command to export the SUPR partition:

```
quartus_cdb -r blinking_led -c blinking_led --export_block\
supr_partition --snapshot final --file \
blinking_led_supr_partition_final.qdb \
--include_sdc_entity_in_partition
```


1.5.7. Step 7: Set Up PR Implementation Revisions

You must prepare the PR implementation revisions before you can generate the PR bitstream for device programming. This setup includes adding the static region .qdb file as the source file for each implementation revision. In addition, you must specify the corresponding entity of the PR region.

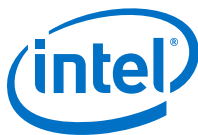

Follow these steps to setup the PR implementation revisions:


1. To set the current revision, click **Project ► Revisions**, select **blinking_led_default** as the **Revision name**, and then click **Set Current**. Alternatively, select the current revision on the main Intel Quartus Prime toolbar.
2. To verify the correct source for this implementation revision, click **Project ► Add/Remove Files in Project**. Confirm that the `blinking_led.sv` file appears in the file list.

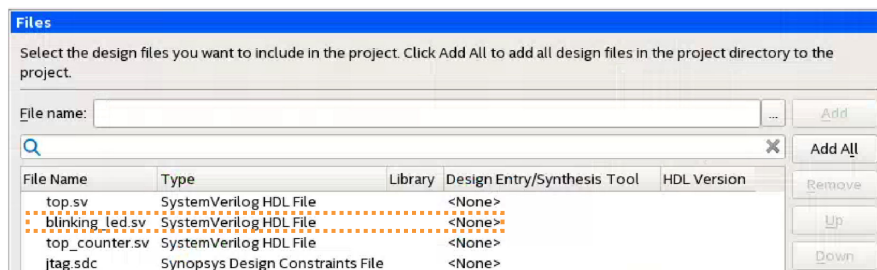

3. Repeat steps 1 and 2 to change the current revision and verify that the other implementation revision source files are present:

Implementation Revision Name	Source File
blinking_led_empty	blinking_led_empty.sv
blinking_led_slow	blinking_led_slow.sv

4. Set `blinking_led_default` as the **Current Revision**.
5. To specify the `.qdb` file as the source for `root_partition`, click **Assignments ► Design Partitions Window**. Double-click the **Partition Database File** cell and specify the `blinking_led_static.qdb` file.

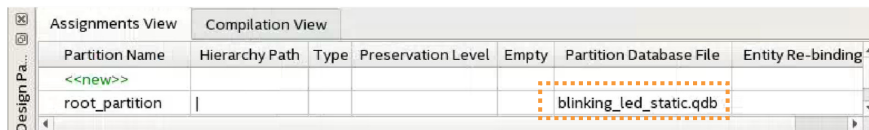


Alternatively, use the following command to assign the `.qdb`:

```
set_instance_assignment -name QDB_FILE_PARTITION \  
    blinking_led_static.qdb -to |
```


6. Similarly, specify `blinking_led_supr_partition_final.qdb` as the **Partition Database File** for `supr_partition`.

```
set_instance_assignment -name QDB_FILE_PARTITION \  
    blinking_led_supr_partition_final.qdb -to u_top_counter
```

7. In the **Entity Re-binding** cell, specify the new entity name for the PR partition you are changing in the current implementation revision. For the `blinking_led_default` implementation revision, the entity name is `blinking_led`. In this case, you are overwriting the `u_blinking_led` instance from the base revision compile with the new entity `blinking_led`. For other implementation revisions, refer to the following table:

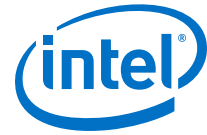

Revision	Entity Re-binding Value
blinking_led_slow	blinking_led_slow
blinking_led_empty	blinking_led_empty

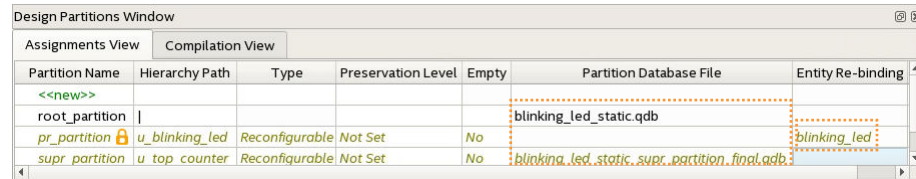

Alternatively, you can use the following lines in each revision's .qsf to set the assignments:

```
##blinking_led_default.qsf
set_instance_assignment -name ENTITY_REBINDING blinking_led \
    -to u_blinking_led

##blinking_led_slow.qsf
set_instance_assignment -name ENTITY_REBINDING blinking_led_slow \
    -to u_blinking_led

##blinking_led_empty.qsf
set_instance_assignment -name ENTITY_REBINDING blinking_led_empty \
    -to u_blinking_led
```

- To compile the design, click **Processing ► Start Compilation**. Alternatively, use the following command to compile this project:

```
quartus_sh --flow compile blinking_led -c blinking_led_default
```


- Repeat steps 1 through 8 to prepare and compile the blinking_led_slow and blinking_led_empty implementation revisions.

Note: The current version of the Intel Quartus Prime Pro Edition software introduces a simplified partial reconfiguration flow that no longer requires separate synthesis and implementation revisions for additional PR personae.

1.5.8. Step 8: Change the SUPR Logic

To change the functionality of the logic within the SUPR partition, you must change the SUPR partition source. Complete the following steps to replace the u_top_counter instance in the SUPR partition with the top_counter_fast entity.

- To set the SUPR implementation revision as current, click **Project ► Revisions** and set impl_blinking_led_supr_new as the current revision, or select the revision on the Intel Quartus Prime main toolbar.
- To verify the correct source file for the implementation revision, click **Project ► Add/Remove files in Project**, and verify that top_counter_fast.sv is the source for the impl_blinking_led_supr_new implementation revision. If present, remove top_counter.sv from the list of project files.

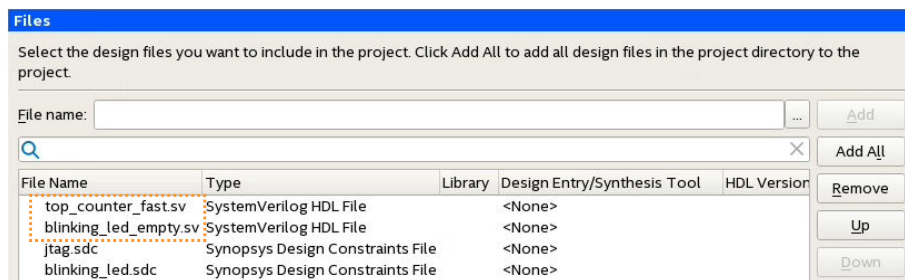

- To specify the .qdb file associated with the root partition, click **Assignments > Design Partitions Window**, and then double-click the **Partition Database File** cell to specify blinking_led_static.qdb.


Alternatively, use the following command to assign this file:

```
set_instance_assignment -name QDB_FILE_PARTITION \
    blinking_led_static.qdb -to |
```

- In the **Entity Re-binding** cell for pr_partition, specify the appropriate entity name. For this example, specify the blinking_led_empty entity. In this case, you are overwriting the u_blinking_led instance from the base revision compile with the new entity blinking_led_empty. The following line now exists in the .qsf:

```
##impl_blinking_led_supr_new.qsf
set_instance_assignment -name ENTITY_REBINDING blinking_led_empty \
    -to u_blinking_led
```

- In the **Entity Re-binding** cell for supr_partition, specify the top_counter_fast entity. top_counter_fast is the name of the static entity that replaces u_top_counter when you complete the SUPR.

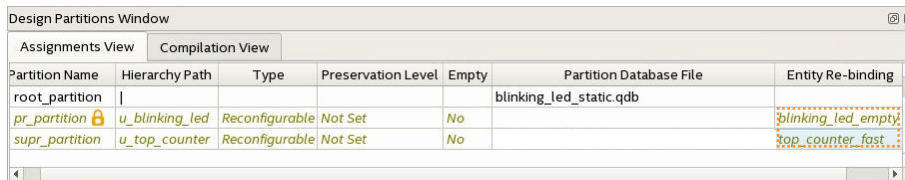

```
##impl_blinking_led_supr_new.qsf
set_instance_assignment -name ENTITY_REBINDING top_counter_fast \
    -to u_top_counter
```

- To compile the design, click **Processing > Start Compilation**. Alternatively, use following command to compile this project revision:

```
quartus_sh --flow compile blinking_led -c \
    impl_blinking_led_supr_new
```


1.5.9. Step 9: Program the Board

Follow these steps to connect and program the Intel Stratix 10 GX FPGA development board:



1. Connect the power supply to the Intel Stratix 10 GX FPGA development board.
2. Connect a USB cable between your PC USB port and the USB programming hardware on the development board.
3. Open the Intel Quartus Prime software, and then click **Tools ► Programmer**.
4. In the Programmer, click **Hardware Setup**, and then select **USB-Blaster**.
5. Click **Auto Detect**, and then select the **1SG280LU5S1** device.
6. Click **OK**. The Intel Quartus Prime software detects and updates the Programmer with the three FPGA devices on the board.
7. Select the **1SG280LU5S1** device, click **Change File**, and load the `blinking_led_default.sof` file.
8. Enable **Program/Configure** for the `blinking_led_default.sof` file.
9. Click **Start** and wait for the progress bar to reach 100%.
10. Observe the LEDs on the board blinking.
11. To program only the PR region, right-click the `blinking_led_default.sof` file in the Programmer and click **Add PR Programming File**.
12. Select the `blinking_led_slow.rbf` file.
13. Disable **Program/Configure** for the `blinking_led_default.sof` file.
14. Enable **Program/Configure** for the `blinking_led_slow.rbf` file, and then click **Start**. On the board, observe LED[0] and LED[1] continuing to blink. When the progress bar reaches 100%, LED[2] and LED[3] blink slower.

Figure 5. Programming the Intel Stratix 10 GX FPGA Development Board

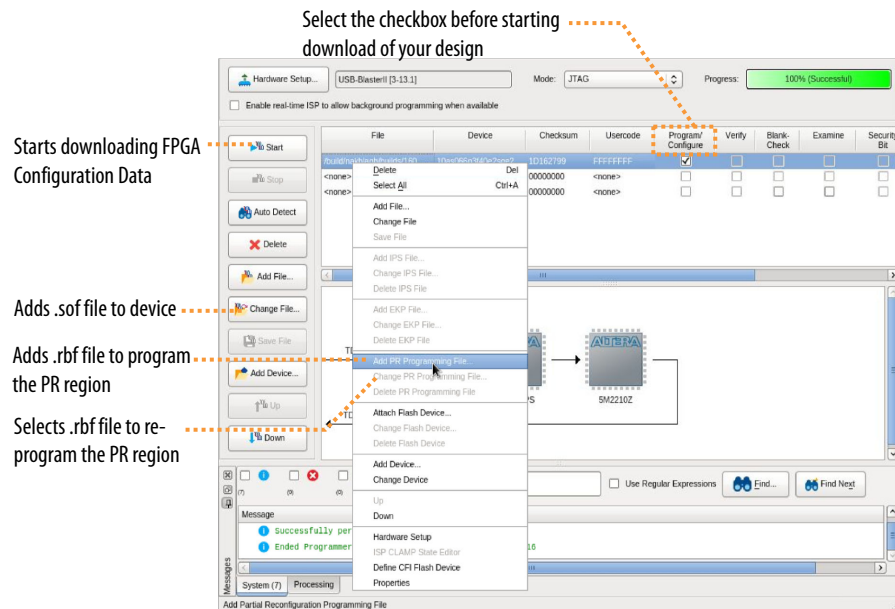



15. To re-program the PR region, right-click the `.rbf` file in the Programmer, and then click **Change PR Programming File**.
16. Select the `.rbf` files for the other two personas to observe the behavior on the board. Loading the `blinking_led_default.rbf` file causes the LEDs to blink at the original frequency, and loading the `blinking_led_empty.rbf` file causes the LEDs to stay ON.
17. To change the SUPR logic, repeat step 7 above to select the `impl_blinking_led_supr_new.sof`. After changing this file, `led [0:1]` now blinks at a faster rate than before. The other PR `.rbf` files are also compatible with the new `.sof`.

Note: The Assembler generates an `.rbf` file for the SUPR region. However, you should not use this file to reprogram the FPGA at runtime because the SUPR partition does not instantiate the freeze bridge, PR region controller, and other logic in the overall system. When you make changes to the SUPR partition logic, you must reprogram the full `.sof` file from the SUPR implementation revision compilation.

1.5.9.1. Troubleshooting PR Programming Errors

Ensuring proper setup of the Intel Quartus Prime Programmer and connected hardware helps to avoid any errors during PR programming.

If you face any PR programming errors, refer to *Troubleshooting PR Programming Errors* in the *Partial Reconfiguration User Guide* for step-by-step troubleshooting tips.

Related Information

[Troubleshooting PR Programming Errors](#)

1.5.10. Modifying the SUPR Partition

You can modify an existing SUPR partition. After modifying the SUPR partition, you must compile it, generate the `.sof` file, and program the board, without compiling the other personas. For example, follow these steps to change the `top_counter_fast.sv` module to count faster:

1. Set `impl_blinking_led_supr_new` as the current revision.
2. In the `top_counter_fast.sv` file, replace the `count_d + 2` statement with `count_d + 4`.
3. Run the following commands to re-synthesize the SUPR block and generate the new `.sof` file:

```
quartus_sh --flow compile blinking_led \  
-c impl_blinking_led_supr_new
```

The resulting `.sof` now contains the new SUPR region, and uses `blinking_led` for the default (power-on) persona.



1.6. Static Update Partial Reconfiguration Tutorial Revision History

Document Version	Intel Quartus Prime Version	Changes
2018.06.18	18.0.0	<ul style="list-style-type: none">• Corrected syntax error in <i>Define Personas</i> topic code example.• Corrected syntax error in <i>Change the SUPR Logic</i> code example.• Updated screenshot in <i>Change the SUPR Logic</i>.
2018.05.07	18.0.0	<ul style="list-style-type: none">• Removed descriptions of obsolete synthesis-only revisions and corresponding personas. Replaced with latest simplified flow instructions.• Renamed PR revision names to match simplified PR flow.
2017.11.06	17.1.0	Initial release of the document.